


ASSEMBLY AND OPERATING INSTRUCTIONS FOR



Model No. MH12, INFRA-RED CAMP HEATERS

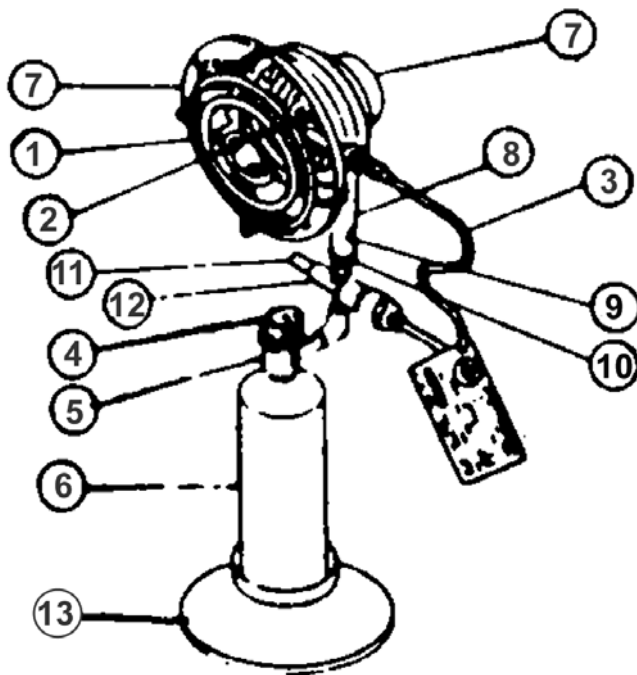

No.	Description
1	Wire Guard
2	Mesh Screen
3	Thermo-Couple
4	Regulator Valve Knob
5	Regulator
6	Propane Gas Cylinder
7	Reflector Bowl Assembly
8	Mixing Tube
9	Orifice
10	Mixing Tube Lock Nut
11	Valve Button
12	Safety Shut-Off Valve
13	Plastic Stand

Model MH12

GENERAL

A new feature of the series MH12 heaters is a 3-step regulator valve that has a high setting and a low setting. The Infra-Red series MH12 camp heaters are tested and shipped from the factory assembled, except for the propane gas cylinder. The Camp Heaters will operate approximately – 1 ½ hours on a 14 oz. Cylinder - Disposable

18 ½ hours on No. 2011 P.O.L. Cylinder – Refillable

37 hours on No. 2020 P.O.L. Cylinder – Refillable

Above figures are calculated on the assumption that the heater is turned "Full On" at all times. Because it will not be necessary in many cases to have the heater turned "Full On" at all times, you can count on considerably longer burning times for each cylinder. Cylinders are available in most sporting goods stores, camping centers and propane outlets.

ASSEMBLY INSTRUCTIONS FOR MODEL MH12 DIRECTLY CONNECTED TO CYLINDER

1. Make sure Hi-Med-Low-Off knob is turned fully clockwise to "Off."
2. Inspect the condition of the flat rubber washer in the regulator for dirt or damage. (Do this each time the cylinder is attached.)
3. Carefully screw the heater onto the cylinder filled with propane. (Make sure no open flame is in the area.)
4. Check its connection by brushing on soapy water. If bubbles occur, tighten connections and again brush on soapy water.

CONNECTIONS MUST BE GAS TIGHT. SEE LIGHTING INSTRUCTIONS BEFORE LIGHTING.

CAUTION: THIS APPLIANCE CONSUMES AIR.

When used indoors (such as in tents, tent trailers, fishing huts, cabins, houses, house trailers) **ALWAYS BE SURE TO PROPERLY VENTILATE THESE ENCLOSURES** in which the heater is being used, by providing a fresh air opening of at least 12 square inches. When used indoors (such as in the enclosures listed above), mount the appliance on a horizontal surface at least 24" above the floor and make sure the heater is **NOT** within 50 feet of flammable vapors and clear of all combustible materials by the following measurements:

Top: 20 ½ " 52.2 cm

Sides: 9" 22.9 cm

Front: 28" 71.2 cm

Rear: 8" 20.3 cm

DO NOT LEAVE YOUR APPLIANCE UNATTENDED.

DO NOT OPERATE YOUR APPLIANCE WHEN SLEEPING.

LIGHTING INSTRUCTIONS:

1. After complying with the Assembly Instructions, turn regulator valve knob anti-clockwise to "Low" position.
2. Apply lighted match to bottom of mesh screen.
3. Push in valve button to ignite, then slowly release after 20 seconds.
4. Repeat Step #2 and #3 if heater does not stay lit.
5. To turn heater "Off" –

Models MH12, MH12T – Turn regulator knob clockwise to "Off" position. Turn off gas supply at cylinder.

REGULATING:

Heater output can be adjusted by turning the valve knob to "Low", "Med." Or "Hi" position.

WARRANTY:

Camp Heaters No. MH12 series are covered by a one-year warranty against defective materials and workmanship, dating from the original purchase. Replacements will be made on any part returned prepaid through the dealer and claimed within the warranty period to be defective and found by the company upon examination to be so defective. Replacement shall be F.O.B.; Mr. Heater Corp. shall not be liable for drayage or labor costs.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>