

Protected MasterColor® Metal Halide 150 Watt ED-17P 3K (Clear) Lamp Featuring ALTO® Lamp Technology

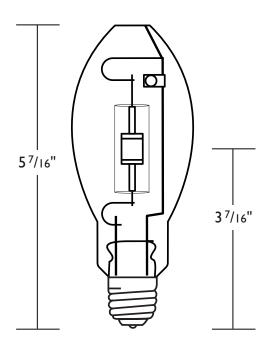

MasterColor® Spectral Power Distribution—3K Types 350 300 250 200 150 400 450 500 550 600 650 700 WAYELENGTH (Nanometers)

Average Lumen Maintenance Curve, MHC150/U/MP/3K

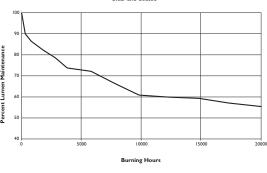

Domain Ordering Information

Ordering Code	MHC150/U/MP/3K/ALTO
ANSI Designation	M142/M102/O
Product Number	134635
Description	MasterColor Metal Halide
Package Quantity	12

Physical Characteristics

Bulb Size	ED-17P
Bulb Finish	Clear
Base	Medium Screw
Max. Overall Length (MOL)	5 7/16" (138mm)
Light Center Length (LCL)	3 7/16" (87mm)
Arc Length	0.79" (20mm)
Arc Tube Material	Poly Crystalline Alumina
Max. Permissible Bulb Temp.	350°C (662°F)
Max. Permissible Base Temp.	190°C (374°F)
Max. Bulb to Base Eccentricity	3°
Max. Arc Tube to Base Eccentricity	3°

Operating Characteristics (Photometric)

12,900
9545
10,000
3000 K
x433, y398
85
86

Operating Position

Universal-Open or Enclosed Luminaires

Note: Electronic ballasts are preferred for optimum performance, energy efficiency and circuit loading.



Philips Lighting Company 200 Franklin Square Drive P.O. Box 6800 Somerset, NJ 08875-6800 I-800-555-0050

www.lighting.philips.com/nam

A Division of Philips Electronics North America Corporation

Updated 9/03 MHC150/U/MP/3K/ALTO

Philips Lighting
281 Hillmount Road
Markham, Ontario
Canada L6C 2S3
1-800-555-0050
www.lighting.philips.com/nam
A Division of Philips Electronics Ltd.

Protected MasterColor® Metal Halide 150 Watt ED-17P 3K (Clear) Lamp Featuring ALTO® Lamp Technology

Electrical Data (Subject to change without notice)

Warnings, Cautions and Operating Instructions

"WARNING: These lamps can cause serious skin burn and eye inflammation from short wave ultraviolet radiation if outer envelope of the lamp is broken or punctured. Do not use where people will remain for more than a few minutes unless adequate shielding or other safety precautions are used. Certain lamps that will automatically extinguish when the outer envelope is broken or punctured are commercially available." This lamp complies with FDA radiation performance standard 21 CFR subchapter J. (USA:21CFR 1040.30 Canada:SOR/DORS/80-381)

If the outer bulb is broken or punctured, turn off at once and replace the lamp to avoid possible injury from hazardous short wave ultraviolet radiation. Do not scratch the outer bulb or subject it to pressure as this could cause the outer bulb to crack or shatter. A partial vacuum in the outer bulb may cause glass to fly if the envelope is struck.

WARNING: The arc-tube of metal halide lamps are designed to operate under high pressure and at temperatures up to 1000° C and can unexpectedly rupture due to internal or external factors such as a ballast failure or misapplication. If the arc-tube ruptures for any reason, the outer bulb may break and pieces of extremely hot glass might be discharged into the surrounding environment. If such a rupture were to happen, THERE IS A RISK OF PERSONAL INJURY, PROPERTY DAMAGE, BURNS AND FIRE.

These lamps are designed to retain all the glass particles should an arc tube rupture occur. The following operating instructions are recommended to minimize these occurrences.

RELAMP FIXTURES AT OR BEFORE THE END OF RATED LIFE. Allowing lamps to operate until they fail is not advised and may increase the possibility of inner arc tube rupture.

This lamp contains an arc tube with a filling gas containing Kr-85 and is distributed by Philips Lighting Company, a division of Philips Electronics North America Corporation, Somerset, New Jersey 08875-6800.

CAUTION: TO REDUCE THE RISK OF PERSONAL INJURY, PROPERTY DAMAGE, BURNS AND FIRE RESULTING FROM AN ARC-TUBE RUPTURE THE FOLLOWING **LAMP OPERATING INSTRUCTIONS** MUST BE FOLLOWED.

Lamp Operating Instructions:

- I) RELAMP FIXTURES AT OR BEFORE THE END OF RATED LIFE. Allowing lamps to operate until they fail is not advised and may increase the possibility of inner arc tube rupture.
- Before lamp installation/replacement, shut power off and allow lamp and fixture to cool to avoid electrical shock and potential burn hazards.
- 3) Use only auxiliary equipment meeting Philips and/or ANSI standards. Use within voltage limits recommended by ballast manufacturer.
 - A. Operate lamp only within specified limits of operation.
 - B. For total supply load refer to ballast manufacturers electrical data.
- Periodically inspect the outer envelope. Replace any lamps that show scratches, cracks or damage.
- If a lamp bulb support is used, be sure to insulate the support electrically to avoid possible decomposition of the bulb glass.
- Protect lamp base, socket and wiring against moisture, corrosive atmospheres and excessive heat.
- 7) Time should be allowed for lamps to stabilize in color when turned on for the first time. This may require several hours of operation, with more than one start. Lamp color is also subject to change under conditions of excess vibration or shock, and color appearance may vary between individual lamps.
- 8) Lamps may require 4 to 8 minutes to re-light if there is a power interruption.
- 9) Take care in handling and disposing of lamps. If an arc tube is broken, avoid skin contact with any of the contents or fragments.



I) Measured at 100 hrs of life in vertical position.

²⁾ Measured at rated lamp watts on a linear reactor. LPW does not include ballast losses.

³⁾ Measured with the lamp operating at rated watts.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com