

MANUAL EVT-PB1-H05Q Video, Power and Data Balun with Voltage Booster





The ENFORCER EVT-PB1-H05Q Video, Power and Data (VPD) Balun with Voltage Booster combines the flexibility of a VPD Balun with the ability to boost insufficient voltage for use in CCTV applications. Boosted DC power is regulated to provide stable power suitable for voltage sensitive cameras.

- Transmit video up to 2000' over Cat5
- Selectable 12/24VDC output via jumper
- Regulated and filtered output.
- Output current protection 500mA
- Small size for easy installation.

- Dual-colored LED power output indicator: Red: 12VDC Blue: 24VDC
- Green power input LED indicator.
- Built-in overload and short-circuit protection.






Specifications:

		EVT-PB1-H05Q			
Voltage Booster	Output voltage	5/12/24VDC selectable by jumper (default 12VDC)			jumper (default 12VDC)
	Operating voltages	Input voltage			Regulated output voltage
		7~12VDC/VAC		0	12VDC
		12~24VDC/VAC		C	24VDC
	Output current	500mA @ 5/12/24 VDC			
	Voltage input LED indicator	Green			
20	Voltage output LED	Red 5/12VDC			5/12VDC
-	indicator	Blue	24VDC		
	Current protection	PTC 500mA			
	Range	2,000' (610m) B/W, 1,300' Color (400m)			
	Video format	RS170, NTSC, PAL, SECAM, CCIR			
	Maximum input	1vp~p			
Video	Insertion loss	< 2dB per pair from DC ~ 5 Mhz			
Vic	Return loss	>-15dB from DC ~ 5 Mhz			
	Common mode rejection	60dB, 15KHz~5MHz			
	Frequency response	DC ~ 5 Mhz			
	Power	No power required for video			
	Wire type	UTP (unshielded twisted pair)			
	Wire category	20 - 24 AWG @ screwless terminal blocks			
S		CAT2 or better, CAT5 ideal, CAT6 improves range			
on	Connectors	In			ble terminal block
Scti		Out	Video	Pigtail B	
nne			Power		C plug (center pin positive)
Connections			Data	Wire	
<u> </u>	Attenuation	DC ~ 5 Mhz, 1.5 dB max			
	Impedance	Coax, male BNC: 75 Ohms@ 1 MHz			
		Terminal block: 100			
_	Dimensions	3 ¹ / ₄ " x 2 ⁹ / ₁₆ " x ³ / ₄ " (81 x 65 x 20mm)			
Other	Humidity range	0~95%			
Ð	Temperature Range	14°~165°F (-10°~74°C)			
	Case	ABS Plastic			astic

NOTE: The VPD balun with voltage booster's efficiency rating is 85%. For more information see "Voltage Booster Efficiency Rate" on page 3.

Figure 1: Video, Power and Data Balun with Voltage Booster Detail

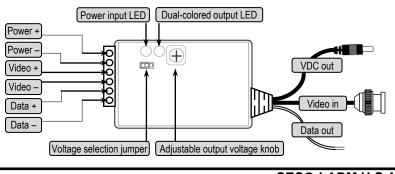

Download from Www.Somanuals.com. All Manuals Search And Download.

ENFORCER Video, Power and Data Balun with Voltage Booster

Installation:

- 1. Run UTP cable to the camera where the VPD balun is being installed.
- 2. Remove the cover by simultaneously pressing down on the top cover, and lifting up on the side mounting tabs. This will release the tight seal between the top and bottom covers.
- 3. Set the desired output voltage using the selection jumper according to table 1 below.
- 4. Connect output wires from the power supply to the power input terminal blocks on the balun. Observe correct polarity
- Apply power and use table 2 and 3 below to check the status of the input and output voltages. NOTE: To avoid potential damage, use a voltage meter to ensure proper voltage is present at the input and output terminal blocks. Observe correct polarity.
- 6. Connect the camera to the DC plug on the balun. If the output voltage is too low, then turn the rotary knob clockwise to increase the voltage or counter-clockwise to decrease the voltage.
- 7. Connect the video input male BNC input in from the VPD Balun to the camera.
- 8. If using a RS-485 controlled camera, connect the data in wires to the camera.
- 9. Using the input terminal blocks, connect data and video wires to the balun according to Figure 1. **IMPORTANT: Correct polarity must be observed on all connections.**
- 10. Replace the cover on the voltage booster.

Table 1: Adjustable Output Voltage

Input Voltage	Output Voltage	Adjustable voltage range	Jumper Settings
7~12VDC	12VDC	12.5 ± 5%VDC	
12~24VDC	24VDC	24.0 ± 10%VDC	


Table 2: Wiring Distance 12 VDC Voltage Drop

24 AWG Wire	1 Pair	2 Pairs	3 Pairs
250mA	90'	220'	550'
500mA	45'	110'	285'
750mA	30'	75'	190'
1A	20'	55'	140'

Table 3: LED Indicators

LED colors	Status
Green	Power is connected
Red	Output is 12VDC
Blue	Output is 24VDC

NOTE: Chart is based on standard Cat5 24AWG wire and an allowable 10% voltage drop.

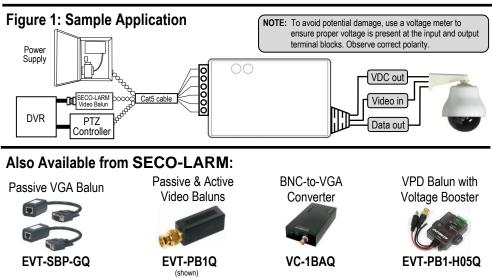

SECO-LARM U.S.A., Inc. Download from Www.Somanuals.com. All Manuals Search And Download.

Voltage Booster Efficiency Rate:

The EVT-PB1-H05Q has a power efficiency rating of 85%. Under typical conditions, the booster will provide sufficient power to compensate for long cable runs. The following formulas can be used to determine if enough power is present at the power input of the voltage booster:

- 1. Calculate the amount of power measured in Watts:
 - Voltage x Current = Power
- 2. For example, if the voltage is 12VDC, and the current is 750mA:
 - 12VDC x .75 = 9 Watts
- 3. Then calculate the amount of power using the voltage booster with the following formula:

Power Input x Efficiency Rate = Power Output.

- Using the 9 Watts in the previous example, calculate power input of the booster: 9 Watts x .85 = 7.65 Watts
- After the power has been calculated, the output current is calculated from the following formula: Power / Voltage = Current
- Using the example of 9 watts present at the power input, and 7.65 Watts at the power output: 7.65 Watts / 12VDC = 640mA of available current

Use Table 3 to determine if additional pairs of Cat5 cable will be needed to transmit power. For more information see the Technical Bulletin for the ST-HB105-TTQ at www.seco-larm.com

Troubleshooting:

 Check voltage jumper settings Check output voltage adjustment. Check input voltage to make sure it meets the input requirements
 Check input power connections with multimeter to verify correct input voltage
 Check to see if the load exceeds the maximum limit Temporarily disconnect power input and output wires for 30 seconds before connecting

WARRANTY This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for a period of one (1) year from the date of sale to the original consumer customer. SECO-LARM's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM. This Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair, or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship. The sole obligation of SECO-LARM, and the purchaser's exclusive remedy, shall be limited to replacement or repair only, at SECO-LARM's option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damages of any kind to the purchaser or anyone else.

NOTICE: The information and specifications printed in this manual are current at the time of publication. However, the SECO-LARM policy is one of continual development and improvement. For this reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints or typographical errors. Copyright © 2008 SECO-LARM U.S.A., Inc. All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of SECO-LARM.

SECO-LARM® U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606 Tel: 800-662-0800 / 949-261-2999 Fax: 949-261-7326 Website: www.seco-larm.com E-mail: sales@seco-larm.com



Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com