




Congratulations on your purchase of the RF-QS2-T Bluetooth Speakerphone. This speakerphone enables comfortable, hands-free communication with a Bluetooth-compatible phone.

Package contents

- RF-QS2-T speakerphone
- Car charger adapter
- USB charging cable
- Quick Setup Guide

Features

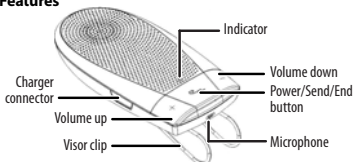

QS2-T Car Speakerphone

RF-QS2-T



Charging the battery

Before using your speakerphone, you must charge it for about two hours. When the battery is fully charged, it provides up to 11 hours of talk time and up to 480 hours of standby time.

- 1 USB charging: use the USB cable to plug your QS2-T speakerphone into a computer or other USB power port.
- 2 Car charging: use the car charger adapter and USB charging cable to charge your QS2-T speakerphone in your car.

Turning the speakerphone on

Press and hold the **Power/Send/End** for about two seconds. RF-QS2-T beeps and the yellow-green indicator light starts blinking. (First time use requires pressing it for 4 seconds.)

Turning the speakerphone off

Press and hold the **Power/Send/End** for about four seconds, RF-QS2-T beeps and the red indicator light is displayed briefly.

Pairing the speakerphone

- 1 Make sure that the compatible phone is turned on and within 33 ft. (10 m) of the speakerphone.
- 2 Turn on the QS2-T and make sure it's fully charged. Press and hold the **Power/Send/End** button for about four seconds. The yellow-green indicator flashes rapidly. Release the button. The speakerphone is now in pairing mode.
- 3 Activate the Bluetooth connection from the phone. See your phone's documentation for more information.
- 4 Set the phone to start searching for Bluetooth devices.
- 5 Select **RF-QS2** from the list.
- 6 Enter the PIN **0000** to connect (or "pair") the speakerphone to the phone. The speakerphone

Voice dialing

When no call is in progress, quickly press and release **Power/Send/End**. When you hear a tone, speak the number or voice tag for the number you want to call. (The phone must have a voice dial feature and have recorded voice tags.)

Making a call

To...	Do this...
Make a call	Press Power/Send/End .
Redial	Double-press Power/Send/End .
Answer a call	Press Power/Send/End .
End a call	Press Power/Send/End .
Refuse a call	Double-press Power/Send/End .
Change the speaker volume	Press the volume up button (+) to increase volume or press the volume down (-) button to decrease.
Mute or unmute a call	Press and hold the Volume down (-) button until a tone is heard.
Switch a call between the phone and the speakerphone	Press and hold Power/Send/End for two seconds.

Turning the indicator on or off

- Press the power and volume up buttons at the same time for about four seconds. The indicator turns on. Press the power and volume down buttons at the same time for about four seconds. The indicator turns off. You can enable or disable the indicator when the speakerphone is connected with your phone.

Disconnecting the speakerphone from the phone

To disconnect the speakerphone from the phone, do one of the following:

- Turn off the speakerphone.
- Disconnect the RF-QS2-T in the phone's menu.
- Move the speakerphone more than 33 ft. (10 m) away from the phone.

Note: You do not need to delete the pairing to disconnect the speakerphone. When you reconnect a paired speakerphone, you will not be asked for its PIN again.

If you want to pair your speakerphone with new phones, you don't need to erase all paired device information. There can be up to eight different paired devices information stored.

To erase paired devices from your speakerphone:

- When the speakerphone turned off, press and hold the **Power/Send/End** and volume up (+) buttons simultaneously for more than six seconds. A tone plays, and the indicator flashes red and yellow-green. The speakerphone then enters the pairing state automatically.



QUICK SETUP GUIDE

www.rocketfish.com.au | Manuals Search And Download.

Resetting the speakerphone

- If the speakerphone doesn't respond, press and hold the power button, then insert the charger into the QS2-T, then insert the other end into a wall outlet. Then, the speakerphone will turn off and reset immediately after the charger is connected.

To connect the speakerphone with two phones at the same time:

Option 1:

- 1 Turn the speakerphone on and put it into pairing mode.
- 2 Make a connection with the first phone.
- 3 Turn the speakerphone off, then back on again and put it into pairing mode.
- 4 Make a connection with the second phone.
- 5 Turn the speakerphone off, then back on. The speakerphone will be connected to both phones automatically.

Option 2:

- 1 Turn the speakerphone on and put it into pairing mode.
- 2 Make a connection with the first phone.
- 3 Turn the speakerphone off, then back on again and put it into pairing mode..
- 4 Make a connection with the second phone.
- 5 Initiate a connection from the first phone. The speakerphone will be connected to both phones.

Option 3:

- 1 Turn the speakerphone on and put it into pairing mode.
- 2 Try to find the speakerphone with both phones at the same time.
- 3 Initiate a connection with the first phone, then initiate a connection with the second phone. Both phones will be connected to the speakerphone.

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: EMJTRFQS2

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

Canada IC-RSS210 statement

IC: 4251A-CRFQS2

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

One-year limited warranty

Visit www.rocketfishproducts.com for details.

Contact Rocketfish:

For customer service please call 1-800-620-2790.

www.rocketfishproducts.com

© 2010 BBY Solutions, Inc., All Rights Reserved.

Distributed by Best Buy Purchasing, LLC

7601 Penn Avenue South, Richfield, MN USA 55423-3645

ROCKETFISH is a trademark of BBY Solutions, Inc. All other products and brand names are trademarks of their respective owners.

To...	Do this...
End the active call on the first phone and answer an incoming call on the second phone.	Short press Power/Send/End .

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>