



124T00

Illustrated Parts List

Model Series

124T00

TYPE NUMBERS
0101 through 4305.

TABLE OF CONTENTS

Air Cleaner	4
Alternator	5
Blower Housing/Shrouds	6
Camshaft	2
Carburetor	3
Controls	5
Crankshaft	2
Cylinder	2
Electric Starter	7
Electrical	5
Engine Sump	2
Exhaust System	4
Flywheel	7
Flywheel Brake	5
Fuel Supply	3
Governor Spring	5
Ignition	5
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	7
Valves	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

124T00

1319 WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.


1058 OPERATOR'S MANUAL









1330 REPAIR MANUAL

















1019 LABEL KIT

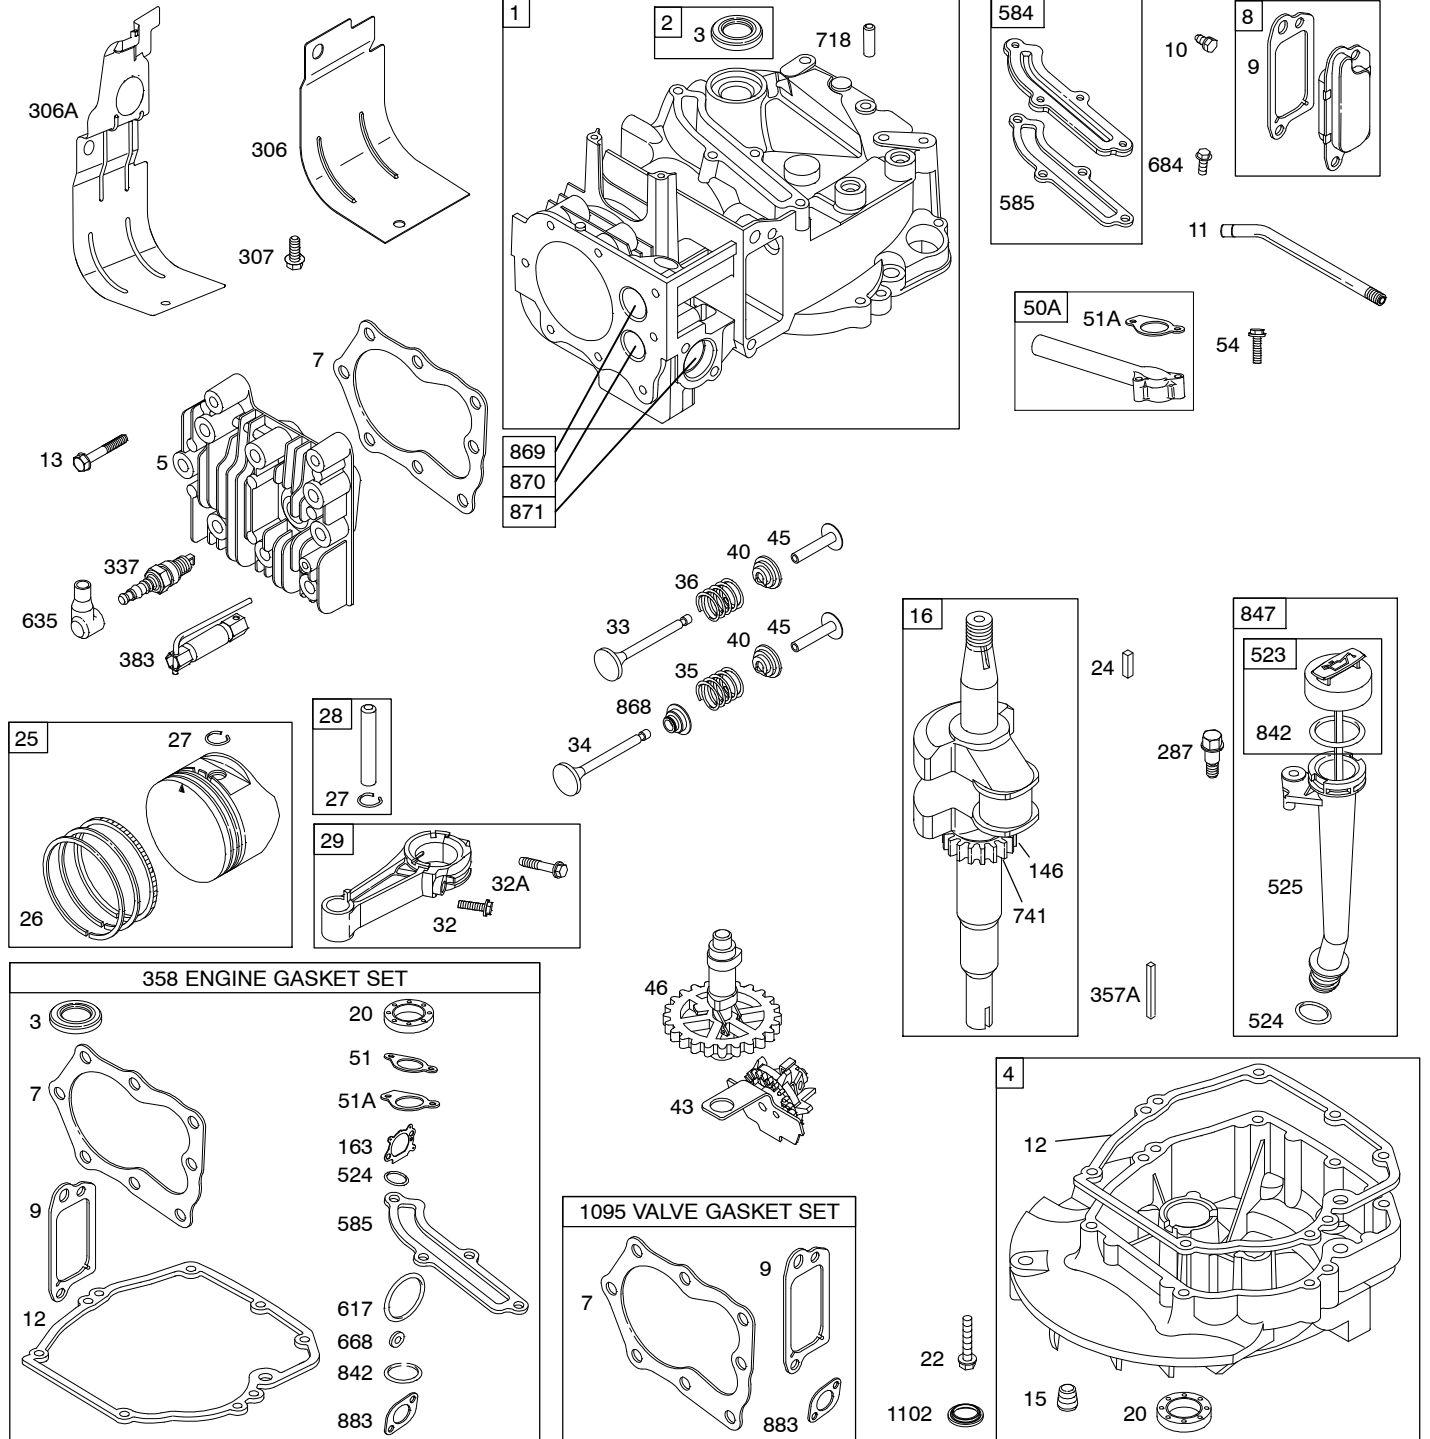


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3730-2 Assemblies include all parts shown in frames. **07/14/2008**

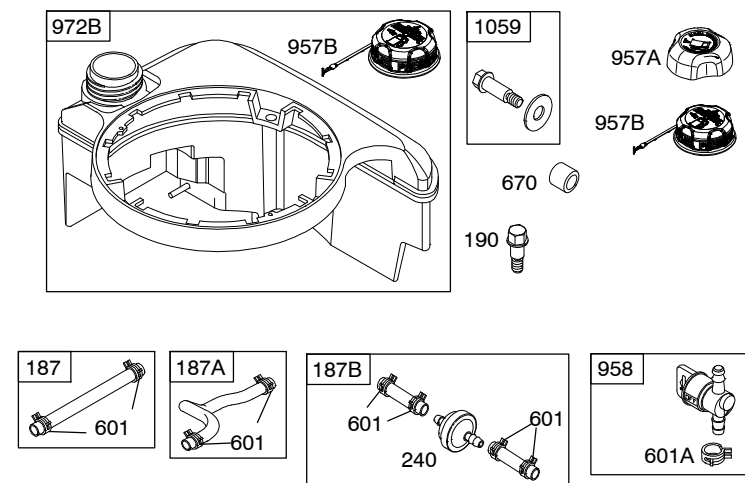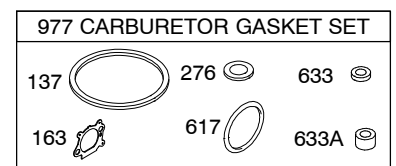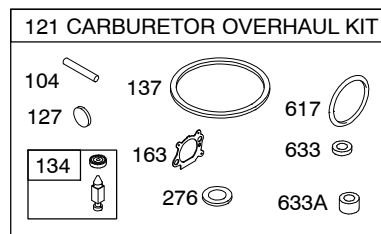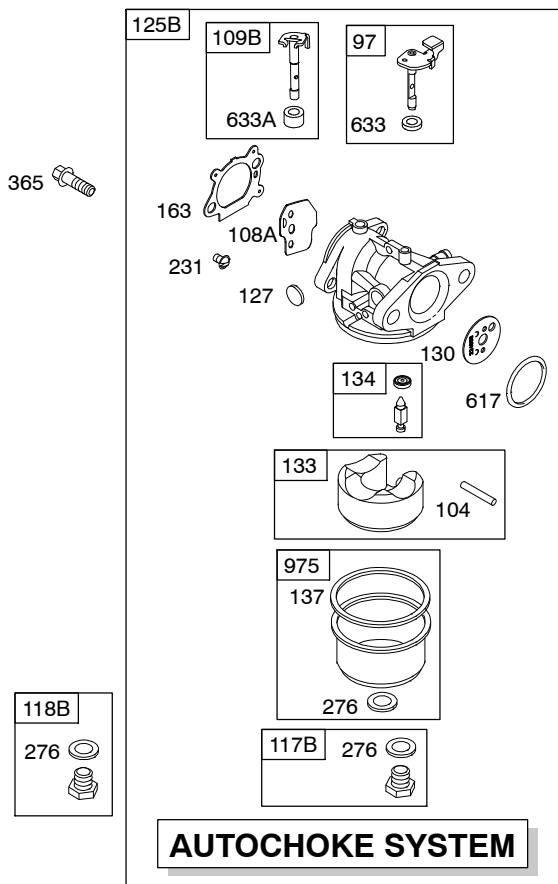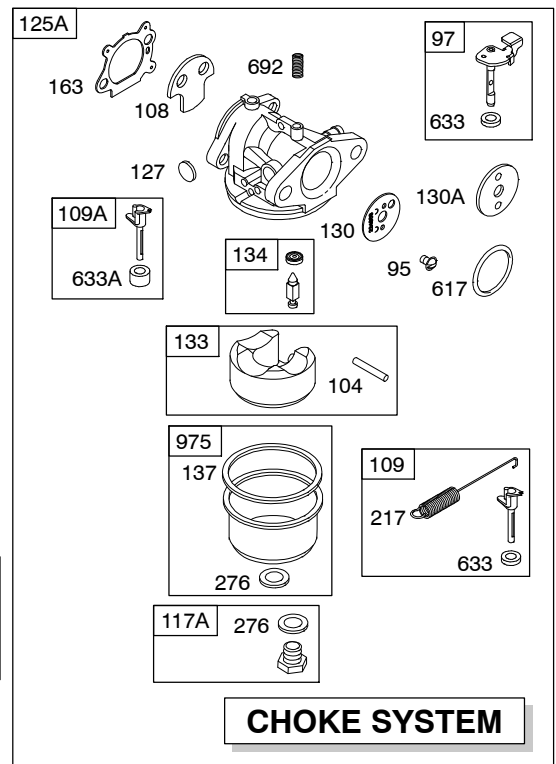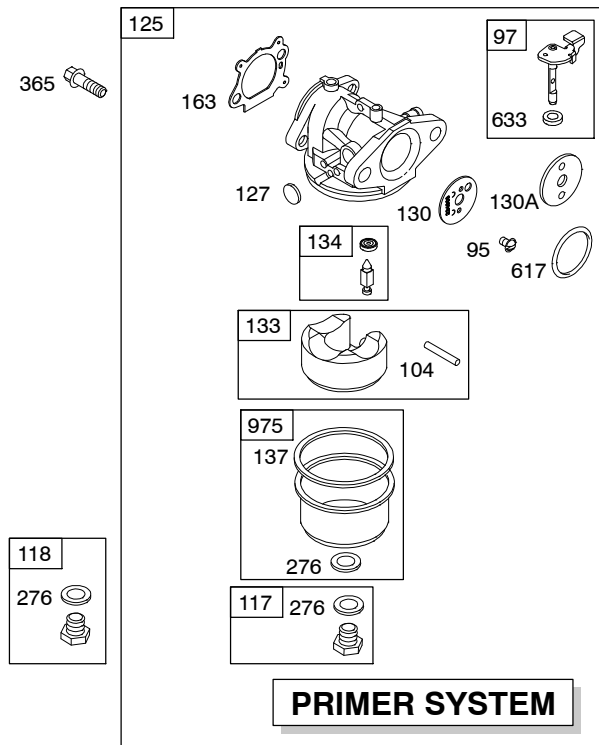












Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3730-3 Assemblies include all parts shown in frames. 07/14/2008

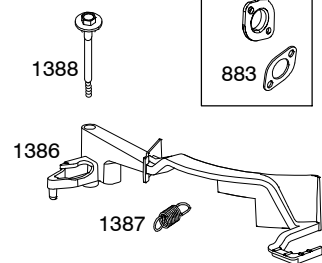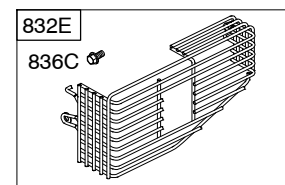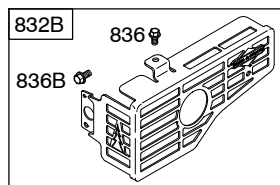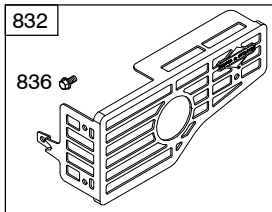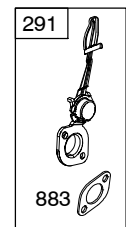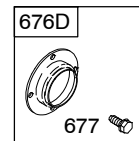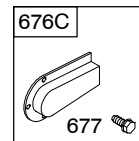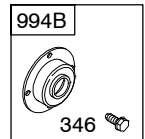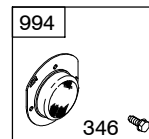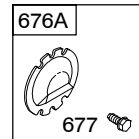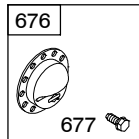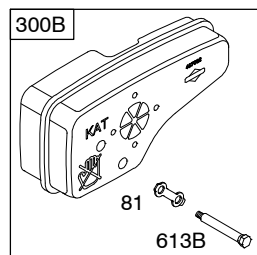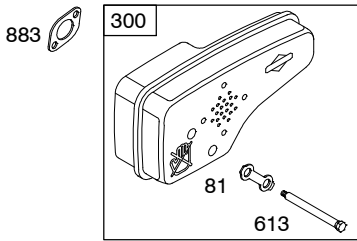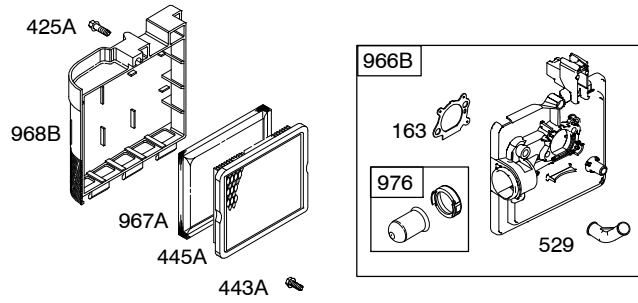

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3730-4 Assemblies include all parts shown in frames. **07/14/2008**

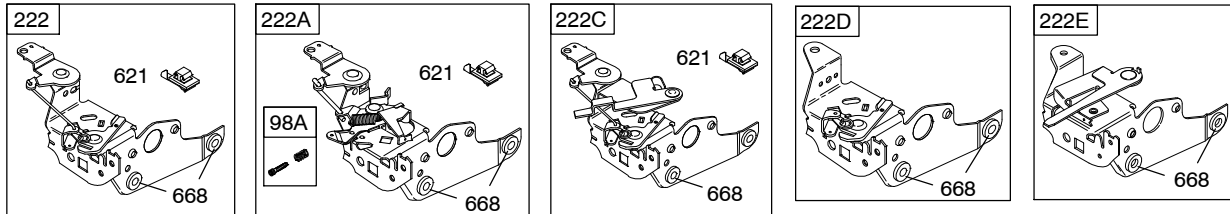


188 843 843A

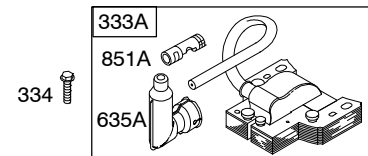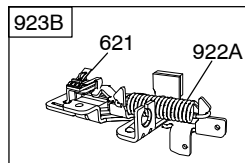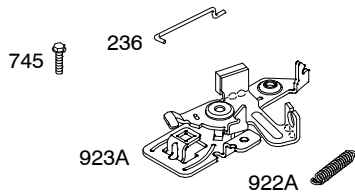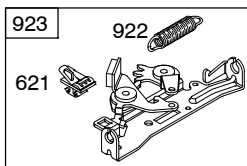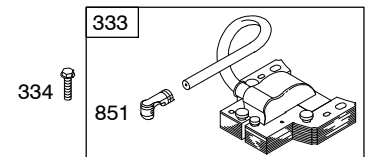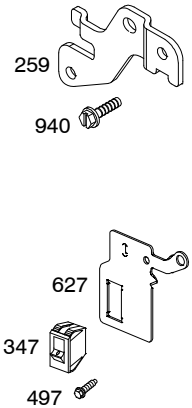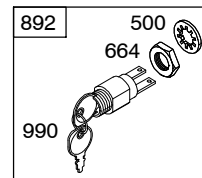
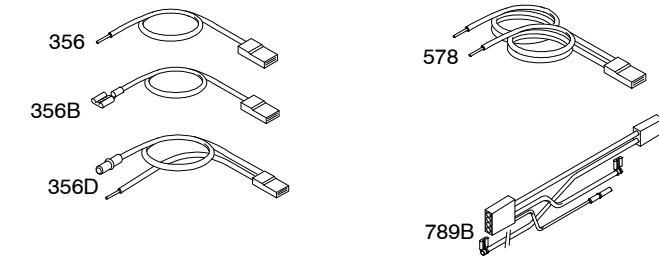
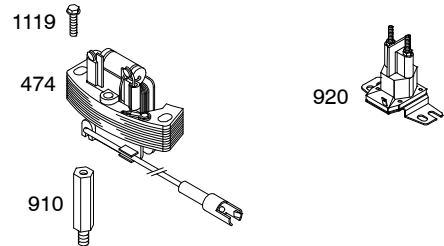
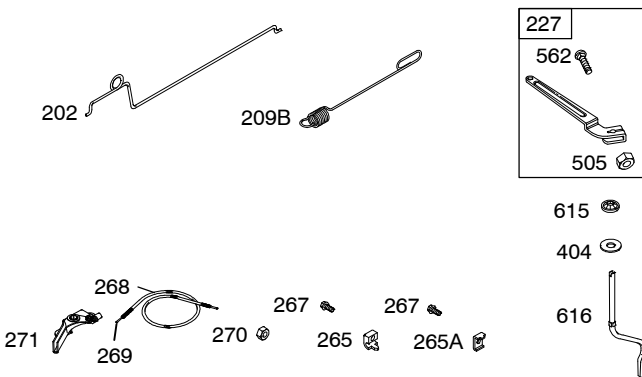


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3730-5 Assemblies include all parts shown in frames. **07/14/2008**

124T00

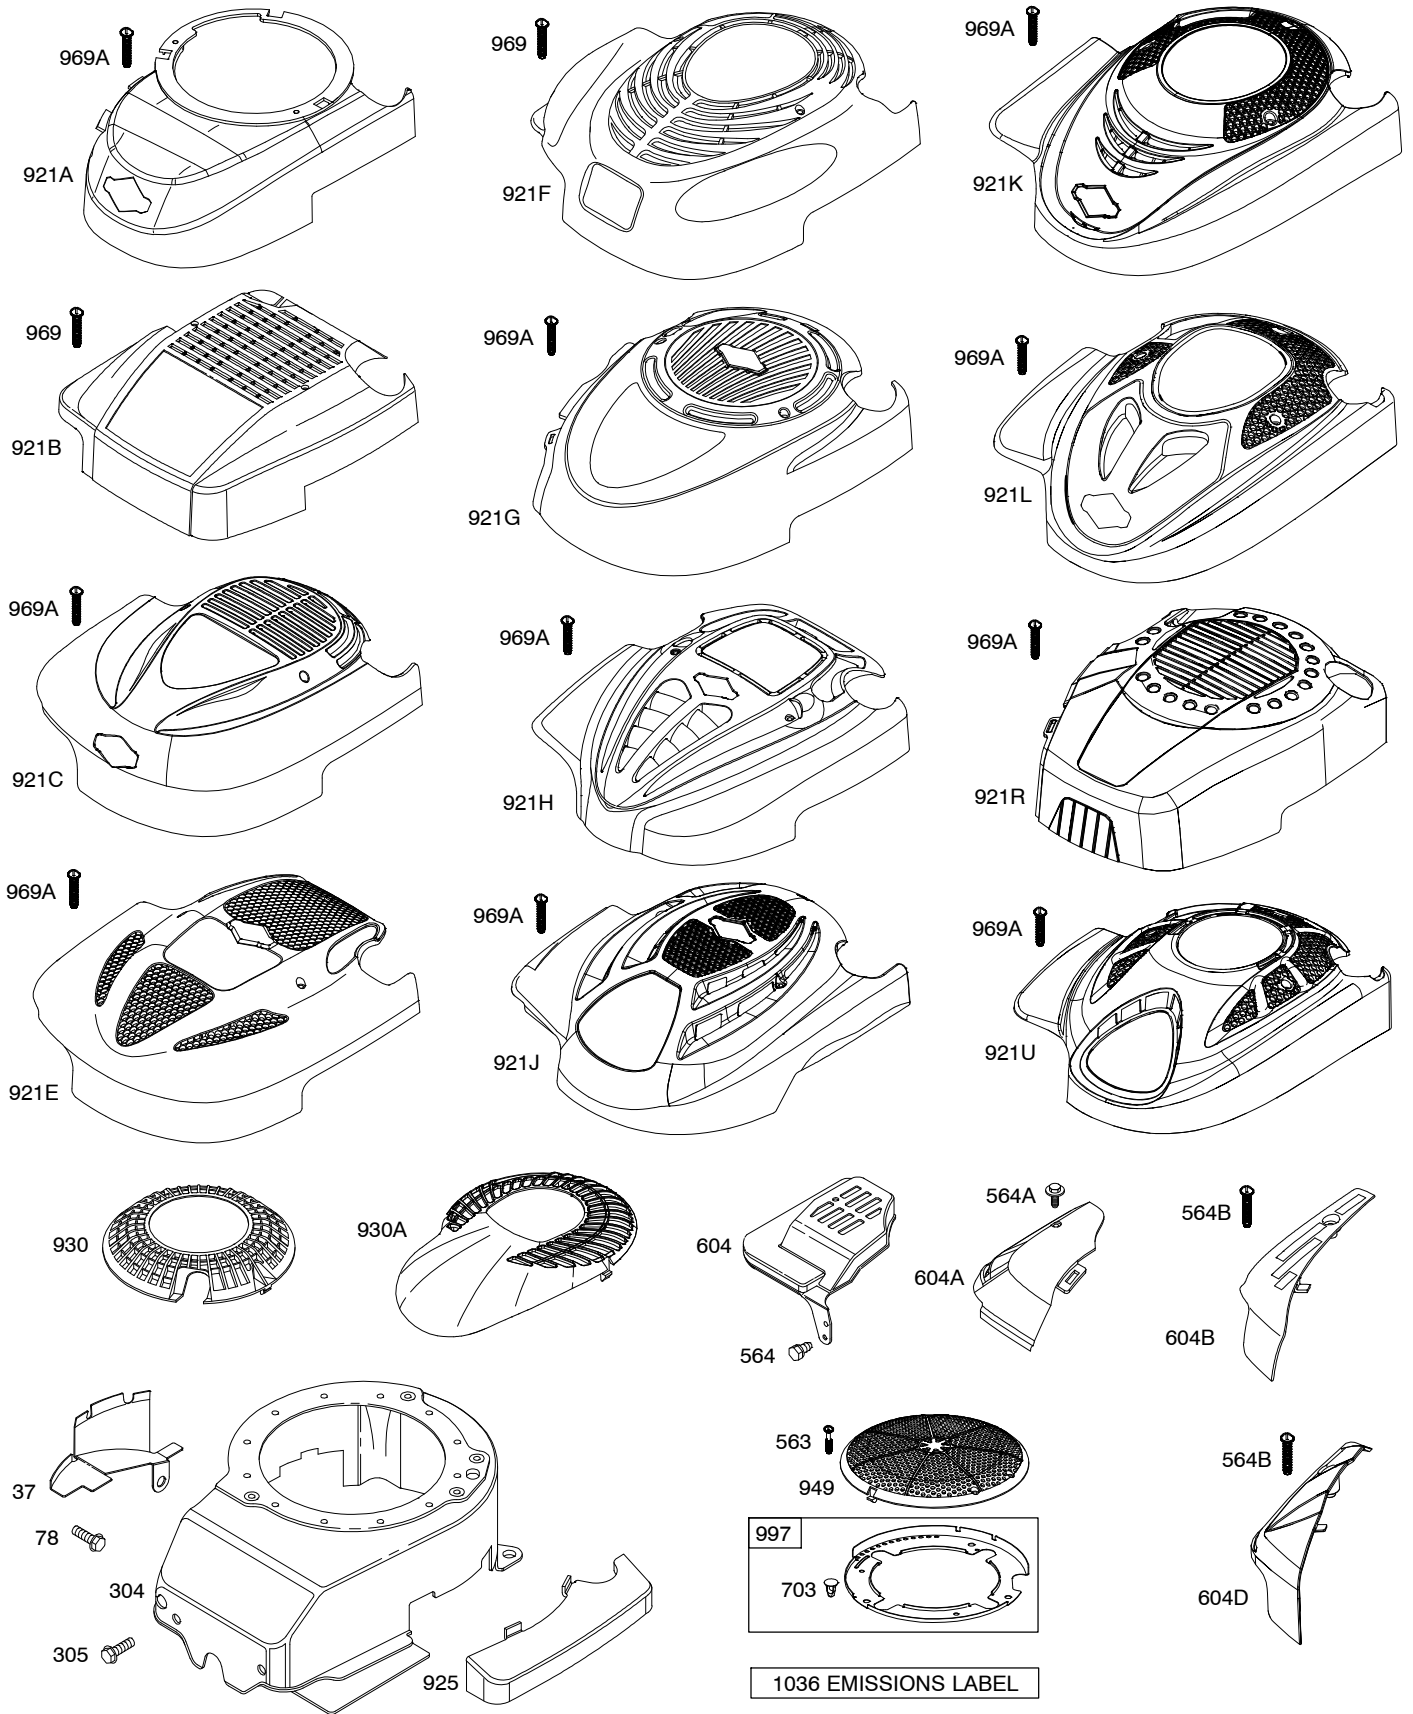

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3730-6 Assemblies include all parts shown in frames. **07/14/2008**

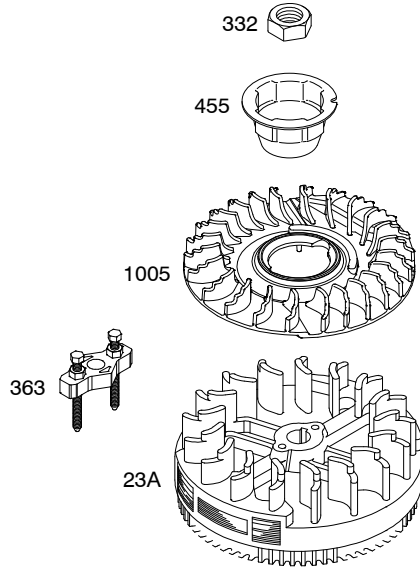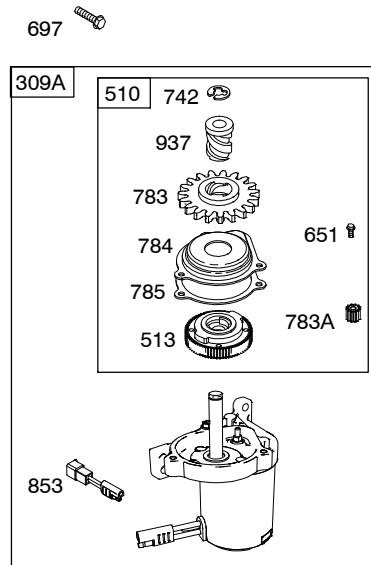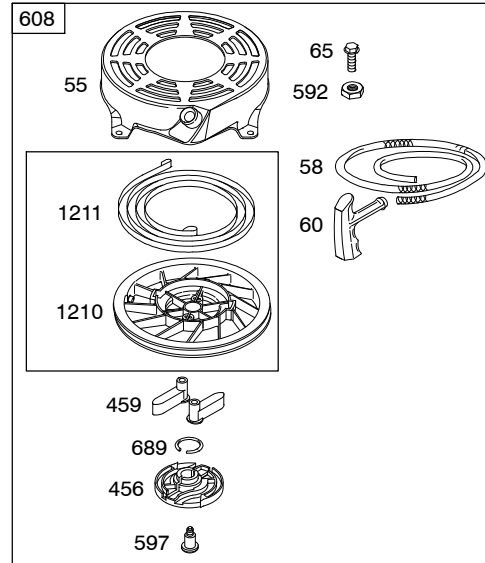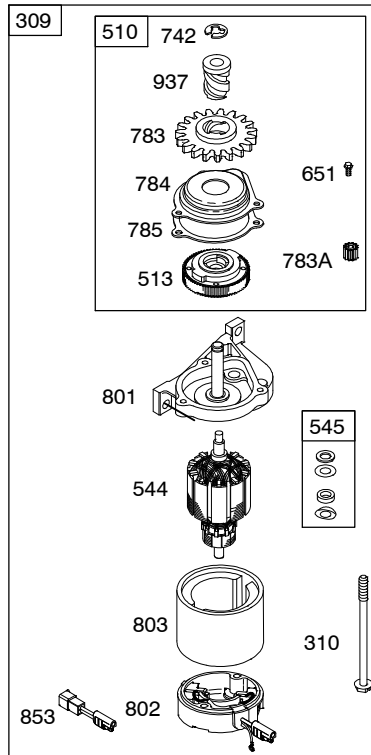

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3730-7 Assemblies include all parts shown in frames. **07/14/2008**

124T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	16	691450	Crankshaft	20	★399781S	Seal-Oil (PTO Side)
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----	22	691092	Screw (Crankcase Cover/Sump)
3	★299819S	Seal-Oil (Magneto Side)		691451	Crankshaft Used on Type No(s). 0105,0128,0133,0134,0135,0136,0137,0138,0140,0142,0143,0147,0148,0159,0162,0163,0171,0172,0174,0175,0177,0178,0179,0186,0187,0192,0201,0455,0464,0486,0567,0611,1728,1729,1772,1773,1778,1779,1780,1782,1905,1923,1946,1950,2042,2048,2049,2050,2109,2110,2112,2113,2635,2636,4159,4172.	23A	691987	Flywheel
4	493279	Sump-Engine			----- Note -----			----- Note -----
		498983 Sump-Engine Used on Type No(s). 0119, 1120, 1907, 1977, 4305.						691992 Flywheel Used on Type No(s). 0105, 0119, 0120, 0121, 0124, 0130, 0135, 0136, 0137, 0138, 0139, 0141, 0143, 0147, 0148, 0149, 0175, 0183, 0185, 0186, 0187, 0192, 0526, 0535, 1120, 1724, 1777, 1907, 1914, 1933, 2643.
5	691160	Head-Cylinder			691452 Crankshaft Used on Type No(s). 0129,0149,1709,1720,1722,1724,1771,1776,1777,1924,1933,1936,1952,1966,1971,1972,1983,2114,2309,2346,2367,2643.	24	222698S	Key-Flywheel
7	★∅692249	Gasket-Cylinder Head			694849 Crankshaft Used on Type No(s). 0130.	25	795429	Piston Assembly (Standard) (Used After Code Date 07090300).
8	695250	Breather Assembly			696290 Crankshaft Used on Type No(s). 0120,0185.			----- Note -----
9	★∅696125	Gasket-Breather			694850 Crankshaft Used on Type No(s). 0121,0139,0141,0183.			791097 Piston Assembly (Standard) (Used Before Code Date 07090400).
10	691125	Screw (Breather Assembly)			691455 Crankshaft Used on Type No(s). 0124,0526,0535,1914.			795430 Piston Assembly (.020" Oversize) (Used After Code Date 07090300).
11	691781	Tube-Breather			691482 Crankshaft Used on Type No(s). 0119,0144,1907,1977,4305.			791326 Piston Assembly (.020" Oversize) (Used Before Code Date 07090400).
12	★692232	Gasket-Crankcase			694478 Crankshaft Used on Type No(s). 0510,0536.			
13	690912	Screw (Cylinder Head)			691454 Crankshaft Used on Type No(s). 1926.			
15	691680	Plug-Oil Drain (Square Socket)			692980 Crankshaft Used on Type No(s). 1715.			
					696009 Crankshaft Used on Type No(s). 0161,0203,0215.			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3730-8

Assemblies include all parts shown in frames.

07/14/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
26	795431	Ring Set (Standard) (Used After Code Date 07090300). ----- Note ----- 791098 Ring Set (Standard) (Used Before Code Date 07090400). 795432 Ring Set (.020" Oversize) (Used After Code Date 07090300). 791324 Ring Set (.020" Oversize) (Used Before Code Date 07090400).	54	691650	Screw (Intake Manifold)	117	498978	Jet-Main (Standard)		
27	691866	Lock-Piston Pin	55	691421	Housing-Rewind Starter			----- Note ----- 692677 Jet-Main (Standard) (Used After Code Date 07020600). Used on Type No(s). 0464, 0736, 0854, 0886, 0896, 3736, 3854.		
28	499423	Pin-Piston (Standard)	58	697316	Rope-Starter (Cut To Required Length) ----- Note ----- 791362 Rope-Starter Used on Type No(s). 0987.			494870 Jet-Main (Standard) (Used Before Code Date 07020700). Used on Type No(s). 0464, 0736, 0854, 3736, 3854.		
29	499424	Rod-Connecting (Standard)	60	281434S	Grip-Starter Rope	117A	498981	Jet-Main (Standard) ----- Note ----- 498978 Jet-Main (Standard) Used on Type No(s). 0119, 0144, 1120, 1907, 1977, 4305.		
32	691664	Screw (Connecting Rod)	65	690837	Screw (Rewind Starter)			117B	691428	Jet-Main (Standard) (Used After Code Date 07020600). ----- Note ----- 697355 Jet-Main (Standard) (Used Before Code Date 07020700).
32A	695759	Screw (Connecting Rod)	78	691108	Screw (Flywheel Guard)					
33	262651S	Valve-Exhaust	81	691740	Lock-Muffler Screw					
34	262652S	Valve-Intake	95	691636	Screw (Throttle Valve)					
35	691270	Spring-Valve (Intake)	97	493267	Shaft-Throttle (Metal) ----- Note ----- 696565 Shaft-Throttle (Plastic)					
36	691270	Spring-Valve (Exhaust)	98A	493280	Kit-Idle Speed					
37	694086	Guard-Flywheel	104	691242	Pin-Float Hinge					
40	692194	Retainer-Valve	108	691182	Valve-Choke					
43	691997	Slinger-Governor/Oil ----- Note ----- 691486 Slinger-Governor/Oil Used on Type No(s). 0119, 1120, 1907, 1977, 4305.	108A	795935	Valve-Choke (Used After Code Date 08031200). ----- Note ----- 790844 Valve-Choke (Used Before Code Date 08031300).					
45	690548	Tappet-Valve	109	494218	Shaft-Choke					
46	691449	Camshaft	109A	498593	Shaft-Choke					
50A	794305	Manifold-Intake	109B	795936	Shaft-Choke (Used After Code Date 08031200). ----- Note ----- 790843 Shaft-Choke (Used Before Code Date 08031300).					
51	★272199S	Gasket-Intake								
51A	★794306	Gasket-Intake								

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3730-9

Assemblies include all parts shown in frames.

07/14/2008

124T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
118	497466	Jet-Main (High Altitude) ----- Note ----- 497315 Jet-Main (High Altitude) Used on Type No(s). 0464, 0736, 0854, 0886, 0896, 3736, 3854.	125	498170	Carburetor (Primer System) ----- Note ----- 694882 Carburetor (Primer System) (Used After Code Date 07020600). Used on Type No(s). 0464, 0736, 0854, 0886, 0896, 0926, 1001, 1072, 1771, 1781, 1946, 2042, 3736, 3854. 790821 Carburetor (Primer System) (Used Before Code Date 07020700). Used on Type No(s). 0464, 0736, 0854, 3736, 3854.	127	694468	Plug-Welch
118A	494870	Jet-Main (High Altitude) ----- Note ----- 497466 Jet-Main (High Altitude) Used on Type No(s). 0119, 0144, 1120, 1907, 1977, 4305.	125A	792253	Carburetor (Choke System) ----- Note ----- 499059 Carburetor (Choke System) Used on Type No(s). 0119, 0144, 1120, 1907, 1977, 4305. 790978 Carburetor (Choke System) Used on Type No(s). 0147, 0148, 0155, 0162, 0163, 0178, 0202, 1724, 1728, 1729, 1772, 1773.	130	696564	Valve-Throttle
118B	695042	Jet-Main (High Altitude) (Used After Code Date 07020600). ----- Note ----- 692677 Jet-Main (High Altitude) (Used Before Code Date 07020700).	125B	794304	Carburetor (Autochoke System) (Used After Code Date 07020600). ----- Note ----- 790845 Carburetor (Used Before Code Date 07020700).	130A	691203	Valve-Throttle
121	498260	Kit-Carburetor Overhaul				133	398187	Float-Carburetor
						134	398188	Kit-Needle/Seat
						137	693981	Gasket-Float Bowl
						146	690979	Key-Timing
						163	272653	Gasket-Air Cleaner
						187	791766	Line-Fuel (Cut to Required Length)
						187A	791873	Line-Fuel (Molded)
						187B	791891	Line-Fuel (Includes Filter)
						188	693399	Screw (Control Bracket)
						190	690940	Screw (Fuel Tank)
						202	691829	Link-Mechanical Governor

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3730-10

Assemblies include all parts shown in frames.

07/14/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
209B	699056	Spring-Governor ----- Note ----- 691851 Spring-Governor Used on Type No(s). 0111, 0112, 0114, 0133, 0134, 0144, 0175, 2311, 2643. 691290 Spring-Governor Used on Type No(s). 0130, 0171. 691291 Spring-Governor Used on Type No(s). 0115, 0120, 0121, 0128, 0135, 0136, 0137, 0141, 0142, 0143, 0149, 0183, 0185, 0186, 0187, 0510, 0536, 1914. 691292 Spring-Governor Used on Type No(s). 0105, 0129, 0138, 0139, 0157, 0158, 0159, 0160, 0161, 0172, 0176, 0177, 0179, 0192, 0201, 0215, 0356, 0567, 0988, 0989, 0994, 0999, 1001, 1004, 1026, 1049, 1052, 1072, 1090, 1146, 1709, 1715, 1777, 1781, 1905, 1923, 1926, 1936, 1946, 1950, 1951, 1952, 1966, 1971, 2048, 2049, 2112, 2113, 2114, 2309, 4176, 4157, 4158, 4159, 4172.			691864 Spring-Governor Used on Type No(s). 0124, 0144, 4305. 793007 Spring-Governor Used on Type No(s). 0147, 0148. 690241 Spring-Governor Used on Type No(s). 0119, 1120, 1907, 1977. 790944 Spring-Governor Used on Type No(s). 0526, 0535. 691852 Spring-Governor Used on Type No(s). 0174, 0188, 0987, 1720, 1722, 1771, 1774, 1776, 1778, 1779, 1780, 1782, 1924, 1972, 1983, 2042, 2109, 2110, 2346, 2367, 2635, 2636. 792666 Spring-Governor Used on Type No(s). 1724. 791157 Spring-Governor Used on Type No(s). 0155, 0162, 0163, 0178, 0202, 1728, 1729, 1772, 1773.				217 690354 Spring-Choke Return 222 790143 Bracket-Control (Remote/Manual Friction)(Primer) 222A 692021 Bracket-Control (Remote Choke and Choke A Matic) ----- Note ----- 790982 Bracket-Control Used on Type No(s). 0155, 0162, 0163, 0178, 0202, 1728, 1729, 1772, 1773. 222C 692150 Bracket-Control (Variable Speed) (5 Position Manual Choke) 222D 791128 Bracket-Control (Fixed Speed) 222E 692982 Bracket-Control (Manual Friction 5 Position Manual Choke) 227 690783 Lever-Governor Control 231 691636 Screw (Choke Valve) 236 691826 Link-Lockout 240 298090S Filter-Fuel 259 691223 Bracket-Casing Clamp (Control Wire Casing) 265 690798 Clamp-Casing 265A 691024 Clamp-Casing 267 691044 Screw (Casing Clamp) 268 691025 Casing-Control Wire (Cut to Required Length) 269 691026 Wire-Control (Cut to Required Length)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3730-11

Assemblies include all parts shown in frames.

07/14/2008

124T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
270	691027	Nut (Control Wire Casing)	304	695892	Housing-Blower ----- Note -----	305	691108	Screw (Blower Housing)
271	691028	Lever-Control	790826		Housing-Blower	306	690450	Shield-Cylinder
276	◆271716	Washer-Sealing (Main Jet)			Used on Type No(s). 0128, 0157, 0158, 0159, 0174, 0176, 0188, 0203, 0301, 0356, 0567, 0650, 0847, 0885, 0987, 1052, 1779, 1782, 2048, 3847, 4157, 4158, 4159, 4172.	306A	790836	Shield-Cylinder
287	690940	Screw (Dipstick Tube)	493294		Housing-Blower Used on Type No(s). 0105, 0115, 0120, 0121, 0124, 0130, 0133, 0134, 0135, 0136, 0137, 0138, 0139, 0141, 0143, 0144, 0147, 0148, 0149, 0171, 0175, 0177, 0183, 0185, 0186, 0187, 0192, 0510, 0526, 0535, 0536, 1724, 1907, 1914, 1933, 1977, 2114, 2643, 4305.	307	690345	Screw (Cylinder Shield)
291	790830	Thermostat	493293		Housing-Blower Used on Type No(s). 0114, 0140, 0161, 0163, 0178, 0215, 0486, 0611, 0774, 0848, 0904, 0906, 0947, 1026, 1060, 1709, 1715, 1720, 1722, 1728, 1729, 1772, 1776, 1780, 1923, 1924, 1966, 1972, 1983, 2110, 2113, 2309, 2311, 2346, 2367, 2636, 3774, 3848.	309	695550	Motor-Starter (Used Before Code Date 07052900).
300	692038	Muffler ----- Note ----- 790828 Muffler Used on Type No(s). 0128, 0157, 0158, 0159, 0160, 0174, 0176, 0188, 0203, 0301, 0356, 0567, 0650, 0847, 0885, 0987, 1777, 1778, 1779, 1782, 2048, 2049, 3847, 4156, 4157, 4158, 4159, 4172. 496106S Muffler Used on Type No(s). 0105, 0139, 0155, 0162, 0163, 0172, 0175, 0177, 0178, 0179, 0201, 0202, 0526, 0536, 0611, 1026, 1709, 1715, 1720, 1722, 1724, 1728, 1729, 1771, 1772, 1773, 1776, 1780, 1905, 1907, 1914, 1923, 1924, 1926, 1933, 1936, 1946, 1950, 1951, 1952, 1966, 1971, 1972, 1977, 1983, 2042, 2050, 2109, 2110, 2112, 2113, 2114, 2309, 2311, 2346, 2367, 2635, 2636, 2643, 4305. 792677 Muffler Used on Type No(s). 1052.	309A	795092	Motor-Starter (Used After Code Date 07052800).			
300B	694048	Muffler	694879		Housing-Blower Used on Type No(s). 0119, 1120. 791291 Housing-Blower Used on Type No(s). 1777, 4156. 790983 Housing-Blower Used on Type No(s). 0160, 2049.	310	692327	Bolt (Starter Motor)
						332	690662	Nut (Flywheel)
						333	802574	Armature-Magneto ----- Note ----- 790817 Armature-Magneto Used on Type No(s). 0464, 0736, 0854, 0896, 1946, 3736, 3854.
						333A	793353	Armature-Magneto ----- Note ----- 793354 Armature-Magneto Used on Type No(s). 0174, 0885, 0886, 1072, 1771, 1772, 1773, 1778, 1779, 1781, 1782, 2042, 2048, 2049, 4172.
						334	691061	Screw (Magneto Armature)
						337	802592S	Plug-Spark (Resistor) ----- Note ----- 697451 Plug-Spark (EMS)
						346	690661	Screw (Spark Arrestor)
						347	691396	Switch-Rocker

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3730-12

Assemblies include all parts shown in frames.

07/14/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION			
356	692390	Wire-Stop	578	398153	Wire Assembly	621	692310	Switch-Stop			
356B	693010	Wire-Stop	584	697734	Cover-Breather Passage	627	792565	Bracket-Stop Switch			
356D	496381	Wire-Stop	585	★691879	Gasket-Breather Passage	633	◆◆691321	Seal-Choke/Throttle Shaft			
357A	691483	Key-Drive Pulley	592	690800	Nut (Rewind Starter)	633A	◆◆693867	Seal-Choke/Throttle Shaft			
358	794307	Gasket Set-Engine	597	691696	Screw (Pawl Friction Plate)	635	66538S	Boot-Spark Plug			
363	19069	Flywheel Puller	601	791850	Clamp-Hose	635A	793351	Boot-Spark Plug			
365	691688	Screw (Carburetor)	601A	691038	Clamp-Hose	651	691660	Screw (Starter Gear Cover)			
383	89838S	Wrench-Spark Plug	604	691757	Cover-Control	664	691087	Nut (Key Switch)			
404	690272	Washer (Governor Crank)	604A	691344	Cover-Control	668	★493823	Spacer			
425A	690670	Screw (Air Cleaner Cover)	604B	790703	Cover-Control	670	692294	Spacer-Fuel Tank			
443A	692523	Screw (Air Cleaner Primer Base)	604D	793770	Cover-Control	676	396548	Deflector-Muffler			
445A	491588S	Filter-Air Cleaner Cartridge	608	497680	Starter-Rewind	676A	393756	Deflector-Muffler			
455	791960	Cup-Flywheel			----- Note -----	676C	493871	Deflector-Muffler			
456	692299	Plate-Pawl Friction			791363	Starter-Rewind	676D	497682	Deflector-Muffler		
459	281505S	Plate-Ratchet				Used on Type No(s). 0987.	677	690661	Screw (Muffler Deflector)		
474	691991	Alternator	613	691340	Screw (Muffler)	684	690345	Screw (Breather Passage Cover)			
497	690664	Screw (Stopswitch Bracket)			----- Note -----	689	691855	Spring-Friction			
500	691086	Washer (Key Switch)			790833	Screw (Muffler)	692	690572	Spring-Detent		
505	691251	Nut (Governor Control Lever)				Used on Type No(s). 0128, 0157, 0158, 0159, 0160, 0174, 0176, 0188, 0203, 0301, 0356, 0567, 0650, 0847, 0885, 0987, 1777, 1778, 1779, 1782, 2048, 2049, 3847, 4156, 4157, 4158, 4159, 4172.	697	691127	Screw (Drive Cap)		
510	795093	Drive-Starter				792678	Screw (Muffler)	703	696309	Clip	
513	692358	Clutch-Drive				Used on Type No(s). 1052.	718	690959	Pin-Locating		
523	499621	Dipstick	613B	691114	Screw (Muffler)	741	795755	Gear-Timing (Plastic)			
524	★692296	Seal-Dipstick Tube					----- Note -----	794388	Gear-Timing (Use Without Woodruff Key)		
525	495265	Tube-Dipstick							(Used After Code Date 07093000).		
529	691923	Grommet							790345	Gear-Timing (Use Without Woodruff Key)	
544	690786	Armature-Starter								(Used Before Code Date 07100100).	
545	492919	Washer Set	615	690340	Retainer-Governor Shaft					691830	Gear-Timing (Uses Woodruff Key)
562	92613	Bolt (Governor Control Lever)	616	698801	Crank-Governor						
563	691138	Screw (Debris Guard Screen)	617★◆	270344	Seal-O Ring (Intake Manifold)						
564	690664	Screw (Control Cover)									
564A	691142	Screw (Control Cover)									
564B	698589	Screw (Control Cover)									

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3730-13

Assemblies include all parts shown in frames.

07/14/2008

124T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
742	93941	Retainer-E Ring	868	697338	Seal-Valve	923	691994	Brake
745	691648	Screw (Brake)	869	691155	Seat-Valve (Intake)	923A	695891	Brake
783	691918	Gear-Pinion	870	690380	Seat-Valve (Exhaust)	923A	695891	Brake
783A	691269	Gear-Pinion	871	262001	Bushing-Valve Guide (Exhaust)	----- Note -----		
784	795095	Cover-Starter Gear						695891 Brake
785	692352	Gasket-Starter Cover						(Used Before Code
789B	696547	Harness-Wiring						Date 08050100).
		----- Note -----						Used on Type No(s).
		696546 Harness- Wiring						0101, 0111, 0112,
		Used on Type No(s).						0116, 0128, 0129,
		0138.						0142, 0455, 0464,
801	690782	Cap-Drive						0704, 0736, 0773,
802	695267	Cap-End	883	691881	Gasket-Exhaust			0847, 0853, 0854,
803	695266	Housing-Starter	892	690646	Switch-Key			0876, 0885, 0886,
832	499034	Guard-Muffler	910	691094	Stud (Alternator)			0887, 0896, 1771,
832B	497683	Guard-Muffler	920	691656	Solenoid-Starter			1773, 1779, 1781,
832E	793568	Guard-Muffler	921A	695886	Cover-Blower Housing			1782, 1905, 1926,
836	690664	Screw (Muffler Guard)	921B	692931	Cover-Blower Housing			1946, 1950, 1951,
836B	691147	Screw (Muffler Guard)	921C	695889	Cover-Blower Housing			1952, 1971, 2042,
836C	790745	Screw (Muffler Guard)	921E	696262	Cover-Blower Housing			2048, 2109, 2112,
842	691031	Seal-O Ring (Dipstick Tube)	921F	697343	Cover-Blower Housing			2635, 3704, 3736,
843	691884	Sleeve-Lever (Speed Control)	921G	790701	Cover-Blower Housing			3773, 3847, 3853,
843A	691895	Sleeve-Lever (Choke)	921H	790037	Cover-Blower Housing			3854.
847	692047	Dipstick/Tube Assembly	921J	790036	Cover-Blower Housing	923B	796136	Brake
851	493880S	Terminal-Spark Plug	921K	699984	Cover-Blower Housing			(Used After Code Date
851A	692424	Terminal-Spark Plug	921L	791026	Cover-Blower Housing			08043000).
853	695268	Adapter-Wire	921R	793771	Cover-Blower Housing			Used on Type No(s).
		----- Note -----	921U	794355	Cover-Blower Housing			0101, 0111, 0112,
		698471 Adapter-Wire	922	691831	Spring-Brake			0116, 0128, 0129,
		Used on Type No(s).	922A	692135	Spring-Brake			0142, 0455, 0464,
		2110, 2113.						0704, 0736, 0773,
		696379 Adapter-Wire						0847, 0853, 0854,
		Used on Type No(s).						0876, 0885, 0886,
		0138.						0887, 0896, 1771,
								1773, 1779, 1781,
								1782, 1905, 1926,
								1946, 1950, 1951,
								1952, 1971, 2042,
								2048, 2109, 2112,
								2635, 3704, 3736,
								3773, 3847, 3853,
								3854.

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3730-14

Assemblies include all parts shown in frames.

07/14/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
925	795403	Cover-Linkage (Used After Code Date 07072200). ----- Note ----- 690595 Cover-Linkage (Used Before Code Date 07072300).	967A	493537S	Filter-Pre Cleaner	1119	691648	Screw (Alternator)
			968B	692298	Cover-Air Cleaner	1160	690345	Screw (Interlock Switch)
			969	690700	Screw (Blower Housing Cover)	1210	498144	Pulley/Spring Assembly (Pulley)
			969A	691138	Screw (Blower Housing Cover)	1211	498144	Pulley/Spring Assembly (Spring)
930	691919	Guard-Rewind	972B	699374	Tank-Fuel (Plastic)	1319	794467	Label-Warning
930A	691345	Guard-Rewind	975	493640	Bowl-Float	1330	270962	Manual-Repair
935	499421	Switch-Interlock	976	694395	Primer-Carburetor	1386	790848	Vane-Air (Autochoke System)
937	691325	Spline-Starter	977	498261	Gasket Set-Carburetor	1387	790849	Spring-Air Vane
940	690664	Screw (Casing Clamp Bracket)	994	398067	Arrestor-Spark	1388	790850	Screw (Air Vane) (Autochoke System)
949	696306	Guard-Debris Screen	994B	792245	Arrestor-Spark			
957A	692046	Cap-Fuel Tank (Plastic)	997	696310	Shield-Debris			
957B	699985	Cap-Fuel Tank (Plastic)	990	691959	Key Set			
958	698183	Valve-Fuel Shut Off (Plastic)	1005	691346	Fan-Flywheel			
966B	792040	Base-Air Cleaner Primer ----- Note ----- 795259 Base-Air Cleaner Primer Used on Type No(s). 1146.	1019	494256	Kit-Label			
			1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)			
			1058	277039	Operator's Manual			
			1059	692311	Kit-Screw/Washer			
			1095	498528	Gasket Set-Valve			
			1102	691255	Pilot-Guide			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3730-15

Assemblies include all parts shown in frames.

07/14/2008

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>