



# Illustrated Parts List

## Model Series

# 12D100

TYPE NUMBERS  
0110 through 0940.

### TABLE OF CONTENTS

<b>Blower Housing/Shrouds</b> .....	6
<b>Camshaft</b> .....	2
<b>Carburetor</b> .....	4
<b>Controls</b> .....	5
<b>Crankcase Cover</b> .....	2
<b>Crankshaft</b> .....	2
<b>Cylinder</b> .....	2
<b>Cylinder Head</b> .....	3
<b>Electric Starter</b> .....	5
<b>Exhaust System</b> .....	6
<b>Flywheel</b> .....	6
<b>Fuel Supply</b> .....	4
<b>Governor Spring</b> .....	5
<b>Ignition</b> .....	5
<b>Kits/Gaskets - Carburetor</b> .....	4
<b>Kits/Gaskets - Engine</b> .....	2
<b>Kits/Gaskets - Valves</b> .....	3
<b>Lubrication</b> .....	2
<b>Piston Group</b> .....	2
<b>Rewind Starter</b> .....	5



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 12D100












1319 WARNING LABEL

**REQUIRED** when replacing parts with warning labels affixed.





1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL










1019 LABEL KIT

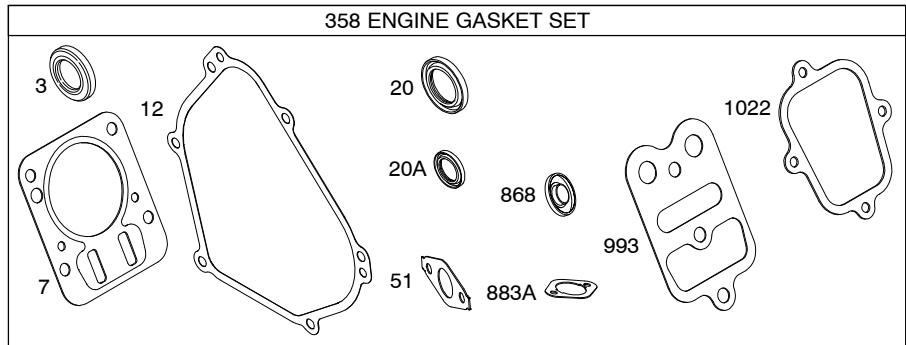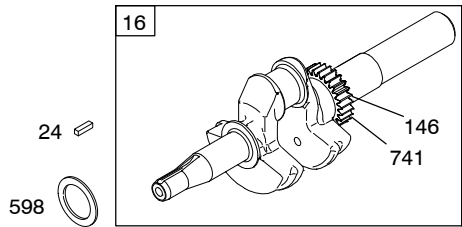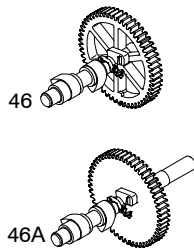
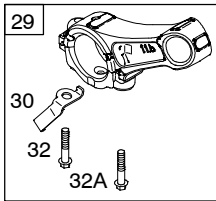
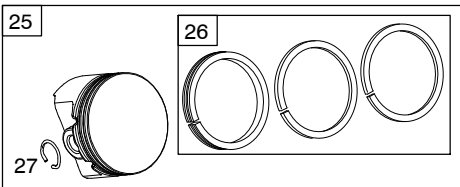
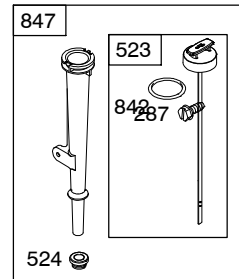
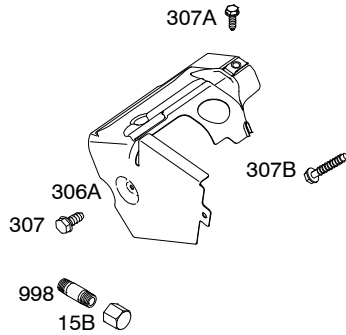
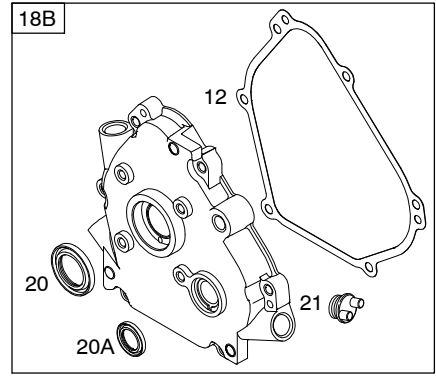
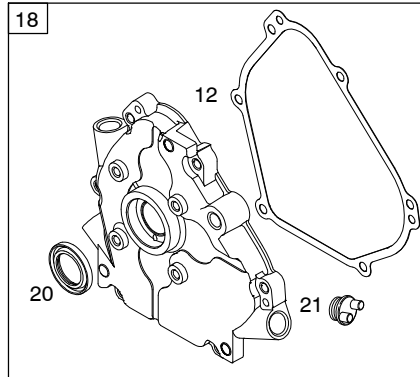
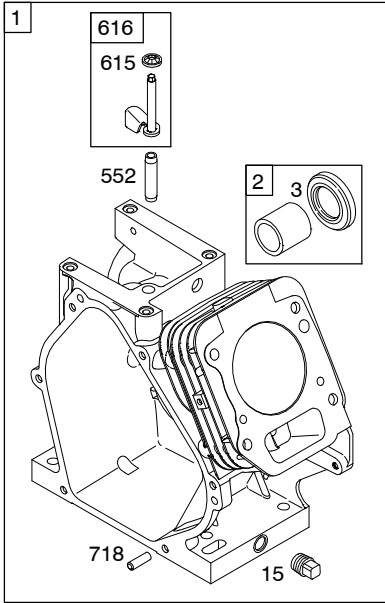


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 3399-2 Assemblies include all parts shown in frames. 06/17/2008

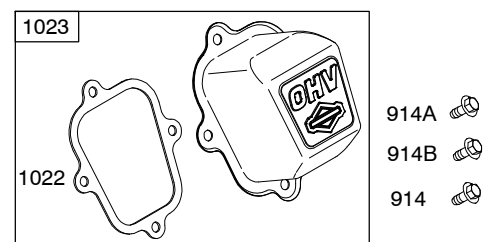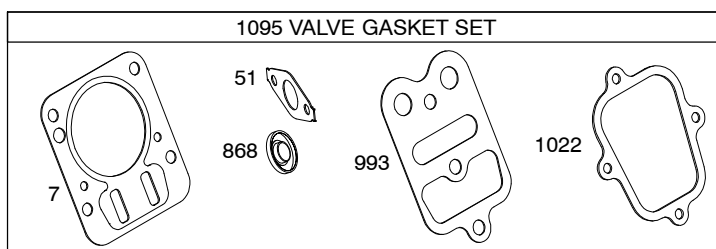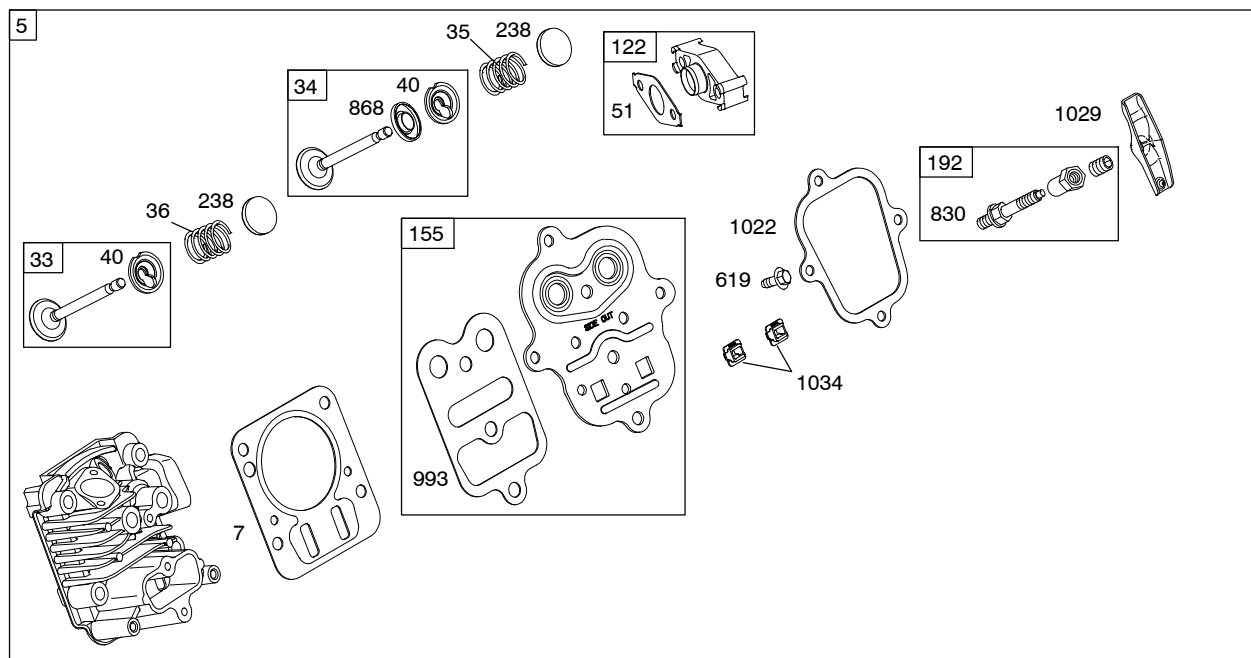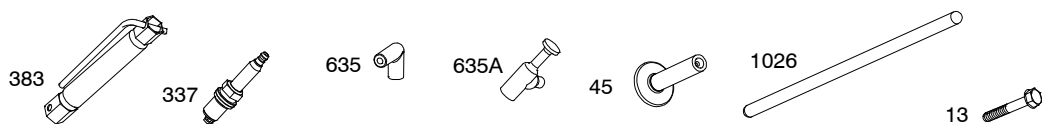

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

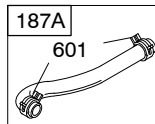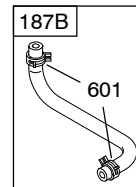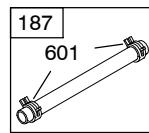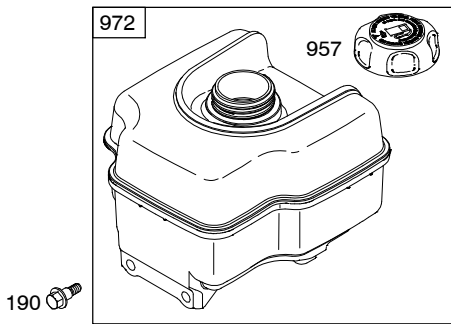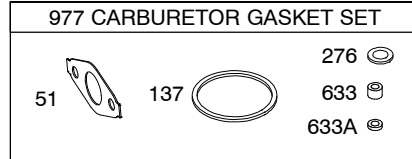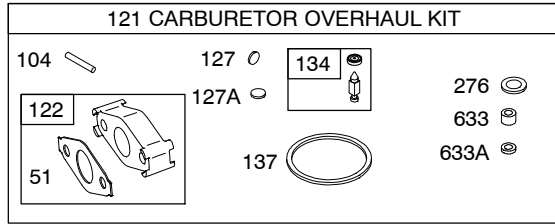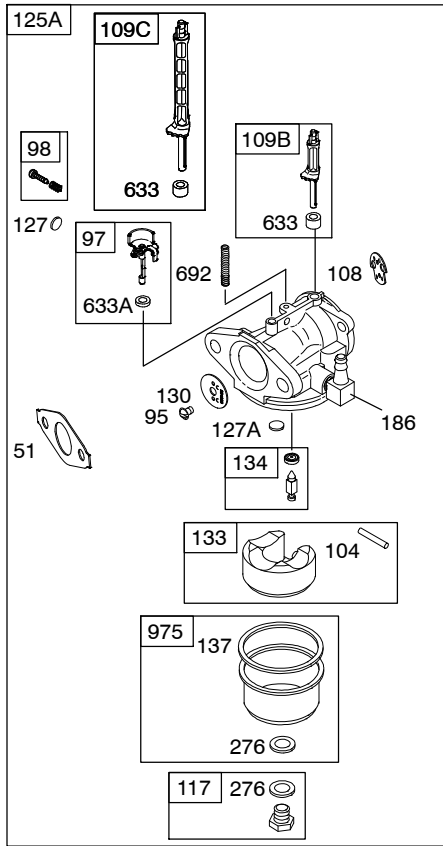


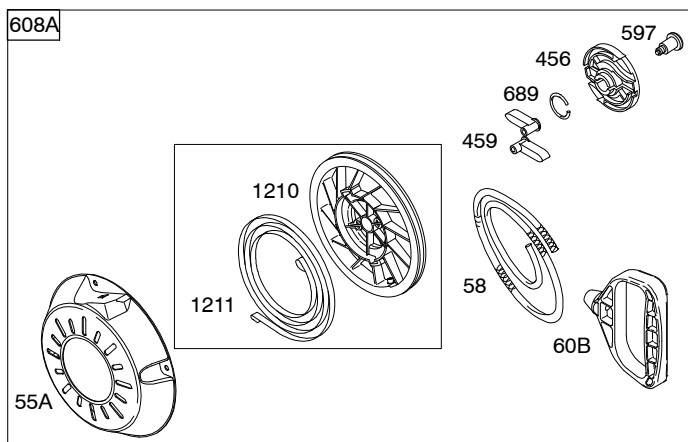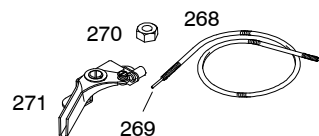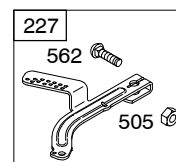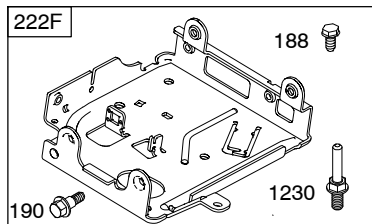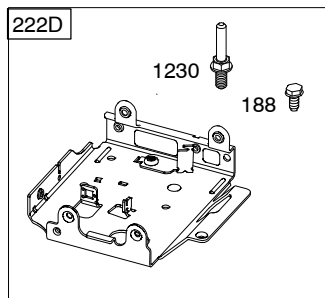




334

1119

347




1054

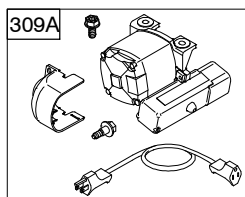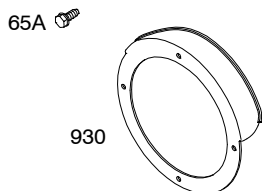

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

# 12D100

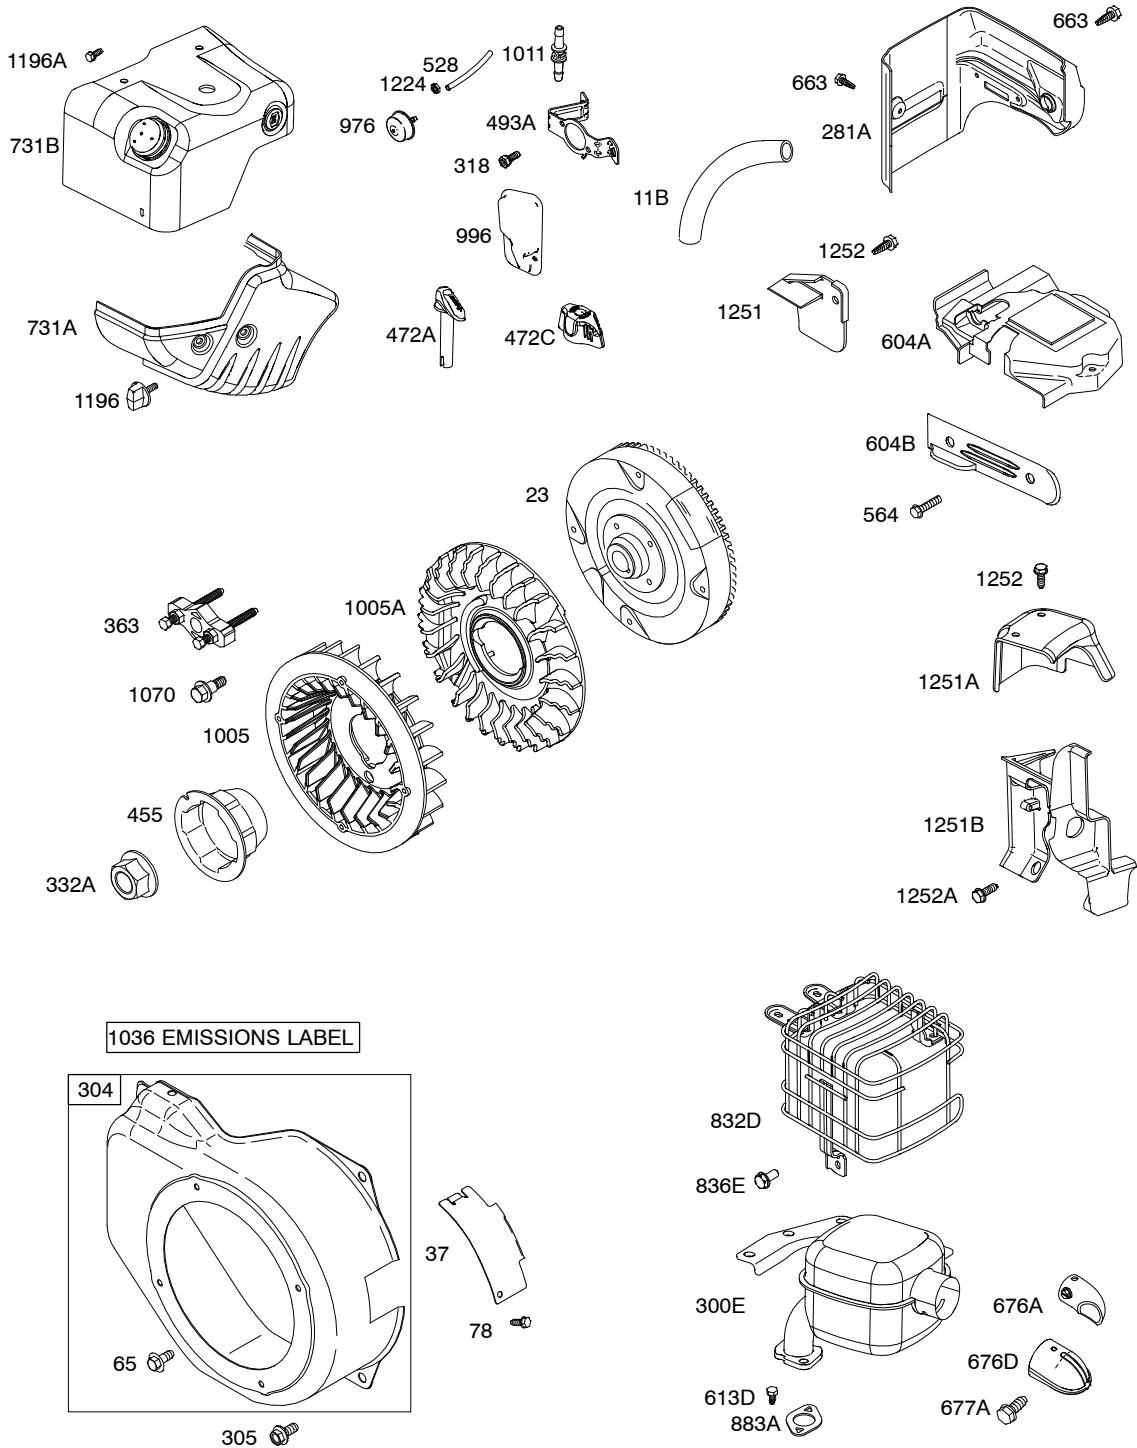

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
3399-6 Assemblies include all parts shown in frames. 06/17/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699510	Cylinder Assembly	26	791969	Ring Set (Standard) (Used After Code Date 05060600).	60B	699334	Grip-Starter Rope
2	399269	Kit-Bushing/Seal (Magneto Side)				65	699228	Screw (Rewind Starter)
3	★299819S	Seal-Oil (Magneto Side)			----- <b>Note</b> -----	65A	699851	Screw (Rewind Starter)
5	699486	Head-Cylinder			499631 Ring Set (Standard) (Used Before Code Date 05060700).	78	699205	Screw (Flywheel Guard)
7	★∅698210	Gasket-Cylinder Head			791324 Ring Set (.020" Oversize) (Used After Code Date 05060600).	95	691636	Screw (Throttle Valve)
11B	695745	Tube-Breather			692786 Ring Set (.020" Oversize) (Used Before Code Date 05060700).	97	690024	Shaft-Throttle
12	★699485	Gasket-Crankcase				98	398185	Kit-Idle Speed
13	699482	Screw (Cylinder Head)				104	●691242	Pin-Float Hinge
15	691686	Plug-Oil Drain				108	695807	Valve-Choke
15B	695757	Plug-Oil Drain				109C	791954	Shaft-Choke
16	699445	Crankshaft ----- <b>Note</b> ----- 699449 Crankshaft Used on Type No(s). 0111. 699454 Crankshaft Used on Type No(s). 0940.				109B	695729	Shaft-Choke
			27	691866	Lock-Piston Pin	117	690048	Jet-Main (Standard)
			28	499423	Pin-Piston	118	498977	Jet-Main (High Altitude)
			29	690124	Rod-Connecting	121	792006	Kit-Carburetor Overhaul
			30	791584	Dipper-Connecting Rod	122	●693749	Spacer-Carburetor
18	699804	Cover-Crankcase	32	691664	Screw (Connecting Rod)	125A	794587	Carburetor
18B	699677	Cover-Crankcase	32A	695759	Screw (Connecting Rod)	127	●694468	Plug-Welch
20	★692550	Seal-Oil (PTO Side)			33	499642	Valve-Exhaust	
20A	★691952	Seal-Oil (PTO Side) (Auxiliary Drive)			34	499641	Valve-Intake	
					35	691304	Spring-Valve (Intake)	
21	281658S	Cap-Oil Fill			36	691304	Spring-Valve (Exhaust)	
22	699478	Screw (Crankcase Cover/ Sump)			37	699661	Guard-Flywheel	
23	699516	Flywheel			40	692194	Retainer-Valve	
24	222698S	Key-Flywheel			45	690977	Tappet-Valve	
25	791968	Piston Assembly (Standard) ----- <b>Note</b> ----- 791326 Piston Assembly (.020" Oversize)			46	693404	Camshaft	
			46A	695285	Camshaft			
			51	★●∅692555	Gasket-Intake	178A	791867	Line-Fuel (Molded)
			55A	696710	Housing-Rewind Starter	187B	791874	Line-Fuel (Molded)
			58	693389	Rope-Starter (Cut To Required Length)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

3399-7

Assemblies include all parts shown in frames.

06/17/2008

# 12D100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
188	699479	Screw (Control Bracket)	307	699483	Screw (Cylinder Shield)	474	694457	Alternator ----- <b>Note</b> -----
190	699220	Screw (Fuel Tank)	307A	699234	Screw (Cylinder Shield)		793640	Alternator Used on Type No(s). 0110, 0112, 0113, 0114, 0115, 0116, 0117, 0118, 0119, 0120, 0122, 0124, 0125, 0126.
192	694543	Ball-Rocker Arm	307B	790557	Screw (Cylinder Shield)	493A	695744	Bracket-Mounting
209	692571	Spring-Governor	309A	696818	Motor-Starter Used on Type No(s). 0131, 0207. ----- <b>Note</b> -----	505	691251	Nut (Governor Control Lever)
219	693578	Gear-Governor		699786	Motor-Starter Used on Type No(s). 0113, 0114, 0116, 0119, 0125.	523	693618	Dipstick ----- <b>Note</b> -----
220	691724	Washer (Governor Gear)	318	690370	Screw (Mounting Bracket)		790546	Dipstick Used on Type No(s). 0116, 0117, 0118, 0119, 0120, 0121, 0940.
222D	790549	Bracket-Control (Used Before Code Date 06051500).	332A	792723	Nut (Flywheel)	524	281370	Seal-Dipstick Tube
222F	793100	Bracket-Control (Used After Code Date 06051400).	333	695711	Armature-Magneto	528	793006	Hose-Primer
227	692573	Lever-Governor Control	334	699477	Screw (Magneto Armature)	552	692346	Bushing-Governor Crank
238	691300	Cap-Valve	337	491055S	Plug-Spark (Resistor) ----- <b>Note</b> -----	562	691119	Bolt (Governor Control Lever)
268	691025	Control Wire Casing (Cut to Required Length)	347	698338	Switch-Rocker	564	699854	Screw (Control Cover)
269	691026	Control Wire (Cut to Required Length)	356C	695630	Wire-Stop	578A	790481	Wire Assembly
270	691027	Nut (Control Wire Casing)	356J	692603	Wire-Stop	578B	791956	Wire Assembly
271	691028	Lever-Control	356L	790552	Wire-Stop	597	691696	Screw (Pawl Friction Plate)
276	♦271716	Washer-Sealing	358	791797	Set-Engine Gasket	598	220624	Shim-End Play
281A	793122	Panel-Control	363	19203	Puller-Flywheel	601	791850	Clamp-Hose
287	699629	Screw (Dipstick Tube)	365	699484	Screw (Carburetor)	604A	793134	Cover-Control (Used After Code Date 06051400). ----- <b>Note</b> -----
300E	791940	Muffler (Used After Code Date 05101800). ----- <b>Note</b> -----	383	19374S	Wrench-Spark Plug (Oil Fill Bracket)	604B	790473	Cover-Control
		790548 Muffler (Used Before Code Date 05101900).	455	692591	Cup-Flywheel		695749	Cover-Control (Used Before Code Date 06051500).
304	699598	Housing-Blower	456	692299	Plate-Pawl Friction			
305	699480	Screw (Blower Housing)	459	281505	Pawl-Ratchet			
306A	695710	Shield-Cylinder	472A	790553	Knob-Choke Shaft			
			472C	791948	Knob-Choke Shaft			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

3399-8

Assemblies include all parts shown in frames.

06/17/2008



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
608A	699335	Starter-Rewind	851	493880	Terminal-Spark Plug	1022	★∅691890	Gasket-Rocker Cover
613D	699209	Screw (Muffler)	868	★∅692044	Seal-Valve	1023	499924	Cover-Rocker Arm
615	692576	Retainer-Governor Shaft	883A	★691893	Gasket-Exhaust	1026	790287	Rod-Push
616	692547	Crank-Governor	892	791944	Switch-Key	1029	691230	Arm-Rocker
619	699480	Screw (Cylinder Head Plate)	914	699480	Screw (Rocker Cover) (Bottom)	1034	691343	Guide-Push Rod
632	692653	Spring/Link-Mechanical Governor	914A	692557	Screw (Rocker Cover) (Top)	1036		Label-Emissions (Available From An Authorized Briggs & Stratton Sevice Dealer)
633	◆693867	Seal-Choke/Throttle Shaft	914B	697551	Screw (Rocker Cover) (Center)	1054	280275	Tie-Cable
633A	◆691321	Seal-Choke/Throttle Shaft	930	696709	Guard-Rewind	1058	277104	Operator's Manual
635	692076	Boot-Spark Plug	957	792647	Cap-Fuel Tank (Fresh Start)	1070	699201	Screw (Flywheel Fan)
635A	692927	Boot-Sparkplug	958	698180	Valve-Fuel Shut Off	1095	791798	Gasket Set-Valve
663	699854	Screw (Control Panel)	972	694260	Tank-Fuel	1119	699772	Screw (Alternator)
676A	697816	Deflector-Muffler	975	493640	Bowl-Float	1196	696692	Screw (Snow Hood)
676D	794213	Deflector-Muffler	976	793382	Primer-Carburetor (Used After Code Date 06110500).	1196A	699854	Screw (Snow Hood)
677A	699776	Screw (Muffler Deflector)			----- <b>Note</b> -----	1210	498144	Pulley/Spring Assembly (Pulley)
689	691855	Spring-Friction			790221 Primer-Carburetor (Used Before Code Date 06110600).	1211	498144	Pulley/Spring Assembly (Spring)
692	690572	Spring-Detent (Choke)	977	792007	Gasket Set-Carburetor	1224	696824	Nut (Carburetor Primer)
718	690959	Pin-Locating	990	695756	Key-Set	1230	699847	Screw (Control Bracket)
731A	794589	Hood-Snow	993	★∅694088	Gasket-Cylinder Head Plate	1251	696699	Shield-Snow
731B	793643	Hood-Snow	996	794687	Shield-Carburetor	1251A	790555	Shield-Snow
741	695087	Gear-Timing	998	696683	Pipe-Oil (4" Long)	1251B	790556	Shield-Snow
742	692564	Retainer-E Ring			----- <b>Note</b> -----	1252	699234	Screw (Snow Shield)
746	790278	Gear-Idler			792928 Pipe-Oil (2 1/2" Long)	1252A	699632	Screw (Snow Shield)
830	694544	Stud (Rocker Arm)	1005	692592	Fan-Flywheel	1319	794467	Label-Warning
832D	793193	Guard-Muffler	1005A	794273	Fan-Flywheel	1330	272147	Repair Manual
836E	699854	Screw (Muffler Guard)	1011	794544	Tube-Vent			
842	691031	Seal-O Ring (Dipstick Tube)	1019	792211	Kit-Label			
847	693617	Dipstick/Tube Assembly						
		----- <b>Note</b> -----						
		790545 Dipstick/Tube Assembly Used on Type No(s). 0116, 0117, 0118, 0119, 0120, 0121, 0122, 0124, 0125, 0126, 0940.						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

3399-9

Assemblies include all parts shown in frames.

06/17/2008

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>