

SEARS

REPAIR PARTS LIST

Model No.(s)
110.65822400
(White Color Coordinated)

**To Call
Toll Free
For Parts:**
1-800-366-PART
(1-800-366-7278)

For Service:
1-800-4-MY-HOME
(1-800-469-4663)



ELECTRIC DRYER

The model number of your electric dryer is found on the serial plate located in the door well.

All repair parts listed are available for immediate purchase or special order when you visit your nearest Sears Service Center, or the Service Department at most Sears stores. To order parts by phone, call the toll free parts number listed to the left.


When requesting service or ordering parts, always provide the following information:

- ◆ Product Type
- ◆ Part Number
- ◆ Model Number
- ◆ Part Description

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A.

TOP AND CONSOLE PARTS

For Model: 110.65822400
(White Color Coordinated)

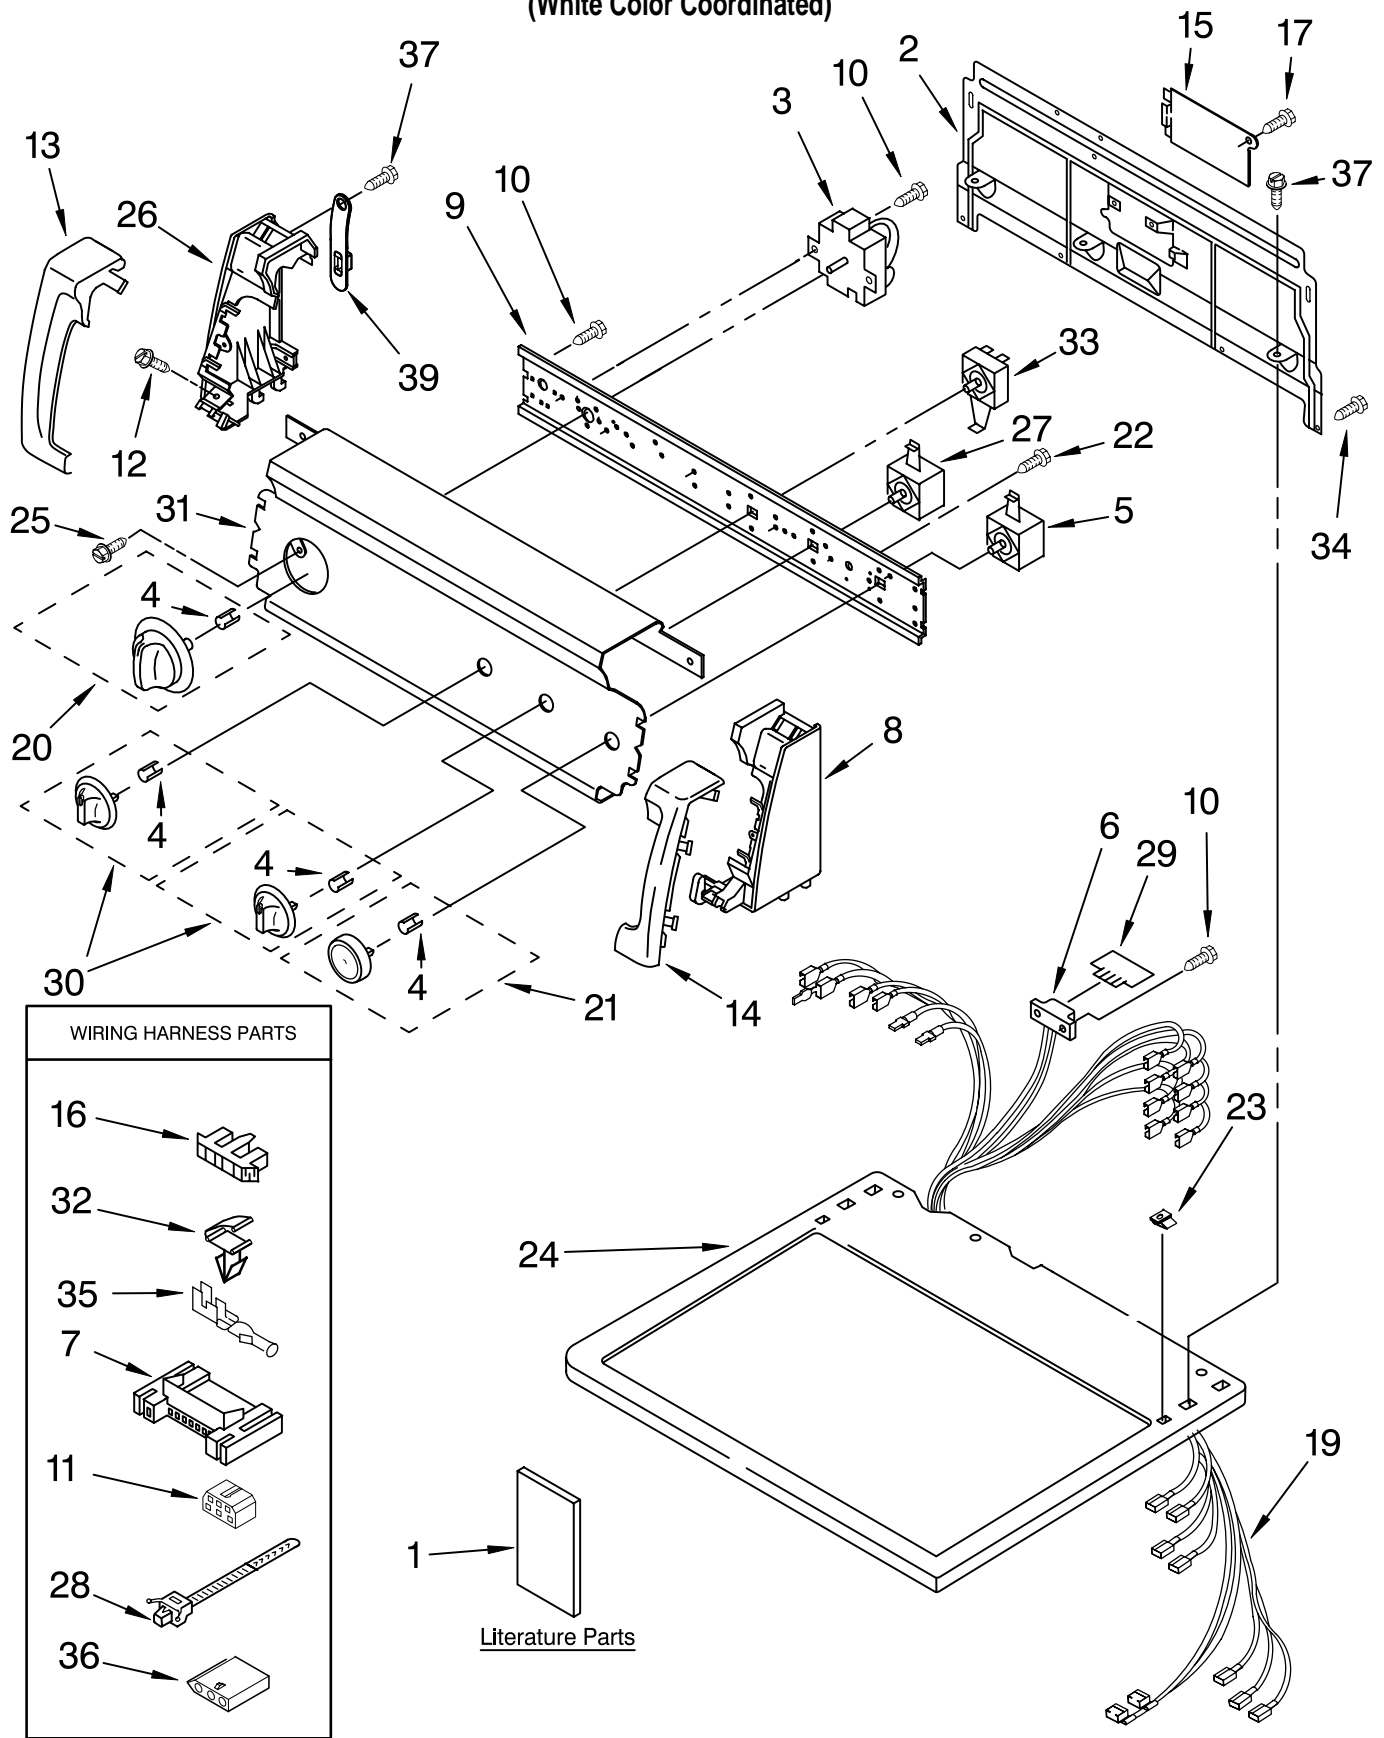


TOP AND CONSOLE PARTS

For Model: 110.65822400
(White Color Coordinated)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	4	688805	Clip	21	3402570	Knob Assembly
	3979710	Wiring Diagram	5	3977456	Switch, Push-To-Start	22	90767	Screw, Ground
	3979976	Installation Instructions Sheet,	6	3391885	Connector, Edge	23	357213	Nut, Push-In (2)
	8533629	Cycle Feature	7	3395683	Connector (Motor)	24	697202	Top
	3979964	Guide, Use & Care	8	3949274	Cap, End (R.H.)	25	3400859	Screw, 8-18 x 7/32
	3394996	Label, Operating Instructions	9	8271316	Bracket, Control	26	3949280	Cap, End (L.H.)
	8533635	List, Repair Parts	10	3390646	Screw, 8-18 x 5/16	27	3398093	Switch, Signal
			11	3347243	Connector, 6-Circuit	28	3391018	Tie, Cable (Push-Mount)
			12	388326	Screw, Console	29	8558178	Control, Electronic
			13	3951013	Trim, Endcap (LH) (Includes Illus. 14)	30	3402576	Knob, Control Assembly (2)
			14	3951009	Trim, Endcap (RH) (Includes Illus. 13)	31	8533621	Panel, Control
			15	8317342	Cover, Terminal Block	32	3394427	Clip, Harness
			16	3397269	Connector, Timer	33	3399640	Switch, Temperature
			17	3390814	Screw, 8-18 x 3/8	34	693995	Screw, 8-18 x 3/8
			19	8299952	Harness, Electric	35	94614	Terminal
			20	3402598	Knob, Timer Assembly	36	3936144	Connector
						37	3390647	Screw, 8-18 x 1/2
						39	8318255	Strap, Console (2)
Following May Be Purchased								
<u>DO-IT-YOURSELF REPAIR MANUALS</u>								
	787207	Manual, Do-It-Yourself Repair (Dryer)						
2	8317303	Panel, Rear Console						
3	3976576	Timer, 60 Hz.						

CABINET PARTS

For Model: 110.65822400
(White Color Coordinated)

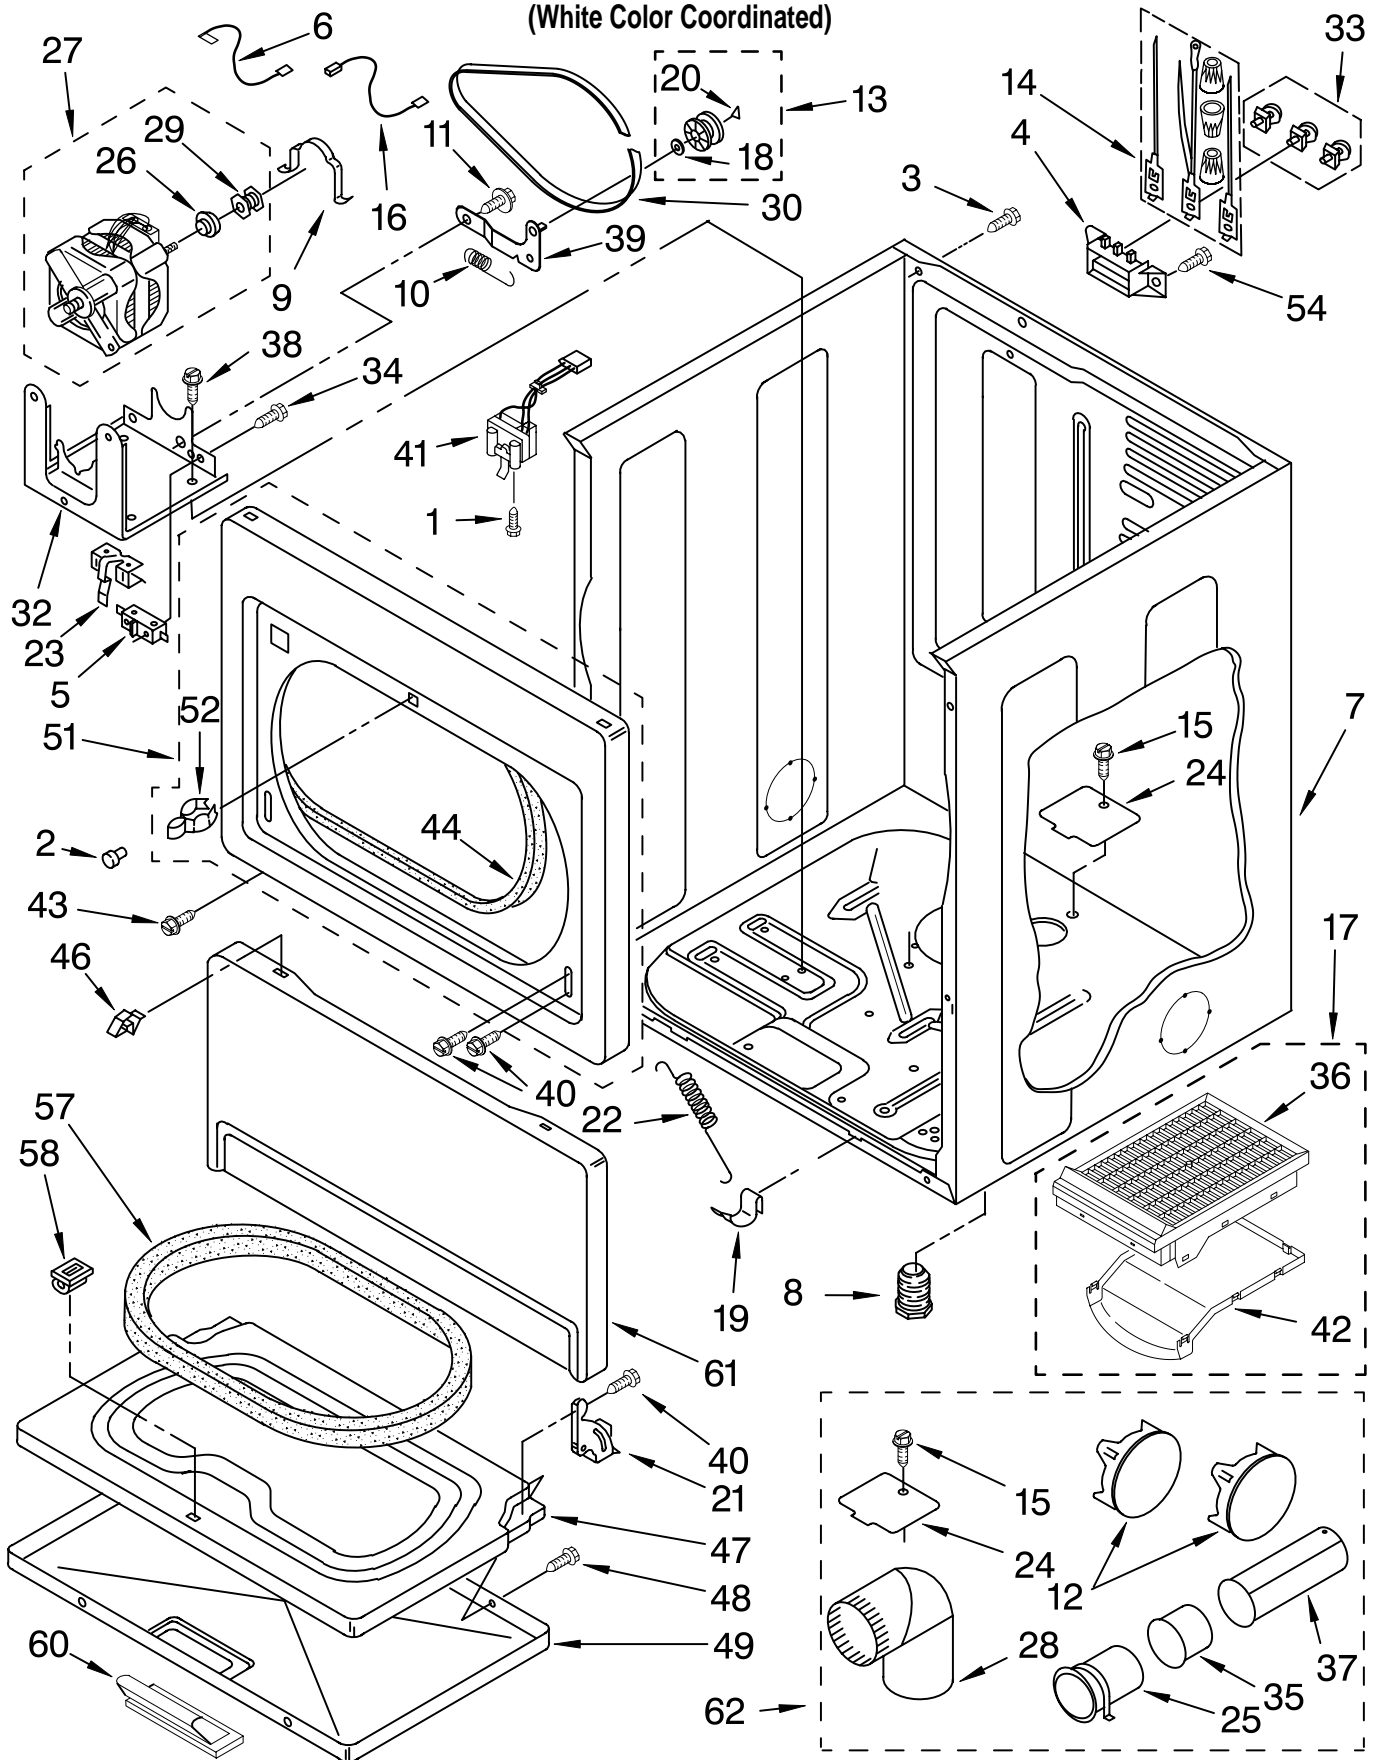


CABINET PARTS

For Model: 110.65822400
(White Color Coordinated)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	697773	Screw, 6-20 x 7/8	20	690997	Tri Ring	40	3357011	Screw, 10-16 x 1/2
2	693152	Bumper	21	3387560	Hinge, Door (R.H.)	41	3406107	Door Switch Assembly
3	697776	Screw, 10-32 x 5/8		3387559	Hinge, Door (L.H.)			
4	3397659	Block, Terminal	22	3387565	Spring, Door (2)	42	3406908	Dry Rack (Bottom)
5	3394881	Switch, Broken Belt	23	8066120	Lever, Snap Switch	43	8281212	Screw, 8-18 x 3/8
6	3398948	Wire, Jumper (Broken Belt Switch)	24	3394331	Cover-Plate	44	3387242	Seal, Front Panel
7	8310656	Cabinet	25	3395532	Exhaust Pipe & Bracket	46	3388229	Retainer
8	3392100	Foot, Dryer	26	3393657	Restrainer, Belt	47	8066045	Door, Rear
	279810	Foot - Optional (Extended Length Package Of 2) (Not Included)	27	8538263	Motor, Assembly 60 HZ.	48	694091	Screw, 8-18 x 3/8
9	660658	Clamp, Motor (2)	28	49026	4" - 90° Elbow	49	697221	Door, Front
10	3387374	Spring, Idler	29	3389729	Pulley 60 HZ.	51	697227	Upper Front Panel
11	3389420	Retainer, Idler	30	3387610	Belt, Drive	52	696144	Strike, Door
12	697750	Plug, Multivent	32	3387118	Bracket, Motor	54	3393008	Screw, 10-16 x 1/2
13	3388672	Pulley Assembly	33	279393	Terminal Block Screw Kit (For Terminal Block)	57	3390736	Seal, Door
14	279318	Terminal, Brass & Tinned (3) (Includes Illus. 33)	34	98129	Screw, 6-20 x 1 3/8	58	690081	Catch, Door Assembly
15	3390646	Screw, 8-18 x 5/16	35	3395534	Exhaust Pipe (Short)	60	348721	Handle, Door
16	3394081	Wire, Belt Switch	36	3406910	Dry Rack (Top)	61	697215	Toe Panel (Includes Illus. 2)
17	3406911	Dry Rack Assembly	37	3395535	Exhaust Pipe (Long)	Optional Parts Not Included		
18	233520	Washer, Thrust	38	3390663	Screw, 10-16 x 1/2	Dryer Exhaust Kit (For Side & Bottom Venting)		
19	297092	Clip (2)	39	3388674	Idler Bracket	62	279818	White

BULKHEAD PARTS

For Model: 110.65822400
(White Color Coordinated)

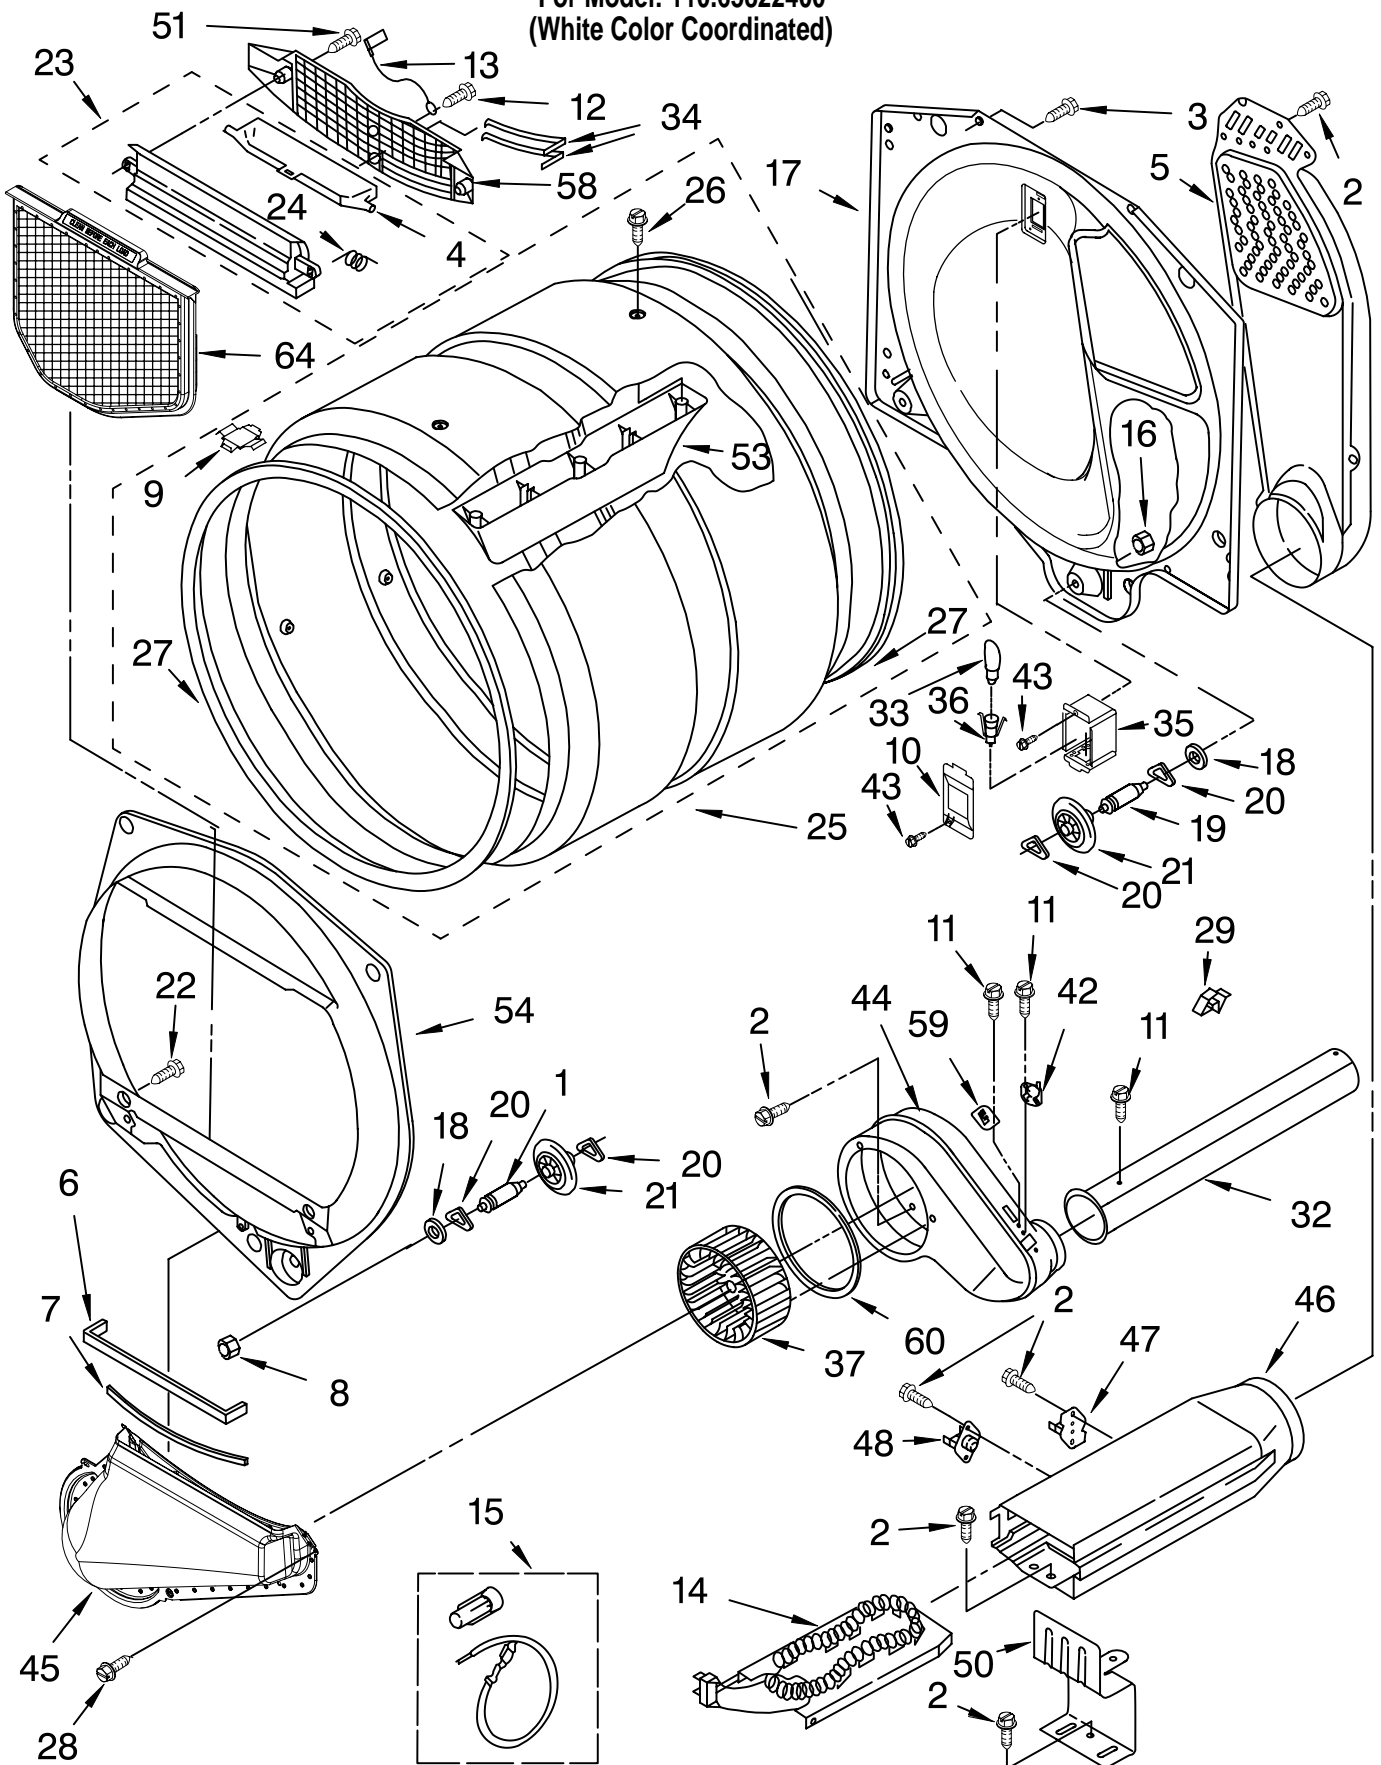

BULKHEAD PARTS

For Model: 110.65822400
(White Color Coordinated)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3399508	Shaft, R.H. Thread	16	3387709	Nut, 3/8-16 (L.H.)	36	3403634	Socket Assembly
2	90767	Screw, 8-18 x 3/8	17	8520836	Bulkhead, Rear	37	697772	Wheel, Blower
3	3390647	Screw, 8-18 x 1/2	18	3387459	Washer, Support	42	3387134	Thermostat, Internal-Bias
4	3394984	Door, Lint Screen	19	3399509	Shaft, L.H. Thread	43	487909	Screw, 8-15 x 1/2
5	697354	Air Duct Assembly	20	690997	Ring, Tri	44	8544362	Housing, Blower
6	697813	Seal, Outlet Housing	21	8536973	Roller, Support	45	8066168	Lint Duct Assembly
7	697814	Seal, Drum Front	22	695240	Screw, 8-18 x 1/2	46	3392537	Heater Box
8	3359452	Nut, 3/8 x 16(R.H.)	23	3394985	Outlet Housing Assembly	47	3977394	Thermal Cut-Off (Includes Illus. 48)
9	8066086	Drum Hole Plug	24	3394986	Spring, Lint Screen Door	48	3390291	Thermostat 250°F (122°C)
10	3402841	Lens, Drum Light	25	8318215	Complete Drum Assembly	50	8066099	Bracket, Heater Box
11	3390646	Screw, 8-18 x 5/16	26	97787	Screw, 11-16 x 3/4	51	3357011	Screw, 10-16 x 1/2
12	3387230	Screw, 10-16 x 13/16	27	697694	Seal, Drum	53	697693	Baffle, Drum
13	3392258	Wire	28	359625	Screw, 8-18 x 1/2	54	697557	Bulkhead, Front
14	3387747	Heater Element	29	3388229	Clip, Exhaust	58	8299979	Grill, Outlet
15	279457	Terminal Wire Kit (For Heater Element Wiring Harness Repair)	32	8318486	Exhaust Pipe	59	3392519	Thermal Fuse
			33	3406124	Bulb, Light	60	697770	Seal, Cover Plate
			34	3387223	Electrode, Sensor	64	8066170	Lint, Screen
			35	3977373	Bracket, Drum Light			

OPTIONAL PARTS (NOT INCLUDED)

For Model: 110.65822400
(White Color Coordinated)

Illus.	Part	
No.	No.	DESCRIPTION

ACCESSORY PARTS

80047	Kit, Dryer Repair
8522199	Kit, Dryer Vent Testing

PAINT, TOUCH-UP (1/2oz.)

72017	White
-------	-------

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350938	Primer, Gray

PAINT, BULK (1 qt.)

799344	White (Uncut)
--------	---------------

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>