
# 3192 H4TU-C



# 3192 H4TU-C



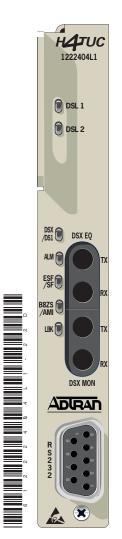

#### **LED STATUS**

DSL1/DSL2	Green	Loop 1/ Loop 2 synchronization achieved and signal is present. No errors currently detected, and SNR margin ≥ 3 dB.
	Red	Loop 1/ Loop 2 synchronization not achieved, in sync with errors, or SNR margin < 3 dB.
DSX	<ul><li>Green</li></ul>	DSX-1 signal present and no errors currently detected.
	• Red	In framed mode, denotes loss of framing or loss of sync at the DSX-1 input. In unframed mode, denotes loss of signal DSX-1 input.
ALM	Off	No T1 alarms are active.
	<ul><li>Red</li></ul>	Loss of DSX-1 signal from the network.
	<ul><li>Yellow</li></ul>	Loss of DS1 signal from the CPE.
ESF/SF	Off	Unit has detected Unframed data.
	<ul><li>Yellow</li></ul>	Unit has detected ESF framing data.
	<ul><li>Green</li></ul>	Unit has detected SF framing data.
B8ZS/AMI	<ul><li>Yellow</li></ul>	Unit has detected B8ZS line coding data.
	<ul><li>Green</li></ul>	Unit has detected AMI line coding data.
LBK	Off	No local loopbacks active.
	<ul><li>Yellow</li></ul>	Local loopback active.

#### **DSX EQ SPLITTING JACKS**

**TX** DSX-1 transmit toward the local loop (intrusive)

**RX** DSX-1 receive from the local loop (intrusive)

# **DSX MONITOR JACKS**

**TX** DSX-1 transmit toward the local loop (nonintrusive)

**RX** DSX-1 receive from the local loop (nonintrusive)

## COMPLIANCE

WARNING: Up to -200 VDC might be present on telecommunications wiring. Ensure chassis ground is properly connected. The DSX-1 interface is intended for connection to intra-building wiring only.

This product is intended for installation in restricted access locations only and in equipment with a Type "B" or "E" enclosure.

Code	Input	Output
Power Code (PC)	F	С
Telecommunication Code (TC)	-	Χ
Installation Code (IC)	Α	_

This product provides span powering voltage (negative only with respect to ground,  $-190\,\rm VDC$  nominal, GFI protection <5 mA) and meets all requirements of Bellcore GR-1089-CORE (Class A2), and ANSI T1.418-2002. This product is NRTL Listed to the applicable UL standards.


## **POWERING MODE**

The H4TU-C provides -190 VDC span powering voltage and will provide powering to the H4Rs and the H4TU-R. The -190 VDC span powering voltage is provided on Loop 2.

# **DEFAULT PROVISIONING VALUES**

<b>Provisioning Option</b>	ons Option Se	ttings Default Setting
1. DSX-1 Line Build	Out 0-133 Feet	0-133 Feet
	133-266 Fee	t
	266- 399 Fe	et
	399-533 Fee	t
	533-655 Fee	et .
2. DSX-1/DS1 Line	Code AMI, B8ZS	B8ZS
3. DSX-1/DS1 Fram	ing SF, ESF, Un	framed, Auto ESF
4. Forced Frame Co	onversion Enabled, Di	sabled Disabled
5. Smartjack Looph	ack Enabled, Di	sabled Enabled
6. Loopback Timeo	ut None, 120 I	Minutes 120 Minutes
7. Latching Loopba	ck Mode T1 (Disable	d), FT1 (Enabled) T1 (Disabled)
8. DS1 TX Level	0 dB, −7.5 d	B, –15 dB –7.5 dB
9. Span Power	Enabled, Di	sabled Enabled
10. Customer Loss II	ndicator AIS, AIS/CI	, Loopback AIS/CI
11. PRM Setting	None, SPR	M, NPRM, Auto Auto
12. Loop Atten Alarr	n Threshold 0 (Disabled	) 34 dB
	1-99 dB	
13. SNR Margin Ala	rm Threshold 0 (Disabled	) 4 dB
	1-15 dB	
14. Remote Provisio	ning Enabled, Di	sabled Enabled

# H4TU-C EDGE CONNECTOR WIRING

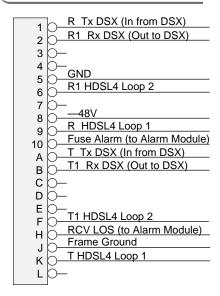



# HDSL4 TROUBLESHOOTING GUIDE

PRICING AND AVAILABILITY 800.827.0807 TECHNICAL SUPPORT 800.726.8663 RETURN FOR REPAIR 256.963.8722 www.adtran.com 61222404L1-22D

ADTRAN HDSL4 equipment is designed with troubleshooting-at-a-glance features. The following information provides suggestions for troubleshooting as a result of LED indications which are indicative of loop trouble.

NOTE: Pressing "ESC" while on any screen will go back to the previous screen.

#### **INDICATIONS AND POSSIBLE CAUSES**

#### **DSL LED Red**

Connect a terminal or PC to the RS-232 (DB-9) craft interface on the front panel. The terminal must be VT100 or compatible and set for 1.2 to 19.2 kbps, 8 data bits, no parity, 1 stop bit, no flow control. Select "3" from the ADTRAN HDSL4 Main Menu screen and "1" from the Span Status Screen. Verify the following conditions on the HDSL4 and T1 Detailed Status Screen:

- Margin ≥ 3 dB
- Attenuation ≤ 35 dB (1st segment) Attenuation ≤ 31 dB (2nd segment)
- No ES, SES, or UAS (Performance History Screen, Main Menu Selection 5)

If the above conditions do exist, the circuit should provide quality service; however, if any of the above conditions do not exist, a cable problem or excessive loss situation is probable, and more detailed cable testing should be done to verify all HDSL4 loop specifications are met. These conditions may also reflect intermittent cable faults or excessive noise impairments. If intermittent faults or noise impairments are suspected, review the Performance History Screen.

#### HDSL4 DEPLOYMENT GUIDELINES

The guidelines provided below apply to the segments of an HDSL4 circuit, as follows:

1st segment = between the H4TU-C and H4R

2nd segment = between two H4Rs or single H4R and H4TU-R

3rd segment = between the second H4R and the H4TU-R

Circuit ID: Press ESC to return to previous menu Detailed Status Screen LOOP 2 MARGIN ATTEN ESTIMATED
(CUR/MIN/MAX) (CUR/MAX) INS. LOSS ESTIMATED Interface (CUR/MIN/MAX) (CUR/MAX) INS, LOSS 00 00 00 00 17/00/17 00/00 00/00 00 17/00/17 00/00 17/00/17 00/00 1 Reset Min/Max View Performance History

NOTE: The insertion loss reading shown on the Detailed Status Screen is an approximation that is valid for some loops. Exercise caution when using this value.

These deployment guidelines provide the basics for HDSL4 circuit provisioning. If these parameters are met, then the circuit will provide quality service. If not, a cable problem or excessive loss situation is probable. In this case, a more detailed cable analysis is required to ensure that all HDSL4 loop specifications are met. These conditions may also be the result of intermittent cable faults or intermittent noise impairments. If intermittent problems are suspected, utilize the Performance History screen to assist in troubleshooting.

- 1. All loops are nonloaded only
- 2. Any single bridged tap is limited to 2 kft.
- 3. Total bridged tap length is limited to 2.5 kft.
- Bridge tap within 1000 feet of units may affect performance of the circuit
- 5. Margin ≥ 6 dB (Detailed Status Screen)
- 6. No ES, SES, or UAS (Performance History Screen)
- 7. Foreign Voltage DC (t-r, t-g, r-g) < 3 VDC
- 8. Insulation Resistance (t-r, r-g, t-g) > 3.5 M $\Omega$
- 9. Impulse Noise  $\leq$  -40 dBmF (measured with an F filter)
- 10. Wideband Noise ≤ -54 dBmF
- 11. Longitudinal Noise (Power Influence) < 80 dBrnC OK

80–90 dBrnc Marginal > 90 dBrnc Unacceptable

Range	Limits: 26 Gauge / 70°F / PIC				
Recommended Maximum (DSL Assistant Green Zone)					
1st segment	10.8 kft.				
2nd/3rd segment	10.55 kft.				
Range Limits: 24 Gauge / 70°F / PIC					
Recommended Maximum					
	(DSL Assistant Green Zone)				
1st segment	15.25 kft.				
2nd/3rd segment	15.05 kft.				

Attenuation Limits				
Recommended Maximum				
(DSL Assistant Green Zone)				
	Upstream	Downstream		
1st segment	31 dB	33 dB		
2nd/3rd seament	30 dB	30 dB		

NOTE: In three segment circuits (two H4Rs), individual segment resistance values must be verified. Refer to the HDSLA Deployment Guidelines section of the Installation and Maintenance Practice (PIN 61222404L1-5x) for those guidelines.

#### **LOOPBACK AND CONTROL CODES**

Pattern	Description Requi	res Arming?
1in3	Loop down all units and disarm.	No
2in5	Arming Pattern, H4TU-R will loop up if Smartjack LB is enabled.	No
3in5	Disarm and loop down all units. Restores LB TMO after D5D6.	No
1in6	Network Arming Pattern. If Smartjack LB is enabled, HTU-R will loop toward network.	No
2in6	H4R LB to Network.	No
3in6	H4R LB to Network.	No
4in6	H4R LB to Customer.	No
5in6	H4R LB to Customer.	No
3in7	H4TU-R LB to Network.	No
4in7	H4TU-C LB to Network.	No
5in7	H4TU-R LB to Customer.	No
6in7	H4TU-C LB to Customer.	No
3F1E	H4TU-C LB to Customer.	No
3F02	H4TU-R LB to Customer.	No
3F04	H4R LB to Customer.	No
3F06	H4R LB to Customer.	No
6767	Disable span powering while present.	Yes
9393	Loop down H4TU-C, Repeaters - all loopbacks. Loop down H4TU-R - Cust LB always.	
	Will only loop down H4TU-R Network LB if NIU is disabled. Does not disarm units if they	
	are armed.	No
C741	H4R #1 loop up pattern. 10 bit error injection.	Yes
C742	H4TU-R loop up pattern. 20 bit error injection.	Yes
C754	H4R #2 loop up pattern. 200 bit error injection.	Yes
D3D3	H4TU-C loop up pattern. 231 bit error injection.	Yes
D5D5	Query Loopback Pattern (error injection)	
	H4TU-C: 231 Errors, H4R #1: 10 Errors, H4R #2: 200 Errors, H4TU-R: 20 Errors	No
D5D6	Loopback Timeout Override: Disables LB timeout. Restores original LB timeout when unit	
	is disarmed.	Yes
FF48	FDL Arming Pattern (ESF only). Arms all units, H4TU-R will LB to Network if NIU Enabled	
	(if pattern sources at network).	No
FF24	FDL Disarm Pattern (ESF only). Loop down and disarm all units	No
FF1E	H4TU-C LB to Network. Will not loop up H4TU-C if H4TU-C already in LB to Customer.	No
FF02	H4TU-R LB to Network. Will not loop up H4TU-R if any unit already in LB to Customer.	No
FF04	H4R LB to Network.	No
FF06	H4R LB to Network.	No

## WARRANTY

ADTRAN will replace or repair this product within the warranty period if it does not meet its published specifications or fails while in service. Warranty information can be found at www.adtran.com/warranty. U.S. and Canada customer Faxback: 877-457-5007, Document 414.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com