# 

# JB-DVF-HID-I

Vandal Resistant Color Video Door Station With Built in HID  $iClass^{TM}$  Smart Card Reader

## - INSTRUCTIONS-

The JB-DVF-HID-I is a JB-series color video door station and an HID *iClass*<sup>™</sup> Card Reader, built onto the same stainless steel faceplate. The card reader provides electronic access to a building through a separate Access Control System, which is not supplied by Aiphone.

### **INSTALLATION:**

- 1. For flush mounting, cut hole in wall and use supplied back box. Box dimensions are  $4-\frac{1}{2}$ "W x  $10-\frac{3}{8}$ H x  $1-\frac{3}{4}$ "D.
- 2. For surface mounting, use the SBX-DVF-P surface mount box. This box can mount to a standard 1-gang box or to any flat surface.



JB-DVF-HID-I

JB-DVF-HID-I (back view)




## Connecting the Reader to the Host:

Connect the reader to the host according to the wiring table below and the host installation guide.

Wiegand	Wire Color	
+ DC (10-16V)	Red	
Ground	Black	20" pigtail cable
Data0	Green	
Data1	White	•
Shield Ground	Drain	
Green LED	Orange	
Red LED	Brown	
Beeper	Yellow	
Hold	Blue	
	Violet	



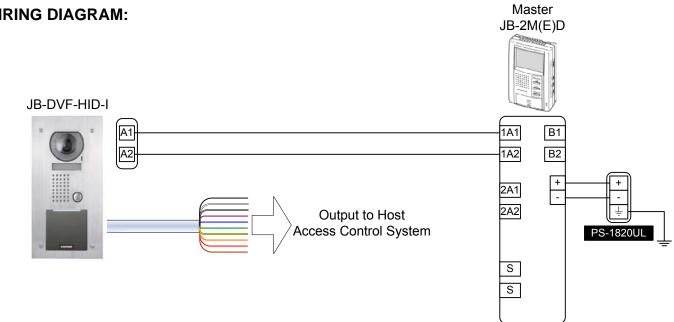

### **TESTING AND OPERATION:**

- When power is applied to the iClass<sup>TM</sup> reader, the LED will turn RED while the beeper beeps simultaneously 3 times. (The last tone is a higher frequency). The LED will then flash once after the last tone. This indicates that the microcontroller is operating properly.
- Present an iClass ID card to the reader (Hold the card directly in front of reader). The LED will momentarily turn green while the beeper beeps once, indicating that the card was read successfully.

#### SPECIFICATIONS:

#### CARD READER:

Power Source:	10 ~ 16 VDC / 65 ~ 225mA		
Current Requirements:	80mA (Avg); 300mA (peak) at 12V		
Transmit Frequency:	13.56 MHz		
Terminations:	Color-coded pre-wired pigtails		
Wiring Distance:	500'		
Operating Temperature: -10° ~ 60° C / 14° ~ 140° F			
Operating Humidity:	5% to 95% relative humidity		
	non-condensing		

#### CAMERA:

Camera unit: Scanning line: Min. illumination: Terminations: Wiring Distance:

Dimensions (camera): With SBX-DVF-P:

CCD Camera 525 lines 1 Lux or less at 1' Screw terminals 330' w/871802 wire 980' w/JBW-BA & 851602 wire 5-¾" W x 11-%" H x 1-5/16" D 5-15/16" W x 11-<sup>3</sup>/<sub>4</sub>" H x 2-13/16" D (Top) 1-15/16" D (Bottom)

#### FCC WARNING:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference that may cause undesired operation. For proper regulatory compliance, the drain wire should be disconnected at the . power supply end of the cable. Changes or modifications not expressly approved by the party responsible for . compliance could void the user's authority to operate the equipment.

The Reader is intended to be powered from a limited power source output of a previously certified power supply.

Aiphone Communication Systems 1700 130th Ave. N.E. Bellevue, WA 98005 (425) 455-0510 FAX (425) 455-0071

TOLL FREE TECHNICAL SUPPORT: (800) 692-0200 TOLL FREE FAX LINE: (800) 832-3765 E-MAIL: tech-serv@aiphone.com

Page 2 JB-DVF-HID-I Instr. 0706JDJS

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com