



Illustrated Parts List

Model Series

15C100

TYPE NUMBERS
0111 through 0939.

TABLE OF CONTENTS

Blower Housing/Shrouds	6
Camshaft	2
Carburetor	4
Controls	5
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	5
Exhaust System	6
Flywheel	6
Fuel Supply	4
Governor Spring	5
Ignition	5
Kits/Gaskets - Carburetor	4
Kits/Gaskets - Engine	2
Kits/Gaskets - Valves	3
Lubrication	2
Piston Group	2
Rewind Starter	5



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.












1319 WARNING LABEL





REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL











1330 REPAIR MANUAL

1019 LABEL KIT

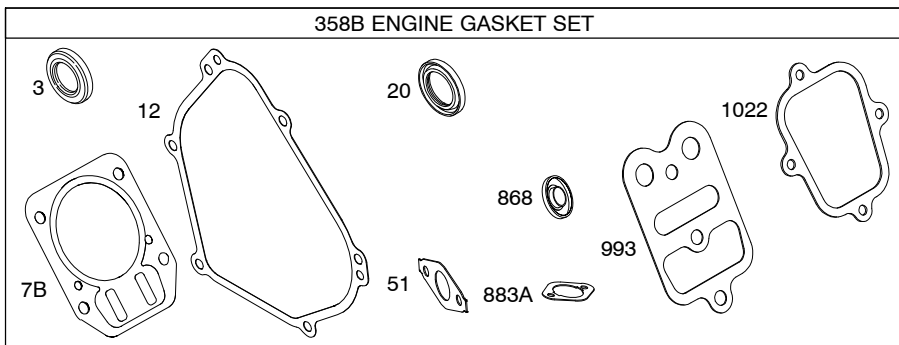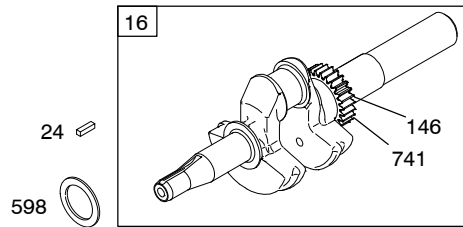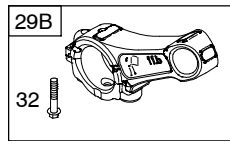
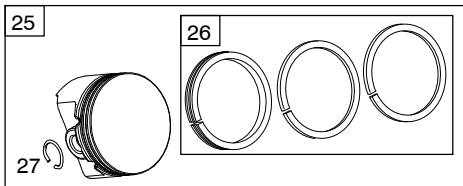
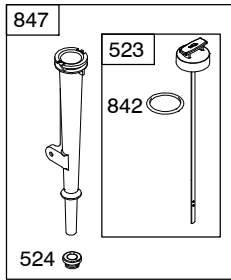

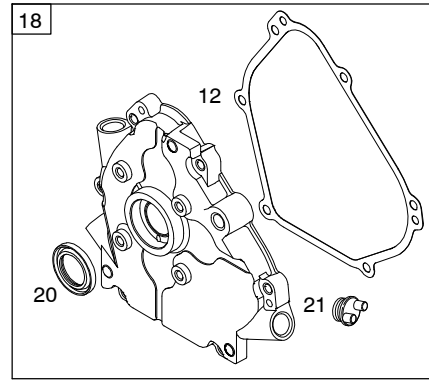
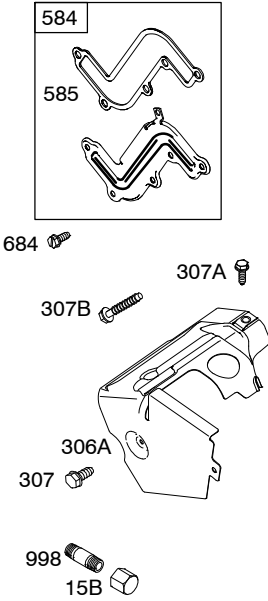
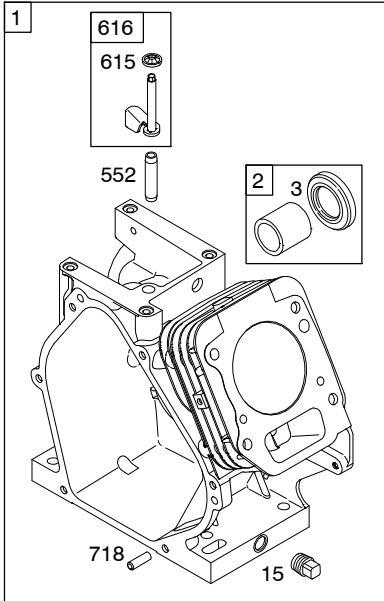


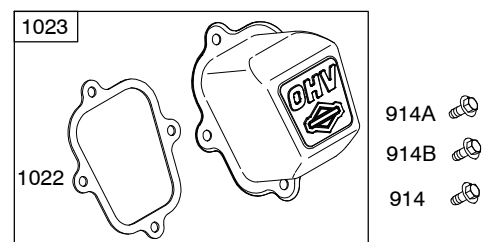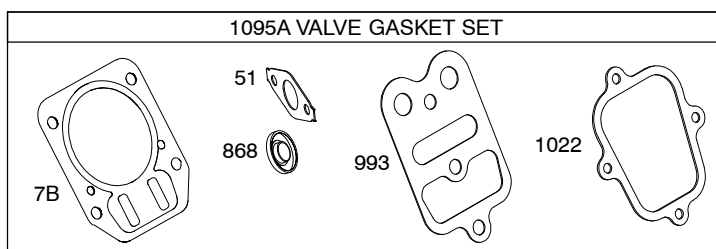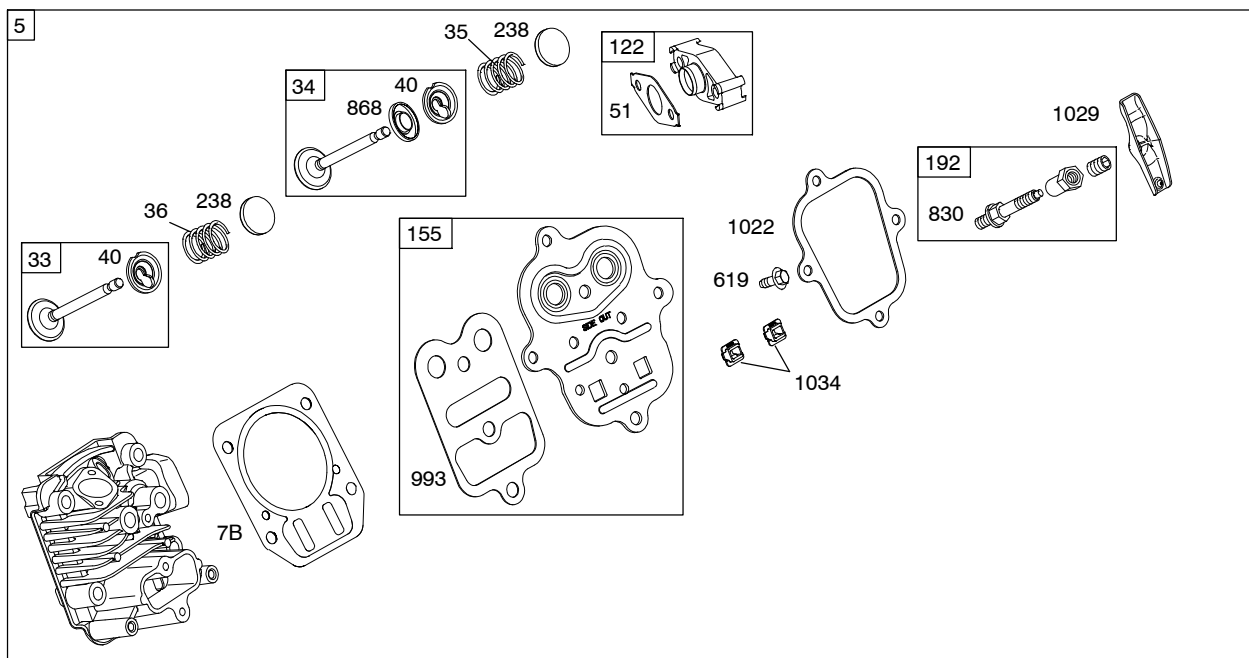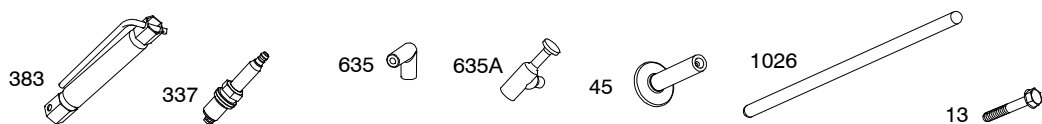


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

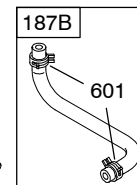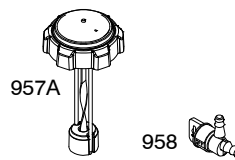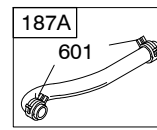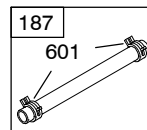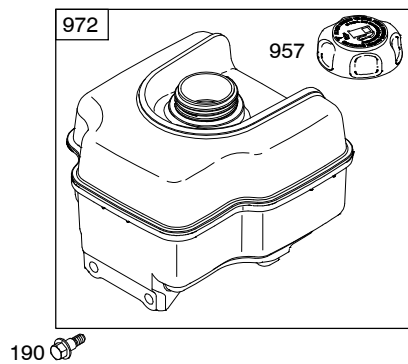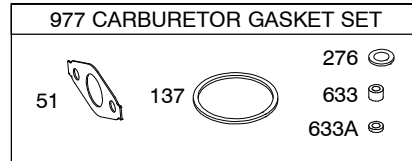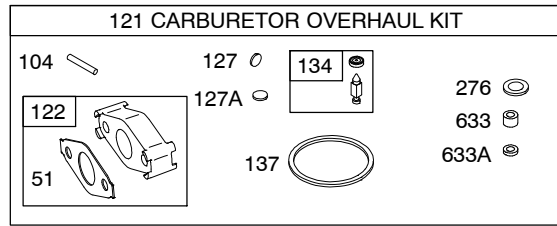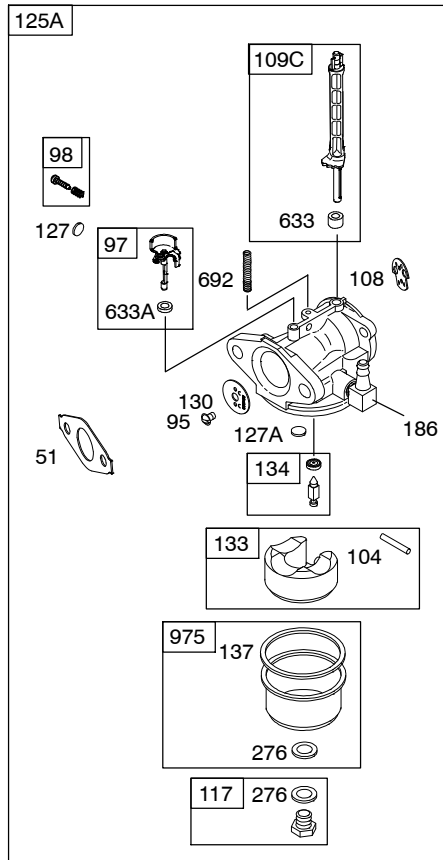

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3946-4 Assemblies include all parts shown in frames. 06/24/2008

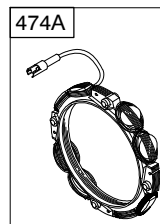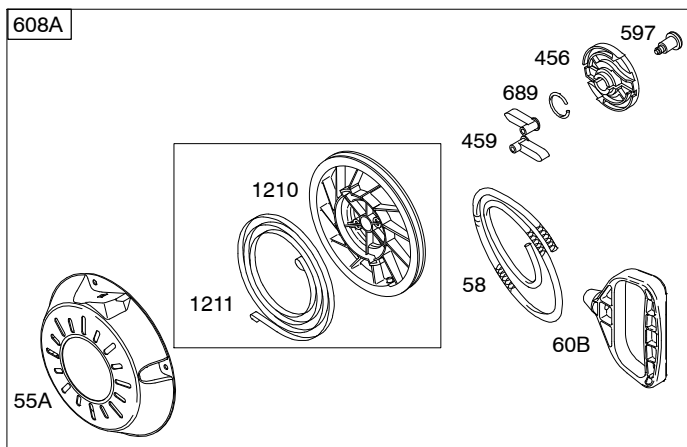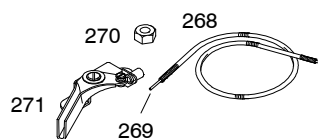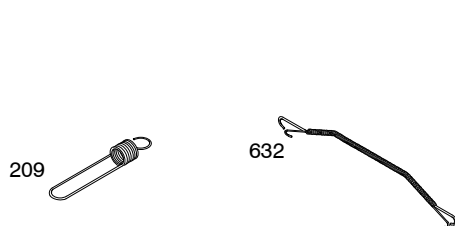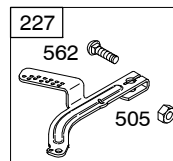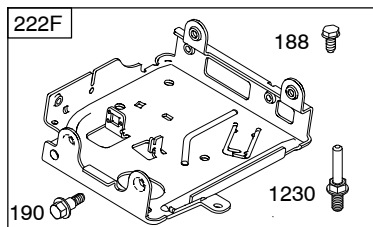

65A

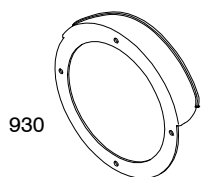

1119

1054

892
990



347

356C

356J


356L

1403

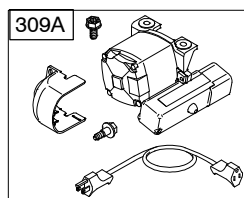

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
 3946-5 Assemblies include all parts shown in frames. 06/24/2008

15C100

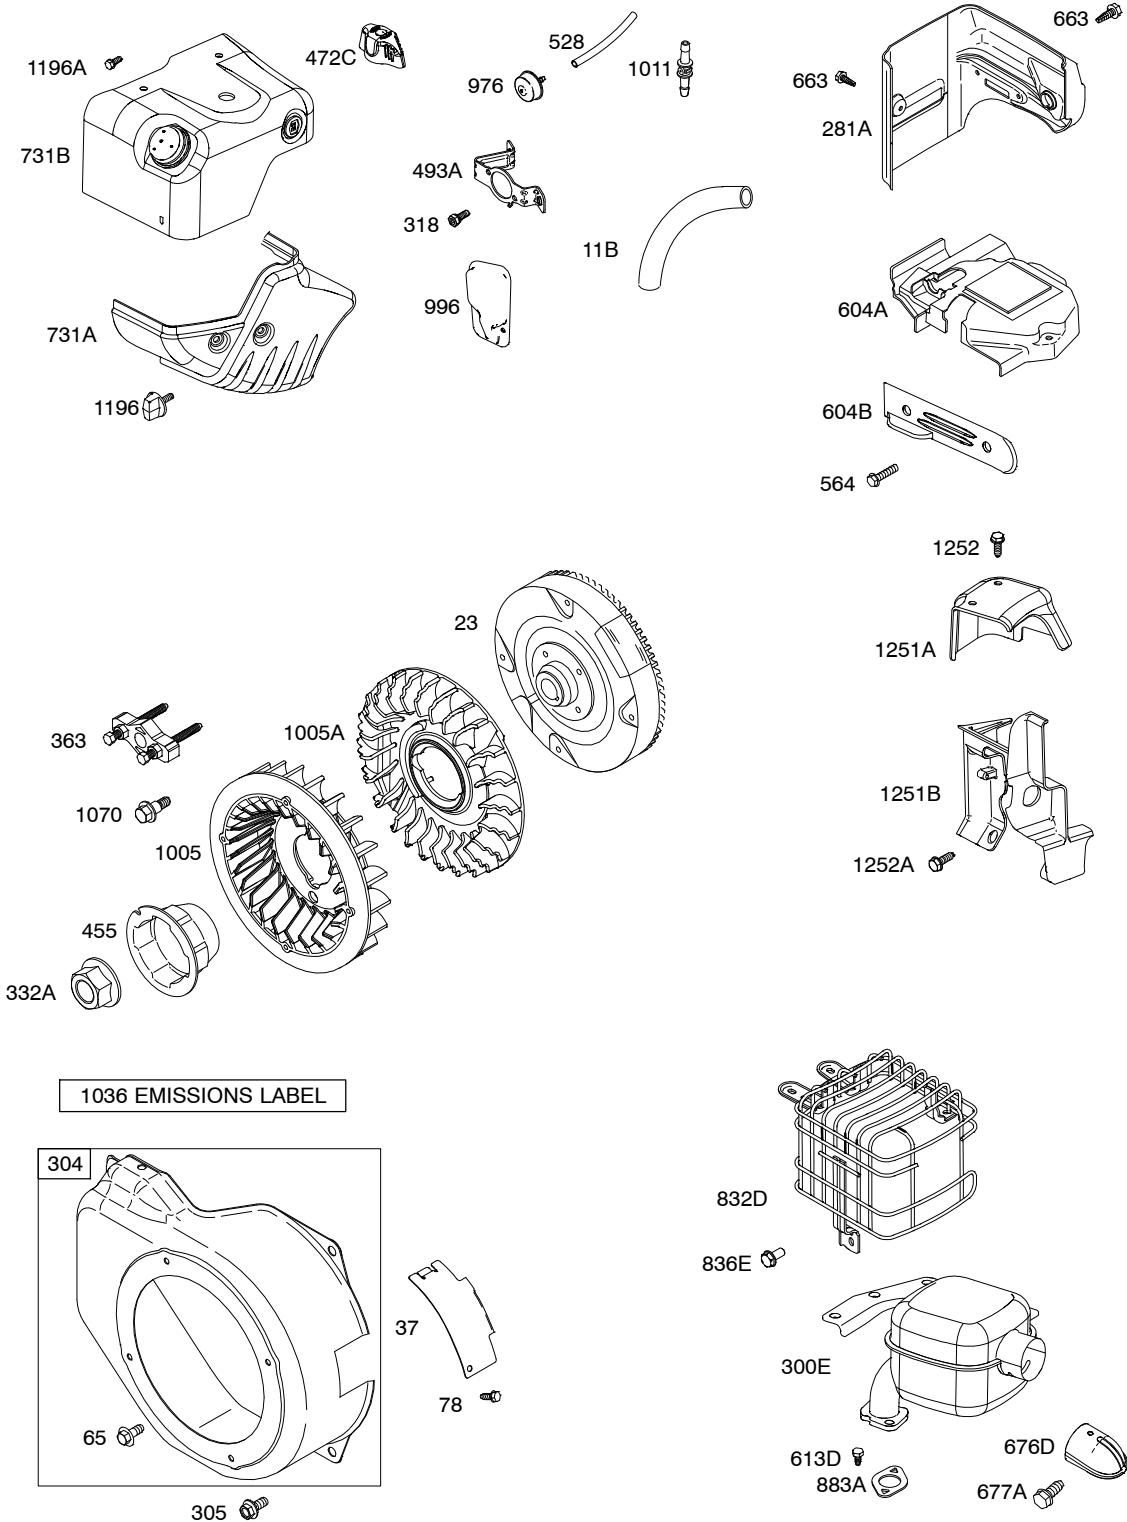

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3946-6 Assemblies include all parts shown in frames. **06/24/2008**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	791762	Cylinder Assembly	26	791787	Ring Set (Standard)	122	●791717	Spacer-Carburetor
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----	125A	794588	Carburetor
3	★299819S	Seal-Oil (Magneto Side)			791792 Ring Set (.020" Oversize)	127	●694468	Plug-Welch
5	791720	Head-Cylinder	27	690975	Lock-Piston Pin	127A	●691739	Plug-Welch
7B	★Ø791716	Gasket-Cylinder Head	28	690229	Pin-Piston	130	691181	Valve-Throttle
11B	695745	Tube-Breather	29B	791783	Rod-Connecting	133	398187	Float-Carburetor
12	★699485	Gasket-Crankcase	32	791784	Screw (Connecting Rod)	134	●398188	Kit-Needle/Seat
13	699482	Screw (Cylinder Head)	33	499642	Valve-Exhaust	137	●693981	Gasket-Float Bowl
15	691686	Plug-Oil Drain	34	499641	Valve-Intake	146	690979	Key-Timing
15B	695757	Plug-Oil Drain	35	691304	Spring-Valve (Intake)	155	698214	Plate-Cylinder Head
16	699445	Crankshaft	36	691304	Spring-Valve (Exhaust)	186	692317	Connector-Hose
		----- Note -----	37	699661	Guard-Flywheel	187	791766	Line-Fuel (Cut to Required Length)
		791721 Crankshaft Used on Type No(s). 0939.	40	692194	Retainer-Valve	187A	791867	Line-Fuel (Molded)
		795116 Crankshaft Used on Type No(s). 0612, 0613, 0614, 0661, 0662.	45	690977	Tappet-Valve	187B	791874	Line-Fuel (Molded)
		699445 Crankshaft Used on Type No(s). 0117, 0118.	46	693404	Camshaft	188	699479	Screw (Control Bracket)
18	699804	Cover-Crankcase	51	◆★●Ø791718	Gasket-Intake	190	699220	Screw (Fuel Tank)
		----- Note -----	55A	696710	Housing-Rewind Starter	192	694543	Ball-Rocker Arm
		699696 Cover- Crankcase Used on Type No(s). 0612, 0613, 0614, 0661, 0662.	58	693389	Rope-Starter (Cut To Required Length)	209	692571	Spring-Governor
20	★692550	Seal-Oil (PTO Side)	60B	699334	Grip-Starter Rope	219	693578	Gear-Governor
21	281658S	Cap-Oil Fill	65	699228	Screw (Rewind Starter)	220	691724	Washer (Governor Gear)
22	699478	Screw (Crankcase Cover/ Sump)	65A	699851	Screw (Rewind Starter)	222F	793100	Bracket-Control
23	699516	Flywheel	78	699205	Screw (Flywheel Guard)	227	692573	Lever-Governor Control
24	222698S	Key-Flywheel	85	691636	Screw (Throttle Valve)	238	691300	Cap-Valve
25	791786	Piston Assembly (Standard)	95	691636	Screw (Throttle Valve)	268	691025	Control Wire Casing (Cut to Required Length)
		----- Note -----	97	690024	Shaft-Throttle	269	691026	Control Wire (Cut to Required Length)
		791791 Piston Assembly (.020" Oversize)	98	398185	Kit-Idle Speed	270	691027	Nut (Control Wire Casing)
			104	●691242	Pin-Float Hinge	271	691028	Lever-Control
			108	695807	Valve-Choke	276	◆●271716	Washer-Sealing
			109C	791954	Shaft-Choke	281A	793122	Panel-Control
			117	694176	Jet-Main (Standard)	287	699629	Screw (Dipstick Tube)
			118	695042	Jet-Main (High Altitude)	300E	791940	Muffler
			121	792006	Kit-Carburetor Overhaul			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3946-7

Assemblies include all parts shown in frames.

06/24/2008

15C100

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION			
304	699598	Housing-Blower	456	692299	Plate-Pawl Friction	632	692653	Spring/Link-Mechanical Governor			
305	699480	Screw (Blower Housing)	459	281505S	Pawl-Ratchet	633	◆693867	Seal-Choke/Throttle Shaft			
306A	695710	Shield-Cylinder	472C	791948	Knob-Choke Shaft	633A	◆691321	Seal-Choke/Throttle Shaft			
307	699483	Screw (Cylinder Shield)	474A	793640	Alternator						
307A	699234	Screw (Cylinder Shield)			----- Note -----						
307B	790557	Screw (Cylinder Shield)			791743 Alternator	635	692076	Boot-Spark Plug			
309A	696818	Motor-Starter Used on Type No(s). 0112, 0114, 0116, 0117, 0612, 0613, 0614, 0661, 0662, 0939.			Used on Type No(s). 0117, 0118, 0612.	635A	692927	Boot-Sparkplug			
		----- Note -----			793118 Alternator	663	699854	Screw (Control Panel)			
		699786 Motor-Starter	493A	695744	Bracket-Mounting	676D	794213	Deflector-Muffler			
		Used on Type No(s). 0111, 0113, 0118.	505	691251	Nut (Governor Control Lever)	677A	699776	Screw (Muffler Deflector)			
318	690370	Screw (Mounting Bracket)			523	790546	Dipstick	684	791761	Screw (Breather Passage Cover)	
332A	792723	Nut (Flywheel)			524	281370S	Seal-Dipstick Tube	689	691855	Spring-Friction	
333	695711	Armature-Magneto			528	793006	Hose-Primer	692	690572	Spring-Detent	
334	699477	Screw (Magneto Armature)			552	692346	Bushing-Governor Crank	718	690959	Pin-Locating	
337	491055S	Plug-Spark (Resistor)			562	691119	Bolt (Governor Control Lever)	731A	794589	Hood-Snow	
		----- Note -----			564	699854	Screw (Control Cover)	731B	793643	Hood-Snow	
		691043 Plug-Spark (EMS)	578B	791956	Wire Assembly	741	695087	Gear-Timing	742	692564	Retainer-E Ring
347	698338	Switch-Rocker	584	791759	Cover-Breather Passage	746	790278	Gear-Idler	830	694544	Stud (Rocker Arm)
		----- Note -----			585	791760	Gasket-Breather Passage	832D	793193	Guard-Muffler	
		691995 Switch-Rocker	597	691696	Screw (Pawl Friction Plate)	836E	699854	Screw (Muffler Guard)	842	691031	Seal-O Ring (Dipstick Tube)
		Used on Type No(s). 0612.			598	220624	Shim-End Play	847	790545	Dipstick/Tube Assembly	
356C	695630	Wire-Stop	601	791850	Clamp-Hose	851	493880S	Terminal-Spark Plug	868	★∅692044	Seal-Valve
356J	692603	Wire-Stop	604A	793134	Cover-Control	883A	★691893	Gasket-Exhaust	892	791944	Switch-Key
356L	790552	Wire-Stop	604B	790473	Cover-Control	914	699480	Screw (Rocker Cover) (Bottom)	914A	692557	Screw (Rocker Cover) (Top)
358B	791797	Set-Engine Gasket	608A	699335	Starter-Rewind				914B	697551	Screw (Rocker Cover) (Center)
363	19203	Puller-Flywheel	613D	699209	Screw (Muffler)						
365	699484	Screw (Carburetor)			615	692576	Retainer-Governor Shaft				
383	19374S	Wrench-Spark Plug			616	692547	Crank-Governor				
455	692591	Cup-Flywheel			619	699480	Screw (Cylinder Head Plate)				

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3946-8

Assemblies include all parts shown in frames.

06/24/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
930	696709	Guard-Rewind	1005	692592	Fan-Flywheel	1196	696692	Screw (Snow Hood)
957	792647	Cap-Fuel Tank (Plastic) (Fresh Start)	1005A	794273	Fan-Flywheel	1196A	699854	Screw (Snow Hood)
957A	698109	Cap-Fuel Tank	1011	794544	Tube-Vent	1210	498144	Pulley/Spring Assembly (Pulley)
958	698180	Valve-Fuel Shut Off (Plastic)	1019	791811	Kit-Label	1211	498144	Pulley/Spring Assembly (Spring)
972	694260	Tank-Fuel (Plastic)	1022	★∅691890	Gasket-Rocker Cover	1230	699847	Screw (Control Bracket)
975	493640	Bowl-Float	1023	499924	Cover-Rocker Arm	1251A	790555	Shield-Snow
976	793382	Primer-Carburetor	1026	790287	Rod-Push	1251B	790556	Shield-Snow
977	792007	Gasket Set-Carburetor	1029	691230	Arm-Rocker	1252	699234	Screw (Snow Shield)
990	695756	Key-Set	1034	691343	Guide-Push Rod	1252A	699632	Screw (Snow Shield)
993	★∅694088	Gasket-Cylinder Head Plate	1036		Label-Emissions (Available From An Authorized Briggs & Stratton Sevice Dealer)	1319	794467	Label-Warning
996	794687	Shield-Carburetor	1054	280275	Tie-Cable	1330	272147	Repair Manual
998	696683	Pipe-Oil (4" Long)	1058	277104	Operator's Manual	1403	699480	Screw (Wire Assembly)
		----- Note -----	1070	699201	Screw (Flywheel Fan)			
		792928 Pipe-Oil (2 1/2" Long)	1095A	791798	Gasket Set-Valve			
		794701 Pipe-Oil (5" Long)	1119	699772	Screw (Alternator)			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3946-9

Assemblies include all parts shown in frames.

06/24/2008

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>