




# ELITE Series™

**PORTABLE GENERATOR  
GENERADOR PORTÁTIL**

Illustrated Parts List  
Las Partes ilustradas Listan

**030211-1  
(6200W)**

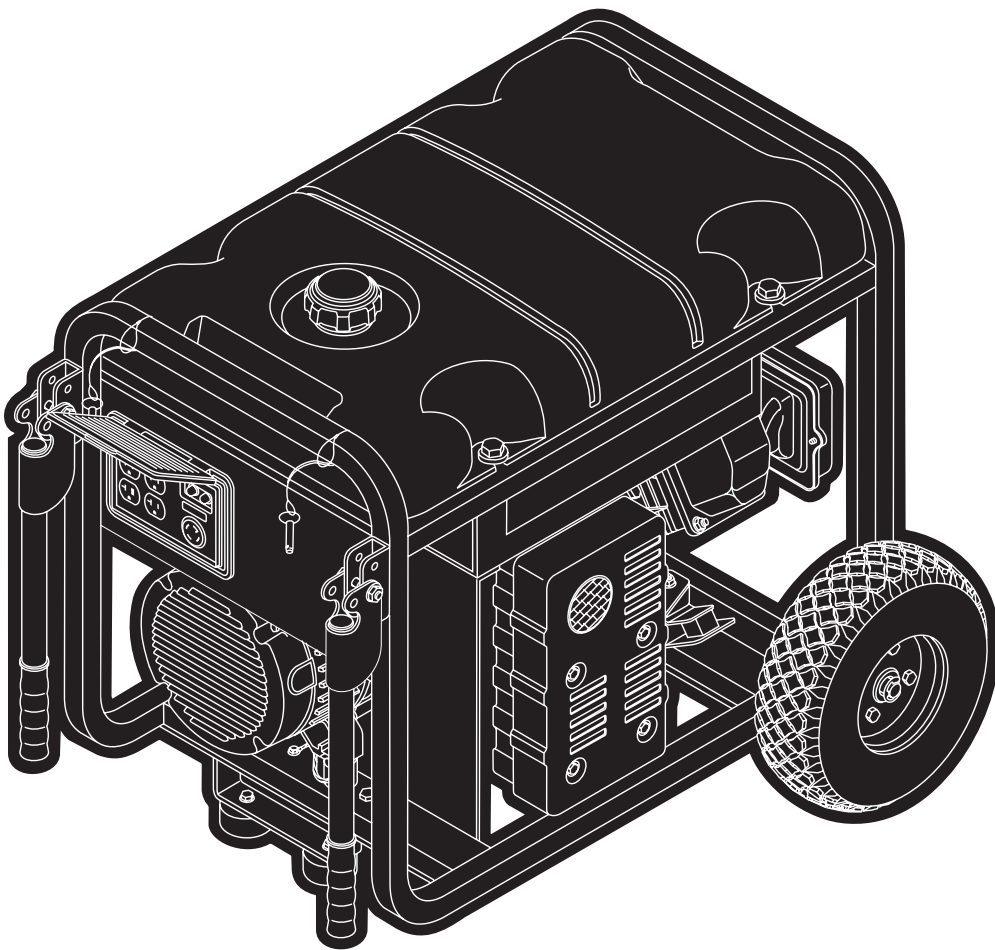


Questions? Help is just a moment away!  
Preguntas? La ayuda es justa un momento lejos!

Call: **Generator Helpline - 1-800-743-4115** M-F 8-5 CT  
Llamada: **Generador Helpline - 1-800-743-4115** M-F 8-5 CT


**BRIGGS & STRATTON POWER PRODUCTS GROUP, LLC  
JEFFERSON, WISCONSIN, U.S.A.**

Manual No. 195529B  
Revision A (09/05/2007)

# EXPLODED VIEW - MAIN UNIT

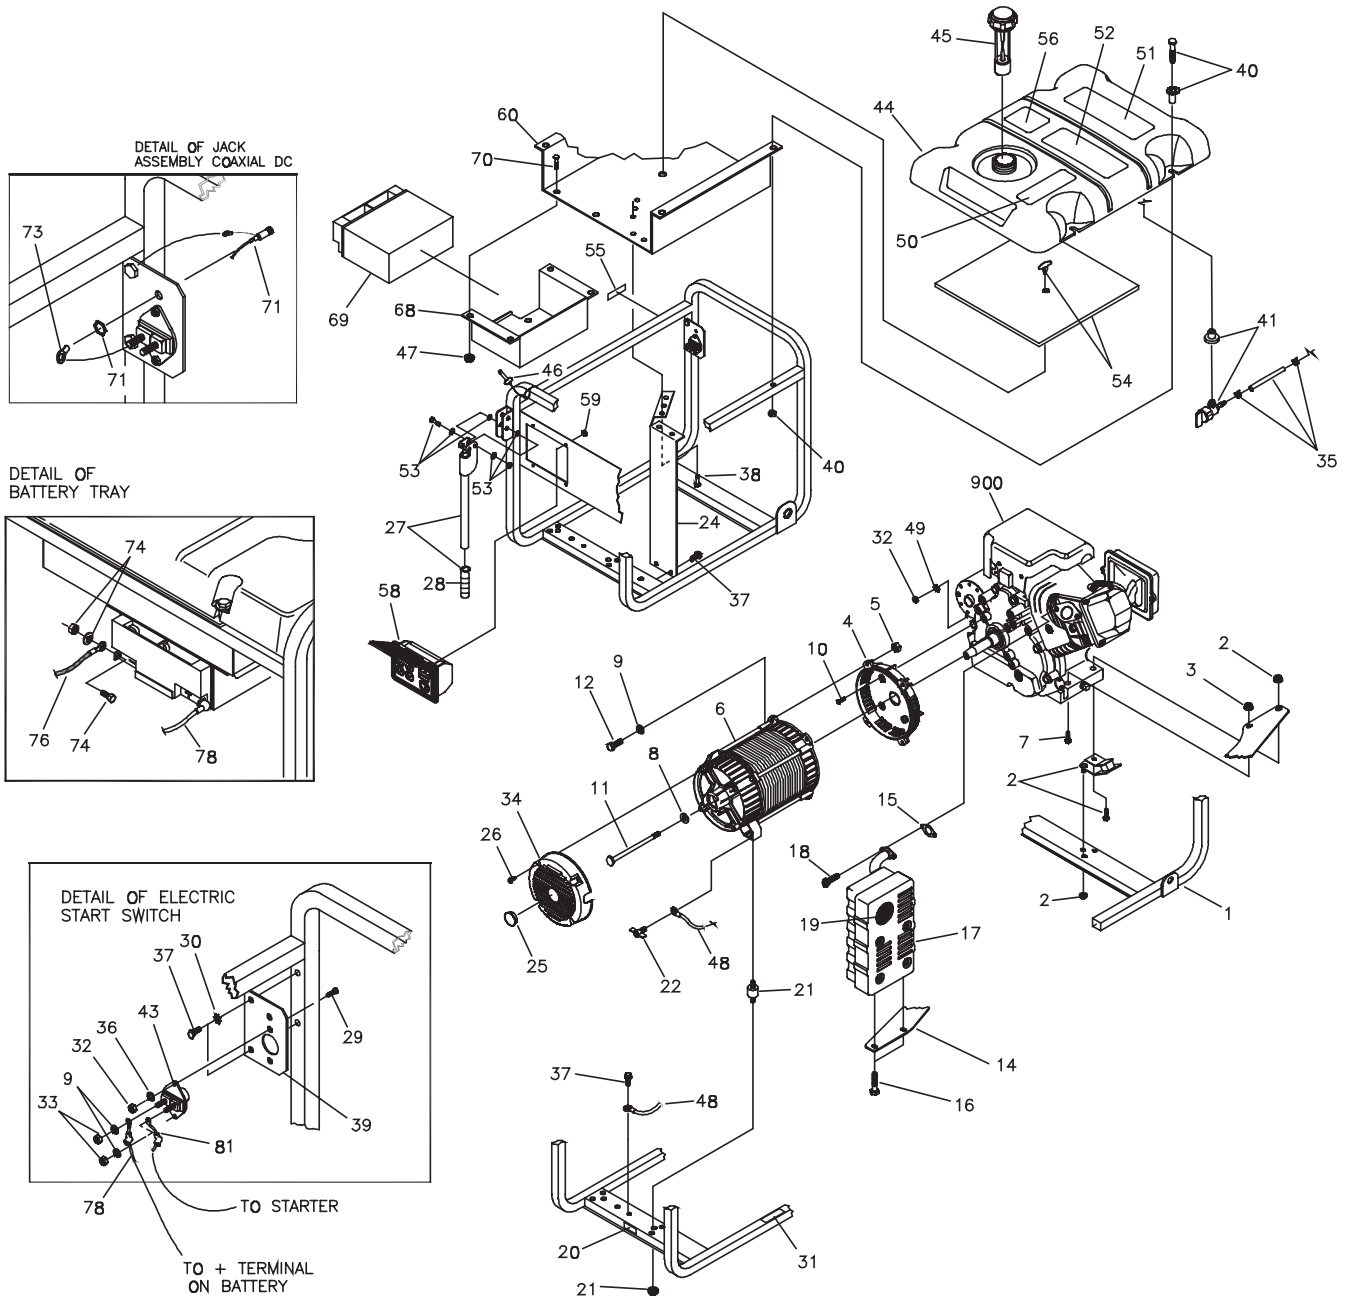

Copyright © 2007 Briggs & Stratton Power Products Group, LLC. All rights reserved. No part of this material may be reproduced or transmitted in any form by any means without the express written permission of Briggs & Stratton Power Products Group, LLC.

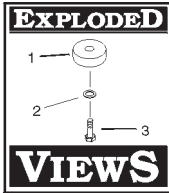

## EXPLODED VIEW - PARTS LIST


Item	Part #	Description	Item	Part #	Description
1	M197464GS	CRADLE (Includes Items 20, 31 & 55)	43	77282GS	SWITCH, Starter
2	194150GS	KIT, Vibration Mount	44	194217GS	ASSY., Tank, Fuel (Includes Items 41, 50, 51, 52 & 56)
3	*	NUT, M8 Flange Serrated	45	B4363GS	CAP, Fuel Gauge
4	190220GS	HOUSING, Engine Adapter	46	B4135GS	PIN
5	*	NUT, Hex, M8-1.25	47	77395GS	NUT, M6 Flange Lock
6	NSP	ASSY, Alternator (see page 4)	48	195373GS	WIRE, Ground
7	*	TPHMS, M8 - 1.25 x 35	49	*	WASHER, M6 Shakeproof
8	96796GS	WASHER, 8.4 x 22.2 x 3	50	188333GS	DECAL, Instruction, Fuel Level
9	*	WASHER, Lock M8	51	194799GS	DECAL, Danger
10	190274DGS	SBHCS, 3/8-16 x 7/8	52	189235GS	DECAL, Start Instructions
11	187365FGS	HHCS, 5/16-24 x 7.44	53	194034GS	KIT, Handle Fold-down Hardware
12	*	HHCS, M8 1.25 x 25	54	194448GS	KIT, Insulation with Clip
14	189009GS	BRACKET, Muffler	55	197798GS	DECAL, Fuel Shut-off
15	695398	GASKET, Exhaust	56	202997GS	DECAL, CO Warning
16	*	HHCS, M6-1.0 x 12	58	191757GS	ASSY, Control Panel
17	189008GS	MUFFLER	59	*	NUT, Palnut, 3/16"
18	*	SHCS, 5/16 - 18 x 7/8"	60	194389GS	SHIELD, Heat
19	83083GS	SCREEN, Spark Arrest	68	195680GS	TRAY, Battery
20	B4986GS	DECAL, Ground	69	193043GS	BATTERY
21	194153GS	KIT, Vibration, Mount	70	*	HHCS, M6 - 1.0 x 12
22	86494GS	SCREW, Wing M6 - 1.0 x 16	71	192531GS	ASM, Jack, DC
24	194390GS	SHIELD, Heat	73	58359GS	LUG, 5/16 #22/18 I-S
25	191190GS	CAP	74	193347GS	KIT, Battery Hardware
26	74908GS	TAPTITE, M5-0.8 x 10	76	185939KGS	WIRE ASM, #55
27	B193200GS	ASSY, Handle/Grip	78	189302CGS	WIRE ASM, #13
28	198669GS	GRIP	81	189302GGS	WIRE ASM, #16
29	*	HHCS, 1/4-20 x 3/4	900	§	ENGINE
30	*	WASHER, Shakeproof, Ext #10			
31	196830GS	DECAL, Hot Muffler			
32	*	NUT, 1/4 - 20			
33	*	NUT, 5/16-24			
34	195422GS	COVER, RBC w/Cap			
35	791745	KIT, Fuel Hose (cut to fit)			
36	*	WASHER, Lock, 1/4			
37	B2153GS	SCREW, 12-14 x 7/8 Self Drilling			
38	56893GS	SCREW, 10-24 x 1/2 CrimpTite			
39	188987GS	PLATE, Mounting Switch			
40	195477GS	KIT, Hardware Tank Fuel (Includes Qty 4)			
41	192980GS	KIT, Valve, Tank			

### Parts Not Illustrated


MS3430	MANUAL, Engine, B&S
195529GS	MANUAL, Operator's
BB3061GS	BOTTLE, Oil
B4177GS	CHARGER, Battery
202180GS	DECAL, Family, CA EVP
195578GS	KIT, Decals Service

\* - Items without part numbers are common fasteners and are available at your local hardware store.


§ - Contact Engine Manufacturer

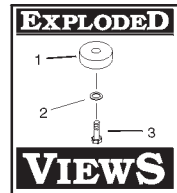


## EXPLODED VIEW AND PARTS LIST - ALTERNATOR

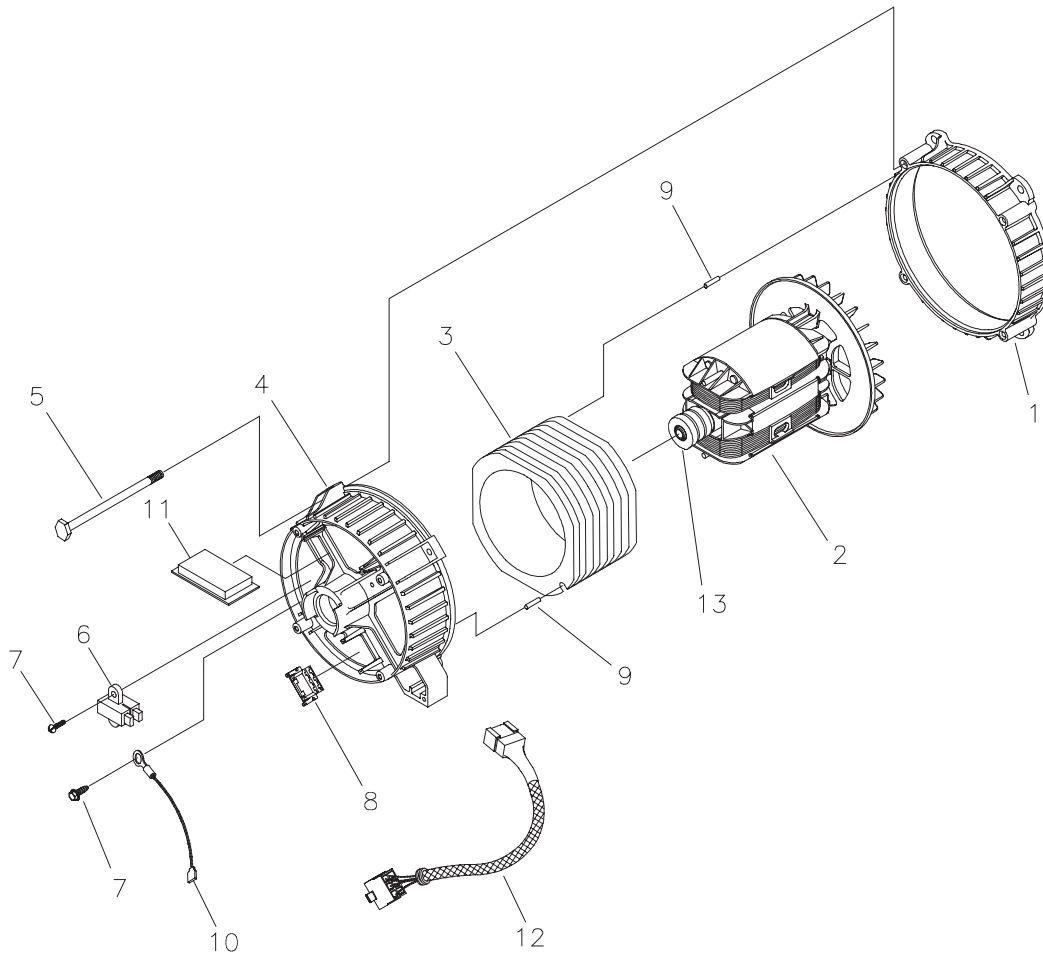

Item	Part #	Description
1	186059GS	ADAPTER, Mounting, Alternator
2	191876GS	ROTOR (Includes Item 13)
3	194006AGS	STATOR
4	186060GS	RBC, (with O-Ring, p/n 189197GS)
5	86308HGS	HHCS, M6 - 1.0 x 140 SEMS
6	66386GS	ASSY, Holder, Brush
7	66849GS	TAPTITE, M5 - 0.8 x 16
8	22694GS	RECEPTACLE, 6 pin
9	81917GS	PIN, Roll, 4mm x 10
10	193428AGS	ASSY, Wire, Ground
11	189769GS	REGULATOR, Voltage, AVR
12	194274GS	HARNESS, Wire, Power
13	65791GS	BEARING

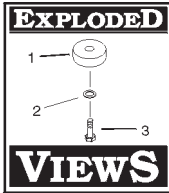


## EXPLODED VIEW AND PARTS LIST - CONTROL PANEL

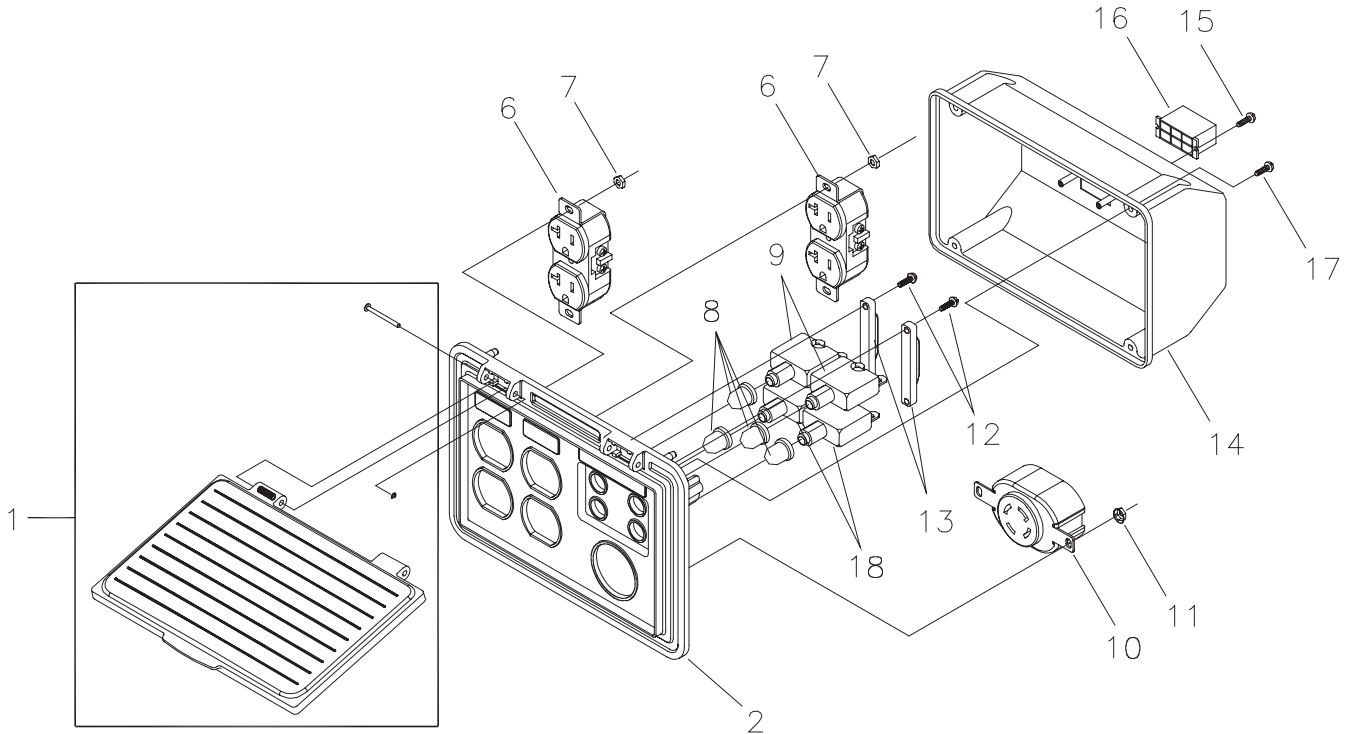


Item	Part #	Description
1	195112GS	KIT, Control Panel Lid
2	191450GS	CONTROL PANEL, Compact
6	68759GS	OUTLET, 120V, 20Amp, Duplex
7	*	NUT, Palnut, 5/32
8	84198GS	CAP, Circuit Breaker
9	75207AGS	CIRCUIT BREAKER, 30A
10	43437GS	OUTLET, 120/240 Locking, 30A
11	*	NUT, Palnut, 3/16
12	*	PPPHS, M3- 0.5 x 18
13	93857GS	BAR, Retaining
14	188890GS	COVER, Back, Control Panel
15	82308GS	SCREW, Tapping, STC 3 x 18
16	22694GS	HOUSING, Receptacle
17	192241GS	SCREW, Tapping, 3.5 x 14
18	75207PGS	CIRCUIT BREAKER, 25A

\* - Items without part numbers are common fasteners and are available at your local hardware store.

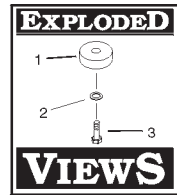

## EXPLODED VIEW AND PARTS LIST - WHEEL KIT

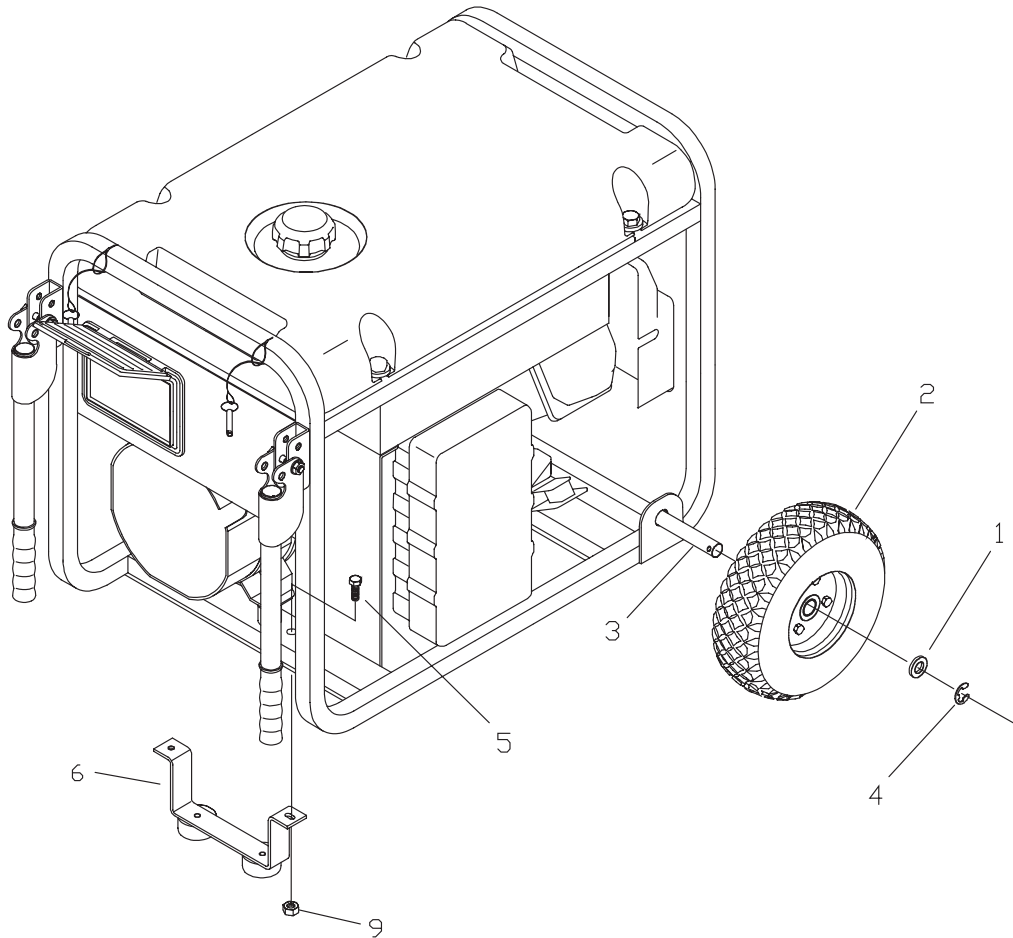

Item	Part #	Description
1	*	WASHER, 5/8
2	B4966GS	WHEEL
3	191267GGS	AXLE
4	191265GS	E-RING
5	*	HHCS, M8 - 1.25 x 20
6	204536GS	ASSY, Support w/Mounts
9	67989GS	NUT, M8 - Flange Serrated

### Parts Not Illustrated

187046GS SUBKIT, Hardware

\* - Items without part numbers are common fasteners and are available at your local hardware store.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>