

COLLECTION SYSTEM Operator Manual Parts Manual 966 004901

Please read these instructions carefully and make sure you understand them before using the machine.



WARNING!

Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

> ©2009 HTC. All Rights Reserved. Beatrice, NE. Printed in U.S.A.

CONTENTS

COMPONENTS	4
SAFETY RULES	5
GENERAL OPERATION	5
SLOPE OPERATION	5
CHILDREN	6
SERVICE	6
ASSEMBLY	8
BAGGER ASSEMBLY	8
DRIVE PULLEY	10
TRIMMING BLOWER	10
BLOWER ASSEMBLY	
DRIVE BELT	11
BELT COVERS	12
MIDDLE CHUTE	12
WEIGHT KIT	13

SERVICE AND MAINTENANCE	
TRANSPORT	14
STORAGE	14
HOSE CARE	14
BAG CARE	14
POLY MESH CLEANING	14
PREVENTATIVE MAINTENANCE SCHEDULE	15
TROUBLESHOOTING GUIDE	15
OPERATION	16
TIPS FOR IMPROVED BAGGING	16
CUSTOMER RESPONSIBILITIES	17
HOOD	18
HITCH	20
BLOWER	22
WEIGHT	24
COLLECTION BAG	24
DRIVE KIT	26

CONGRATULATIONS on your purchase of a new Grass Catcher. It has been designed, engineered and manufactured to give you the best possible dependability and performance.

Should you experience any problem you cannot easily remedy, contact the nearest authorized service center/ department. They have competent, well-trained technicians and the proper tools for service and repairs.

Read and retain this manual. The instructions will enable you to assemble and maintain your collection system properly. Always observe the SAFETY RULES.

KNOW YOUR GRASS CATCHER


READ THIS OPERATION MANUAL AND SAFETY RULES BEFORE ASSEMBLING OR OPERATING YOUR GRASS CATCHER. Compare the illustrations with the carton contents to familiarize yourself with the parts before starting the assembly. Study the operating instructions and safety precautions thoroughly to insure proper functioning of your Grass Catcher and to prevent injury to yourself and others. Save this manual for future reference.



WARNING!

The operation of any mower can result in foreign objects thrown into the eyes, which can result in severe eye damage. ALWAYS wear safety glasses or eye shields before starting your mower and while mowing. We recommend a wide vision safety mask for over the spectacles or standard safety glasses.

COMPONENTS

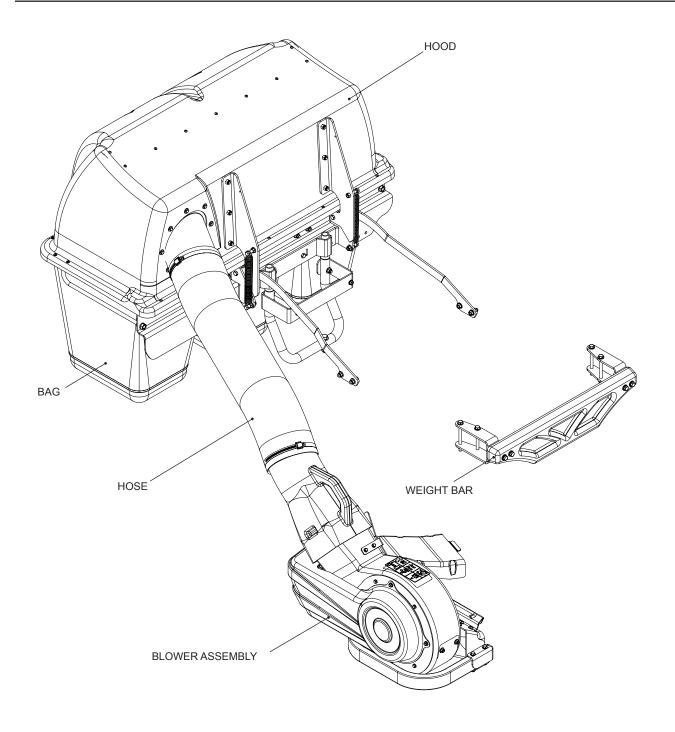



DANGER !

THIS CUTTING MACHINE IS CAPABLE OF AMPUTATING HANDS AND FEET AND THROWING OBJECTS. FAILURE TO OBSERVE THE FOLLOWING SAFETY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

GENERAL OPERATION

- Read, understand and follow all instructions in the manual and on the machine before starting.
- Only allow responsible adults, who are familiar with the instructions, to operate the machine.
- Clear the area of objects such as rocks, stones, toys, wire etc., which could be picked up and thrown by the blades.
- Be sure the area is clear of all people and pets before mowing. Stop the machine if anyone enters the area.
- Never carry passengers or children even with blades off.
- Do not mow in reverse unless absolutely necessary. Always look down and behind before and while backing.
- Be aware of the mower discharge direction and do not direct it towards anyone. Do not operate the mower without either the entire grass catcher or the guard in place.
- Slow down before turning.
- Never leave the machine unattended when the engine is running. Always turn off the blades, set the parking brake, stop the engine and remove the key before leaving the machine.
- Turn off blades when not mowing.
- Stop engine before removing grass catcher or unclogging chute.
- Mow only in daylight or good artificial light.
- Do not operate the machine while under the influence of alcohol or drugs.
- Watch out for traffic when operating near or crossing roadways.
- Use extra care when loading and unloading the machine onto a trailer or truck.

- Data indicates that operators, age 60 years and above, are involved in a large percentage of riding mower-related injuries. These operators should evaluate their ability to operate the riding mower safely enough to protect themselves and others from serious injury.
- **DO NOT** operate mower with grass catcher, unless the front weights are installed.
- Keep machine free of grass, leaves or other debris buildup which can touch hot exhaust/engine parts and burn. Do not allow the mower deck to plow leaves or other debris which can cause buildup to occur. Clean any oil or fuel spillage before operating or storing the machine. Allow machine to cool before storage.

SLOPE OPERATION

Slopes are a major factor related to loss-of-control and tipover accidents, which can result in severe injury or death. All slopes require extra caution. If you cannot back up the slope or if you feel uneasy on it, do not mow it.

DO

- Mow up and down slopes (10° Max.), not across.
- Remove obstacles such as rocks, tree limbs, etc.
- Watch for holes, ruts, or bumps. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
- Use slow speed. Choose a low speed so that you will not have to stop while on the slope.
- Use extra care with grass catchers or other attachments. These can change the stability of the machine.
- Keep all movement on the slopes slow and gradual. Do not make sudden changes in speed or direction.
- Avoid starting or stopping on a slope. If tires lose traction, disengage the blades and proceed slowly **straight** down the slope.



SAFE OPERATION PRACTICES FOR RIDE-ON MOWERS

.



DO NOT

- **Do not** turn on slopes unless necessary, and then, turn slowly and gradually downhill, if possible.
- **Do not** mow near drop-off, ditches, or embankments. The mower could suddenly turn over if a wheel is over the edge of a cliff or ditch, or if an edge caves in.
- **Do not** mow on wet grass. Reduced traction could cause sliding.
- **Do not** try to stabilize the machine by putting your foot on the ground.

CHILDREN

Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the machine and the mowing activity. Never assume that children will remain where you last saw them.

- NEVER allow children to operate the machine.
- Keep children out of the mowing area and under the watchful care of another responsible adult.
- Be alert and turn off the machine if children enter the area.
- Before and when backing, look behind and **down** for small children.
- Never carry children. They may fall off and be seriously injured or interfere with safe machine operation.
- Use extra care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

SERVICE

 The operation of any mower can result in foreign objects thrown into the eyes, which can result in severe eye damage. Always wear safety glasses or eye shields while operating your mower or performing any adjustments or repairs. We recommend a wide vision safety mask over spectacles or standard safety glasses.

- Use extra care in handling gasoline and other fuels. They are flammable and vapors are explosive.
 - Use only an approved container.
 - Never remove gas cap or add fuel with the engine running.
 - Allow engine to cool before refueling.
 - Do not smoke.
 - Never refuel the machine indoors.
 - Never store the machine or fuel container inside where there is an open flame, such as a water heater.
- Never run a machine inside a closed area.
- Keep nuts and bolts, especially blade attachment bolts, tight and keep equipment in good condition.
- Never tamper with safety devices. Check for proper operation regularly.
- Keep machine free of grass, leaves, or other debris buildup. Clean oil or fuel spillage. Allow machine to cool before storing.
- Stop and inspect the equipment if you strike an object. Repair, if necessary, before restarting.
- Never make adjustments or repairs with the engine running.
- Grass catcher components are subject to wear, damage, and deterioration, which could expose moving parts or allow objects to be thrown.
 Frequently check components and replace with manufacturer's recommended parts, when necessary.
- Mower blades are sharp and can cut. Wrap the blade(s) or wear gloves, and use extra caution when servicing them.
- Check brake operation frequently. Adjust and service as shown in the Operator's Manual.



SAFE OPERATION PRACTICES FOR RIDE-ON MOWERS



- NEVER allow children to operate the machine.
- Be sure the area is clear of other people before mowing. Stop machine if anyone enters the area.
- Never carry passengers or children even with the blades off.
- Do not drive in reverse unless absolutely necessary. Always look down and behind before and while backing.
- Never carry children. They may fall off and be seriously injured or interfere with safe machine operation.
- Keep children out of the mowing area and under the watchful care of another responsible adult.
- Be alert and turn machine off if children enter the area.
- Before and when backing, look behind and down for small children.
- Mow up and down slopes (10° Max), not across.
- Remove obstacles such as rocks, tree limbs, etc.
- Watch for holes, ruts, or bumps. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
- Use a slow speed while on slope or hill.
- Avoid starting or stopping on a slope. If tires lose traction, disengage the blades and proceed slowly straight down the slope.
- If machine stops while going uphill, disengage blades, shift into reverse and back down slowly.
- Do not turn on slopes unless necessary, and then, turn slowly and gradually downhill, if possible.

CAUTION

Look for this symbol to point out important safety precautions. It means CAUTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.



CAUTION

In order to prevent accidental starting when setting up, transporting, adjusting or making repairs, always disconnect spark plug wire and place wire where it cannot contact spark plug.



WARNING!

Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.




WARNING!

Battery posts, terminals and related accessories contain lead and lead compounds, chemicals know to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.


BAGGER ASSEMBLY

1. Attach hitch tube to support bracket with $3/8-16 \times 2$ shoulder bolts and secure with flange nuts.

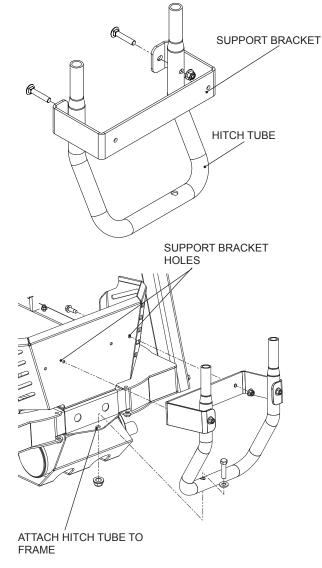


- 2. Place the support bracket against the frame rear guard. Using the outer right hole and inner left hole, secure with 5/16 x 1 bolts and 5/16 nyloc nuts.
- 3. Attach support tube to frame hitch with $\frac{1}{2} \times 2\frac{1}{4}$ bolt and $\frac{1}{2}$ nyloc nut.


- 4. Place the hood / hitch assembly onto the hitch tube.
- 5. Open the hood and secure the (2) springs to the bolts on the hood assembly and the hitch assembly.

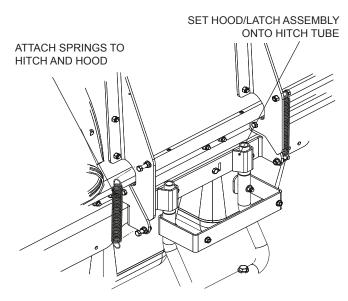


6. Attach right and left straps to the hood/latch assembly with ³/₈-16 x 1 bolts and flange nuts.

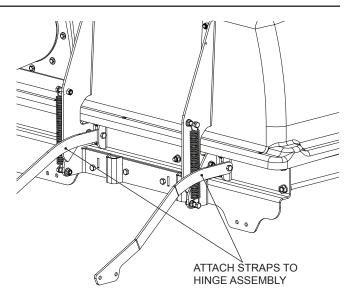

9. Secure inner end of straps to unit fuel tank mounts with ³/₈-16 x 1 thread forming bolts and flange nuts, as shown.

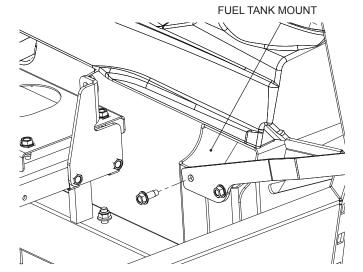


- 10. With the hood open, secure the (3) bags in place. The back of the bags will hook over the mounting tabs on the hitch assembly.
- 11. Close the hood, and lock the draw latch over the draw latch keeper on the hitch assembly.

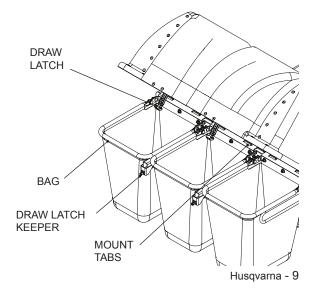

ASSEMBLY

DRIVE PULLEY


- 1. Remove the discharge chute from the deck. (Deck configuration will vary by size and model)
- 2. Lower deck to the lowest cutting position.
- 3. Remove the right hand (discharge side) belt cover from the deck.
- Relieve the tension from the deck belt and remove from the center deck pulley. (See Operator's Manual if necessary)

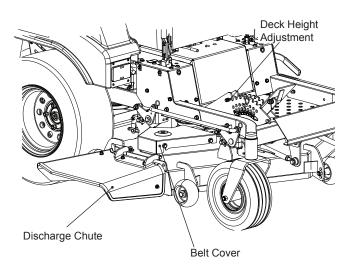

- 5. Remove the nut that secures the right hand deck pulley to the spindle.
- 6. Install drive pulley included in collection system kit on top of the current deck pulley.
- 7. Reinstall the nut on the spindle and torque to 55-75 ft/lbs.
- 8. Reinstall the deck belt.




Drive Pulley

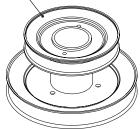

DECK STOP


- 1. Locate the deck stop behind the rear lift link on each side of the deck.
- 2. Set deck stop tube on the deck stop on each side.

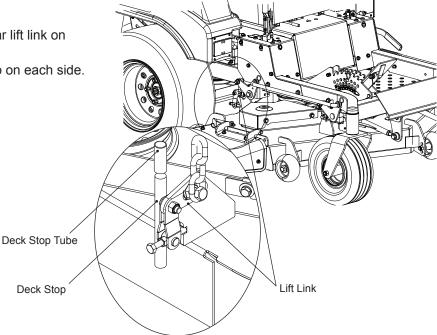

ASSEMBLY


BLOWER ASSEMBLY

- 1. Position blower over the discharge tabs on the deck and set blower onto the deck.
- 2. Be sure the blower is sitting flush against the outside of the deck.
- 3. Secure the mount bracket to the deck with the pin and hairpin cotter supplied with the kit.

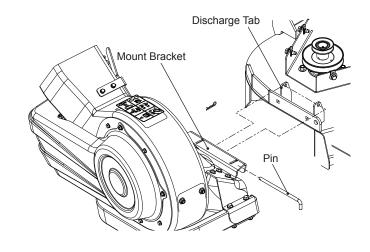


DRIVE BELT

- 1. Make sure the tension release lever is forward or disengaged.
- 2. Place the belt over the pulley on the deck. Refer to illustration for proper routing.
- 3. Move the tension release arm to the rear and engage in the latch.

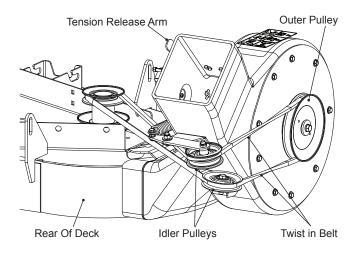

BELT COVERS


- 1. Place the deck belt shield on the deck over the drive pulley and secure with hardware removed from steel belt shield.
- 2. Place retainer on the outer pulley cover.
- 3. Align the tab end of the belt cover into the slot on the deck belt shield and the other end over the end of the outer pulley cover.
- 4. Secure with knob.

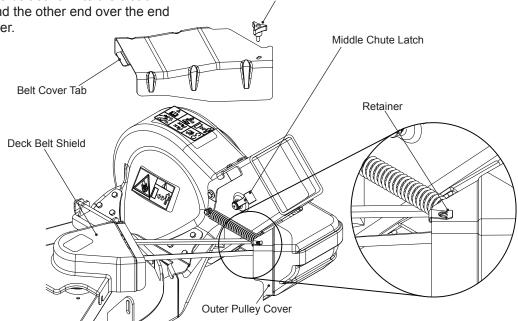

Knob


MIDDLE CHUTE

- 1. Place middle chute over the top end of the blower assembly.
- 2. Latch middle chute to blower assembly.

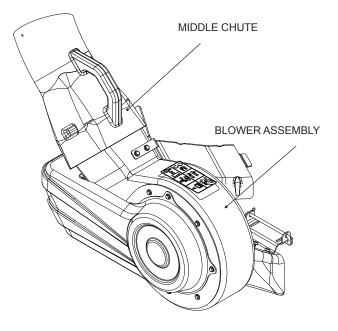

WEIGHT KIT

- 1. Bolt cast weight and two weight brackets together using 2³/₄" bolts and nuts.
- 2. Slide both weight brackets over the front tube on the frame, positioning the assembly in the center of the frame.
- 3. Secure with 3³/₄" bolts and nuts.

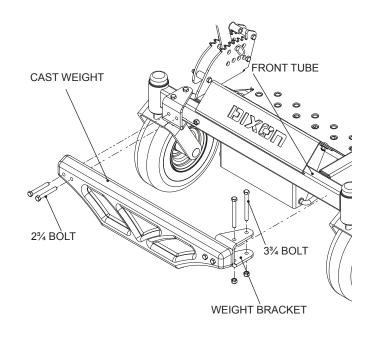

TRANSPORT



WARNING!

The collection system bags must be completely empty or removed while driving forward onto a trailer. If the mower must be loaded onto a trailer while there is still debris in the container, the mower must be backed up onto the trailer to avoid tipping.

STORAGE

When grass catcher is to be stored for a period of time, clean it thoroughly, remove all dirt, grass, leaves, etc. Store in a clean, dry place. Also clean machine and cover all scratches with touch-up paint. Covered or indoor storage is recommended.

HOSE CARE

- Inspect hoses before each use. If hoses have excessive wear, tears, or punctures, replace immediately.
- 2. To prolong the life of the hose, periodically rotate hose and turn hose end to end. Refer to Preventative Maintenance Schedule in this manual.
- 3. Avoid twists and sharp turns in the hoses, as they will increase wear on the hoses.
- 4. Avoid dragging the lower hose along the sides of buildings or other hard surfaces

BAG CARE

Inspect the bags before each use. If bags have excessive wear, tears or punctures, replace immediately.

NOTE: Under normal usage the bag material is subject to deterioration and wear.

POLY MESH CLEANING

The poly mesh on the collection system is located inside the container hood. For best results, clean poly mesh regularly.

- 1. Shut off engine.
- Release the two (2) rubber latches under the rear of the hood. Open hood and brush debris off of both sides.
- 3. Close hood and relatch.

DO NOT USE THE COLLECTION SYSTEM WITHOUT POLY MESH SECURELY IN PLACE.

PREVENTATIVE MAINTENANCE SCHEDULE

	Before Each Use	Every 5 Hours	Every 25 Hours	Every 55 Hours
Inspect/Clean Poly Mesh	Х	Х		
Check/Tighten Nuts & Bolts	Х			
Check/Tighten Hoses	Х			
Turn Hose End to End			Х	
Rotate Hose				Х
Clean Machine				Х
Inspect Bags	Х			

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Correction	
Loss of Vacuum	Blower, hose or hood inlet clogged	Remove hose and clean inlet	
	Bags full	Inspect and empty	
	Fan blades bent or broken	Replace/repair blower impeller	
	Poly mesh plugged	Clean poly mesh	
Unusual vibration or noise	Solid object jammed in unit	Check and remove any obstruction	
	Loose or missing bolts on unit	Tighten or replace bolts	
	Bent or damaged fan	Replace/repair impeller	
Unit difficult to close	Obstructions keeping door from completely closing	Clear obstruction	
	Hood hinge bolts too tight	Loosen bolts	



WARNING! Before servicing unit, wait for all moving parts to come to a complete stop. Turn engine off and remove the spark plug wire.

TIPS FOR IMPROVED BAGGING

Follow the mower operation instructions in the mower operator's manual.

When utilizing the grass catcher on a lawn where grass and leaf bagging equipment has not been used, thatch and debris that has accumulated for long periods of time will be picked up. The amount collected and the total time of operation may be greater than experienced with regular use of the grass catcher.

- Always run throttle at full speed when bagging.
- Select a speed low enough to give good mower cutting performance, good quality cut and good bagging performance.

NOTE: It may be necessary to overlap width of cut to suit your conditions.

- If grass is extremely tall, it should be mowed twice. The first time relatively high, the second time to desired height.
- Use left hand side of mower for trimming.
- Plastic trash bags (3.0 mil, 30 gallon) can be inserted inside grass catcher containers for ease of debris disposal. To remove the plastic trash bags when full:
 - a. Disengage blades, shift into neutral, engage the parking brake and stop the engine.
 - b. Unlatch and raise cover.
 - c. Remove one container at a time by grasping container handles and pulling toward the rear, off of the tube rails.
 - d. With the container resting on the ground, close and secure the top of the plastic lawn bag.
 - e. Tip the container on its side and slide the filled bag from the container.
 - Install a new plastic lawn bag with the edges f. of the bag draped over upper lip of the container.
 - g. Repeat for other container.
 - h. Reinstall containers making sure right container overlaps left container at center supports.
 - Close cover and secure latches over center i support tubes.

- Avoid cutting wet grass or mowing in the morning while the dew is still heavy. Grass clippings collected under these conditions tend to be sticky and adhere to the walls of the flow path causing clogging.
- If the grass catcher fails to pick up cut grass or leaves, it is an indication that clogging has occurred in the system or that the grass catcher containers are full.
 - Disengage blades, place motion control levers a. in neutral position.
 - Unlatch and raise cover.
 - Slide out containers and dispose of clippings.
 - Replace containers, close cover, and latch.
 - b. Unlatch chutes and check for clogging.
 - Remove all debris in chute.
 - Reassemble and latch chutes.



WARNING!

- DO NOT operate mower with grass catcher partially installed.
- Disengage blades and stop engine before leaving mower seat to empty containers, unclogging chutes, etc.
- Close cover before starting.
- Disengage mower blades when crossing driveways or gravel surfaces and other areas where thrown objects could be a hazard.
- DO NOT attempt to vacuum up cans or other potentially hazardous projectiles.

GENERAL RECOMMENDATIONS

Always observe safety rules when performing any maintenance.

- Before each use check for loose fasteners.
- Clean unit thoroughly after each use.

BLADE CARE

For best results mower blades must be kept sharp. Replace bent or damaged blades.

 See BLADE CARE instructions in your mower operator's manual.



WARNING!

Grass catcher components are subject to wear, damage and deterioration, which could expose moving parts or allow objects to be thrown. Frequently check components and replace with manufacturer's recommended parts when necessary.




WARNING! BEFORE ASSEMBLING GRASS CATCHER TO MOWER:

- Set parking brake.
- Place motion control levers in "NEUTRAL" position.
- Turn ignition key "OFF" and remove key.
- Make sure the blades and all moving parts have completely stopped.
- Disconnect spark plug and place wire where it cannot come in contact with plug.



WARNING!


Do not leave grass in bagger containers. Empty containers after each use and before storing. Failure to do so may result in spontaneous combustion which could develop into a fire. HOOD

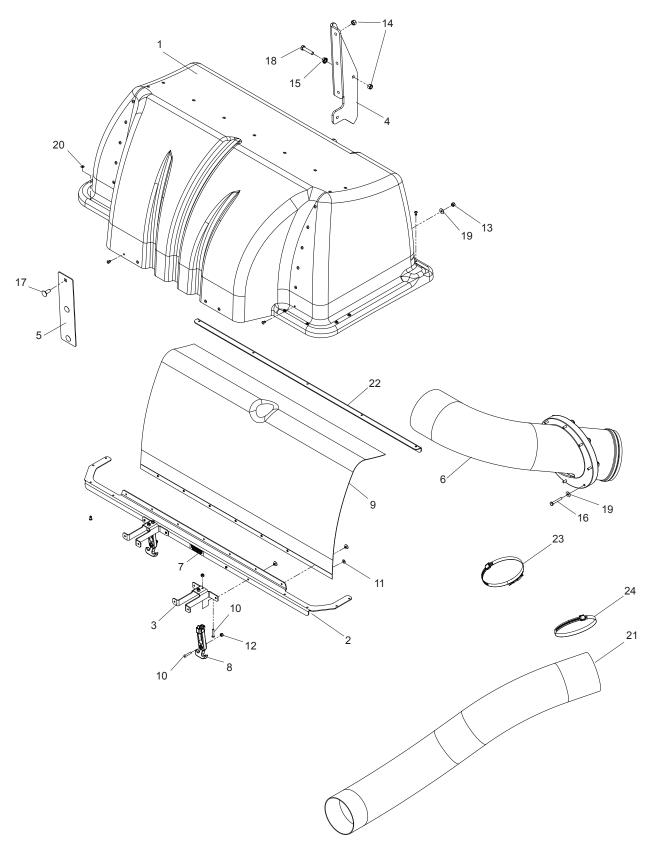

- ITEM PART NO. QTY DESCRIPTION
- 1... 539 111172 1.... HOOD
- 2.. 539 111174 1.... SUPPORT, HOOD
- 3... 539 111175 2.... SUPPORT, DRAW LATCH
- 4.. 539 111177 2.... HINGE, HOOD
- 5.. 539 111181 2.... PLATE, MOUNT
- 6.. 539 111182 1.... TUBE, INLET
- 7.. 539 111260 1.... DECAL, VENTILATION
- 8.. 539 200478.... 2.... DRAW LATCH
- 9.. 539 111183 1.... MESH, POLY DIAMOND
- 10.. 539 111186 6.... SCREW #10-24 x $1^{1}/_{8}$
- 11.. 539 105408.. 21.... WASHER #10
- 12.. 539 976977.... 6.... NUT #10-24 NYLOC

- ITEM PART NO. QTY DESCRIPTION
- 13.. 539 976978.... 8.... NUT 1/4-20 NYLOC
- 14.. 539 976979.... 8.... NUT 3/8-16 NYLOC
- 15.. 539 990613.... 2.... NUT 3/8-16 WHIZLK
- 16.. 539 991003.... 8.... HCS ¹/₄-20 x 1³/₄
- 17.. 539 990645.... 6.... RHSNB ³/8-16 x 1
- 18.. 539 990730.... 2.... HCS ³/₈-16 x 1³/₄
- 19.. 539 990598.. 16.... WASHER 1/4
- 20.. 539 110033.... 8.... WASHER #10
- 21.. 523 000201.... 1.... HOSE 42"
- 22.. 539 111339 1 HOOD SUPPORT, REAR
- 23.. 539 109901.... 1.... BAND, RETAINER w/HASP
- 24.. 539 097076.... 1.... BAND, OVER CENTER

HITCH

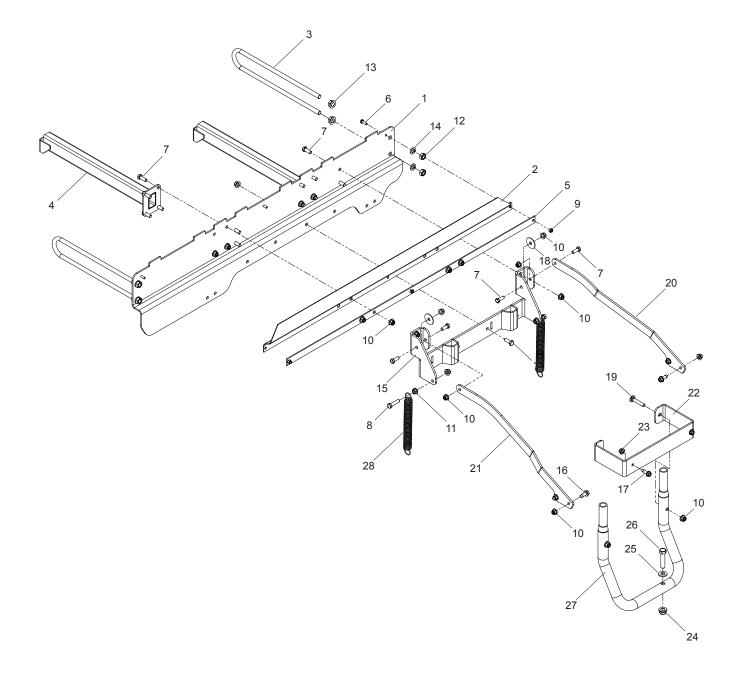


HITCH

- ITEM PART NO. QTY DESCRIPTION
- 1.. 539 111157 1.... MOUNT Z BRACE
- 2.. 539 111167 1.... SEAL, RUBBER
- 3.. 539 111158 2.... SUPPORT, OUTER
- 4.. 539 111162 2.... ARM, SUPPORT
- 5.. 539 111171 1.... STRAP, SEAL
- 6.. 539 990580.... 3.... HCS $\frac{1}{4}$ -20 x $\frac{3}{4}$
- 7.. 539 990563.. 20.... HCS ³/₈-16 x 1
- 8.. 539 990655.... 2.... HCS ³/8-16 x 1¹/₂
- 9.. 539 976978.... 3.... NUT 1/4-20 NYLOC
- 10.. 521 996501.. 28.... NUT 3/8-16 HX FLNGE NYLOC
- 11.. 539 990613.... 2.... NUT 3/8-16 HEX WHIZLK
- 12... 539 990625.... 4.... NUT ½ JAM
- 13.. 539 111187 4.... NUT 1/2-13 HEX WHIZLK
- 14.. 539 990254.... 4.... WASHER ½ SLW

- ITEM PART NO. QTY DESCRIPTION
- 15.. 522 910802.... 1.... MOUNT, HITCH
- 16.. 539 107476.... 4.... BOLT ³/₈-16 THD FRM
- 17.. 539 113226.... 2.... BOLT ⁵/16-18 THD FRM
- 18.. 539 102998.... 2.... WASHER, FRICTION
- 19.. 539 100145.... 2.... RHSNB 3 /8-16 x 2
- 20.. 522 910302.... 1.... STRAP, RT
- 21.. 522 910202.... 1.... STRAP, LT
- 22... 522 910502.... 1.... BRACKET, SUPPORT
- 23.. 539 112899.... 2.... NUT ⁵/₁₆-18 HEX FLG NYLOC
- 24.. 521 991101.... 1.... NUT ½-13 HEX FLG NYLOC
- 25... 539 990250.... 1.... WASHER 1/2 SAE FLAT
- 26.. 539 107706.... 1.... HCS ¹/₂-13 x 2¹/₄
- 27.. 522 910402.... 1.... TUBE, HITCH
- 28.. 539 111191 2.... SPRING


BLOWER

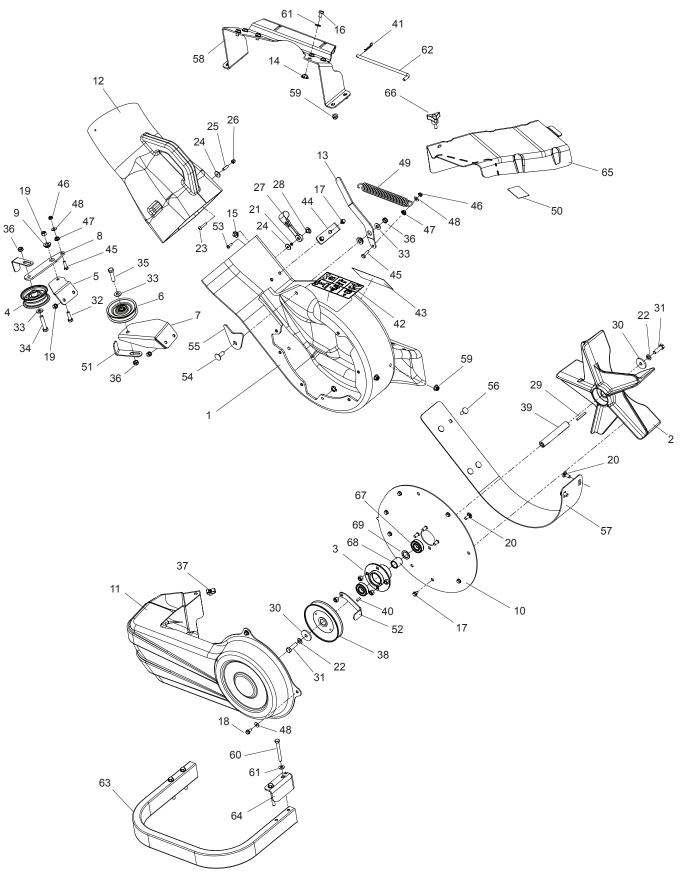

BLOWER

ITEM	PART NO.	QTY	DESCRIPTION	ITEM	PART NO.	QTY	DESCRIPTION
1 5	539 130344.	1 HOL	ISING w/DECALS	36	539 200282.	3NUT	³ /8-16 HEX JAM NYLOC
2 5	539 130292.	1 IMPI	ELLER	37	539 104763.	1 RET/	AINER, U TYPE
3 5	539 130295.	1 HUB	1	38	539 130324.	1 PULI	LEY
4 5	539 919078.	1 PUL	LEY, IDLER	39	539 130316.	1 SHA	FT, IMPELLER
5 5	539 130335.	1 MOL	JNT, IDLER, UPPER	40	539 115667.	1 KEY	³ / ₁₆ X ¹ / ₂
6 5	539 113683.	1 V-ID	LER	41	539 976988.	1 HAIF	RPIN COTTER
7 5	539 130336.	1 MOL	JNT, IDLER, LOWER	42	539 105785.	1 DEC	AL, WARNING
8 5	539 130337.	1 ARM	1, IDLER	43	539 106741.	1 DEC	AL, SEVERING
9 5	539 130301.	2 BUS	HING	44	539 130346.	1 KEE	PER
10 5	539 130341.	1 PLA	TE, OUTER	45	539 990643.	2 HCS	1⁄4-20 x ⁷ /8
11 5	539 130293.	1 COV	/ER, BELT	46	539 108120.	2NUT	1/4-20 HEX THIN NYLOC
12 5	522 909301.	1 CHU	ITE, MIDDLE	47	539 108735.	2 NUT	1/4-20 HEX FLANGE LK
13 5	539 130338.	1 ARM	I, TENSION	48	539 990055.	5 WAS	HER ¼ FLAT SAE
14 5	539 130313.	6 NUT	⁵ / ₁₆ -18 TEE	49	539 101977.	1 SPR	ING, TRACTION
15 5	539 130314.	11NUT	1⁄4-20 TEE	50	539 130349.	1 DEC	AL, BELT ROUTING
16 5	539 130315.	6 HCS	5 ⁵ /16 -18 x ¹/ 2	51	539 131087.	2 KEE	PER, BELT, REAR
			2EW 1⁄4-20 x 3/8 THD FRM	52	539 131085.	1 KEE	PER, BELT, OUTER
18 5	539 108461.	3 BOL	T ¼-20 x ½ HWST	53	539 976952.	1 SCR	EW #10-24 x .625 MACH.
19 5	539 990717.	9 NUT	⁵ / ₁₆ -18 HEX NYLOC	54	539 990645.	1RHS	NB ³ /8-16 x 1
20 5	539 990316.	6 RHS	SNB ⁵/16-18 x ¾	55	539 132124.	1 PLA	FE, BACKING
21 5	539 109552.	1 WAS	SHER 3/16 SLW	56	539 990208.	4 RHS	NB ⁵ / ₁₆ -18 x 1
22 5	539 990118.	2 WAS	SHER ³ /8 SLW	57	522 909702.	1 LINE	R, SAND
23 5	539 108083.	1 SCR	2EW, #10- 24 x 1 ¹ /8				CKET, MOUNT
			SHER ³ /16 x ³ / ₄ x 16 GA			-	5/16-18 HEX FLG NYLOC
			CER, SPLIT		539 101721.		
26 5	539 108086.	1 NUT	, ACORN #10- 24				HER ⁵ /16 SAE FLAT
	539 108088.						RETENTION
	539 108089.				522 909402.		
	539 125229.						CKET, RETENTION
			SHER, HARDENED		539 130309.		
			T ³ /8-24 x 1¼ HEX GR 8		539 104411.		
	539 990209.				539 130296.		
			SHER 3/8 SAE FLT		539 130323.		
			5 ³ /8-16 x 1 ³ / ₄	69	539 910935.	1 WAS	HER ¾ FLAT
35 5	539 990655.	1 HCS	³ / ₈ -16 x 1 ¹ / ₂				

WEIGHT

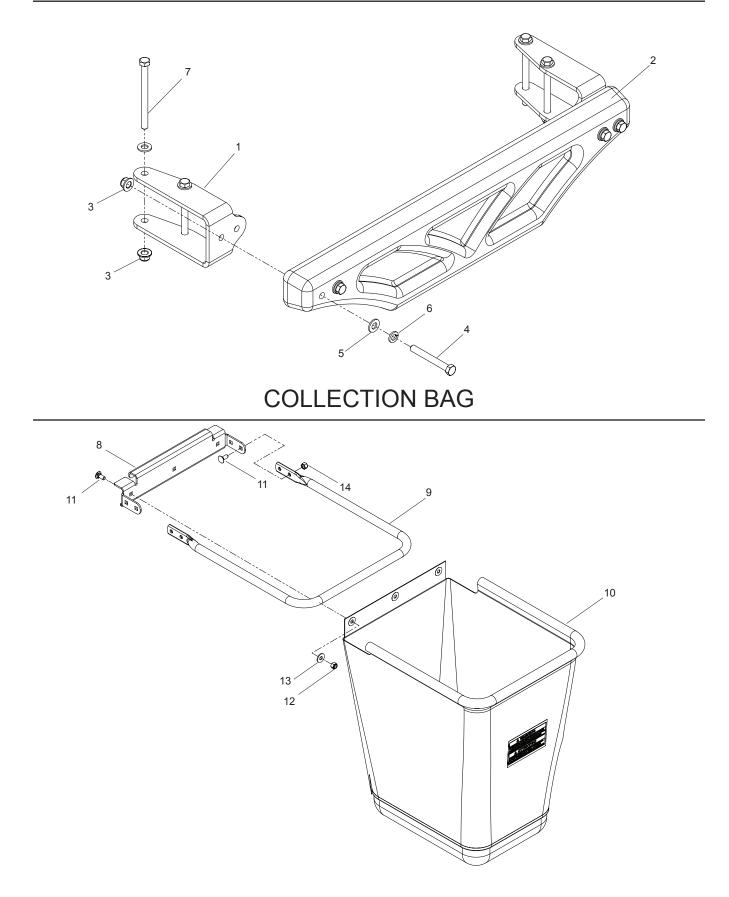

WEIGHT

ITEM

PART NO.

QTY

DESCRIPTION

1 522 989002 1 BRACKET, WEIGHT	5 539 990122 8 WASHER 3/8 SAE FLAT
2 539 111587 1 WEIGHT, CAST	6 539 990118 4 WASHER 3/8 SLW
3 521 996501 8 NUT ³ /8-16 HEX FLANGE	7 539 102334 4 HCS ³ /8-16 x 4 ¹ /2
4 539 101341 4 HCS ³ /8-16 x 3	

COLLECTION BAG

8.. 539 110063.... 3.... HANGER, BAG

QTY


DESCRIPTION

ITEM PART NO.

- 9.. 539 111166 3.... TUBE, BAG FRAME
- 10.. 539 111300 3.... BAG, SMALL

- 11.. 539 990316.. 21.... RHSNB ⁵/16-18 x ³⁄₄
- 12.. 539 990717.. 21.... NUT ⁵/₁₆-18 NYLOC
- 13.. 539 990692.... 9.... WASHER ⁵/₁₆

DRIVE KIT

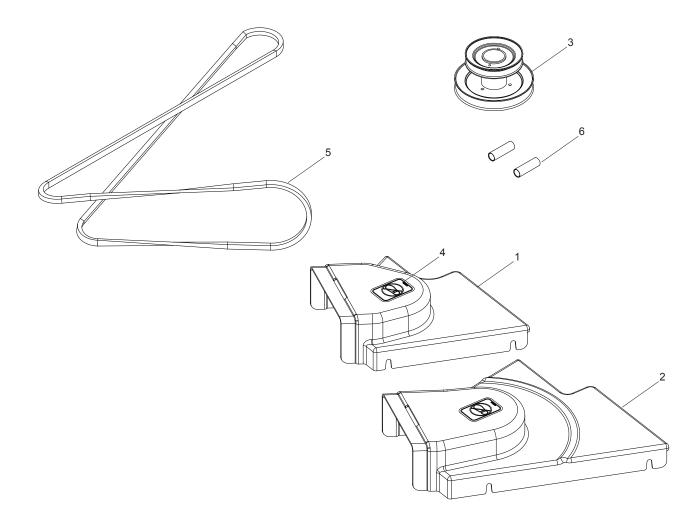

- 1.. 539 130307.... 1.... SHIELD, BELT, 52"
- 2.. 539 130308.... 1.... SHIELD, BELT, 61"
- 3.. 522 909901.... 1.... PULLEY, 52" 522 910001... 1.... PULLEY, 61"

- 4.. 539 105743.... 1.... DECAL, NO STEP
- 5.. 539 130347.... 1.... BELT, 52" 539 130348... 1.... BELT, 61"
- 6.. 523 351701.... 2.... TUBE, DECK STOP

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com