

INSTALLATION INSTRUCTIONS

ED/DF 2XX AGITATOR GEAR MOTOR CAPACITOR

IMPORTANT: The motor capacitor must be re-installed on the agitator gear motor prior to installing the agitator gear motor on the dispenser!


1. Unpack the agitator gear motor and capacitor.



2. Remove the capacitor mounting screw.



3. Assemble capacitor with mounting screw, as shown.

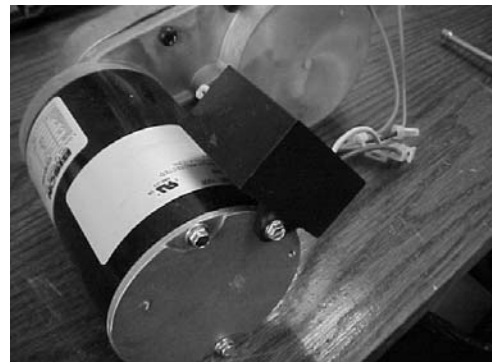

4. Attach the brown leads from the agitator gear motor to the capacitor. It does not matter which brown wire goes to which capacitor terminal.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>