

**Table of contents**

- Compatible iPod & iPhone .....1
- Media Bridge kit contents .....3
- Dip switch setting .....3
- Connection diagram .....4
- Installation .....5
- Basic operation .....6
- Selecting Media Bridge as an audio source .....7
- USB memory operation .....10
- USB iPod operation .....11
- AUX operation .....12
- Sirius Connect™ operation (on Satellite radio) .....13
- Troubleshooting .....14
- Firmware update .....16
- Disclaimer and warranty .....17

**Compatible iPod & iPhone**

- iPod**  
5th generation (video)\*  
30GB 60GB 80GB
- iPod nano**  
5th gen. (video camera)  
8GB 16GB 32GB
- iPod classic**  
80GB, 120 GB, 160GB
- iPod touch**  
1st gen  
8GB 16GB 32GB  
2nd gen  
8GB 16GB 32GB 64GB
- iPod nano**  
2nd generation (aluminum)  
2GB 4GB 8GB
- iPhone & iPhone 3G**  
4GB 8GB 16GB
- iPod nano**  
3rd generation (video)  
4GB 8GB
- iPhone 3GS**  
16GB 32GB
- iPod nano**  
4th generation (video)  
8GB 16GB

\* Must be used in locked mode.

MEDIA BRIDGE

MB-1000-Toyota integration solution for Toyota/Lexus/Scion vehicles

**Installation Guide/User Manual**

DICE logo is a trademark of DICE Electronics, LLC. SiriusConnect, Sirius and XM logos are trademark of SiriusXM. The Made for iPod logo is a trademark of Apple Inc. Apple iPod is not included in the package. For our detailed terms and conditions please visit our website at www.diceelectronics.com. REV. 021110

**Media Bridge kit contents**

- user manual
- Media Bridge Module
- Media Bridge Connector

**Dip switch setting**



Car configuration switches

**emulation modes**

- SAT** Use on radios with SAT button for best experience. Must be selected to support external SiriusConnect tuner. Available on North American radios.
- CDC** Use to retain factory Sirius/XM module, or on radios with integrated satellite tuner. Also for radios that do not support SAT mode. External CDC (trunk, or glove box) must be disconnected.
- MP3** Use with late model navigation radios where factory Sirius/XM module is present (integrated) and CDC emulation is not supported (i.e. no text).
- MD** Use with early model year radios with external CD changer. MD text is only supported on a selected few radios, typically navigation models.

**Basic operation**

1. Press **SAT** (for SAT emulation) or **DISC** (for CDC/MD/MP3 emulation) to select Media Bridge.
2. Use the **SEEK** / **TRACK** / **TUNE** within the first 5 seconds to cycle between USB iPod/Memory > AUX > factory SAT > Sirius while in PRESET/DISC 1

You may press PRESET/DISC 2 to set charge time after ignition off (for iPod).

You may press PRESET/DISC 3 to change volume.

You may press PRESET/DISC 4 to set up scrolling text option.

You may press PRESET/DISC 5 to set up radio line display type.

You may press PRESET/DISC 6 to view Media Bridge firmware version.

Although the audio from the selected source is active, you must wait for 5 seconds before any button press would apply to the selected mode. Button presses during the first 5 seconds will change options as described above.

**Note:** Changing the hold switch on iPod to ON/OFF must be done **prior** to connecting the dock cable.

iPod hold ON	Radio control	iPod control
	✓	✗


Before connecting the iPod to the Media Bridge module, turn the hold switch **ON** to fully control and browse the songs from factory radio. The iPod is locked in this state.

iPod hold OFF	Radio control	iPod control
	limited	✓


Before connecting the iPod to the Media Bridge module, turn the hold switch **OFF** to fully control and browse the songs from iPod. The factory radio control and browsing capabilities are limited.

**Installation**

1. VERIFY COMPATIBILITY
2. DISCONNECT BATTERY




3. REMOVE RADIO FROM CAR




4. INSTALL MEDIA BRIDGE CABLE




5. ROUTE KIT TO GLOVEBOX OR OTHER ACCESSIBLE LOCATION




6. CONNECT BATTERY & TEST



7. COMPLETE INSTALL BY RE-INSTALLING RADIO




**Connection diagram**

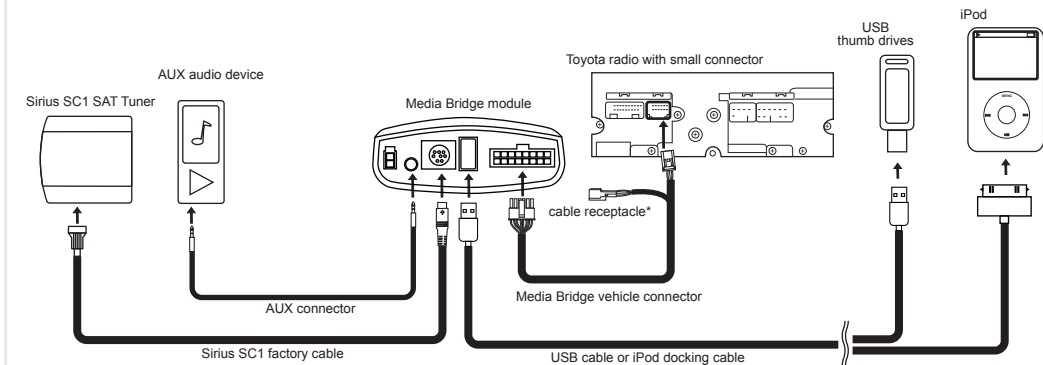

\* If factory harness present, connect to receptacle


**Selecting Media Bridge as an audio source**

**MP3 emulation**

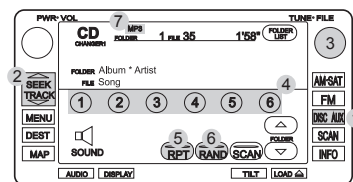


- 1 Media Bridge source selector
- 2 Press to change Track.
- 3 Turn to change Track.
- 4 Press to select DISC numbers 1 - 6 (modes/folders).
- 5 Press RPT short to repeat one, long to repeat all.
- 6 Press RAND short to Shuffle Songs, long to Shuffle Albums.
- 7 Source indicator

**CDC/MD emulation (without Navigation)**

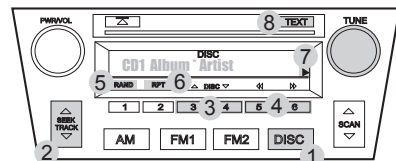


- 1 Media Bridge source selector
- 2 Press to change Track.
- 3 Press to change modes/folders.
- 4 Press to RW or FFW.
- 5 Press RAND short to Shuffle Songs, long to Shuffle Albums.
- 6 Press RPT short to repeat one, long to repeat all.
- 7 Arrow shows if additional information is available. Hold TEXT button for more information.
- 8 Press the TEXT button to cycle between display fields.

**CDC/MD emulation (with Navigation)**

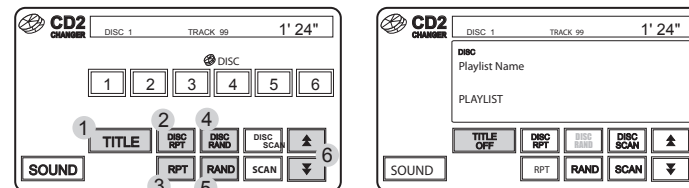


- 1 Press TITLE to toggle between screens.
- 2 Press DISC RPT to Repeat All.
- 3 Press RPT to Repeat One.
- 4 Press DISC RAND to shuffle Albums.
- 5 Press RAND to Shuffle Songs.
- 6 Press to change Track.

**SAT emulation (without Navigation)**

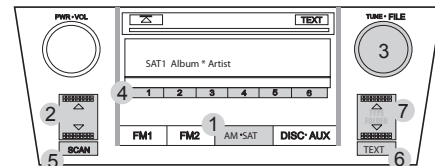

- 1 Media Bridge source selector
- 2 Press to change Track.
- 3 Turn to change Track.
- 4 Use Presets to change modes/folders
- 5 Use Scan to enable Shuffle and Repeat.
- 6 Press the TEXT button to toggle between available TEXT fields.
- 7 Use the TYPE button to engage/disengage RW or FFW

**SAT emulation (with Navigation)**

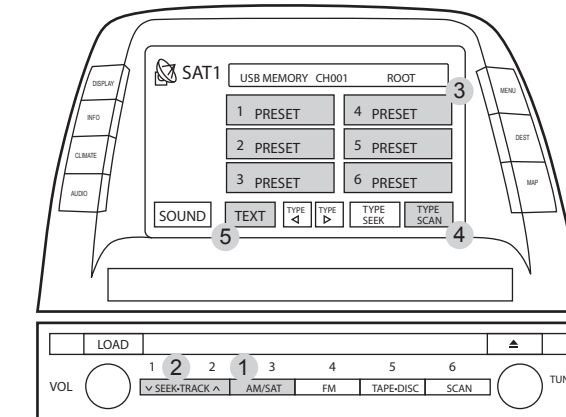


- 1 Media Bridge source selector
- 2 Press to change tracks
- 3 Use PRESETS for different modes.\*
- 4 Press to enable Random
- 5 Press to toggle between text fields

\* Depending on operating mode, preset buttons will have specific labels

**USB memory operation**




- Select PRESET/DISC 1, then use the seek/track/tune buttons to change from song to song.
- Select PRESET/DISC 2-6 to access Folders and use the seek/track/tune buttons to navigate through the folders on your USB flash drive.
- The Media Bridge unit will recognize the first 8 levels of folders, with up to 200 accessible folders within each folder. Only the first 1000 files will be read in each folder, the rest will be ignored.
- Songs play in order of when they were added to the flash drive.
- Use the RANDOM and REPEAT buttons on the radio/display

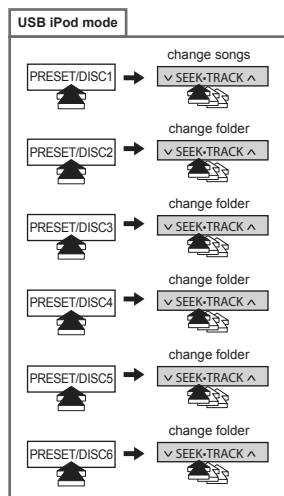



**USB iPod operation (SAT & CDC/MP3/MD emulation)**

- Use PRESET 1-6 (DISC 1-6) to enter specific modes (SONG, PLAYLIST, ARTIST, ALBUM, PODCAST and AUDIO BOOK).
  - Within each mode, use the seek/track/tune buttons to browse the items available
  - Use RND/RPT buttons in CDC/MP3/MD modes and SCAN followed by TRACK +/- and SCAN again to set random and repeat.
- Note:** if the iPod is unlocked for direct control, radio control will be limited to Songs, Playlists, and Albums. Text display will also be limited to show only current song information.
- TIP:** In CDC/MP3/MD emulation, selecting DISCS is done by using the DISC +/- buttons.

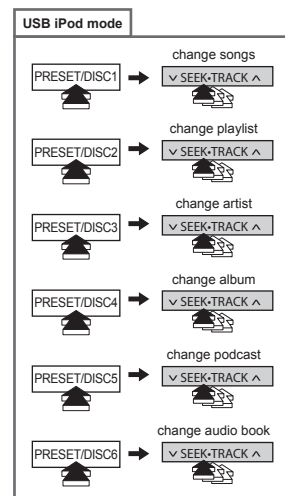

**AUX operation**

- An auxiliary audio device can be connected to the Media Bridge unit through the 1/8" mini-jack
  - Audio device must be controlled manually.
  - Audio level can be adjusted while in auxiliary mode by selecting PRESET 1-4 (DISC 1-4) and using seek/track/tune buttons to increase or decrease levels.
- TIP:** In CDC/MP3/MD emulation, selecting DISCS is done by using the DISC +/- buttons.

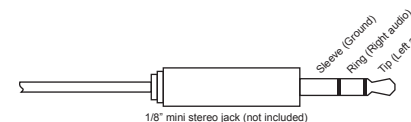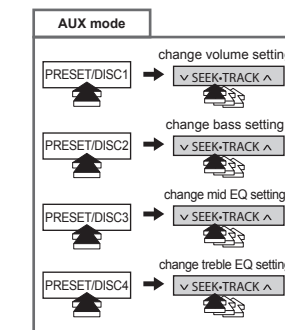


Problem	Solution
No audio from iPod source.	Reset the iPod. Verify proper connection to iPod/interface. Check for compatibility. Older iPod models don't support USB audio.
Why does the radio display show "EMPTY/STOP" and no music plays?	End of a playlist or folder is reached. Please select a new Playlist or Folder using Preset 2/DISC 2.
Cannot select the interface.	Check DIP switch settings. With the ignition OFF disconnect vehicle harness from module for a few seconds and reconnect. Verify that the correct button is used to access the interface. On some cars the AM button is used to access SAT emulation.
Radio/ steering wheel controls do not operate iPod.	Reset iPod and make sure the most recent iPod firmware is installed. Check vehicle user manual on how steering wheel controls work, long presses may toggle alternate function.
Why does category read "PRESELCTD"?	Playback of content selected on the iPod before connected to the interface continues until new content is selected.
What size of USB flash drive should I use?	Large capacities are supported, however up to 4GB is recommended for optimal user experience.

**Troubleshooting**

Problem	Solution
Text is not displaying in selected emulation.	Identify your audio system (refer to Installation tip section) first and set switches accordingly. Note that your vehicle may support more than one mode. Use the TEXT button on radio/display to toggle text fields.
iPod does not charge.	Check all connections. See if iPod charges while connected to computer or wall charger. You may need to reset the iPod.
Music is distorted or sound level is too low with iPod connected.	Make sure all EQ and BASS boost options are turned off on your iPod.
Why is the interface not controlling the iPod/USB drive?	Please make sure that the USB connection is not loose. Make sure that an iPod case is not preventing the dock connector from being fully seated. Disconnect and reconnect the device. If iPod is not responding please try resetting it. USB device must also be FAT 16/32 format and contain supported MP3, WMA or AAC content.
Sirius tuner can't be selected.	Unit must be in SAT emulation. Check for proper connection to the mini DIN 8 receptacle.

**Sirius Connect™ operation (on Satellite radio)**


- Stations can be saved to PRESET 1-6 by holding the desired PRESET button, while listening to the station.
- TEXT button will toggle between the text fields.

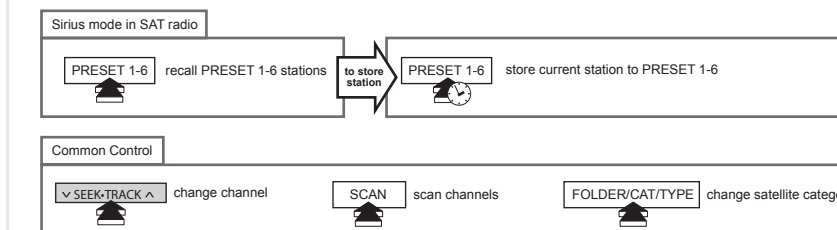

- If a Sirius Connect compatible tuner is not detected, then either a "No Tuner" vehicle message is displayed, or the SIRIUS option will not be selectable. Please refer to the factory manual of your radio system about operating the Satellite mode.
- Go to Channel 000 to view the Sirius Tuner ID for activation. The 12 digit ID is displayed in two halves as SID "123456-" followed by "-789ABC".

**Firmware update**

- STEP 1: Disconnect the Media Bridge module from the vehicle.
- STEP 2: Download and install necessary software from [www.diceelectronics.com](http://www.diceelectronics.com)
- STEP 3: Open software to follow instructions for updating Media Bridge unit.
- STEP 4: Plug in Media Bridge via mini USB cable and update.
- STEP 5: Disconnect and reinstall the unit into the vehicle.



Mini USB port for software update

**Disclaimer and warranty**

**Important disclaimer, please read!**  
 Unauthorized reproduction or reverse engineering is strictly prohibited! Intellectual property included is distributed under specific license agreement with respective owners and is licensed only, not sold. No warranty, explicit or implied, is stated. Neither DICE Electronics, LLC., nor any of its agents, distributors, dealers or vendors shall be liable for damages.  
 IN NO EVENT SHALL DICE ELECTRONICS' LIABILITY EXCEED THE PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, ITS ACCOMPANYING SOFTWARE OR ITS DOCUMENTATION.

**Warranty and Support**  
 Products carry a 90 day limited warranty that protects you from defects in material and workmanship of products sold by DICE Electronics, or its authorized agents, distributors and dealers. The warranty period begins the day a product is purchased by the end user. Products found to be defective during the warranty period will either be repaired or replaced by DICE Electronics at no charge unless warranty is void. Unauthorized attempt of repair or alteration of the product in any way immediately voids this warranty. Warranty does not extend to cosmetics or finish. A DICE product specialist must determine that defect is present in the product and issue an RMA. Be sure that all wiring is connected as described in the user manual and all related equipment is functioning properly. DICE Electronics disclaims any liability for other incurred damages resulting from product defects. Any expenses in the removal and reinstallation of products are not covered by this warranty. If experience any problems or need help, please contact your local dealer or call 888-342-3999, or visit our support site at <http://www.diceelectronics.com/support>.

**Installation notes:**

Installed by:	Illustration: 
Installed date:	
Other notes:	

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>