

## **AQ1000 / AQ2000**

# ALTERNATING PRESSURE BUBBLE PAD AND PUMP SYSTEM



### **USER MANUAL**

Important: Do not operate the Mattress System without first reading and understanding this manual! Save this manual for future use.

The latest version of this manual can be found online at www.grahamfield.com.

AQ1000-INS-LAB-RevC11

#### **CONTENTS**

INTRODUCTION	
INTENDED USE OF THIS DEVICE	3
CONTRAINDICATION	3
DANGER	
WARNING	
NOTICE	
EQUIPMENT SYMBOLS	6
PRODUCT DESCRIPTION	7
BUBBLE PAD AND PUMP SYSTEM	
PUMP	
FRONT PANEL	
AQ1000	
AQ2000	
INSTALLATION	
UNPACKING	
PUMP AND BUBBLE PAD INSTALLATION	9
OPERATION	11
AQ2000 ONLY: PRESSURE ADJUSTMENT	
QUICK DISCONNECT	
CPR FUNCTION	
MAINTENANCE	40
MAINTENANCE	
CLEANING	
PUMP	
BUBBLE PAD	
GENERAL MAINTENANCE	
FUSE REPLACEMENT (220V SYSTEM ONLY)	
STORAGE	13
SPECIFICATIONS	14
WARRANTY	15

Graham-Field and Lumex are registered trademarks of GF Health Products, Inc.

GF Health Products, Inc. is not responsible for typographical errors. Packaging, warranties, specifications and products are subject to change without notice.

#### INTRODUCTION

Use this manual for setup and operation of the Lumex AQ1000 / AQ2000 Alternating Pressure Pad and Pump System. Read all instructions before using the pad and pump system. Save this manual for future reference.

#### **INTENDED USE OF THIS DEVICE**

The intended use of the Alternating Pressure Pad and Pump System, in either a homecare or long-term care setting, is the treatment of pressure ulcers while optimizing user comfort, and pain management as prescribed by a physician.

#### Contraindication

⚠ WARNING: DO NOT use this product in the presence of flammable anesthesia. There is a possible fire hazard when this product is used with certain oxygen delivery equipment.

Use nasal cannula, face mask, or 1/2 length oxygen tent to deliver oxygen in the presence of this product.

DO NOT use a full length oxygen tent that extends past the top surface of the mattress with this product.

#### **IMPORTANT SAFETY PRECAUTIONS**

The safety statements presented in this chapter refer to the basic safety information that should be observed by those using the Alternating Pressure Pad and Pump System. There are additional safety statements in other chapters or sections, which may be the same as or similar to the following, or specific to the operations.

- ▲ NOTICE: Indicates a potential hazard or unsafe practice that, if not avoided, could result in product or property damage.

Info: Provides application recommendations or other useful information to ensure that you get the most from your product.

#### **DANGER**

#### To reduce the risk of electrocution:

- **⚠ DANGER:** Do not use this product while bathing.

#### **WARNING**

### To reduce the risk of burns, electrocution, fire, or personal injury:

- **⚠ WARNING:** Never operate this product if
  - a) it has a damaged cord or plug.
  - b) it is not working properly.
  - c) it has been dropped or damaged.
  - d) it has been dropped into water.

Return the product to your Graham-Field equipment provider.

- **⚠WARNING:** Keep the cord away from heated surfaces.

#### **NOTICE**


▲ NOTICE: The pump can be used only with the accompanying bubble pad. Do not use it for any other purpose.

#### **EQUIPMENT SYMBOLS**


Ţ	Attention! Consult accompanying documents (this manual)
χ	"BF"symbol: Indicates that this product is in accordance with the degree of protection against electric shock for type BF equipment
	Grounding terminal
	Class II (for UL only)
X	Disposal of Electrical & Electronic Equipment (WEEE): Do not treat this product as household waste. For more detailed information with regard to returning and recycling this product, please consult your local city office, household waste disposal service, or Graham-Field equipment provider.

The system has been tested and successfully approved with the following standards:			
U.S.	UL 1431		
Europe	(€	EN 60601-1, EN 60601-1-2, EN 55011 Class B, EN 61000-3-2, EN 61000-3-3, IEC 801-2, IEC 801-3, IEC 801-4, IEC 801-5	

## PRODUCT DESCRIPTION BUBBLE PAD AND PUMP SYSTEM

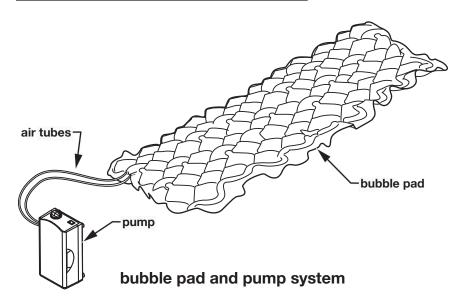


#### **PUMP**

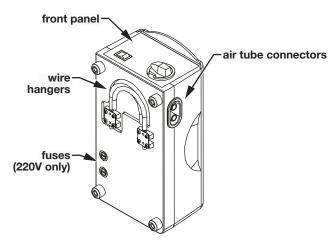

pump (AQ2000 shown)


#### **FRONT PANEL**





AQ1000 pump front panel

#### **AQ2000**

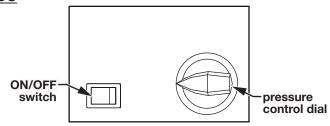

AQ2000 pump front panel

**Front panel pressure control dial (AQ2000 only)**: The pressure control dial controls the air pressure output. To increase pressure, turn the dial clockwise. To decrease pressure, turn the dial counter-clockwise.


#### **INSTALLATION**

#### UNPACKING

- 1. Before unpacking, check for obvious damage to the carton or its contents. If damage is evident, please notify the carrier and your Graham-Field equipment provider.
- 2. Remove all loose packing from the carton.
- 3. Carefully remove all components from the carton.
- 4. Inspect all components. If damage is evident, please notify the carrier and your Graham-Field equipment provider.

#### PUMP AND BUBBLE PAD INSTALLATION

- 1. Remove all sheets, blankets, and pillows from the bed.
- 2. Place the bubble pad on the bed mattress with the tubing at the patient's feet.

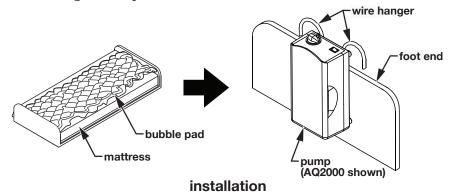

- 3. Fold open the wire hangers on the back of the pump as shown above.
- 4. Use the hangers to hang the pump on the bed's foot end, as shown above; adjust the hangers to place the pump in the most upright position (or place the pump on a flat surface easily accessible to the caregiver and/or doctor).
- ▲ NOTICE: Place the device in a position where the caregiver and/or doctor can access it easily.

- 5. Connect one end of the air tubes to the bubble pad: slide the ends of the air tubes over the connectors on the top of the foot end of the bubble pad.
- 6. Connect the other end of the air tubes to the pump connectors; ensure that the ends of the air tubes are firmly fitted over the bubble pad and pump connectors before continuing.
- ▲ NOTICE: Ensure that the air tubes are not kinked or tucked under the bubble pad or mattress.
- ⚠ WARNING: Do not use a household extension cord if the electrical cord does not reach the power outlet. Use of an improper extension cord could result in fire and electric shock. If an extension cord must be used, use a three conductor cord with ground, properly wired, in good electrical condition, and keep it as short as possible.

- 7. Plug the power cord into a properly grounded electrical outlet.

#### **OPERATION**

- 1. Turn the ON/OFF switch to the ON position. The pump will begin to deliver air into the bubble pad.
- 2. Replace all sheets, blankets, and pillows on the bed.

Info: if the pressure level seems low, check for any leakage in the air tubes or bubble pad. Replace any damaged tubes. If necessary, contact your Graham-Field equipment provider for repair or replacement.

#### **AQ2000 ONLY: PRESSURE ADJUSTMENT**

Adjust the pressure control dial for comfort.

Info: For maximum effectiveness, patient should sink into bubble pad to reduce pressure points. Ensure that patient does not bottom out.

#### **QUICK DISCONNECT**

Pull the power plug from the wall connector to disconnect the device quickly.

#### **CPR FUNCTION**

If CPR must be performed on the patient while the bubble pad is in use, to immediately deflate the bubble pad, pull the air tubes off the bubble pad or pump connectors.

#### **MAINTENANCE**

#### **CLEANING**

Perform the following cleaning procedures before use and as necessary thereafter.

#### **Pump**

Wipe the pump with a clean, damp cloth and mild detergent, and keep it away from dust. Air dry.

- ▲ NOTICE: Do not use phenolic products or corrosive or powdered cleansers to clean the pump.
- ▲ NOTICE: Do not immerse or soak the pump.

#### **Bubble pad**

Wipe the bubble pad with a clean, damp cloth and mild detergent. The bubble pad may also be cleaned using a 10% solution of sodium hypochlorite (bleach) diluted in water. Air dry all parts thoroughly before use.

- ▲ NOTICE: Do not use phenolic products to clean the bubble pad.
- ▲ NOTICE: After cleaning, air dry the bubble pad without direct exposure to sunlight.


#### **GENERAL MAINTENANCE**

- 1. Check main power cord for abrasion or excessive wear.
- Check bubble pad for signs of wear or damage. Ensure air tubes are firmly secured to bubble pad and pump connectors.
- Check the air tubes for kinks or breaks. For replacement, please contact your GF equipment provider.

#### Fuse replacement (220V system only)

tool needed: small screwdriver

1. If you suspect a blown fuse, disconnect the plug from the wall outlet immediately.

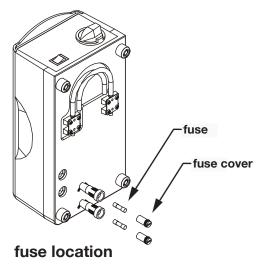

- 2. Use a small screwdriver to remove the cover of the fuse holder (fuse locations are shown in picture above).
- 3. Insert a new fuse of the correct rating (T1A/250V).
- 4. Replace the fuse holder cover. Ensure that fuse holder cover is securely installed.

#### **STORAGE**

- 1. Fold the bubble pad loosely.
- 2. Store bubble pad and pump in a dust-free environment with no exposure to direct sunlight.

#### **SPECIFICATIONS**

Model	AQ1000 (Standard)	AQ2000 (Deluxe)	
Power Supply	120V: 120V AC, 60 Hz, 1A		
	220V: 230VAC, 50 Hz, 7W		
Fuse Rating	120V: N/A		
	220V: T1A, 250V		
Pressure	1.9 psi (13.10 kPa)	1.0 - 2.0 psi (6.89-13.79 kPa)	
Air Output	120V: 4.5 LPM	120V: 4-5 LPM	
	220V: 5.0 LPM	220V: 5-6 LPM	
Cycle Time	120V: 5 min.		
	220V: 6 min.		
Power Cord Length	10 ft. (304.8 cm)		
Pump Unit Size	8.5 x 4.25 x 3.62 in. (21.59 x 10.80 x 9.19 cm)	9.75 x 5.12 x 3.88 in. (24.77 x 13.00 x 9.86 cm)	
Pump Unit Weight	2.9 lb. (6.38 kg)	3.5 lb. (7.7 kg)	
Bubble pad Size, Inflated	78 x 34 x 2.5 in. (198.12 x 86.36 x 6.35 cm)	76 x 34 x 2.5 in. (193.04 x 86.36 x 6.35 cm)	
Weight Capacity	275 lb. (125 kg)		
Bubble pad Material	14 GA anti-bacterial, flame-retardant vinyl		
Tubing	2 each: 5 ft. (152.4 cm) long clear PVC		
Replacement Parts	Contact your Graham-Field dealer or visit Graham Field's website, www.grahamfield.com		

Info: Specifications are subject to change without notice.

#### WARRANTY

GF Health Products, Inc. warrants the Lumex AQ1000 / AQ2000 Alternating Pressure Pad and Pump System for defects in workmanship and materials for the terms listed below.

Pump: one year Pad: 90 days

If a product is deemed to be under warranty, GF Health Products, Inc. shall provide, at its option, (1) replacement of any defective part or product or (2) a credit of the original selling price made to GF Health Products, Inc.'s initial customer. The warranty does not include any labor charges incurred in replacement part(s) installation or any associated freight or shipping charges to GF Health Products, Inc.

The warranties contained herein contain all the representations and warranties with respect to the subject matter of this document, and supersede all prior negotiations, agreements and understandings with respect thereto. The recipient of this document hereby acknowledges and represents that it has not relied on any representation, assertion, guarantee, warranty, collateral contract or other assurance, except those set out in this document.

#### **USA**, Corporate Headquarters:

GF Health Products, Inc. 2935 Northeast Parkway Atlanta, Georgia 30360

telephone: 770-368-4700 fax: 770-368-2386



www.grahamfield.com

AQ1000-INS-LAB-RevC11 © 2011, GF Health Products, Inc.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com