

Metris Widespread Lavatory Faucet	31063XX1
Metris Widespread Bidet Faucet	31263XX1
Talis S Widespread Lavatory Faucet	32310XX1
Focus Widespread Lavatory Faucet	31730XX1


Product Information

Requires 1/2" supply lin Max. mounting surface to Hole sizes in mounting s	thickness	1 1/8"
Spout	1 3/8"	
Valves	1 1/4"	
Max. incoming water pr	essure	145 PSI
Recommended incoming	y water pressure	22 - 72 PSI
Max. incoming hot wate	er temp.	176°F*
Recommended incoming hot water temp.		120° - 140°F
Max. flow rate – lavatory faucets		2.2 gpm
Max. flow rate – bidet faucet		2.2 gpm
		01


The bidet faucet is not suitable for use on vertical spray bidets.

This faucet may be used with a continuous flow water heater if the flow pressure is at least 20 PSI. For best results, Hansgrohe recommends that this faucet be installed by a licensed, professional plumber.

*Please know and follow all applicable local codes when setting the temperature on the water heater.

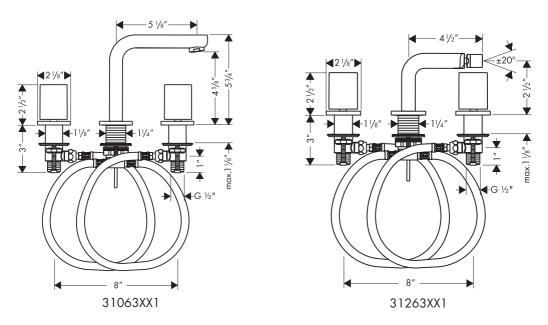

Download from Www.Somanuals.com. All Manuals Search And Download.

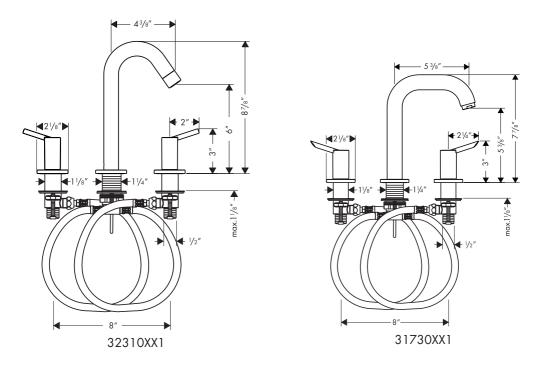


Note:

To prevent shipping damage, the spout is attached to the spout escutcheon with two adhesive strips. These strips must be removed before the spout is installed.

Loosen the spout screw with a 2.5 mm Allen wrench.Pull the spout away from the escutcheon.

Remove the adhesive strips.


Reassemble the spout assembly so that the hole for the pull rod is at the rear of the spout.

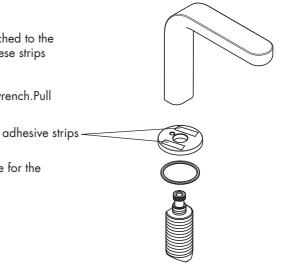

Installation

Remove the valve mounting nuts from the valves.


From below the mounting surface, push the valves up into the holes. Install the mounting nuts on the valves.

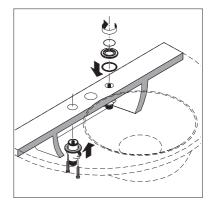


Tighten the tensioning screws.

Place the handles over the valve mounting nuts. Tighten the handles by rotating the escutcheons clockwise.


The handles should be parallel to the basin. If necessary, loosen the tensioning screws and rotate the valve slightly.



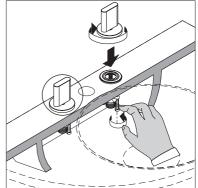

Install the spout. Rotate the spout escutcheon if necessary, so that the hole for the pull rod is at the rear.

Tighten the mounting nut. Tighten the tensioning screws.

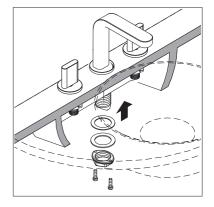

Screw the connecting hoses into the spout tee.


Slide the 3/8" compression nuts and ferrules over the ends of the hoses.


Connect the hoses to the valve outlets. Use two wrenches so that the hoses do not twist or become loosened from the spout tee.


Install the supply lines (not included).

Install the drain.


Turn on the water and check all connections for leaks.

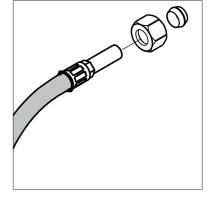

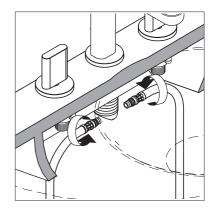

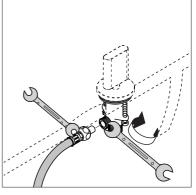


Install the pop-up drain

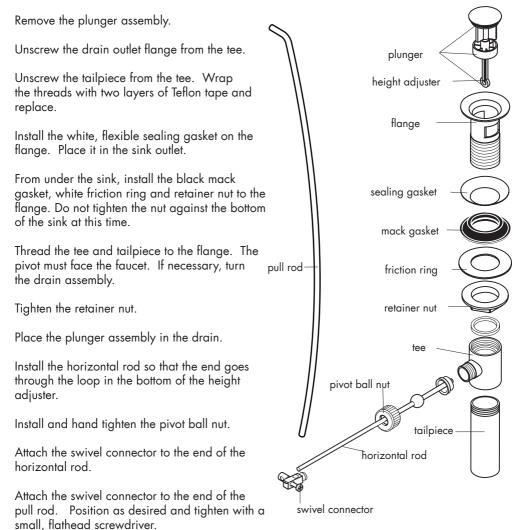


User Instructions


Turn the right handle forward (clockwise) to turn the cold water on. Turn the handle back (counterclockwise) to turn the cold water off.

Turn the left handle forward (counter-clockwise) to turn the hot water on. Turn it back (clockwise) to turn the hot water off.

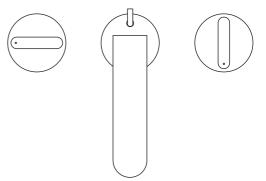

Replacement Parts

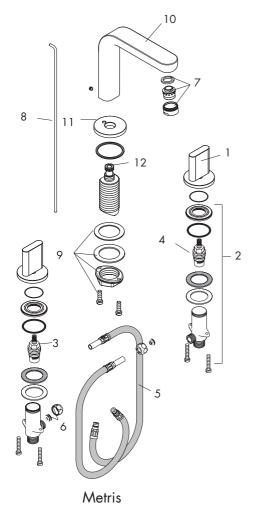




1	handle - hot	97503XX0
	handle - cold	97502XX0
2	valve set	97960001
3	hot cartridge	94009000
4	cold cartridge	94008000
5	connection hose	94071001
6	3/8" compression ftg	88513000
7	aerator	13085000
8	pull rod	96657XX0
9	spout mounting kit	13961000
10	spout	97504XX0
11	spout escutcheon	97505XX0
12	o-ring 11 x 2	98127000
13	bidet spout	97506XX0
14	aerator	97360XX0
15	ball joint	97362XX0
16	aerator	94010XX0
17	handle, hot	95337XX0
18	handle, cold	95338XX0
19	spout	95339XX0

XX = finish

00 = chrome

82 = brushed nickel

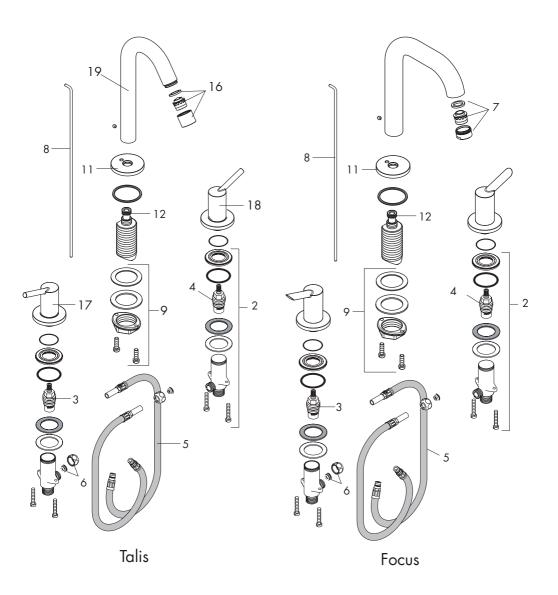

Cleaning Recommendation for Hansgrohe Products

Modern lavatory faucets, kitchen faucets, and showers consist of very different materials to comply with the needs of the market with regard to design and functionality. To avoid damage and returns, it is necessary to consider certain criteria when cleaning.

Cleaning Materials for Faucets and Showers

Acids are a necessary ingredient of cleaning materials for removing lime, however please pay attention to the following points when cleaning faucets and showers:

- Only use cleaning materials which are explicitly intended for this type of application.
- Never use cleaning materials which contain hydrochloric, formic, phosphoric, or acetic acid, as they cause considerable damage.
- Never mix one cleaning material with another.
- Never use cleaning materials or appliances with an abrasive effect, such as unsuitable cleaning powders, sponge pads, or micro fiber cloths.

Cleaning Instructions for Faucets and Showers

Please follow the cleaning material manufacturer's instructions. In addition, pay attention to the following points:

- Clean the faucets and showers as and when required
- Use the amount of cleaning product and the amount of time recommended by the manufacturer. Do not leave the cleaner
 on the fixture longer than necessary.
- Regular cleaning can prevent calcification.
- When using spray cleaners, spray first onto a soft cloth or sponge. Never spray directly onto the faucet as droplets can
 enter openings and gaps and cause damage.
- After cleaning, rinse thoroughly with clean water to remove any cleaner residue.

Important

Residues of liquid soaps, shampoos, and shower foams can also cause damage, so rinse with clean water after using.

Please note: if the surface is already damaged, the effect of cleaning materials will cause further damage.

Components with damaged surfaces must be replaced or injury could result.

Damage caused by improper treatment is not covered under the warranty.

Limited Lifetime Consumer Warranty

This product has been manufactured and tested to the highest quality standards by Hansgrohe, Inc. ("Hansgrohe"). This warranty is limited to Hansgrohe products which are purchased by a consumer in the United States after March 1, 1996, and installed in either the United States or Canada.

WHO IS COVERED BY THE WARRANTY

This warranty extends to the original consumer purchaser only. This warranty is non-transferable.

WHAT IS COVERED BY THE WARRANTY

This warranty covers only your Hansgrohe manufactured product. Hansgrohe warrants this product against defects in material or workmanship as follows: Hansgrohe will repair at no charge for parts only or, at its option, replace any product or part of the product that proves defective because of improper workmanship and/or material, under normal installation, use, service and maintenance. If Hansgrohe is unable to provide a replacement and repair is not practical or cannot be timely made, Hansgrohe may elect to refund the purchase price in exchange for the return of the product.

LENGTH OF WARRANTY

Replacement or repaired parts of products will be covered for the term of this warranty as stated in the following two sentences. If you are a consumer who purchased the product for use primarily for personal, family, or household purposes, this warranty extends for as long as you own the product and the home in which the product is originally installed. If you purchased the product for use primarily for any other purpose, including, without limitation, a commercial purpose, this warranty extends only (i) for 1 year, with respect to Hansgrohe and Commercial products, and (ii) for 5 years, with respect to AXOR products.

THIS WARRANTY DOES NOT COVER, AND HANSGROHE WILL NOT PAY FOR:

- A. Conditions, malfunctions or damage not resulting from defects in material or workmanship.
- B. Conditions, malfunctions or damage resulting from (1) normal wear and tear, improper installation, improper maintenance, misuse, abuse, negligence, accident or alteration, or (2) the use of abrasive or caustic cleaning agents or "norrinse" cleaning products, or the use of the product in any manner contrary to the product instructions. (3) Conditions in the home such as excessive water pressure or corrosion.
- C. Labor or other expenses for the disconnection, deinstallation, or return of the product for warranty service, or for installation or reinstallation of the product (including but not limited to proper packaging and shipping costs), or for installation or reinstallation of the product.
- D. Accessories, connected materials and products, or related products not manufactured by Hansgrohe.

TO OBTAIN WARRANTY PARTS OR INFORMATION

Contact your Hansgrohe retailer, or contact Technical Service at:

Hansgrohe Inc. 1492 Bluegrass Lakes Parkway Alpharetta GA 30004 Toll-free (800) 334-0455.

In requesting warranty service, you will need to provide

- 1. The sales receipt or other evidence of the date and place of purchase.
- 2. A description of the problem.
- Delivery of the product or the defective part, postage prepaid and carefully packed and insured, to Hansgrohe Inc. 1492 Bluegrass Lakes Parkway, Alpharetta, Georgia 30004, Attention: Technical Service, if required by Hansgrohe.

When warranty service is completed, any repaired or replacement product or part will be returned to you postage prepaid.

EXCLUSIONS AND LIMITATIONS

REPAIR OR REPLACEMENT (OR, IN LIMITED CIRCUMSTANCES, REFUND OF THE PURCHASE PRICE) AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. HANSGROHE NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO CREATE FOR IT ANY OBLIGATION OR LIABILITY IN CONNECTION WITH THIS PRODUCT.

HANSGROHE SHALL NOT BE LIABLE TO PURCHASER OR ANY PERSON FOR ANY INCIDENTAL, SPECIAL, OR CONSE-QUENTIAL DAMAGES, ARISING OUT OF BREACH OF THIS WARRANTY OR ANY IMPLIED WARRANTY (INCLUDING MERCHANTABILITY).

Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from State to State. You may be required by law to give us a reasonable opportunity to correct or cure any failure to comply before you can bring any action in court against us under the Magnuson-Moss Warranty Act.

PRODUCT INSTRUCTIONS AND QUESTIONS

Upon purchase or prior to installation, please carefully inspect your Hansgrohe product for any damage or visible defect. Prior to installing, always carefully study the enclosed instructions on the proper installation and the care and maintenance of the product. If you have questions at any time about the use, installation, or performance of your Hansgrohe product, or this warranty, please call or write to us or call us toll-free at 800 334 0455.

hansgrohe

Hansgrohe, Inc. • 1490 Bluegrass Lakes Parkway • Alpharetta, GA 30004 Tel. 770-360-9880 • Fax 770-360-9887

www.hansgrohe-usa.com

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com