SONY

4-449-951-**22**(1)

Personal Audio System

Operating Instructions
Mode d'emploi

* 4 4 9 9 5 1 2 2 * (1)

©2013 Sony Corporation Printed in China

SRS-BTX300

English **Personal Audio System**

Before operating the system, please read this guide thoroughly and retain it for future reference.

Owner's Record

The serial number is located on the inside of the side stand. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. SRS-BTX300

Serial No._____

For customers in the USA
Please register this product on line at http://www.sony.com/productregistration
Proper registration will enable us to send you periodic updates about new products, services and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the product needs adjustment or modification. Thank you.

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

As the main plug of AC adaptor is used to disconnect the AC adaptor from the mains, connect it to an easily accessible AC outlet. Should you notice an abnormality in it, disconnect it from the AC outlet immediately.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

The nameplate and important information concerning safety are located on the bottom exterior of the main unit and on the surface of the AC adaptor.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This equipment must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules.
This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Important Safety Instructions

1) Read these instructions.
2) Keep these instructions.
3) Heed all warnings.
4) Follow all instructions.
5) Do not use this apparatus near water.
6) Clean only with dry cloth.
7) Do not block any ventilation openings.
   Install in accordance with the manufacturer's instructions.
8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11) Only use attachments/accessories specified by the manufacturer.
12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13) Unplug this apparatus during lightning storms or when unused for long periods of time.
14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING

- Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.
- Dispose of used battery promptly, according to local environmental laws and guidelines in force. Keep away from children.

For the State of California, USA only

Perchlorate Material - special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate
Perchlorate Material : Lithium battery contains perchlorate.

On Copyrights and Licenses
The *Bluetooth*® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license.
The N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and in other countries.
Android is a trademark of Google Inc.
iPhone is a trademark of Apple Inc., registered in the U.S. and other countries.
Other trademarks and trade names are those of their respective owners.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help.

For the customers in the USA and Canada
RECYCLING LITHIUM-ION BATTERIES

Lithium-Ion batteries are recyclable.

You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.

For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit http://www.rbrc.org/

Caution: Do not handle damaged or leaking Lithium-Ion batteries.

Precautions

Notes when using with a mobile phone
- For details on operation of your mobile phone when receiving a telephone call while transmitting the sound using the *Bluetooth* connection, refer to the operating instructions supplied with the mobile phone.

On safety

Notes on the AC adaptor
- When connecting or disconnecting the AC adaptor, turn off the system beforehand. Otherwise, it may cause malfunction.
- Use only the supplied AC adaptor. To avoid damaging the system, do not use any other AC adaptor.

Polarity of the plug

- Plug the AC adaptor into a nearby wall outlet (mains). In the case of a problem, unplug it from the wall outlet (mains) immediately.
- Do not install the AC adaptor in a confined space, such as a bookcase or built-in cabinet.
- To reduce the risk of fire or electric shock, do not expose the AC adaptor to dripping or splashing, and do not place objects filled with liquids, such as vases, on the AC adaptor.

On placement
- Do not set the speaker in an inclined position.
- Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.

On operation
- Do not insert any small objects, etc., into the jacks or ventilation hole on the rear of the system. The system may short out or malfunction.

On cleaning
- Do not use alcohol, benzine, or thinner to clean the cabinet.

Others
- If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

What is *Bluetooth* Wireless Technology?

Bluetooth wireless technology is a short-range wireless technology that enables wireless data communication between digital devices, such as a computer and digital camera. *Bluetooth* wireless technology operates within a range of about 10 m.
Connecting two devices as necessary is common, but some devices can be connected to multiple devices at the same time.
You do not need to use a cable for connection, nor is it necessary for the devices to face one another, such is the case with infrared technology. For example, you can use such a device in a bag or pocket.
Bluetooth standard is an international standard supported by thousands of companies all over the world, and employed by various companies worldwide.

Communication system and compatible *Bluetooth* profiles of the system

Profile is standardisation of the function for each *Bluetooth* device specification. The system supports the following *Bluetooth* version and profiles:
Communication System:
Bluetooth Specification version 3.0
Compatible *Bluetooth* Profiles:
– A2DP (Advanced Audio Distribution Profile): Transmitting or receiving audio content of high-quality.
– AVRCP (Audio Video Remote Control Profile): Controlling the volume.
– HSP (Headset Profile): Talking on the phone/Operating the phone.
– HFP (Hands-free Profile): Talking on the phone/Operating the phone by hands-free.

Maximum communication range

Use *Bluetooth* devices within 10 m (line of sight) of the system. Maximum communication range may shorten under the following conditions.
– There is an obstacle such as a person, metal, or wall between the system and *Bluetooth* device.
– A wireless LAN device is in use near the system.
– A microwave oven is in use near the system.
– A device that generates electromagnetic radiation is in use near the system.

Interference from other devices

Because *Bluetooth* devices and wireless LAN (IEEE802.11b/g) use the same frequency, microwave interference may occur and resulting in communication speed deterioration, noise, or invalid connection if the system is used near a wireless LAN device. In such a case, perform the following.
– Use the system at least 10 m away from the wireless LAN device.
– If the system is used within 10 m of a wireless LAN device, turn off the wireless LAN device.

Interference to other devices

Microwaves emitting from a *Bluetooth* device may affect the operation of electronic medical devices. Turn off the system and other *Bluetooth* devices in the following locations, as it may cause an accident.
– where inflammable gas is present, in a hospital, train, airplane, or a gas station
– near automatic doors or a fire alarm

Notes
- To be able to use the *Bluetooth* function, the *Bluetooth* device to be connected requires the same profile as the system's.
  Note also that even if the same profile exists, devices may vary in function depending on their specifications.
- Due to the characteristic of *Bluetooth* wireless technology, the sound played on the system is slightly delayed from the sound played on the *Bluetooth* device during talking on the telephone or listening to the music.
- This system supports security capabilities that comply with the *Bluetooth* standard to provide a secure connection when the *Bluetooth* wireless technology is used, but security may not be enough depending on the setting. Be careful when communicating using *Bluetooth* wireless technology.
- We do not take any responsibility for the leakage of information during *Bluetooth* communication.
- A device featuring the *Bluetooth* function is required to conform to the *Bluetooth* standard specified by Bluetooth SIG, and be authenticated. Even if the connected device conforms to the above mentioned *Bluetooth* standard, some devices may not be connected or work correctly, depending on the features or specifications of the device.
- Noise or sound skips may occur depending on the *Bluetooth* device connected with the system, the communication environment or the usage environment.

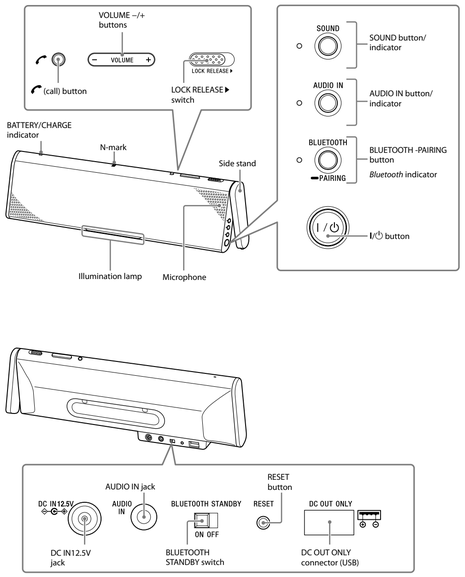

Function of Parts

BATTERY/CHARGE indicator
Lights up, flashes or turns off depending on the status of the system.
For details, see the following section, "Indications of BATTERY/CHARGE indicator."

N-mark
Touch to make *Bluetooth* connection with an NFC compatible smartphone.

(call) button
Press to call or operate during a call.

VOLUME –/+ buttons
Adjusts the volume.

LOCK RELEASE ▶ switch
Use for opening and closing the side stand.

Side stand
Open to use the system.

Illumination lamp
Lights up in a variety of colors depending on the status of the system. For details, see the following section, "Indications of Illumination lamp."

Microphone
Use during a call.

DC IN 12.5V jack
Connects the supplied AC adaptor.

AUDIO IN jack
Connects to the headphone jack of a portable audio device, computer, etc., using a connecting cord (not supplied).

BLUETOOTH STANDBY switch
Turns on and off the *Bluetooth* standby mode.

RESET button
Resets the system.

DC OUT ONLY connector (USB)
Charges devices, such as your smartphone, etc. by connecting to the DC OUT ONLY connector (USB connector).

SOUND button
Press to select a sound effect.

SOUND indicator
Lights up, according to the sound effect setting.

AUDIO IN button
Press to listen to sound from a device connected by a connecting cord (not supplied).

AUDIO IN indicator (amber)
Lights up in AUDIO IN mode.

BLUETOOTH-PAIRING button
Press to pair with a *Bluetooth* device.

***Bluetooth* indicator (blue)**
Lights up, flashes or turns off depending on the communication status.
For details, see the following section, "Indications of the *Bluetooth* function."

I/⏻ button
Turns the system on/off.

Indications of BATTERY/CHARGE indicator (built-in lithium-ion battery)

Status	BATTERY/CHARGE indicator
System turned on	Lights up (green) (battery operation only)
Battery requires charging	Flashes (green)
Charging battery	Lights up (amber)
Charging complete	Off

Indications of Illumination lamp

Status	Illumination lamp
AUDIO IN mode	Lights up (white)
Searching for a device	Lights up (white)
Connecting to *Bluetooth* device	Lights up (blue)
Pressing VOLUME–/+ buttons	Flashes once (white)
When the volume hits the maximum or minimum	Flashes three times (white)

Tip
- To turn the illumination on/off, hold down the BLUETOOTH-PAIRING button, then press and hold the I/⏻ button.

Indications of the *Bluetooth* function

Status	*Bluetooth* indicator (blue)
Pairing with a device	Flashes quickly
Searching for a device	Flashes
Connected to a device	Lights up
Bluetooth standby mode	Flashes slowly

Opening the Side Stand

Open the side stand and operate the buttons inside. The side stand also functions as a support while using the system.
Slide the LOCK RELEASE ▶ switch in the direction of the arrow (illustration) to open the side stand.

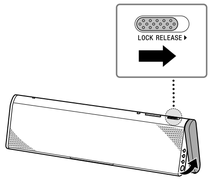

To close the side stand

Close the side stand when you carry the system.
Slide the LOCK RELEASE ▶ switch in the direction shown by the arrow above, then close the side stand by hand.
The system automatically turns off when the side stand is closed.

Turning the System on and off/Charging the system

This system can operate by AC adaptor or built-in lithium-ion battery (rechargeable). Charge the battery before using the system for the first time.

1 Connect the supplied AC adaptor.
The BATTERY/CHARGE indicator (amber) lights up when the battery is being charged, and turns off when charging is complete. It takes approximately 4 hours to charge the battery.

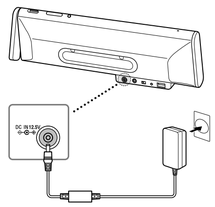

2 Press the I/⏻ button.

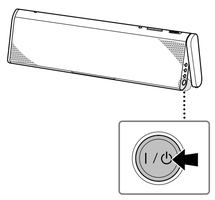

Tip
- You can operate the system by battery instead of the AC adaptor by charging the system before use.

Notes
- When the BATTERY/CHARGE indicator flashes as below, charge the system. In these cases, you cannot charge devices via the DC OUT ONLY connector.
  – Flashes (green) (Battery power is low).
  – Flashes (amber), then turns off after turning on the system (No battery power remaining).
- When you switch the power source between AC adaptor and battery by connecting/disconnecting the AC adaptor, the system stops sound output for a short while. This is not a malfunction.
- The maximum power output will be lower when the AC adaptor is disconnected.
- In an extremely cold or hot environment, note the following points.
  – When operating by the AC adaptor, charging may complete too quickly, or may not be possible.
  – When operating on battery only, the system may stop after the BATTERY/CHARGE indicator flashes (green) three times.
- Charge the battery at least twice a year.

To reset the system

Press the RESET button on the rear of the system with a pointed object if the buttons on the system do not function.

How to Make Wireless Connection with *Bluetooth* Devices

You can enjoy music and hands-free calling with the system wirelessly by using your device's *Bluetooth* function.
Choose one of the following three connection methods, best suited for the *Bluetooth* device. For details on how to operate your device, refer to the operating instructions supplied with the device.

Pairing with a *Bluetooth* device: see Pattern A

Bluetooth devices need to be "paired" with each other beforehand.

Connecting with a paired device: see Pattern B

To listen to music with a *Bluetooth* device that has been paired, see this pattern.

One touch connection with a smartphone (NFC): see Pattern C

Using an NFC compatible smartphone, you can establish a *Bluetooth* connection by just touching the system with it.

Check the following before operating the system.
- Both the system and the device are placed within 1 m of each other.
- The system is connected to the AC adaptor, or the battery is sufficiently charged.
- The operating instructions supplied with the device are at hand.

Pattern A

Pairing and connecting with a *Bluetooth* device

1 Turn on the system.
The *Bluetooth* indicator (blue) flashes.
If the AUDIO IN indicator (amber) lights up, press the BLUETOOTH-PAIRING button.

2 Set the *Bluetooth* function of the *Bluetooth* device to on.
For details, refer to the operating instructions supplied with the device.

3 Press and hold the BLUETOOTH-PAIRING button on the system until two beeps are heard.
The *Bluetooth* indicator (blue) begins to flash quickly and pairing mode is entered.

Tip
- When the system is turned on first time, the *Bluetooth* indicator (blue) starts flashing quickly.

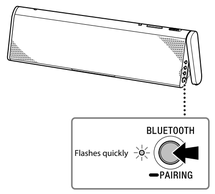

4 Perform the pairing procedure on the *Bluetooth* device to detect the system.

5 Select "SRS-BTX300" shown in the display of the *Bluetooth* device.
If "SRS- BTX300" does not appear on the device's display, repeat from step 2.

Note
- Some devices cannot display a list of detected devices.

6 If Passcode* input is required on the display of the *Bluetooth* device, input "0000."
The *Bluetooth* connection is established and the *Bluetooth* indicator (blue) on the system stays on.
* Passcode may be called "Passkey," "PIN code," "PIN number," or "Password."

Tip
- To pair with other *Bluetooth* devices, repeat steps 2 to 6 for each device.

Notes
- Pairing mode of the system is cancelled after about 5 minutes, and the *Bluetooth* indicator (blue) flashes. If the pairing mode is cancelled while performing this procedure, start over from step 3.
- Passcode of the system is fixed as "0000." The system cannot be paired with a *Bluetooth* device whose Passcode is not "0000."
- Once *Bluetooth* devices are paired, there is no need to pair those devices again. However, in the following case, you will need to perform the pairing procedure again.
  – The system is paired with 9 or more devices.
  The system can be paired with up to 8 *Bluetooth* devices. If a new device is paired after 8 devices have been paired, the device whose latest connection time is the oldest among the 8 paired devices is replaced by the new one.
- More than one device can be paired with the system, but sound will be heard from just one of those devices.

Pattern B

Connecting with a paired *Bluetooth* device

1 Turn on the system.
The *Bluetooth* indicator (blue) flashes.
If the AUDIO IN indicator (amber) lights up, press the BLUETOOTH-PAIRING button.

2 Set the *Bluetooth* function of the *Bluetooth* device to on.

Tip
- In the case of the last-connected *Bluetooth* device, the system tries to re-establish *Bluetooth* connection with it if the device's *Bluetooth* function is on. When *Bluetooth* connection is established, the *Bluetooth* indicator (blue) on the system stays on.

3 Select "SRS-BTX300" shown in the display of the *Bluetooth* device.
If necessary, select a *Bluetooth* profile that the system supports from the following: A2DP, HSP or HFP. For details on each profile, see "What is *Bluetooth* Wireless Technology?"
The *Bluetooth* connection is established and the *Bluetooth* indicator (blue) on the system stays on.

Notes
- This step may not be necessary for some devices.
- If the system cannot connect to the *Bluetooth* device, delete "SRS-BTX300" from the *Bluetooth* device, then perform pairing again.

Bluetooth standby mode

When the *Bluetooth* standby mode is set to ON, the system can be turned on and operated by a *Bluetooth* device.

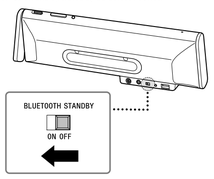

Notes
- The *Bluetooth* standby function will be turned off automatically when the side stand is closed.
- If the system is being powered by battery, even if the system is turned off, battery power will continue to be consumed if the BLUETOOTH STANDBY switch is set to ON.

Pattern C

Connecting with a smartphone by One touch (NFC)

By just touching the system with an NFC compatible smartphone, the system is turned on automatically and then paired and connected with the smartphone.

1 Download and install the app "NFC Easy Connect" on the smartphone.
"NFC Easy Connect" is an original app by Sony for Android phones, and is available at Google Play Store.
Search for "NFC Easy Connect" or scan the following two-dimensional code to download and install the free app.
Communication fees are required to download the app.
The app may not be downloadable in some country/regions.

Tip
- For some smartphones, One touch connection may be available without downloading the app "NFC Easy Connect." In that case, the operation and specifications may be different from the description here. For details, refer to the operating instructions supplied with the smartphone.

By the two-dimensional code:
Use a two-dimensional code reader app.

Compatible smartphones
- Smartphones with the NFC function built-in (OS: Android 2.3.3 or later, excluding Android 3.x)

About NFC

NFC (Near Field Communication) is a technology enabling short-range wireless communication between various devices, such as mobile phones and IC tags. Thanks to the NFC function, data communication can be achieved easily just by touching the relevant symbol or designated location on NFC compatible devices.

2 Start the app "NFC Easy Connect" on the smartphone.
Make sure that the application screen is displayed.

3 Touch the system with the smartphone.
Keep touching the smartphone on the N marked part of the system until the smartphone vibrates.

Smartphone vibrates
(system recognized)

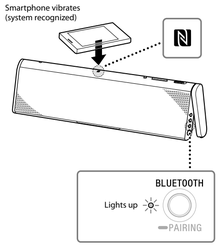

Follow the on-screen instructions to establish the connection.
When the *Bluetooth* connection is established, the *Bluetooth* indicator (blue) stays on.

Tips
- If it is difficult to establish the connection, try the following.
  – Activate the app "NFC Easy Connect" and move the smartphone slightly on the N marked part of the system.
  – If the smartphone is in a case, remove it.
- Touch the system with the smartphone again to disconnect.
- If you have multiple NFC compatible devices, just touch the smartphone to a different device to switch the connection to that device. For example, when your smartphone is connected with NFC compatible headphones, just touch the smartphone to the system to change the *Bluetooth* connection to the system (One touch connection switching).

Listening to Music

You can enjoy music wirelessly, via the *Bluetooth* function built in your devices.

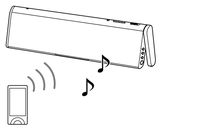

Operations may vary depending on the *Bluetooth* device. Refer also to the operating instructions supplied with your *Bluetooth* device.

1 Make the *Bluetooth* connection between the system and the device.
For details on the *Bluetooth* connection procedure, see "How to Make Wireless Connection with *Bluetooth* Devices." When the *Bluetooth* connection is established, the *Bluetooth* indicator (blue) on the system stays on.

2 Start playback on the *Bluetooth* device, then adjust the volume.
Set the volume of the *Bluetooth* device to a moderate level, and press the VOLUME –/+ buttons on the system.

Auto power off

The system automatically turns off after about 20 minutes when the hands-free is not being used (the system is not connected with a *Bluetooth* device via HFP/HSP), and when no device is being charged via the DC OUT ONLY connector, and when no music is being played.

After use

Do any of the following.
- Set the *Bluetooth* function of the *Bluetooth* device off. For details, refer to the operating instructions supplied with the device.
- Turn off the *Bluetooth* device.
- Turn off the system.
- Touch the system with the smartphone again to disconnect (NFC compatible smartphones only).

Using Hands-free Calling While Listening to Music

You can enjoy hands-free calling via *Bluetooth* connection with a *Bluetooth* mobile phone that has a music function and supports the *Bluetooth* profile A2DP, and HFP or HSP.
If your *Bluetooth* mobile phone supports both HFP and HSP, set to HFP.

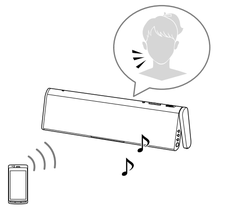

Operations may vary depending on the *Bluetooth* mobile phone. Refer also to the operating instructions supplied with your mobile phone.

1 Make the *Bluetooth* connection between the system and the mobile phone.
For details on the *Bluetooth* connection procedure, see "How to Make Wireless Connection with *Bluetooth* Devices." When the *Bluetooth* connection is established, the *Bluetooth* indicator (blue) on the system stays on.

2 Start playback on the *Bluetooth* mobile phone, then adjust the volume.
Set the volume of the *Bluetooth* mobile phone to a moderate level, and press the VOLUME –/+ buttons on the system.

To call

Operate the *Bluetooth* mobile phone. Check that a dialing tone is heard on the system and talk using the microphone. If no dialing tone is heard, press the (call) button on the system for about 2 seconds to change the call device to the system.

To receive a call

When an incoming call arrives, the playback pauses and a ring tone is heard from the system. Press the (call) button on the system and talk using the microphone.

Tips
- If no ring tone is heard from the system when incoming call arrives, stop playback and press the (call) button to talk.
- You can use the hands-free calling when playback is completed
- During a call, press the VOLUME –/+ buttons on the system to adjust the volume.

Notes
- The sound is output from the left speaker only during a call.
- Use your smartphone at least 50 cm from the system. Noise may result if the system and smartphone are too close.

To end a call

Press the (call) button. If you were listening to music when the call arrived, it will be resumed when the call has finished.

After use

Do any of the following.
- Set the *Bluetooth* function of the *Bluetooth* device off. For details, refer to the operating instructions supplied with the device.
- Turn off the *Bluetooth* device.
- Turn off the system.
- Touch the system with the smartphone again to disconnect (NFC compatible smartphones only).

Unit button functions during a call

Available functions may vary depending on the *Bluetooth* mobile phone, or the profiles supported by the *Bluetooth* mobile phone. Refer to the operating instructions supplied with the *Bluetooth* mobile phone.

Status	(call) button
Standby	• Press once to start voice dial (voice dial compatible mobile phones only). • Press for about 2 seconds to redial the phone number that is dialed last time.
Outgoing call	• Press once to cancel outgoing call. • Press for about 2 seconds to change call device between the system and mobile phone.
Incoming call	• Press once to answer call. • Press for about 2 seconds to reject call.
During call	• Press once to finish call. • Press for about 2 seconds to change call device between the system and mobile phone.

Using Hands-free calling with another *Bluetooth* mobile phone while listening to music

This system is compatible with Multipoint technology, which allows you to enjoy hands-free calling while listening to music from a *Bluetooth*-compatible music player.

- One touch connection (NFC) cannot be used in this procedure.
- Operations may vary depending on the *Bluetooth* device. This type of *Bluetooth* connection may not be established depending on the combination of the *Bluetooth* devices. Refer also to the operating instructions supplied with your *Bluetooth* devices.

1 Make the *Bluetooth* connections between the system and a *Bluetooth* music player via A2DP, and between the system and a *Bluetooth* mobile phone via HFP or HSP.
For details on the *Bluetooth* connection procedure, see "How to Make Wireless Connection with *Bluetooth* Devices." When the *Bluetooth* connection is established, the *Bluetooth* indicator (blue) on the system stays on.

Tips
- To use only the calling function of a *Bluetooth* mobile phone that also has a music function, establish *Bluetooth* connection between the system and the mobile phone via HFP or HSP, not via A2DP.
- Depending on the *Bluetooth* mobile phone, while the *Bluetooth* connection is established via HFP or HSP, the other *Bluetooth* connection via A2DP may also be occupied by the same *Bluetooth* mobile phone. A *Bluetooth* music player cannot be connected with this system in this case.

Note
- To make the same connection with the same devices after turning the system off, follow this procedure again.

To Enjoy the Sound Effect Setting

You can enjoy sound effects as desired.

1 Press the SOUND button to select the sound effect.
The SOUND indicator (see below) shows the current sound effect setting.
You can switch between effects by repeatedly pressing the SOUND button.

Status	Sound effect
Amber	High-quality bass sound will be heard (MEGA BASS). This setting is enabled by default when you first turn on the system.
Green	Surround sound will be heard (MEGA BASS+SURROUND).
Off	The sound effect is off.

Tip
- The system remembers the last sound effect setting next time it is turned on.

Listening to Music by Wired Connection with a Portable Audio Device, etc.

1 Connect the device to the system.

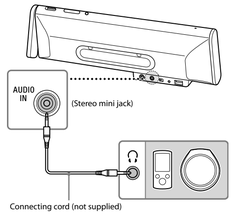

2 Turn on the system.

3 Turn on the connected device.

4 Press the AUDIO IN button on the system.

5 Operate the connected device.
Set the volume of the connected device to a moderate level, then press the VOLUME –/+ buttons on the system.

Notes
- You cannot play music only by connecting to the system with the connecting cord. Make sure to also press the AUDIO IN button.
- Hands-free calling is not available while you are listening to music from a device connecting to the system by the connected cord.

Auto power off

The system automatically turns off after about 20 minutes when the hands-free is not being used (the system is not connected with a *Bluetooth* device via HFP/HSP), and when no device is being charged via the DC OUT ONLY connector, and when no music is being played.

Charging USB Devices, such as Smartphones, via a USB Connection to the System

You can charge your smartphone by connecting to the DC OUT ONLY connector (USB) of the system. When using the system by the built-in battery only, you can also charge a smartphone from the battery of the system. **Turn on the system in order to charge a USB device.**

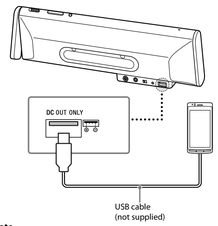

Note
- This function is not for data communication by USB cable.

Disposing of the System

For environment protection, remove the built-in lithium-ion battery pack from the system.
Before removing the battery, drain the battery by removing the AC adaptor and using the system only with the battery.

Take out the lithium-ion battery for recycling.
Do not open the cabinet other than when disposing of the system.

1 Turn off the system and remove the AC adaptor.

2 Detach the cover of the rear of the system to remove the battery pack.
❶ Remove the two rubber covers at the center of the rear of the system.
❷ Remove the two screws.
❸ Remove the cover.
❹ Remove the connector plug from the system.
❺ Remove the battery.

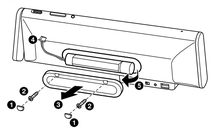

Note
- Be careful not to damage the code cover with metallic tweezers, etc. when you remove the battery pack from the system.

Specifications

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:
With 6 ohm loads both channels driven, from 150 Hz - 10,000 Hz; rated 10 watts per channel minimum RMS power, with no more than 10% total harmonic distortion in AC operation.

Speaker section

Speaker system: Main speaker :
70 mm (2 7/8 in) × 2 (FULL RANGE)
Passive speaker:
103 mm × 60 mm (4 1/8 in × 2 3/8 in) (w/h)
Enclosure type: Passive radiator model

Amplifier section

Reference output power
10 W + 10 W (AC adaptor, at 1 % harmonic distortion, 1 kHz, 6 Ω), 4 W + 4 W (Battery, at 10 % harmonic distortion, 1 kHz, 6 Ω)

Bluetooth

Communication System
Bluetooth Specification version 3.0
Output: *Bluetooth* Specification Power Class 2
Maximum communication range
Line of sight approx. 10 m (30 ft)*1
Frequency band: 2.4 GHz band (2.4000 GHz - 2.4835 GHz)
Modulation method
FHSS
Compatible *Bluetooth* Profiles*2
A2DP (Advanced Audio Distribution Profile)
AVRCP (Audio Video Remote Control Profile)
HSP (Headset Profile)
HFP (Hands-free Profile)
Supported Codec*3
SBC*4, AAC*5
Transmission range (A2DP)
20 Hz - 20,000 Hz (Sampling frequency 44.1 kHz)

*1 The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, reception sensitivity, aerial's performance, operating system, software application, etc.
*2 *Bluetooth* standard profiles indicate the purpose of *Bluetooth* communication between devices.
*3 Codec: Audio signal compression and conversion format
*4 Subband Codec
*5 Advanced Audio Coding

Microphone

Type: Electret condenser
Directional characteristic:
Omni directional
Effective frequency range:
50 Hz -10 kHz

General

Input: AUDIO IN jack (ø 3.5 mm stereo mini jack)
DC OUT: USB jack Type A (for charging the battery of a connected device) (5 V, Max.1.5 A)
Power: DC 12.5 V (using the supplied AC adaptor connected to AC 100 V - 240 V, 50 Hz/60 Hz power supply) or, using built-in lithium-ion battery
Usage life of lithium-ion battery (using the *Bluetooth* connection)
approx. 8 hours*6
Dimensions (including projecting parts and controls)
Approx. 341.0 mm × 115.0 mm × 58.5 mm (13 1/2 in × 4 7/8 in × 2 1/4 in) (w/h/d)
(Side stand closed)
Approx. 341.0 mm × 115.0 mm ×72.0 mm (13 1/2 in × 4 7/8 in × 2 7/8 in) (w/h/d)
(Side stand open)
Mass: Approx.1,600 g (3 lb 8 oz)
including battery
Supplied accessories
AC adaptor (1)
Operating Instructions (this document) (2)
Bluetooth® Startup Guide (1)
Warranty card (2)
Carrying case (1)

*6 Time may vary, depending on the temperature or conditions of use.

Design and specifications are subject to change without notice.

Troubleshooting



No sound / Sound from only one speaker / Low sound level

Check that both this system and the connected device are turned on.

Check that the side stand is opened.
The system automatically turns off when the side stand is closed.

Turn up the volume of the system and the connected device.

If you are connecting a personal computer to the system, make sure the audio output setting of the computer is set for a *Bluetooth* device.

Check that the connected device is being played back.

Pair this system and the *Bluetooth* device again.

Check that both plugs of the connecting cord (not supplied) are firmly inserted into the system and the connected device.

If the connected device is monaural, sound will only be output from the left speaker.

Distorted sound / Humming or noise in the system output

Turn down the volume of the connected device.

Keep the system away from a TV.

If the connected device has an equalizer function, set it to off.

Switch the *Bluetooth* connection to A2DP by operating the *Bluetooth* device when HFP or HSP is set.

Keep the system away from a microwave oven, wireless LAN, etc.

If you connect a device with a built-in radio or tuner to this system, broadcasts may not be received, or sensitivity may be reduced. Locate the system farther away from the device and check that you can listen to the broadcasts satisfactorily.

Bring this system and the *Bluetooth* device closer together. Remove any obstacle between this system and the *Bluetooth* device.

Charge the system by connecting the AC adaptor if the B

Français | **Système audio personnel**

Avant d'utiliser le système, veuillez lire ce guide attentivement et conservez-le pour toute référence ultérieure.

AVERTISSEMENT

Afin de réduire les risques d'incendie ou de choc électrique, n'exposez pas cet appareil à la pluie ni à l'humidité.

Pour réduire les risques d'incendie, ne couvrez pas les orifices d'aération de cet appareil avec des papiers journaux, des nappes, des rideaux, etc. Ne placez pas non plus de bougies allumées sur l'appareil.

Pour réduire les risques d'incendie ou de choc électrique, n'exposez pas l'appareil au suintement ou à des éclaboussures et ne posez aucun objet rempli de liquide, tel qu'un vase, sur l'appareil.

N'installez pas l'appareil dans un espace restreint, comme une bibliothèque ou un meuble encastré.

N'exposez pas les piles (rechargeables ou installées) à une chaleur excessive comme à la lumière du soleil, au feu ou à d'autres sources de chaleur pendant une période prolongée.

Étant donné que la fiche principale de l'adaptateur CA est utilisée pour débrancher l'adaptateur CA du réseau électrique, connectez-la à une prise CA facilement accessible. Si vous constatez un fonctionnement anormal, débranchez-la immédiatement de la prise CA.

L'appareil n'est pas déconnecté de la source d'alimentation CA tant qu'il reste branché sur la prise murale, même s'il a été éteint.

La plaque signalétique et des informations importantes pour votre sécurité sont apposées sur la partie inférieure à l'extérieur de l'appareil principal et sur la surface de l'adaptateur CA.

Vous devez savoir que tout changement ou toute modification non expressément approuvé(e) dans ce mode d'emploi risque d'annuler votre droit à utiliser cet appareil.

Cet équipement ne doit pas être placé au meme endroit ni utilisé avec une autre antenne ou un autre émetteur.

Cet émetteur est conforme aux limitations concernant l'exposition aux radiations établies par la FCC/IC définies dans un environnement non contrôlé ainsi qu'aux directives relatives à l'exposition aux fréquences radio (RF) FCC du supplément C du bulletin OET65 et au réglement RSS-102 relatif à l'exposition aux radiofréquences (RF) IC.
Cet équipement présente des niveaux d'énergie RF très bas considérés comme conformes et ne nécessite pas d'évaluation d'exposition maximale admise (MPE). Il est toutefois souhaitable d'installer et d'utiliser l'émetteur en laissant une distance minimale de 20 cm entre l'appareil rayonnant et vous (sans compter les extrémités : mains, poignets, pieds et chevilles).

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. Son utilisation est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Consignes de sécurité importantes

1) Lisez ces instructions.
2) Conservez ces instructions.
3) Tenez compte de tous les avertissements.
4) Respectez toutes les instructions.
5) N'utilisez pas cet appareil à proximité de l'eau.
6) Nettoyez l'appareil uniquement avec un chiffon sec.
7) Ne bloquez pas les ouvertures de ventilation. Installez l'appareil conformément aux instructions du fabricant.
8) N'installez pas l'appareil à proximité d'une source de chaleur, telle qu'un radiateur, un poêle, une cuisinière ou d'autres appareils (notamment des amplificateurs) qui dégagent de la chaleur.
9) Pour des raisons de sécurité, veillez à utiliser une fiche polarisée ou une fiche avec terre. Une fiche polarisée possède deux lames dont une est plus large que l'autre. Une fiche avec terre possède deux lames et une broche de mise à la masse. La lame large ou la troisième broche sont prévues pour votre sécurité. Si la fiche fournie n'est pas adaptée à la prise, consultez un électricien pour remplacer la prise obsolète.
10) Protégez le cordon d'alimentation afin d'éviter qu'il soit piétiné ou pincé, en particulier au niveau des fiches, des prises de courant et du point de sortie de l'appareil.
11) Utilisez uniquement des options/accessoires spécifiés par le fabricant.
12) Utilisez l'appareil uniquement avec le chariot, le socle, le trépied, le support ou la table spécifiés par le fabricant ou vendus avec l'appareil. Si vous utilisez un chariot, soyez prudent lors du déplacement de la combinaison chariot/appareil afin d'éviter de vous blesser lors du transport.

13) Débranchez l'appareil pendant les orages ou lorsque vous ne l'utilisez pas pendant des périodes prolongées.
14) Tout entretien ne peut être effectué que par un technicien qualifié. Un entretien est nécessaire si l'appareil a été endommagé d'une quelconque manière, par exemple si le cordon ou la fiche d'alimentation est endommagé, si du liquide a pénétré dans l'appareil ou si des objets sont tombés à l'intérieur de celui-ci, s'il a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas normalement ou s'il a subi une chute.

AVERTISSEMENT

- La pile peut exploser si elle est manipulée de façon inappropriée. Ne la rechargez pas, ne la démontez pas ou ne la jetez pas dans le feu.
- Mettez immédiatement au rebut les piles usagées, conformément aux réglementations environnementales locales et aux directives en vigueur. Gardez-les hors de portée des enfants.

À propos des droits d'auteur et des licences

La marque *Bluetooth*® et les logos appartiennent à Bluetooth SIG, Inc. et sont utilisés sous licence uniquement par Sony Corporation. N Mark est une marque commerciale ou une marque déposée de NFC Forum, Inc. aux Etats-Unis et dans d'autres pays.
Android est une marque commerciale de Google Inc.
iPhone est une marque de commerce de Apple Inc., déposées aux Etats-Unis et dans d'autres pays.
Les autres marques commerciales et noms commerciaux appartiennent à leurs propriétaires respectifs.

REMARQUE

Cet appareil a été soumis à l'essai et s'est avéré conforme aux limites pour un appareil numérique de classe B, conformément à la section 15 de la réglementation FCC. Ces normes sont conçues pour assurer une protection raisonnable contre les interférences nuisibles dans un environnement résidentiel. Cet appareil génère, utilise et peut émettre de l'énergie radioélectrique et, s'il n'est pas installé ou utilisé selon les directives, peut causer des interférences nuisibles aux communications radio. Cependant, il n'existe aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet appareil est la source d'interférences nuisibles pour la réception radio ou télévision, ce qui peut être déterminé en éteignant, puis en rallumant l'appareil, il est recommandé d'éliminer ces interférences en appliquant une ou plusieurs des mesures suivantes :
— Réorienter ou déplacer l'antenne réceptrice;
— Éloigner l'appareil du récepteur;
— Brancher l'appareil dans une prise d'un circuit différent de celui qui alimente le récepteur;
— Consulter le détaillant ou un technicien radio ou télévision qualifié pour obtenir de l'aide.

Pour les clients aux États-Unis et au Canada
RECYCLAGE DES BATTERIES AU LITHIUM-ION

Les batteries au lithium-ion sont recyclables.

Vous pouvez contribuer à préserver l'environnement en rapportant vos batteries rechargeables usées dans un point de collecte et de recyclage de votre région.

Pour plus d'informations sur le recyclage des batteries rechargeables, composez sans frais le 1-800-822-8837 ou visitez le site http://www.rbrc.org/

Attention : Ne manipulez jamais de batteries au lithium-ion endommagées ou qui présentent une fuite.

Précautions

Remarques concernant l'utilisation d'un téléphone cellulaire

- Pour plus de détails sur le fonctionnement de votre téléphone cellulaire lors de la réception d'un appel pendant la transmission de données audio à l'aide de la connexion *Bluetooth*, reportez-vous au mode d'emploi fourni avec votre téléphone cellulaire.

Sécurité

Remarques sur l'adaptateur CA

- Lorsque vous connectez ou déconnectez l'adaptateur CA, éteignez d'abord le système. Sinon, vous risquez de causer un problème de fonctionnement.
- Utilisez uniquement l'adaptateur CA fourni. Pour éviter d'endommager le système, n'utilisez aucun autre adaptateur CA.

Polarité de la fiche

- Branchez l'adaptateur CA à la prise murale la plus proche. En cas de problème, débranchez-le immédiatement de la prise murale.
- N'installez pas l'adaptateur CA dans un espace restreint, tel qu'une bibliothèque ou un meuble encastré.
- Pour réduire les risques d'incendie ou d'électrocution, n'exposez pas l'adaptateur CA à des éqoutttements ou des éclaboussures et ne placez pas d'objets remplis de liquides, tels que des vases, sur l'adaptateur CA.

Emplacement

- N'installez pas l'enceinte en position inclinée.
- Ne placez pas le système à proximité d'une source de chaleur ou dans un endroit exposé aux rayons directs du soleil, à une poussière excessive, à l'humidité, à la pluie ou à des chocs mécaniques.

Fonctionnement

- N'insérez pas de petits objets, etc., dans les prises ou l'ouverture d'aération à l'arrière du système. Cela pourrait causer un court-circuit ou un problème de fonctionnement.

Entretien

- N'utilisez pas d'alcool, de benzène ou de diluant pour nettoyer le boîtier.

Autres

- Si vous avez des questions ou des problèmes concernant ce système qui ne sont pas abordés dans ce mode d'emploi, veuillez contacter votre détaillant Sony le plus proche.

Qu'est-ce que la technologie sans fil *Bluetooth*?

La technologie *Bluetooth* est une technologie sans fil à courte portée permettant la communication de données sans fil entre des appareils numériques, tels qu'un ordinateur et un appareil photo numérique. La technologie sans fil *Bluetooth* fonctionne dans un rayon d'environ 10 m.
La connexion de deux appareils est courante, mais certains appareils peuvent également se connecter simultanément à plusieurs appareils.
Vous n'avez pas à utiliser de câble pour la connexion, ni à placer les appareils l'un vers l'autre, comme c'est le cas avec la technologie infrarouge. Par exemple, vous pouvez utiliser ce type d'appareil dans un sac ou une poche.
La technologie *Bluetooth* est une norme internationale prise en charge et utilisée par des milliers d'entreprises dans le monde entier.

Système de communication et profils *Bluetooth* compatibles du système

Le profil est la normalisation du fonctionnement pour chaque spécification d'un périphérique *Bluetooth*. Ce système prend en charge les profils et la version *Bluetooth* suivants :
Système de communication :
Spécification *Bluetooth* version 3.0
Profils *Bluetooth* compatibles :
– A2DP (Advanced Audio Distribution Profile) : Transmission ou réception de contenu audio de haute qualité.
– AVRCP (Audio Video Remote Control Profile) : Contrôle du volume.
– HSP (Headset Profile) : Conversation téléphonique/Utilisation du téléphone.
– HFP (Hands-free Profile) : Conversation téléphonique/Utilisation du téléphone en mode mains libres.

Portée maximale des communications

Utilisez des périphériques *Bluetooth* à moins de 10 m (en ligne directe) du système.
La portée maximale des communications peut être réduite dans les conditions suivantes.
– Un obstacle, par exemple une personne, un objet métallique ou un mur, se trouve entre le système et le périphérique *Bluetooth*.
– Un périphérique LAN sans fil est utilisé à proximité du système.
– Un four à micro-ondes est utilisé à proximité du système.
– Un appareil émettant des radiations électromagnétiques est utilisé à proximité du système.

Interférences provenant d'autres appareils

Étant donné que les périphériques *Bluetooth* et LAN sans fil (IEEE802.11b/g) utilisent la même fréquence, des interférences en hyperfréquences peuvent survenir et entraîner une dégradation de la vitesse de communication, des parasites ou une connexion invalide si le système est utilisé à proximité d'un périphérique LAN sans fil. En pareil cas, procédez comme suit.
– Utilisez le système à une distance d'au moins 10 m du périphérique LAN sans fil.
– Si le système est utilisé à moins de 10 m d'un périphérique LAN sans fil, éteignez ce dernier.

Interférences causées à d'autres appareils

Les émissions d'hyperfréquences d'un périphérique *Bluetooth* peuvent compromettre le fonctionnement des appareils médicaux électroniques. Éteignez le système et les autres périphériques *Bluetooth* dans les endroits suivants, car ils pourraient provoquer un accident.
– endroits où du gaz inflammable est présent, dans un hôpital, un train, un avion ou une station-service
– à proximité de portes automatiques ou d'alarmes incendie

Remarques

- Pour pouvoir utiliser la fonction *Bluetooth*, le périphérique *Bluetooth* à connecter doit posséder un profil identique à celui du système.
Veuillez également noter que même si les périphériques possèdent un profil identique, les fonctions qu'ils proposent peuvent varier selon leurs caractéristiques techniques.
- En raison des caractéristiques de la technologie sans fil *Bluetooth*, le son reproduit sur le système est légèrement décalé par rapport au son en cours de lecture sur le périphérique *Bluetooth* pendant une conversation téléphonique ou l'écoute de la musique.
- Ce système prend en charge les capacités de sécurité conformes à la norme *Bluetooth* pour offrir une connexion sécurisée lors de l'utilisation de la technologie sans fil *Bluetooth*, mais la sécurité pourrait être insuffisante selon le réglage. Soyez prudent lorsque vous communiquez en utilisant la technologie sans fil *Bluetooth*.
- Nous ne pouvons être tenus responsables pour toute fuite d'informations survenant lors d'une communication *Bluetooth*.
- Un périphérique doté de la fonction *Bluetooth* doit être conforme à la norme *Bluetooth* spécifiée par Bluetooth SIG et être authentifié. Même si le périphérique connecté est conforme à la norme *Bluetooth* mentionnée précédemment, certains périphériques pourraient ne pas se connecter ou fonctionner correctement, selon leurs caractéristiques ou spécifications.
- Selon le périphérique *Bluetooth* connecté au système, l'environnement de communication ou les conditions d'utilisation, il est possible que le son soit saccadé ou accompagné de parasites.

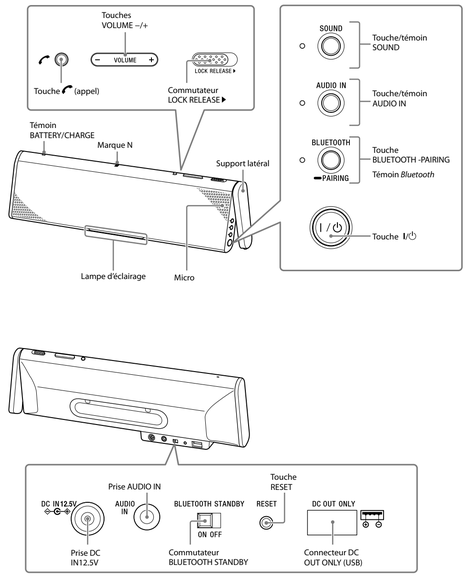

Fonction des pièces

Témoin BATTERY/CHARGE
S'allume, clignote ou s'éteint selon l'état du système.
Pour plus de détails, reportez-vous à la section suivante, « Indications du témoin BATTERY/CHARGE ».

Marque N
Touchez cette marque pour établir la connexion *Bluetooth* avec un téléphone intelligent compatible NFC.

Touche (appel)
Appuyez pour appeler ou faire fonctionner pendant un appel.

Touches VOLUME –/+
Permettent de régler le volume.

Commutateur LOCK RELEASE ▶
Utilisez ce commutateur pour ouvrir et fermer le support latéral.

Support latéral
Ouvrez ce support pour utiliser le système.

Lampe d'éclairage
S'allume de diverses couleurs selon l'état du système. Pour plus de détails, reportez-vous à la section suivante, « Indications de la lampe d'éclairage ».

Micro
Utilisez le micro pendant un appel.

Prise DC IN 12.5V
Permet de raccorder l'adaptateur CA fourni.

Prise AUDIO IN
Permet la connexion à la prise pour casque d'écoute d'un périphérique audio portable, d'un ordinateur, etc., à l'aide d'un cordon de raccordement (non fourni).

Commutateur BLUETOOTH STANDBY
Active et désactive le mode de veille *Bluetooth*.

Touche RESET
Réinitialise le système.

Connecteur DC OUT ONLY (USB)
Chargez des périphériques, tels que votre téléphone intelligent, etc. en le raccordant au connecteur DC OUT ONLY (connecteur USB).

Touche SOUND
Appuyez pour sélectionner un effet sonore.

Témoin SOUND
S'allume en fonction du réglage d'effet sonore.

Touche AUDIO IN
Appuyez pour écouter le son d'un périphérique raccordé à l'aide d'un cordon de raccordement (non fourni).

Témoin AUDIO IN (jaune)
S'allume en mode AUDIO IN.

Touche BLUETOOTH-PAIRING
Appuyez pour procéder au jumelage avec un périphérique *Bluetooth*.

Témoin *Bluetooth* (bleu)
S'allume, clignote ou s'éteint selon l'état de la communication.
Pour plus de détails, reportez-vous à la section suivante, « Indications de la fonction *Bluetooth* ».

Touche I/⏻
Permet d'allumer/éteindre le système.

Indications du témoin BATTERY/CHARGE (batterie au lithium-ion intégrée)

État	Témoin BATTERY/CHARGE
Système allumé	S'allume (vert) (alimentation par batterie uniquement)
Batterie devant être chargée	Clignote (vert)
Charge de la batterie	S'allume (jaune)
Charge terminée	Éteint

Indications de la lampe d'éclairage

État	Lampe d'éclairage
Mode AUDIO IN	S'allume (blanc)
Recherche d'un périphérique	S'allume (blanc)
Connexion à un périphérique *Bluetooth*	S'allume (bleu)
Utilisation des touches VOLUME –/+	Clignote une fois (blanc)
Lorsque le volume atteint le niveau maximum ou minimum	Clignote trois fois (blanc)

Conseil

- Pour activer/désactiver l'éclairage, maintenez enfoncée la touche BLUETOOTH-PAIRING, puis appuyez sur la touche I/⏻ et maintenez-la enfoncée.

Indications de la fonction *Bluetooth*

État	Témoin *Bluetooth* (bleu)
Jumelage avec un périphérique	Clignote rapidement
Recherche d'un périphérique	Clignote
Connexion à un périphérique	S'allume
Mode de veille *Bluetooth*	Clignote lentement

Ouverture du support latéral

Ouvrez le support latéral et utilisez les touches à l'intérieur. Le support latéral sert également à soutenir le système pendant l'utilisation.
Réglez le commutateur LOCK RELEASE ▶ dans le sens de la flèche (illustration) pour ouvrir le support latéral.

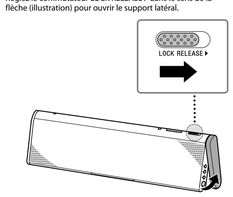

Pour fermer le support latéral

Fermez le support latéral lorsque vous transportez le système. Réglez le commutateur LOCK RELEASE ▶ dans le sens indiqué par la flèche ci-dessus, puis fermez le support latéral manuellement.
Le système s'éteint automatiquement lorsque vous fermez le support latéral.

Mise en marche et arrêt du système/Charge du système

Ce système peut fonctionner à l'aide de l'adaptateur CA ou de la batterie au lithium-ion intégrée (rechargeable). Chargez la batterie avant d'utiliser le système pour la première fois.

1 Raccordez l'adaptateur CA fourni.
Le témoin BATTERY/CHARGE (jaune) s'allume lorsque la batterie est en cours de charge, puis il s'éteint lorsque la charge est terminée. La charge de la batterie prend environ 4 heures.

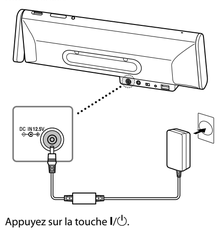

2 Appuyez sur la touche I/⏻.

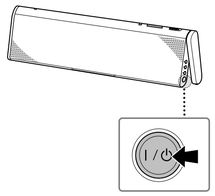

Conseil

- Vous pouvez faire fonctionner le système à l'aide de la batterie plutôt qu'avec l'adaptateur CA en chargeant le système avant l'utilisation.

Remarques

- Lorsque le témoin BATTERY/CHARGE clignote comme indiqué ci-dessous, chargez le système. En pareils cas, vous ne pouvez pas charger de périphériques via le connecteur DC OUT ONLY.
  – Clignote (vert) (La batterie est faible).
  – Clignote (jaune), puis s'éteint après la mise en marche du système (La batterie est épuisée).
- Lorsque vous changez de source d'alimentation entre l'adaptateur CA et la batterie en connectant/déconnectant l'adaptateur CA, le système cesse d'émettre le son pendant un court instant. Il ne s'agit pas d'un problème de fonctionnement.
- La puissance de sortie maximale est inférieure lorsque l'adaptateur CA est déconnecté.
- Dans un environnement extrêmement froid ou chaud, tenez compte des points suivants.
  – Lors du fonctionnement à l'aide de l'adaptateur CA, la charge pourrait se terminer trop rapidement ou ne pas être possible.
  – Lors du fonctionnement uniquement à l'aide de la batterie, le système pourrait s'arrêter après trois clignotements du témoin BATTERY/CHARGE (vert).
- Chargez la batterie au moins deux fois par année.

Pour réinitialiser le système

Appuyez sur la touche RESET située à l'arrière du système à l'aide d'un objet pointu si les touches du système ne fonctionnent pas.

Comment établir une connexion sans fil avec des périphériques *Bluetooth*

Vous pouvez écouter de la musique et téléphoner en mode mains libres via la connexion sans fil du système en utilisant la fonction *Bluetooth* de votre périphérique.
Parmi les trois méthodes de connexion suivantes, choisissez celle qui convient le mieux à votre périphérique *Bluetooth*.
Pour plus de détails sur le fonctionnement de votre périphérique, reportez-vous au mode d'emploi fourni avec celui-ci.

Jumelage avec un périphérique *Bluetooth* : consultez Procédure A

Il est nécessaire au préalable de procéder au « jumelage » des périphériques *Bluetooth*.

Connexion avec un périphérique jumelé : consultez Procédure B

Pour écouter de la musique avec un périphérique *Bluetooth* jumelé, reportez-vous à cette procédure.

Connexion par simple contact avec un téléphone intelligent (NFC) : consultez Procédure C

Vous pouvez établir une connexion *Bluetooth* en touchant simplement le système avec un téléphone intelligent compatible NFC.

Avant d'utiliser le système, vérifiez les points suivants.
- Le système et le périphérique sont installés à moins de 1 m l'un de l'autre.
- Le système est raccordé à l'adaptateur CA ou la batterie est suffisamment chargée.
- Le mode d'emploi fourni avec le périphérique est à portée de main.

Procédure A

Jumelage et connexion avec un périphérique *Bluetooth*

1 Allumez le système.
Le témoin *Bluetooth* (bleu) clignote.
Si le témoin AUDIO IN (jaune) s'allume, appuyez sur la touche BLUETOOTH-PAIRING.

2 Activez la fonction *Bluetooth* du périphérique *Bluetooth*.
Pour plus de détails, reportez-vous au mode d'emploi fourni avec le périphérique.

3 Maintenez enfoncée la touche BLUETOOTH-PAIRING du système jusqu'à ce que vous entendiez deux bips sonores.
Le témoin *Bluetooth* (bleu) commence à clignoter rapidement et le mode de jumelage est activé.

Conseil

- Lorsque le système est allumé pour la première fois, le témoin *Bluetooth* (bleu) commence à clignoter rapidement.

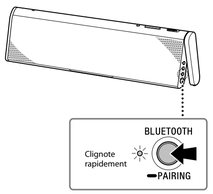

4 Exécutez la procédure de jumelage sur le périphérique *Bluetooth* pour détecter le système.

5 Sélectionnez « SRS-BTX300 » sur l'écran du périphérique *Bluetooth*.
Si « SRS-BTX300 » ne s'affiche pas sur l'écran du périphérique, recommencez à l'étape 2.

Remarque

- Certains périphériques ne peuvent pas afficher la liste des périphériques détectés.

6 Si un code d'authentification* est requis sur l'écran du périphérique *Bluetooth*, entrez « 0000 ».
La connexion *Bluetooth* est établie et le témoin *Bluetooth* (bleu) du système demeure allumé.
* Le code d'authentification peut également être nommé « clé d'authentification », « code NIP », « numéro NIP » ou « mot de passe ».

Conseil

- Pour effectuer le jumelage avec d'autres périphériques *Bluetooth*, répétez les étapes 2 à 6 pour chaque périphérique.

Remarques

- Le mode de jumelage du système est annulé après environ 5 minutes et le témoin *Bluetooth* (bleu) clignote. Si le mode de jumelage est annulé pendant l'exécution de cette procédure, recommencez à l'étape 3.
- Le code d'authentification de ce système est « 0000 ». Vous ne pouvez pas jumeler le système avec un périphérique *Bluetooth* dont le code d'authentification n'est pas « 0000 ».
- Une fois les périphériques *Bluetooth* jumelés, il n'est plus nécessaire de répéter cette opération. Cependant, dans la situation suivante, la procédure de jumelage doit être répétée.
  – Le système est jumelé avec 9 périphériques ou plus.
  Le système peut être jumelé avec un maximum de 8 périphériques *Bluetooth*. En cas de jumelage d'un nouveau périphérique pendant que 8 périphériques sont déjà jumelés, celui des 8 périphériques dont la date de dernière connexion est la plus ancienne sera remplacé par le nouveau périphérique.
- Plusieurs périphériques peuvent être jumelés avec le système, mais le son ne peut provenir que d'un seul périphérique.

Procédure B

Connexion avec un périphérique *Bluetooth* jumelé

1 Allumez le système.
Le témoin *Bluetooth* (bleu) clignote.
Si le témoin AUDIO IN (jaune) s'allume, appuyez sur la touche BLUETOOTH-PAIRING.

2 Activez la fonction *Bluetooth* du périphérique *Bluetooth*.

Conseil

- Dans le cas du périphérique *Bluetooth* connecté en dernier, le système tente d'établir de nouveau la connexion *Bluetooth* avec celui-ci si la fonction *Bluetooth* du périphérique est activée. Lorsque la connexion *Bluetooth* est établie, le témoin *Bluetooth* (bleu) du système demeure allumé.

3 Sélectionnez « SRS-BTX300 » sur l'écran du périphérique *Bluetooth*.
Si nécessaire, sélectionnez un profil *Bluetooth* pris en charge par le système parmi les suivants : A2DP, HSP ou HFP. Pour plus de détails sur chacun des profils, reportez-vous à la section « Qu'est-ce que la technologie sans fil *Bluetooth*? ».
La connexion *Bluetooth* est établie et le témoin *Bluetooth* (bleu) du système demeure allumé.

Remarques

- Cette étape n'est pas nécessaire pour certains périphériques.
- Si le système ne parvient pas à se connecter au périphérique *Bluetooth*, supprimez « SRS-BTX300 » sur le périphérique *Bluetooth*, puis exécutez de nouveau la procédure de jumelage.

Mode de veille *Bluetooth*

Lorsque le mode de veille *Bluetooth* est réglé à ON, le système peut être allumé et contrôlé par un périphérique *Bluetooth*.

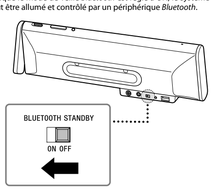

Remarques

- La fonction de veille *Bluetooth* est désactivée automatiquement lorsque le support latéral est fermé.
- Lorsque le système est allumé par la batterie et que le commutateur BLUETOOTH STANDBY est réglé à ON, l'énergie de la batterie continue d'être consommée même si le système est éteint.

Procédure C

Connexion par simple contact avec un téléphone intelligent (NFC)

En le touchant simplement avec un téléphone intelligent compatible NFC, le système s'allume automatiquement, puis est jumelé et connecté avec le téléphone intelligent.

1 Téléchargez et installez l'application « Connexion NFC facile » sur le téléphone intelligent.
« Connexion NFC facile » est une application originale développée par Sony pour les téléphones Android, disponible dans la boutique Google Play.
Recherchez « Connexion NFC facile » ou numérisez le code à deux dimensions suivant pour télécharger et installer l'application gratuite. Des frais de communication sont facturés pour le téléchargement de l'application.
Il est possible que l'application ne soit pas disponible en téléchargement dans certains pays/certaines régions.

Conseil

- Pour certains téléphones intelligents, la connexion par simple contact peut être disponible sans le téléchargement de l'application « Connexion NFC facile ». En pareil cas, le fonctionnement et les spécifications peuvent être différents de la description présentée dans ce document. Pour plus de détails, reportez-vous au mode d'emploi fourni avec le téléphone intelligent.
À l'aide du code à deux dimensions :
Utilisez une application de lecture de code à deux dimensions.

Téléphones intelligents compatibles
- Téléphones intelligents avec fonction NFC intégrée (SE : Android 2.3.3 ou version ultérieure, sauf Android 3.x)

À propos de la technologie NFC

La technologie NFC (Near Field Communication – Communication en champ proche) permet d'établir une communication sans fil à courte portée entre différents périphériques, tels que des téléphones cellulaires et des étiquettes CI. Grâce à la fonction NFC, la communication des données peut être réalisée en touchant simplement le symbole correspondant ou la zone spécifiée sur les périphériques compatibles NFC.

2 Démarrez l'application « Connexion NFC facile » sur le téléphone intelligent.
Assurez-vous que l'écran de l'application s'affiche.

3 Touchez le système avec le téléphone intelligent.
Maintenez le contact avec le téléphone intelligent sur la partie marquée N du système jusqu'à ce que le téléphone intelligent vibre.

Le téléphone intelligent vibre (le système est reconnu)

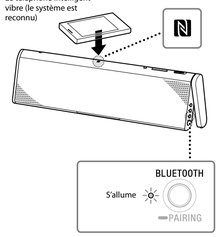

Suivez les instructions affichées à l'écran pour établir la connexion.
Lorsque la connexion *Bluetooth* est établie, le témoin *Bluetooth* (bleu) demeure allumé.

Conseils

- Si vous avez de la difficulté à établir la connexion, essayez de procéder comme suit.
  – Activez l'application « Connexion NFC facile » et déplacez légèrement le téléphone intelligent sur la partie marquée N du système.
  – Si le téléphone intelligent est placé dans un étui, retirez ce dernier.
- Touchez de nouveau le système avec le téléphone intelligent pour procéder à la déconnexion.
- Si vous possédez plusieurs périphériques compatibles NFC, il vous suffit de mettre le téléphone intelligent en contact avec un autre périphérique pour établir la connexion avec celui-ci. Par exemple, lorsque votre téléphone intelligent est connecté à un casque d'écoute compatible NFC, vous n'avez qu'à mettre le téléphone intelligent en contact avec le système pour faire passer la connexion *Bluetooth* au système (changement de connexion par simple contact).

Écoute de la musique

Vous pouvez écouter de la musique via une connexion sans fil en utilisant la fonction *Bluetooth* intégrée de vos périphériques.

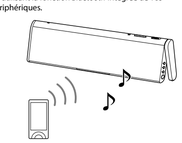

Les opérations peuvent varier selon le périphérique *Bluetooth*. Reportez-vous également au mode d'emploi fourni avec votre périphérique *Bluetooth*.

1 Établissez la connexion *Bluetooth* entre le système et le périphérique.
Pour plus de détails sur la procédure de connexion *Bluetooth*, reportez-vous à la section « Comment établir une connexion sans fil avec des périphériques *Bluetooth* ».
Lorsque la connexion *Bluetooth* est établie, le témoin *Bluetooth* (bleu) du système demeure allumé.

2 Démarrez la lecture sur le périphérique *Bluetooth*, puis réglez le volume.
Réglez le volume du périphérique *Bluetooth* sur un niveau moyen, puis appuyez sur les touches VOLUME –/+ du système.

Désactivation automatique

Le système s'éteint automatiquement après environ 20 minutes lorsque la fonction mains libres n'est pas utilisée (le système n'est pas connecté avec un périphérique *Bluetooth* via HFP/HSP), qu'aucun périphérique n'est chargé via le connecteur DC OUT ONLY et qu'aucune musique n'est en cours de lecture.

Après l'utilisation

Effectuez l'une des opérations suivantes.
- Désactivez la fonction *Bluetooth* du périphérique *Bluetooth*.
Pour plus de détails, reportez-vous au mode d'emploi fourni avec le périphérique.
- Éteignez le périphérique *Bluetooth*.
- Éteignez le système.
- Touchez de nouveau le système avec le téléphone intelligent pour procéder à la déconnexion (téléphones intelligents compatibles NFC uniquement).

Téléphoner en mode mains libres tout en écoutant de la musique

Vous pouvez téléphoner en mode mains libres via une connexion *Bluetooth* en utilisant un téléphone cellulaire *Bluetooth* disposant d'une fonction de musique et prenant en charge les profils *Bluetooth* A2DP et HFP ou HSP.
Si votre téléphone cellulaire *Bluetooth* prend en charge les profils HFP et HSP, réglez-le sur le profil HFP.

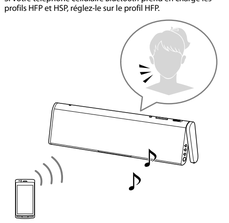

Les opérations peuvent varier selon le téléphone cellulaire *Bluetooth*. Reportez-vous également au mode d'emploi fourni avec votre téléphone cellulaire.

1 Établissez la connexion *Bluetooth* entre le système et le téléphone cellulaire.
Pour plus de détails sur la procédure de connexion *Bluetooth*, reportez-vous à la section « Comment établir une connexion sans fil avec des périphériques *Bluetooth* ».
Lorsque la connexion *Bluetooth* est établie, le témoin *Bluetooth* (bleu) du système demeure allumé.

2 Démarrez la lecture sur le téléphone cellulaire *Bluetooth*, puis réglez le volume.
Réglez le volume du téléphone cellulaire *Bluetooth* sur un niveau moyen, puis appuyez sur les touches VOLUME –/+ du système.

Pour appeler

Utilisez le téléphone cellulaire *Bluetooth*. Vérifiez que la tonalité est bien audible sur le système et parlez en utilisant le micro. Si vous n'entendez pas la tonalité, appuyez sur la touche (appel) du système pendant environ 2 secondes pour faire passer l'appel du périphérique au système.

Pour recevoir un appel

Lors de la réception d'un appel entrant, la lecture est mise en pause et une sonnerie est émise par le système. Appuyez sur la touche (appel) du système et parlez en utilisant le micro.

Conseils

- Si aucune sonnerie n'est émise par le système lors de la réception d'un appel entrant, arrêtez la lecture et appuyez sur la touche (appel) pour parler.
- Vous pouvez utiliser la fonction d'appel mains libres lorsque la lecture est terminée.
- Pendant un appel, appuyez sur les touches VOLUME –/+ du système pour régler le volume.

Remarques

- Le son est reproduit uniquement par le haut-parleur gauche pendant un appel.
- Utilisez votre téléphone intelligent à une distance d'au moins 50 cm du système. Des parasites peuvent se produire si le système et le téléphone intelligent sont trop près l'un de l'autre.

Pour terminer un appel

Appuyez sur la touche (appel). Si vous écoutiez de la musique lors de la réception de l'appel, la lecture reprendra lorsque l'appel sera terminé.

Après l'utilisation

Effectuez l'une des opérations suivantes.
- Désactivez la fonction *Bluetooth* du périphérique *Bluetooth*.
Pour plus de détails, reportez-vous au mode d'emploi fourni avec le périphérique.
- Éteignez le périphérique *Bluetooth*.
- Éteignez le système.
- Touchez de nouveau le système avec le téléphone intelligent pour procéder à la déconnexion (téléphones intelligents compatibles NFC uniquement).

Fonctions des touches de l'appareil pendant un appel

Les fonctions disponibles peuvent varier selon le téléphone cellulaire *Bluetooth* ou les profils pris en charge par le téléphone cellulaire *Bluetooth*. Reportez-vous au mode d'emploi fourni avec le téléphone cellulaire *Bluetooth*.

État	Touche (appel)
Veille	• Appuyez une fois pour démarrer la numérotation vocale (téléphones cellulaires compatibles avec la numérotation vocale uniquement). • Appuyez pendant environ 2 secondes pour recomposer le dernier numéro de téléphone composé.
Appel sortant	• Appuyez une fois pour annuler l'appel sortant. • Appuyez pendant environ 2 secondes pour changer le périphérique d'appel entre le système et le téléphone cellulaire.
Appel entrant	• Appuyez une fois pour répondre à l'appel. • Appuyez pendant environ 2 secondes pour refuser l'appel.
Pendant un appel	• Appuyez une fois pour terminer l'appel. • Appuyez pendant environ 2 secondes pour changer le périphérique d'appel entre le système et le téléphone cellulaire.

Téléphoner en mode mains libres avec un autre téléphone cellulaire *Bluetooth* pendant l'écoute de la musique

Ce système est compatible avec la technologie Multipoint, qui vous permet de téléphoner en mode mains libres tout en écoutant de la musique à partir d'un lecteur de musique compatible *Bluetooth*.

- La connexion par simple contact (NFC) ne peut pas être utilisée dans le cadre de cette procédure.
- Les opérations peuvent varier selon le périphérique *Bluetooth*. Il pourrait être impossible d'établir ce type de connexion *Bluetooth* selon la combinaison des périphériques

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com