

PERSONAL

Retro Mechanical Bathroom Scale

PLEASE READ ALL INSTRUCTIONS BEFORE USE

guarantee






year



Many thanks for purchasing a MELLERWARE product. Thanks to its technology, design and operation and the fact that it goes through strict quality controls - we feel sure you will be entirely satisfied.

- Place the scale on a hard and flat surface to ensure the greatest accuracy and reliability. Weighing
 on a carpet might affect accuracy of the scale.
- To ensure the most accurate readings, always weigh yourself on the same area of the scale platform and on the same floor surface. Uneven floors may affect readings.
- Weigh yourself without clothes and footwear, before meals and always at the same time of a day for a more accurate weigh. Early morning is a good time.
- Be sure the needle points to zero (0) before using it.

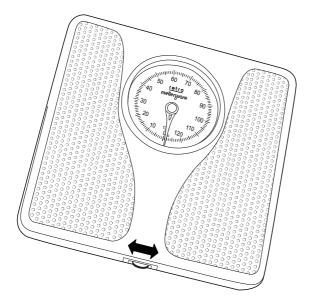


Adjust the calibrating dial left or right to set the scale to zero (0).

- Stand squarely and gently on the scale, without leaning forward or backward and distribute your weight evenly between your feet.
- Clean your scale with a damp cloth and do not allow water to get inside the scale.
- Do not use any chemical cleanser.
- Do not immerse your scale into any liquid, as this can damage the inner parts.
- Do not store the scale in an upright position.
- Treat your scale with care. It's a precision instrument, do not drop it or jump on it.
- This scale is only used in household for body weight measurement, not for commercial or other use.





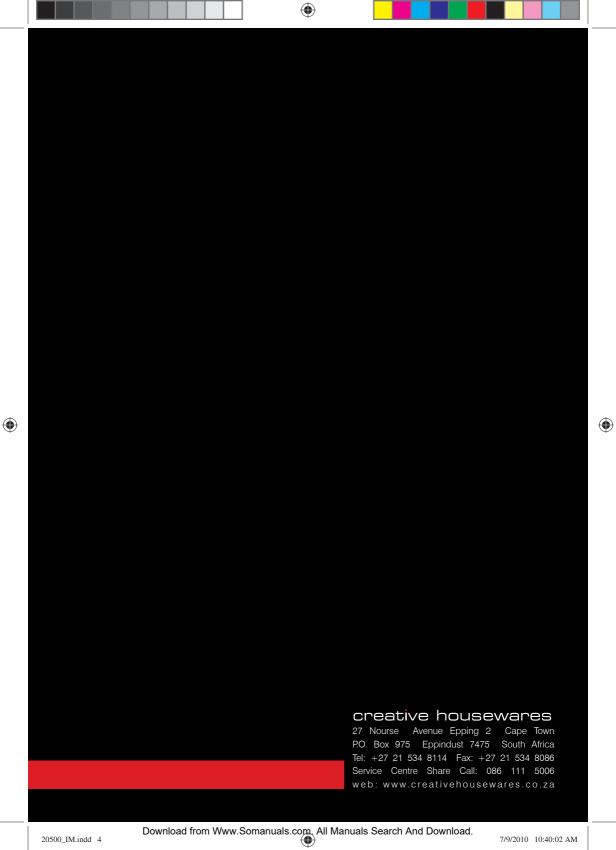

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com