

QUICK LINKS

- Contents
- Index
- Ordering Parts
- Product Information
- Regulatory Compliance
- Warranty

GETTING STARTED

- About the Display
- Unpack Display
- Identify Components

INSTALLING THE DISPLAY

- Connect Power
- Connect Video
- Connect Audio
- Connect Touch Screen
- Power Management System

USING THE CONTROLS

- Display Controls
- OSD Menu
- Function Menus
- OSD Lockout
- DDC Change

APPENDIXES

- Technical Information
- Troubleshooting



VS15 Display

VS15XAD / VS15XAD-TR

Operations Manual

www.planar.com

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Copyright © 2004 Planar Systems, Inc. All rights reserved.

This document contains proprietary information of Planar Systems, Inc. It is the exclusive property of Planar. It may not be reproduced or transmitted, in whole or in part, without a written agreement from Planar. No patent or other license is granted to this information. The software, if any, described in this document is furnished under a license agreement. The software may not be used or copied except as provided in the license agreement.

Planar Systems, Inc. provides this publication as is without warranty of any kind, either express or implied, including but not limited to the implied warranties of merchantability or fitness for a particular purpose. Planar may revise this document from time to time without notice. Some states or jurisdictions do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

Information in this document about products not manufactured by Planar is provided without warranty or representation of any kind, and Planar will not be liable for any damages resulting from the use of such information.

Planar is a registered trademark and VS15 a trademark of Planar Systems, Inc. All other trademarks are the property of their respective owners.

DOCUMENT HISTORY

Date	Description
August 2004	020-0158-00C
August 2003	020-0158-00B
May 2001	020-0158-00A

America Sales
Planar Systems, Inc.
1195 NW Compton Drive
Beaverton, OR 97006-1992 USA
(503) 748-1100 phone
(503) 748-1493 fax

Medical Sales
Planar Systems, Inc.
400 Fifth Avenue
Waltham, MA 02451-8738 USA
(781) 895-1155 phone
(781) 895-1133 fax

Europe & Asia-Pacific Sales
European Representative
Planar Systems, Inc.
Olarinluoma 9, P. O. Box 46
FIN-02201 Espoo, Finland
+ 358 9 420 01 phone
+ 358 9 420 0200 fax

medicalsales@planar.com
medicalsupport@planar.com
www.planar.com

QUICK LINKS

- ▶ Contents
- Index
- Ordering Parts
- Product Information
- Regulatory Compliance
- Warranty

GETTING STARTED

- About the Display
- Unpack Display
- Identify Components

INSTALLING THE DISPLAY

- Connect Power
- Connect Video
- Connect Audio
- Connect Touch Screen
- Power Management System

USING THE CONTROLS

- Display Controls
- OSD Menu
- Function Menus
- OSD Lockout
- DDC Change

APPENDIXES

- Technical Information
- Troubleshooting

Contents

Regulatory Compliance	iv
Product Information	vi
1 Getting Started	
About the VS15 Display	1
Unpack the Display	2
Identify the Components	3
2 Installing the Display	
Connect the AC Power	5
Connect the Video Cable	6
Connect the Audio Cable	7
Connect the Optional Touch Screen	8
Power Management System	9
3 Using the Display Controls	
Display Controls	10
Onscreen Display Main Menu	11
Function Menus	12
Onscreen Display Lockout	18
DDC Change	19
Appendix A: Technical Information	20
Appendix B: Troubleshooting	21
Index	22
Overview of Standard Warranty	24
Ordering Information	27

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- ▶ [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Regulatory Compliance

This display has been tested and certified to international medical safety standards IEC/EN 60601-1 and IEC/EN 60601-1-2, and is certified to meet C22.2 No. 601.1-M90 (C US Mark).

Because many medical offices are located in residential areas, the medical display, in addition to meeting medical requirements, has also been tested and found to comply with the limits for Federal Communications Commission (FCC) Class B computing devices in a typically configured system. It is the system integrator or configurer's responsibility to test and ensure that the entire system complies with applicable electromagnetic compatibility (EMC) laws.

Planar Systems, Inc. has made great efforts to support the medical device industry, in particular, medical device manufacturers and medical device system integrators. We offer state-of-the-art color displays that are compliant with worldwide accepted medical device safety standards, and for the European market, CE-marked displays based on compliance with counsel directive 93/42/EEC commonly referred to as the Medical Device Directive (MDD). The following summarizes our qualification of these displays as it relates to compliance with the MDD.

The European Medical Device Directive requires that the intended use of the device be defined. The intended use of these displays is "to display alphanumeric, graphic, and image data as inputted from any type of medical device." These displays do not provide a measurement function in any way, and it is the device and systems manufacturer's responsibility to verify its function in the integrated device or system.

The display was classified as required by the MDD according to Annex IX of the directive and the medical device (MEDDEV) guidance available at the time of classification. Because the display uses electrical energy and has no direct patient connections and—by itself—no medical utility, the display is classified according to Rule 12 as an MDD Class I device-component or accessory. The MDD states that manufacturers of Class I medical devices or accessories shall satisfy the requirements in regard to design and manufacturing controls, that is, the applicable assessment route to be used for CE-marking under the MDD, and it shall carry the CE mark according to Annex XII of the directive, with no notified body annotation.

[MORE](#)

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- ▶ [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

The applicable safety standards for an MDD Class I display are IEC/EN 60601-1:1900 along with Amendments 1 and 2. To help the medical device designer evaluate the suitability of these displays, Planar has also conducted EMC testing to IEC 60601-1-2 as it can be applied. The display with its power supply alone does not represent a functional medical device. Hence, Planar configured a minimal operating system to exercise the display. The resulting data are made available to interested parties.

This is informative data, not certification data. Certification data must be obtained by the device or system integrator according to Article 12 of the MDD titled "Particular procedure for systems and procedure packs." Paragraph 2 clearly outlines the device or system integrator's responsibility in this matter.

In summary, Planar Systems, Inc. is CE-marking these displays under the Medical Device Directive, which establishes compliance to the basic medical safety standards. However, EMC compliance can only be accomplished in the configured medical device or system and is the responsibility of the device or system manufacturer. Planar has the necessary documentation such as IEC 60601-1 notified body and other third-party test reports and certifications, a risk/hazard analysis, an essential requirements checklist, and the Planar International Electrotechnical Commission (IEC) declaration of conformity.

Planar Systems, Inc., located in Beaverton, Oregon, USA, is the manufacturer of these displays in the meaning of the directive. As required by the MDD in Article 14, Planar Systems, Inc., not residing in the European Economic Area (EEA), has a European representative, Planar Systems, Inc.—Olarinluoma 9, P.O. Box 46, FIN-02201 Espoo, Finland (phone + 358 9 420 01; fax +358 9 420 0200).

In the opinion of Planar Systems, Inc. registration required to put this device into commerce is the responsibility of the medical device/system manufacturer, and Planar supports this requirement by providing a European commission (EC) declaration of conformity. If Planar supplies a display to an end user, rather than a device manufacturer, it is the end user's responsibility to ensure continued compliance with the MDD of the system in which the display is integrated.

For vigilance reporting as required under Article 10 of the MDD, Planar Systems, Inc. will provide any information requested by competent authority to support any reported incident investigation by such an authority.

European Union Declaration of Conformity for Medical Applications

A Declaration of Conformity has been filed for this product. For additional copies of the Declaration of Conformity document, contact Planar Systems, Inc.

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- ▶ [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Product Information

Safety instructions

Store the display in its original shipping carton when it is not in operation for extended periods of time. Use the original packing materials and carton when shipping the display.

- Do not place the display near a window. Exposing the display to rain, water, moisture, or direct sunlight can damage it.
- Do not place anything on top of the video cable. Place the cable clear of foot traffic.
- Do not apply excessive pressure to the screen. Excessive pressure may cause permanent damage to the display.
- Refer all servicing to qualified personnel to maintain your warranty. The display and power adapter units contain no user-serviceable parts.
- Do not cover or obstruct the venting holes on the back of the display.
- Make sure the display storage area has a temperature range between -20 and 65 degrees Celsius. Storing your display outside this range could result in permanent damage.
- Do not expose the display to liquid or drop it. If the case has been damaged, the unit may pose a shock or fire hazard. Unplug the unit immediately and call customer support for assistance.
- Replace any cord or cable that is frayed or damaged with another of the same type and rating as supplied by Planar. The safety and regulatory listings and certifications are based on the cable supplied by Planar.
- Use only the power adapter that has been tested and approved for use with this display product. The power adapter must be plugged into a grounded power outlet.
- Do not use the power adapter near inflammable anesthetics.
- Do not immerse the power adapter in liquid, or a safety hazard could arise during use.
- Disconnect the display from the mains by pulling the mains power cord/mains plug.
- Install the display near a wall outlet that is easily accessible.

[MORE](#)

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- ▶ [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Cleaning instructions

The VS15XAD model continues to operate while being cleaned in a fashion normal for a hospital environment. The display withstands nonabrasive cloths and cleaning solutions used on similar equipment. Use a damp cloth with the cleaning solution for all surfaces. Drip protection is provided in accordance with IPX1 rating defined in the IEC/EN60529 standard. Still, do not spray liquid cleaners directly onto the screen.

To clean the screen

- 1 Stand away from the display and dampen a clean nonabrasive cloth with the cleaning solution. (You can also use 70% isopropyl alcohol for the touchscreen surface.)
- 2 Wipe the screen gently with the cloth. Do not apply excessive pressure.
- 3 Dry the screen with a clean nonabrasive cloth to remove any residue.

Disposal information

The VS15XAD model contains cold cathode fluorescent lamps, which contain a maximum of 12 milligrams (3 milligrams per lamp) of mercury. Follow local ordinances or regulations for its disposal.

Possible cleaning solutions

- 70% isopropyl alcohol
- 1.6 percent aqueous ammonia
- Cidex® (2.4 percent glutaraldehyde solution)
- Sodium hypochlorite (bleach) 10%
- “Green soap” United States Pharmacopoeia (USP)
- 0.5 percent Chlorhexidine in 70% isopropyl alcohol
- Ovation®
- Formula 409®
- Fantastic®
- WexCide®

[MORE](#)

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- ▶ [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS









- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Symbol explanations

These symbols may appear on the display or power adapter.

Symbol	Description
	Proof of conformity to applicable European Economic Community Council directives.
	The product has been tested and certified by CSA to C22.2 No. 601.1-M1990. If this mark appears with the indicators "C" and "US," the product is certified for the Canadian and U.S. markets, meeting the applicable Canadian and U.S. standards.
	The product has been tested to comply with FCC Class B standards.
	The product has been tested and certified by TÜV Rheinland in accordance with EN6061-1.
	More information available in accompanying documents.
	Protective earth ground.
	Indoor use only.
	Socket for headphones.

QUICK LINKS

- Contents
- Index
- Ordering Parts
- Product Information
- Regulatory Compliance
- Warranty

GETTING STARTED

- ▶ About the Display
- Unpack Display
- Identify Components

INSTALLING THE DISPLAY

- Connect Power
- Connect Video
- Connect Audio
- Connect Touch Screen
- Power Management System

USING THE CONTROLS

- Display Controls
- OSD Menu
- Function Menus
- OSD Lockout
- DDC Change

APPENDIXES

- Technical Information
- Troubleshooting

About the VS15 Display

The Planar VS15XAD VS15 display is a high-resolution color monitor designed to be versatile and easy to use. This display can accept either analog or digital video input and display most video standards from 640 x 480 (Video Graphics Array, or VGA, standard) to 1024 x 768 (Extended Graphics Array, or XGA, standard). The controls located on the front panel allow you to easily adjust the display's parameters using onscreen menus.

The display's video input is a single-link, transition minimized differential signaling (TMDS) digital visual interface (DVI). It is compliant with the Digital Display Working Group (DDWG) DVI standard. This interface produces the sharpest display image possible with little need for adjustment. The setup is Plug and Play.

The display uses a mounting plate that conforms to the Video Electronics Standards Association (VESA) mounting standard.* That configuration allows the display to be mounted in a variety of ways, such as on a wall bracket or swing arm. An alternate configuration with a desk stand is also available for easy use on flat work surfaces.

The architecture of this display incorporates an active-matrix LCD panel that produces a clear display with low radiation emission, greatly reducing the radiation-related health concerns associated with CRT monitors.

* The VESA Flat Panel Monitor Physical Mounting Interface (FPMPMI) Standard defines physical mounting interfaces for flat-panel displays, corresponding standards for flat-panel display mounting devices, and associated cable, cable connectors, and power adapter location guidelines. For more information, go to <http://www.vesa.org>.

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Unpack the Display

Inspect the display and other package contents for shipping damage that could cause a fire or shock hazard. Report any shipping damage to the carrier or transportation company immediately, and speak with a customer service representative for assistance.

Make sure the following items are included:

- Active-matrix LCD panel
- Desk stand or VESA mounting plate
- Analog video cable (DVI-VGA)
- Digital video cable (DVI-DVI)
- Stereo audio cable
- Touchscreen cable (VS15XAD-TR only)
- AC power adapter with 1.5-meter (5-foot) cable
- Medical-grade power cord (US or European)
- CD with touchscreen driver and PDF of this manual
- EU Declaration of Conformity

Keep all packing material in case you need to ship, store, or return the display.

Selecting a workspace

Before you unpack the VS15 display, select a suitable workspace for the display and computer. You need a stable, level, and clean surface near a wall outlet.

Avoid setting up the display near a window where sunlight often comes in. You will have difficulty seeing the screen with glare reflecting off the display.

This display is cooled by natural convection. Do not block the cooling vents. Place the display in a location that allows sufficient airflow to ensure proper ventilation.

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)


APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Identify the Components

The VS15 display provides easy access to all controls and peripheral ports. Check the following illustrations of the front and back panels to identify the display controls and ports.

Front panel

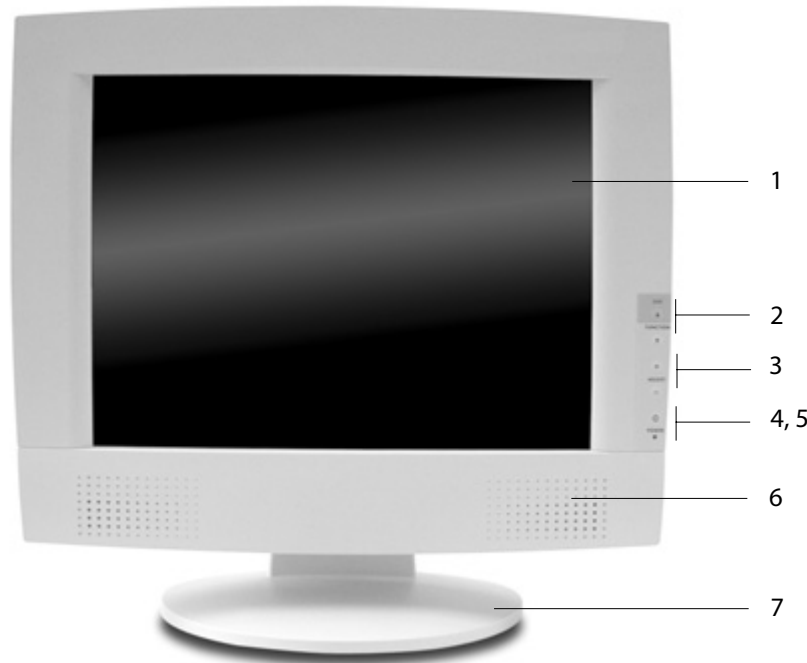

Legend

- LCD screen**
A 15-inch diagonal active-matrix LCD panel. The panel can produce most display standards from 640 x 480 VGA to 1024 x 768 XGA.
- Function UP and DOWN buttons**
UP activates the OSD menu and navigates the OSD main menu; DOWN navigates the submenus.
- Adjust PLUS and MINUS buttons**
Controls to change the value of the selected icon.
- Power switch**
Depress this button for 2 seconds to turn the display on/off.
- Power ON Indicator**
The LED indicator is illuminated when the power is on and blinks when the display is in power-saving mode.
- Stereo speakers**
Built-in amplifier and stereo speakers for sound.
- Desk stand**
Flat-surface support for the display. The stand allows you to tilt the screen to various viewing angles.

[MORE](#)

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- ▶ [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)


USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Back panel

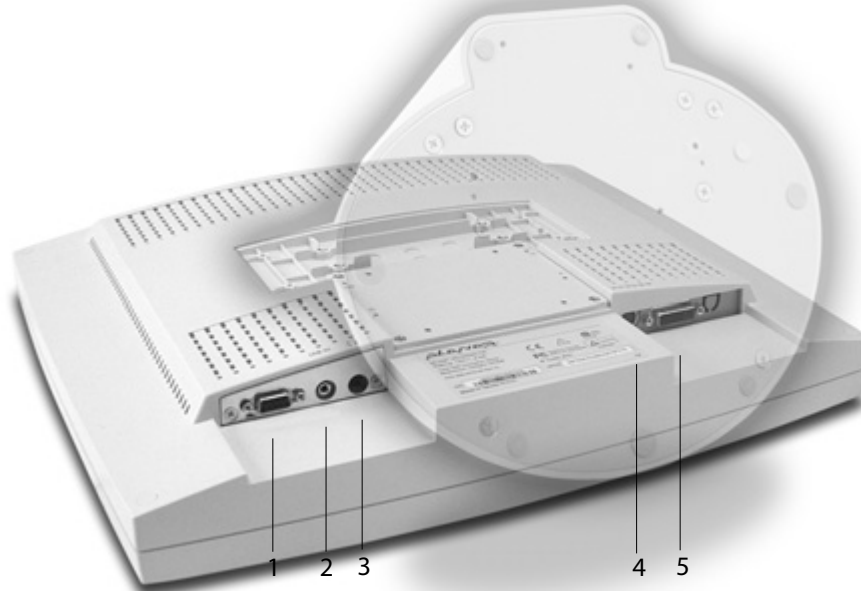

Legend

- 1 Touchscreen port
Port for the RS-232 cable; used to operate the touch screen. This cable is provided with the Optional Touch Screen package.
- 2 Audio Line In
Jack for the audio cable. (You can also connect the CD-ROM Line Out to this jack.)
- 3 Stereo headphone port*
Port for stereo headphones or powered external speakers.
- 4 Power input port (locking/latching mini-DIN 4-pin)
Port for the power connector.
- 5 VGA connector port
Port for a 2-meter analog or digital cable. The analog video cable incorporates a male 29-pin locking DVI connector at one end and a male 15-pin D-sub connector at the other end. The digital video cable incorporates a male 29-pin DVI connector at one end and a male 24-pin DVI connector at the other end.

* When the headphones are plugged in, the stereo speakers are turned off.

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- ▶ [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Connect the AC Power

You must use the Ault power adapter with this display unit.

- 1 Plug the AC power cord into the power adapter.
- 2 Plug the power connector into the locking mini DIN port on the back panel. Push the connector in until the locking mechanism clicks.
- 3 Plug the power cord into a grounded wall outlet.



VS15 Display



Installation tips

If you need to place your display face down to attach cables, lower it carefully on a protective cloth to protect the screen.

Avoiding power surges

Use a surge protector between the power adapter and the outlet to prevent sudden current variations from reaching the display.

“Unlocking” the power cord

To detach the cord, press down on the plug housing and then pull out.

IN OPERATION: No power

Check that the display and computer are both turned on.

Verify that the outlet is functioning. Plug a lamp into the same outlet to check.

Check the status of the LED indicator on the power supply. If the green light is off, call customer support for assistance.

Check the status of the LED indicator on the display. If the display is on but the green light is neither steady nor blinking, call customer support for assistance.

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- ▶ [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Connect the Video Cable

- 1 Turn off your computer and display before connecting the two units.
- 2 Plug the video cable into the D-sub VGA connector port on the back panel.
- 3 Plug the other end of the cable into the VGA port on the computer.



- 4 Make sure the cable are properly aligned, then tighten the connecting screws to ensure a secure connection.
- 5 Turn on the display first and then the computer.



IN OPERATION: Blank screen

Check the LED indicator on the display. If it is steady green, but you have no image on the screen, check that all connections are secure and the power is on. If the problem still exists, call customer support for assistance.

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- ▶ [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Connect the Audio Cable

- 1 Plug the audio cable to the Line Out on the audio card in your computer.
- 2 Plug the other end of the audio cable to the Line In jack on the display.



- 3 Adjust the volume of the stereo speakers by using the volume control function on the onscreen display menu.



On volume control

In some instances, the volume control function may be disabled. If so, the volume has been preset to the maximum.

Although the display speakers are adequate for most audio applications, Planar does not recommend using the display speakers as the exclusive audio source for medical alarms or applications critical for audio performance.

IN OPERATION: No sound

Verify that your display unit has speakers. Try loading a CD or another audio program.

Check the volume setting on the display and the computer. Disable mute or increase the volume.

Check that the audio cable is plugged into the OUTPUT on the computer and INPUT on the display.

Plug headphones or speakers into your computer to see if they produce sound.

QUICK LINKS

[Contents](#)
[Index](#)
[Ordering Parts](#)
[Product Information](#)
[Regulatory Compliance](#)
[Warranty](#)

GETTING STARTED

[About the Display](#)
[Unpack Display](#)
[Identify Components](#)

INSTALLING THE DISPLAY

[Connect Power](#)
[Connect Video](#)
[Connect Audio](#)
▶ [Connect Touch Screen](#)
[Power Management System](#)

USING THE CONTROLS

[Display Controls](#)
[OSD Menu](#)
[Function Menus](#)
[OSD Lockout](#)
[DDC Change](#)

APPENDIXES

[Technical Information](#)
[Troubleshooting](#)

Connect the Optional Touch Screen

- 1 Plug the RS232 cable into the RS232 port on the back panel.
- 2 Plug the other end of the cable to the RS232 serial port on your computer.
- 3 Load the touchscreen driver from the CD enclosed.



VS15 Display



IN OPERATION: No touch

The CD shipped with your display contains several touchscreen drivers. Be sure the proper touchscreen driver is installed on your computer.

If you have conflicts or any problems with the driver, try reinstalling it.

If you continue to have problems, then you need to determine the source, the display or the computer. Try using the display with another computer, or installing the driver on another display.

If the problem still exists, contact customer support for assistance.

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)

▶ [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Power Management System

The VS15 display complies with the VESA DPMS standard. This standard provides four power-saving modes, based on the display detecting the horizontal or vertical sync signal. This table describes the four modes.

Mode	AC Input Power (including AC adapter)	LED Status
ON	with audio without audio	Steady green Steady green
Standby	5 watts maximum	Blinking green
Suspend	5 watts maximum	Blinking green
OFF	5 watts maximum	OFF

When the display is in power-saving mode, or when it detects an incorrect timing, the display screen goes blank and the power LED indicator blinks.

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)


APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Display Controls

The VS15 display features an intuitive, menu-driven, onscreen display. Use the OSD menu to adjust the contrast, brightness, display position, color temperature, stereo speaker volume, and set the OSD parameters.

Use the push buttons on the front of the display to adjust the controls. Access the OSD menu with a quick press to the OSD/Function UP button when the display is powered-up. If your computer is in power-saving mode, or is powered-down, the OSD menu is inaccessible.

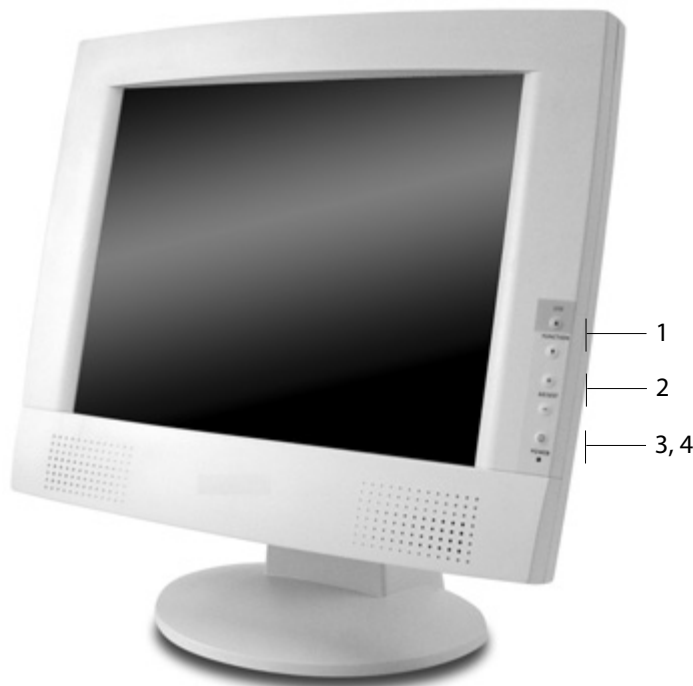

Legend

- 1 Function UP and DOWN buttons
Function UP activates the OSD menu and navigates the main menu. Function DOWN navigates the submenu.
- 2 Adjust PLUS and MINUS buttons
Increase or decrease the value of the selected function. Each button also serves a Function ENTER button.
- 3 Power switch
Turns the display ON or OFF when pressed for a minimum of 2 seconds.
- 4 LED power indicator
Is lit continuously when the display is on; blinks when the display is in power-saving mode.

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)

▶ OSD Menu

- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Onscreen Display Main Menu

The available control functions of the onscreen display are grouped into categories. The display's selected mode of operation (either analog or digital) determines the available categories.

Onscreen Display Menu

Analog operation



Basic

Change brightness, contrast and view DDC mode.



Position

Change the display position.



Miscellaneous

Adjust OSD position and display information about the monitor.



Color

Adjust the color settings.

Digital operation



Digital Basic

Change brightness, contrast and view DDC mode.



Miscellaneous

Adjust OSD position and display information about the monitor.

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES


- [Technical Information](#)
- [Troubleshooting](#)





Function Menus

The following tables describe the items of each OSD menu.

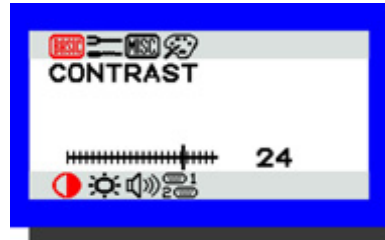

Basic Menu



	Contrast	Adjust the contrast level of the display.
	Brightness	Adjust the brightness of the display backlight.
	Volume	Adjust the audio volume.
	DDC	Digital/analog DDC mode (information only).

[MORE](#)

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- ▶ [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)



Position Menu



Auto Adjust

Automatically adjust the picture quality and alignment. (Use this function in Windows or similar environments. Not available in the interlaced modes of operation.)



Phase

Adjust the screen display for focus and clarity.



Clock

Adjust the display pixel alignment.



H-Position

Adjust the display position horizontally.



V-Position

Adjust the display position vertically.



Graph/Text

Select Graph or Text expansion method while 640 x 400 or 720 x 400 mode. (Not available in all modes.)



Reset

Reset all the parameters of this menu.

[MORE](#)

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- ▶ [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)



Miscellaneous Menu



H-Position

Adjust the onscreen display position horizontally.



V-Position

Adjust the onscreen display position vertically.



Menu Timer

Adjust the length of idle time before the menu display turns off (5, 10, 15, 20, 25, 30 seconds).



Information

Display the incoming display mode and firmware version.



Language

Choose the appropriate language: English, French, German, Italian, or Spanish.



Reset

Reset all the parameters of this menu.

[MORE](#)

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS


- [Display Controls](#)
- [OSD Menu](#)
- ▶ [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)



Color Menu *

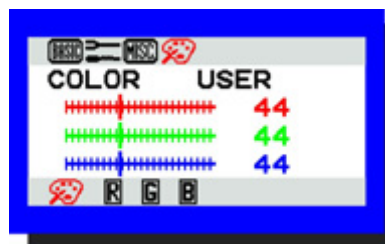

COLOR 9300	Set the color temperature of white to 9300° Kelvin
COLOR 6500	Set the color temperature of white to 6500° Kelvin
COLOR USER	Enable "User Color" selection, and adjust individual RGB levels
R	Adjust red contrast
G	Adjust green contrast
B	Adjust blue contrast

* There are three sets of color temperature settings available: two for standard settings and one for user adjustment.

[MORE](#)

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- ▶ [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)



Digital Basic Menu



Contrast

Adjust the contrast level of the display.



Brightness

Adjust the brightness of the display backlight.



Volume

Adjust the audio volume.



DDC

Digital/analog DDC mode (information only).

[MORE](#)

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- ▶ [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)



Digital Miscellaneous Menu



H-Position

Adjust the onscreen display position horizontally.



V-Position

Adjust the onscreen display position vertically.



Menu Timer

Adjust the length of idle time before the menu display turns off (5, 10, 15, 20, 25, 30 seconds).



Information

Display the incoming display mode and firmware version.



Language

Choose the appropriate language: English, French, German, Italian, or Spanish.



Reset

Reset all the parameters of this menu.

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)

- ▶ [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Onscreen Display Lockout

The display incorporates an OSD lockout function. Pressing controls Function DOWN, Adjust PLUS, and Adjust MINUS—that is, buttons 2, 3, and 4—simultaneously lock out the onscreen display. Display settings cannot be altered at this point, but navigation through the OSD menus is possible. An “OSD” lock appears at the bottom of the OSD menu. To unlock the onscreen display, press the same three controls in the same manner as if locking the display.

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)

► [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

DDC Change

Follow these instructions to change the display from analog to digital mode or from digital to analog mode.

- 1** Make sure the display power is ON. (The LED indicator is steady or blinking).
- 2** Disconnect video cable from the display. The display indicates “No Video.”



- 3** Wait for the “No Video” message to disappear.
- 4** Push the Function UP (▲) and Adjust MINUS (⊖) buttons simultaneously. This creates a change in the DDC file; one of the following messages appears.



The message on the left indicates a change from analog to digital mode.
The message on the right indicates a change from digital to analog mode.

- 5** Plug the video cable into the display. The display shows the supplied video input.

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [▶ Technical Information](#)
- [Troubleshooting](#)

Technical Information

VS15XAD/VS15XAD-TR		Specification
Display panel		381 mm (15-in.) XGA active-matrix color TFT LCD
Display color		262,144 colors
Dimension (mm)		408 x 333 x 85 (W x H x D)
Weight (kg)		5 kg
Display area (mm)		304.1 x 228.1 (W x H); 380.1 mm (15-in.) diagonal
Response time (ms)		30 ms ON and 25 ms OFF maximum
Viewing angle		±80 degrees typical (horizontal or vertical)
Contrast ratio		400:1 typical
Brightness	Non-touch	228 cd/m ² typical
	Resistive touch	200 cd/m ² typical
Pixel pitch (mm)		0.297 (W) x 0.297 (H)
Reliability	Monitor	40,000 hours mean time between failure (MTBF)
	Backlight	50,000 hours to reach 50% of initial brightness
Video interface		15.4 M, 8 bit
Scanning frequency	Analog	Horizontal: 24 to 62 kHz; Vertical: 50 to 90 Hz
	Digital	Horizontal: 30 to 64 kHz; Vertical: 56 to 85 Hz
Power consumption		40 watts maximum; <5 watts in standby or off mode
Power adapter, Ault		12 volts / 3.5 amps, 40 watts
	Input power	100 volts AC to 240 volts AC at 50 to 60 Hz, AC Adapter (external)
Audio	Stereo speakers	1 watt amplifier
	Maximum input levels	1 volt RMS typical
	Input impedance	2000 ohms typical
Stereo headphone jack output	Output power	1 watt at 8 ohms
Temperature	Operating	0° to 40° C
	Nonoperating	-20° to 65° C
Humidity	Operating	10% to 93% relative humidity noncondensing
	Nonoperating	0% to 95% relative humidity noncondensing
Altitude	Operating	0 to 3500 m
	Nonoperating	0 to 1220 m
Shock		50 g, 11 ms duration operating/nonoperating (Half sine with three shocks on each of six axes)
Regulatory		See Regulatory Compliance

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)


APPENDIXES

- [Technical Information](#)
- [▶ Troubleshooting](#)

Troubleshooting

Problem: Display indicates “No Video”

When the display is powered-on and no video signal is being received, the No Video message appears until the display enters power-saving mode.

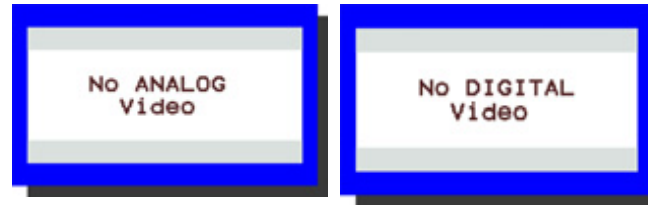

Solution: Ensure that the video cable is connected to the user system and the display.

Problem: No image on screen

Solution: To produce an image on the LCD screen, follow these steps:

- 1 Make sure that the power indicator on the display is illuminated, all connections are secure, and the system is running on a supported video timing mode.
- 2 If the power LED is not lit, secure the AC power connector. If the AC adapter has an LED, verify that the LED is illuminated. If it is not, speak with customer support.
- 3 Turn the display off and then turn it back on.
- 4 If one is available, connect your system to another VS15 display. If the system functions properly with the alternate display, but not with the VS15XAD display, and the VS15XAD display's power LED is blinking, the output timing of the computer's video board may be out of the display's synchronous range. Change to an alternate mode that is listed in [Appendix A](#) or connect to an alternate video source and repeat steps 1 and 2.
- 5 Ensure that the computer's video port is enabled. This is a function of the video board in the user computer system. Refer to the video board documentation for instructions on how to enable the video port.
- 6 If the system does not function with either the alternate display or the VS15XAD display, get help from technical support.

QUICK LINKS

Contents

▶ Index

Ordering Parts

Product Information

Regulatory Compliance

Warranty

GETTING STARTED

About the Display

Unpack Display

Identify Components

INSTALLING THE DISPLAY

Connect Power

Connect Video

Connect Audio

Connect Touch Screen

Power Management System

USING THE CONTROLS

Display Controls

OSD Menu

Function Menus

OSD Lockout

DDC Change

APPENDIXES

Technical Information

Troubleshooting

Index

A

AC power, connecting 5

Adjust button 3, 10

adjusting display 10

analog-to-digital mode 19

audio

 cable 2

 line 4

B

back panel 4

Basic menu 12

C

cable

 audio 2

 audio line-in port, connecting 4

 touchscreen 2

 video analog 2

 video digital 2

 video input 4

cleaning instructions vii

Color menu 15

components, identifying 3

connecting

 AC power 5

 stereo speakers 7

 touch screen 8

 video cable 6

connector ports 4

controls, display 10

D

DDC change 19

desk stand 3

Digital Basic menu 16

Digital Miscellaneous menu 17

digital-to-analog mode 19

display

 adjusting 10

 back panel 4

 cleaning vii

 controls, menu 10

 front panel 3

 installing 5

 setup 2

 troubleshooting 21

 unpacking 2

disposal information vii

DPMS 9

F

front panel 3

Function buttons 3, 10

I

identifying components 3

information

 disposal vii

 ordering parts 27

 product vi

 technical 20

installing display 5

L

LCD screen 3

 cleaning vii

 troubleshooting 21

QUICK LINKS

- Contents
- ▶ Index
- Ordering Parts
- Product Information
- Regulatory Compliance
- Warranty

GETTING STARTED

- About the Display
- Unpack Display
- Identify Components

INSTALLING THE DISPLAY

- Connect Power
- Connect Video
- Connect Audio
- Connect Touch Screen
- Power Management System

USING THE CONTROLS

- Display Controls
- OSD Menu
- Function Menus
- OSD Lockout
- DDC Change

APPENDIXES

- Technical Information
- Troubleshooting

M

- menu
 - analog operation 11
 - Basic 12
 - Color 15
 - Digital Basic 16
 - Digital Miscellaneous 17
 - digital operation 11
 - function 12
 - main, onscreen display 11
 - Miscellaneous 14
 - Position 13

Miscellaneous menu 14

O

- onscreen display
 - analog operation 11
 - digital operation 11
 - lockout 18
 - main menu 11
- ordering parts 27

P

- ports, connector 4
- Position menu 13
- power
 - connecting AC 5
 - indicator 10
 - input port 4
 - management system 9
 - ON indicator 3
 - switch 3, 10
- product information vi

R

- repair 24
- RS232 connector 4

S

- safety instructions vi
- selecting workspace 2
- stereo speakers 3, 7
 - headphone port 4

T

- technical information 20
- touch screen
 - cable 2
 - cleaning vii
 - connecting 8
 - port 4
- troubleshooting 21

U

unpacking display 2

V

- VESA DPMS 9
- video
 - analog cable 2
 - cable, connecting 6
 - digital cable 2
 - input port 4

W

- warranty 24
- workspace, selecting 2

QUICK LINKS

- Contents
- Index
- Ordering Parts
- Product Information
- Regulatory Compliance

► Warranty

GETTING STARTED

- About the Display
- Unpack Display
- Identify Components

INSTALLING THE DISPLAY

- Connect Power
- Connect Video
- Connect Audio
- Connect Touch Screen
- Power Management System

USING THE CONTROLS

- Display Controls
- OSD Menu
- Function Menus
- OSD Lockout
- DDC Change

APPENDIXES

- Technical Information
- Troubleshooting

Overview of Standard Warranty

Summary

- Standard 1-year “repair and return” warranty on all VS15 displays
- Typical repair turnaround time of 10 business days
- Repair facilities and technical support in the United States and in Europe

Standard Warranty Return Procedure

As a Planar Standard Warranty customer, you must follow the procedure below if you have a non-functioning display. Planar customer service staff will attempt to correct any minor issues that may be causing the problem. Once Planar has determined that you have a non-functioning product, Planar will arrange for return and repair of the non-functioning product.

- 1** Contact Planar via the web at <http://www.planar.com/support>. In North America, call (866) PLANAR1 (866.752.6271). In Europe, call +358 9 420 01 or send your info by fax to +358 9 420 0200. You must have the model number, serial number, and proof-of-purchase available.
- 2** Planar customer service staff will attempt to correct any minor issues that may be causing the problem. If we are unable to correct the problem to your satisfaction, we will issue a Return Material Authorization (RMA).
- 3** You must return the product, as specified, to Planar Systems. Do not return the battery cell or cart to planar Systems unless directed by Planar customer service.
- 4** Planar will validate the defect, repair the unit, and return the unit to you. The typical turnaround time is 10 business days.

At its sole discretion, Planar may charge you the customer for returned units deemed functional or for returned units with only customer-caused damage. It is the responsibility of the customer to properly package the hardware, include all appropriate materials, and return it to the location specified by Planar customer service.

[MORE](#)

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- ▶ [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Summary Limitations and Exclusions of VS15 Displays

- 1 Warranty is valid only for the first consumer purchaser (non-transferable).
- 2 Warranty does not cover the battery cell(s), mouse, or keyboard.
- 3 The customer must provide original proofs of purchase for the hardware.
- 4 Warranty is void on any product with a defaced, modified, or removed serial number.
- 5 Warranty is void on any product with damage, deterioration, or malfunction resulting from the following:
 - a) Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - b) Repair or attempted repair by anyone not authorized by Planar.
 - c) Any damage of the product due to shipment.
 - d) Removal or installation of the product.
 - e) Causes external to the product, such as electric power fluctuations or failure.
 - f) Use of supplies or parts not meeting Planar specifications.
 - g) Normal wear and tear, including backlights dimming over time.
 - h) Any other cause which does not relate to a product defect.
- 6 Warranty excludes removal, installation, and setup service charges.

Limitation of Implied Warranties

THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

[MORE](#)

QUICK LINKS

- [Contents](#)
- [Index](#)
- [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- ▶ [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Exclusion of Damages

THE LIABILITY OF PLANAR IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. PLANAR SHALL NOT BE LIABLE FOR THE FOLLOWING:

- 1** DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS, OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THEIR POSSIBILITY OF SUCH DAMAGES.
- 2** ANY OTHER DAMAGES, WHETHER INCIDENTAL, INDIRECT, CONSEQUENTIAL, OR OTHERWISE.
- 3** ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY.

Effect of Local Law

This warranty gives you specific legal rights, and you may have other rights, which vary from locality to locality. Some localities do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

QUICK LINKS

- [Contents](#)
- [Index](#)
- ▶ [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Ordering Information

Non-touch display

VS15XAD Display	Part Number
VS15XAD 15-inch XGA Medically Certified Display with desk stand and US power cord (non-touch)	996-0475-00
VS15XAD 15-inch XGA Medically Certified Display with desk stand and European power cord (non-touch)	996-0475-01
VS15XAD 15-inch XGA Medically Certified Display with universal mounting plate and US power cord (non-touch)	996-0475-02
VS15XAD 15-inch XGA Medically Certified Display with universal mounting plate and European power cord (non-touch)	996-0475-03

Cable & Power Adapter	Part Number
Cable, DVI-VGA, 2 m, white, smooth surface	903-0227-00
Cable, DVI-DVI, 2 m, white, smooth surface	903-0204-00
Audio cable, 1.5 m	903-0168-00
Power adapter	903-0013-01

[MORE](#)

QUICK LINKS

- [Contents](#)
- [Index](#)
- ▶ [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Resistive-touch display

VS15XAD-TR Display

Part Number

VS15XAD-TR 15-inch XGA Medically Certified Display with desk stand and US power cord (resistive touch)

996-0476-00

VS15XAD-TR 15-inch XGA Medically Certified Display with desk stand and European power cord (resistive touch)

996-0476-01

VS15XAD-TR 15-inch XGA Medically Certified Display with universal mounting plate and US power cord (resistive touch)

996-0476-02

VS15XAD-TR 15-inch XGA Medically Certified Display with universal mounting plate and European power cord (resistive touch)

996-0476-03

Cable & Power Adapter

Part Number

Touchscreen cable, 2 m, white, smooth surface

903-0233-00

Power adapter, Ault

903-0013-01

[MORE](#)

QUICK LINKS

- [Contents](#)
- [Index](#)
- ▶ [Ordering Parts](#)
- [Product Information](#)
- [Regulatory Compliance](#)
- [Warranty](#)

GETTING STARTED

- [About the Display](#)
- [Unpack Display](#)
- [Identify Components](#)

INSTALLING THE DISPLAY

- [Connect Power](#)
- [Connect Video](#)
- [Connect Audio](#)
- [Connect Touch Screen](#)
- [Power Management System](#)

USING THE CONTROLS

- [Display Controls](#)
- [OSD Menu](#)
- [Function Menus](#)
- [OSD Lockout](#)
- [DDC Change](#)

APPENDIXES

- [Technical Information](#)
- [Troubleshooting](#)

Cables and accessories

Miscellaneous	Part Number
Cable, DVI-VGA, 3 m, white, smooth surface	903-0228-00
Cable, DVI-VGA, 3 m, black, smooth surface	903-0229-00
Cable, DVI-VGA, 10 m, white, smooth surface	903-0230-00
Cable, DVI-DVI, 3 m, white, smooth surface	903-0231-00
Cable, DVI-DVI, 10 m, white, smooth surface	903-0232-00
European medical grade power cord, 3 m	903-0251-00
US medical grade power cord, 3 m	903-0169-00
Touchscreen cable, 3 m, white, smooth surface	903-0234-00
Touchscreen cable, 10 m, white, smooth surface	903-0235-00
Universal mounting plate	501-0301-00
Planar desk stand	501-0348-00

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>