

Elegant Webcam 2.0Mega Pixel Built-in MIC W/UVC RCM-2655V User Manual

## Contents

Introduction2
System Requirements for Device2
Package Contents3
PC Camera Introduction3
Set up PC Camera4
Software Installation
ArcSoft WebCam Companion 3.05
ArcSoft Magic-i7
Snapshot by ArcSoft WebCam Companion 3.09
Camera Specification10

#### Introduction

Welcome to the world of digital imaging. The following information will help you to use your camera to its full capabilities.

For viewing pictures or video, camera must be connected to your personal computer.

This camera is support Microsoft Video Class and plug & play directly without driver.

## System Requirements for Device

- Pentium<sup>®</sup> P4 1.2G CPU
- Free USB2.0 port
- 256MB RAM internal memory minimum
- 500MB free hard disk space
- Internet connection
- CD-ROM drive
- Windows compatible sound card and speakers
- Windows<sup>®</sup> XP Service Pack II
- Windows Vista<sup>™</sup> / Windows 7

#### Note:

- If your system is Windows XP Service Pack I, please go to <u>www.microsoft.com</u>. It's free to update your system to Windows XP Service Pack II.
- 2. System requirement required by webcam only.
- 3. Before using WCC3, please make sure you have Media Player V.9 or above.

## Package Contents



PC camera




CD-disc

Rea	Ű		
	-	n Lobaja Par	 

User Manual


#### PC Camera Introduction

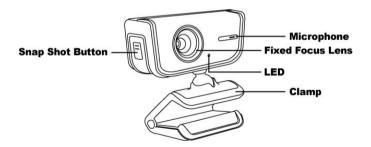

#### Set up PC camera

You may mount the PC camera to your laptop or stand on the desk.

Plug the PC camera into the USB port of PC or laptop properly.

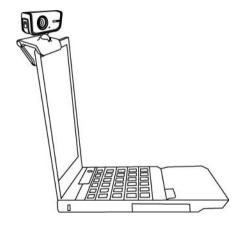

## Software Installation

## ArcSoft WebCam Companion 3.0

- Turn on the computer and insert CD installation Disc into your CD-ROM drive. Select and click "ArcSoft WebCam Companion 3.0"
- 2. Choose Setup Language

3. Click "Next"

4. Click "Yes"

Rosewill				
Elegant Webcam 2.0Mega Pixel Built-in MIC W/UVC RCM-2655V				
ArcSoft Webcompanion 3.0				
ArcSoft Magic-i				
Acrobat Reader				
Manual				
EXIT				
Choose Setup Language				
Select the language for this installation from the choices below.				
English				
OK Cancel				
ArcSoft WebCam Companion 3				
Here and the second sec				
(East Non) Carcel				
ArcSoft WebCam Companion 3				
Licence Agreement Please read the following licence agreement carefully ArcSoft'				
Press the PAGE DOWN key to see the set of the agreement.				
End User License Agreement				
The following is a legal software license agreement between you, the software and use, and Auclinit, Inc. Carefully need the license agreement between using the where Auclioit contexes ("Software") invitable the Software on a compater or other handware device indicates that you have sead the license agreement and agree to its Term.				
1. Grant of License. This license permits you to use one copy of the Software included in this package of product on any imple computer. For each individe denses, the program can be "In use" on only one computer or hardware device at any given time. The				
Do you accept all the terms of the preceding License Agreement? If you choose No, the setup will close. To install WebCare Companion, you must accept this agreement.				
c Back Yan No				

## 5. Click "Next"



6. Click "Next"

7. Click "Finish"



ArcSoft WebCam Compan	ion 3
ArcSoft	hertalSheld Vicent Complete Seng-ta Holden herdig VictCan Comparise aryon : computer
	THE THE CONT

# Software Installation ArcSoft Magic-i

- Turn on the computer and insert CD installation Disc into your CD-ROM drive. Select and click "ArcSoft Magic-i"
- 2. Choose Setup Language

3. Click "Next"

4. Click "Yes"

Rosewill
Elegant Webcam 2.0Mega Pixel Built-in MIC W/UVC RCM-2855V
ArcSoft Webcompanion 3.0
ArcSoft Magic-i
Acrobat Reader
Manual
EXIT
Choose Setup Language
Select the language for this installation from the choices below.
English
OK Cancel
ArcSoft Magic-I Visual Effects 7
ArcSoft Arc
Clark Det Cancel
ArcSoft Magic-I Visual Effects 7
License Agreement Please read the following license agreement carefully ArcSoft*
Piece the PAGE DOWN key to see the rest of the agreement.
For U limit Learners Approximate The 6 degrees is Adjust indexes General generative factores you. He calmines and care, and Adviced in the Calming Advice factores approximately the Master advices and Adviced in the Calming Advice factores approximately and advices and the Calming Advice factores approximately and the Adviced factores of Learners The General proximately approximately and the Same adviced in the Calming Adviced in the Adviced Adviced and the Adviced Adviced Adviced Adviced Adviced Adviced and the Adviced Adviced Adviced Adviced Adviced Adviced adviced A
nscribed

## 5. Click "Next"



6. Click "Next"

elect Program Folder Please select a program folder.		
riease teleti a program toder.		ArcS
Setup will add program icons to the name, or select one from the existe	Program Folder listed below: Y ig folders list. Elick Next to con	'ou may type a new folds invat
Program Folders:		
ArcSoft Magic Misual Effects 2		
Existing Folders:		
Accessores Administrative Tools		
Games		
Startup		

7. Click "Finish"



2. Click "Capture"

1

 Click "Capture" for capture image and the picture is saved.

 Click "Record Video" for recording.

## Note:

The Snapshot button and its featuring functions are not supported under Windows Vista and Win7. To access this function, please use the bundled software -ArcSoft Webcam Companion 3.0

Download from Www.Somanuals.com. All Manuals Search And Download.

Snapshot by ArcSoft WebCam Companion 3.0

Click on the "WebCompanion 3.0" icon









## **Camera Specification**

Image Sensor	1600x1200 pixels, CMOS
Lens Specification	F2.8, f=4.8mm, Fixed Focus Lens
White Balance	Auto
Exposure	Auto
Frame Rate	1600 x 1200 pixels @ 1~5fps
	1280 x 960 pixels @ 5~9fps
	800 x 600 pixels @ 15~20fps
	640 x 480 pixels @ 25~30fps
Focus Range	Fixed focus, 30cm to infinity
Depth of Field	50cm to 100cm
PC Interface	USB2.0
Video Format	WMV
Audio	Built-in microphone
Video Capture Res.	640x480/ 352x288 pixels
System Requirements	Support Microsoft Video Class
	Win XP Service Pack II above
	Without driver
Snapshot	By software
Still Capture Res.	Up to 8M pixels
	(by WCC3 interpolation)
Power	From USB port
Bundled Software	ArcSoft WebCompanion 3.0
	ArcSoft Magic-i

Specifications are subject to change without prior notice.

10

Thank you for purchasing a quality Rosewill Product. Please register your product at : www.rosewill.com for complete warranty information and future support for your product.

This symbol on the product or in the nstructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.



Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com