


Quick instructions Set 55 TV Set 50 TV

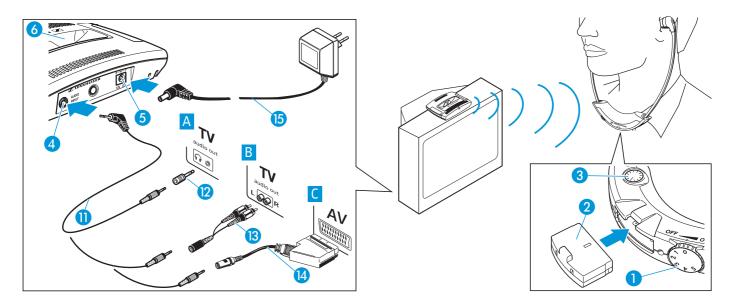

Connecting the system components

- Plug in one end of the connecting cable (1) to the socket on your sound source (e.g. television). If necessary, use one of the adapters (2), (3) or (4) (not included). Plug in the other end of the connecting cable (1) to the blue socket (4) on the transmitter.
- Connect the mains unit (5) to the transmitter (5) and to the mains.
- Place the receiver into the transmitter's charging compartment 6.
- ▶ Before you use the rechargeable battery 2 for the first time, charge it for at least 14 hours.
- Adjust the volume of your sound source to a sufficient (medium) level.

Switching on and using the stethoset receiver

- ► Turn the volume control 1 in the direction of "ON" until it clicks.
- First adjust the volume to a low level. This protects your hearing from damage. Then put the receiver on and adjust the volume to a comfortable level.
- ▶ Use the balance control ③ to adjust the volume between the left and right ear.
- If you cannot hear anything through the receiver, increase the volume of your sound source.

Switching off the stethoset receiver

To switch the receiver off, turn the volume control 1 in the direction of "OFF" until it clicks.

Charging the stethoset reciever

Switch the receiver off. Place the receiver into the transmitter's charging compartment 6 without exerting too much pressure. With a fully charged battery, the operating time is approx. 9 hours.

For details on the use of the Set 50 TV/Set 55 TV, please refer to the enclosed operating instructions.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com