

BODY GLOVE

Earglove BlueSport™

USER'S GUIDE

GUIDE D'UTILISATION

GUÍA DEL USUARIO

BENUTZERHANDBUCH

GUIDA PER L'UTENTE

GEbruikersHANDLEIDING



Notice

EARGLOVE™ and EARGLOVE BlueSport™ are registered trademarks of Body Glove®.

This User's Guide is published without warranty as to the Guide, and it provides no warranty in the referenced product except as provided in the End User Limited Product Warranty. Improvements and modifications to this manual, including those necessitated by typographical errors, inaccuracies or improvements to equipment may be made at any time and without notice.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications to your device not expressly approved by Fellowes can void the user's authority to operate the equipment.

BLUETOOTH® is a trademark of the Bluetooth SIG, Inc. The Bluetooth® logo and trademarks are owned by Bluetooth SIG, Inc. Copyright© 2003 Fellowes, Inc. All rights reserved.

Contents

Overview	3
Headset Controls	3
Getting Started	3
Charging Your Earpiece	3
Charging and LED Indicator Light Table	3
Connecting Earpiece to the Charger	4
Adjusting Earpiece	4
Pairing Earpiece to Your Phone	5
Resetting the Earpiece	5
General Operation	5-6
(On/Off, volume control, making calls, voice dialing, answering calls, muting calls)	
Troubleshooting	6-7
Limited Warranty	7
Technical Specifications	7

Overview

This User's Guide focuses on how to use the Earglove BlueSport™ with your Bluetooth® compatible mobile phone. You can connect your Earglove BlueSport™ earpiece to your mobile phone to keep your hands free for other tasks at the office or in the car. The Earglove BlueSport™ can also be used with Bluetooth® compatible PDAs, PCs and other consumer electronic devices that support the Bluetooth® Headset Profile version 1.1.

What is Bluetooth® Wireless Technology?

Bluetooth® wireless technology makes it possible to connect consumer electronic devices using a radio link instead of cables to transmit voice and data information. Bluetooth® technology uses a global frequency range to ensure compatible communication with a variety of devices worldwide.

Earglove BlueSport™ Headset Controls



Figure 1

Getting Started

Before you use the Earglove BlueSport™ earpiece for the first time:

- Charge the earpiece (see page 3)
- Decide if right or left ear will wear the earpiece (see page 4)
- Pair the earpiece with a Bluetooth® mobile phone (see page 5)

Store and charge earpiece in a safe place when not in use.

SECTION 1: Charging Your Earpiece

Your built-in rechargeable Lithium-Polymer Battery typically provides up to 4 hours of talk time or 120 hours of standby time. Your Earglove BlueSport™ will be fully recharged after 4 hours and 80% recharged after 2 hours.

- Charge the earpiece for at least 4 hours before using it
- Use only the charging adapter supplied with the earpiece. Other adapters may damage unit and void the warranty
- Use the table below as your reference for charging status

Charging and LED Indicator Light Table

LED Light Color	Battery or Charging Status
Constant Amber	Battery charging while earpiece is off
Amber/Green Flash Alternating	Pairing mode
Solid Green	When earpiece is turned off and fully charged, the LED light will glow green
2 Amber Flashes	Low battery power (LED light will flash until the battery runs out or is charged)

Connecting Earpiece to the Charger

Your Earglove BlueSport™ features an auto-switching power supply for voltages between 100V-240V AC. The plug configuration of the power supply is appropriate to the country where your earpiece was purchased. If you travel to foreign countries and wish to charge your earpiece, you will need to purchase the appropriate adapter for the country you are visiting. Your charger is also supplied with an adapter cable approximately 23cm (9 inches) long. This adapter cable connects your earpiece to the charger. To charge your earpiece, connect the adapter cable to your charger and then to the earpiece as illustrated in Figure 2.



Figure 2

NOTE: The charging adapter is 'keyed' to fit only one way into your earpiece. Do not force the adapter cable into the connecting port of the earpiece as this may damage the earpiece and void your warranty.

SECTION 2: Adjusting the Earpiece

To Adjust for Preferred Ear:

The unit is set up at the factory for use on the right ear. To wear earpiece on the left ear, change the orientation of the ear hook as follows:

Gently grasp the ear hook and pull it off the speaker housing (1) then flip it over to the position shown in (2) and replace it onto the speaker housing.

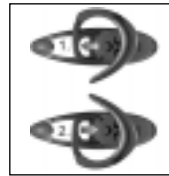


Figure 3

Folding the Boom of Your Earpiece



Figure 4

Your earpiece has a folding boom for easy storage when the unit is not being worn. To fold the boom, hold the tip and rotate it towards the housing until it folds flat.

Putting on Your Earpiece

First, place the ear hook at the top of your ear, with the end of the hook behind your ear. Then, gently slide the hook of the earpiece behind your ear using a slight rotational motion as shown in Figure 5. Once the hook is in place, gently position the earpiece against your ear for a secure fit.



Figure 5

SECTION 3: Pairing Earpiece to Your Phone

Before you use the earpiece for the first time, you must pair the earpiece with your mobile phone. For Hands Free mode pairing instructions, see below.

To pair in Headset mode:

1. Activate the Bluetooth® function on your phone or other device. Please refer to the owner's manual of your phone for instructions on activating the Bluetooth® pairing function.
2. To pair the earpiece, press the pairing button once until the LED indicator light on the earpiece flashes an alternating green and amber. Make sure the earpiece and phone are close to each other.
3. Follow the Bluetooth® pairing/set-up instructions and screen prompts on your phone to pair it with the earpiece. Please refer to your phone's owners manual or go to www.fellowes.com/bluetooth for specific pairing instructions.
4. When prompted, enter the earpiece password: 0000. If desired, password may be changed. Please refer to the owner's manual of your phone for instructions.
5. If pairing is successful, the LED indicator light will show solid green for 4 seconds and then switch off.

To pair in Hands Free mode: Follow steps 1 and 2, and then press the pairing button again. The LED indicator light will flash alternately amber and green at a faster cycle. Then continue with steps 3 to 5.

PLEASE NOTE: Most Bluetooth® phones will pair with the earpiece in Headset mode, but some will also pair in Hands Free mode which provides additional functionality (see your phone's owners manual for more information). Pairing in Hands Free mode automatically pairs the headset in Headset mode as well.

If pairing does not work, wait 90 seconds, reset your phone or device to the beginning of the Bluetooth® pairing process, and repeat steps 1-5. Once pairing is complete, your earpiece will work with your cell phone any time both units are powered on and in close proximity to each other.

Resetting the Earpiece

When pairing the earpiece to a new Bluetooth® device, the earpiece resets itself to its default settings. This clears all current pairings and returns all functions (e.g. volume) to the original setting.

SECTION 4: General Operation

To turn the earpiece on:

Flip the on/off switch to the on (I) position. The LED indicator light will flash green twice and then stay off. You will hear short low, medium and high tones in quick succession.

To turn the earpiece off:

Flip the on/off switch to the off (O) position. The unit will immediately turn off without any additional signal.



Figure 6

Adjusting the Volume:

- To increase the volume, press the volume up (+) button for each volume level increase.
- To decrease the volume, press the volume down (—) button for each volume level decrease. There are eight (8) separate volume levels.

During volume operations you will hear short high tones getting louder as the volume goes up and softer as the volume goes down.

Making and Receiving Calls

Once you have paired the Earglove BlueSport™ with your phone, you can make and receive calls using the earpiece, as long as it is turned on and within range of the phone (up to 10m/30 ft.).

NOTE: The LED indicator light flashes green during calls to indicate phone communication.

For phones without voice-dialing capability: To make a call, dial the number using the phone keypad and speak to your party through the earpiece. When using the earpiece to receive calls, press the answer/end button once to answer. To end a call, press the answer/end button a second time.

Voice Dialing

If your phone includes a voice-dialing mode, you can place calls with voice commands:

1. Make sure the phone and the earpiece are on and within range of each other. Press the answer/end button once.
2. After the beep, voice dial as you normally would.
3. End the call by pressing the answer/end button, or the appropriate key on your phone. Please refer to your phone's user manual or documentation for more information on voice dialing and control.

Answering Calls

To answer a call: When the phone rings or when you hear your phone ring through the earpiece, press the answer/end button once. End the call by pressing the answer/end button again, or the appropriate key on your phone.

To use call-waiting (if phone supports function): When you hear the call waiting signal from your phone in the earpiece, press the answer/end button to switch to the new call. You can use the answer/end button to toggle between calls. You must use phone keypad to end the first call that you wish to end. **Refer to your phone's user manual for details on handling multiple calls simultaneously.**

Transferring Sound from the Phone to the Earpiece

If you initiate a call from your phone without using the earpiece, you can transfer the call to the earpiece if the earpiece is on, paired with the phone, and within range.

To transfer sound to earpiece: While call is in progress, press the answer/end button on your earpiece to transfer the call sound to the earpiece.

Troubleshooting

As new phones and Bluetooth® devices are released at an increasing rate, there may be updated pairing and operational instructions available online for your particular device. For additional instructions or instructions for new devices, please visit www.fellowes.com/techsupport/bluetooth.aspx.

To view an interactive list of [FAQs](#) (Frequently Asked Questions) or suggestions for troubleshooting, please visit www.fellowes.com/bluetooth. If you still have trouble with your device, please contact us at www.fellowes.com/techsupport/bluetooth.aspx or by dialing U.S. Customer Service at 1-800-945-4545 or European Customer Service at 0080018101810.

Guidelines for Safe, Efficient Use

Clean earpiece with damp soft cloth. Other cleaners may damage earpiece and void warranty. Keep earpiece away from extreme temperatures, water, exceptionally humid or dusty environments, open flame or fire. Do not dismantle or attempt to repair earpiece. If earpiece fails, return it to place of purchase for repair. Do not drop earpiece or expose it to severe physical shock or vibration. Do not attempt to 'pair' earpiece to your phone while driving. Keep earpiece and other small parts away from children.




Limited Warranty

Fellowes warrants this product to be free from defects in manufacturing for one year from the date of original retail purchase. This warranty extends only to the original retail purchaser, and does not apply if the product has been damaged or fails to function properly as a result of misuse, abuse, alteration, or improper cleaning or maintenance. ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL RETAIL PURCHASE. Fellowes' sole obligation under this warranty or any implied warranty, and the purchaser's sole remedy, is limited to the repair or replacement, at Fellowes'

option, of the product or any defective part. IN NO EVENT SHALL FELLOWES, ITS AFFILIATES, SUBSIDIARIES, RELATED ENTITIES OR THEIR RESPECTIVE OFFICERS, DIRECTORS, OR EMPLOYEES, BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, PUNITIVE, EXEMPLARY, OR SPECIAL DAMAGES. To make a claim, write to WARRANTY CLAIMS, Fellowes, Inc., 1789 Norwood Ave., Itasca, IL 60143-1095.

Technical Specifications

Earpiece	
Frequency Response	300 to 3400 Hz
Distortion (THD %)	2% (typical)
Microphone	
Frequency Response	300 to 3400 Hz
Wireless Link Type	Bluetooth® Specification V1.1 CSR BlueCore2 audio
Profile	Handsfree, Headset
Frequency	2.4 GHz-ISM Band (2400-2483.5 MHz)
Useful Range	10 meters from device (open area)
Compliance	UL, FCC Part 15, CE, IC RSS-210, Bluetooth®
Operating Temperature	0C to +40C
Weight	Earpiece: ~28 grams Charger: ~65 grams
Size	Earpiece: 95 mm L x 56 mm H x 28 mm T
Average Talk Time	~4 hours
Average Standby Time	~110 hours
Battery Type	Lithium-ion
Battery Charger	100 to 240V (AC input) 5V (DC output) 500mA (output)
Charge Time	2 hours to 80%, 4 hours to 100%

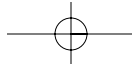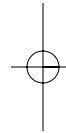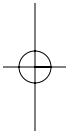

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>