	EV9607-01 7DM Replacement	nt Cartridge
Problem solving and special application cartridge		
	7DM Replacement Cartridge: EV9607-01	BENEFITS Demineralizing water filter for water with high mineral content Removes total dissolved solids (TDS) by using a mix of cation and anion resin Especially useful on low capacity flash steamers and warrmers that are not emptied each day Reduces scale build- up Sanitary cartridge replacement is simple, quick and clean. Internal filter parts are never exposed to handling or contamination
INSTALLATION TIPS Install vertically with cartridge hanging down Allow 2-1/2" clearance below the cartridge for easy cartridge replacement Flush cartridge by running water through filter for three minutes at full flow Use plastic tubing after DM cartridge	OPERATION TIPS Change cartridges on a regular 6 month preventative maintenance program Change cartridges when capacity is reached or when pressure falls below to psi Always flush the filter cartridge at time of installation and cartridge change	APPLICATION/SIZING Problem solving and special application cartridge for extraordinary water conditions Capacity: 1,600 grains or 103,000 ppm To determine cartridge life, divide total capacity of cartridge (1,600 grains or 103,000 mg) by the TDS in grains per gallon (gpg) or milligrams per liter (ppm), respectively

7DM Replacement Cartridge

S P E C I F I C A T I O N S

Overall Dimensions: 20.75"H x 3.25"Diameter

Service Flow Rate: Maximum 0.5 gpm (1.9 Lpm)


Pressure Requirements: 10 - 125 psi (0.7 – 8.6 bar), non-shock

Temperature: 35 - 100°F (2 - 38°C)

No electrical connection required

Contents: Acid cation and base anion exchange resin

The contaminants or other substances removed or reduced by this drinking water system are not necessarily in your water. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used with disinfected water that may contain filterable cysts.

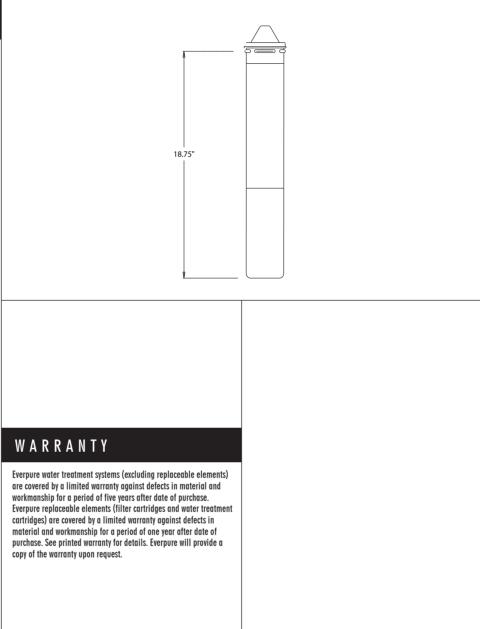



Worldwide Headquarters: EVERPURE, LLC 1040 Muirfield Drive Hanover Park, Illinois 60133 Toll Free (800) 323 - 7873 Tel (630) 307 - 3030 http://www.everpure.com In Europe: Pentair Water Belgium B.V./B.A. Industriepark Wolfstee Toekomstlaan 30 B-2200 Herentals BELGIUM TEL: +32.(0).14.283,500 FAX: +32.(0).14.283,505 In Japan: Hashimoto MN Bldg. 7F 3-25-1 Hashimoto Sagamihara-Shi Kanagawa 229-1103 JAPAN TEL: 81.(0)42.775.3011 FAX: 81.(0)42.775.3015 Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com