DEV9100-10 CGS-10 10" Single Housing		
Foodservice System Housing for Dro	p-In Cartridges	B E N E F I T S
	CGS-10 10" Single Housing: DEV9100-10	<ul> <li>10" low profile Slim Line single bowl housing</li> <li>Manufactured of durable polypropylene and has excellent chemical resistance</li> <li>System includes pre-mounted water pressure gauge</li> <li>Equipped with a pressure relief button to relieve water pressure during cartridge changes</li> <li>Includes wall mounting bracket and hardware for fast and easy installation</li> <li>System is shipped fully assembled</li> <li>Choose the appropriate cartridge for your needs</li> <li>Cartridge sold separately</li> </ul>
INSTALLATION TIPS	OPERATION TIPS	A P P L I C A T I O N / S I Z I N G
Choose a mounting location suitable to support the full weight of the system when operating Install vertically so bowl hangs down Allow 2-1/2" clearance below the cartridge for easy cartridge replacement Make sure O- ring on bowl is sufficiently lubricated Always screw on bowls by hand; do not use a housing wrench Flush filter by running water through filter according to cartridge instructions	Change cartridges on a regular 6 month preventative maintenance program Change cartridges when capacity is reached or when pressure decreases Always inspect O- ring; change and/or lubricate if necessary Clean bowl with mild solution of detergent before inserting new cartridge Always flush the filter cartridge at time of installation and cartridge change	For foodservice applications Bowl housing assembly accepts drop in cartridges Capacity: varies according to filter cartridge used

## CGS-10 10" Single Housing

## S P E C I F I C A T I O N S

Overall Dimensions: 14.5"H x 9.25"W x 5.25"D

Inlet connection: 3/8"

Outlet connection: 3/8"


Service Flow Rate: Maximum 2.0 gpm (7.6 Lpm)

Pressure Requirements: 30 - 125 psi (2.1 – 8.6 bar), non-shock

Temperature: 40 - 100°F (4.4-38°C)

No electrical connection required

The contaminants or other substances removed by this drinking water system are not necessarily in your water. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used with disinfected water that may contain filterable cysts.

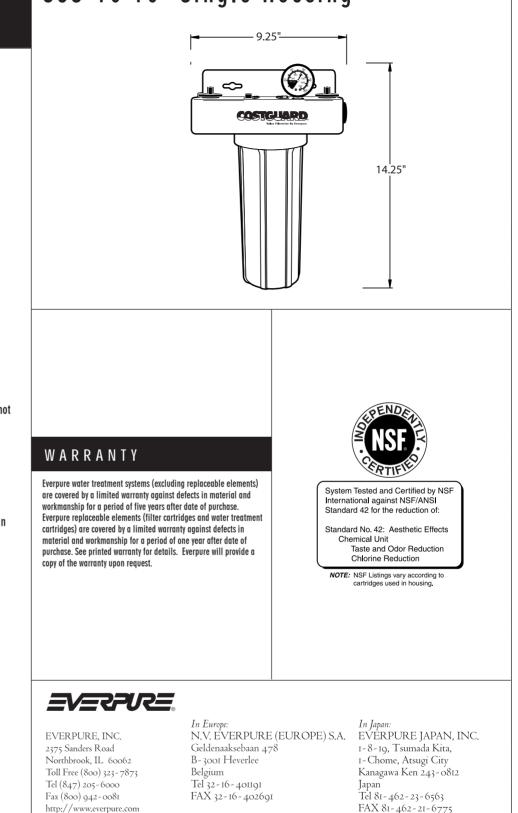

Everpure, Inc. 2375 Sanders Road Northbrook, IL 60062 Phone: 800-323-7873 Fax: 800-942-0081 Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com