## **AUTO-PUMP® 12V HP-HOR**

### 12VDC HIGH OUTPUT AIR COMPRESSOR SYSTEM

## FOR HORIZONTAL MOUNT ONLY



MODEL #: 091-9-12V-HP-HOR

INPUT: 10-15 volt, 11 amp

**OUTPUT: 125 PSI MAXIMUM** 

File: 091-9-12V-HO-HOR revA Rev: A

Revised By: PSS/JRN Date: 8-24-2017

1 YEAR WARRANTY



Ph: 800-346-0857 Fax: 631-567-5826 sales@kussmaul.com INTRODUCTION

The Auto-Pump Air Compressor system is a compact electric motor operated single cylinder air compressor designed specifically for installation on vehicles with air brakes. During long idle periods of the vehicle when even the slightest seepage can cause an air brake system pressure to drop below the brake lockup pressure, the Auto Pump automatically starts to maintain the pressure. The unit also has aN automatic water separator that drains the

water from the separator bowl whenever the pump is cycled.

The Auto Pump motor is directly coupled to the compressor section eliminating all belts and pulleys assuring long life and reliable operation. A heavy duty pressure switch is adjusted to start the compressor when the system pressure drops below 105 psi and stops the compressor when 125 psi is attained. The start up pressure is field adjustable - the pressure differential between start up and stopping is fixed. Please read and follow the installation instructions carefully. The Auto Pump requires no routine maintenance. A careful installation will assure years of trouble free operation.

# CAUTION

NO CONDENSATE OR
WATER MUST BE ALLOWED TO ENTER
OR ACCUMULATE IN THE OUTPUT
OF THE AUTO PUMP.
ROUTE OUTPUT PRESSURE
LINE DOWNWARD FROM
AUTO PUMP TO PERMIT
MOISTURE TO DRAIN AWAY.

WATER IN THE PUMP OUTLET WILL INDUCE

## FAILURE!

WATER DAMAGE WILL
VOID WARRANTY


## FOR HORIZONTAL MOUNT ONLY

THIS MODEL 091-9-12V-HP-HOR IS FOR HORIZONTAL MOUNT ONLY.
FOR VERTICAL MOUNTING USE MODEL 091-9-12V-HP-VER.




#### **VEHICLE TUBING INSTALLATION**

- 1. Mount all components in a suitable location, preferably in a high area above the air system. Do not mount in engine compartment or near any source of heat or dirt. The system may be connected to any point in the vehicle's air system.
- 2. Mount the air compressor in a horizontal position as shown.
- 3. **CAUTION** no condensate or water must be allowed to enter or accumulate in the output of the Auto Pump. Route output pressure line downward from Auto Pump to permit moisture to drain away. **Water in the pump outlet will induce failure.**
- 4. All connection for air lines are 1/4" NPT. Use Teflon tape, or equivalent on all connections to insure no leakage of air.
- 5. The recommended installation of the Auto Pump air compressor system is shown below.
- 6. Mount the air compressor. Connect a suitable piece of flexible tubing from the outlet port of compressor to the air tank. (Tubing and connectors are not supplied.)
- 7. An optional Mounting Plate 091-9-12V-HP-H, is available to reduce any vibration and noise from Auto Pump and to simplify pump mounting.

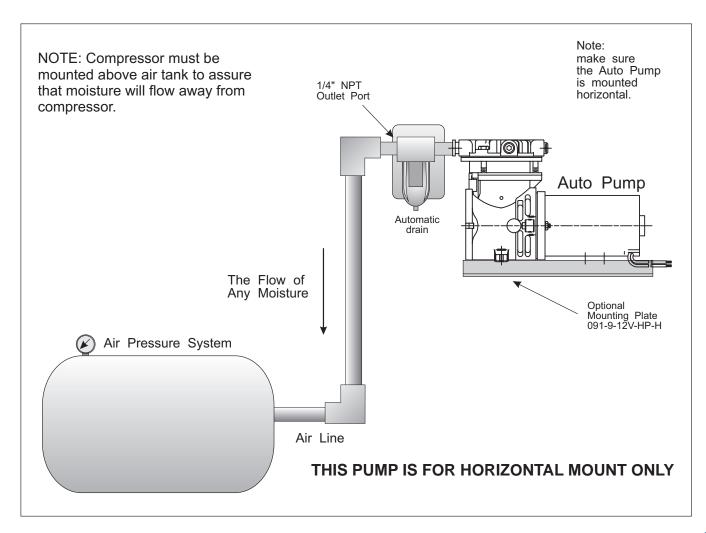


#### **VEHICLE WIRING INSTALLATION**

- 1. Remove cover of the Pressure Switch on the Auto Pump.
- 2. Wire the pressure switch to the battery and a good chassis ground, use #14 AWG WIRE MINIMUM.
- Reinstall cover of Pressure Switch.
- 4. The compressor is calibrated to cut-in at 105 PSI and cut-out at 125 PSI. For higher cut-in and cut-out, turn the range nut clockwise. To lower cut-in turn range nut counterclockwise. Do not exceed 135 PSI.
- 5. 091-9-12V-HP-HOR AUTO PUMP can be wired to a positive or negative system vehicle.
- 6. Optional switch and fuse can be installed as shown (use 20 amp rated switch and 15 amp (SLO-BLO fuse).

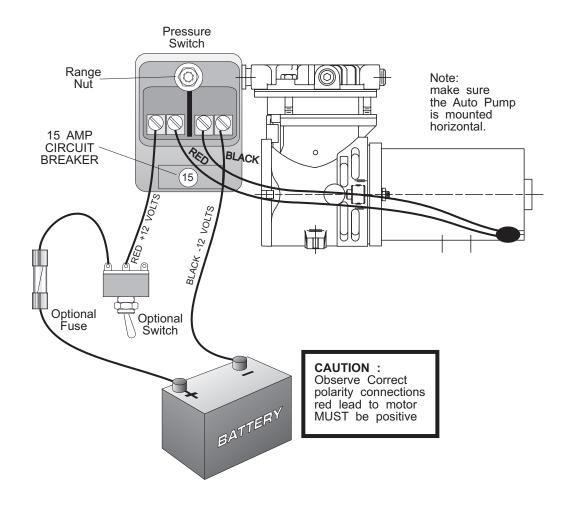

THIS PUMP IS FOR HORIZONTAL MOUNT ONLY

COMPRESSOR OUTPUT IS 135 PSI MAXIMUM. DO NOT EXCEED 135 PSI OR YOU WILL VOID WARRANTY.

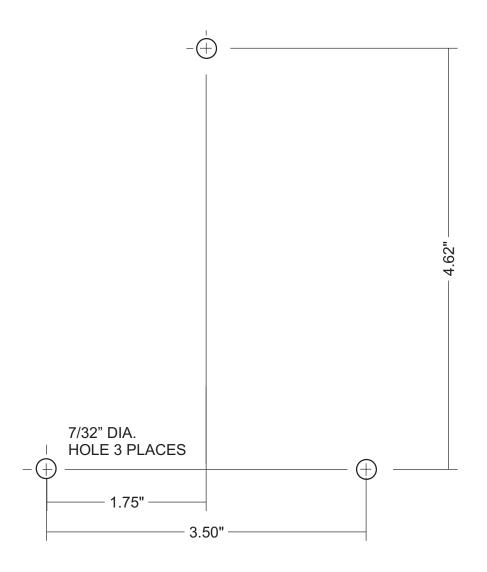

#### **SPECIFICATIONS**

Input Voltage: 10 - 15 Volts DC Input Current: 11 Ameres Max

Compressor Output: .30 SCFM @ 80 PSI, .35 SCFM @ 60 PSI, 0.80 CFM @ OPEN FLOW

Temperature Range: 0C to 43C (meets NFPA1901 2016 4.14.3)


Motor Horsepower: .10 HP Motor Type: Permanent Magnet

Pressure Switch: Set to 105 PSI Cut-in, 125 PSI Cut-out (+/- 5 PSI)


**Switch Differential:** 18 PSI Nominal **Outlet Connection:** 1/4 NPT, Female

Weight: 10 pounds

#### **OUTLINE DRAWING**

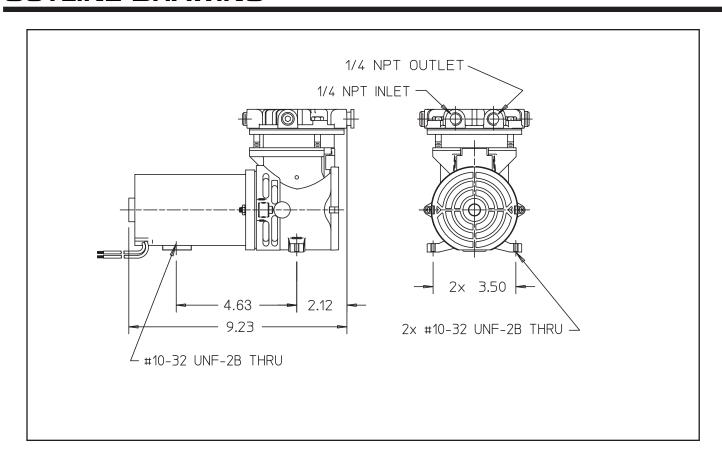



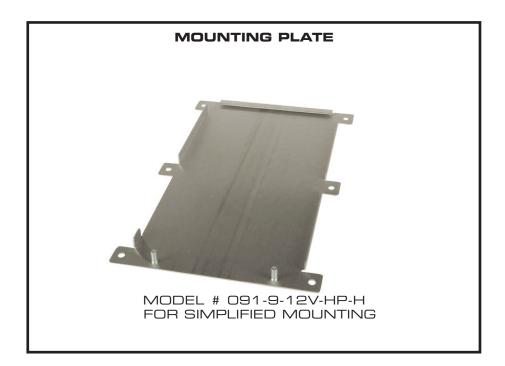

#### INSTALLATION RECORD

DATE INSTALLED	
INSTALLED BY	_
VEHICLE IDENTIFICATION	
VEHICLE OWNER	

#### WARRANTY POLICY

All products of Kussmaul Electronics Company Inc. are warranted to be free of defects of material or workmanship. Liability is limited to repairing or replacing at our factory, without charge, any material or defects which become apparent in normal use within 3 years from the date the equipment was shipped. Equipment is to be returned, shipping charges prepaid and will be returned, after repair, shipping charges paid.

Kussmaul Electronics Company, Inc. shall have no liability for damages of any kind to associated equipment arising from the installation and/or use of the Kussmaul Electronics Company, Inc. products. The purchaser, by the acceptance of the equipment, assumes all liability for any damages which may result from its installation, use or misuse, by the purchaser, his or its employees or others.



Members of Fire and Emergency Manufacturers and Service Association



Members of National Fire Protection Association



Members of Fire Apparatus Manufacturers Association



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com