



Office Konnecter

USER'S GUIDE

Congratulations

Your KONEXX Office Connector is the ideal product for executives, sales people, and others who need data communications in the office.

With your KONEXX Office Connector, you can connect your modem, fax/modem, or fax machine to virtually any digital, PBX, multiline, or hotel telephone in seconds. Simply remove the coiled handset cord from the telephone base, connect the KONEXX Office Connector to your telephone, then connect the handset (with coiled cord attached) and your communications device to the KONEXX Office Connector.

Your KONEXX Office Connector is fully compatible with V.90 modems and can support connection rates up to 33,600 bps. It also provides the following additional features:

- ◆ Compact, lightweight design allows your KONEXX Office Connector to go anywhere you go
- ◆ Operates from AC adapter.
- ◆ Level switch lets you adjust signal levels for optimal performance

Other KONEXX products

KONEXX is your complete source for data communication connectivity. We offer a full line of superior, user-friendly products to help you communicate quickly and consistently.

To obtain a brochure describing the finest data connectivity products available today, please call (858) 622-1400 between 7:30 am and 4:30 pm PST.

If you prefer, you may fax requests 24 hours a day to (858) 550-7330 or check our WEB site at <http://www.konexx.com/>.

Warranty

2-YEAR LIMITED WARRANTY

KONEXX warrants this product against all defects in material and workmanship, under normal use, for two years from the date of purchase. This limited warranty applies to the original purchaser of this product only. Customer's sole and exclusive remedy and KONEXX's liability in the event of a defect is expressly limited to correction of the defect by adjustment, repair, replacement or substitution at KONEXX's option.

This warranty does not cover, and KONEXX is not responsible for damage caused by misuse, neglect, fire, lightning, electrostatic discharge or modification of this product or damage resulting from the use of this product with hardware not specifically recommended by KONEXX. If a defect should occur, contact Technical Support for an RMA number. No product shall be accepted back for warranty repair without an RMA number.

Except as specifically provided herein, there are no other warranties expressed or implied, including but not limited to, any implied warranties of merchantability or fitness for a particular purpose and in no event shall KONEXX be liable for indirect, incidental, consequential or other similar damages arising out of any breach of this warranty or otherwise.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

FCC Requirements

This device has been granted a registration number by the Federal Communications Commission (FCC), under Part 68 rules and regulations for direct connection to the telephone lines. In order to comply with these FCC rules, the following instructions must be carefully read and applicable portions followed completely. These instructions must be supplied to the consumer.

1. This equipment complies with Part 68 of the FCC rules. A label located on the outside surface of this equipment contains, among other information, the FCC registration number and ringer equivalence number (REN). If requested, this information must be provided to the telephone company.
2. As indicated below the suitable jack (USOC connecting arrangement) for this equipment is shown. If applicable, the facility interface codes (FIC) and service order codes (SOC) are shown.
3. The ringer equivalence number (REN) is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.
4. If this equipment causes harm to the telephone network, the telephone company will notify you in advance. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

5. The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications in order to maintain uninterrupted service.
6. If trouble is experienced with this equipment, please contact the service center for repair and/or warranty information. If the trouble is causing harm to the telephone network, the telephone company may request you to remove the equipment from the network until the problem is resolved. User repairs must not be made, and doing so will void the warranty.
7. This equipment cannot be used on coin service provided by the telephone company. Connection to party line service is subject to state tariffs. (Contact your state public utilities commission for information.) If so required, this device is hearing-aid compatible (EAC).

Table of Contents

Chapter 1

Getting started	4
Unpacking	4
Preinstallation guidelines	4

Chapter 2

Installation	4
Connection procedures	4

Chapter 3

Telephone Level switch	5
Overview	5
Switch settings	6

Chapter 4

Sending data and faxes	10
Autodialing data and fax calls	10
Dialing data calls manually	11
Dialing fax calls manually	12

Chapter 5

Receiving data and faxes	12
Receiving a data file	12
Receiving a fax document	13

Chapter 6

Operating tips	13
Powering the KONEXX Office Connector	13
Telephone Level switch	14
Tone dialing	14
V.90 connections	14
Speakerphones	14
Princess and Trimline telephones	14
Hanging up the modem	14
"No Dial Tone" error message	14
Autodialing	15
Calling Technical Support	15

Chapter 7

Specifications	16
Operating specification	16
Performance specifications	16

Chapter 1

Getting started

Chapter 1 describes the items you should have received with your KONEXX Office Connector and any additional items you may need.

Unpacking

When you unpack your components, make sure you have all of the following items and that none of the items is damaged:

- ◆ One KONEXX Office Connector.
- ◆ One AC adapter.

If any items are missing or damaged, contact your place of purchase immediately.

Preinstallation Guidelines

Before installing your KONEXX Office Connector, observe the following guidelines:

CONNECTION

Never connect the KONEXX Office Connector directly to an analog or digital telephone line (wall outlet). Use the procedures in this User's Guide to avoid damaging your KONEXX Office Connector.

DIALING

Configure your modem, fax/modem, or fax machine for Tone dialing.

SPEAKER PHONES

If the attached telephone has speakerphone capability, disable speakerphone operation. This mode deactivates the handset jack used to send and receive data.

TELEPHONE LEVEL SWITCH

Set the **Telephone Level** switch for the telephone you are using (refer to Chapter 3).

SPEAKER CONTROL AND VOLUME

The telephone handset is deactivated during dialing.

If you use a modem or fax/modem, you can use the command to enable the modem speaker and the command to set its volume. You can then "listen in" on dialed calls to monitor their status. Refer to your modem manual for information.

Chapter 2

Installation

Chapter 2 describes installation procedures for your KONEXX Office Connector.

Connection procedures

To connect your KONEXX Office Connector to a telephone (refer to figure 2.1, page 5):

1. Remove the spiral handset cord from the telephone handset jack on the **telephone base unit** and insert it into the KONEXX Office Connector jack labeled **HAND SET**.
2. Insert the KONEXX Office Connector modular telephone cord (which is permanently attached at one end to the KONEXX) into the telephone handset jack on the **telephone base unit**.

3. Connect a modular telephone cord from your modem, fax/modem, or fax machine jack labeled "Line" or "Wall" to the KONEXX Office Konnector jack labeled **DATA**.

Connect the round end of the supplied AC adapter to the round connector next to the **DATA** jack and the other end to an AC outlet.

Your installation should resemble the one shown in Figure 2-1.

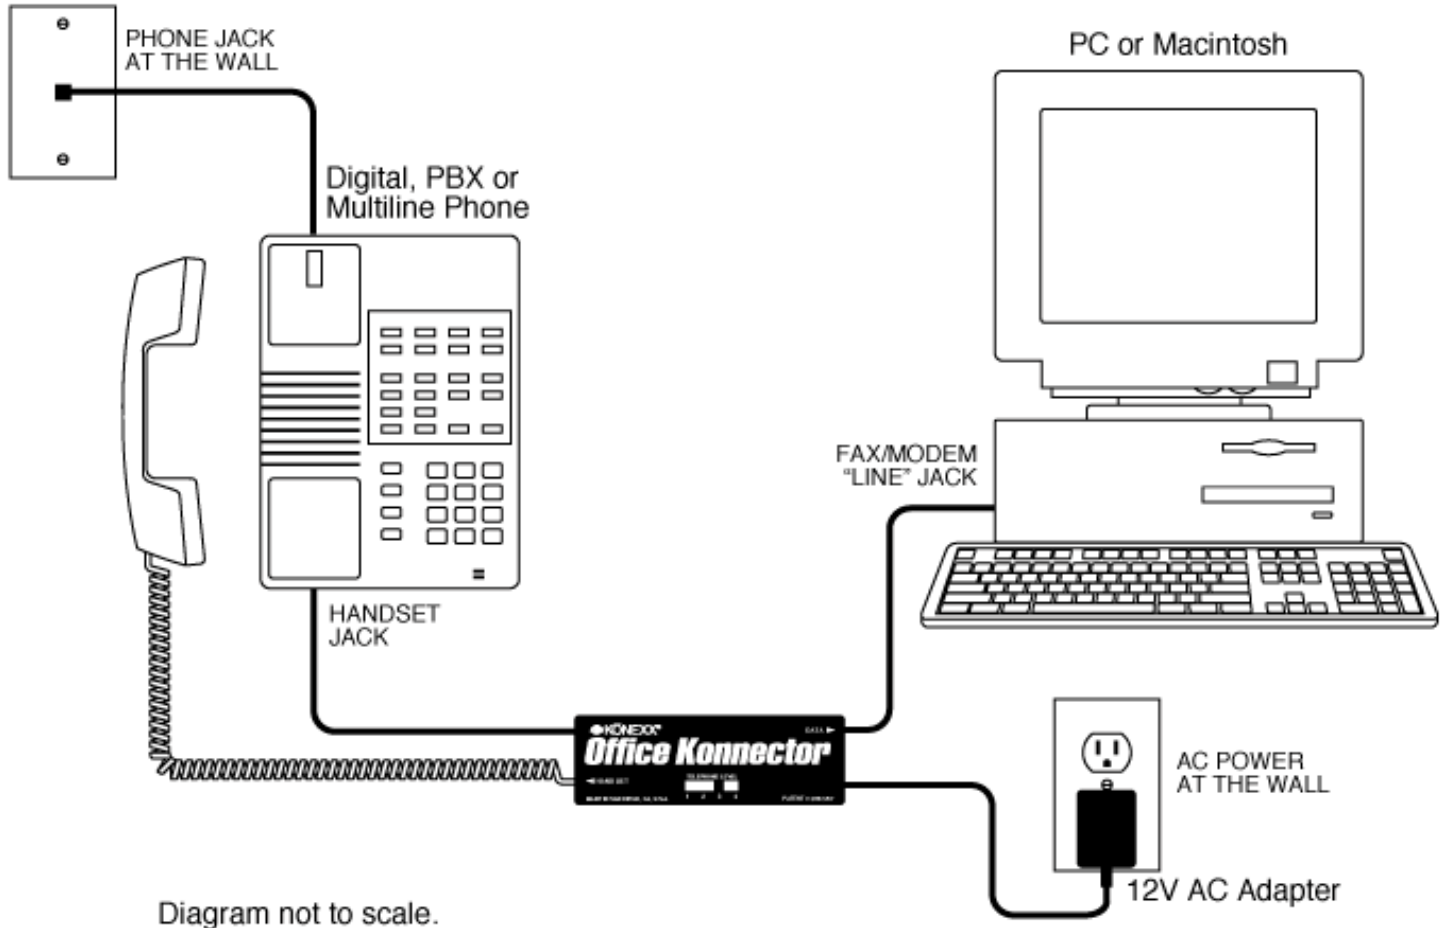


Diagram not to scale.

5. Set the **Telephone Level** switch on the top of the KONEXX Office Konnector to 3. For more information, see Chapter 3.
6. Lift the telephone handset and listen for a dial tone. If you do not hear the dial tone, check your connections to ensure they match those shown in Figure 2-1.
7. Return the handset to the cradle.

You can now exchange data and faxes, and use the telephone handset to perform voice communications when your modem, fax/modem, or fax machine is not in use.

Chapter 4 describes how to send data and faxes, Chapter 5 describes how to receive data and faxes, and Chapter 6 provides operating tips.

Chapter 3

Telephone Level switch

This chapter describes the purpose of the **Telephone Level** switch and how to set it for optimal operation.

Overview

The front of your KONEXX Office Connector has a **Telephone Level** switch (see Figure 3-1). This switch lets you set the signal level from your modem or fax to the telephone.

The **Telephone Level** switch can be set in any of four settings. The setting you use depends on the signal level used by the telephone to which your KONEXX Office Connector is connected.

Setting 2 is the highest level. Use this setting if you connect your KONEXX Office Connector to a telephone that has a carbon microphone. Older residential telephones and some hotel telephones use carbon microphones.

Setting 4 is the lowest level. Setting 3 is the most common position; it is used for electronic telephones.

If you set the **Telephone Level** switch too high, you will hear feedback such as a buzz or loud squeal through the modem speaker when your modem is off-hook. If you hear feedback, set the **Telephone Level** switch to the next lower setting - using the sequence 2, 3, 1, 4 - until the feedback disappears.

For example, if the **Telephone Level** switch is set to 2 and you hear feedback, set it to 3. If you still hear feedback, set it to 1. If feedback continues, set it to 4.

Switch settings

Table 3-1 shows the **Telephone Level** switch settings to use for various telephone models. If the telephone you want to use does not appear in Table 3-1, set the level as described in the previous section. If feedback occurs for all four levels, please contact Technical Support.

A "Yes" in the "Auto-dial" column indicates that autodialing is supported with that telephone model. The number in the "SEE NOTE" column refers to a note at the end of the table.

Table 3-1. Telephone Level Switch Settings

MANUFACTURER	MODEL	SWITCH SETTING	AUTO-DIAL	SEE NOTE
Ameritech	None Specified	1	Yes	1
AT&T	Definity	3	Yes	
	Destiny	3	---	2
	Dimension	2 or 3	---	2
	G2	4	Yes	
	Horizon	2	Yes	
	ISDN	3	No	1
	Infinity	3	Yes	
	Legend	3	No	8
AT&T (continued)	Merlin	3	Yes	
	Merlin II	3	---	2
	Partner	3	Yes	
	Spirit	3	Yes	1
	System 25	3	Yes	3 & 4

MANUFACTURER	MODEL	SWITCH SETTING	AUTO-DIAL	SEE NOTE
	System 75	3	Yes	3 & 4
	System 85	3	Yes	3 & 4
Comdial	Digitech	3	Yes	
	Executech	3	Yes	
	Impact	3	Yes	
MANUFACTURER	MODEL	SWITCH SETTING	AUTO-DIAL	SEE NOTE
David Systems	None Specified	3	---	2
Eagle	None Specified	2	Yes	
Ericcson	MD110	3	Yes	
Executone	Encore CX	3	No	8
	IDS	3	No	8
	Model 228	See Notes	No	8 & 9
	Model 432	See Notes	No	8 & 9
	Key Systems	2 or 3	Yes	
Fujitsu	Focus 196	See Note	No	5
	Others	4	Yes	
GAI-Tronics	Cohort	3	No	8
Harris	Lanier	3	Yes	
Hitachi	Digital Model 200	1	---	2
	HCX-5000	1	---	2
Intecom	IBX System	3	No	8
Intertel	Hitech/123	1	Yes	4
	2	1	---	2
	MPK-2	3	No	8
	Axxess	1	Yes	
	Others			
Isoetec	Key systems	3	Yes	1 & 2
	Digital PBX	1	---	
ITT	None Specified	2	---	2
Iwatsu	Omega	2	Yes	
	Omega III	2 or 3	Yes	
	Omega IV	1 or 4	Yes	4
Kokyo Co.	Kanda	1	Yes	
Lanier	EKT - 220 (Elec. Key)	2	Yes	
Lexar	Telex	See Notes	No	6 & 8
	None Specified			

MANUFACTURER	MODEL	SWITCH SETTING	AUTO-DIAL	SEE NOTE
Macrotel		4	Yes	1
Mitel	Superset	2 or 3	No	8
	SX-200	3	No	1 & 8
NEC	Determ II	1 or 4	Yes	1
	Determ III	1 or 4	---	2
	Determ V	1	Yes	
	Electra	2 or 3	No	8
	Freedom	1	Yes	
	Mark II	1	Yes	
	Others	1	Yes	
Nitsuko	Onyx	3	---	1 & 2
Northcom	Premier (NC-1648)	3	Yes	
Northern Telecom	Advantage	3	Yes	7
	Focus	2	No	8
	Logic One	3	No	8
	Meridian SL1 & SL100	3	No	8
	Meridian 100	3	No	8
Northern Telecom (continued)	Meridian 1	3	No	8
	Norstar	3	Yes	
	DR5 or DID	3	Yes	
	Unity	2 or 3	Yes	
	Vantage	3	---	2
Panasonic	KXT23?5	3	Yes	
	DBS	2 or 3	Yes	
	Others	3	Yes	
Phillips	None Specified	1 or 4	---	2 & 6
Premier	Digital	1 or 4	Yes	7
Rolm	Model 120	1 or 4	No	8
	Model 240	1 or 4	No	8
	Model 400	1 or 4	No	8
	Model 600	1 or 4	No	8
	Others	1 or 4	No	8
Siemens	Dyad	See Notes	No	6 & 8
	Dyad Jr.	See Notes	No	6 & 8
	HCM-600	3	---	1 & 2

MANUFACTURER	MODEL	SWITCH SETTING	AUTO-DIAL	SEE NOTE
	HCM-200	3	---	1 & 2
Siemens (continued)	Hicom Digital	1	---	1 & 2
	Saturn Digit 260	See Note	---	5
MANUFACTURER	MODEL	SWITCH SETTING	AUTO-DIAL	SEE NOTE
Southwestern Bell	Freedom Phone-Older	3	Yes	
	Freedom Phone-Newer	1 or 4	Yes	1
SRX	Vision Phone	2	---	2
Tadiran	EKT 221	See Note	Yes	9
	Emerald	4	---	2 & 9
	Coral I & II	4	---	2 & 9
	Others	See Note	Yes	9
Telrad	Model 816	4	Yes	
	Model 2464	4	Yes	
	Symphony	4	No	8
	Digital (818)	4	No	8
	Others	4	---	2
TIE	Business Comm	2	---	2
	Datastar	2	Yes	
	DCX	2	Yes	
TIE (continued)	Meritore	2	Yes	
	Onyx	3	Yes	
	TC22	2	Yes	
	EX2260	2	Yes	
	Ultracom CX	2	---	2
	Keypset 9	2	---	2
Toshiba	EKT 2000 series	2	Yes	
	EKT 2000 series	2	---	2
	EKT6000 series	3 or 4	Yes	
	Perception	3	No	8
	Strata (Key system)	2	---	1 & 2
	Strata	1 or 3	---	1 & 2

MANUFACTURER	MODEL	SWITCH SETTING	AUTO-DIAL	SEE NOTE
	(Digital) 103 series	2 or 3	Yes	
Trillium	Panther	2 or 3	---	1 & 2
	Talkto 616	2	---	1 & 2
Vodavi	Electronic Key System	See Note	Yes	9
MANUFACTURER	MODEL	SWITCH SETTING	AUTO-DIAL	SEE NOTE
Walker	Marathon	1 or 4	Yes	
	Poet	1	Yes	1

☞ If your telephone does not allow autodialing, you can still communicate by dialing with the keypad on your telephone. Refer to Chapter 4 for information on manual dialing.

NOTES:

1. The KONEXX product may require a custom factory setting for this phone set. If difficulties are encountered, contact Technical Support.
2. Sufficient data is not available as to whether the phone system will support autodialing with the KONEXX product.
3. The KONEXX product will not support autodial on Model 7300 telephones.
4. You may have to dial an outside access number, such as a 9, on the telephone before autodialing.
5. This telephone has nonstandard handset wiring and is not compatible with the KONEXX product.
6. The KONEXX product requires the use of a special adapter cable set. This phone has nonstandard handset wiring. Contact Technical Support.
7. When autodialing the user must dial a number on the keypad of the telephone set to maintain the line.
8. These phone systems may be able to be programmed to obtain a direct trunk access to enable autodialing. Contact Technical Support for additional information.
9. The KONEXX product requires a custom factory setting to work on these phones. Contact Technical Support.

Chapter 4

Sending data and faxes

You can send data and faxes by either automatically dialing (autodialing) a telephone number or manually dialing the number.

Autodialing data and fax calls

To autodial calls, the telephone and/or your phone system connected to your KONEXX Office Connector must support autodialing. For a list of telephones that support autodialing, refer to page 6.

☞ If your KONEXX Office Connector is connected to a digital telephone that does not support autodialing, use the manual dialing procedure on page 11

1. Prepare your modem, fax/modem, or fax machine for sending.
2. Lift the telephone handset and listen for a dial tone. Leave the handset out of the cradle. DO NOT hang it up, or you will terminate the call.
3. To make a connection using a modem or fax/modem, press the Enter (↵) key on your computer.

OR

To make a connection using a fax machine, press its **Start** button.

4. Perform the data or fax transfer. When you finish, return the handset to the cradle.
5. To hang up a modem or fax/modem, use your software's call-termination feature, or type **ATH0** and press Enter from direct connect mode.

OR

To hang up a fax machine, press its **Stop** button.

☞ **The telephone handset is electronically disconnected when the modem goes off-hook. You must hang up your modem to restore use of your telephone handset.**

☞ Some fax software takes a few moments to prepare a document before dialing. This delay may cause a dial tone "time out" on many telephones.

To avoid the dial tone time out, either convert the document to fax format before you prepare to send it, or do not lift the handset from the telephone cradle until the software indicates that it is ready to dial.

Dialing data calls manually

If the digital telephone connected to your KONEXX Office Connector does not support autodialing, use the following procedure to dial data calls manually.

1. Prepare your computer to autodial a call.
2. If your modem is configured to wait for a dial tone before dialing, reconfigure the Dial command **ATDT** to:

ATX3DT *number*

where:

- ◆ **X3** tells your modem to dial without waiting for a dial tone.
- ◆ **DT** specifies Touch-Tone dialing.
- ◆ ***number*** is the remote modem's telephone number.

☞ If you cannot edit the Dial command line, add **X3** to the modem initialization command string.

3. Lift the telephone handset and listen for a dial tone. Leave the handset out of the cradle. **DO NOT** hang it up, or you will terminate the call.
4. Perform one of the following steps:
 - ◆ If your modem does not look for a dial tone, or if you added **X3**, use the telephone keypad to dial the remote modem's telephone number. Then press Enter on your computer keyboard.

OR

- ◆ If your modem looks for a dial tone and your communication software prevents you from editing the Dial command line or initialization string, press Enter on your computer keyboard. Immediately after the modem finishes dialing, use the telephone keypad to dial the Host number.

Either step should allow your modem to connect with the remote modem.

☞ **To operate properly, your modem must go off-hook and dial - even though you manually dialed the remote modem's telephone number. Your modem does not have to dial the entire telephone number; one digit is sufficient to complete the dialing process.**

5. Perform the data transfer. When you finish, return the handset to the cradle.

To hang up, use your communication software's call-termination feature, or type **ATH0** and press Enter from direct connect mode.

☞ The telephone handset is electronically disconnected when the modem goes off-hook. You must hang up your modem to restore use of your telephone handset.

Dialing fax calls manually

If the digital telephone connected to your KONEXX Office Connector does not support autodialing, use the following procedure to dial fax calls manually.

☞ If your fax software supports a manual fax feature, you can use that procedure instead of the following to dial fax calls manually.

1. Prepare your fax/modem or fax machine for sending.
2. Lift the telephone handset and listen for a dial tone. Leave the handset out of the cradle. **DO NOT** hang it up, or you will terminate the call.
3. Press the Enter key on your computer keyboard if you are using a fax/modem.

OR

Press the **Start** button on your fax machine.

4. Use the telephone keypad to dial the remote fax telephone number.
5. When you finish, return the handset to the cradle.
6. To hang up a fax/modem, use your software's call-termination feature, or type **AT H0** and press Enter from direct connect mode.

OR

To hang up a fax machine, press its **Stop** button.

☞ The telephone handset is electronically disconnected when the fax/modem goes off-hook. You must hang up your fax/modem to restore use of your telephone handset.

☞ Some fax software takes a few moments to prepare a document before dialing. This delay may cause a dial tone "time out" on many telephones.

To avoid the dial tone time out, either convert the document to fax format before you prepare to send it, or do not lift the handset from the telephone cradle until the software indicates that it is ready to dial.

Chapter 5

Receiving data and faxes

Chapter 5 describes the procedure for receiving data and faxes.

Receiving a data file

When someone calls you to send a data file, use the following procedure to answer the call and receive the file.

1. If you will be using your communication software's manual answer or manual receive command to answer the call, skip to step 2.

Otherwise, place your modem into direct connect (local terminal) mode. The manual that came with your communication software should explain this procedure.

2. When the telephone rings, lift the telephone handset from the cradle. Leave the handset out of the cradle. **DO NOT** hang it up, or you will terminate the call.
3. Use your communication software's manual answer or manual receive command to answer the call.

OR

From direct connect mode, type **ATA** and press **Enter** to have your modem answer the call.

4. At the end of the data transfer, return the handset to the cradle.
5. To hang up, use your communication software's call-termination feature, or type **ATH0** and press **Enter** from direct connect mode.

☞ The telephone handset is electronically disconnected when the modem goes off-hook. You must hang up your modem to restore use of your telephone handset.

Receiving a fax document

When someone calls you to send a fax document, use the following procedure to answer the call and receive the document.

1. When the telephone rings, lift the telephone handset from the cradle. Leave the handset out of the cradle. **DO NOT** hang it up, or you will terminate the call.
2. To use a fax/modem, use your fax software's manual answer or manual receive command to answer the call.

OR

To use a fax machine, press its **Start** button on the fax machine.

4. After you receive the document, return the handset to the cradle.
5. To hang up a fax/modem, use your fax software's call-termination feature.

OR

To hang up a fax machine, press its **Stop** button.

Chapter 6

Operating tips

To ensure you get the most out of your KONEXX Office Konnector, observe the operating tips in this chapter.

Powering the KONEXX Office Konnector

Your KONEXX Office Connector must have AC power to operate in Data Mode.

- ◆ Use only the AC adapter supplied with your KONEXX Office Connector. Do not use an adapter for a different device.

Telephone Level switch

Make sure the **Telephone Level** switch is set properly. Otherwise, you will hear buzzing or squelching feedback through the modem speaker when the modem is off-hook, which will adversely affect transmission and reception. For information on using this switch, refer to Chapter 3.

Tone dialing

Make sure your modem, fax/modem, or fax machine is configured for Tone (DTMF) dialing. Your KONEXX Office Connector will not work with pulse (rotary) dialing.

The manual that came with your modem, fax/modem, or fax machine should describe this procedure.

V.90 Connections

The KONEXX Office Connector provides a data communications interface between your modem and any PBX or multi-line telephone. It is compatible with V.90 modems and can support connection rates up to 33,600 bps. Not everyone can get consistent connections at 33.6Kbps, in fact, V.34bis connections at 28,800, 26,400, 24,000, and 21,600 are common.

To obtain 33,600 bps connections, the remote modem or fax/modem must support V.34bis, and the telephone-line quality must be pristine along the entire length of the line.

Speakerphones

Make sure the telephone handset is removed from the cradle until you finish exchanging data. Hang up your modem or fax/modem to reactivate the handset.

If the telephone has a speaker, the speaker must be turned off. Speakerphone operation disables the telephone handset jack that your KONEXX Office Connector uses to transmit and receive data. The handset must be removed from its cradle.

Princess and Trimline telephones

Your KONEXX Office Connector will not operate with "Princess" or "Trimline" telephones, which have the keypad in the handset. The electronics with which the KONEXX Office Connector interacts are not accessible in these telephones.

Hanging up the modem

Your KONEXX Office Connector disconnects the telephone handset when your modem or fax/modem is "on-line". After data transactions or when autodialing voice calls, use your communications software to hang up your modem so that the handset is reactivated.

You can either use the call-termination feature in your communication software, or type **ATH0** and press Enter from direct connect mode. The manual that came with your software should describe how to hang up the modem.

If you are using contact management software, you may need to push a key on the computer keyboard to disconnect the modem or fax/modem after the number is dialed.

"No Dial Tone" error message

If you receive a "No Dial Tone" error message, include the Hayes command **ATX1** or **ATX3** in your modem Dial command. These commands tell your modem or fax/modem to dial without first listening for a dial tone.

Some telephone systems (such as Rolm) do not use the standard dial tone, and your modem or fax/modem may not recognize the nonstandard tone as a dial tone.

This command is also useful when the system being used will not accept autodialing (refer to Chapter 4). Table 3-1 on page 6 lists some telephones that do and do not support autodialing.

Autodialing

Some telephone systems will not support autodialing (the ability to have the modem/fax dial the number of the system you are trying to connect with). You can perform a simple test to find out if the phone system the KONEXX product is connected to will support autodialing. The test is accurate for about 95% of the phone systems and is only viable in the United States. The test is referred to as the dial tone time out test (DTT) and is performed as follows:

1. Lift the telephone handset from cradle and access an outside line, this may involve dialing a prefix such as a "9" on the telephone.
2. Listen to the dial tone until it times out. The dial tone should time out within 15 seconds.
3. After expiration of the dial tone, one of the following should be heard:
 - a. Recorded Operator message - this message will usually be "If you'd like to make a call, please hang up and try again..."
 - b. Error Tone - the error tone may sound like a fast busy signal, a alternating high - low tone or dead silence.

If the result of the DTT is the recorded operator message, there is a 95% probability that the phone system will support autodialing with the KONEXX product. If the result of the DTT is an error tone, there is a 95% probability that the phone system will not support autodialing with the KONEXX product unless the phone system is programmed for direct trunk access.

Approximately 65% of the phone systems that require the dialing of a prefix such as a "9" or some other number to dial out of the building, will require the prefix to be dialed manually (using the keypad of the phone) prior to having the modem/fax dialing the rest of the number.

Calling Technical Support

In the unlikely event you encounter a problem with your KONEXX Office Konnector and the tips in this chapter do not help you resolve the problem, please call KONEXX's Technical Support.

Our knowledgeable Technical Support staff is available to answer your questions Monday through Friday, 7:30 until 4:30 Pacific Standard Time. The telephone number is: **(858) 622-1400**

Please have the following information available when you call so we can better assist you:

- ◆ KONEXX model number
- ◆ Telephone manufacturer, model name or number
- ◆ Modem or fax/modem manufacturer, model name or number
- ◆ Communication software used

If possible, call us on the telephone which has the KONEXX product connected, so that we may perform diagnostics on the same telephone.

You can also send questions and comments to our 24-hour fax line: (858)550-7330

Our goal is to make you a satisfied customer.

Chapter 7

Specifications

This chapter lists the operating and performance specifications.

Operating specifications

Your KONEXX Office Connector:

- ◆ Provides an RJ-11 connection at the handset jack of the telephone.
- ◆ Converts the 4-wire handset jack to a 2-wire RJ-11 jack.
- ◆ Transforms the handset impedance to telephone line impedance, and vice versa.
- ◆ Transforms the handset signal levels to modem signal levels, and vice versa.
- ◆ Uses the **Telephone Level** switch to match the modem signal to the telephone being used. This four-position switch handles most telephones.

Performance specifications

Your KONEXX Office Connector:

- ◆ Operates at data rates up to 33.6 Kbps (kilobits per second).
- ◆ Works with virtually all telephones that have a modular handset. The handset must be out of the cradle.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>