
KETTLER

Trainings- und Bedienungsanleitung
Training and Operating Instructions
Mode d'emploi et instructions d'entraînement
Trainings- en bedieningshandleiding
Instrucciones de entrenamiento y manejo
Istruzioni per l'allenamento e per l'uso
Instrukcja treningowa i instrukcja obsługi
Návod na trénink a obsluhu
Trænings – og brugervejledning
Instruções de treino e utilização

deutsch english française nederlands español italiano polski čeština dansk português

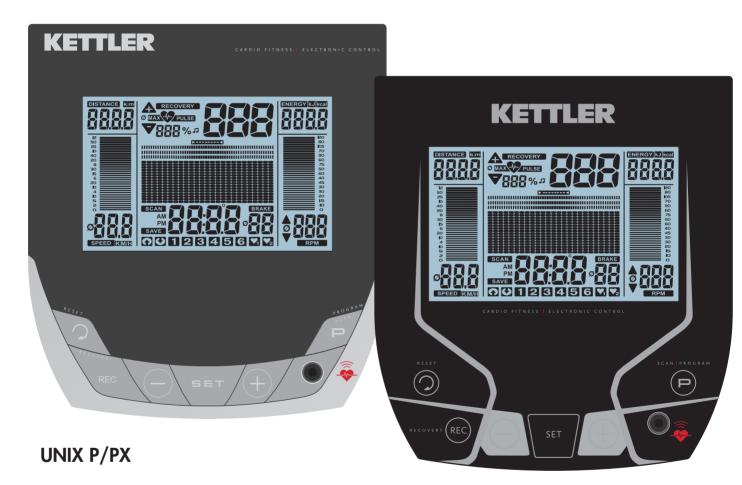

ELYX 3







Table of Contents	
Safety notes	18
• Service	18
Your safety	18
Short description	19
 Function range / Buttons 	20
 Indicating range / Display 	21
 Display values 	22-23
Quick start (Introduction)	23
 Start of training 	23
 End of training 	23
 Standby operation 	23
Training	
by defaults of strain	24
Count-Up	24
Count-Down	24
Default range	24
Distance	24
Time	24
Energy	24
Age Selection of target pulse	25
(Fat/Fit/Man.)	25
Entering the target pulse	25
Readiness for training	25

• Strain profiles 1 – 6	26
 Switching over time/distance 	26
by defaults of pulse	
 HRC1 – Count-Up 	27
 HRC2 – Count-Down 	27
Training functions	27
 Display change 	27
 Profile adjustment 	28
 Interruption/end of training 	28
 Resumption of training 	28
 Recovery (measuring the recovery pulse) 	28
Input and functions	29
Table: input/functions	29
Table: pulse events	29
Individual settings	30
 Selection: KM/Miles display 	30
 Deletion of total kilometres 	30
 Selection: kJoule/Kcal display 	30
 Storage of defaults 	30
 Alarm sound ON/OFF 	30
General notes	31

•	Exercise buke / Cross trainer	31
•	Calculation of fitness marks	31
•	System sounds	31
•	Profile display in training	31
•	Calculation of average values	31
•	Notes on pulse measurement with ear clip with hand pulse with chest belt	31 31 31 31
•	Errors of the computer	31
Tr	aining instructions	32
•	Stamina training	32
•	Strain intensity	32
•	Duration of strain	32
G	lossary	
(G	33

This symbol refers to the glossary where the term in question is explained.

Safety notes

Please observe the following aspects for your own safety:


- The training device must be erected on an appropriate, fixed ground.
- The connections must be checked for firmness before the first start-up and also after ca. 6 days of operation.
- To prevent injuries resulting from wrong strain or excessive strain, the training device must only be used according to instructions.
- It is not recommended to put up the training device in wet places for a longer period of time because of corrosion.
- Check the functionality and the proper state of the training device regularly.
- The safety controls must be carried out by the user regularly and properly.
- Defect or damaged components must be replaced immediately. Use only original spare parts of KETTLER.
- The device must not be used until the repair has been carried out.
- The device's safety level can only be maintained, if it is checked regularly for damage and wear.

For your safety:

• Before you start training, your general practitioner should find out, if you are fit for the training with this device in terms of health. The medical findings should be the basis of the structure of your training programme. Wrong or excessive training can lead to damage to your health.

Short description

The electronics consists of a function range with buttons and an indicating range (display) with variable symbols and graphics.

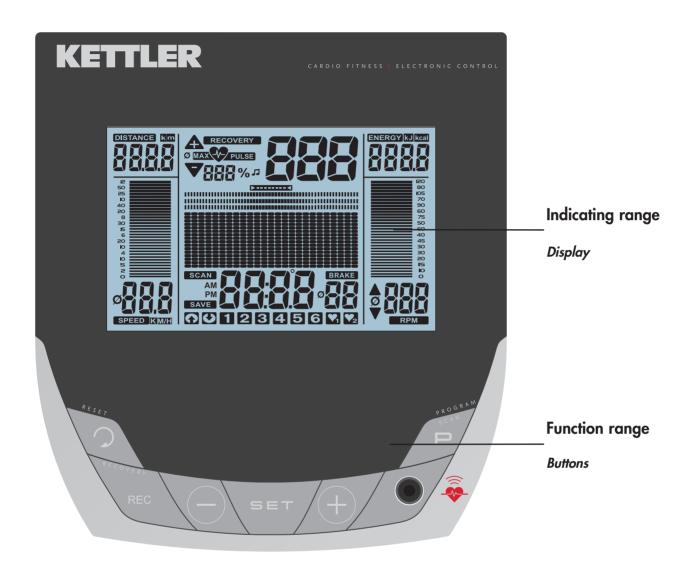

The Electronic Control features the following functions:

- Training settings that are permanently storable Target pulse, time, distance, energy consumption
- Monitoring with optical and acoustic instructions
- Age-dependent maximum pulse, target pulse
- Display of fitness levels 1-6 calculated with the recovery pulse rate after 1 minute
- · Motor break stage adjustment
- Trainings records as a personal profile storable under "SAVE" Count down
- Calculation of energy consumption according to break stage and step frequency
- Choice of display for speed and distance [KM/H or M/H]
- Choice of display for energy consumption [Kjoule or Kcal]
- Choice of display for temperature [°C or °F]
- Pulse receiver already built into the chest strap T34 from POLAR

UNIX PX and ELYX 3 features the following functions:

- Blue, green and red back lighting. Colour change according to pulse levels (Target pulse zone reached or exceeded maximum pulse)
- Blue, green or red adjustable as permanent desired colour

























Short description

Function range

The six buttons are briefly explained in the following. The precise use is explained in the individual chapters. In these descriptions, the names of the functional buttons are used in the same way.

SET (press briefly)

This functional button is for displaying input data. The set data is accepted.

SET (press for a longer period of time)

When displaying all segments: call "individual settings"

Reset

By means of this functional button the current display is deleted for a restart.

Programme

By means of this functional button the various programmes are selected.

Pressing again > next programme

Pressing for a longer period of time> sweep of program-

Minus - / Plus + buttons

By means of these functional buttons values are changed in the various menus before the training and the strain is adjusted during training.

- further "Plus"
- back to "Minus"
- pressing for a longer period of time > quick change
- pressing "Plus" and "Minus" together:
- strain goes to Level 1
- programmes go to Original
- input of values goes to Off

RECOVERY

By means of this functional button the recovery pulse function is started.

Note:

Further functions of the buttons are explained in the operating instructions where appropriate.


Measuring the pulse

The measurement of the pulse can be carried out by means of (3) sources:

- 1. Ear clip the plug is put into the socket.
- Chest strap without plug-in. In this electronic unit, the receiver is built in behind the display. A plugged-in ear clip must be removed. The Polar chest strap is available as an accessory (item no. 67002000).
- 3. Hand pulse

Indicating range / Display

The indicating range informs on the various functions and respectively selected setting modes.

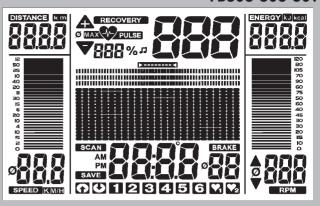

Programmes: Count Up / Count Down

The programmes differ in their mode of counting.

Programme: Training Records

The programme shows a personal recorded training profileThe example displays show the operation as a cross trainer

Programms

Strains beyond the time or distance

Default profiles 1-6

Pulse-controlled programmes: HRC1/HRC2

Target pulse beyond the time

Two programmes that control the strain by a preset pulse value.

Display values

The example displays show the operation as a cross trainer. During concurrent speeds with the example display the rates for speed and distance are higher with exercise bikes.

At 60 min-1 (RPM)


Exercise bikes: = 21,3 km/h Crosstrainers: = 9,5 km/h











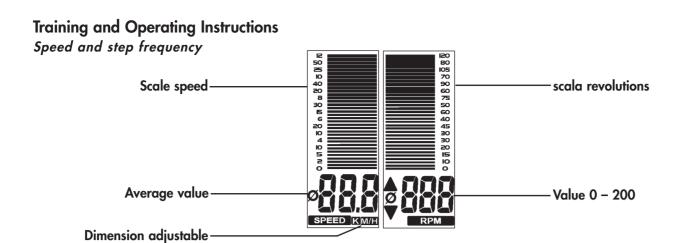



Puls

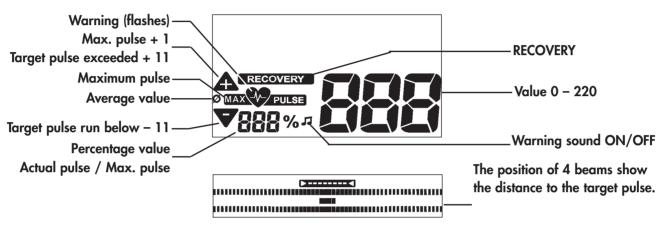



Target pulse scale

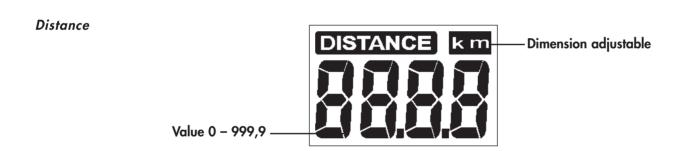

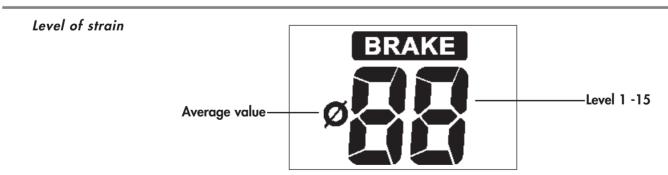

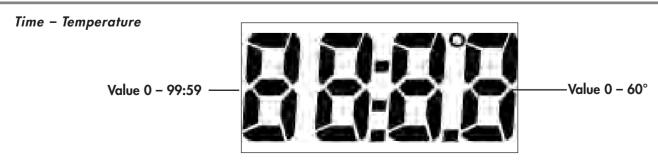

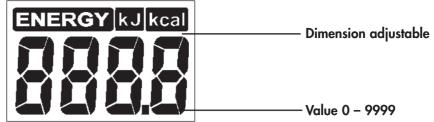

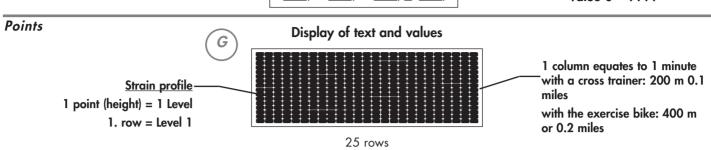

Quick start (Introduction)

Start of training:

without special settings

- Image shown after switch-on Display of total kilometres "odo"
- After 5 seconds: Display "Count Up"; all values indicate 0;
 - Strain shows Level 1
- Start of training

Display

Scale, Pulse (if measurement of pulse is active), distance, level, energy, time, revolutions, speed and time

Change of the strain during training:

- "Plus": display value below "BRAKE" is increased in steps of 1.
- "Minus" reduces in steps of 1

Continuation of the training with this setting. Changes of strain in the meantime are possible at any time.

End of training

• Average values (Ø):

Display

Pulse (if measurement of pulse is active), level, revolutions and speed

Total values
 Distance, energy and time

Standby operation

The display goes to standby operation 4 minutes after the end of training. Press any button, display re-starts with "Count Up".























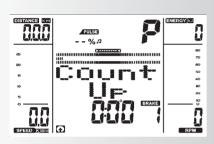



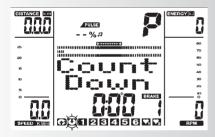





Training

The computer is equipped with 11 training programmes. They clearly differ in strain intensity and duration.

1. Training by defaults of strain

a) Manual strain input

- (PROGRAM) "Count Up" Target vales are not predetermined.
- (PROGRAM) "Count Down" Target values are determined.

b) Strain profiles

• "1" -"6" and "SAVE Count Down"(Training records)

2. Training by defaults of pulse

Manual defaults of pulse

- (PROGRAM) "HRC1 Count Up"
- (PROGRAM) "HRC2 Count Down"

Training by defaults of strain

a) Manual strain input

(PROGRAM) "Count Up"

 Press "PROGRAM" until: display "Count Up" Start training, all values count up.

Or

- Press "SET": default range
- "Plus" or "Minus": change strain.
 Start of training, all values count up.

(PROGRAM) "Count Down"

- Press "PROGRAM" until: Display: "Count Down"
- The programme counts down > 0 from the entered values. If nothing is entered, the training starts in the programme "Count Up". For the start of the programme at least one input for distance, time or energy must be entered.
- Press "SET": default range

Default range

Display: Training record "Recor."

 Activate or deactivate training records with "plus" or "minus" Confirm with "SET"

Display: distance default "Dist"

Distance default

• Enter values by means of "Plus" or "Minus" (e.g. 14.00)

Confirm by means of "SET".

Display: Next menu time default "Time"

Time default

• Enter values by means of "Plus" or "Minus" (e.g. 45:00)

Confirm by means of "SET".

Display: Next menu energy default "Energ."

Energy default

Enter values by means of "Plus" or "Minus" (e.g. 1500)
 Confirm by means of "SET".

Display: Next menu Age default "Age"

Age input

The input of the age serves to determine and control the maximum pulse (Symbol – I, warning sound, if activated).

 Enter values by means of "Plus" or "Minus" (such as 34). Based on it, the maximum pulse of 186 is calculated according to the formula (220 – Age) Confirm by means of "SET".

Display: next menu selection of target pulse "Fat 65%"

Selection of target pulse

- Select by means of "Plus" or "Minus"
- Fat burning 65%, Fitness 75%, Manual 40 90%
 Confirm by means of "SET" (e.g. Manual 40 90%)
- Enter values by means of "Plus" or "Minus" (e.g. Manual 83)

Confirm by means of "SET" (default mode completed)

Display: readiness for training with all defaults

Or

Target pulse (40 – 200)

Deselect the age input by means of "Plus" or "Minus".
 Display: "AGE OFF"
 Confirm by means of "SET".

Display: next default "target pulse" (Pulse)

• Enter value by means of "Plus" or "Minus" (e.g. 146) Confirm by means of "SET" (default mode completed)

Display: readiness for training with all defaults

Note:

- An overview of all setting possibilities in the programmes is summarised in the tables (see page 29).
- The defaults are lost in case of "Reset". If in case of individual settings "Storage of defaults" is activated (page 30), the defaults will remain. When calling Count Up / Count Down for the next time, the data is accepted.

Readiness for training

Strain

 Change strain by means of "Plus" or "Minus". Start of training by pedalling.

Training records

In the Count Up or the Count Down programme a training record is started with the default "Recor. ON". When the programme is ended, the data is saved. The training record is visible in the next programme choice under "SAVE Count Down".

FB606-608-609
































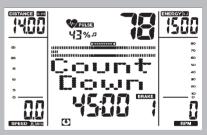






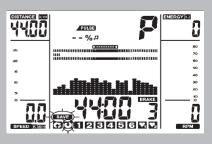

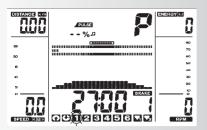






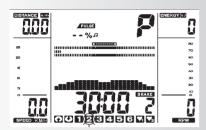






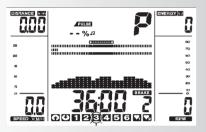








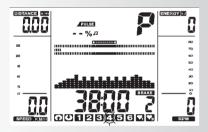








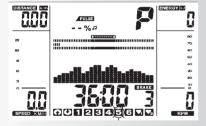







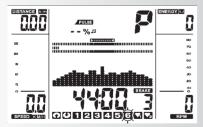









b) strain profiles (PROGRAM) "1" - "6"

All profiles are selected by pressing "PROGRAM". e.g. *Display:* "1"

Fitness beginners I; strain level 1-4, 27 min.

Press "SET": default range,

Start of training

• Press "PROGRAM" until: display "2" Fitness beginners II; strain level 1-5, 30 min. Press "SET": default range,

Start of training

• Press "PROGRAM" until: display "3" Advanced I; strain level 1-6; 36 min. Press "SET": default range

Start of training

• Press "PROGRAM" until: display "4" Advanced II; strain level 1-7, 38 min. Press "SET": default range

Start of training

• Press "PROGRAM" until: display "5" Professional I; strain level 1-9, 36 min. Press "SET": default range

Start of training

Press "PROGRAM" until: display "6" Professional II; strain level 1-10, 44 min. Press "SET": default range

Start of training

Note:

The profile is compressed to 25 columns in the programme displays in case of times exceeding 25 min.

Defaults see table page 12.

Switching over time/distance

In the programmes 1-6 the switch-over is possible from the time mode to the distance mode in the default range.

Set mode by means of "Minus" or "Plus". Confirm by means of "SET".

Display: readiness for training

The distance per column is 400 m (0.2 miles).

Cross trainer: 200 m (0.1 miles)

2. Training by defaults of pulse

Manual defaults of pulse

(PROGRAM) "HRC1" Count Up"

- Press "PROGRAM" until: display: HRC1
- Press "SET": default range

Or

 Start training, all values count up.
 The strain is increased automatically until the target pulse is achieved (e.g. 130)

(PROGRAM) "HRC2" Count Down"

- Press "PROGRAM" until: display HRC2
- Press "SET": Default range
 The input and adjustment possibilities are analogous relating to the programme item "Count Down".
- Start of training
 The strain is increased automatically until the target pulse is achieved (e.g. 130)

Or

Start training

Note:

Initial strain

In HRC programmes the definition of the initial strain is possible in the default range from level 1-10.

• Enter values by means of "Plus" or "Minus" (e.g. 10) The strain is increased automatically from the entered level until the target pulse is achieved (e.g. 130)

Pulse

The pulse value can be changed at this point (readiness for training) by means of "Plus" or "Minus", e.g. from 130 to 140.

Start of training by pedalling.

Default possibilities: see table page 29

Note:

- KETTLER recommends the pulse measurement by means of the chest belt for HRC programmes
- A strain adjustment is realised for HRC programmes in case of deviations of +/- 6 heartbeats.

Training functions

Display change during training

Adjustment manually

By means of "PROGRAM" the display changes in the following order in the item field: Time / RPM / Speed / Dist. / Pulse / Brake / Ener. / Time/Profile ...

Adjustment automatically (SCAN)

Press "PROGRAM" button for a longer period of time until the SCAN symbol appears on the display. Change of the displays at intervals of 5 seconds. The SCAN function is ended by re-pressing the "PROGRAM" button, recovery function or interruption of training.


Adjustment of the strain profile

If the strain is adjusted during the programme flow, the change appears from the flashing column to the right. The columns left of it show the realised strain levels and remain unchanged.







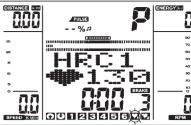



















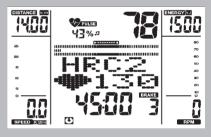











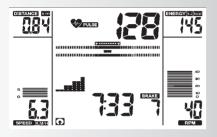











Interruption/end of training

The electronics detects an interruption of the training in case of less than 10 pedal revolutions/min or pressing "RECOVERY". The achieved training data is shown. Pulse, strain, revolutions and speed are shown as average values with Ø symbol.

Change to the current display by means of "Plus" or "Minus".

The training data is shown for 4 minutes.

If you do not press any buttons during this period and do not exercise, the electronics switches over to standby mode.

Resumption of training

If the training is continued within 4 minutes, the last values will also be counted or counted down.

RECOVERY function

Measuring the recovery pulse

The electronics reversingly measures your pulse for 60 seconds and determines a fitness mark.

Press "RECOVERY" at the end of the training. The current pulse value (in the figure "138") is stored.

After 60 seconds the pulse value (in the figure "116") is stored again. The difference between both values (in the figure "22") is shown, based on which a fitness mark (in the figure "F 3.5") is determined. The display ends after 10 seconds.

"RECOVERY" or "RESET" interrupts the function.

If no pulse is measured at the beginning or end of the time return, an error message will appear.

Input and functions

Traini	ng	Stilstand	n	U	0	0	છ	4	6	6	0	Q
	Strain	Strain	~	V								
€ ↑↓	Profile	₹ ↑ Profile			/	~	/	~	/	/		
		Distance		~								/
		Time		~								~
		Energy		~								~
		Max. Pulse	~	~	~	~	~	~	~	~	~	~
		or										
		Fat burning 65% or Fitness 75% or Manually 40-90%	/	~							~	~
		➤ Target pulse 40-200	~	/							~	/
		Time/Distance Swichover Recovery	~	~	V	V	/	V	/	V	~	~

Display in case of pulse events

						Exce	eding	
Value / Input					A	A	MAX	F
Maximal Pul Off	se 121-210)		~	+1		+1	+1
Target pulse		Fat burning)	65%				
or	Fitness	<i>75</i> %	>	V	+11	-11*		
or	Manually	40-90%	J					
Target pulse		40-200				+11	-11*	

*note: appears only, if the target pulse was achieved once

If the entered training pulse (-11 beats) is undercut, the *symbol* "+" is shown.

If it is exceeded (+11 beats) the *symbol* "." is shown.

If the maximum pulse is exceeded, the "-" arrow is flashing and the writing "MAX" is shown

If the "alarm sound in case of exceeding the maximum pulse" is activated in individual settings (page 13), additional sounds are output.

Display colours and their meaning (only with UNIX PX and ELYX 3):

The display can illuminate in 3 different colours: blue, green and red. To ensure an obvious notification of pulse events the meaning of the colours are defined as follows:

The displays illuminates or turns blue when the following requirements are present:

- Pulse monitoring is deactivated Target pulse monitoring (-/+ 10 beats) is active but has not been reached
- Pulse has fallen below the target pulse monitoring
- Target pulse monitoring is deactivate, the maximum pulse monitoring is active but the pulse rate is lower than the maximum pulse entry
- They are in the guidelines area

The display illuminates or turns green:

• The pulse is in the area of the target pulse monitoring (-/+ 10 beats)

The display illuminates or turns red:

- The pulse has increased over the area of the target pulse monitoring (+11 beats)
- The maximum pulse rate is exceeding during an active maximum pulse monitoring

Training and Operating Instructions 8888 **4888 8888** Scale Scale engl Reset Reset n K Teme. Tępe. 20<u>8</u>E 8025 Enera Enera Koal Store Store Nee **▼** 100% a Alarm Alarm Light Blue Light Light Ljebt 8888 **\$35.** 888 8888 Light

Individual settings

Proceed according to the figure on the left:

Press "RESET"

Display: all segments

Now press "SET" for a longer period of time: menu: individual settings

Display: Scale

1. Display of the unit in kilometres / miles

Press "Plus" or "Minus"

Function: Selection kilometres or miles display

Press "Set": the selected unit is accepted and change to

the next setting

Display: Reset +/- Total kilometers

2.Delete the total kilometres and the programme SAVE Count Down

Press "Plus" + "Minus" together

Function: Deleting Display: "Reset O.K." Press "Set": change to the next setting

Or: Skipping Deletion of the total values, only press "SET"

Display: Temp

3. Display of the temperature in °C or °F

Press "Plus" or "Minus"

Function: Selection of temperature display

Press "Set": selected unit is accepted and switchover to

next setting

Display: Temp

Display of the energy consumption in kJoule / kcalorie

Press "Plus" or "Minus"

Function: Selection of the energy consumption display Press "Set": the selected unit is accepted and change to

the next setting

Display: Store

5. Storage of defaults

Press "Plus" or "Minus"

Defaults for distance, time, energy, age, target pulse are permanently stored

Function:

ON = Storage also after "Reset"

Off = Storage until next "Reset"

Press "Set":

Change to the next setting

Display: Alarm

6. Alarm sound in case of exceeding the maximum Press "Plus" or "Minus"

Function: Switching on or off the alarm sound.

Press "Set": the selected setting is accepted and "restart" of the display.

7. Selection of background lighting

Press "Plus" or "Minus"

Function:RGB.= Colour change during pulse events-Blue/Green/Red = Background lighting without colour change

Press "Set"

General Instructions

Exercise bike

Speed calculation

60 pedal rotations per minute result in a speed of 21.3 km/h.

Crosstrainer

Speed calculation

60 pedal rotations result in a speed of 9.5 km/h.

Fitness value calculation

The computer calculates and assesses the difference between load pulse and recovery pulse and your resulting "fitness value" on the basis of the following formula:

Note (F) = 6 -
$$\left(\frac{10 \times (P1 - P2)}{P1}\right)^2$$

P1 = load pulse

P2 = recovery pulse

Value 1 = very good

Value 6 = unsatisfactory

The comparison of load and recovery pulse is a simple and fast method to control your physical fitness. The fitness value is a value of orientation with regard to your ability to recover after physical load. Before you press the recovery pulse button and have the computer calculate your fitness value you should train in your load range for a longer time, this means for at least 10 minutes. With regular cardiovascular training you will notice that your "fitness value" will improve.

System Sounds

Switching On

On switch-on during the segment test a small sound is emitted.

Programme End

A programme end (profile programme, countdown) is indicated by a short sound.

Maximum Pulse Overrun

If the preset maximum pulse is exceeded by one pulse beat then 2 short sounds are emitted every 5 seconds.

Error Display

In the case of errors, e.g. a recovery can not be carried out without a pulse signal, then 3 short sounds are emitted.

Switch On/Off Automatic Scan Function

When activating and deactivating the automatic Scan Function, a short sound is emitted.

Time/Distance Switch

In the programs 1-6, switchover from time to distance mode is possible in the default section.

The distance per column is

Exercise bike: 0.4 km (0.2 miles). Crosstrainer: 0.2 km (0.1 miles)

Profile Display during Training

At the start the first column flashes. According to the flow it moves further to the right.

And in profiles over 25 minutes it reaches the middle (column 13). Then the profile moves from the right to the left. If the profile end appears in the last column (column 25), the flashing column moves further to the right until the end of the programme.

Average Value Calculation

The average value is calculated per training unit.

Instructions for Pulse Measurement

The pulse calculation starts when the heart flashes in the display in rhythm with your pulse rate.

With Ear Clip

The pulse sensor works with an infrared light and measures the translucency changes of your skin, which are caused by your pulse beat. Before you tuck the pulse sensor onto your earlobe, rub it 10 times forcefully to increase the blood circulation.

Avoid interference impulses.

- Fasten the ear clip carefully onto your ear lobe and find the most opportune moment for its removal (heart symbol flashes without interruption).
- Do not train directly under strong light e.g. neon lights, halogen lights, spotlights, beams or sunlight.
- Totally remove all vibrations and shaking of the ear sensor including cables. Always secure the cable with clips to your clothing or even better to a sweatband.

With Hand Pulse

The extra-low voltage generated through the contraction of the heart is recorded through the hand-sensors and assessed by the electronics

- Always grip the contact areas with both hands.
- Avoid gripping jerkily.
- Hold the hands calmly and avoid contractions and rubbing on the contact areas.

With Chest strap

Observe the relevant instructions.

Failures in the pulse display

Should there once be any problems with pulse detection, please check the above mentioned points once again.

Comment

Only **one** way of pulse measurement is possible **either** with ear clip **or** hand pulse **or** Chest strap. If there is no ear clip or plug receiver in the pulse socket then the hand pulse measurement is activated. If there is contact between the ear clip/plug receiver in the pulse socket, then the hand pulse measurement is automatically deactivated. It is **not** necessary to remove the plug of the hand pulse sensors.

Faults in the Training Computer

Press the Reset Key

Training and Operating Instructions Training Instructions

Sports medicine and training science use ergometry, among other things, for the examination of the functional capability of heart, circulation and respiratory system.

You can find out whether or not you have achieved the desired effect from your training after several weeks using the following method:

- 1. You manage a particular endurance performance with less heart / circulation performance than previously
- You sustain a particular endurance performance with the same heart / circulation performance over a longer period.
- 3. You recover more quickly than previously after a particular heart / circulation performance.

Guide values for the endurance training


Maximum pulse: maximum strain means the reaching of the individual maximum pulse. The maximum achievable heart rate is dependent on age.

Here, the following empirical formula applies: the maximum heart rate per minute corresponds to 220 heart beats minus age in years.

Example: age 50 years \rightarrow 220 - 50 = 170 pulse / min.

Load Intensity

Load pulse: the optimum intensity of load is reached at 65–75% (see also diagram) of the maximum pulse. This value changes depending on age.

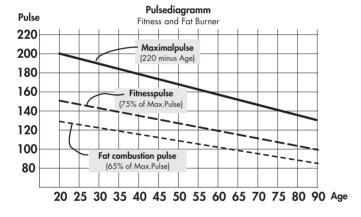

Extent Of Load

Duration of a training unit and its frequency per week:

The optimum extent of load is attained, if 65–75% of the individual heart / circulation performance is achieved over a longer period.

Empirical Formula:

Training frequency		Duration of training
daily	10	minutes
2–3 times a week	20-30	minutes
1–2 times a week	30–60	minutes

The beginner's training can be planned as follows in the first 4 weeks:

Training frequency	Extent of training session							
1st week								
3 times a week	2 minutes of training Break of 1 minute for physical exercises 2 minutes of training Break of 1 minute for physical exercises 2 minutes of training							
	2nd week							
3 times a week	3 minutes of training Break of 1 minute for physical exercises 3 minutes of training Break of 1 minute for physical exercises 2 minutes of training							
	3rd week							
3 times a week	4 minutes of training Break of 1 minute for physical exercises 4 minutes of training Break of 1 minute for physical exercises 3 minutes of training							
	4th week							
3 times a week	5 minutes of training Break of 1 minute for physical exercises 4 minutes of training Break of 1 minute for physical exercises 4 minutes of training							

It is recommended that you perform approx. 5 minutes of exercises before and after every training unit, in order to warm up and cool down. There should be a training-free day between each two consecutive training units, if you prefer training sessions of 20-30 minutes 3 times a week later on in your training. Otherwise, there is no reason why you should not train daily.

Glossary

Recovery

Recovery pulse measurement at the end of the training. From start and end pulse of one minute the deviation and a fitness grade are determined. With the same training, the improvement of this grade is a measure for fitness increase.

Reset

Deletion of the display contents and restart of the display.

Programs

Possibilities for training, which require manual or program-determined loads or target pulses.

Profiles

Change of loads over time or distance represented in the points field.

Dimension

Units for display of km/h or mph, kjoule or kcal

Energy

Calculates the energy turnover of the body

Contro

The electronic equipment controls the load or the pulse for manually entered or default values.

Points field

Display section with 25 x 16 points for representation of load and pulse profiles as well as text and value display.

Pulse

Recording of the heartbeat per minute

MaxPulse(s)

Calculated value from 220 minus years of age

Target pulse

Manual or program-determined pulse value, which is to be calculated.

Fat burning pulse

Calculated value of: 65 % MaxPuls

Fitness pulse

Calculated value of: 75 % MaxPuls

Manual

Calculated value of: 40 - 90 % MaxPuls

Age

Here an entry for calculation of the maximum pulse.

- symbol

With "-" displayed, a target pulse is too high by 11 beats. With - blinking, the maximum pulse is exceeded.

+ symbol

With "+" displayed, a target pulse is too low by 11 beats.

Meni

Display, in which values are to be entered or selected.

Glossary

Collection of attempts for explanation.

Performance table										
Date	Restpulse	Stress pulse	Recovery pulse	Slope	Time (min)	Distance (km)	Energy consumption Fit (Kcal)	ness Mark		

KETTLER





HEINZ KETTLER GmbH & Co. KG

Postfach 1020 • D-59463 Ense-Parsit www.kettler.net d2825/07.10

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com