GETTING STARTED GUIDE NI-DAQ[™]mx Base 3.*x*

This guide describes how to install and configure the NI-DAQmx Base 3.x software and a data acquisition (DAQ) device. This guide also describes how to verify that the device is operating properly.



Note For information about NI-DAQmx Base for Linux and Mac OS X, refer to ni.com/info and enter rddqld.

Contents

Conventions	2
Related Documentation	
Overview	
NI-DAQmx Base	-
Device Support	
Operating System, Application Software, Programming Language,	т
and Device Support in NI-DAQmx Base 3.x	Δ
Operating System Support	
Install Application Software	
Step 1. Install the NI-DAQmx Base Software	
Insert the CD	
Install Support Files	
Step 2. For Devices Using the LabVIEW 8.5 PDA Module for	Ŭ
Windows Mobile Only—Run the PDA Setup Utility	7
Step 3. Unpack the Devices, Accessories, and Cables	
Step 4. Install the Devices, Accessories, and Cables	
NI PCMCIA Device Installation	
NI USB Device Installation	
NI CompactFlash Device Installation	
Accessories and PCI/PXI Devices	
Step 5. Confirm That Your Device Is Recognized	
Devices Using the LabVIEW 8.5 PDA Module for	
Windows Mobile	11
Step 6. Create and Configure Tasks	
Using the NI-DAQmx Base Task Configuration Utility	



Windows Mobile12Create, Modify, and Configure a Task in NI-DAQmx Base13Devices Using the LabVIEW 8.5 PDA Module for14Using Tasks in an Application15Documentation15Getting Started Developing an Application15Devices on LabVIEW 8.5 PDA Module for16Obtaining Information about Measurement Applications16ANSI C16Training Courses17Where to Go for Support17	Devices Using the LabVIEW 8.5 PDA Module for	
Devices Using the LabVIEW 8.5 PDA Module for Windows Mobile 14 Using Tasks in an Application 15 Documentation 15 Getting Started Developing an Application 15 Examples 15 Devices on LabVIEW 8.5 PDA Module for 16 Obtaining Information about Measurement Applications 16 ANSI C 16 Training Courses 17	Windows Mobile	12
Windows Mobile14Using Tasks in an Application15Documentation15Getting Started Developing an Application15Examples15Devices on LabVIEW 8.5 PDA Module for16Windows Mobile16Obtaining Information about Measurement Applications16and Devices16LabVIEW16ANSI C16Training Courses17	Create, Modify, and Configure a Task in NI-DAQmx B	ase13
Using Tasks in an Application	Devices Using the LabVIEW 8.5 PDA Module for	
Documentation. 15 Getting Started Developing an Application. 15 Examples 15 Devices on LabVIEW 8.5 PDA Module for 16 Obtaining Information about Measurement Applications 16 ANSI C 16 Training Courses 17	Windows Mobile	14
Getting Started Developing an Application 15 Examples 15 Devices on LabVIEW 8.5 PDA Module for 16 Obtaining Information about Measurement Applications 16 Ansi C 16 Training Courses 17	Using Tasks in an Application	15
Examples 15 Devices on LabVIEW 8.5 PDA Module for 16 Windows Mobile 16 Obtaining Information about Measurement Applications 16 LabVIEW 16 ANSI C 16 Training Courses 17	Documentation	15
Devices on LabVIEW 8.5 PDA Module for Windows Mobile		
Devices on LabVIEW 8.5 PDA Module for Windows Mobile	Examples	15
Obtaining Information about Measurement Applicationsand Devices		
and Devices	Windows Mobile	16
LabVIEW	Obtaining Information about Measurement Applications	
ANSI C	and Devices	16
Training Courses17	LabVIEW	16
	ANSI C	16
	Training Courses	17
	Where to Go for Support	17

Conventions

	The following conventions are used in this guide.
»	The » symbol leads you through nested menu items and dialog box options to a final action. The sequence File » Page Setup » Options directs you to pull down the File menu, select the Page Setup item, and select Options from the last dialog box.
	This icon denotes a tip, which alerts you to advisory information.
	This icon denotes a note, which alerts you to important information.
	This icon denotes a caution, which advises you of precautions to take to avoid injury, data loss, or a system crash. When this symbol is marked on the device, refer to the <i>Read Me First: Safety and Radio-Frequency</i> <i>Interference</i> document, shipped with the device, for precautions to take.
bold	Bold text denotes items that you must select or click in the software, such as menu items and dialog box options. Bold text also denotes parameter names.
italic	Italic text denotes variables, emphasis, a cross-reference, or an introduction to a key concept. Italic text also denotes text that is a placeholder for a word or value that you must supply.
monospace	Text in this font denotes text or characters that you should enter from the keyboard, sections of code, programming examples, and syntax examples. This font is also used for the proper names of disk drives, paths, directories,

programs, subprograms, subroutines, device names, functions, operations, variables, filenames, and extensions.

monospace italic Italic text in this font denotes text that is a placeholder for a word or value that you must supply.

Related Documentation

The following documents contain information you might find helpful as you read this guide:

- Software documentation
 - NI-DAQmx Base Help
 - NI-DAQmx Base C Function Reference Help
 - NI-DAQmx Base 3.x Readme
 - NI-DAQmx Help
 - Getting Started with the LabVIEW PDA Module for Windows Mobile, available in PDF format by selecting Start»Programs» National Instruments»LabVIEW 8.5»LabVIEW Manuals and selecting PDA_Getting_Started.pdf
 - LabVIEW Help, available by selecting Help»Search the LabVIEW Help
 - LabVIEW Fundamentals, available in PDF format by selecting Start»Programs»National Instruments»LabVIEW 8.5»
 LabVIEW Manuals and selecting LV_Fundamentals.pdf
- Hardware documentation
 - CF-6004 User Guide
 - NI USB-6008/6009 User Guide and Specifications
 - NI USB-6501 User Guide and Specifications
 - E Series User Manual
- Documentation for the PDA device you use

Overview

National Instruments measurement devices are packaged with NI-DAQmx or NI-DAQmx Base driver software. NI-DAQmx includes an extensive library of VIs and ANSI C functions that you can call from your application software, such as LabVIEW or NI LabWindows[™]/CVI[™], to program all the features of your NI measurement devices. The NI-DAQmx Base driver software has an application programming interface (API), which is a library of VIs and ANSI C functions for creating applications for your device.

NI-DAQmx Base

NI-DAQmx Base is a driver that allows you to build applications that run using a PDA device and Windows. NI-DAQmx Base includes the following features:

- NI-DAQmx Base is a subset of the NI-DAQmx API and is similar in functionality to NI-DAQmx.
- NI-DAQmx Base consists of a LabVIEW VI framework, which allows you to customize the driver, if needed, when using LabVIEW.
- NI-DAQmx Base provides a high-level interface on the LabVIEW 8.5 PDA Module for Windows Mobile, Windows 2000/XP, and Windows Vista x86/x64.

Note If you are familiar with NI-DAQmx, refer to the *NI-DAQmx Base 3.x Readme* for information about the differences between NI-DAQmx Base and NI-DAQmx.

Device Support

R

NI-DAQmx Base 3.*x* supports the following devices under the LabVIEW 8.5 PDA Module for Windows Mobile:

- NI CF-6004
- NI DAQCard-6024E
- NI DAQCard-6036E
- NI DAQCard-6062E
- NI USB-6008
- NI USB-6009
- NI USB-6501

Operating System, Application Software, Programming Language, and Device Support in NI-DAQmx Base 3.x

Operating System Support

NI-DAQmx Base 3.*x* supports Windows 2000/XP and Windows Vista x86/x64. The development environment for devices on the LabVIEW 8.5 PDA Module for Windows Mobile is supported on Windows 2000/XP and Windows Vista x86/x64.

Note Only one version of NI-DAQmx Base (such as NI-DAQmx Base 3.0) can be installed on the same computer at the same time.

Install Application Software

Install the NI application software, including LabVIEW, NI LabWindows/CVI, and NI Measurement Studio. PDA Module users must use LabVIEW 8.5 PDA Module for Windows Mobile with NI-DAQmx Base 3.0. Refer to the *Operating System, Application Software, Programming Language, and Device Support in NI-DAQmx Base 3.x* section for more information. Also, refer to *Getting Started with the LabVIEW PDA Module for Windows Mobile* for more information by selecting **Start»Programs»National Instruments» LabVIEW 8.5»LabVIEW Manuals** and selecting PDA_Getting_Started.pdf.



Note PDA Module users should make sure that LabVIEW 8.5 PDA Module for Windows Mobile is completely installed and configured before continuing.

Step 1. Install the NI-DAQmx Base Software

The following sections describe how to install the NI-DAQmx Base software.

Insert the CD

Note Install your driver software before installing new hardware devices, or the operating system might not detect your device, and you might see warnings asking you to install the driver.

Inserting the CD launches the NI-DAQmx Base install window.

If the NI-DAQmx Base install window does not open automatically, complete the following steps:

- 1. Select Start»Run.
- 2. Enter x: setup.exe, where x is the letter of the CD drive.
- 3. Click Install NI-DAQmx Base.

Install Support Files

The NI-DAQmx Base installer detects the NI software installed on the operating system and automatically selects the latest versions of the driver, application software, and language support files from the CD.

The NI-DAQmx Base installer displays which features will be installed on your computer, as shown.

🖏 NI-DAQmx Base 3.0	
Features Select the features to install.	
NI-DADmx Base 3.0 LabVIEW 8.0 Windows Support LabVIEW 8.2 Windows Support LabVIEW 8.5 Windows Support Examples PDA Support C Support NI-VISA 4.2 NI Measurement & Automation Explorer 4.3	NI-DAQmx Base 3.0 Device Driver.
Cirectory for NI-DAQmx Base 3.0	This feature and its selected subcomponents may require up to 445 MB of disk space.
	Browse
R <u>e</u> store Defaults Disk Cost	<< Back Next >> Cancel

Complete the following steps to install NI-DAQmx Base.

- 1. In the Features window, shown in the previous figure, verify that the installer detected and selected the correct support files and the correct version number of the application software.
- 2. Click the + in front of the feature to expand the list of feature subcomponents, as shown in the previous figure. You can select additional options to install the support files, examples, and documentation.
- 3. Follow the software prompts.
- 4. Click **Finish** and wait for the installer to complete. NI-DAQmx Base might require you to reboot your computer to complete installation.

Step 2. For Devices Using the LabVIEW 8.5 PDA Module for Windows Mobile Only—Run the PDA Setup Utility

After running the NI-DAQmx Base installation, you must copy the driver files to the PDA device. Complete the following steps to run the Pocket PC Driver Installation utility.

- 1. Select Start»Programs»National Instruments»NI-DAQmx Base» Utilities.
- 2. Click **Windows Mobile-CE Driver Installation**. Clicking **Windows Mobile-CE Driver Installation** launches the Pocket PC Add/Remove Programs utility window.
- 3. Click **Yes** in the Pocket PC Add/Remove Programs utility window to install the device driver into the default application install directory.
- 4. Check the PDA device screen to see if any additional steps are requested, such as replacing an older driver.

If there are no error messages, you have successfully completed the steps to install the driver files on the PDA device.

Step 3. Unpack the Devices, Accessories, and Cables

Your device ships in an antistatic package to prevent electrostatic discharge (ESD) damage to the device. ESD can damage several components on the device.



Caution Never touch the exposed pins of connectors.

To avoid such damage, take the following precautions:

- Ground yourself using a grounding strap or by touching a grounded object.
- Touch the antistatic package to a metal part of the computer chassis before removing the device from the package.

Remove the device from the package and inspect the device for loose components or any sign of damage. Notify NI if the device appears damaged in any way. Do *not* install a damaged device in the computer, PDA device, or PXI chassis.

Store the device in the antistatic package when the device is not in use.


For safety and compliance information, refer to the device documentation packaged with your device.

NI PCMCIA Device Installation



Caution Follow proper ESD precautions to ensure you are grounded before installing the hardware.

The NI PCMCIA device supports hot insertion on a PDA device, which means the NI PCMCIA device can be installed and removed without rebooting the PDA device. You can install an NI PCMCIA device in any available Type II PC Card slot.

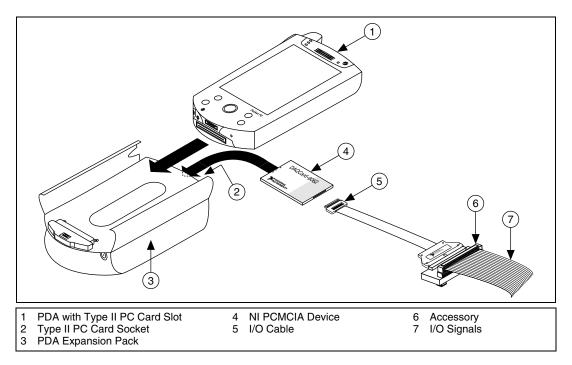

To install the NI PCMCIA device, refer to the preceding figure while completing the following steps.

- 1. Attach the Type II PC cardsleeve or expansion pack to the PDA device, if necessary.
- NI PCMCIA devices have two connectors: a 68-pin PCMCIA bus connector on one end and an I/O connector on the other end. The NI PCMCIA device is keyed so that you can only insert it one way. Insert the NI PCMCIA device in the slot until the connector is firmly seated.



Caution Always grasp the cable by the connector you are inserting or removing. *Never* pull directly on the I/O cable to unplug it from the PCMCIA device.


3. Attach the I/O cable. Be careful not to put strain on the I/O cable when inserting or removing the cable connector.

NI USB Device Installation



Caution Follow proper ESD precautions to ensure you are grounded before installing the hardware.

The NI USB devices support hot insertion on a PDA device, which means you can install and remove the NI USB device without rebooting the PDA device. You can install an NI USB device into any USB port that supports USB host controller capabilities.

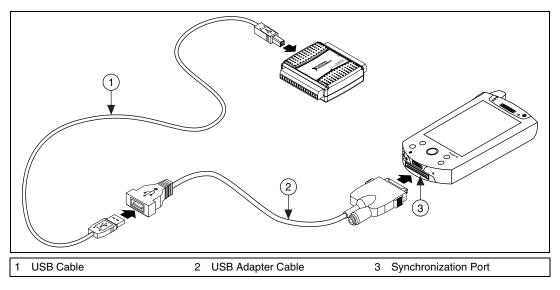

- 1. Connect the USB adapter cable to the synchronization port on the PDA.
- 2. Connect the USB device to the adapter cable with the USB cable.

 \mathbb{N}

Note If you are using the USB device on a computer with Windows 2000/XP/Vista and NI-DAQmx 7.5 or later installed on it, make sure the correct firmware is installed on the device. Go to ni.com/info and enter code USBFirmware for more information.

Note Before connecting a USB device to a PDA for the first time, you must connect the USB device to a computer with NI-DAQmx Base 3.*x* installed on it in order to install the appropriate firmware on the USB device. Go to ni.com/info and enter code USBFirmware for more information.


NI CompactFlash Device Installation



Caution Follow proper ESD precautions to ensure you are grounded before installing the hardware.

The NI CompactFlash device supports hot insertion on a PDA device, which means you can install and remove the NI CompactFlash device without rebooting the PDA device. You can install an NI CompactFlash device in any available Type II CompactFlash slot.

To install the NI CompactFlash device, refer to the following figure while completing the following steps.

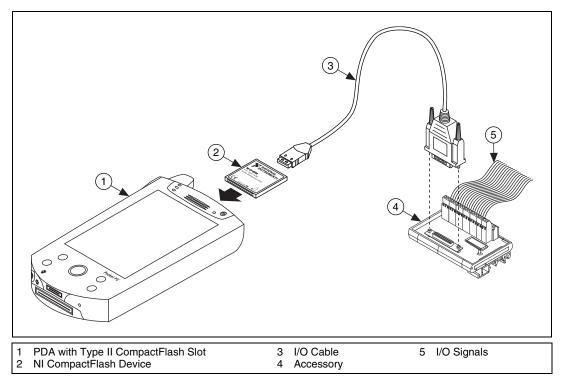

1. NI CompactFlash devices have two connectors: a 50-pin CompactFlash bus connector on one end, and an I/O connector on the other. The NI CompactFlash device is keyed so that you can insert it only one way. Insert the NI CompactFlash device in the slot until the connector is firmly seated.

Caution Always grasp the device by the connectors you are inserting or removing. *Never* pull directly on the I/O to unplug it from the NI CompactFlash device.

2. Attach the I/O cable. Be careful not to put strain on the I/O cable when inserting or removing the cable connector.

Accessories and PCI/PXI Devices

Install accessories and/or terminal blocks according to the instructions in their user guides. Install PCI and PXI devices according to the instructions included with your device.

Step 5. Confirm That Your Device Is Recognized

The following section discusses how to confirm that your device is recognized.

Devices Using the LabVIEW 8.5 PDA Module for Windows Mobile

Windows Mobile devices only indicate whether a hardware installation error occurred. If there are no error messages, you have successfully installed the features and the device is recognized by the NI-DAQmx Base driver. If you receive an Unknown Device error message, you have not correctly installed NI-DAQmx Base on the PDA device. Refer to *Step 1*. *Install the NI-DAQmx Base Software* for more information about how to install the PDA features of the NI-DAQmx Base driver.

Step 6. Create and Configure Tasks

A *task*, an important concept for NI-DAQmx and NI-DAQmx Base, is a collection of one or more channels with timing, triggering, and other properties. Conceptually, a task represents a measurement or generation you want to perform. You can set up and save all configuration information in a task and use the task in an application.

Using the NI-DAQmx Base Task Configuration Utility

The following sections describe how to use the NI-DAQmx Base Task Configuration Utility.

Devices Using the LabVIEW 8.5 PDA Module for Windows Mobile

Using the NI-DAQmx Base Task Configuration Utility is required when using devices with the LabVIEW 8.5 PDA Module for Windows Mobile. In NI-DAQmx Base 3.0, task information is embedded in the built application. Prior to building and downloading your VI to the PDA device, you must configure and save the tasks you want to use.

To use the Task Configuration Utility, complete the following steps:

- 1. Open LabVIEW.
- 2. Select Tools»NI-DAQmx Base Task Configuration Utility.

DAQmx Base Tasks ai finite dig trig ai cont multi ai cont multi ai cont buffered ctr simple event dio read port dio write port			iguration Utility	🔛 NI-DAQmx Base Task Configu
ao single update ai finite buffered new task Create New Task Channel List Task Timing Task Triggering Advanced Scan List	T	Task Timing Task Triggering Scan List		ai finite dig trig ai cont multi ai cont buffered ctr simple event dio read port dio write port ao single update ai finite buffered
Delete Task Import Task List Channel Gain Polarity ChannelType Import Task List Channel Gain Polarity ChannelType	ChannelType	Channel Gain Polarity		
Export Task List				T

Note You also can launch the Task Configuration Utility from Start»Programs» National Instruments»NI-DAQmx Base.

Create, Modify, and Configure a Task in NI-DAQmx Base

Create a new task or modify an existing task in the Task Configuration Utility task list. The pre-installed tasks are configured to work with the examples without modifications. To modify an existing task, select it in the task list. To create a new task, complete the following steps:

1. Click Create New Task. The Create New Task.vi window opens.

🔁 Create New Task.	vi	×
Create New DAQm× Base Task Name New Task	e Task	
Device		
NI 6062E: "Dev1"	(on Mobile Device)	
Acquisition Type	ОК Са	ncel

- 2. Enter a name for the new task.
- 3. Select the device. For devices using the LabVIEW 8.5 PDA Module for Windows Mobile, select the device that matches your installed hardware.
- 4. Select the acquisition type. Click OK when finished.
- 5. Each acquisition type contains a set of tabbed dialog boxes for configuring the task. Configure all options specific to your task.

lalog Input	Voltage Task	
vice		
I 6062E: "Dev1"	(on Mobile Device)	
Channel List Task 1	Fiming Task Triggering	Advanced
Start Trigger	Reference Trigger	Analog Trigger
Trigger Polarity	Pretrigger Scans	Analog Trig Mode
Rising 💌	0	None 💌
Trigger Source	Trigger Polarity	Analog Hi Ref
None 💌	Rising 💟	0
	PreTrigger Source	Analog Low Ref
	None 💌	0

Tip You can view context help for the Task Configuration Utility by pressing <Ctrl-H>.

6. Click **Save & Exit** when you are finished configuring your tasks. The task configuration is automatically saved into LabVIEW global variables. You do not need to explicitly save the configuration.

To transfer the task configuration to other computers, click **Export Configuration** and save the tasks to a file. You then can use **Import Configuration** to import the task configuration.

Note The Import Configuration and Export Configuration options operate on the entire set of tasks shown in the Task Configuration Utility. Importing a configuration replaces any existing tasks, including the predefined tasks for the example programs.

Devices Using the LabVIEW 8.5 PDA Module for Windows Mobile

When you are using devices that use the LabVIEW 8.5 PDA Module for Windows Mobile, the task configuration is built into the target application. You *cannot* retrieve the task information after it is embedded in a built application. Exporting the configuration allows you to preserve the task in case of accidental deletion when using the Task Configuration Utility.

¥⁄

 \mathbb{N}

Using Tasks in an Application

To use a preconfigured task in your application, complete the following steps:

- 1. Right-click the task/channels in terminal on a NI-DAQmx Base VI.
- 2. Select Create»Control or Create»Constant.
- 3. Type the name of the task in the control or constant.
- 4. To set the value as the default for the control, right-click the control and select **Data Operations**»Make Current Value Default.

Documentation

The NI-DAQmx Base software kit includes online documentation for supported devices and accessories, including PDF and help files describing device terminals, specifications, features, and operation.

After installation, the documents are accessible from **Start»Programs**» **National Instruments»NI-DAQmx Base»Documentation**.




Note You must have Internet Explorer version 5.0 or later to use some features of the NI-DAQmx Base documentation, including the help system.

Getting Started Developing an Application

Examples

Each API includes a collection of programming examples to help you start developing an application. You can modify example code and save it in an application. You can use examples to develop a new application or add example code to an existing application. NI-DAQmx Base examples are accessible from **Start»Programs»National Instruments» NI-DAQmx BaseExamples**.

The following figure illustrates a typical NI-DAQmx Base application in LabVIEW. The pictured task uses a preconfigured task to acquire and display a finite number of points for multiple channels.

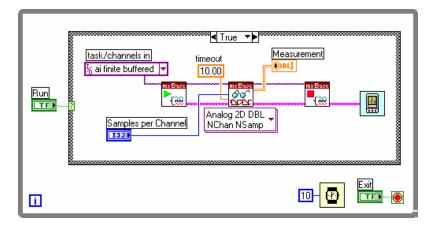

Devices on LabVIEW 8.5 PDA Module for Windows Mobile

Refer to *Getting Started with the LabVIEW PDA Module for Windows Mobile* for more information about how to create a PDA application.

Obtaining Information about Measurement Applications and Devices

Each application software package and driver includes information about writing applications for taking measurements and controlling measurement devices. The following references assume you have NI-DAQmx Base and, where applicable, LabVIEW installed on your computer.

LabVIEW

If you are a new user, complete *Getting Started with LabVIEW* to get acquainted with LabVIEW. Select **Start»Programs»National Instruments»LabVIEW»LabVIEW Manuals** and open LV_Getting_Started.pdf.

The LabVIEW *NI-DAQmx Base Help* describes the LabVIEW VIs and properties. In LabVIEW, select **Help»Search the LabVIEW Help** and the VI reference help section for NI-DAQmx Base.

ANSI C

The *NI-DAQmx Base C Function Reference Help* contains an API overview. Select **Start»Programs»National Instruments» NI-DAQmx Base C Function Reference Help**.

Training Courses

National Instruments offers training courses for those interested in receiving more help developing an application with NI products. To enroll in a course or obtain a detailed course outline, refer to ni.com/training.

Where to Go for Support

The National Instruments Web site is your complete resource for technical support. At ni.com/support you have access to everything from troubleshooting and application development self-help resources to email and phone assistance from NI Application Engineers.

National Instruments corporate headquarters is located at 11500 North Mopac Expressway, Austin, Texas, 78759-3504. National Instruments also has offices located around the world to help address your support needs. For telephone support in the United States, create your service request at ni.com/support and follow the calling instructions or dial 512 795 8248. For telephone support outside the United States, contact your local branch office:

Australia 1800 300 800, Austria 43 662 457990-0, Belgium 32 (0) 2 757 0020, Brazil 55 11 3262 3599, Canada 800 433 3488, China 86 21 5050 9800, Czech Republic 420 224 235 774, Denmark 45 45 76 26 00, Finland 385 (0) 9 725 72511, France 01 57 66 24 24, Germany 49 89 7413130, India 91 80 41190000, Israel 972 3 6393737, Italy 39 02 413091, Japan 81 3 5472 2970, Korea 82 02 3451 3400, Lebanon 961 (0) 1 33 28 28, Malaysia 1800 887710, Mexico 01 800 010 0793, Netherlands 31 (0) 348 433 466, New Zealand 0800 553 322, Norway 47 (0) 66 90 76 60, Poland 48 22 3390150, Portugal 351 210 311 210, Russia 7 495 783 6851, Singapore 1800 226 5886, Slovenia 386 3 425 42 00, South Africa 27 0 11 805 8197, Spain 34 91 640 0085, Sweden 46 (0) 8 587 895 00, Switzerland 41 56 2005151, Taiwan 886 02 2377 2222, Thailand 662 278 6777, Turkey 90 212 279 3031, United Kingdom 44 (0) 1635 523545

National Instruments, NI, ni.com, and LabVIEW are trademarks of National Instruments Corporation. Refer to the *Terms of Use* section on ni.com/legal for more information about National Instruments trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering National Instruments products, refer to the appropriate location: **Help»Patents** in your software, the patents.txt file on your CD, or ni.com/patents.

© 2004–2007 National Instruments Corporation. All rights reserved.

371259F-01

Jun07

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com