
PLASMA DISPLAY MOUNT MODEL

PWM-503

For service and parts contact:

Premier Mounts

3130 E. Miraloma Ave
Anaheim, CA USA 92806

Phone: (800) 368-9700 **Fax:** (800) 832-4888

Visit us at: www.mounts.com

Contents

- Safety & precautions
- Mount diagrams
- Parts List
- Optional Adapters
- Installing the mounting bracket
- Installing the mount
- Electrical
- Securing the mount
- Additional security

Safety & Precautions

WARNING Safety precaution measures must be practiced at all times during the installation of this product. Use proper safety gear and tools for the installations procedure to prevent personal injury or damage to the plasma displays or plasma mounts.

WARNING!

The wall or ceiling structure must be capable of supporting at least five (5) times the weight of plasma display. If not, the wall or ceiling must be reinforced. Proper installation procedure by qualified personnel as outlined in the installations instructions must be adhered to. Failure to do so could result in serious personal injury

The entire installation instructions should be fully read and understood, including all of the safety symbols and safety precautions, before beginning installation. The installation instructions should be read, understood and followed to prevent personal injury or property damage. Keep these installation instructions in an easily accessible location for future reference.




Indicates that the power plug is to be disconnected from the power outlet.



Contact Premier Mounts for any questions



Safety precautions must be taken at all times.




Warning and caution in general



Installation and removal of plasma panels and brackets should be performed only by qualified personnel and should conform to all applicable codes.




Never place any objects on top of, or hang any objects from the plasma panel.




Your plasma panel is heavy! Do not have your panel mounted in an area where it is likely to be struck by another object or accidentally lifted from its mount.




Do not place anything underneath your plasma panel.



Keep the installation manual and user manuals in a safe place so that you can easily refer to them.



The wall must be capable of supporting a weight of at least 500 pounds. If the wall cannot support a weight of 500 pounds it must be reinforced. Failure to properly install the PSM-V501F plasma panel could result in serious personal injury.




Proper ventilation is required for the PDP-501MX plasma panel. Only Pioneer approved wall brackets should be used to mount the panel to ensure proper ventilation

Mount Diagrams

TILT BACK PLATE


PART#:
PSB-TBP
MATERIAL:
12 (GA) CRS
COLOR:
Black powder coat

- A.**
Lag bolt access slot.
- B.**
Mounting points (4.5") used on installations other than wall mounting.
- C.**
Access hole for power or cables.
- D.**
Mounting points for additional security screws.

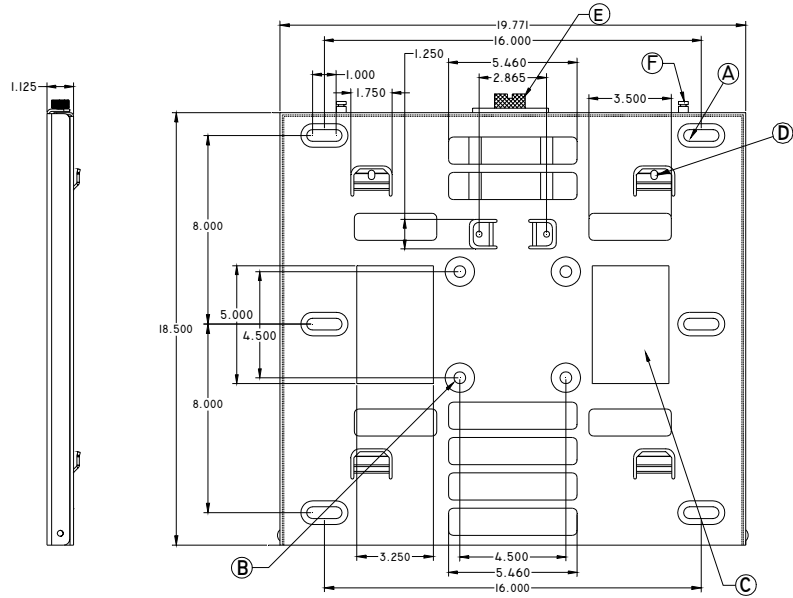

MOUNTING BRACKET

PART#:
Mounting bracket
MATERIAL:
12 (GA) P & O
COLOR:
Black Powder coat

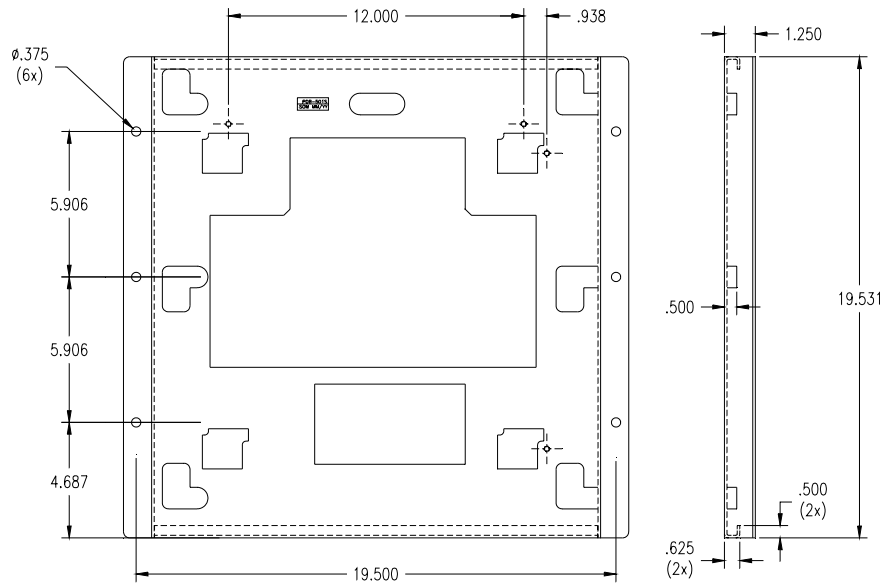

Parts List

HARDWARE LIST



QTY	SIZE	DESCRIPTION
6	5/16" Dia	Lag bolts
1	▪	Mounting bracket
1	▪	PSB-TBP tilt back plate
2	M6 x 12 (mm) Phillip security screws	Used for additional security on tilt mounts, mobile carts, floor stands and ceiling mounts
1	▪	Installations instructions
6	M8 x 20 Phillip screws	Mount hardware

TOOLS NEEDED

- Phillips screwdriver
- Drill gun
- Soft material or a blanket
- Pencil
- 1/4" drill bit
- Level
- Measuring tape
- Wrench with a 1/2" socket
- Stud finder

CEILING ADAPTERS (OPTIONAL)

- PCA-1 – 4.5" Ceiling adapter mates directly to the PSB-TBP tilt back plate
- PSA-1 – Height adjustable ceiling adapter adjustable range 24" to 46"

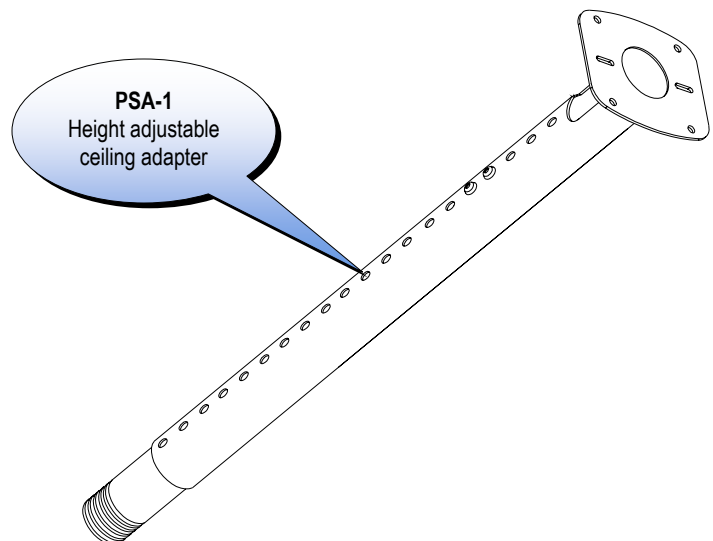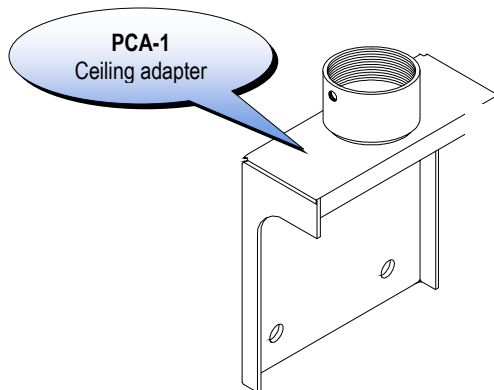


Installing the mounting bracket

WARNING: Proper installation procedure by qualified personnel as outlined in the installation instructions must be adhered to. Failure to do so could result in serious personal injury and possible damage to the plasma display.

Step 1

CAUTION: The plasma displays are fragile and heavy. At least two (2) qualified personnel are strongly recommended for the installation of this product. Invert the plasma display and set it on a flat and soft material such as (blankets, foam, cloth etc.) to prevent any damage to the plasma display. See fig 1.

Fig 1

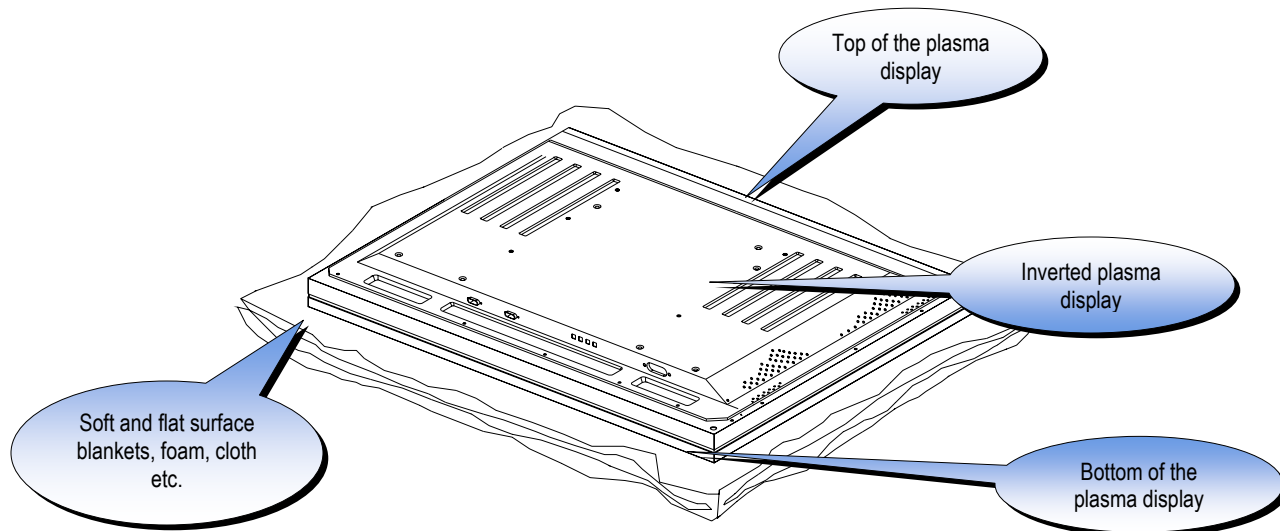


Step 2

Locate the mounting points found on the back of the plasma display, align the mounting holes from the mounting bracket to the holes on the plasma display. Arrow found on the mount must always be pointing to the top of the plasma display before securing it to the plasma display. Loosely install the six (6) M8 x 20 Phillip screws to the plasma then secure the screws with a Phillips screwdriver **CAUTION: Do not over tighten the M8 x 20 Phillips screws.** See fig 2.

WARNING: Do not use a drill gun to secure the screws to the plasma display. A Phillips head screwdriver is preferred.

Fig 2

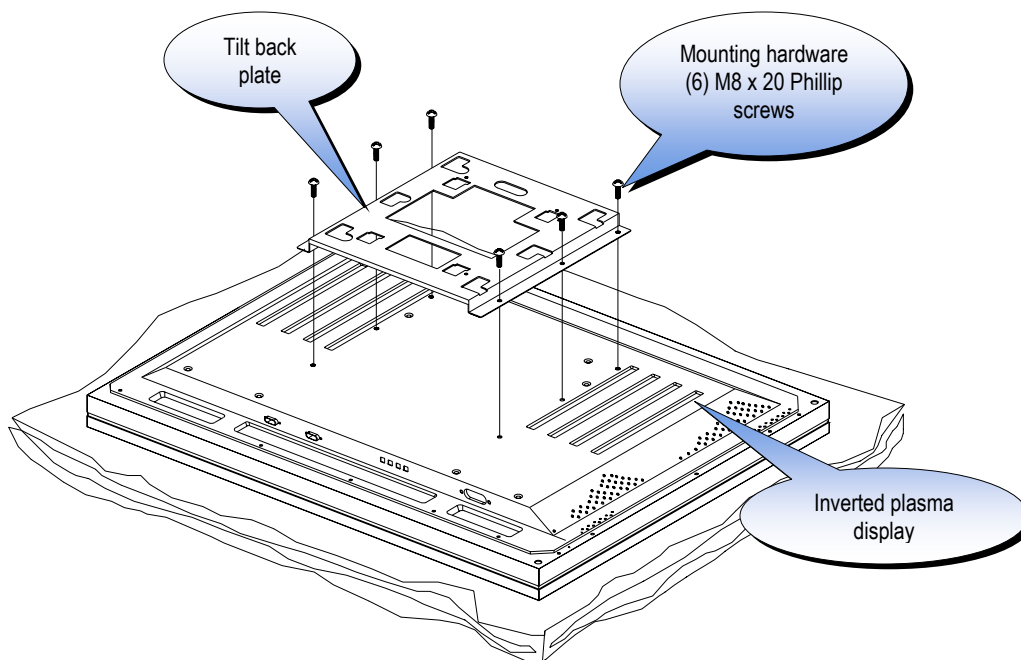


Installing the mounts

Step 3

Select the area where the plasma will be installed and make sure it can support the weight standards (see warning on page 3). Locate the 16" wood stud centers behind the wall using a (commercially available) stud finder and mark the center of the studs when found. Set the mounting bracket to the wall and mark the desired height by marking the center of the tilt back plate. See fig 3


Fig 3

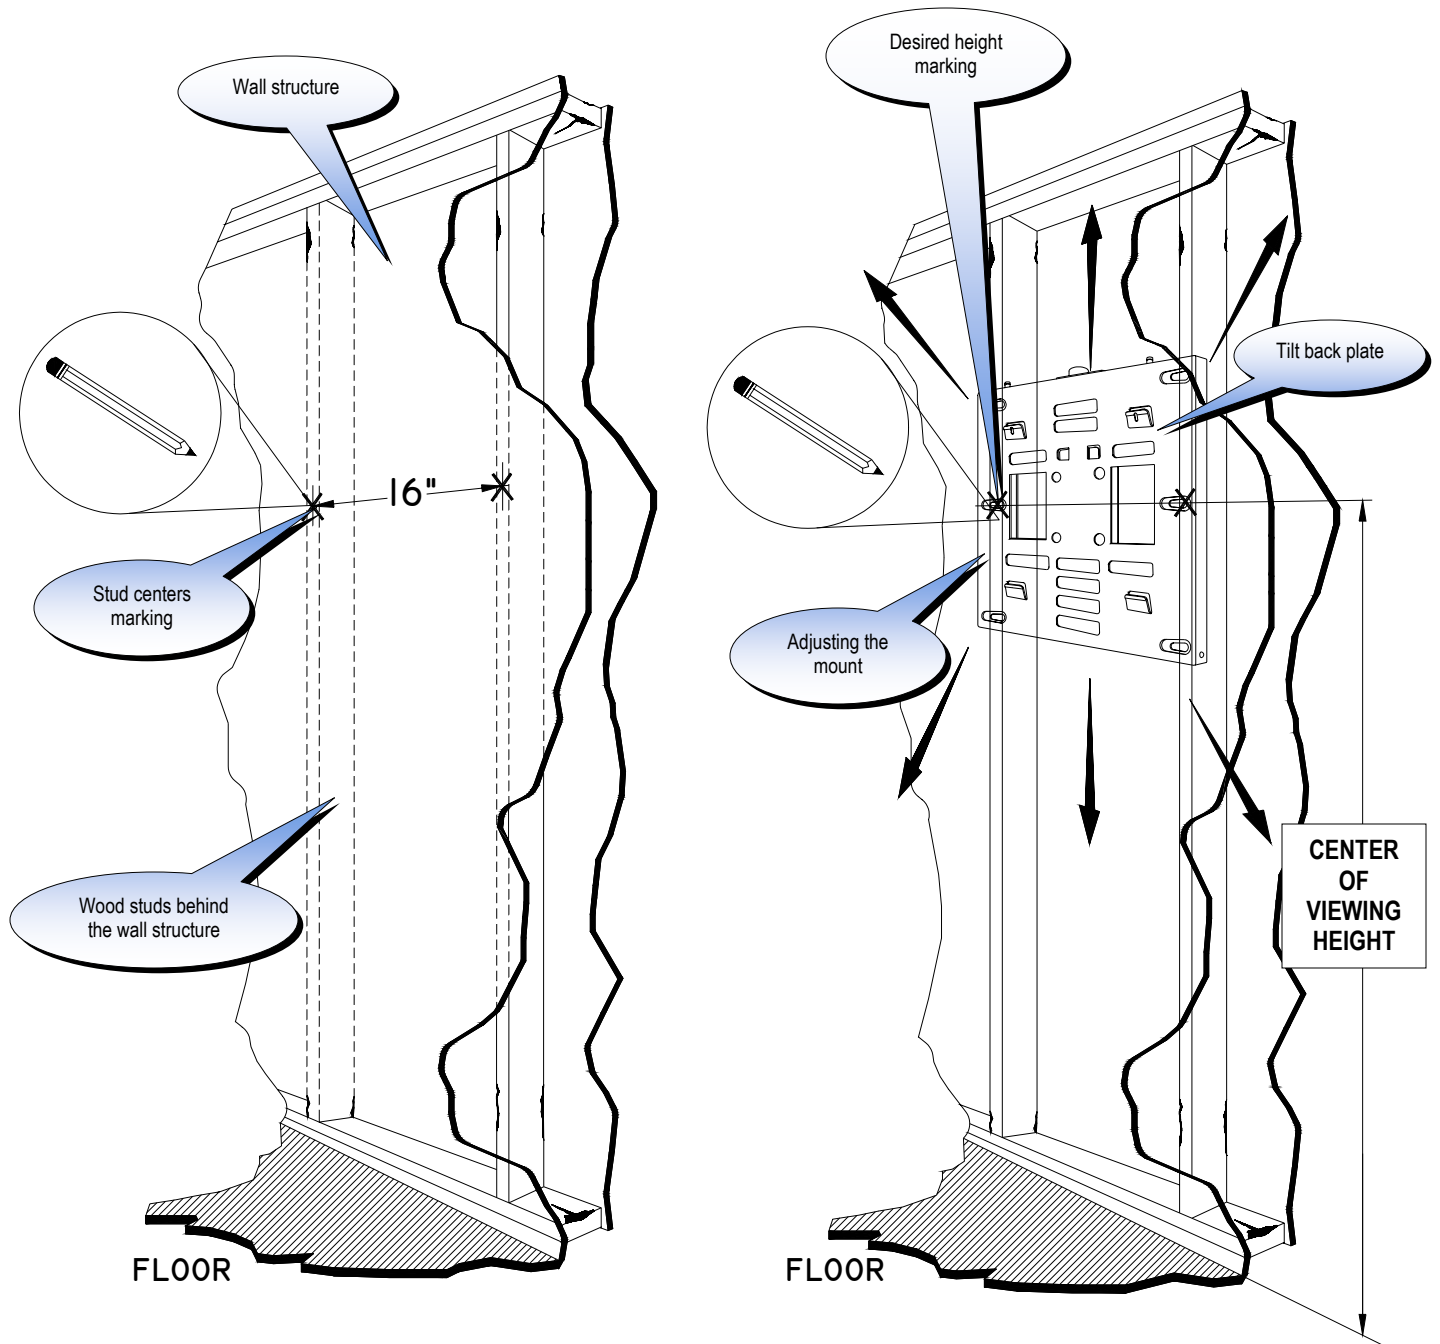

To determine the desired viewing height, use the center slot opening in the wall mount as a center reference for the plasma television when mounted. Once the height is determined, use the bubble level to insure that the bracket is level. Next, using a pencil, mark the six (6) lag bolt slot openings on the mounting bracket. Before continuing, confirm the marks are located on the center of the studs.

Drill 1/4" pilot holes on the six (6) markings on the wall. Raise the tilt back plate and have someone hold it in place (**arrow side away from the wall and pointing up**). Put the lag bolt through the flat washers. Screw the lag bolt through the upper left slot opening into the 1/4" pilot hole. Confirm that the wall mount is still leveled and then screw a lag bolt to the upper right side slot opening into the 1/4" pilot hole. Then install the remaining four lag bolts tightly into the wall studs in the lower left and right slot openings on the wall mount. Make any lateral positioning if any then secure the lag bolts. See fig 4.

Fig 4

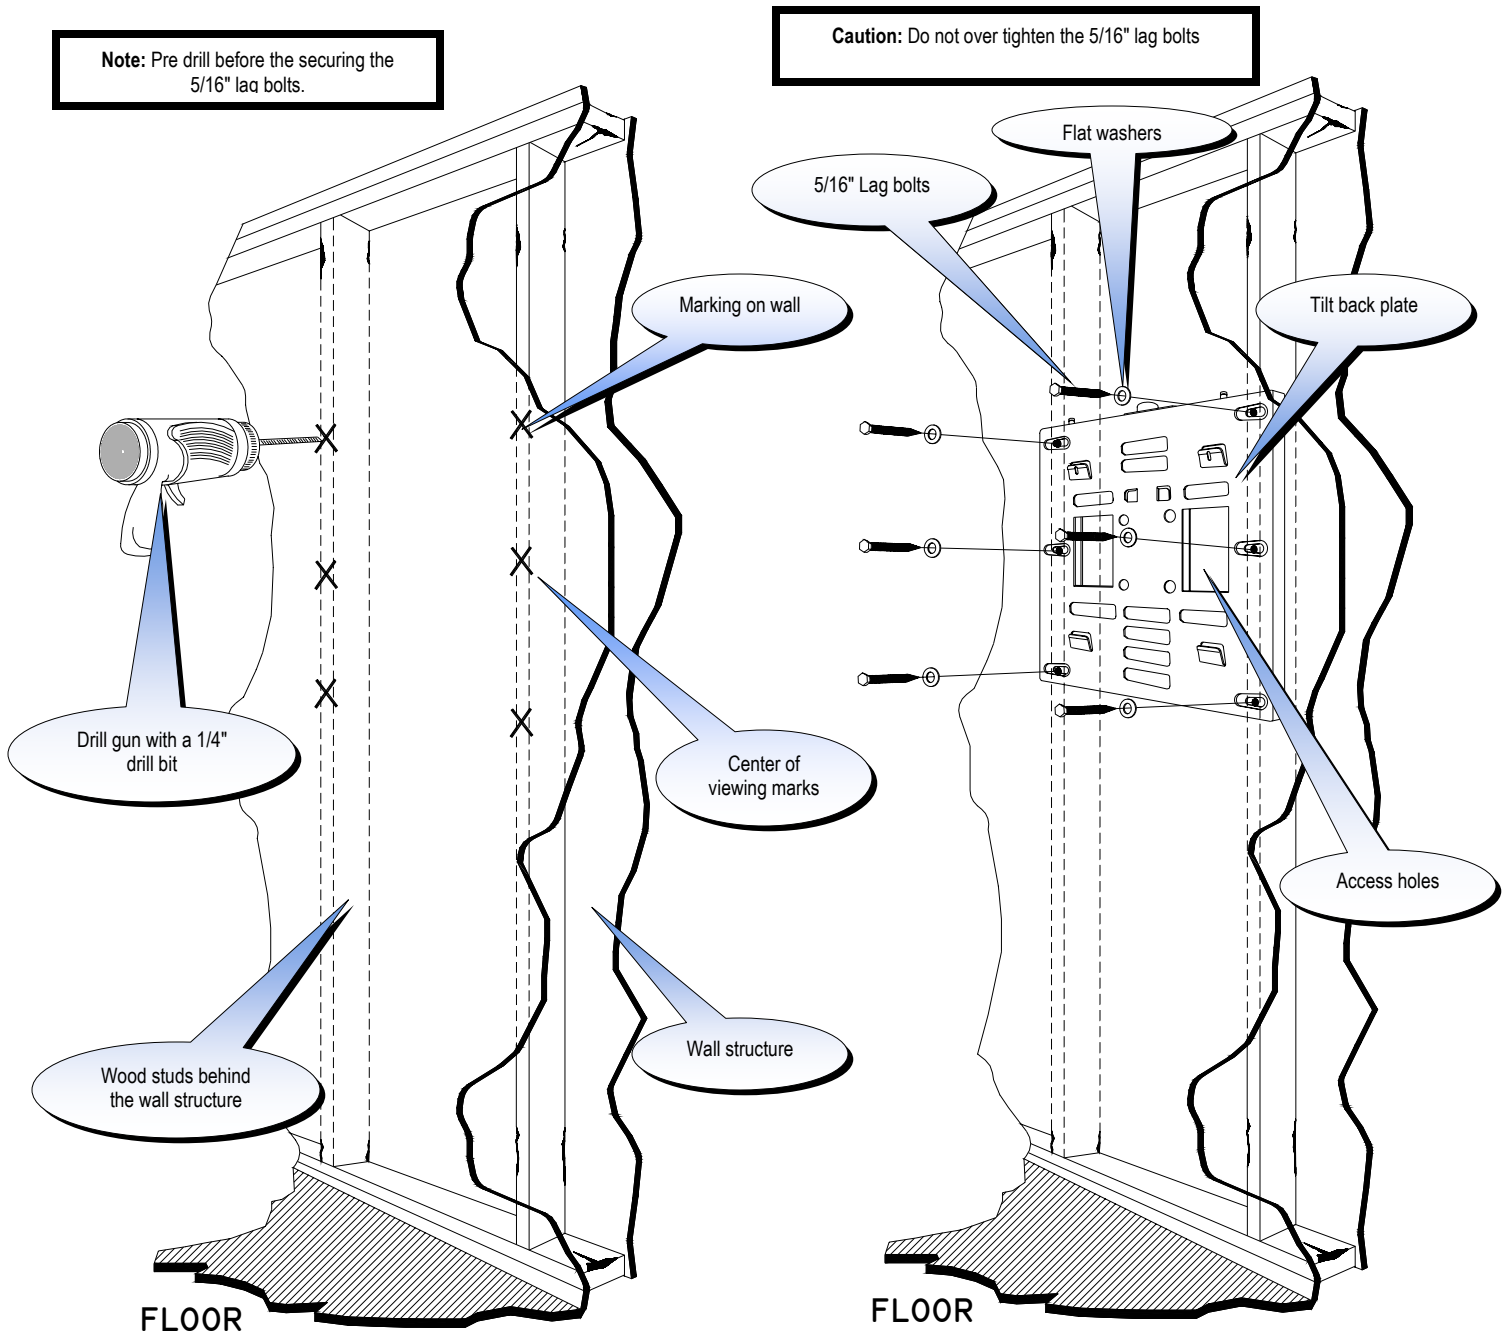

Electrical

Step 4


All electrical wiring components should be installed at this time to ensure that the plasma display has enough power sources.

Securing the mount

Step 5
Warning: The plasma display is heavy and 2 people are needed to lift and install it. Failure to do so could result in serious personal injury.
Before placing the plasma on the wall recheck all hardware for proper tightness and security. Before installing, become familiar with the way the plasma mount attaches to the wall mount. Align the four (4) tab openings to the four (4) receiving tabs on the tilt back plate. When all four (4) the tabs are aligned slide the plasma down, right and down again to lock the mounts together. Make sure all (4) tab openings are interlocked with the receiving tabs before letting go of the plasma. See fig 5.


Fig 5

Caution: The plasma display is heavy and 2 people are needed to lift and install it. Failure to do so could result in serious personal injury.

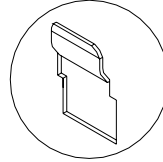

Locked tab

Caution: All four (4) receiving tab openings from the mounting bracket must be locked to the tabs found on the tilt back plate before letting go of the plasma display. See the diagram on the left to see the interlocked tab.

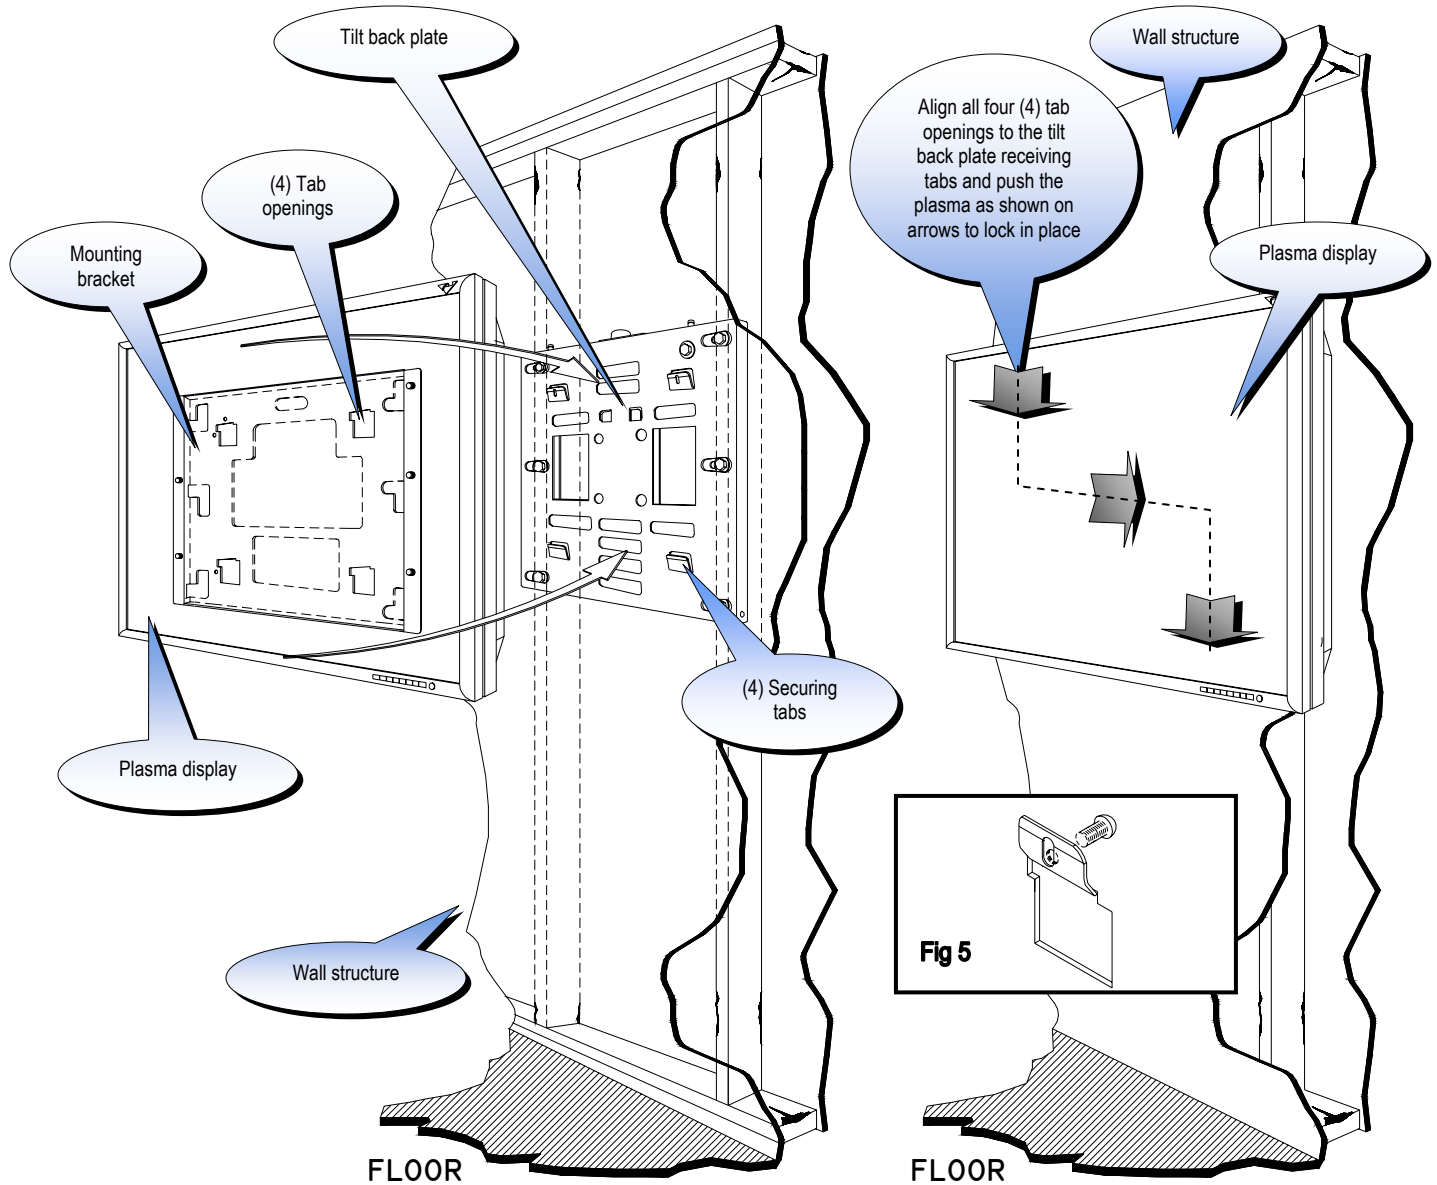

Additional security

Step 6
For additional security gradually tilt the bracket forward using a Phillips screwdriver. Secure the two (2) M6 x 12 (mm) Phillips screws (screws) see fig 6. Do not over tighten the screws. Position the bracket to the desired angle. See fig 6.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>