

**–Save–
Important Safety Instructions**

Read Rules for Safe Operation and Instructions Carefully

Working in vicinity of a lead-acid battery is dangerous. Batteries generate explosive gases during normal battery operation. For this reason, it is of utmost importance that each time before using your charger, you read this manual and follow the instructions exactly.

WARNING: Handling the cord on this product or cords associated with accessories sold with this product, will expose you to lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. **Wash hands after handling.**

A. GENERAL BATTERY SAFETY

1. Before you use your battery charger, be sure to read all instructions and cautions printed on:
 - Battery Charger
 - Battery
 - Vehicle or unit using battery
2. Use battery charger on LEAD ACID type rechargeable batteries only, such as used in autos, trucks, tractors, airplanes, vans, RV's, trolling, motors, etc. Charger is not intended to supply power to low-voltage electrical system other than in an automotive application.

WARNING: Do not use battery charger for charging dry-cell batteries that are commonly used with home appliances. These batteries may burst and cause injury to persons and damage to property.
3. Use only attachments recommended or sold by manufacturer. Use of non-recommended attachments may result in fire, electric shock, or injury.
4. When disconnecting the battery charger, pull by the plug, not by the cord. Pulling on the cord may cause damage to cord or plug.
5. Locate battery power cord so it cannot be stepped on, tripped over, or subjected to damage or stress.
6. Do not operate charger with damaged cord or plug. Have cord replaced immediately.
7. Do not operate charger if it has received a sharp blow, been dropped, or otherwise damaged in any way. Take it to a qualified professional for inspection and repair.
8. Do not disassemble charger. Take it to a qualified professional when service or repair is required. Incorrect reassembly may result in electric shock or fire.
9. To reduce risk of electric shock, unplug charger from outlet before attempting any maintenance or cleaning.
10. Do not use an extension cord unless absolutely necessary. Use of an improper extension cord could result in fire or electric shock. If an extension cord must be used, make sure that:
 - Pins on plug of extension cord are the same number, size, and shape as those of plug on charger.
 - Extension cord is properly wired and in good electrical condition.
 - Wire size is large enough for AC ampere rating of charger, as specified below:

Length of cord (feet):	25	50	100	150
AWG size of cord:	16	14	10	8
11. Always charge battery in a well ventilated area. **NEVER** operate in a closed-in or restricted area without adequate ventilation.

WARNING: Risk of explosive gas.
12. Locate charger as far away from battery as DC charger cables permit.
13. Do not expose charger to rain or snow.
14. **NEVER** charge a frozen battery. If battery fluid (electrolyte) is frozen, bring into a warm area to thaw before charging.
15. **NEVER** allow battery acid to drip on charger when reading specific gravity or filling battery.
16. **NEVER** set a battery on top of charger.
17. **NEVER** place charger directly above battery being charged. Gases from battery will corrode and damage charger.
18. **NEVER** touch the battery clips together when the charger is energized.

SCHUMACHER ELECTRIC CORPORATION

801 BUSINESS CENTER DRIVE • MOUNT PROSPECT, ILLINOIS 60056-2179
Send Warranty Product Repairs to: 1025 E. Thompson, Hoopston, IL 60942-0280
Call Customer Service if you have questions: 1-800-621-5485

B. PERSONAL PRECAUTIONS AND SAFETY

1. **WARNING:** Wear complete eye protection and clothing protection, when working with lead-acid batteries.
2. Make sure someone is within range of your voice or close enough to come to your aid when you work with or near a lead-acid battery.
3. Have plenty of fresh water and soap nearby for use if battery acid contacts skin, clothing, or eyes. If battery acid contacts skin or clothing, wash immediately with soap and water.
4. Avoid touching your eyes while working with a battery. Acid particles (corrosion) may get into your eyes! If acid enters your eye, immediately flood eye with running cold water for at least 10 minutes. Get medical attention immediately.
5. Remove all personal metal items such as rings, bracelets, necklaces, and watches when working with a lead-acid battery. A lead-acid battery can produce a short-circuit current high enough to weld a ring (or the like) to metal, causing a severe burn.
6. Take care not to drop a metal tool or other metal onto the battery. Metal may cause sparking or short circuit the battery or another electrical device. Sparking may cause an explosion.
7. Always operate battery charger in an open well ventilated area.
8. **NEVER** smoke or allow a spark or flame in the vicinity of the battery or engine. Batteries generate explosive gases!

C. GROUND AND AC POWER CORD CONNECTIONS

Charger should be grounded to reduce the risk of electric shock.

Charger is equipped with an electric cord having an equipment grounding conductor and a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances. This battery charger is designed for use on a nominal 120 volt circuit and has a grounded plug that looks like the plug illustrated in FIGURE 1 (A). This plug should be used in a grounded outlet. The plug pins must fit the receptacle (outlet).

ADAPTER: A temporary adapter, as shown in FIGURE 1 (B) and (C), may be used to connect the charger plug to a two pole receptacle (outlet), as shown in FIGURE 1 (B).

NOTE: The temporary adapter should be used only until a properly grounded outlet can be installed by a qualified electrician.

DANGER: Never alter the AC cord or plug provided. If it will not fit outlet, have a proper outlet installed by a qualified electrician. Improper connection can result in a risk of an electrical shock. **DANGER:** Before using an adapter, as illustrated, be certain that the center screw of the outlet plate is grounded. The green-colored rigid ear or lug extending from the adapter must be connected to a properly grounded outlet. Make certain it is grounded. If necessary, replace original outlet cover plate screw with a longer screw that will secure adapter ear or lug to outlet cover plate and make ground connection to grounded outlet.

USE OF ADAPTER PLUG NOT ALLOWED IN CANADA

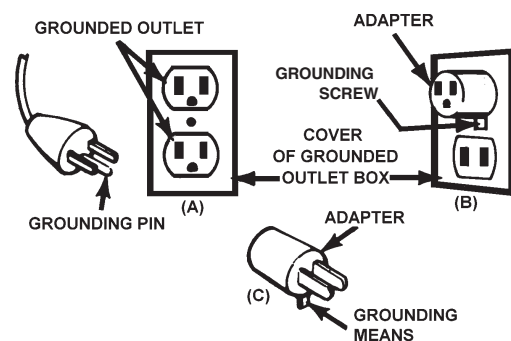


FIGURE 1 GROUNDING METHODS

D. PREPARING TO CHARGE

1. Make sure you have a 6 volt or a 12 volt lead-acid battery. Check your car owner manual to make sure.
2. Clean battery terminals. Take care to keep corrosion from coming in contact with your eyes.
3. If required, add distilled water in each cell until battery acid reaches levels specified by battery manufacturer. This helps purge excessive gas from cells. Do not overfill. For a battery without cell caps, carefully follow manufacturer's recharging instructions.
4. Study all battery manufacturer's specific precautions, such as removing or not removing cell caps while charging, and recommended rates of charge.
5. Be sure area around battery is well ventilated while battery is being charged. Gas can be forcefully blown away by using a piece of cardboard or other non-metallic material as a fan.
6. If necessary to remove battery from vehicle to charge, always remove grounded terminal from battery first. Make sure all accessories in the vehicle are off, so as not to cause an arc.
7. A marine (boat) battery must be removed and charged on shore. To charge it on board requires equipment specially designed for marine use.

E. CHARGER LOCATION PRECAUTIONS

Never place charger directly above the battery being charged, gases from battery could damage the charger.

Never allow battery acid to drip on the charger when reading specific gravity of filling battery.

Never operate charger in a closed in area, or restrict ventilation in any way.

Do not set battery on top of the charger.

F. OPERATING INSTRUCTIONS: CHARGING BATTERY IN VEHICLE

When charging battery in the vehicle, take care to determine the battery type and which post is grounded. To reduce risk of a spark near battery, follow these steps when battery is installed in vehicle. **WARNING: A spark near battery may cause battery explosion.**

1. Position AC power cord and DC charging cords to reduce risk of damage by hood, door, or moving engine parts.
2. Stay clear of fan blades, belts, pulleys, and other parts that can cause injury.
3. Check polarity of battery posts. Battery case will be marked by each post: **POSITIVE (POS, P, +) and NEGATIVE (NEG, N, -)**. **NOTE:** The positive battery post usually has a larger diameter than the negative post.
4. Determine which post of battery is ground (connected) to chassis.

NOTE: The negative post is normally grounded.

NEGATIVE GROUNDED POST

- 5A. For negative-grounded vehicle, connect POSITIVE (RED) clip from battery charger to POSITIVE (POS, P, +) ungrounded post of battery. Connect NEGATIVE (BLACK) clip to vehicle chassis or engine block away from battery. Connect to a heavy gauge metal part of the frame or engine block.

POSITIVE GROUNDED POST

- 5B. For positive-grounded vehicle, connect NEGATIVE (BLACK) clip from battery charger to NEGATIVE (NEG, N, -) ungrounded post of battery. Connect POSITIVE (RED) clip to vehicle chassis or engine block away from battery. Connect to a heavy gauge metal part of the frame or engine block.

WARNING: Do not connect clip to carburetor, fuel lines, or sheet-metal body parts. **NOTE:** Attach clips to battery post and twist or rock back and forth several times to make a good connection. This tends to keep clips from slipping off terminals and helps to reduce risk of sparking.

6. Select amperage:
7. Follow steps 1-4 in Battery Charger Section K.
8. When battery is fully charged, unplug charger from AC power source.
9. Remove charger clips from (1) chassis and (2) battery pole, in that order.
10. Clean and store battery charger.


G. OPERATING INSTRUCTIONS: CHARGING BATTERY OUT OF VEHICLE

When charging battery out of vehicle, take care to determine the battery type. To reduce risk of a spark near battery, follow these steps when battery is outside vehicle. **WARNING:** A spark near the battery may cause battery explosion. **WARNING:** When removing battery from vehicle or boat, disconnect grounded pole first. When disconnecting, make sure all accessories are off, so as not to cause an arc. (**NOTE:** A marine (boat) battery must be removed and charged on shore. (To charge on board requires special equipment designed for marine use.) **WARNING:** When reinstalling battery, attach the ground post first.

1. Check polarity of battery posts. Battery case will be marked by each post: POSITIVE (POS, P, +) and NEGATIVE (NEG, N, -). **NOTE:** The positive battery post usually has a larger diameter than the negative post.
2. Attach a 24-inch long (or longer) 6-gauge (AWG) insulated battery cable to NEGATIVE (NEG, N, -) battery post. (The 24" lead is not supplied. You may purchase at most automotive stores.)
The 24" lead provides a safer connection condition. Sparking or arcing could occur when connecting the charger clip to the lead.
3. Connect POSITIVE (RED) charger clip to POSITIVE (POS, P, +) post battery. Rock clip back and forth to make good connection.
4. Position yourself and free end of 24 inch cable as far away from battery as possible. Then connect NEGATIVE (BLACK) charger clip to free end of cable.

WARNING: Do not face battery when making final connection. Rock clip back and forth to make a good connection.

5. Select amperage:
6. Follow steps 1-4 in Battery Charger Section.
7. When battery is fully charged, unplug charger from AC power source.
8. When battery is fully charged and charger is unplugged,
(1) Remove clip from end of Negative end of cable, then
(2) Remove clip from Positive battery post, in that order.
9. Clean and store battery charger.

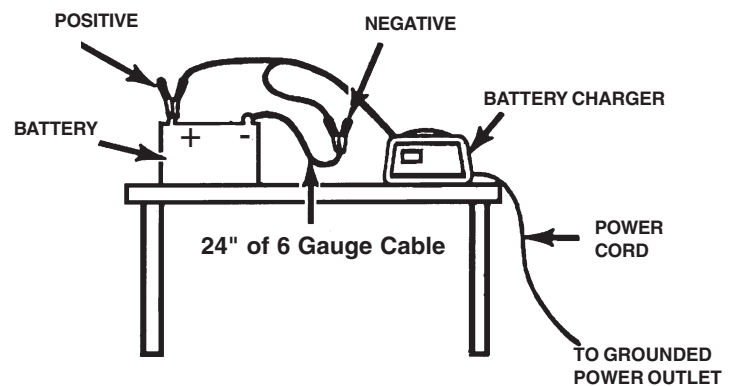

WARNING: Be sure area around battery is well ventilated while battery is being charged. Gas can be forcefully blown away by using a piece of cardboard or other non-metallic material as a fan.

H.

OUTPUT SELECTOR CONTROLS

Your charger is provided with a five position rotary charge rate selector switch.

Select the switch position that meets your charging needs. See description below.

Switch Position	Used for
Off	Power to battery charger transformer and battery is off.
6 Volt 30 amp charge	Delivers a 30 amp charge to a 6 volt battery.
12 Volt 10 amp charge	Delivers a 10 amp charge to a 12 volt battery.
12 Volt 30 amp charge	Delivers a 30 amp charge to a 12 volt battery.
12 Volt Engine Start	Delivers 200 amps to a 12 volt system when the Engine is cranked.

MAKE SURE THE BATTERY VOLTAGE MATCHES THAT OF THE CHARGE RATE SELECTED.

Your charger is also equipped with a *Dual self reset Circuit Breaker System*.

The first breaker is designed to interrupt a high flow of current normally developed while cranking the engine. This is the same breaker that will open when the output leads are accidentally shorted together or connected to a battery in reverse. The second breaker will open if prolonged cranking persists or for any other condition in which the output current is much greater than the 30 amp continuous rating.

THE AMMETER

The ammeter indicates the amp draw on the charger when a fully discharged battery is connected to the charger. The meter will read the maximum output rating of the charger, either 10 amps, or 30 amps depending on the amp switch selection. The charge on the 10 amp or 30 amp will gradually taper down as the battery nears full charge. As the charge current tapers, the ammeter needle will also move down. Many battery conditions can also cause the meter to appear to indicate a fully charged battery when in fact the charging has just started.

1. Cold Batteries- Start charging at a low rate of charge and as the battery warms up while charging, the charging rate will increase. After this happens, the battery will charge up and the meter will decrease normally.
2. Shorted Batteries- (battery has shorted circuit in one or more cells) The meter will usually "peg" at the high amp end of the scale. If after 5-10 minutes of charging and the needle has not started to move down scale, stop charging and have the battery checked. One way to check the battery, would be to measure the voltage at the battery terminals. If the voltage is below 12 volts on a 12 volt battery, (under 6 on a 6 volt battery), plug the charger back in and resume charging for about 15 more minutes. If the meter has failed to move towards a lower scale reading, the battery needs to be serviced or replaced.
3. Lead-Calcium batteries- When this type battery is deeply discharged, it may require an activation period before it will accept a measurable charge. (This may take as much as 6 hours before normal charging begins). You should suspect this condition if the meter indicates at or near zero, but you have determined the battery is very deeply discharged. Simply continue to charge the battery until the battery becomes activated(keep an eye on the charge every 20 minutes or so) you will see the meter indicating a higher rate of charge. This will be when the recharge of the battery commences. The battery is charged when the meter indicates about 1/2 of the selected charge rate. (about 4-5 amps on the 10 amp setting, and about 10-15 amps on the 30 amp setting).

I. ENGINE START

1. With the charger unplugged from the AC outlet, connect the charger to the battery following instructions given in section F.
2. Plug the charger AC power cord into the AC outlet, then set selector switch to the 12 volt Engine Start position.
3. Crank the engine by turning the ignition key of the vehicle. Follow the duty cycle printed on the front panel of your charger for proper ON / OFF times. During extremely cold weather or when the battery is severely exhausted, charge the battery for about 5 minutes before cranking the engine.
4. If the engine fails to start, charge the battery for 5 more minutes before attempting to crank the engine again.
5. After the engine starts, move the charge rate switch to the off position and then unplug the AC power cord from the outlet before disconnecting the output clips from the battery.

Do not try to engine start a vehicle without a battery in it. You may damage the vehicle's system. If the engine spins, but doesn't start after several starting attempts, there is a problem with the engine of the vehicle other than its starting system. STOP cranking the engine until the other problem has been found and corrected.

J. CHARGE PERIOD

Determine the charge level of your battery with a hydrometer or electronic percent of charge tester. Determine the ampere hour rating of your battery. It may be on the battery information label. If the battery is rated in Reserve Capacity, convert to ampere hour rating using the following formula:

Ampere Hour rating = $\frac{\text{Reserve Capacity}}{(2)} + 16$ **Example: AH rating = $\frac{(168 \text{ Reserve Capacity})}{(2)} + 16$** or AH = 100

Reserve Capacity is in minutes.

Use the following formula to determine the time of charge required:
(AH x % of charge needed) divided by amp setting of the charger, times 1.25 = hours of charge:

Example: **State of charge of the battery is 50%**
Percent of charge needed is 100% - 50% = 50% (.50 decimal)
Ampere rating of the battery is 100AH
Charger setting is 10 amps

$$\frac{100 \times .50}{10} = \frac{5}{1} \times 1.25 = 6.25 \text{ hours of charge needed}$$

hour more if charging a deep cycle battery
hours total for a deep cycle battery.

A hydrometer reading of the specific gravity of the electrolyte (fluid) of the battery in good condition should be between 1.25 and 1.28. When a battery reaches 80-85% of full charge, bubbles will appear on the surface of the fluid. As the battery nears full charge, bubbling will become more vigorous.

K. BATTERY CHARGING

1. Before charging any battery, make sure the electrolyte (battery liquid) in each cell is at correct level.
2. Set switch to the OFF position.
3. If the battery is being charged inside the vehicle, use connection procedures outlined in Section F. Should the battery be removed from the vehicle, follow the instruction in Section G. Now plug the charger into the AC outlet.
4. Set the charge rate switch to the desired charge position. See charge rate chart.

NOTE: These battery chargers are MANUAL type chargers and MUST have the charging monitored regularly. The battery can overcharge if the charging is not stopped when the battery is charged.

BATTERY SIZE/RATING		CHARGE RATE*/CHARGING TIME - HOURS**					
		2 AMP	10 AMP	30 AMP	40 AMP	60 AMP	
SMALL BATTERIES	Motorcycle, Garden	6 - 12 AH	3-6	NR	NR	NR	NR
	Tractor, etc.	12 - 32 AH	3 - 18				
CAR/TRUCKS	200 - 315 CCA	40 - 60 RC	13 - 20	2 ½ - 4	½ - 1	½ - ¾	NR
	315 - 550 CCA	60 - 85 RC	20 - 35	4 - 7	1 - 2	¾ - 2	½ - 1
	550 - 875 CCA	85 - 125 RC	35 - 55	7 - 11	2 - 7	2 - 3	1 - 2
MARINE/ DEEP CYCLE		55 MC	34	7	NR	NR	NR
		80 MC	50	10	NR	NR	NR
		105 MC	66	13	NR	NR	NR

* Charge Rates for this model are listed on the front panel.
 ** Based on battery at 50% charge.

AH Ampere Hours
 NR Not Recommended
 CCA Cold Cranking Amps
 RC Reserve Capacity
 MC Marine Capacity

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

A. INSTRUCCIONES IMPORTANTES DE SEGURIDAD:

1. **GUARDAR ESTAS INSTRUCCIONES** - Este manual contiene instrucciones importantes para la operación y seguridad del cargador de batería, modelo numero 200-30 & 3010 que debe de ser usado solamente con una batería automotriz de 6 o 12 voltios.

UN CARGADOR DE BATERIA RECIBE POTENCIA (CORRIENTE ALTERNA) AC QUE TOMA CORRIENTE ELÉCTRICA Y ENTREGA ESA CORRIENTE EN FORMA DE CORRIENTE DIRECTA DC QUE CONTINUA A LA BATERIA DEL CARRO.

2. Antes de usar su cargador de baterías lea todas las instrucciones y avisos de precaución (1) en el cargador, (2) en la batería, y (3) en el producto usando la batería.
3. **PRECAUCION:** Para reducir los riesgos de daños, cargue solamente la batería del tipo de plomo ácido y recargable. Otros tipos de baterías pueden explotar y causarles daños físicos.
4. El uso de una pieza que no sea recomendada ni vendida por el fabricante produce riesgo de fuego, toque eléctrico o daños físicos a la persona que la use.
 5. Para reducir el riesgo de daños al enchufe y cordón eléctrico, jale el enchufe en lugar del cordón cuando desconecte el cargador.
 6. Tengan cuidado en donde guarde el cordón, no permita que ninguna persona camine, jale o que dañe el cordón eléctrico.
 7. No use cable de extensión sin ser absolutamente necesario. El uso de una extensión inapropiada puede resultar en riesgo de fuego u toque eléctrico. Si tiene que utilizar alguna extensión, asegúrese de lo siguiente:
 - (a) Que los ganchos del enchufe sean del mismo tamaño, número y figura de los del cargador.
 - (b) La extensión del cable este en buenas condiciones y las especificaciones sean las siguientes:

TAMANO DEL CORDON DEL PIES	25	50	100	150
CALIBRE EN TAMANO DEL CABLE	16	14	10	8

8. Nunca opere el cargador con cable dañado, cambíelo de inmediato.
9. No use el cargador si ocurre lo siguiente: esta dañado, fué tirado al suelo, o si ha recibido un fuerte golpe. En todos estos casos, lleve el cargador a un mecánico profesional.
10. No desarme el cargador, lleve a un profesional para cualquier reparación. Si se instala mal, puede causar un fuego u toque eléctrico.
11. Para reducir los riesgos de toques eléctricos, desconecte el cargador del enchufe antes de limpiarlo. Simplemente apagando los controles no anula este riesgo.

B. ADVERTENCIA - RIESGOS CON GASES EXPLOSIVOS

1. Trabajar en su vecindario con una batería de plomo ácido es muy peligroso. Estas baterías generan gases explosivos durante su trabajo normal. Por esta razón es muy importante que antes de usar el cargador, lean el manual y sigan las instrucciones exactas.

2. Para reducir los riesgos de explosión siga estas instrucciones y las instrucciones que fabricante de baterías y cualquier otro equipo que vayan usar. Repasen los mensajes de prevención en estos equipos.

C. PRECAUCIONES PERSONALES

1. Debe estar alguien cerca o al alcance suyo cuando trabaje en una de estas baterías (de plomo ácido).
2. Tenga agua fresca con jabón cerca por si acaso le cae el ácido en la piel, en la ropa, o en los ojos.
3. Use el protector completo para protegerse los ojos y la ropa. Evite tocarse los ojos cuando esté trabajando cerca de las baterías (de plomo ácido).
4. Si cayese ácido en la piel o en la ropa, lávelo inmediatamente con jabón y agua. Si el ácido le cae en los ojos, enjuáguese inmediatamente con agua fría por unos 10 minutos o más, luego llame al Doctor o busque asistencia médica.
5. Nunca fume, ni encienda una llama cerca de la batería o del motor de su carro.
6. Tenga cuidado de no dejar caer herramienta de metálica encima de la batería, este puede causar un corto circuito y explotar la batería.
7. Quítese todos los metales personales, tales como anillos, brazaletes, collares, relojes, mientras este trabajando con una batería. Una batería de plomo ácido puede producir un corto circuito tan alto como para soldar un anillo de metal y causarle una quemadura muy grave.
8. Use el cargador para cargar una batería de plomo ácido, no sirve para ningún otro tipo de equipo de voltaje pequeño, sólo para el automóvil. No use el cargador para baterías caseras porque explotan.
9. Nunca cargue una batería que esté congelada.
10. **ADVERTENCIA** - El manejo del cordón en este producto, o de los cordones asociados con los accesorios vendidos con este producto, le expone a usted al plomo, un producto químico conocido en el Estado de California de causar cáncer y defectos de nacimiento u otros daños reproductivos. **Lávese las manos después de manejar estos cordones.**

D. PREPARATIVOS PARA CARGAR

1. Si tiene que quitar la batería del carro para darle carga; (1) siempre quite el terminal que hace tierra, (2) asegúrese que todos los accesorios del carro estén apagados.
2. Asegúrese que el área donde esté cargando la batería, esté bien ventilada mientras que está dando carga. El gas se puede eliminar con un cartón y usándolo como abanico.
3. Limpie los terminales de la batería, cuidando que no le caiga ninguna sustancia corrosiva en los ojos.
4. Añadan agua destilada a las células de la batería hasta el nivel que el fabricante especifica. Esto le ayuda a botar el gas excesivo de las células. No la sobre llene. Para baterías sin tapa siga las instrucciones de dar carga cuidadosamente.
5. Estudie todas las precauciones que el fabricante les especifica mientras que carga la batería. También la proporción de carga que debe darle.

E. POSICION DEL CARGADOR

1. Coloque el cargador lejos de la batería. Lo más lejos que permita el cable.
2. Nunca sitúe el cargador directamente encima de la batería, cuando la cargue. Los gases de la batería dañarán el cargador.
3. Nunca permita que el ácido de la batería, gotee sobre el cargador cuando llene la batería y pueda caer por gravedad sobre la misma.
4. No opere el cargador en un área cerrada restringida de ventilación.
5. No coloque la batería sobre el cargador.
6. No deje que le caiga lluvia ni nieve al cargador.

F. PRECAUCIONES PARA CONECCION DE CORRIENTE DIRECTA (DC)

1. Conecte y desconecte los clips de salida de corriente DC del acumulador, únicamente después de haber apagado los interruptores y haber removido el cordón de corriente AC del toma-corriente, nunca permita que se toquen los dos terminales.
2. Una los terminales a los postes de la batería y enrósquelos varias veces para tener una buena conexión. Esto previene que se salgan los terminales de los clips de la batería y reduce los riesgos de chispa.

G. SIGA LOS PASOS CUANDO INSTALE LA BATERIA EN EL CARRO. UNA CHISPA CERCA DE LA BATERIA PUEDE CAUSAR UNA EXPLOSION. PARA REDUCIR LOS RIESGOS DE LA CHISPA CERCA DE LA BATERIA HAGA LO SIGUIENTE:

1. Sitúe los cordones de corriente AC y DC. Para reducir riesgo de danó por gancho puerta o movimiento por parte del motor.
2. Manténgase lejos de las paletas de un ventilador, correas u otras piezas que puedan causarle daño a las personas.
3. Chequee la polaridad de los postes de la batería, ya que toda batería tiene dos postes, uno positivo y el otro negativo señalado como signo + o signo - . Casi siempre tienen un diámetro más grande los positivos que los negativos.
4. Determine cuál de los postes es el que hace tierra y que van conectados al chasis del carro. Si el poste negativo hace tierra con el chasis (Como en casi todos los automóviles, siga las instrucciones del No. 5). Si el poste positivo (+) hace tierra con el chasis, siga las instrucciones del No. 6.
5. Para vehículos con tierra negativa (-), conecte la tenaza (+) positiva roja al poste positivo (+) sin tierra de la batería. Conecte la clip del cable negativo negro al chasis del carro o motor lejos de la batería. No conecte las alicates al carburador, líneas de gasolina u hojas de metal del cuerpo del carro. Conecte un metal fuerte del marco del bloque del motor.
6. Para vehículos que tienen tierra positivo (+), conecte los alicates (-) negativo negro del cargador al poste negativo de la batería. Conecte los alicates positivo (+) rojo al chasis del vehículo o al bloque del motor lejos de la batería. No conecte este alicate del cargador al carburador, líneas de gasolina u hojas de metal del carro. Conecte solamente al marco de metal grueso del bloque del motor.

7. Cuando vaya a desconectar el cargador ponga los interruptores en la posición OFF desconecte el cordón de la corriente AC del toma-corriente y después quite los alicates del chasis y de la batería en este mismo orden.
8. Observe las instrucciones de trabajo para información sobre el tiempo de carga.

H. SIGA ESTOS PASOS CUANDO LA BATERIA ESTE FUERA DEL VEHICULO. CUANDO LA BATERIA ESTA SITUADA FUERA DEL VEHICULO:

1. Compruebe la polaridad de los postes de la batería. El poste positivo generalmente tiene un diámetro más grande que el poste negativo. Si no son identificados como (+) (-).
2. Adjunte un cable de batería aislado por lo menos de 24" de largo y de calibre 6 al poste negativo.
3. Conecte el alicate del cargador positivo rojo al poste positivo de la batería.
4. Sitúese usted y la parte libre del cable lo más lejos posible de la batería, entonces conecte el poste del cargador negativo negro al extremo libre del cable.
5. No se acerque a la batería cuando haga la conexión final.
6. Cuando desconecte el cargador siempre hágalo en secuencia reversa en la forma que lo conectó, yendo desde el paso final hasta el paso inicial, y cuando desconecte la primera conexión hágalo lo más lejos posible de la batería.
7. Una batería marina tiene que quitarse y cargarse en la tierra. Para cargarla en el barco lleva un equipo especial para uso marítimo.

I. INSTRUCCIONES DE OPERACION CORTA-CIRCUITOS AUTOMATICOS

Este cargador de batería está equipado con un sistema dual de rompe-circuito que se rehace automáticamente. El primer rompe-circuito ha sido diseñado para interrumpir una corriente fuerte normalmente producida durante el comienzo de un motor. Este es el mismo rompe-circuito que se abrirá cuando los conductores de salida accidentalmente se ponen en cortocircuito o están conectados a una batería de polaridad al revés.

El segundo rompe-circuito se abrirá si hay un comienzo prolongado de un motor o para cualquier condición en que la corriente de salida está más que el grado continuo de 30 amperes.

J. PASANDO CORRIENTE EMPEZANDO EL MOTOR

1. Conecte el cargador al automovil; siga las instrucciones en la letra G.
2. Situe el interruptor de carga a la posición de OFF.
3. Haga la conexión del cargador con el toma-corriente (AC).
4. En extremas condiciones de frio, o cuando la batería está bastante exhausta, carguela por aproximadamente 2 minutos usando la carga de 30 amperes antes de comenzar el motor.
5. Ponga el interruptor de carga a la posición de empezar el motor y empieza el motor.
6. Si el motor dejar de arrancar, ponga el interruptor de carga a la posición de 10 amperes y carga la batería para 5 minutos antes de tratar de empezar el motor otra vez.

K. CARGANDO LA BATERIA

1. Antes de cargar la batería, asegurese que el liquido en cada

celda está al nivel apropiado. Antes de cargar baterías sin tapaderas en las celdas, siga cuidadosamente las instrucciones para carar del fabricante.

2. Ponga el interruptor de carga a la posición de 10 amperes o 30 amperes, depende de los requisitos del operador.
3. Si la batería esta cargandose dentro del vehiculo, use el sistema de conexion ilustrado en las secciones G. Si la batería es sacada del vehiculo, siga las instrucciones en las secciones H.
4. Enchufe el cordon electrico en el toma-corriente (AC).
5. Ponga el interruptor de corriente en la posicion de carga a 10 • 30 amperes (CHARGE).

PRECAUCION - Este cargador de baterías no es automatico y puedo sobre cargar estas mismas si se le permite operar descuidadamente por largos periodos.

L. TIEMPO DE CARGA:

El tiempo que requiere bateria para cargarse depende de la cantidad de horas-amperes que hayan sido desplazadas de esta misma. Horas-amperes son determinadas multiplicando el numero de horas por el numero de amperes entregado por una batería en cada carga.

Por ejemplo - Si una carga fue conectada en la batería, la cual tomó 7 amperes por un periodo de 5 horas, la batería

habrá entregado 35 horas de amperes. El periodo aproximado de carga debe entonces ser calculado dividiendo las 35 horas de amperes desplazadas de la batería, por el periodo de carga por ampere del cargador. Para comenzar por la disminucion de la carga agregue 25 por ciento del periodo de carga.

Indicaciones de que una batería esta completamente cargada son como sigue:

Cuando el amperimetro indica que la proporcion de carga ha disminuido aproximadamente a la mitad de la entrega del cargador.

El hidrometro indica la gravedad especifica del fluido en la batería en buenas condiciones de entre 1.250 a 1.285.

Cuando la batería alcanza un 80 a un 85% de carga, aparecerán burbujas en la superficie del liquido. Cuando la batería se acerca a una carga completa, las burbujas se habrán de acrecentar en una forma mas abundante.

Desconectando de la batería:

Antes de desconectar de la batería debiera leer las instrucciones contenidas en F, G y H detenidamente.

M. ALMACENAMIENTO:

Guarde el cargador de baterías en un lugar seco.

TROUBLESHOOTING

If a problem does occur, check the following:

PROBLEM	POSIBLE CAUSE	SOLUTION
No Meter Reading (AC Cord Unplugged)	Clips are not making a good connection. Battery voltage is too low.	Rock clips back and forth for a better connection. Plug AC line into outlet. Meter should now indicate.
Charger will not turn on when properly connected.	AC outlet is dead. Poor electrical connection.	Plug in a lamp to check for voltage. Check connections, rock back and forth for a better connection.
Clicking noise from charger.	Circuit breaker is cycling. Battery is defective. Severely discharged battery but otherwise a good battery. Reverse connections at battery.	May be in the wrong switch position. Have Battery checked. Allow charging to continue until battery has a chance to recover sufficiently to take a charge. If more than 20 min. stop charging and have the battery checked. Shut off charger and correct lead connections.

LOCALIZACION DE AVERIAS

Si ocurre algún problema, verificar lo siguiente:

PROBLEMA	CAUSA POSIBLE	SOLUCION
El medidor no indica (cordón CA desenchufado)	La pinzas no están haciendo buen contacto. Voltaje de la batería demasiado bajo.	Mover las pinzas hacia uno y otro lado para lograr mejor contacto. Enchufar el cordón CA al tomacorriente; ahora el medidor debe indicar.
El cargador no se enciende cuando está bien conectado.	El tomacorriente CA no tiene electricidad. Mala conexión eléctrica.	Enchufar una lámpara para verificar si hay voltaje. Revisar las conexiones, mover hacia uno y otro lado para lograr mejor contacto.
El cargador hace ruido ("clic")	El disyuntor de circuito está funcionando. La batería está defectuosa. Batería demasiado descargada, pero buena. Invertir las conexiones en la batería.	Puede estar en la posición errónea del interruptor. Hacer revisar la batería. Dejar cargando hasta que la batería tenga oportunidad de recuperarse lo suficiente para tomar carga. Si se demora más de 20 minutos, parar de cargar y hacer revisar la batería. Apagar el cargador y corregir las conexiones de los conductores.

LIMITED WARRANTY

SCHUMACHER ELECTRIC CORPORATION, 801 BUSINESS CENTER DRIVE, MOUNT PROSPECT, ILLINOIS, 60056-2179 MAKES THIS LIMITED WARRANTY TO THE ORIGINAL PURCHASER AT RETAIL OF THIS PRODUCT. THIS LIMITED WARRANTY IS NOT TRANSFERABLE.

Schumacher Electric Corporation warrants this battery charger for 2 years from date of purchase at retail against defective material or workmanship. If such should occur, the unit will be repaired or replaced at the option of the manufacturer. It is the obligation of the purchaser to forward the unit together with proof of purchase, transportation and / or mailing charges prepaid to the manufacturer or its authorized representative. This limited warranty is void if the product is misused, subjected to careless handling, or repaired by anyone other than the factory or other authorized factory representative. The manufacturer makes no warranty other than this limited warranty and expressly excludes any implied warranty including any warranty for consequential damages.

This is the only express limited warranty and the manufacturer neither assumes nor authorizes anyone to assume or make any other obligation towards the product other than this express limited warranty. The manufacturer makes no warranty of merchantability or fitness for purpose of this product and expressly excludes such from this limited warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages or length of implied warranty so the above limitations or exclusions may not apply to you. "This warranty gives you specific legal rights, and you may have other rights which vary from state to state."

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>