

# LEAKATOR®JR. Combustible Gas Leak Detector

Instruction 19-9336

Rev. 0 - October 2005

## 12 Inch Flexible Probe

#### Audible Alarm

- Instrument Ready Slow beep. The beep rate is about once per second with no gas detected.
- Combustible Gas Indication Beeps at a rate that increases along with the gas concentration.
- Sensitivity Produces an increasing frequency tone when sensitivity changes from low to high, and produces a decreasing frequency tone when sensitivity changes from high to low.
- Dead Batteries High frequency tone, followed by the instrument turning itself OFF.
- **Sensor Error** Rapidly changing high and low frequency tones.

## **Visual Alarm LED**

- Power ON Rapidly flashes green during warmup (approximately 60 seconds).
- Power OFF Glows red just before power OFF.
- Instrument Ready Slowly flashes green. The flash rate is about once per second with no gas detected.
- Combustible Gas Indication Flashes green at a rate that increases with the gas concentration.
- Sensitivity Change Color changes from red to green.
- Low Battery Flashes orange instead of green when checking for gas leaks. Typically 1 hour of operation left after LED changes to orange. Change batteries as soon as convenient.
- Dead Batteries Glows red, followed by the instrument turning itself OFF.
- Sensor Error Flashes alternating green and red.

# Combustibles Sensor & Sensor Cover

#### **One Button Control**

- Press once for half second to turn instrument ON.
- Press and hold for 2 seconds to turn instrument OFF.
- Double press to toggle sensitivity between high and low.
   Download from Www.Somanuals.com. All Manuals Search And Download.





#### **Features**

- Compact Gas Leak Detector The Leakator Jr. detects and pinpoints combustible gas leaks in commercial, residential, and industrial applications, including surveying gas pipelines
- Wide Variety of Combustibles Detected Acetone, Acetylene, Benzene, Butane, Ethanol, Ethylene Oxide, Gasoline, Hexane, Hydrogen, Industrial Solvents, Iso-Butane, Methane, Methanol, Paint Thinners, Propane, Natural Gas, and Naptha.
- Compact and Ergonomic Design Simple one button control allows the user to hold and operate the instrument in one hand. The flexible probe with sensor located at the tip allows leaks to be found in tight spaces.
- Leak Indication The relative concentration of the combustible gas present is indicated by the frequency of the audible and visual alarms.
- Automatic Calibration The instrument automatically calibrates itself during warm up when turned ON in fresh air.
- Selectable Sensitivity High and low sensitivity mode selectable by a double press of the ON/OFF button. Pinpoints concentrations as small as 20 ppm in the high-sensitivity mode.
- Power Four disposable 'AA' alkaline batteries provide a minimum of 14 hours of operation. A low battery indicator warns the user when the batteries need replaced. The instrument will also automatically turn itself OFF after a period of non-use to preserve battery life.
- UL 913 Approved Intrinsically safe for Class I, Division 1, Groups A, B, C, and D.
- Sensor Error Indicator
- Low Power Metal Oxide Sensor
- Microprocessor Controlled Circuitry

SPECIFICATIONS		
Package Contents	Leakator Jr. instrument housed in a four piece molded ABS plastic case including 4 'AA' batteries, cloth case, sensor, and instructions.	
Power	Four 'AA' alkaline batteries, 14 hours typical life for continuous operation	
Warm-Up Time	Automatic, self check, about 60 seconds to operational condition	
Sensor	Low power metal oxide sensor	
Probe	Self storing 12 inch flexible probe	
Sensitivity (Methane Based)	20 ppm in high-sensitivity mode 50 ppm in low-sensitivity mode	
Status Indicators	Visual: Red, Orange and Green LEDs Audible: Variable speed beeping sound	
Environments	32 to 104°F (0 to 40°C)	
Dimensions	6H x 2W x 1.5D inches (152 x 51 x 38 mm)	
Weight	Less than 6 oz (170 g) with battery	
Safety Approvals	UL 913, intrinsically safe for use in Class I, Division 1, Groups A, B, C and D hazardous locations	
Warranty	2 years full warranty on instrument	

# **Testing For a Gas Leak**

- 1. Turn instrument ON and allow it to warm up (approximately 60 seconds).
- The instrument is ready to check for gas leaks after the audible alarm begins to beep. Note that the instrument starts in its high-sensitivity mode.
- Check for the presence of gas by positioning the tip of the flexible probe near the area to be tested.
- 4. An increase in the relative concentration of gas is indicated by the visual alarm's LED blinking faster and the audible alarm's beep rate increasing.
- Once the presence of the gas has been confirmed, the instrument's sensitivity can be lowered by double pressing the ON/OFF button (a decreasing frequency tone should be heard), allowing the location of the leak to be easily pinpointed.

# **Replacement Parts**


Replacement parts can be obtained by contacting one of Bacharach's Sales/Service Centers listed on the back cover of this manual.

item	Part No.
Sensor	19-0575
Sensor Cover	19-0576
Battery Door	19-0577

# Replacing the Sensor

Replace the sensor if a sensor error occurs (Visual Alarm LED flashing green and red), or when the instrument can no longer detect a known source of combustible gas.

- Turn instrument OFF.
- 2. Pull off sensor cover.
- Pull out old sensor and discard.
- Plug in new sensor, being sure to align tab on sensor with notch in sensor socket.
- Install sensor cover.

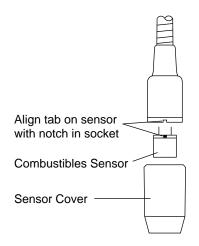

#### Sales/Service Centers

#### **United States**

#### California

7281 Garden Grove Blvd..

Suite H

Garden Grove, CA 92841 Phone: 714-895-0050

Fax: 714-895-7950

Email: calservice@bacharach-inc.com

## **New Jersey**

7300 Industrial Park Rte. 130. Blda. 22

Pennsauken, NJ 08110 Phone: 856-665-6176 Fax: 856-665-6661

Email: njservice@bacharach-inc.com

## **Pennsylvania**

621 Hunt Valley Circle New Kensington, PA 15068

Phone: 724-334-5051 Fax: 724-334-5723

Email: help@bacharach-inc.com

#### Canada

Bacharach of Canada, Inc. 250 Shields Court Unit #3

Markham, Ontario L3R 9W7 Canada

Phone: 905-470-8985 Fax: 905-470-8963

Email: bachcan@idirect.com

#### México

Bacharach de México

Playa Regatas No. 473 Tercer Piso

Col. Militar Marte

Delegación Iztacalco, 08830

México D.F. México

Phones: +52-555-634-7740

+52-555-634-7741 +52-555-634-7738

Email: bacharach@prodigy.net.mx

## **Europe**

FAX:

#### **European Headquarters**

Bacharach Instruments

Sovereign House, Queensway

Leamington Spa

Warwickshire CV31 3JR

United Kingdom

Phone: +44-1926-338111 Fax: +44-1926-338110

Email: sales@bacharach-europe.com

#### Sales / Service Center - Denmark

Bacharach Instruments Int'l

P.O. Box 44 39 Lindegade

DK 6070 Christiansfeld Denmark

Phone: +45-74-563171 Fax: +45-74-563178 Email: mail@bacharach.dk

# Warranty

Bacharach, Inc. warrants to Buyer that at the time of delivery this Product will be free from defects in material and manufacture and will conform substantially to Bacharach Inc.'s applicable specifications. Bacharach's liability and Buyer's remedy under this warranty are limited to the repair or replacement, at Bacharach's option, of this Product or parts thereof returned to Seller at the factory of manufacture and shown to Bacharach Inc.'s reasonable satisfaction to have been defective; provided that written notice of the defect shall have been given by Buyer to Bacharach Inc. within two (2) years after the date of delivery of this Product by Bacharach, Inc. For full details concerning this warranty, contact Bacharach Inc.



621 Hunt Valley Circle, New Kensington, PA 15068 Ph: 724-334-5000 • Fax: 724-334-5001 • Toll Free: 800-736-4666 Webside: www.bacharach-inc.com • E-mail: help@bacharach-inc.com Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com