

# Canon

## imageCLASS

### MF 5750 / MF 5770

## Facsimile Guide



**SUPER**  
**GB**

Please read this guide before operating this equipment.  
After you finish reading this guide, store it in a safe  
place for future reference.

**ENG**



# Manuals for the Machine

The manuals for this machine are divided as follows. Please refer to them for detailed information. Depending on the system configuration and product purchased, some manuals may not be needed.



Guides with this symbol are printed manuals.



Guides with this symbol are PDF manuals included on the accompanying CD-ROM.

- **Setting Up the Machine**
- **Software Installation**
- **Network Setting (Only for the MF5770 model.)**

## Set-Up Sheet



- **Introduction on Machine Use**

## Quick Reference Guide



- **Copying and Printing Instructions**
- **Troubleshooting**

## User's Guide



- **Fax Instructions**
- **Troubleshooting**

## Facsimile Guide (This Manual)



Only for the MF5750/MF5770 models.

- **Software Installation and Instructions**
- **Printing, Scanning and PC Faxing Instructions**
- **Troubleshooting**

## Software Guide



- **Remote User Interface Instructions**

## Remote UI Guide



Only for the MF5770 model.

- **Network Connectivity and Setup Instructions**

## Network Guide



Only for the MF5770 model.

**Model Name**

F146502 (imageCLASS MF5750)

F146502 (imageCLASS MF5770)

***Copyright***

Copyright © 2005 by Canon, Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Canon, Inc.

---

## **Trademarks**

Canon® is a registered trademark, and UHQ™ is a trademark of Canon Inc.

IBM® is a registered trademark.

Microsoft® and Windows® are registered trademarks of Microsoft Corporation.

Other brand and product names may be trademarks or registered trademarks of their respective companies.



As an ENERGY STAR® Partner, Canon has determined that the machine meets the Energy Star guidelines for energy efficiency.



Super G3 is a phrase used to describe the new generation of fax machines that use ITU-T V.34 standard 33.6Kbps\* modems. Super G3 High Speed Fax machines allow transmission time of approx. 3 seconds\* per page which results in reduced telephone line charges.

\* Approx. 3 seconds per page fax data transmission time based on Canon FAX Standard Chart No.1, (Standard Mode) at 33.6Kbps modem speed. The Public Switched Telephone Network (PSTN) currently supports 28.8Kbps modem speeds or lower, depending on telephone line conditions.

---

# Contents

---

<b>Preface</b> .....	<b>v</b>
How to Use This Manual .....	v
Symbols Used in This Manual .....	v
Keys Used in This Manual .....	v
Messages Displayed in the LCD .....	v

## **Chapter 1 Introduction**

---

Customer Support .....	1-1
Operation Panel .....	1-1
Standby Display .....	1-3

## **Chapter 2 Registering Information in Your Machine**

---

Registering Sender Information .....	2-1
Entering the Date and Time .....	2-2
Registering Your Fax/Telephone Number and Name .....	2-2
Setting the Telephone Line Type .....	2-3
Dialing Through a Switchboard .....	2-3

## **Chapter 3 Speed Dialing**

---

Speed Dialing Methods .....	3-1
Registering One-Touch Speed Dialing .....	3-1
Changing or Deleting an Entry .....	3-2
Registering Coded Speed Dialing .....	3-3
Changing or Deleting an Entry .....	3-4
Registering Group Dialing .....	3-4
Changing or Deleting an Entry .....	3-5
Printing Speed Dialing Lists .....	3-6

## **Chapter 4 Sending Faxes**

---

Sending Methods .....	4-1
Memory Sending .....	4-1
Manual Sending .....	4-2
Improving Faxed Images .....	4-3
Adjusting the Image Quality (Fax Resolution) .....	4-3
Adjusting the Exposure (Scan Density) .....	4-3
Dialing Methods .....	4-4
Regular Dialing .....	4-4
One-Touch Speed Dialing .....	4-4
Coded Speed Dialing .....	4-5
Group Dialing .....	4-5
Directory Dialing .....	4-5
Redialing a Busy Number .....	4-6
Manual Redialing .....	4-6
Automatic Redialing .....	4-6
Sending the Same Document to Several Recipients (Sequential Broadcasting) .....	4-7
Special Dialing .....	4-8
Dialing an Overseas Number (With Pauses) .....	4-8
Switching Temporarily to Tone Dialing .....	4-9

---

**Chapter 5      Receiving Faxes**

---

Setting the Receive Mode .....	5-1
Receiving Faxes Automatically: FaxOnly Mode .....	5-1
Receiving Both Faxes and Voice Calls Automatically: FaxTel Mode .....	5-2
Receiving When an Answering Machine Is Connected: AnsMode .....	5-3
Receiving Faxes Manually: Manual Mode .....	5-4
Telstra FaxStream™ Duet (Only for Australia) .....	5-4
Telecom FaxAbility (Only for New Zealand) .....	5-5
Receiving Faxes While Performing Other Tasks .....	5-5
Receiving Faxes in the Memory When a Problem Occurs .....	5-5
Canceling Receiving .....	5-6

---

**Chapter 6      Reports and Lists**

---

Summary of Reports and Lists .....	6-1
ACTIVITY REPORT .....	6-2
Printing the ACTIVITY REPORT .....	6-2
Adjusting the ACTIVITY REPORT Setting .....	6-3
Adjusting the TX REPORT Setting .....	6-3
Adjusting the RX REPORT Setting .....	6-5
Printing the USER DATA LIST .....	6-6

---

**Chapter 7      Troubleshooting**

---

LCD Messages .....	7-1
Error Codes .....	7-3
Faxing Problems .....	7-5
Sending Problems .....	7-5
Receiving Problems .....	7-8
Telephone Problems .....	7-11
If a Power Cut Occurs .....	7-12
If You Cannot Solve the Problem .....	7-12

---

**Chapter 8      Machine Settings**

---

Accessing the Machine Settings .....	8-1
Menu Descriptions .....	8-1
FAX SETTINGS .....	8-1
ADD. REGISTRATION .....	8-8
REPORTS / LISTS .....	8-8

---

**Chapter 9      Appendix**

---

Specifications .....	9-1
Facsimile .....	9-1
Telephone .....	9-2
Index .....	9-3

# Preface

Thank you for purchasing the Canon imageCLASS MF5750/MF5770. Please read this manual thoroughly before operating the machine in order to familiarize yourself with its capabilities, and to make the most of its many functions. After reading this manual, store it in a safe place for future reference.

## How to Use This Manual

### ***Symbols Used in This Manual***

The following symbols are used in this manual to explain procedures, restrictions, handling precautions, and instructions that should be observed for safety.



#### **WARNING**

Indicates a warning concerning operations that may lead to death or injury to persons if not performed correctly. In order to use the machine safely, always pay attention to these warnings.



#### **CAUTION**

Indicates a caution concerning operations that may lead to injury to persons, or damage to property if not performed correctly. In order to use the machine safely, always pay attention to these cautions.



#### **IMPORTANT**

Indicates operational requirements and restrictions. Be sure to read these items carefully in order to operate the machine correctly, and to avoid damage to the machine.



#### **NOTE**

Indicates a clarification of an operation, or contains additional explanations for a procedure. Reading these notes is highly recommended.

### ***Keys Used in This Manual***

The following symbols and key names are a few examples of how keys to be pressed are expressed in this manual. The operation panel keys on the machine are indicated within brackets.



Press [Start].



Press [Image Quality].

### ***Messages Displayed in the LCD***

The following are a few examples of how messages in the LCD are expressed in this manual. The messages are indicated within angle brackets.

- If <MEMORY FULL> is displayed, the machine cannot scan the documents.
- <NOT REGISTERED> appears if there are no numbers registered.

## Introduction

This chapter describes the operation panel and the standby display used for the fax function of the machine.

## Customer Support


The machine is designed with the latest technology to provide trouble-free operation. If you encounter a problem with the machine's operation, try to solve it by using the information in Chapter 7, "Troubleshooting." If you cannot solve the problem or if you think the machine needs servicing, contact your local authorized Canon dealer or the Canon help line.

## Operation Panel

This section describes keys used when sending and receiving faxes, and setting the Menu.

For keys not described here, see Chapter 1, "Introduction," in the *User's Guide*.

### ■ MF5770

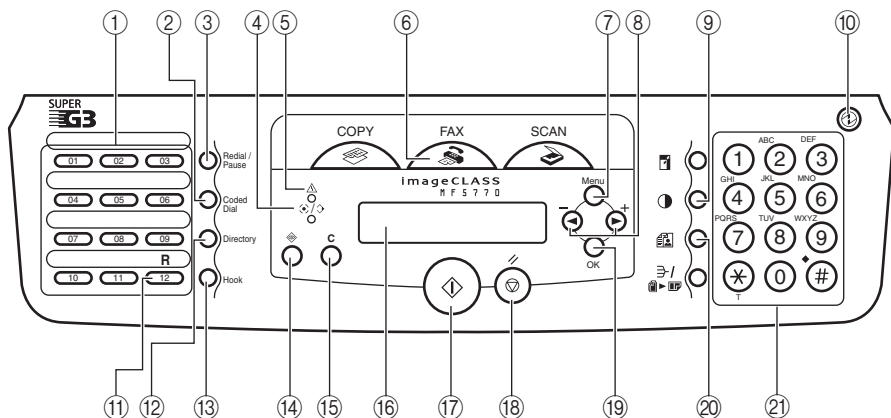

#### ① One-Touch Speed Dialing keys

Dial fax/telephone numbers registered under one-touch speed dialing keys.

#### ② Coded Dial key

Press [Coded Dial], followed by a two-digit code to dial fax/telephone number registered for coded speed dialing.

#### ③ Redial/Pause key

Redials the previous number dialed manually with the numeric keys, and enters pauses when dialing or registering the numbers.

#### ④ $\text{In Use/Memory}$ indicator


Flashes green when a fax is being received or sent, or the extension phone is off the hook.

Lights green when there are waiting fax jobs, or a fax is received into the memory.



- ⑤ **△ Alarm indicator**  
Flashes red when the machine has a problem such as a paper jam. (The error message is displayed in the LCD.)
- ⑥ **FAX key**  
Switches the standby display to the Fax mode.
- ⑦ **Menu key**  
Customizes the way the machine operates.
- ⑧ **[◀(-)] or [▶(+)] keys**  
Scroll through the selections so you can see other settings.
- ⑨ **Ⓜ Exposure key**  
Adjusts the fax exposure.
- ⑩ **Ⓜ Energy Saver key**  
Sets or cancels the energy saver mode manually. The key lights green when the energy saver mode is set, and goes off when the mode is canceled.
- ⑪ **R key**  
Dials an outside line access number when the machine is connected through a switchboard (PBX).
- ⑫ **Directory key**  
Enables you to search for fax/telephone numbers by the name under which they are registered for speed dialing, and then use the number for dialing.
- ⑬ **Hook key**  
Enables you to dial without picking up the handset.
- ⑭ **◆ Status Monitor key**  
Checks the status of copy, fax, print and report jobs.
- ⑮ **C Clear key**  
Clears an entry in the LCD.
- ⑯ **LCD**  
Displays messages and prompts during operation. Also displays selections, text, and numbers when specifying settings.
- ⑰ **◀ Start key**  
Starts sending or receiving faxes.
- ⑱ **Ⓜ Stop/Reset key**  
Cancels sending or receiving faxes and other operations, and turns to the standby display in the LCD.
- ⑲ **OK key**  
Determines the contents you set or register.
- ⑳ **📄 Image Quality key**  
Adjusts the quality of fax image.
- ㉑ **Numeric keys**  
Enter numbers when dialing or registering fax/telephone numbers, etc. Also, enter characters when registering names.

■ MF5750

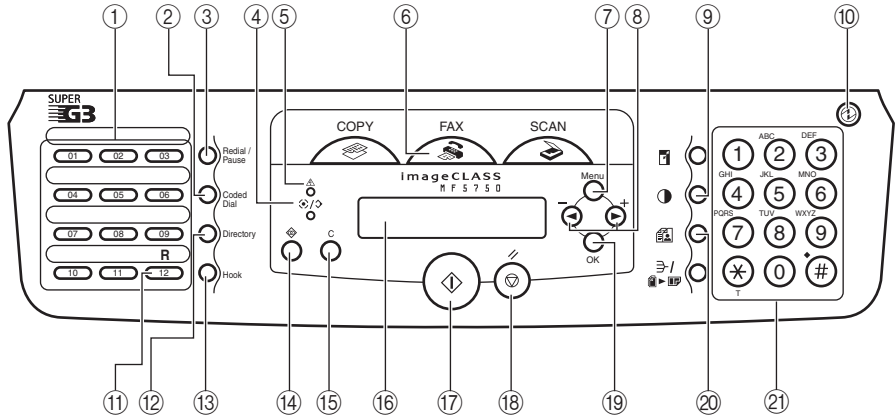

# Standby Display

The standby display differs depending on which mode is selected.

The standby display in the Fax mode is as follows:

## ■ Fax Mode



### NOTE

*For the standby display in the Copy mode and the Scan mode, see Chapter 1, "Introduction," in the User's Guide.*

# Registering Information in Your Machine

This chapter explains how to register the information necessary for sending and receiving faxes.




## NOTE

- For details on how to enter characters or symbols when you come to step that requires you to enter a name or number, see Chapter 2, "Operation," in the Quick Reference Guide.
- You can print the USER DATA LIST to check the sender information you have registered. (See "Printing the USER DATA LIST," on p. 6-6.)

## Registering Sender Information

When you receive a fax, the name of the person or company who sent you the fax, their fax/telephone number, and the date and time of transmission may be printed in small type at the top of each page. This information is called the Sender information or the Transmit Terminal Identification (TTI). Similarly, you can register your details in your machine so that whenever you send a fax, the other party knows who sent it, and when it was sent.

Below is an example of how your sender information would print on a fax sent from your machine:

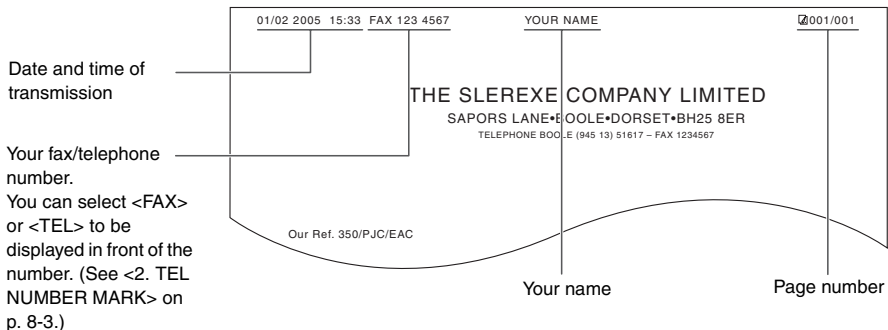

## NOTE

You can set the sender information to print inside or outside the image area. (See <1. TTI POSITION> of "Menu Descriptions," on p. 8-2.)

## Entering the Date and Time

### NOTE

You can print the *USER DATA LIST* to check the current setting. (See "Printing the *USER DATA LIST*," on p. 6-6.)

- 1 Press [Menu].
- 2 Press [◀(-)] or [▶(+)] to select <TIMER SETTINGS> → press [OK].
- 3 Press [◀(-)] or [▶(+)] to select <DATE/TIME SETTING> → press [OK].
- 4 Use the numeric keys to enter the date (day/month/year) and time (in 24-hour format) → press [OK].

DATE/TIME SETTING 01/02 '05 11:0 <u>1</u>	→	TIMER SETTINGS 2.DATE SETUP
--	---	--------------------------------

Enter only the last two digits of the year.

- 5 Press [Stop/Reset] to return to the standby display.

## Registering Your Fax/Telephone Number and Name

- 1 Press [Menu].
- 2 Press [◀] or [▶] to select <FAX SETTINGS> → press [OK].
- 3 Press [◀(-)] or [▶(+)] to select <USER SETTINGS> → press [OK].
- 4 Press [◀(-)] or [▶(+)] to select <TEL LINE SETTINGS> → press [OK].
- 5 Press [◀(-)] or [▶(+)] to select <UNIT TEL NUMBER> → press [OK].
- 6 Use the numeric keys to enter your fax/telephone number (max. 20 digits, including spaces) → press [OK].

UNIT TEL NUMBER 123xxxxxxx	→	TEL LINE SETTINGS 2.TEL LINE TYPE
-------------------------------	---	--------------------------------------

To enter a plus sign (+) before the number, press [#].

To delete a previous number, press [◀(-)] or [Clear]. To delete the entire entry, press and hold [Clear].

- 7 Press [Menu].
- 8 Press [◀(-)] or [▶(+)] to select <UNIT NAME> → press [OK].

- 9** Use the numeric keys to enter your name (max. 24 characters, including spaces) → press [OK].  
For details on how to enter characters or symbols, see "2.3 Enter Characters," in the *Quick Reference Guide*.

UNIT NAME CANON	: A	→	USER SETTINGS 3 . TX TERMINAL ID
--------------------	-----	---	-------------------------------------

- 10** Press [Stop/Reset] to return to the standby display.

## Setting the Telephone Line Type

Before using the machine, make sure you have set the correct telephone line type for your telephone line. If you are unsure of your telephone line type, contact your telephone company.

### NOTE

You can print the *USER DATA LIST* to check the current setting. (See "Printing the *USER DATA LIST*," on p. 6-6.)

- 1** Press [Menu].
- 2** Press [◀(-)] or [▶(+)] to select <FAX SETTINGS> → press [OK].
- 3** Press [◀(-)] or [▶(+)] to select <USER SETTINGS> → press [OK].
- 4** Press [◀(-)] or [▶(+)] to select <TEL LINE SETTINGS> → press [OK].
- 5** Press [◀(-)] or [▶(+)] to select <TEL LINE TYPE> → press [OK].
- 6** Press [◀(-)] or [▶(+)] to select the telephone line type → press [OK].  
You can select from the following:
  - <TOUCH TONE> for tone dialing
  - <ROTARY PULSE> for pulse dialing
- 7** Press [Stop/Reset] to return to the standby display.


## Dialing Through a Switchboard

A PBX (Private Branch Exchange) is an on-site telephone switchboard. If your machine is connected through a PBX or other telephone switching system, you have to dial the outside line access number first, and then the number of the party you are calling.

To facilitate this procedure, you can register the PBX access type and the outside line access number under [R] so that you only need to press this key before dialing the fax/telephone number you want to reach.

### NOTE

You can print the *USER DATA LIST* to check the current setting. (See "Printing the *USER DATA LIST*," on p. 6-6.)

- 1 Press [Menu].
  - 2 Press [◀(-)] or [▶(+)] to select <FAX SETTINGS> → press [OK].
  - 3 Press [◀(-)] or [▶(+)] to select <USER SETTINGS> → press [OK].
  - 4 Press [◀(-)] or [▶(+)] to select <R-KEY SETTING> → press [OK].
  - 5 Press [◀(-)] or [▶(+)] to select <PBX> → press [OK].
  - 6 Press [◀(-)] or [▶(+)] to select the access type of your switching system.
    - If you selected <HOOKING>:
      - Press [OK].
    - If you selected <PREFIX>:
      - Press [OK].
      - Use the numeric keys to enter the outside line access number (max. 19 digits) → [Redial/Pause] to enter a pause → [OK].
-  **NOTE**  
*If you do not press [Redial/Pause] before pressing [OK], you cannot complete the registration.*
- 7 Press [Stop/Reset] to return to the standby display.

# Speed Dialing

This chapter explains how to simplify the dialing process by assigning the recipient names and their fax/telephone numbers to only one or two keys.

## Speed Dialing Methods

Speed dialing allows you to dial fax/telephone numbers by simply pressing one or a few keys.

The following speed dialing methods are available:

### ■ One-Touch Speed Dialing

Register a fax/telephone number for one-touch speed dialing (see "Registering One-Touch Speed Dialing," on p. 3-1), then to dial the number, simply press the one-touch speed dialing key assigned to that number.

### ■ Coded Speed Dialing

Register a fax/telephone number for coded speed dialing (see "Registering Coded Speed Dialing," on p. 3-3), then to dial the number, simply press [Coded Dial] → enter the two-digit code assigned to that number.

### ■ Group Dialing

Register a group of fax/telephone numbers for group dialing (see "Registering Group Dialing," on p. 3-4), then to send a document to all numbers in that group, simply press the one-touch speed dialing key, or press [Coded Dial] → enter the two-digit code assigned to that group.



#### NOTE

*After you set up your speed dialing keys, we recommend that you occasionally print a list of all fax/telephone numbers registered in the machine, and store it for reference. (See "Printing Speed Dialing Lists," on p. 3-6.)*

## Registering One-Touch Speed Dialing

Before you can use one-touch speed dialing (see "One-Touch Speed Dialing," on p. 4-4), you need to register the recipients' fax/telephone numbers. You can register up to 11 one-touch speed dialing keys, which can include group dialing numbers.



#### NOTE

*You can also register multiple fax/telephone numbers in each one-touch speed dialing key. (See "Registering Group Dialing," on p. 3-4.)*

- 1 Press [Menu].
- 2 Press [◀(-)] or [▶(+)] to select <ADD. REGISTRATION> → press [OK].
- 3 Press [◀(-)] or [▶(+)] to select <1-TOUCH SPD DIAL> → press [OK].
- 4 Press [◀(-)] or [▶(+)] to select a one-touch speed dialing key (01 to 11) → press [OK] twice.  
You can also select a key by pressing the one-touch speed dialing key.
- 5 Use the numeric keys to enter the fax/telephone number you want to register (max. 120 digits, including spaces and pauses) → press [OK] twice.

TEL NUMBER ENTRY 9 0 5 x x x x x x x x	→	NAME : A _
---	---	---------------

- 6 Use the numeric keys to enter a name for the one-touch speed dialing key (max. 16 characters, including spaces) → press [OK].

NAME : A Canon FRANCE	→	1-TOUCH SPD DIAL [01]Canon FRANCE
--------------------------	---	--------------------------------------

To continue registering one-touch speed dialing keys, repeat the procedure from step 4.

- 7 Press [Stop/Reset] to return to the standby display.

#### NOTE

Use the destination labels provided with the machine to label the one-touch speed dialing keys with the recipients' names.

## Changing or Deleting an Entry

### ■ Changing a Fax/Telephone Number You Registered

Follow steps 1 to 4 of "Registering One-Touch Speed Dialing" (see p. 3-1). In step 5, press and hold [Clear] to delete an entire fax/telephone number → use the numeric keys to enter a new number → press [OK] → [Stop/Reset].

#### NOTE

You can also press [◀(-)] or [Clear] repeatedly to delete the registered number.

### ■ Changing a Name You Registered

Follow steps 1 to 5 of "Registering One-Touch Speed Dialing" (see p. 3-1). In step 6, press and hold [Clear] to delete an entire name → use the numeric keys to enter a new name → press [OK] → [Stop/Reset].

#### NOTE

You can also press [Clear] repeatedly to delete the registered name.



## ■ Deleting an Entire Entry

Follow steps 1 to 4 of "Registering One-Touch Speed Dialing" (see p. 3-1). In step 5, press and hold [Clear] to delete the registered number → press [OK] → [Stop/Reset].



### NOTE

- When deleting the registered number, the registered name is cleared automatically.
- You can also press [◀(-)] or [Clear] repeatedly to delete the registered number.

## Registering Coded Speed Dialing

Before you can use coded speed dialing (see "Coded Speed Dialing," on p. 4-5), you need to register the recipients' fax/telephone numbers. You can register up to 100 fax/telephone numbers.

- 1** Press [Menu].
- 2** Press [◀(-)] or [▶(+)] to select <ADD. REGISTRATION> → press [OK].
- 3** Press [◀(-)] or [▶(+)] to select <CODED SPD DIAL> → press [OK].
- 4** Press [◀(-)] or [▶(+)] to select a coded speed dialing code (00 to 99) → press [OK] twice.  
You can also select a code by pressing [Coded Dial] → entering the two-digit code with the numeric keys.
- 5** Use the numeric keys to enter the fax/telephone number you want to register (max. 120 digits, including spaces and pauses) → press [OK] twice.

TEL NUMBER ENTRY 1 4 9 x x x x x x x x	→	NAME : A _
---	---	---------------

- 6** Use the numeric keys to enter a name for the coded speed dialing code (max. 16 characters, including spaces) → press [OK].

NAME : A Canon ITALIA	→	CODED SPD DIAL [*00] Canon ITALIA
--------------------------	---	--------------------------------------

To continue registering coded speed dialing codes, repeat the procedure from step 4.

- 7** Press [Stop/Reset] to return to the standby display.

## Changing or Deleting an Entry

### ■ Changing a Fax/Telephone Number You Registered

Follow steps 1 to 4 of "Registering Coded Speed Dialing" (see p. 3-3). In step 5, press and hold [Clear] to delete an entire fax/telephone number → use the numeric keys to enter a new number → press [OK] → [Stop/Reset].

#### NOTE

*You can also press [◀(-)] or [Clear] repeatedly to delete the registered number.*

### ■ Changing a Name You Registered

Follow steps 1 to 5 of "Registering Coded Speed Dialing" (see p. 3-3). In step 6, press and hold [Clear] to delete an entire name → use the numeric keys to enter a new name → press [OK] → [Stop/Reset].

#### NOTE

*You can also press [◀(-)] or [Clear] repeatedly to delete the registered name.*

### ■ Deleting an Entire Entry

Follow steps 1 to 4 of "Registering Coded Speed Dialing" (see p. 3-3). In step 5, press and hold [Clear] to delete the registered number → press [OK] → [Stop/Reset].

#### NOTE

- When deleting the registered number, the registered name is cleared automatically.
- You can also press [◀(-)] or [Clear] repeatedly to delete the registered number.

## Registering Group Dialing

Before you can use group dialing (see "Group Dialing," on p. 4-5), you need to register the recipients' fax/telephone numbers. You can register up to 110 groups, which can include one-touch speed dialing keys and/or coded speed dialing codes.

Each time you program a one-touch speed dialing key or coded speed dialing code, the amount of group dials available is reduced by one.

#### NOTE

- You can only enter the fax/telephone numbers that have already been registered for one-touch or coded speed dialing. See the following titles:
  - "Registering One-Touch Speed Dialing," on p. 3-1
  - "Registering Coded Speed Dialing," on p. 3-3
- You cannot enter numbers with the numeric keys.

- 1** Press [Menu].
- 2** Press [◀(-)] or [▶(+)] to select <ADD. REGISTRATION> → press [OK].
- 3** Press [◀(-)] or [▶(+)] to select <GROUP DIAL> → press [OK].

**4 Specify an empty one-touch speed dialing key or coded speed dialing code that you want to set as the group dial.**

● **To register a group under a one-touch speed dialing key:**

- Press [**◀(-)**] or [**▶(+)**] to select a one-touch speed dialing key (01 to 11) → press [OK] twice.  
You can also select a key by pressing the one-touch speed dialing key.

● **To register a group under a coded speed dialing code:**

- Press [Coded Dial] → use the numeric keys to enter the two-digit code (00 to 99) → press [OK] twice.

**5 Select the speed dialing numbers you want to register in the group → press [OK] twice.**

The speed dialing number refers to the one-touch dialing number or coded speed dialing number under which the fax/telephone number is programmed.

To enter in the group a number stored under a one-touch speed dialing key, press the desired one-touch speed dialing key(s).

To enter a number stored under a coded speed dialing code, press [Coded Dial] → enter the two-digit code for the number using the numeric keys. For multiple entries, press [Coded Dial] between each entry.



**NOTE**

*To review the numbers you have entered, press [**◀(-)**] or [**▶(+)**].*

**6 Use the numeric keys to enter a name for the group (max. 16 characters, including spaces) → press [OK].**

NAME : 1 Canon group 2	→	GROUP DIAL [02] GROUP DIAL
---------------------------	---	-------------------------------

To continue registering other groups, repeat the procedure from step 4.

The name you enter here will appear in speed dialing lists.

**7 Press [Stop/Reset] to return to the standby display.**

## Changing or Deleting an Entry

■ **Deleting a Fax/Telephone Number from the Group**

Follow steps 1 to 4 of "Registering Group Dialing" (see p. 3-4). In step 5, press [**◀(-)**] or [**▶(+)**] to display the number you want to delete → press and hold [Clear] → press [OK] → [Stop/Reset].

■ **Adding a Fax/Telephone Number to the Group**

Follow steps 1 to 4 of "Registering Group Dialing" (see p. 3-4). In step 5, simply enter the additional number as explained.

■ **Deleting an Entire Group**

Follow steps 1 to 4 of "Registering Group Dialing" (see p. 3-4). In step 5, press [Clear] repeatedly until all numbers are deleted → press [OK] → [Stop/Reset].



**NOTE**

*When deleting all numbers, the registered group name is cleared automatically.*

# Printing Speed Dialing Lists

You can print lists of the recipients registered for speed dialing. You may want to keep these lists near the machine to refer to them when dialing.

- 1 Press [Menu].
- 2 Press [◀(-)] or [▶(+)] to select <REPORTS/LISTS> → press [OK].
- 3 Press [◀(-)] or [▶(+)] to select <SPEED DIAL LIST> → press [OK].
- 4 Press [◀(-)] or [▶(+)] to select the list you want to print → press [OK].

You can select from the following:

- <1-TOUCH LIST>
- <CODED DIAL LIST>
- <GROUP DIAL LIST>

Samples of the lists are shown below.

## ■ 1-TOUCH LIST

01/02 2005 10:32 FAX 1234567		CANON		001
***** *** 1-TOUCH LIST *** *****				
NO.	RECIPIENT ADDRESS	DESTINATION ID		
[ 01]	732 2233	ADAM BOOKS.CPA		
[ 02]	761 1298	JOHN BARRISTER		
[ 04]	1 516 911 4411	NATALIE SMITH		
[ 03]	1 914 438 3619	SEYMOUR GREEN		

## ■ CODED DIAL LIST

01/02 2005 10:47 FAX 1234567		CANON		001
***** *** CODED DIAL LIST *** *****				
NO.	RECIPIENT ADDRESS	DESTINATION ID		
[* 00]	555 1234	BILL		
[* 01]	14043333499	PEACHTREE.INC.		
[* 02]	16172223322	HUNT INVESTMENTS		
[* 03]	1 312 538 4005	LAKESIDE INC.		

## ■ GROUP DIAL LIST

01/02 2005 10:07 FAX 1234567		CANON		001
***** *** GROUP DIAL LIST *** *****				
[ 05]	CANON GROUP	[ 01]	225 7823	CANON NY
		[ 02]	233 7766	CANON CA
		[* 00]	876 2398	CANON TX
		[* 01]	613 9076	CANON OH

This chapter describes the different ways to send faxes. It also explains how to adjust scan settings to improve the image quality.

## Sending Methods

There are two methods of sending faxes from the machine:

- Memory Sending
- Manual Sending



### NOTE

- You can also fax the documents from your computer. If you want to install the software for fax sending, see the following:
  - "Install software," in the Set-Up Sheet
  - Chapter 1, "Installation," in the Software Guide
- For details on how to send faxes from your computer, see Chapter 4, "PC Faxing (MF5750/MF5770 Models Only)," in the Software Guide.

### Memory Sending

You should normally use memory sending to send documents efficiently.

If <MEMORY FULL> is displayed, the machine cannot scan the documents. In this case, wait for the machine to send any faxes stored in the memory, then scan the documents.



### NOTE

You can register a new fax job while the machine is waiting to redial the recipient's number automatically. For details on how to set the machine to redial automatically, see "Automatic Redialing," on p. 4-6. You can store up to 20 fax jobs or approximately 256 pages\* in the memory.

- \* Based on the condition that the other party sends the fax by the imageCLASS MF5750/MF5770 with Canon Fax Standard Chart No. 1, standard mode.

#### **1 Place the document on the platen glass or load it in the ADF → press [FAX].**

For details on the types of documents you can fax, their requirements, and how to place or load documents, see Chapter 3, "Document Handling," in the *User's Guide*.

#### **2 Adjust any necessary settings for your document.**

- Press [Image Quality] to select the fax resolution. (See "Adjusting the Image Quality (Fax Resolution)," on p. 4-3.)
- Press [Exposure] to select the scan density. (See "Adjusting the Exposure (Scan Density)," on p. 4-3.)

**3 Dial the recipient's fax/telephone number.**

For details on the different dialing methods, see "Dialing Methods," on p. 4-4.

**4 Press [Start].**

If you are using the ADF, the fax will be transmitted automatically.

If you are using the platen glass, you will be prompted when the page has been scanned. Place the next page (for a multipage document) → press [Start]. To start sending, after all the pages have been scanned, press [OK].

**NOTE**

To cancel memory sending, press [Stop/Reset].

You can also cancel sending using [Status Monitor]. (See Chapter 7, "Status Monitor," in the User's Guide.)

**Manual Sending**

Use manual sending when you want to talk to the recipient before sending a document, or if the recipient does not have a fax machine that can receive automatically.

**NOTE**

- You will need to connect a telephone to the machine if you want to talk to the recipient before sending a document.
- You cannot use the platen glass for manual sending.

**1 Connect a telephone to the machine if you want to talk to the recipient before sending a document.**

For details on how to connect a telephone to the machine, see "Connect telephone cable," in the *Set-Up Sheet*.

**2 Load the document in the ADF → press [FAX].**

For details on the types of documents you can fax, their requirements, and how to load documents, see Chapter 3, "Document Handling," in the *User's Guide*.

**3 Adjust any necessary settings for your document.**

- Press [Image Quality] to select the fax resolution. (See "Adjusting the Image Quality (Fax Resolution)," on p. 4-3.)
- Press [Exposure] to select the scan density. (See "Adjusting the Exposure (Scan Density)," on p. 4-3.)

**4 Press [Hook] or pick up the handset of your telephone.****5 Dial the recipient's fax/telephone number.**

For details on the different dialing methods, see "Dialing Methods," on p. 4-4.

**NOTE**

You cannot use group dialing for manual sending.

**6 Talk through the handset to the recipient.**

If you press [Hook] in step 4, you can pick up the handset when you hear the recipient's voice.

If you hear a high-pitched signal instead of the recipient's voice, go to step 8.

- 7 Ask the recipient to set his fax machine to receive faxes.
- 8 When you hear a high-pitched signal, press [Start] → hang up the handset.



#### NOTE

- To cancel manual sending, press [Stop/Reset].
- If the offhook alarm starts beeping, make sure that the handset is resting properly on the handset cradle. The offhook alarm can be turned off. (See <4. OFFHOOK ALARM> of "Menu Descriptions," on p. 8-2.)

## Improving Faxed Images

There are several settings that allow you to improve the quality of faxed documents.

### ***Adjusting the Image Quality (Fax Resolution)***

You can adjust the image quality (fax resolution) of the document you send. The higher the image quality, the better the output quality at the other end, but the longer the transmission time. Adjust the image quality according to the type of document you are sending.

- 1 Press [Image Quality].
- 2 Press [◀(-)] or [▶(+)] to select the resolution → press [OK].


You can select from the following:

- <STANDARD> for most text-only documents. (203x98 dpi)
- <FINE> for fine-print documents (the resolution is twice that of <STANDARD>). (203x196 dpi)
- <PHOTO> for documents that contain photographs (the resolution is twice that of <STANDARD>). (203x196 dpi)
- <SUPER FINE> for documents that contain fine print and images (the resolution is four times that of <STANDARD>). (203x391 dpi)
- <ULTRA FINE> for documents that contain fine print and images (the resolution is eight times that of <STANDARD>). (406x391 dpi)

### ***Adjusting the Exposure (Scan Density)***

Density is the degree of differences between light and dark areas of an image.

- 1 Press [Exposure].
- 2 Press [◀(-)] or [▶(+)] to adjust the density → press [OK].



You can select from the following:

- Set in the middle for standard documents
- Press [▶(+)] for light documents to be darker
- Press [◀(-)] for dark documents to be lighter

# Dialing Methods

There are several ways of dialing the fax/telephone number of the party to which you want to send a fax. They are as follows:

## ■ When the Fax/Telephone Number Is Not Registered in the Machine

- Regular Dialing
- Redialing

## ■ When the Fax/Telephone Number Is Registered in the Machine

- One-Touch Speed Dialing
- Coded Speed Dialing
- Group Dialing
- Directory Dialing

## 4

### NOTE

- If you are unsure of the registered fax/telephone number, check the destination labels, or print each list and check the numbers. (See "Printing Speed Dialing Lists," on p. 3-6.)
- For details on registering a fax/telephone number for speed dialing, see Chapter 3, "Speed Dialing."
- The machine must be set to the Fax mode when dialing and your fax document must be loaded in the ADF or on the platen glass.

## Regular Dialing

When you come to a step that requires dialing a number, you can dial the number with the keys on the numeric keypad, just like you would when dialing a telephone number.

### 1 Dial a fax/telephone number with the numeric keys.

#### NOTE

- If you enter a wrong number, press [◀(-)] or [Clear] to delete the last digit. Or press and hold [Clear] to delete all the digits you entered.
- If <TIME OUT> in the <TX SETTINGS> is set to <ON>, scanning starts when you press [OK] after entering the fax/telephone number.

### 2 Press [Start] to scan the document.

Press [OK] to start dialing when you set the document on the platen glass. When you set the document in the ADF, the machine automatically starts dialing after scanning is complete.

## One-Touch Speed Dialing

### 1 Press the desired one-touch speed dialing key (01 to 11).

The number registered under that one-touch speed dialing key is displayed.

<NOT REGISTERED> appears if no fax/telephone number is assigned to the one-touch speed dialing key you pressed.

If <TIME OUT> in the <TX SETTINGS> is set to <ON>, scanning starts automatically.

#### NOTE

If you press a wrong key, press [Stop/Reset].

### 2 Press [Start] to scan the document.

Press [OK] to start dialing when you set the document on the platen glass. When you set the document in the ADF, the machine automatically starts dialing after scanning is complete.



## Coded Speed Dialing

### 1 Press [Coded Dial] → enter the desired two-digit code (00 to 99) with the numeric keys.

The number registered under that coded speed dialing code is displayed.

<NOT REGISTERED> appears if no fax/telephone number is assigned to the coded speed dialing code you entered.

If <TIME OUT> in the <TX SETTINGS> is set to <ON>, scanning starts automatically.



#### NOTE

*If you enter a wrong code, press [Stop/Reset].*

### 2 Press [Start] to scan the document.

Press [OK] to start dialing when you set the document on the platen glass. When you set the document in the ADF, the machine automatically starts dialing after scanning is complete.

## Group Dialing

### 1 Press the desired one-touch speed dialing key (01 to 11), or press [Coded Dial] → enter the two-digit code (00 to 99) to which a group of fax/telephone numbers are assigned.

The name of the group is displayed.

<NOT REGISTERED> appears if no fax/telephone number is assigned to the one-touch speed dialing key you pressed.

If <TIME OUT> in the <TX SETTINGS> is set to <ON>, scanning starts automatically.



#### NOTE

- If you press a wrong key, press [Stop/Reset].
- You cannot enter an unregistered fax/telephone number directly into a group.

### 2 Press [Start] to scan the document.

Press [OK] to start dialing when you set the document on the platen glass. When you set the document in the ADF, the machine automatically starts dialing after scanning is complete.

## Directory Dialing

Directory dialing allows you to look up the other party's name you registered and retrieve the number for dialing. This feature is convenient when you know the other party's name but cannot recall the one-touch speed dialing key, the code for coded speed dialing, or group dialing where the number is registered.

### 1 Press [Directory].

<NOT REGISTERED> appears if there are no numbers registered, and the display returns to dial entry mode.

### 2 Press a numeric key to enter the first letter of the name of the party you are searching for.

For example, if you want to search for a name that starts with the letter "H", press 4 (GHI) twice.

Entries starting with the letter you entered are displayed.

If the entry does not appear for the key you pressed, the entry is not registered for speed dialing. Dial the other party's fax/telephone number with the numeric keys, (See "Regular Dialing," on p. 4-4.) or register the fax/telephone number. (See Chapter 3, "Speed Dialing.")

- To check registered names

Pressing [▶(+)] displays the names of other parties in alphabetical order.

Pressing [◀(-)] displays them in reverse order.

When you reach the last name, the display returns to the first name.

### 3 With the name you want to dial displayed, press [OK].

The other party's name, or the name for group dialing appears.

If <TIME OUT> in the <TX SETTINGS> is set to <ON>, scanning starts automatically.

### 4 Press [Start] to scan the document.

Press [OK] to start dialing when you set the document on the platen glass. When you set the document in the ADF, the machine automatically starts dialing after scanning is complete.

## Redialing a Busy Number

There are two methods of redialing:

- Manual Redialing
- Automatic Redialing

### Manual Redialing

Press [Redial/Pause] to redial the last number entered with the numeric keys used to send a fax.

#### NOTE

- To cancel manual redialing, press [Stop/Reset].
- The last number entered with the numeric keys will be deleted when you unplug and plug the power cord.
- The number entered for a voice call is not stored for redial number.

### Automatic Redialing

When using memory sending to send a document and the recipient's line is busy, the machine will redial the number after an interval.

The machine allows you to customize automatic redialing settings to suit your needs. (See "Customizing Automatic Redialing Settings" 'on p.4-6.)

#### NOTE

- To cancel automatic redialing, wait until the machine starts redialing → press [Stop/Reset] → follow the instructions in the LCD.*
- You can also cancel automatic redialing using [Status Monitor]. (See Chapter 7, "Status Monitor," in the User's Guide.)*

### ■ Customizing Automatic Redialing Settings

You can customize the following settings:

- Whether or not the machine redials automatically
- The number of times the machine redials
- The time interval between redialing

- 1** Press [Menu].
- 2** Press [◀(-)] or [▶(+)] to select <FAX SETTINGS> → press [OK].
- 3** Press [◀(-)] or [▶(+)] to select <TX SETTINGS> → press [OK].
- 4** Press [◀(-)] or [▶(+)] to select <AUTO REDIAL> → press [OK].
- 5** Press [◀(-)] or [▶(+)] to select <ON> to enable automatic redialing or <OFF> to disable it.
  - **If you selected <OFF>:**
    - Press [OK].

● **If you selected <ON>:**

- Press [OK] twice.
- Press [◀(-)] or [▶(+)], or use the numeric keys to enter the number of times you want the machine to redial → press [OK] twice.  
You can set the machine to redial between 1 to 10 times.



- Press [◀(-)] or [▶(+)], or use the numeric keys to enter the time interval between redialing → press [OK].  
You can set the time interval between 2 to 99 minutes.



**6** Press [Stop/Reset] to return to the standby display.

## Sending the Same Document to Several Recipients (Sequential Broadcasting)

The machine allows you to send the same document to a maximum of 112 recipients in one operation.



### NOTE

*If you frequently send documents to the same group of recipients, you can group these numbers for group dialing. This will allow you to send documents to all recipients in the group at the press of one or a few keys.*

**1**

**Place the document on the platen glass or load it in the ADF → press [FAX].**

For details on how to place or load documents, see Chapter 3, "Document Handling," in the *User's Guide*.

**2**

**Adjust any necessary settings for your document.**

- Press [Image Quality] to select the fax resolution. (See "Adjusting the Image Quality (Fax Resolution)," on p. 4-3.)
- Press [Exposure] to select the scan density. (See "Adjusting the Exposure (Scan Density)," on p. 4-3.)

**3**

**Enter the fax/telephone numbers you want to send to.**

● **To use one-touch speed dialing:**

- Press the one-touch speed dialing key(s). You can dial up to 11 destinations.

● **To use coded speed dialing:**

- Press [Coded Dial] → use the numeric keys to enter the two-digit code. You can dial up to 100 destinations.



### NOTE


*Repeat the step above to enter the other codes if necessary.*

**● To use regular dialing:**

- Use the numeric keys to enter the fax/telephone number → press [OK]. You can dial up to one destination. Press [Redial/Pause] to redial the last number dialed with the numeric keys.

**● To use directory dialing:**


- Press [Directory].
- Press a numeric key which contains the first letter of the desired destination.
- Press [◀(-)] or [▶(+)] to scroll through the required names until you find the desired destination → press [OK].

 **NOTE**

- After entering the first one-touch speed dialing key or coded speed dialing code, you have 5 seconds to enter another speed dialing key or code before the machine begins sending automatically. If you have entered more than one speed dialing button or code, the machine waits for 10 seconds before it begins sending. If you do not want the machine to send automatically, you need to change <TIME OUT> in <TX SETTINGS> in <FAX SETTINGS> of the Menu. (See <4. TIME OUT> of "Menu Descriptions," on p. 8-5.)
- To review the numbers you have entered, press [◀(-)] or [▶(+)].

**4 After you have specified all of the destinations, press [Start].**

If you are using the platen glass, you will be prompted when the page has been scanned. Place the next page (for a multipage document) → press [Start]. To start sending, press [OK].

 **NOTE**


- Regardless of the order you used when dialing, the machine sends the document to the destinations you specified in this order: regular dialing numbers, one-touch speed dialing numbers, then coded speed dialing numbers.
- Only one broadcasting job will be active at any given time.
- To cancel sending, press [Stop/Reset] → follow the instructions in the LCD. When you press [Stop/Reset], sending to all recipients will be canceled. You cannot cancel sending to only one recipient. (See Chapter 7, "Status Monitor," in the User's Guide.)

## Special Dialing

This section explains special dialing features, such as dialing an overseas number, and switching temporarily to tone dialing.

### *Dialing an Overseas Number (With Pauses)*

When you dial or register an overseas number, you may need to insert a pause within the number.

 **NOTE**

*You cannot insert a pause after the last number you entered for manual sending.*

**1 Place the document on the platen glass or load it in the ADF → press [FAX].**

For details on the types of documents you can fax, their requirements, and how to place or load documents, see Chapter 3, "Document Handling," in the *User's Guide*.

**2 Adjust any necessary settings for your document.**

- Press [Image Quality] to select the fax resolution. (See "Adjusting the Image Quality (Fax Resolution)," on p. 4-3.)
- Press [Exposure] to select the scan density. (See "Adjusting the Exposure (Scan Density)," on p. 4-3.)

**3 Use the numeric keys to dial the international access code.**

For details on international access codes, contact your local telephone company.

**NOTE**

*If you enter a wrong number, press [◀(-)] or [Clear] to delete the last digit. Or press and hold [Clear] to delete all the digits you entered.*

**4 If necessary, press [Redial/Pause] to enter a two-second pause (P).**

TEL = 0 P

For a longer pause, press [Redial/Pause] again for another two-second pause. Alternatively, you can change the length of the pause. (See <2. PAUSE TIME> of "Menu Descriptions," on p. 8-4.)

**5 Use the numeric keys to dial the country code, the area code, and the fax/telephone number of the other party.****NOTE**

- If you enter a wrong number, press [Stop/Reset] → start again from step 3.
- If you make a mistake, press [◀(-)] or [Clear] to delete the last digit. Or press and hold [Clear] to delete all the digits you entered.

**6 Press [Start].****NOTE**

- To cancel sending after dialing has started, press [Stop/Reset] → follow the instructions in the LCD.
- To take advantage of the speed dialing features of the machine, register frequently used overseas numbers for one-touch or coded speed dialing. (See Chapter 3, "Speed Dialing.")

**Switching Temporarily to Tone Dialing**

Many banks, airline, and hotels provide automated information services that require tone dialing. If the machine is connected to a rotary pulse line, follow this procedure to set the machine temporarily for tone dialing:

**1 Press [FAX].****2 Press [Hook] or pick up the handset of your telephone.****NOTE**

*When using your telephone, you need to connect it to the machine. (See "Connect telephone cable," in the Set-Up Sheet.)*

- 3** Enter a destination using the numeric keys on your telephone or using a one-touch speed dialing key, coded speed dialing code, [Redial/Pause], or the numeric keys on the machine.
- 4** When the recorded message of the information service answers, press [ ✕ ] to switch to tone dialing.  
When [ ✕ ] is pressed, <T> is displayed in the LCD.  
If your telephone line uses tone dialing, go to the next step.
- 5** Use the numeric keys on the machine to enter the numbers requested by the information service.  
Numbers entered after pressing [ ✕ ] will be dialed using tone dialing.
- 6** If you want to receive faxes, press [Start].
- 7** Hang up the handset to disconnect the call.  
Tone dialing is canceled when you disconnect the call.

**NOTE**

*If the offhook alarm starts beeping, make sure that the handset is resting properly on the handset cradle. The offhook alarm can be turned off. (See <4. OFFHOOK ALARM> of "Menu Descriptions," on p. 8-2.)*

This chapter describes the different ways to receive faxes. It also explains how to set the receive mode and to cancel the documents the machine is receiving.

## Setting the Receive Mode

Follow this procedure to set the receive mode:

- 1** Press [Menu].
- 2** Press [◀(-)] or [▶(+)] to select <FAX SETTINGS> → press [OK].
- 3** Press [◀(-)] or [▶(+)] to select <RECEIVE MODE> → press [OK].
- 4** Press [◀(-)] or [▶(+)] to select the receive mode → press [OK].

You can select from the following:

- <FaxOnly> to automatically receive faxes, all calls will be answered as fax transmission. Voice calls will then be disconnected. (See "Receiving Faxes Automatically: FaxOnly Mode," on p. 5-1.)
- <FaxTel> to automatically switch between fax and voice calls. Faxes will be received automatically, and the machine will ring for voice calls. (See "Receiving Both Faxes and Voice Calls Automatically: FaxTel Mode," on p. 5-2.)
- <AnsMode> to receive faxes automatically and route voice calls to an answering machine connected to the machine. (See "Receiving When an Answering Machine Is Connected: AnsMode," on p. 5-3.)
- <Manual> for the connected telephone to ring for fax and voice calls. Fax calls must be answered manually. (See "Receiving Faxes Manually: Manual Mode," on p. 5-4.)



### NOTE

*If you set <MAN/AUTO SWITCH> to <ON> in <FAX SETTINGS> of the Menu, the machine will receive faxes automatically even when the receive mode is set to <Manual>. (See <4. MAN/AUTO SWITCH> of "Menu Descriptions," on p. 8-6.)*

- 5** Press [Stop/Reset] to return to the standby display.



### NOTE

*You can save the toner consumption when printing out the received documents. (See Chapter 10, "Machine Settings," in the User's Guide.)*

## Receiving Faxes Automatically: FaxOnly Mode

If you want to select <FaxOnly>, check the following:

### ■ Select This Mode If:

- you have a dedicated telephone line for fax use only.
- you only want to receive faxes automatically with the machine.

### ■ You Will Need to:


- set <FaxOnly>. (See "Setting the Receive Mode," on p. 5-1.)
- connect the machine to a dedicated telephone line. (See "Connect telephone cable," in the *Set-Up Sheet*.)

**■ When You Receive a Fax Call**

The machine will receive the fax automatically.

**■ When You Receive a Voice Call**

You will not be able to answer the call.

 **NOTE**

- If you connect a telephone to the machine and enable the <INCOMING RING> setting, the telephone will ring when the machine receives a voice call, and then you can answer the call.
- You can select the number of rings. (See <3. INCOMING RING> of "Menu Descriptions," on p. 8-5.)

**Receiving Both Faxes and Voice Calls Automatically: FaxTel Mode****■ Select This Mode If:**

- you only have one telephone line for both fax and telephone use.
- you want to receive faxes automatically as well as voice calls.

**■ You Will Need to:**

set <FaxTel>. (See "Setting the Receive Mode," on p. 5-1.)

**■ When You Receive a Fax Call**

The machine will receive the fax automatically.


**■ When You Receive a Voice Call**

The machine will ring. Pick up the handset to answer the call.

**Customizing FaxTel**

You can customize this mode to control precisely how your machine handles incoming calls. You can adjust the time the machine takes to check whether a call is a fax or voice call, the length of time the machine rings when it is a voice call, and the action the machine must take if no one answers a voice call.

Follow this procedure to customize <FaxTel>:

 **NOTE**

*We recommend you leave these settings on the default settings unless you have a particular need to change them. Certain settings can affect your ability to receive faxes.*



- 1 Press [Menu].
- 2 Press [◀(-)] or [▶(+)] to select <FAX SETTINGS> → press [OK].
- 3 Press [◀(-)] or [▶(+)] to select <RX SETTINGS> → press [OK].
- 4 Press [◀(-)] or [▶(+)] to select <FAX/TEL OPT. SET> → press [OK] twice.
- 5 Press [◀(-)] or [▶(+)] to select the time 0 to 30 seconds that the machine takes to check whether a call is fax or voice call → press [OK] twice.
- 6 Press [◀(-)] or [▶(+)] to select the length of time 15 to 300 seconds that the machine rings when the call is a voice call → press [OK] twice.
- 7 Press [◀(-)] or [▶(+)] to select whether the machine switches to receive mode or disconnects the call if no one answers a voice call after the specified time in step 6 → press [OK].

You can select from the following:

  - <RECEIVE> to switch to receive mode
  - <DISCONNECT> to disconnect the call
- 8 Press [Stop/Reset] to return to the standby display.

## Receiving When an Answering Machine Is Connected: AnsMode

If you want to select <AnsMode>, check the following:

### ■ Select This Mode If:

- you only have one telephone line for both fax and telephone use.
- you want to receive faxes automatically and receive voice messages on your answering machine.

### ■ You Will Need to:

- set <AnsMode>. (See "Setting the Receive Mode," on p. 5-1.)
- connect an answering machine to the machine. (See "Connect telephone cable," in the *Set-Up Sheet*.)



### NOTE

Follow the guidelines below to adjust the answering machine:

- Set the answering machine to answer on the first or second ring.
- The entire message should be no longer than 15 seconds.
- In the message, tell your callers how to send a fax.

### ■ When You Receive a Fax Call

The machine will receive the fax automatically.

### ■ When You Receive a Voice Call

The answering machine will record any voice messages.

## Receiving Faxes Manually: Manual Mode

If you want to select <Manual>, check the following:

### ■ Select This Mode If:

- you only have one telephone line for both fax and telephone use.
- you receive mainly voice calls and sometimes faxes.

### ■ You Will Need to:

- set <Manual>. (See "Setting the Receive Mode," on p. 5-1.)
- connect a telephone to the machine. (See "Connect telephone cable," in the *Set-Up Sheet*.)
- make sure the <REMOTE RX> setting in the <RX SETTINGS> menu is enabled, if you want to start receiving a document from the telephone. (See <5. REMOTE RX> of "Menu Descriptions," p. 8-6.)

### ■ When You Receive a Fax Call

The telephone will ring. Pick up the handset and if you hear a beep → press [Start] on the machine to receive the fax, or enter the two-digit ID code from the telephone → hang up the handset.



#### NOTE

- Receiving faxes entering two-digit ID code from the extension telephone can be used only on a touch tone line.
- If the offhook alarm starts beeping, make sure that the handset is resting properly on the handset cradle. The offhook alarm can be turned off. (See <4. OFFHOOK ALARM> of "Menu Descriptions," on p. 8-2.)

### ■ When You Receive a Voice Call

The telephone will ring. Pick up the handset to answer the call. If the caller wants to send a document after talking to you, ask them to press the start key on their fax machine. When you hear a beep, press [Start] on the machine to receive the fax → hang up the handset.



#### NOTE

*The telephone rings for every call, whether it is a fax call or a voice call. If you want the machine to receive faxes automatically after ringing for a specified number of rings, enable the <MAN/AUTO SWITCH> setting. You can also specify the number of rings before the machine receives faxes. (See <4. MAN/AUTO SWITCH> of "Menu Descriptions," on p. 8-6.)*

## Telstra FaxStream™ Duet (Only for Australia)

In Australia, Telstra offers the FaxStream™ Duet capability. If you subscribe to this service, your line is assigned two numbers: one for fax and one for phone. When the fax number is called, the network sends a specific ringing tone which your machine recognizes and automatically handles as a fax call. If the phone number is called, a different ringing tone is sent out from the network so that the call is handled as a voice call.

This means that there is no switching delay at the caller's end.

- Triple ring (short-short-short) for fax receiving.  
Three short rings, at regular intervals.
- Any ring except triple ring (depending on your switchboard) for telephone conversation.

Contact Telstra for connection information.

If you want to set the machine for network switch, set the receive mode to <NET SWITCH>.

### ■ When You Hear the Telephone Call Ring Pattern

Pick up the handset and talk normally. If you hear a slow beep, it means the call is from a fax machine trying to send a fax. Press [Start] on your machine to receive the fax. If you do not pick up the handset, the machine continues to ring until the other party hangs up. If an answering machine is connected, it takes over the call.

### ■ When You Hear the Fax Call Ring Pattern (Triple Ring)

After the machine rings, it receives the document automatically.

## Telecom FaxAbility (Only for New Zealand)

In New Zealand, Telecom N.Z. offers the FaxAbility capability. This service allows you to assign two numbers to your line: one for fax and one for telephone. When the fax number is called, the network sends a specific ring tone which your machine recognises and automatically handles as a fax call. If the telephone number is called, a different ring tone is sent out from the network so that the call is handled as a voice call. This means that there is no switching delay at the caller's end.

Contact Telecom for connection information.

If you want to set the machine for network switch, set the receive mode to <NET SWITCH>.

### ■ When You Hear the Telephone Call Ring Pattern

Pick up the handset and talk normally. If you hear a slow beep, it means the call is from a fax machine trying to send a fax. Press [Start] on your machine to receive the fax. If you do not pick up the handset, the machine continues to ring until the other party hangs up. If an answering machine is connected, it takes over the call.

### ■ When You Hear the Fax Call Ring Pattern

After the machine rings, it receives the document automatically.

## Receiving Faxes While Performing Other Tasks

Since the machine is a multitasking device, it can receive faxes and voice calls while you are performing other tasks.

- If you receive a fax while you are performing certain tasks, the machine stores the incoming fax in the memory. Then, as soon as you finish your task, the machine automatically prints the fax. You can receive a fax while performing the following tasks:

- Printing
- Scanning (Scan mode)\*
- Scanning to send a fax\*
- Printing reports or lists
- Copying

\* Starts printing the fax as soon as the machine receives it, while performing these tasks.

- You cannot receive a fax while sending a fax.

## Receiving Faxes in the Memory When a Problem Occurs

If the machine encounters a problem when it is receiving a fax, the machine automatically stores the unprinted pages of the fax in the memory, and the LCD displays <RECEIVED IN MEMORY> as well as one or more messages. When the problem is cleared, the machine automatically prints the fax which was stored in the memory. For an explanation of the message(s) and details on the action to take, see "LCD Messages," on p. 7-1.



### NOTE

- *The machine memory can store up to 20 fax jobs or approximately 256 pages.\**
  - \* Based on the condition that the other party sends the fax by the imageCLASS MF5750/MF5770 with Canon Fax Standard Chart No. 1, standard mode. The maximum number of pages that the machine's memory can store differs depending on the other party's machine.
- *Once the pages are printed, they are deleted from the memory.*
- *If the memory becomes full, you will not be able to receive the remaining pages. Contact the other party and ask them to resend the remaining pages of the fax.*

# Canceling Receiving

Follow this procedure if you want to stop receiving a fax before reception is completed:

**1** Press [Stop/Reset] in the Fax mode.

The confirmation message will appear.

CANCEL DURING TX/RX?
< YES NO >

**2** Press [◀(-)] to cancel receiving.

If you change your mind and want to continue receiving, press [▶(+)] for <NO>.



**NOTE**

*You can also cancel receiving, by pressing [Status Monitor]. (See Chapter 7, "Status Monitor," in the User's Guide.)*

This chapter explains how to print out the transaction reports and the lists of settings and recipients registered in the machine.

## Summary of Reports and Lists

The table below shows the reports and lists that can be printed from the machine. Refer to the pages indicated for more details.

Report or List	Description	Details
1-TOUCH LIST	Lists the fax/telephone numbers and names registered for one-touch speed dialing.	p. 3-6
CODED DIAL LIST	Lists the fax/telephone numbers and names registered for coded speed dialing.	p. 3-6
GROUP DIAL LIST	Lists groups registered for group dialing.	p. 3-6
ACTIVITY REPORT	Shows recent facsimile transactions performed by the machine. You can enable or disable automatic printing of this report after every 20 transactions. You can also manually set the machine to print it.	p. 6-2
TX (Transmission) REPORT	Prints after transmission of a document. You can enable or disable this feature, or set the machine to print a report only when an error occurs.	p. 6-3
RX (Reception) REPORT	Prints after reception of a document. You can enable or disable this feature, or set the machine to print a report only when an error occurs.	p. 6-5
USER DATA LIST	Lists the current settings of the machine and the registered sender information.	p. 6-6



### NOTE

- The paper sizes that can be used for reports and lists function are A4 and letter. Only papers loaded in the cassette can be used for reports and lists function.
- You can cancel printing the reports or lists using [Status Monitor]. (See Chapter 7, "Status Monitor," in the User's Guide.)

# ACTIVITY REPORT

## Printing the ACTIVITY REPORT

By default, the machine is set to print an ACTIVITY REPORT after every 20 transactions.

Transactions in an ACTIVITY REPORT are listed chronologically.

01/02 2005 17:28 FAX 1234567		CANON		001	
***** *** ACTIVITY REPORT *** *****					
ST. TIME	DESTINATION TEL/ID	NO.	MODE	PGS	RESULT
*01/02 16:16	2 887 0166	5001	AUTORX ECM	4	OK 00'14
*01/02 16:27		0001	MANUALTX ECM	1	OK 02'00
*01/02 16:30	20 545 8545	0002	TRANSMIT ECM	1	OK 00' 7
01/02 16:53	03 3758 2111	5002	AUTORX ECM	1	OK 00'14
01/02 17:20	1 432 2060	0003	TRANSMIT ECM	0	NG 00'00
01/02 17:20	1 234 2060	0004	TRANSMIT ECM	0	NG 00'00
					0 #0018

Indicates an entry that has appeared on a previous report.

Recipient fax/telephone number/Registered name for speed dial

Transaction mode  
Error correction mode transaction  
Number of page being sent or received when an error occurred.

Error code

[Stop/Reset] was pressed during transaction

Transaction duration

Number of pages that have been sent successfully

Transaction number

### NOTE

The recipient's fax/telephone number (DESTINATION TEL/ID) is not shown for the manually sent faxes.

If you want to print an ACTIVITY REPORT manually, follow this procedure:

- 1 Press [Menu].
- 2 Press [◀(-)] or [▶(+)] to select <REPORTS/LISTS> → press [OK] twice.

```
REPORTS / LISTS
1 .ACTIVITY REPORT
```

## Adjusting the **ACTIVITY REPORT** Setting

You can set the machine to turn on or off automatic printing of the **ACTIVITY REPORT**.

- 1 Press [Menu].
- 2 Press [◀(-)] or [▶(+)] to select <FAX SETTINGS> → press [OK].
- 3 Press [◀(-)] or [▶(+)] to select <REPORT SETTINGS> → press [OK].
- 4 Press [◀(-)] or [▶(+)] to select <ACTIVITY REPORT> → press [OK].
- 5 Press [◀(-)] or [▶(+)] to select the setting you want → press [OK].

You can select from the following:

- <OUTPUT YES> to turn on automatic printing of the **ACTIVITY REPORT**
- <OUTPUT NO> to turn off automatic printing of the **ACTIVITY REPORT**

- 6 Press [Stop/Reset] to return to the standby display.


## Adjusting the **TX REPORT** Setting

The machine can print a TX (transmission) report (TX REPORT or ERROR TX REPORT) after sending a document. You can set it to print every time it sends a document, or only when an error occurs. Alternatively, you can disable printing the report. By default, the machine is set to print a TX report only when an error occurs.

### ■ TX REPORT

01/02 2005 17:52 FAX 1234567	CANON	001
*****		
*** TX REPORT ***		
*****		
TRANSMISSION OK		
TX/RX NO	0004	
RECIPIENT ADDRESS	1 432 2060	
DESTINATION ID		
ST. TIME	01/02 17:52	
TIME USE	00'11	
PAGES SENT	1	
RESULT	OK	

## ■ ERROR TX REPORT

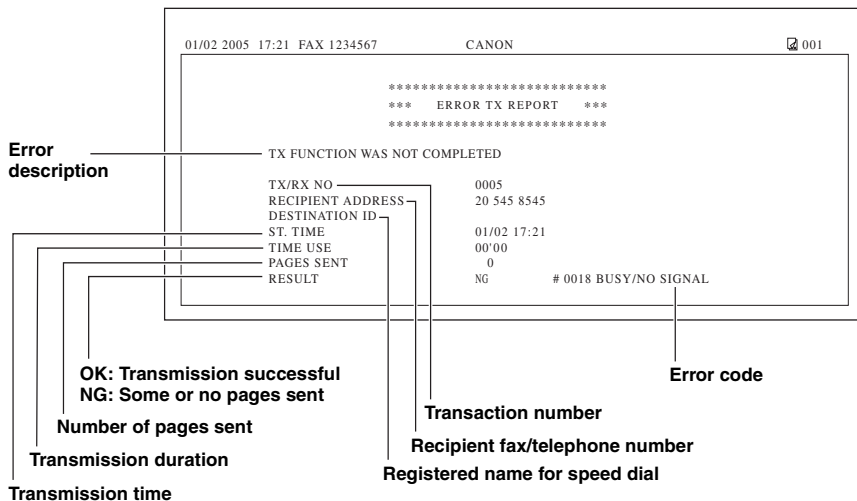

### NOTE

The recipient's fax/telephone number (RECIPIENT ADDRESS) is not shown for the manually sent faxes.

- 1 Press [Menu].
- 2 Press [◀(-)] or [▶(+)] to select <FAX SETTINGS> → press [OK].
- 3 Press [◀(-)] or [▶(+)] to select <REPORT SETTINGS> → press [OK].
- 4 Press [◀(-)] or [▶(+)] to select <TX REPORT> → press [OK].
- 5 Press [◀(-)] or [▶(+)] to select the setting you want → press [OK].

You can select from the following:

- <PRINT ERROR ONLY> to print a report only when a transmission error occurs
- <OUTPUT YES> to print a report every time you send a document
- <OUTPUT NO> to disable printing the report

#### ● If you selected <PRINT ERROR ONLY> or <OUTPUT YES>:

- You can set whether to print the first page of the fax under the report. Press [◀(-)] or [▶(+)] to select <OFF> or <ON> → press [OK].
  - <OFF> to print no first page
  - <ON> to print the first page



### NOTE


Even if <REPORT WITH TX IMAGE> of <TX REPORT> setting is set to <ON>, the machine will not print the first page of the fax when you fax the documents from your computer.

- 6 Press [Stop/Reset] to return to the standby display.



# Adjusting the RX REPORT Setting


The machine can print an RX (reception) report after receiving a document. You can set it to print every time it receives a document, or only when an error occurs. Alternatively, you can disable printing the report. By default, the machine is set not to print an RX REPORT.

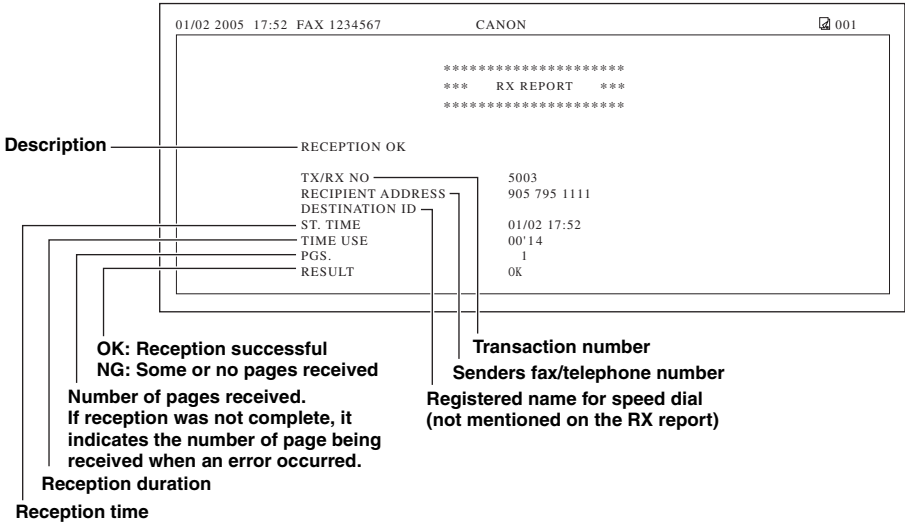

- 1** Press [Menu].
- 2** Press [◀(-)] or [▶(+)] to select <FAX SETTINGS> → press [OK].
- 3** Press [◀(-)] or [▶(+)] to select <REPORT SETTINGS> → press [OK].
- 4** Press [◀(-)] or [▶(+)] to select <RX REPORT> → press [OK].
- 5** Press [◀(-)] or [▶(+)] to select the setting you want → press [OK].  
You can select from the following:
  - <OUTPUT NO> to disable printing the report
  - <PRINT ERROR ONLY> to print a report only when a reception error occurs
  - <OUTPUT YES> to print a report every time you receive a document
- 6** Press [Stop/Reset] to return to the standby display.

# Printing the USER DATA LIST

The USER DATA LIST allows you to check the current settings of the machine as well as the registered sender information. (See "Registering Sender Information," on p. 2-1.)

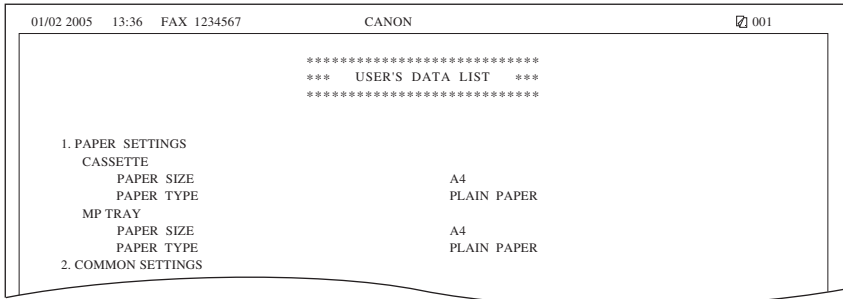

- 1** Press [Menu].
- 2** Press [◀(-)] or [▶(+)] to select <REPORTS/LISTS> → press [OK].
- 3** Press [◀(-)] or [▶(+)] to select <USER DATA LIST> → press [OK].



This chapter describes the problems you might encounter during fax operations and their remedies. It also explains what to do if you cannot solve the problem by yourself.

## LCD Messages

The following messages are displayed in the LCD when the machine performs a function or if it encounters an error.

This section describes messages related to fax functions. For other messages, see Chapter 9, "Troubleshooting," in the *User's Guide*.

---

### CHANGE PAPERSIZE

---

**Cause** When the machine prints the reports or lists, the paper size setting is set to a size other than <LTR>, or <A4>.

**Remedy** Set the paper size setting to <LTR>, or <A4> and load paper of the same size. For the TX report or RX report, the machine automatically prints the report(s) which was stored in the memory.

---

### CHECK DOCUMENT

---

**Cause 1** There is a paper jam in the ADF.

**Remedy** Remove the document you are trying to send in the ADF. (See Chapter 9, "Troubleshooting," in the *User's Guide*.)  
Make sure that the document is not too long or too short. (See Chapter 3, "Document Handling," in the *User's Guide*.)

**Cause 2** The ADF roller rotates without feeding documents.

**Remedy** Fan the edge that will feed into the machine first, then tap the edge of multiple page documents on a flat surface to even the stack.

---

**CHECK PAPER SIZE**


---

- Cause** The size of the paper in the cassette or multi-purpose feeder is different from that of the paper specified in <PAPER SIZE> in <PAPER SETTINGS> of the Menu.
- Remedy 1** Load the correct paper size or change <PAPER SIZE> in <PAPER SETTINGS> of the Menu. For more information, see the following:
- Chapter 2, "Paper Handling," in the *User's Guide*
  - Chapter 5, "Copying," in the *User's Guide*
- Then reset the machine by opening the front cover and then closing it.
- Remedy 2** If you are trying to print a report or list, set the paper size setting to <LTR>, or <A4> and load paper of the same size. Then reset the machine by opening the front cover and then closing it. The report or list will then be printed automatically.

---

**DOCUMENT TOO LONG**


---

- Cause** The document is longer than 1 m, or is not feeding correctly.
- Remedy** Reduce the length of the document to within 1 m, and then re-send it.

---

**MEM IN USE nn %**


---

- Cause** Shows the percentage of the memory currently in use. This message is displayed when you set the document in ADF.
- Remedy** If you need more space, wait for the machine to send any faxes in memory. Also print or delete any documents in memory you no longer needed.

---

**MEMORY FULL**


---

- Cause 1** The memory becomes full during sending, or receiving the fax.
- Remedy** When sending the document, divide it into a few parts or select a lower fax resolution. If you need more space, wait for the machine to send any remaining faxes. If <MEMORY FULL> appears while scanning documents using the ADF, the document being scanned stops in the ADF. In this case, clear the paper jam in the ADF. (See Chapter 9, "Troubleshooting," in the *User's Guide*.)
- Cause 2** The number of fax jobs can be stored in memory reached the maximum.
- Remedy** The machine can store up to 20 fax jobs for each sending and receiving job, or 25 fax jobs including sending and receiving jobs. Wait for the machine to send any faxes in memory. Also print or delete any documents in memory.

---

## NOT REGISTERED

---

**Cause** The one-touch speed dialing key or coded speed dialing code you entered is not registered.

**Remedy** Register the one-touch speed dialing key or coded speed dialing code. For more information, see the following:

- "Registering One-Touch Speed Dialing," on p. 3-1
- "Registering Coded Speed Dialing," on p. 3-3

---

## RECEIVED IN MEMORY

---

**Cause** The machine received the fax in the memory because paper or toner ran out, a paper jam occurred, or incorrect paper size was loaded.

**Remedy** Load correct paper size in the cassette, replace the cartridge, or clear the paper jam. For more information, see the following:

- Chapter 2, "Paper Handling," in the *User's Guide*
- Chapter 8, "Maintenance," in the *User's Guide*
- Chapter 9, "Troubleshooting," in the *User's Guide*

---

## REMOVE MP PAPER

---

**Cause** Paper is loaded in the multi-purpose feeder.

**Remedy** Remove the paper from the multi-purpose feeder.  
If the machine receives the fax or prints the reports and lists when paper is loaded in the multi-purpose feeder, they will be stored in the memory.

## Error Codes

Errors in reports are recorded as error code numbers because there is not enough space to print a detailed description of the error in the report. When errors are recorded in reports, note the error code number, and check it against the table below to learn more about what caused the error and how to remedy it.

---

### #0001

---

**Cause** There may be a document jam.

**Remedy** Clear the jam.

---

**#0003**

---

- Cause 1** A document longer than one foot is being sent from the feeder.
- Remedy** Divide the document into pages and resend from the platen glass.
- Cause 2** Data is too large and taking too long to send a document.
- Remedy** Reduce the scan resolution and resend.
- Cause 3** It's taking too long to receive a page.
- Remedy** Contact the other party and have them reduce the scan resolution or split the document into segments and resend.
- 

**#0005**

---

- Cause 1** The other party's fax machine did not respond within 35 seconds.
- Remedy** Send the document again. Contact the other party and have them check their fax machine. If you are making an overseas call, add pauses to the registered number.
- Cause 2** The other party is not using a G3 fax machine.
- Remedy** Check with the other party, and send the document to a G3 fax machine. If the other party does not have a G3 fax machine, try sending your document using a transmission mode that the other party supports.
- 

**#0009**

---

- Cause** No paper is loaded in the cassette or the cassette is not set properly.
- Remedy** Load paper in the cassette or set the cassette properly.
- 

**#0012**

---

- Cause** The other fax machine has run out of paper and its memory is full.
- Remedy** Contact the other party, and tell them to refill their paper cassette.
-

---

#0018

---

**Cause** The other fax did not respond to redialing. The document was not sent because the other fax machine was busy and did not respond within 55 seconds.

**Remedy** Wait for a while and try again. If you still cannot send the document, contact the other party and have them check if their fax machine is turned on. If the line is busy, wait more and try again.

---

#0037

---

**Cause** The memory is full.

**Remedy** Print out the faxes received in the memory.

---

#0046

---

**Cause** A fax was sent from the fax machine with no TSI (Transmitting Subscriber Identification) signal, used to identify the sending fax machine. when <RX RESTRICTION> is set to <ON>.

**Remedy** Set <RX RESTRICTION> to <OFF>, to receive all faxes sent.

---

#0995

---

**Cause** A waiting fax job has been canceled.

**Remedy** Resend the fax if needed.

---

## Faxing Problems

### *Sending Problems*

---

You cannot send a fax.

---

**Q** Is the machine overheated?

**A** Unplug the machine and let it cool for about 5 minutes. Then plug in the machine and try sending again.

**Q** Did you connect the power cord to the machine just now?

**A** Wait for a while. After connecting the power cord, the machine cannot scan documents immediately.

**Q** Is the machine set for the correct telephone line type (pulse/tone)?

**A** Make sure the machine is set for the correct telephone line type. (See "Setting the Telephone Line Type," on p. 2-3.)

**Q** Is the document loaded?

**A** Remove the document, stack it if necessary, and place it on the platen glass or load it in the ADF correctly. For more information, see Chapter 3, "Document Handling," in the *User's Guide*.

**Q** Is the one-touch speed dialing key or coded speed dialing code you entered registered for the feature you want to use?

**A** Check the one-touch speed dialing key or coded speed dialing code and make sure it is registered correctly. (See Chapter 3, "Speed Dialing.")

**Q** Did you dial a correct number? Or have you been provided with an incorrect number?

**A** Dial the number again, or check that you have the correct number.

**Q** Is the energy saver mode off?

**A** The machine does not scan documents, if it is in the energy saver mode. To restore the machine from the energy saver mode, press [Energy Saver].

**Q** Does the other party's fax machine have enough paper?

**A** Call the other party and ask them to make sure paper is loaded in their fax machine.

**Q** Did an error occur during sending?

**A** Print an **ACTIVITY REPORT** and check for an error. (See "Printing the **ACTIVITY REPORT**," on p. 6-2.)

**Q** Is the telephone line working properly?

**A** Make sure there is a dial tone when you pick up the handset of the telephone connected to the machine. If there is no dial tone, contact your local telephone company.

**Q** Is the receiving fax machine a G3 fax machine?

**A** Make sure the receiving fax machine is compatible with the machine (which is a G3 fax machine).

**Q** The other party's telephone may be busy or the other party's fax machine may be turned off. Is **BUSY/NO SIGNAL** shown on the **ERROR TX REPORT**?

**A** The fax/telephone number you dialed is busy. Try sending the document later.

**A** The other party's fax machine is not working. Contact the other party and have them check their fax machine.



**Q** Did the receiving fax machine answer within 55 seconds (after all automatic redialing attempts)?

**A** Contact the other party and have them check their fax machine. For an overseas call, add pauses to the registered number. (See "Dialing an Overseas Number (With Pauses)," on p. 4-8.)

**Q** Is the In Use/Memory indicator lighting?

**A** The In Use/Memory indicator may light, which means the extension phone is busy. Please wait until the extension phone becomes free.

---

Faxes sent from the machine are spotted or dirty.

---

**Q** Is the sending fax machine working properly?

**A** Check the machine by making a copy. For more information, see Chapter 5, "Copying," in the *User's Guide*.  
If the copy is clear, the problem may be in the receiving fax machine. If the copy is spotted or dirty, clean the platen glass or the read area of the platen glass. For more information, see Chapter 8, "Maintenance," in the *User's Guide*.

**Q** Is the document loaded?

**A** Remove the document, stack it if necessary, and place it on the platen glass or load it in the ADF correctly. For more information, see Chapter 3, "Document Handling," in the *User's Guide*.

---

Cannot send using ECM (Error Correction Mode).

---

**Q** Does the receiving fax machine support ECM?

**A** If the receiving fax machine does not support ECM, the document is sent in the normal mode without error checking.

---

Errors occur frequently while sending.

---

**Q** Are the telephone lines in proper condition? Or do you have a good connection?

**A** Lower the transmission speed. (See <3. TX START SPEED> of "Menu Descriptions," on p. 8-2.)

## Receiving Problems

---

Cannot receive a fax automatically.

---

**Q** Is the machine set to receive automatically?

**A** For the machine to receive faxes automatically, the receive mode must be set to <FaxOnly>, <Fax/Tel>, or <AnsMode>. (See Chapter 5, "Receiving Faxes.") If you have set <AnsMode>, confirm that an answering machine is connected to the machine and that it is turned on with an outgoing message properly recorded.  
If you set <MAN/AUTO SWITCH> to <ON> in <FAX SETTINGS> of the Menu, the machine will receive faxes automatically even when the receive mode is set to <Manual>. (See <4. MAN/AUTO SWITCH> of "Menu Descriptions," on p. 8-6.)

**Q** Is the machine's memory full?

**A** Wait for the machine to finish any fax or print jobs stored in the memory. Then ask the other party to resend the fax.

**Q** Did an error occur during reception?

**A** Print an ACTIVITY REPORT and check for an error. (See "Printing the ACTIVITY REPORT," on p. 6-2.) You can also check the RX REPORT when it is printed automatically. (See "Adjusting the RX REPORT Setting," on p. 6-5.)

**Q** Is the telephone line connected properly?

**A** Make sure all line connections are secure. (See "Connect telephone cable," in the *Set-Up Sheet*.)

---

The machine does not switch automatically between telephone and fax receptions.

---

**Q** Is the machine set to switch automatically between telephone and fax receptions?

**A** For the machine to switch automatically, the receive mode must be set to <AnsMode>. (See Chapter 5, "Receiving Faxes.")  
Confirm that an answering machine is connected to the machine and that it is turned on with an outgoing message properly recorded.

**Q** Is the sending fax machine able to send the CNG signal that tells the machine that the incoming signal is a fax?

**A** Some fax machines cannot send the CNG signal that tells the machine the incoming call is a fax. In such cases, you will have to receive the fax manually. (See "Receiving Faxes Manually: Manual Mode," on p. 5-4.)

---

Cannot receive a document manually.

---

**Q** Is the machine set to receive manually?

**A** For the machine to receive faxes manually, the receive mode must be set to <Manual>. (See Chapter 5, "Receiving Faxes".)

**Q** Did you press [Start], or dial the remote receiving ID after hanging up the handset?

**A** Always press [Start], or dial the remote receiving ID before hanging up the handset. Otherwise you will disconnect the call.

---

Print quality is poor.

---

**Q** Are you using the correct type of paper?

**A** Make sure you load paper that meets the paper requirements for the machine. For more information, see Chapter 5, "Copying," in the *User's Guide*.

**Q** Is the sending fax machine functioning properly?

**A** The sending fax machine usually determines the fax's quality. Call the sender and have them make sure the scanning glass of their fax machine is clean.

**Q** Is the machine in the toner saver mode?

**A** Set <TONER SAVER MODE> to <OFF> in <COMMON SETTINGS> of the Menu. (See Chapter 10, "Machine Settings," in the *User's Guide*.)

---

Faxes do not print.

---

**Q** Is the cartridge installed properly?

**A** Make sure the cartridge is installed properly. For more information, see Chapter 8, "Maintenance," in the *User's Guide*.

**Q** Is the sealing tape removed from the cartridge?

**A** Remove the sealing tape from the toner cartridge. (See "Install cartridge," in the *Set-Up Sheet*.)

**Q** Is any toner left in the cartridge?

**A** Replace the cartridge with a new one. For more information, see Chapter 8, "Maintenance," in the *User's Guide*.

**A** Select <KEEP PRINTING> in <TONER SUPPLY LOW> in <RX SETTINGS> in <FAX SETTINGS> of the Menu. With this setting, the machine will not store documents in the memory even if the toner has run out. (See <7. TONER SUPPLY LOW> of "Menu Descriptions," on p. 8-6.)

**Q** Is the correct paper loaded in the cassette?

**A** Make sure paper is loaded in the cassette. For more information, see Chapter 2, "Paper Handling," in the *User's Guide*.

**A** Load the correct paper size or change <PAPER SIZE> in <PAPER SETTINGS> of the Menu. For more information, see the following:

- Chapter 2, "Paper Handling," in the *User's Guide*
- Chapter 5, "Copying," in the *User's Guide*

---

Faxed images are blotched or uneven.

---

**Q** Are the telephone lines in proper condition? Or do you have a good connection?

**A** ECM (Error Correction Mode) for sending/receiving should eliminate such problems. However, if the telephone lines are in poor condition, you may have to try again. Then call the sender to resend the document.

**Q** Is the sending fax machine functioning properly?

**A** The sending fax machine usually determines the fax's quality. Call the sender and have them make sure the scanning glass of their fax machine is clean.

---

Cannot receive a fax using ECM (Error Correction Mode).

---

**Q** Does the sending fax machine support ECM?

**A** If the sending fax machine does not support ECM, the document is received in the normal mode without error checking.

---

Errors occur frequently while receiving.

---

**Q** Are the telephone lines in proper condition? Or do you have a good connection?

**A** Lower the reception speed. (See <4. RX START SPEED> of "Menu Descriptions," on p. 8-2.)

**Q** Is the sending fax machine functioning properly?

**A** Call the sender and have them check that their fax machine is functioning properly.

## Telephone Problems

---

You cannot dial.

---

**Q** Is the telephone line connected properly?

**A** Make sure all line connections are secure. (See "Connect telephone cable," in the *Set-Up Sheet*.)

**Q** Is the machine set for the correct telephone line type (pulse/tone)?

**A** Make sure the machine is set for the correct telephone line type. (See "Setting the Telephone Line Type," on p. 2-3.)

---

The telephone disconnects while you are talking.

---

**Q** Is the telephone line connected in securely?

**A** Check that the telephone cables are connected securely to the jacks on the machine, the telephone jack on your wall and the jack on your telephone. (See "Connect telephone cable," in the *Set-Up Sheet*.)

## If a Power Cut Occurs

If power is suddenly lost due to an outage or accidental unplugging, a built-in battery retains the user data settings and the speed dialing settings. Any sent or received documents stored in the memory are backed up for about 3 minutes.

During a power cut, functions are limited as follows:

- You cannot send, receive, copy, scan, or print documents.
- You may not be able to make telephone calls using a telephone connected to the machine, depending on the type of telephone you use.
- You can receive telephone calls using a telephone connected to the machine depending on the type of telephone you use.

## If You Cannot Solve the Problem

If you have a problem with the machine and you cannot solve it by referring to the information in this chapter and Chapter 9, "Troubleshooting," in the *User's Guide*, contact your local authorized Canon dealer or the Canon help line.

This chapter explains how to adjust machine settings. The list of all the settings is also provided for your reference.

## Accessing the Machine Settings

- 1 Press [Menu].
- 2 Press [◀(-)] or [▶(+)] to select the menu you want to change → press [OK].  
You have now accessed the settings in the USER DATA LIST.
- 3 Press [◀(-)] or [▶(+)] to select the sub menu you want to change → press [OK].



### NOTE

- For details on sub menus, see "Menu Descriptions" on p.8-1.
- If you press [Stop/Reset] before [OK] is pressed, the item you have selected will not be registered.
- Press [Stop/Reset] to exit from Menu.
- If you press [Menu], the display returns to the previous display.

## Menu Descriptions



### NOTE

- Before changing settings, print the USER DATA LIST to check the current settings. (See "Printing the USER DATA LIST," on p. 6-6.)
- For details on <PAPER SETTINGS>, <COMMON SETTINGS>, <COPY SETTINGS>, <PRINTER SETTINGS>, and <TIMER SETTINGS>, see Chapter 10, "Machine Settings," in the User's Guide.
- For details on <NETWORK SETTING>, see Chapter 3, "Appendix," in the Network Guide.

## FAX SETTINGS

Name	Descriptions
1. RECEIVE MODE	Sets how the machine receives fax and telephone calls.
FaxOnly	The machine automatically receives faxes, all calls will be answered as fax transmission. Voice calls will then be disconnected.
FaxTel	The machine automatically switches between fax and voice calls. Fax will be received automatically, and the machine will ring for voice calls.
AnsMode	The machine receives documents automatically and the answering machine records voice calls.
Manual	The connected telephone rings when the machine receives both fax and voice calls. Fax calls must be answered manually. If <MAN/AUTO SWITCH> is set to <ON>, faxes can be received automatically. (See <4. MAN/AUTO SWITCH> of "Menu Descriptions," on p. 8-6.)

Name	Descriptions
2. USER SETTINGS	The basic operation settings in the Fax mode can be specified.
1. TEL LINE SETTINGS	Specifies the telephone line settings.
1. UNIT TEL NUMBER	Your fax/telephone number can be registered within 20 digits, including spaces. (See "Registering Your Fax/ Telephone Number and Name," on p. 2-2.)
2. TEL LINE TYPE	Selects the telephone line type. (See "Setting the Telephone Line Type," on p. 2-3.)
<b>TOUCH TONE</b>	The telephone line is set for touch tone dialing.
<b>ROTARY PULSE</b>	The telephone line is set for rotary pulse dialing.
3. TX START SPEED	Sets the transmission speed for all documents you send. <b>33600bps/14400bps/9600bps/7200bps/4800bps/2400bps</b>
4. RX START SPEED	Sets the transmission speed for all documents you receive. <b>33600bps/14400bps/9600bps/7200bps/4800bps/2400bps</b>
2. UNIT NAME	You can register your name or your company name within 24 characters, including spaces. (See "Registering Your Fax/Telephone Number and Name," on p. 2-2.)
3. TX TERMINAL ID	Sets the options for the sender Information.
<b>ON</b>	Sender information will be printed in small type at the top of each page.
1. TTI POSITION	Selects whether the sender Information is positioned inside or outside the image area. <b>OUTSIDE IMAGE:</b> Terminal ID is printed outside the image border. <b>INSIDE IMAGE:</b> Terminal ID is printed inside the image border.
2. TEL NUMBER MARK	You can prefix your number with the abbreviations <b>FAX</b> or <b>TEL</b> in your sender information.
<b>OFF</b>	Sender information will not be printed.
4. OFFHOOK ALARM	Enables/disables the offhook alarm that alerts you when the handset is not in the handset cradle.
<b>ON</b>	The offhook alarm sounds when the handset of extension telephone is left off the hook.
<b>OFF</b>	No offhook alarm.
5. R-KEY SETTING	The R-KEY setting allows you to set how the fax connects to PBX. If your fax machine is not connected through a PBX, you can ignore these settings.
<b>PSTN</b>	The fax is connected to the outside line.
<b>PBX</b>	The fax is connected through a PBX. Select one of the following settings, depending on the type of PBX in service. Two settings are available: <b>HOOKING</b> , <b>PREFIX</b>



Name	Descriptions
6. RX RESTRICTION	Sets whether to receive a fax by detecting the TSI (Transmitting Subscriber Identification) signal, used to identify the sending fax machine.
<b>OFF</b>	All receptions are conducted.
ON	Receives the fax only from the sending fax machine that sends the TSI signal.
3. REPORT SETTINGS	Sets the settings related to report functions.
1. TX REPORT	Enables/disables automatic printing of a transmission report.
<b>PRINT ERROR ONLY</b>	Prints a report only when a transmission error occurs.
REPORT WITH TX IMAGE	Enables/disables printing of the first page of the fax under the report.
<b>OFF</b>	No first page is printed.
ON	Prints the first page.
OUTPUT YES	Prints a report every time you send a document.
REPORT WITH TX IMAGE	Enables/disables printing of the first page of the fax under the report.
<b>OFF</b>	No first page is printed.
ON	Prints the first page.
OUTPUT NO	No report is printed.
2. RX REPORT	Enables/disables automatic printing of a reception report.
<b>OUTPUT NO</b>	No report is printed.
PRINT ERROR ONLY	Prints a report only when a reception error occurs.
OUTPUT YES	Prints a report every time you receive a document.
3. ACTIVITY REPORT	Enables/disables automatic printing of a transaction report after every 20 transactions.
<b>OUTPUT YES</b>	Prints a report automatically after every 20 transactions.
OUTPUT NO	No ACTIVITY REPORT is printed.

Name	Descriptions
4. TX SETTINGS	Sets the transmission functions.
1. ECM TX	The ECM (Error Correction Mode) transmission is turned on or off.
<b>ON</b>	All transmissions are conducted with ECM if the other party's fax supports ECM.
<b>OFF</b>	ECM is turned off.
2. PAUSE TIME	Sets the length of the pause you insert into a dialing sequence. 1SEC to 15SEC ( <b>2SEC</b> )
3. AUTO REDIAL	Sets whether to perform automatic redial when the other line is busy or no answer.
<b>ON</b>	Customizes the redial operation.
1. REDIAL TIMES	Sets the number of retries. 1TIMES to 10TIMES ( <b>2TIMES</b> )
2. REDIAL INTERVAL	Sets period of time between redialing. 2MIN. to 99MIN. ( <b>2MIN.</b> )
<b>OFF</b>	After the first attempt at dialing fails, redialing is not attempted.

Name	Descriptions
4. TIME OUT	Enables/disables automatic scanning of documents after the fax number is entered.
<b>ON</b>	Scanning begins automatically in 5 or 10 seconds after you enter the fax number.
<b>OFF</b>	Press [Start] to scan document. Otherwise, AUTO CLEAR function activates and the LCD returns to standby display after 1 minute. (See Chapter 10, "Machine Settings," in the <i>User's Guide</i> .)
5. RX SETTINGS	Sets the reception functions.
1. ECM RX	The ECM (Error Correction Mode) reception is turned on or off.
<b>ON</b>	All receptions are conducted with ECM if the other party's fax supports ECM.
<b>OFF</b>	ECM is turned off.
2. FAX/TEL OPT. SET	If you select <FaxTel> as the receive mode, customizes its settings.
1. RING START TIME	Selects the time the machine takes to check whether a call is a fax or voice call. 0SEC to 30SEC ( <b>8SEC</b> )
2. F/T RING TIME	Selects the ring length for voice calls. 15SEC to 300SEC ( <b>22SEC</b> )
3. F/T SWITCH ACTION	Selects whether the machine switches to receive mode after the ring time has elapsed, or whether it disconnects the call. <b>RECEIVE, DISCONNECT</b>
3. INCOMING RING	Sets whether the telephone rings when it receives a voice call, enabling you to answer the call. This function is only available when the fax receive mode is set to <FaxOnly>.
<b>OFF</b>	The telephone does not ring when it receives a voice call.
<b>ON</b>	The telephone rings when it receives a voice call if a telephone is connected.
RING COUNT	Sets the number of incoming rings. The telephone will be disconnected after the specified times. 1TIMES to 99TIMES ( <b>2TIMES</b> )

Name	Descriptions
4. MAN/AUTO SWITCH	Sets whether the machine switches to the document receive mode after the connected extension telephone rings for a specified length of time in the manual receive mode.
ON	The machine switches to document receive mode after the connected extension telephone rings for a specified time.
F/T RING TIME	Sets the length of time to elapse before the machine switches to the document receiving. 1SEC to 99SEC (15SEC)
OFF	The connected extension telephone keeps ringing until someone answers the call manually.
5. REMOTE RX	Enables/disables remote receiving.
ON	The machine enables remote receiving.
REMOTE RX ID	You can dial code on the remote extension to start receiving a document. A combination of two characters using 0 to 9, ✕ and # is possible. The default character is 25.
OFF	The machine disables remote receiving.
6. RX REDUCTION	Receives images at a reduced size.
ON	Image reduction is turned on.
1. RX REDUCTION	<b>AUTO SELECTION:</b> Reducing size is set automatically. <b>FIXED REDUCTION:</b> Reducing size is preset. 97%, 95%, <b>90%</b> , 75%
2. SELECT REDUCE DIR	<b>VERTICAL ONLY:</b> Reduction is performed in the vertical direction only. <b>HORIZ &amp; VERTICAL:</b> Reduction is performed in the horizontal and vertical direction.
OFF	Image reduction is turned off.
7. TONER SUPPLY LOW	Allows you to set how the machine responds when the toner supply is low.
<b>RX TO MEMORY</b>	The machine receives all documents in the memory.
KEEP PRINTING	The keep printing function is turned on. With this setting, the machine will not store documents in the memory if the toner has run out. Re-set to <RX TO MEMORY> after replacing the cartridge with a new one.

Name	Descriptions
6. SYSTEM SETTINGS	Sets the functions of FAX DEFAULT.
1. FAX DEFAULT	Sets the default for the fax functions.
1. SCAN DENSITY	Sets the scan density.
<b>STANDARD</b>	Suitable for standard documents.
DK	Suitable for light documents.
LT	Suitable for dark documents.
2. RESOLUTION	Sets the fax resolution.
<b>STANDARD</b>	Suitable for most text-only documents.
FINE	Suitable for fine-print documents.
PHOTO	Suitable for documents that contains photographs.
SUPER FINE	Suitable for documents that contain fine print and images. (The resolution is four times that of STANDARD.)
ULTRA FINE	Suitable for documents that contain fine print and images. (The resolution is eight times that of STANDARD.)

(The factory default setting is in **bold** face.)

**ADD. REGISTRATION**

Name	Descriptions
1. 1-TOUCH SPD DIAL	Registers the information on one-touch speed dialing. (See "Registering One-Touch Speed Dialing," on p. 3-1.) Up to 11 destinations can be registered.
1. TEL NUMBER ENTRY	Registers the other party's fax/telephone number (max. 120 digits, including spaces).
2. NAME	Registers the other party's name (max. 16 characters, including spaces).
2. CODED SPD DIAL	Registers the information on coded speed dialing. (See "Registering Coded Speed Dialing," on p. 3-3.) Up to 100 destinations can be registered.
1. TEL NUMBER ENTRY	Registers the other party's fax/telephone number (max. 120 digits, including spaces).
2. NAME	Registers the other party's name (max. 16 characters, including spaces).
3. GROUP DIAL	Registers the information on group dialing. (See "Registering Group Dialing," on p. 3-4.) Up to 110 destinations can be registered.
1. TEL NUMBER ENTRY	Registers the other party's fax/telephone numbers by specifying the one-touch speed dialing keys or coded speed dialing codes.
2. NAME	Registers the other party's name (max. 16 characters, including spaces).

**REPORTS / LISTS**

Name	Descriptions
1. ACTIVITY REPORT	Prints a report manually before it is printed automatically after every 20 transactions.
2. SPEED DIAL LIST	Prints the list of the fax/telephone numbers registered for one-touch speed dialing keys, coded speed dialing codes, or group dialing. 1-TOUCH LIST, CODED DIAL LIST, GROUP DIAL LIST
3. USER DATA LIST	Prints out a list of items set or registered in the Menu.

This chapter lists the specifications for the fax function of the machine, and the index.

## Specifications

Specifications are subject to change without notice.

### *Facsimile*

<b>Applicable Line</b>	Public Switched Telephone Network (PSTN)
<b>Compatibility</b>	G3
<b>Data Compressing System</b>	MH, MR, MMR, JBIG
<b>Modem Speed</b>	33.6/31.2/28.8/26.4/24/21.6/19.2/16.8/14.4/12/9.6/7.2/4.8/2.4 Kbps Automatic fallback
<b>Transmission Speed</b>	Approx. 3 seconds/page* at 33.6 Kbps, ECM-JBIG, transmitting from the memory * Based on ITU-T No. 1 Chart, Standard Mode.
<b>Transmission/Reception Memory</b>	Transmission: Maximum approx. 256 pages* Reception: Maximum approx. 256 pages* * Based on ITU-T No. 1 Chart, Standard Mode.
<b>Fax Scanning Speed</b>	0.8 msec/line* * Based on ITU-T No. 1 Chart.
<b>Fax Resolution</b>	STANDARD: 8 pels/mm x 3.85 lines/mm FINE: 8 pels/mm x 7.7 lines/mm PHOTO: 8 pels/mm x 7.7 lines/mm SUPER FINE: 8 pels/mm x 15.4 lines/mm ULTRA FINE: 16 pels/mm x 15.4 lines/mm

<b>Dialing</b>	<ul style="list-style-type: none"> <li>• Speed dialing <ul style="list-style-type: none"> <li>One-touch speed dialing (11 destinations)</li> <li>Coded speed dialing (100 destinations)</li> <li>Group dialing (110 destinations)</li> <li>Directory dialing (with Directory key)</li> </ul> </li> <li>• Regular dialing (with numeric keys)</li> <li>• Automatic redialing</li> <li>• Manual redialing (with Redial/Pause key)</li> </ul>
<b>Networking</b>	<ul style="list-style-type: none"> <li>• Sequential broadcast (112 destinations)</li> <li>• Automatic reception</li> <li>• Remote reception by telephone (Default ID: 25)</li> <li>• ACTIVITY REPORT (after every 20 transactions)</li> <li>• TX (Transmission)/RX (Reception) REPORT</li> <li>• TTI (Transmit Terminal Identification)</li> <li>• NET SWITCH*</li> </ul>

\* This feature is available for certain countries only.

## ***Telephone***

<b>Connection</b>	Telephone/answering machine (CNG detecting signal)
-------------------	--



## Symbols

- ◀ (-), ▶ (+) keys, 1-2

## Numerics

### 1-TOUCH LIST

- description, 6-1
- printing, 3-6
- sample, 3-6

1-TOUCH SPD DIAL setting, 8-8

## A

### ACTIVITY REPORT

- description, 6-1, 8-3, 8-8
- printing, 6-2
- setting, 6-3

ADD. REGISTRATION settings, 8-8

Alarm indicator, 1-2

ANS. MACHINE MODE, 5-3

AUTO REDIAL setting, 8-4

## C

CHANGE PAPERSIZE message, 7-1

CHECK DOCUMENT message, 7-1

CHECK PAPER SIZE message, 7-2

Clear key, 1-2

Coded Dial key, 1-1

### CODED DIAL LIST

- description, 6-1
- printing, 3-6

CODED SPD DIAL setting, 8-8

### Coded speed dialing

- changing, deleting, 3-4
- description, 3-1
- registering, 3-3
- using, 4-5

Customer support, 1-1

## D

Date and Time, entering, 2-2

### Dialing

- coded speed, 3-1, 3-3, 4-5
- group, 3-1, 3-4, 4-5
- methods, 4-4
- one-touch speed, 3-1, 4-4
- regular, 4-4

DOCUMENT TOO LONG message, 7-2

## E

ECM RX setting, 8-5

ECM TX setting, 8-4

Energy Saver key, 1-2

Error Codes, 7-3

### Exposure

- adjusting, 4-3
- key, 1-2

## F

F/T RING TIME setting, 8-5, 8-6

F/T SWITCH ACTION setting, 8-5

FAX DEFAULT setting, 8-7

FAX key, 1-2

Fax mode, 1-3

FAX ONLY MODE, 5-1

FAX SETTINGS, 8-1

FAX/TEL OPT. SET setting, 8-5

FaxTel, 8-1

## G

### GROUP DIAL LIST

- description, 6-1
- printing, 3-6

GROUP DIAL setting, 8-8

### Group dialing

- changing, deleting, 3-5
- description, 3-1
- registering, 3-4
- using, 4-5

## I

### Image Quality

- adjusting, 4-3
- key, 1-2

In Use indicator, 1-1

INCOMING RING setting, 8-5

## K

KEEP PRINTING setting, 8-6

Keys (See also individual key names), 1-1

## L

LCD, 1-2

LCD messages (See also individual messages), 7-1

**M**

- Machine settings, 8-1
- MAN/AUTO SWITCH setting, 8-6
- MANUAL MODE, 5-4
- Manual sending, 4-2
- MEMORY FULL message, 7-2
- Memory sending, 4-1
- Menu
  - descriptions, 8-1
  - key, 1-2

**N**

- NOT REGISTERED message, 7-3
- Numeric keys, 1-2

**O**

- OFFHOOK ALARM setting, 8-2
- OK key, 1-2
- One-touch speed dialing
  - changing, deleting, 3-2
  - description, 3-1
  - keys, 1-1
  - registering, 3-1
  - using, 4-4
- Overseas number, dialing, 4-8

**P**

- Pause key, 1-1
- PAUSE TIME setting, 8-4
- Pauses, dialing with, 4-8
- Problems
  - receiving, 7-8
  - sending, 7-5
  - telephone, 7-11

**R**

- RECEIVE MODE settings, 8-1
- Receive Mode settings, 5-1
- RECEIVED IN MEMORY message, 7-3
- Receiving
  - automatically, 5-1
  - canceling, 5-6
  - in memory when a problem occurs, 5-5
  - manually, 5-4
  - problems, 7-8
  - when an answering machine is connected, 5-3
  - while performing other tasks, 5-5
- Receiving Both Faxes and Voice Calls Automatically
  - FaxTel Mode, 5-2
- REDIAL INTERVAL setting, 8-4
- REDIAL TIMES setting, 8-4
- Redialing
  - automatically, 4-6
  - manually, 4-6

**Registering**

- coded speed dialing, 3-3
- fax/telephone number/name, 2-1
- group dialing, 3-4
- one-touch speed dialing, 3-1
- sender information, 2-1
- REMOTE RX ID setting, 8-6
- REMOTE RX setting, 8-6
- REMOVE MP PAPER message, 7-3
- REPORT SETTINGS settings, 8-3
- Reset key, 1-2
- RESOLUTION setting, 8-7
- RING COUNT setting, 8-5
- RING START TIME setting, 8-5
- R-KEY SETTING setting, 8-2
- ROTARY PULSE setting, 8-2
- RX (Reception) REPORT
  - description, 6-1, 8-3
  - setting, 6-5
- RX REDUCTION setting, 8-6
- RX REPORT setting, 8-3
- RX SETTINGS settings, 8-5
- RX START SPEED setting, 8-2
- RX TO MEMORY setting, 8-6

**S**

- SCAN DENSITY setting, 8-7
- Sender information
  - description, 2-1
  - registering, 2-1
- Sending
  - manual, 4-2
  - memory, 4-1
  - methods, 4-1
  - problems, 7-5
  - sequential broadcasting, 4-7
- Sequential broadcasting, 4-7
- Specifications, 9-1
- SPEED DIAL LIST setting, 8-8
- Speed dialing
  - coded, 3-1, 3-3
  - description, 3-1
  - group, 3-1, 3-4
  - lists, 3-6
  - methods, 3-1
  - one-touch, 3-1
- Standby display, 1-3
- Start key, 1-2
- Status Monitor key, 1-2
- Stop/Reset key, 1-2
- Support, customer, 1-1
- SYSTEM SETTINGS settings, 8-7

## T

- TEL LINE SETTINGS setting, 8-2
- TEL LINE TYPE setting, 8-2
- TEL NUMBER MARK setting, 8-2
- Telephone line type setting, 2-3
- Telephone problems, 7-11
- TIME OUT setting, 8-5
- Time, entering, 2-2
- TONER SUPPLY LOW setting, 8-6
- TOUCH TONE setting, 8-2
- Troubleshooting, 7-1
- TTI POSITION setting, 8-2
- TX (Transmission) REPORT
  - description, 6-1, 8-3
  - setting, 6-3
- TX REPORT setting, 8-3
- TX SETTINGS settings, 8-4
- TX START SPEED setting, 8-2
- TX TERMINAL ID setting, 8-2

## U

- UNIT NAME setting, 8-2
- UNIT TEL NUMBER setting, 8-2
- USER DATA LIST
  - description, 6-1
  - printing, 6-6
- USER DATA LIST setting, 8-8
- USER SETTINGS settings, 8-2



The contents of this guide are  
printed on 70% recycled paper.

# Canon

**CANON INC.**

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

**CANON U.S.A., INC.**

One Canon Plaza, Lake Success, NY 11042, U.S.A.

**CANON CANADA INC.**

6390 Dixie Road Mississauga, Ontario L5T 1P7, Canada

**CANON EUROPA N.V.**

Bovenkerkerweg 59-61 P.O. Box 2262, 1180 EG Amstelveen, The Netherlands

**CANON FRANCE S.A.**

17, quai du President Paul Doumer 92414 Courbevoie Cedex, France

**CANON (U.K.) LTD.**

Woodhatch, Reigate, Surrey, RH2 8BF, United Kingdom

**CANON DEUTSCHLAND GmbH**

Europark Fichtenhain A10, 47807 Krefeld, Germany

**CANON ITALIA S.p.A.**

Via Milano, 8-20097 San Donato Milanese (MI) Italy

**CANON LATIN AMERICA, INC.**

703 Waterford Way, Suite 400, Miami, Florida 33126, U.S.A.

**CANON AUSTRALIA PTY. LTD**

1 Thomas Holt Drive, North Ryde, Sydney, N.S.W. 2113, Australia

**CANON CHINA CO., LTD**

15F, North Tower, Beijing Kerry Centre, 1 Guang Hua Road, Chao Yang District,  
100020, Beijing, China

**CANON SINGAPORE PTE. LTD.**

1 HarbourFront Avenue #04-01 Keppel Bay Tower Singapore 098632

**CANON HONGKONG CO., LTD**

19/F., The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon, Hong Kong

**230V**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>