


TR

MUSIC WORKSTATION

Operation Guide

Please read this guide first

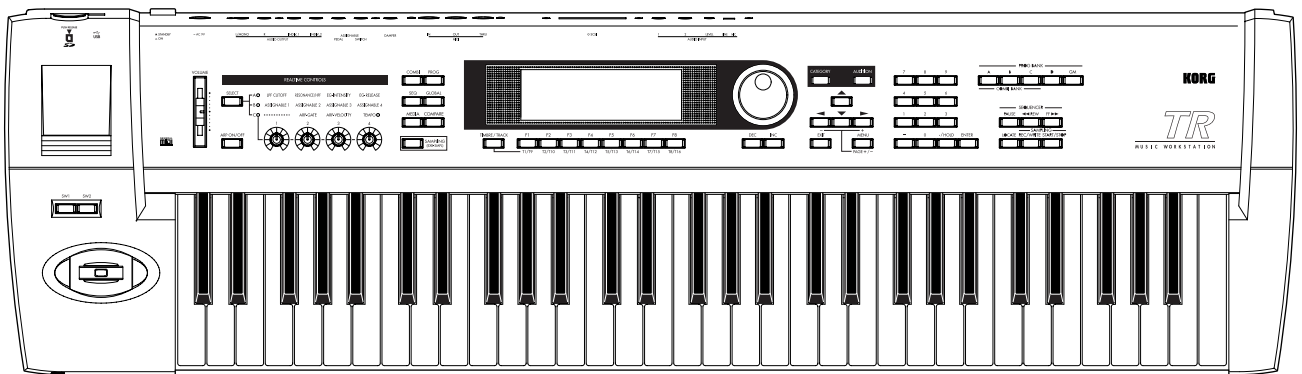

HYPER INTEGRATED
SYNTHESIS SYSTEM



KORG

To ensure long, trouble-free operation, please read this manual carefully.

Precautions

Location

Using the unit in the following locations can result in a malfunction.

- In direct sunlight
- Locations of extreme temperature or humidity
- Excessively dusty or dirty locations
- Locations of excessive vibration

Power supply

Please connect the designated AC/AC power supply to an AC outlet of the correct voltage. Do not connect it to an AC outlet of voltage other than that for which your unit is intended.

Interference with other electrical devices

This product contains a microcomputer. Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Handling

To avoid breakage, do not apply excessive force to the switches or controls.

Care

If the exterior becomes dirty, wipe it with a clean, dry cloth. Do not use liquid cleaners such as benzene or thinner, or cleaning compounds or flammable polishes.

Keep this manual

After reading this manual, please keep it for later reference.

Keeping foreign matter out of your equipment

- Never set any container with liquid in it near this equipment. If liquid gets into the equipment, it could cause a breakdown, fire, or electrical shock.
- Be careful not to let metal objects get into the equipment. If something does slip into the equipment, unplug the AC/AC power supply from the wall outlet. Then contact your nearest Korg dealer or the store where the equipment was purchased.

THE FCC REGULATION WARNING (for U.S.A.)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Unauthorized changes or modification to this system can void the user's authority to operate this equipment.

CE mark for European Harmonized Standards

CE mark which is attached to our company's products of AC mains operated apparatus until December 31, 1996 means it conforms to EMC Directive (89/336/EEC) and CE mark Directive (93/68/EEC). And, CE mark which is attached after January 1, 1997 means it conforms to EMC Directive (89/336/EEC), CE mark Directive (93/68/EEC) and Low Voltage Directive (73/23/EEC).

Also, CE mark which is attached to our company's products of Battery operated apparatus means it conforms to EMC Directive (89/336/EEC) and CE mark Directive (93/68/EEC).

Data handling

Malfunctions due to incorrect operation may cause the contents of memory to be lost, so we recommend that you save important data on the external media (SD card etc.). Please be aware that Korg will accept no responsibility for any damages which may result from loss of data.

About copyright

This device is intended for use with material of which you yourself are the copyright owner or for which you have received permission from the copyright owner to duplicate. If you are not the copyright owner or have not received permission from the copyright owner to duplicate the material, you are in violation of copyright law, and may be liable for damages and penalties. If you are unsure of your rights to the material, please consult a legal specialist.

* Company names, product names, and names of formats etc. are the trademarks or registered trademarks of their respective owners.

Thank you for purchasing the **Korg TR music workstation**.
To ensure trouble-free enjoyment, please read this manual carefully and use the instrument as directed.

About this manual

The owner's manuals and how to use them

The TR come with the following owner's manuals.

- Operation Guide
- Parameter Guide
- Voice Name List (included in the CD-ROM)

Operation Guide

First read this manual carefully to gain a basic understanding of the instrument and to learn basic operation.

"Introduction" explains the function of each part, how to make connections, basic operation, and gives an overview of each mode.

"Quick Start" explains basic topics (selecting sounds, convenient functions for performance). If you wish to begin playing immediately, read this section first.

"Basic Functions" contains mode-by-mode explanations of what you need to know to edit sounds, record on the sequencer, and record samples (If the separately sold EXB-SMPL option is installed). This section also explains how to use the arpeggiator, effects.

"Appendices" contains information on troubleshooting, specifications, and various other information.

Parameter Guide

The Parameter Guide contains explanations and other information regarding the operations of the parameters and settings on the TR. The explanations are organized by mode, and page. Explanations and other information on the effects and their parameters are also provided for each effect.

Refer to this guide when an unfamiliar parameter appears in the display, or when you need to know more about a particular function.

Voice Name List

This lists the multisamples and drumsamples that are built into the TR, and the factory preset combinations, programs, drum kits, and user arpeggio patterns. Refer to these lists when you wish to know more about the preloaded sounds.

Conventions in this manual

References to the TR

The TR is available in 88-key, 76-key and 61-key models, but all three models are referred to without distinction in this manual as "the TR." Illustrations of the front and rear panels in this manual show the 61-key model, but the illustrations apply equally to the 76-key and 88-key models.

Abbreviations for the manuals OG, PG, VNL

References to the manuals included with the TR are abbreviated as follows in this document.

OG: Operation Guide

PG: Parameter Guide

VNL: Voice Name List (included in the CD-ROM)

Switches and knobs []

References to the switches, dials, and knobs on the panel are enclosed in square brackets [].

Parameters in the LCD display screen " "

Parameters displayed in the LCD screen are enclosed in double quotation marks " ".

Boldface type

Parameter values are printed in boldface type. Content that is of particular importance is also printed in boldface type.

Procedure steps ① ② ③ ...

Steps in a procedure are listed as ① ② ③ ...

p. ■, PG p. ■

These symbols indicate a reference page number in the Operation Guide or in the Parameter Guide.

Symbols , ,

These symbols respectively indicate cautions, advice, and MIDI-related explanations.

Example screen displays

The values of the parameters shown in the example screens of this manual are only for explanatory purposes, and may not necessary match the values that appear in the LCD screen of your instrument.

MIDI-related explanations

CC# is an abbreviation for Control Change Number. In explanations of MIDI messages, **numbers in square brackets []** always indicate hexadecimal numbers.

Table of Contents

Introduction 1

Overview 1

Main features 1

Overview of the modes 3

Front and rear panel 5

Front panel 5

Rear panel 8

Objects and functions in the LCD screen 10

Setup 12

Connecting audio equipment etc. 12

1. Connecting the AC/AC power supply .12

2. Connecting audio output devices 12

3. Connecting pedals etc. 13

Connections to MIDI equipment/computers. 13

1. Connections to MIDI equipment..... 13

2. Connections to a computer 13

Inserting/removing a card in the

SD card slot 14

Connecting separately sold options 14

1. Audio input connections 14

2. SCSI connections..... 14

Basic operation 15

Selecting modes, pages and tabs; setting parameters 15

1. Selecting modes 15

2. Selecting pages and tabs..... 15

3. Selecting parameters 16

4. Setting a parameter 16

Quick Start 18

Turning the power on/off 18

1. Turning the power on 18

2. Turning the power off..... 18

Listening to the demo songs 19

Loading demo playback data 19

Selecting and playing a demo song in the Sequencer mode 19

Playing a cue list..... 20

Selecting and playing a program..... 21

Selecting a program 21

Selecting and playing a combination..... 23

Selecting a combination 23

Using controllers to modify the sound 24

Joystick 24

SW1, SW2 24

REALTIME CONTROLS [1], [2], [3], [4] 25

Keyboard 26

Foot pedals 26

Using the arpeggiator while you play 27

Using the arpeggiator in Program mode 27

Settings using controllers 27

Settings in the LCD screen 28

Using the arpeggiator as you play in

Combination mode 29

Settings in the LCD screen 29

Playing with the RPPR (Realtime Pattern Play/Recording) function 31

Simple program editing 32

Performance Edit 32

Realtime controls 32

Simple combination editing 33

An example of editing 33

Sampling (recording a sample) 35

Sampling a sound and playing it back as "one-shot" 35

Using the insert effect while you sample 36

Assigning a name to the sample or multisample..... 37

Saving sample data 38

Converting a multisample into a program.. 38

Sampling and looping a drum phrase..... 39

Basic functions	42	Producing a song	65
Saving data	42	Creating the basic song	65
Types of data that can be saved	42	Song editing methods	71
Writing to internal memory	43	Creating and playing a Cue List	73
Writing a program or combination	43	Creating and recording RPPR (Realtime Pattern	
Writing global settings, user drum kits, and		Play/Record)	75
user arpeggio patterns	45	Creating RPPR data	75
Saving on external media	46	RPPR playback	76
MIDI data dump	47	Realtime-recording an RPPR	
Restoring the factory settings	48	performance	76
Loading the preloaded data	48	Recording the sound of a combination or	
Program mode	49	program	77
How a program is organized	49	Auto Song Setup function	77
Basic program editing	49	Copy From Combi (Sequencer mode page	
Oscillator settings	50	menu commands)	78
Controller settings	51	Caution and other functions in Sequencer	
Pitch settings	51	mode	80
Filter settings	52	Recording on the TR	81
Amplifier settings	54	Recording a track,	
LFO settings	55	and recording a pattern	81
Arpeggiator settings	55	Sampling mode	86
BUS settings	55	Features of EXB-SMPL	86
Insert Effect settings	55	How Sampling mode is organized	87
Master Effect settings	55	In Sampling mode	87
More about Alternate Modulation	56	Samples and Multisamples	87
Auto Song Setup function	56	Sampling	88
Combination mode	57	Preparations for sampling	88
How a combination is organized	57	Manual sampling	89
Basic combination editing	57	Auto sampling	90
Timbre 1–8 program, pan and volume	58	Creating multisample indexes and	
Controller settings	59	sampling	91
Settings for status, MIDI channel, and		Loop settings	92
playing mode	59	The grid display	92
Note timing and scale settings	60	Sample (waveform data) editing	93
Layer and split settings	60	Multisample editing	94
Velocity switch settings	61	Editing the indices	94
MIDI filter settings	61	Modifying the settings of an index	94
Arpeggiator settings	61	Converting a multisample to a program	94
Bus settings	61	Using Time Slice to divide a sample and play it	
Insert Effect settings	61	in Sequencer mode	95
Master Effect settings	61	Global mode	97
Auto Song Setup function	62	Creating a drum kit	97
Sequencer mode	63	About drum kits	97
Features of the sequencer	63	Editing a drum kit	98
The structure of Sequencer mode	64	Media mode	100
Songs	64	How Media mode is organized	100
Patterns	64	Media that can be used	100
Cue List	64	Formatting media	100
		SD card handling	100
		About the write protect setting of an	
		SD card	100

Loading data	101	Adjusting the contrast (brightness) of the LCD screen	120
Types of data that can be loaded.....	101	Using this instrument as a data filer.....	120
Data loading procedure.....	101	Tap tempo control.....	120
Saving data	102	Shortcuts	120
Types of data that can be saved	102		
Arpeggiator settings	103	Appendices	121
Arpeggiator settings for a program	103	Troubleshooting	121
Arpeggiator on/off	103	Specifications and options	124
Arpeggiator settings.....	103	Specifications	124
Linking the arpeggiator to a program.....	105	Operating requirements for connection to a computer.....	125
Arpeggiator settings in Combination and Sequencer modes.....	105	Options	125
Arpeggiator on/off	105	MIDI Implementation Chart.....	126
Arpeggiator settings.....	105	Index.....	127
Linking the arpeggiator to the combination.....	106		
Creating a user arpeggio pattern.....	107		
About user arpeggio patterns.....	107		
Editing a user arpeggio pattern.....	107		
Dual arpeggiator editing.....	110		
Synchronizing the arpeggiator.....	111		
Synchronization between arpeggiators A and B.....	111		
Synchronization between the arpeggiators and sequencer in Sequencer mode.....	111		
Synchronization with an external sequencer in Program, Combination, or Sequencer modes	111		
Effects settings.....	112		
Effects in each mode.....	112		
Routing settings and effect settings.....	112		
Effect settings for a program.....	112		
Effect settings in combination, and song	114		
Effect settings in Sampling mode (requires the EXB-SMPL option)	114		
Effect settings for the AUDIO INPUT (requires the EXB-SMPL option)	115		
About dynamic modulation (Dmod).....	115		
Other functions	117		
Tuning to another instrument/Transposing	117		
Bypassing the effects	117		
Specifying the function of the Assignable Switch and Assignable Pedal	117		
Selecting different Velocity and Aftertouch curves.....	118		
Creating original scales	118		
Changing the scale.....	118		
Setting the function of [SW1] and [SW2] ..	119		
Setting the B-mode functions of REALTIME CONTROLS [1]–[4]	119		

Introduction

Overview

Main features

Overview

The TR Music Workstation features Korg's acclaimed HI (Hyper Integrated) synthesis system.

It contains high-quality preset multisamples/programs/combinations, an effect section, plus a sequencer, dual polyphonic arpeggiator, RPPR, four-channel audio output, and numerous other functionality.

Controllers such as the joystick, [SW1] and [SW2] keys, REALTIME CONTROLS [1]–[4] knobs, or connected pedals can be used to control filter or effects, allowing you to modify the sound in realtime as you perform. Arpeggiator gate or velocity, or the tempo of the arpeggiator or sequencer can also be controlled.

In addition, the optional **EXB-SMPL sampling upgrade** can be installed to add two-channel audio input and sampling functionality. (see p.35, 88, see PG p.260)

The TR is the ideal music workstation for music production or live performance.

HI (Hyper Integrated) synthesis system

The **HI (Hyper Integrated) synthesis system** is a PCM tone generator system with full digital signal processing that guarantees pristine sound, and features enormous flexibility in musical extensibility, modulation, and effect routing.

Tone generator section:

- **64 MB** of preset PCM ROM containing **470** multisamples and **518** drumsamples.
- The sampling frequency is **48 kHz**, and the maximum polyphony is **62 voices**.

Filter/synthesis section:

- **24 dB/oct Low Pass Resonance type** or **12 dB/oct Low Pass & High Pass type** filters can be used. A wide variety of filter effects can be achieved, from active sounds with aggressive resonance to subtle tones using a high pass filter.
- A broad range of editing parameters gives you control over every aspect of the sound.

Effect section:

- **One insert effect (stereo-in/stereo-out), two master effects (mono-in/stereo-out), and a three-band master EQ (stereo-in/stereo-out)** can all be used simultaneously. You can select from **89 types** of effect algorithms, and edit them.
- Highly flexible effect routing is possible. Effects can also be routed freely to the individual outputs.

Alternate Modulation and Effect Dynamic Modulation:

- The synthesis section (filter etc.) provides **Alternate Modulation functionality**, and the effect section provides **Effect Dynamic Modulation functionality**. This allows you to freely apply modulation to parameters that affect the pitch, filter, amp, EG, LFO, effects etc.
- LFO and delay time parameters can be synchronized to MIDI clock/tempo. You can synchronize sounds or effects to the tempo of the sequencer or the arpeggiator.

Programs and combinations

- In the Program mode, the TR provides 512 user programs, plus 128 programs + 9 drum sets for GM compatibility. When shipped from the factory, it is loaded with high-quality programs that cover a wide range of musical needs. The 512 user programs can be modified by adjusting the numerous editing parameters, the effects and the arpeggiator, to create your own original programs.
- The TR provides 24 user drum kits and nine GM2-compatible ROM drum kits. With the factory settings, preset drum kits that cover a variety of musical genres are provided. You can create your own original drum kits by assigning a drumsample or an original sampled sound to each note of the keyboard. For each note, you can make filter and amp settings, and even route the sound through effects and to a individual audio output.
- The TR provides 384 user combinations. The factory settings contain a wide variety of Preload combinations. A combination allows you to use layers, splits, or velocity switches etc. to combine up to eight programs together with effects and two arpeggiators, in order to create complex sounds that could not be produced by a program. You can also make settings that include external tone generators.

Sequencer

TR provides a **high-performance 16-track MIDI sequencer**, with more than sufficient power for use as a stand-alone sequencer. The sequencer can serve as the core that brings together TR's numerous capabilities, allowing it to serve as an integrated music workstation.

For more on TR's sequencer (see p.63).

RPPR

TR features a **RPPR (Realtime Pattern Play/Recording) function**.

In Sequencer mode, this function allows you to assign preset patterns or user patterns (with a specified playback track) to individual keys on the keyboard, and playback or record that pattern in realtime simply by pressing the assigned key. Numerous preset patterns, including patterns ideal for drum tracks, are built into the internal memory.

Dual polyphonic arpeggiator

- Five preset arpeggio patterns (UP, DOWN, ALT1 ALT2, RANDOM) and 216 user arpeggio patterns are provided. With the factory settings, these contain a wide variety of preset user patterns. In addition to providing conventional arpeggiator functionality, the polyphonic arpeggiator of the TR can respond to the pitches or timing at which you play the keyboard, and produce a diverse range of chords or phrases. This can be used to play a variety of drum phrases (using the "Fixed Note Mode" that is ideal for drums), bass phrases, or guitar and keyboard backing riffs. The arpeggiator is also effective for use with subtly moving pads, synth sounds, or sound effects.

In Combination mode, and Sequencer mode, the TR provides dual arpeggiators that can simultaneously play two arpeggio patterns. You can apply separate arpeggio patterns to drum and bass programs, or use keyboard splits or velocity to switch between arpeggio patterns for an even more dynamic performance.

4 channel audio output

- In addition to the L/MONO and R main stereo **audio outputs**, TR provides **two individual audio outputs**, for a total of four channels of audio output. The sound from each oscillator, drum, timbre/track, or insertion effect can be routed freely to any output.

EXB-SMPL sampling upgrade

The following functionality can be added by installing the separately sold EXB-SMPL option.

- Sampling mode is added. Input sources from the two-channel audio inputs can be sampled and edited to create original multisamples or samples, which can then be used in a program or drum kit. For details on the features of Sampling mode, refer to p.86.
- Two-channel audio input is added. This two-channel audio input allows 48 kHz 16 bit linear mono/stereo sampling. A MIC or LINE level select switch and level adjustment control supports a wide range of external audio sources, from mic level to line level. The audio input can also be routed to the effects. You can apply an effect while sampling, or use the TR as a 2-in/4-out effect processor.
- A SCSI connector is added, allowing external SCSI devices such as hard disks to be connected. A connected external SCSI device can be used in the same way as an SD card to save or load data.

Overview of the modes

The TR has a large number of functions that let you play and edit programs and combinations, record and play sequence data, and manage data on media. The largest unit used to organize these functions is called a mode. The TR has five modes.

If the separately sold EXB-SMPL option is installed, Sampling mode will be added (for a total of six modes), and you will be able to record and edit samples.

Program mode


- Select and play programs
You can choose programs from rewritable banks A, B, C, and D which contain a total of 512 programs, and non-rewritable bank G (128 programs compatible with the GM standard, and nine drum programs).
- Edit a program
Make settings for the oscillator, filter, amp, EG, LFO, effects, and arpeggiator.
Select a multisample (the following multisamples are available)
 - 470 internal multisamples (ROM, EX)
 - Multisamples (RAM) created in Sampling mode (if the separately sold EXB-SMPL option is installed)
 - Create drum programs using a drum kit (created in Global mode)

Combination mode

- Select and play combinations
A combination is a set of two or more programs (a maximum of eight), and allows you to produce complex sounds that could not be created by an individual program.
You can choose combinations from rewritable banks A, B, and C which contain a total of 384 combinations.
- Edit a combination
Make settings for volume, pan, layer/split etc. for each timbre (program), and make settings for effects and the two arpeggiators etc.

Sequencer mode

- Use the 16-track sequencer to record and playback songs.
- Make effect settings for the song.
- You can record a performance using the arpeggiator(s) into a song or pattern.
- You can use a cue list to set up consecutive playback of multiple songs, and specify the number of repeats for each song.
- You can use a maximum of 20 cue lists, 200 songs, and 150 preset patterns. One song can use as many as 100 patterns.
- The TR can be used as a 16-track multitimbral tone generator.

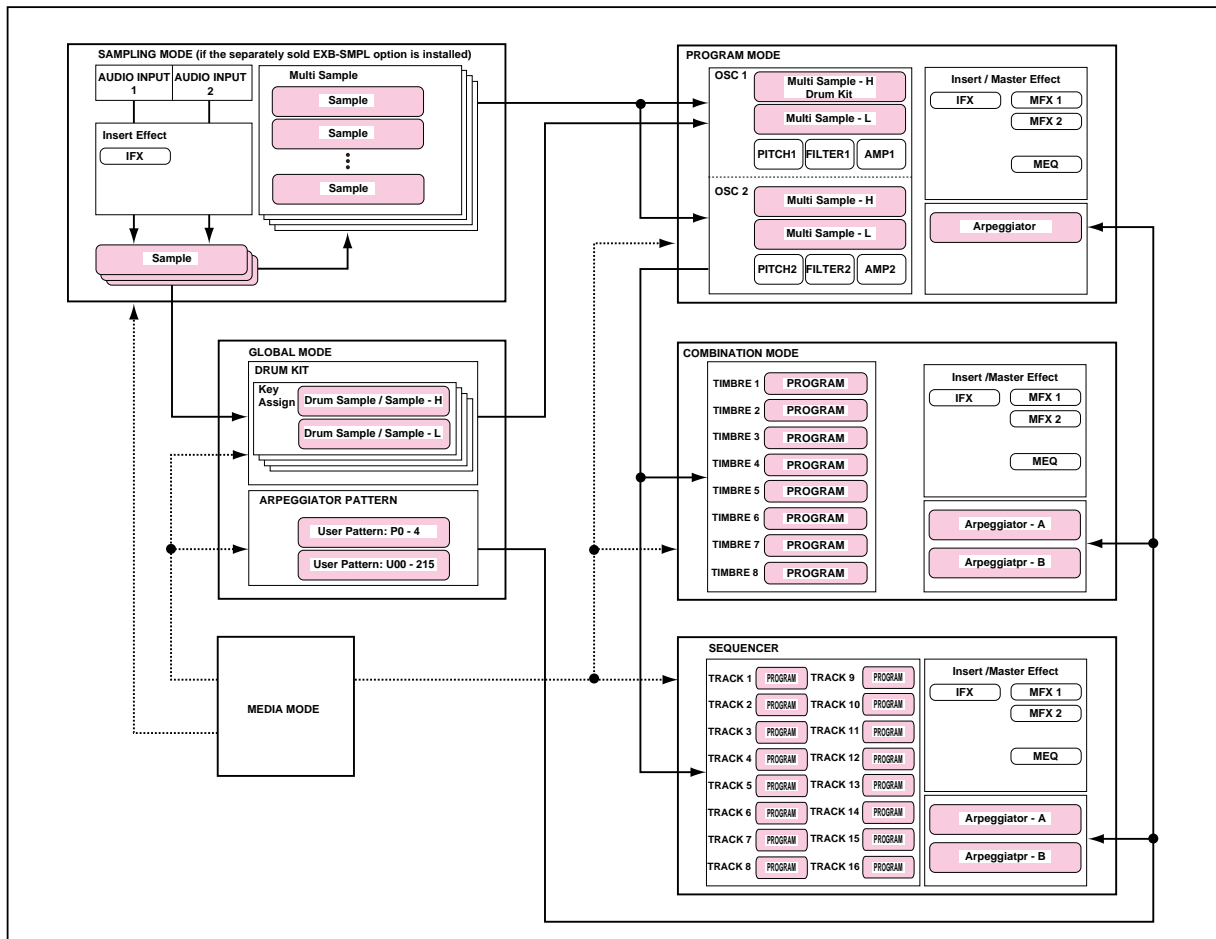

-
- Create and playback patterns in realtime, using the RPPR (Realtime Pattern Play/Recording) function.

Global mode

- Make settings that affect the entire TR, such as master tune and global MIDI channel.
- Create drum kits (24 kits), user arpeggio patterns (216 patterns), and user scales (16 one-octave scales and 1 all-note scale).
- Create drum kits using the 518 internal drum samples (ROM, EX). You can also use samples (RAM) that were created in Sampling mode (requires the separately sold EXB-SMPL option).
- Set the function of the assignable pedals and assignable switches.
- Transmit data dumps of MIDI exclusive data.
- Adjust the input level from AUDIO INPUT 1 and 2 (if the EXB-SMPL option is installed). This setting is valid outside of Sampling mode. The internal effects can be applied to the external input sound. The settings for Sampling mode are made independently in Sampling mode itself.

Media mode

- Data of each mode can be saved and loaded using the SD card slot or an external SCSI device (if the separately sold EXB-SMPL option is installed).
- Media such as an SD card or hard drive (EXB-SMPL option required) can be formatted, and then data can be managed by copying etc.
- Korg format, AKAI, AIFF, and WAVE format sample data can be loaded. Sample data can also be saved in Korg format, or exported in AIFF or WAVE format (if the separately sold EXB-SMPL option is installed).
- Songs that you created in Sequencer mode can be saved in SMF format. SMF files can be loaded as Sequencer mode songs.
- You can use the Data Filer function (to save/load MIDI exclusive data).


Sampling mode

(If the EXB-SMPL option is installed)

- An external audio device or mic connected to the rear panel AUDIO INPUT jacks can be sampled (recorded as a sample). An insert effect can also be applied to the select input sound while it is being sampled.
- Waveform data that was sampled or loaded in Media mode can be modified using a variety of editing functions, such as adjusting the loop point, using Time Slice, or Time Stretch.
- You can edit multisamples (which consist of multiple samples).
- You can convert a multisample into a program. When this conversion is performed, a multisample created in Sampling mode can be used in Program, Combination, and Sequencer modes.

Front and rear panel

Front panel

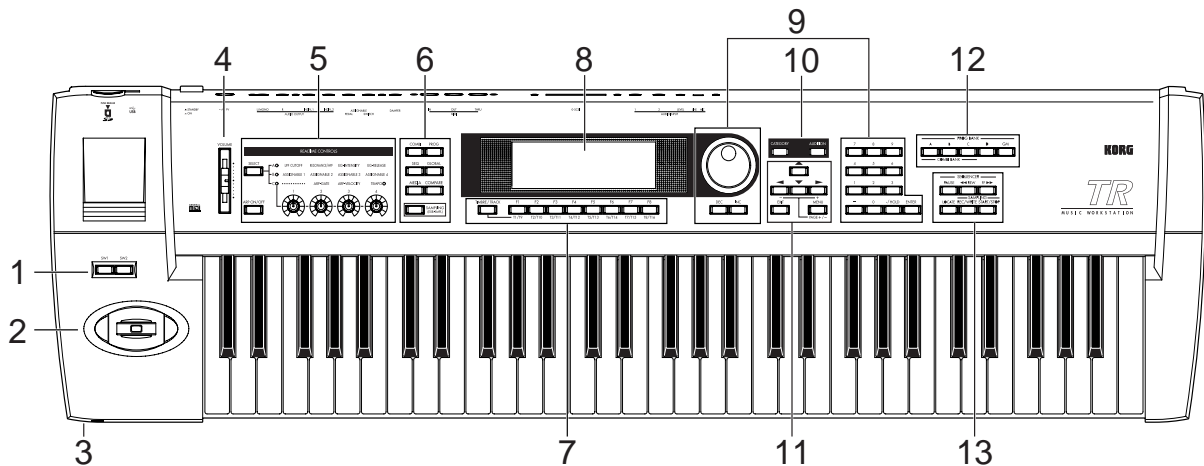

1. [SW1] key, [SW2] key

These keys are on/off switches for the functions to which they were assigned in Program, Combination, Sequencer and Sampling modes (if the EXB-SMPL option is installed). When on, the key will light (see p.24).

2. Joystick

This controls pitch or modulation, etc. Move the joystick up/down or left/right (+Y, -Y, -X, +X) to control (see p.24). Various program parameters and effect parameters will determine what is controlled by the joystick.


3. Headphone jack

A set of headphones with a (1/4") stereo phone plug can be connected here. The output from the L/MONO and R OUTPUT jacks can be monitored in stereo through the headphones.

4. [VOLUME] slider

This adjusts the volume that is output from the OUTPUT jacks (L/MONO, R) and the headphone jack.

5. REALTIME CONTROLS

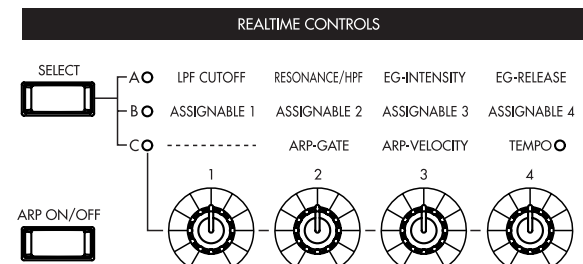

Use the [SELECT] key to select realtime controller mode A/B/C, and use knobs [1]-[4] to control the tone, effects, MIDI control changes, and arpeggiator etc. while you perform. (see p.25, 27)

[SELECT] key

This key switches the realtime controller between A-mode, B-mode, and C-mode. The LED of the selected mode will light.

[ARP ON/OFF] key

This key turns the arpeggiator on/off. When on, the key will light.

[1], [2], [3], [4] knob

A-mode

[1] LPF CUTOFF:

Controls the cutoff frequency of the low pass filter.

[2] RESONANCE/HPF:

Controls the filter resonance level or the high pass filter cutoff frequency.

[3] EG-INTENSITY:

Controls the filter EG intensity.

[4] EG-RELEASE:

Controls the filter/amp release time.

B-mode

[1] ASSIGNABLE 1:

[2] ASSIGNABLE 2:

[3] ASSIGNABLE 3:

[4] ASSIGNABLE 4:

Controls the functions that are assigned in each mode (Program, Combination, Sequencer, or Sampling (if the EXB-SMPL option is installed)).

C-mode

[1] ———: not used

[2] ARP-GATE:

Controls the gate time (note duration) of the arpeggiated notes. At the center position (12 o'clock), the setting of the arpeggiator "Gate" parameter will be used. Rotating the knob toward the left will shorten the time, and rotating it toward the right will lengthen the time.

[3] ARP-VELOCITY:


Controls the velocity (playing strength) of the arpeggiated notes. At the center position (12 o'clock), the setting of the arpeggiator "Velocity" parameter will be used. Rotating the knob toward the left will weaken the velocity, and rotating it toward the right will strengthen the velocity.

[4] TEMPO:

Controls the tempo of the arpeggiator or of the Sequencer mode.

The LED beside "TEMPO" will blink at quarter note intervals of the specified tempo.

6. Mode keys, [COMPARE] key

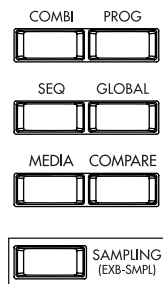

These keys are used to enter each mode.

Pressing a key will enter the corresponding mode (the key will light). (p.15)

[COMBI] key

Combination mode will be selected.

[PROG] key

Program mode will be selected.

[SEQ] key

Sequencer mode will be selected.

[GLOBAL] key

Global mode will be selected

[MEDIA] key

Media mode will be selected.

[COMPARE] key

Use this key when you wish to compare the sound of the program or combination that you are currently editing with the un-edited sound that was written into memory. You can also use this key to make "before and after" comparisons when recording or editing in Sequencer mode (p.16).


[SAMPLING] (EXB-SMPL) key

This key selects the Sampling mode.

This is valid only if the separately sold EXB-SMPL option is installed.

▲ If the separately sold EXB-SMPL option is not installed, pressing the [SAMPLING] key will cause a message of "No Sampling Upgrade Installed" to be displayed.

7. [TIMBRE/TRACK] key, [F1 T1/T9] ... [F8 T8/T16] keys



Function [F1]–[F8] keys

These keys select the tabs that are displayed in each page. They are also used to execute utilities and other functions.

Timbre/track select [T1/T9]–[T8/T16] keys

By holding down the [TIMBRE/TRACK] key and pressing a [T1/T9]–[T8/T16] key, you can select the timbre/track parameters corresponding to the key number.


When a single page displays the parameters for timbres 1–8 of a Combination or for tracks 1–8/9–16 of Sequencer mode, these keys select one of these timbres/tracks.

8. LCD screen

Here you can select pages, and parameters, and set values. (p.10)

9. VALUE controllers

The following VALUE controllers are used to set the value of the selected parameter (p.16).

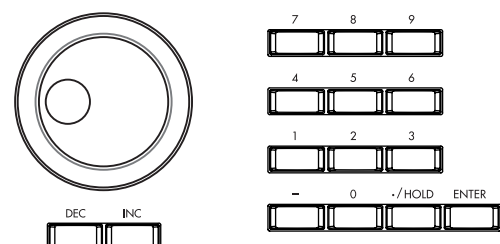

[VALUE] dial

Use this dial to modify the value of the parameter.

[INC]/[DEC] keys

These are used to increase or decrease the parameter value in steps of one. It is convenient to use these to make fine adjustments.

Numeric keys [0] – [9], [ENTER] key, [-] key, [./HOLD] key

Use these keys to numerically input a parameter value. Use numeric keys [0]–[9], the [-] key, and the [./HOLD] key to enter the value, and press the [ENTER] key to confirm it. The [./HOLD] key lets you input a value with a decimal point. The [-] key inverts the sign (+/-) of the parameter value.

In addition, [./HOLD] can be used if you wish to select sounds by category in program or combination mode.

By holding down the [ENTER] key and pressing a numeric key [0]–[9], you can select up to ten utility menu commands for the current page.

10. [CATEGORY] key, [AUDITION] key**[CATEGORY] key**

In each mode, you can directly access the utility menu “Select by Category” by choosing a parameter that can be selected by category and then pressing the [Category] key.


This allows you to view and select programs or combinations by category. (☞p.22)

[AUDITION] key

This key activates the **Audition function**, which plays a riff (phrase) suitable for each preloaded or preset program.

In Program mode, pressing the [AUDITION] key (the key will light) will cause the audition riff to play repeatedly.

In Sampling mode (if the EXB-SMPL option is installed), the selected sample will be played.

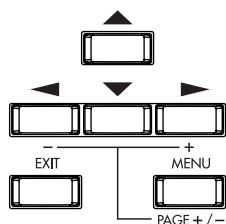11. [EXIT] key, [MENU PAGE +/-] key, CURSOR keys [▲], [◀-], [▼], [▶+]**[EXIT] key**

In Program, Combination, Sequencer, Sampling (if the separately sold EXB-SMPL option is installed), and Global modes, pressing this key from anywhere other than page 1.1 will take you to page 1.1 of that mode. When a dialog box is open, this key will cancel the settings made in the dialog box and close the dialog box (corresponds to the “Cancel”). If a Utility menu or page menu is open, pressing [EXIT] will close the menu.

[MENU PAGE +/-] key

Use this key to select different pages on screen. When you press this key, a list of the pages within the mode will appear in the LCD screen. Use the function key [F1]–[F7] or cursor keys [▲], [▶], [▼], [▶] to select the desired page, and press the [F8] key to move to the selected page.

You can also move to a desired page by holding down the [MENU] key and using numeric keys [1]–[7] to enter a two-digit page number.


In addition, you can hold down the [MENU] key and use cursor keys [▶], [▶] to switch pages in the order of 1.1→2.1→2.2→2.3. (☞p.15)

CURSOR keys [▲], [◀-], [▼], [▶+]

Use these keys to select different parameters on screen. In addition, you can hold down the [MENU] key and use cursor keys [▶], [▶] to switch pages in the order of 1.1→2.1→2.2→2.3. (☞p.15)

12. BANK keys

These keys are used to switch Program/Combination banks.

**PROG BANK: [A], [B], [C], [D], [GM]**

When selecting programs, use keys [A], [B], [C], [D], and [GM]. The key of the selected bank will light. Each time you press [GM], you will cycle through the GM banks and the drum bank as follows: G, g(d), G ... etc.

COMBI BANK: [A], [B], [C]


When selecting combinations, use keys [A], [B], and [C]. The LED of the selected bank will light.

In **Combination**, and **Sequencer modes** when the edit cell (highlighted area) is located at the program of a timbre or track, you can use the BANK keys to select the bank of the program. The bank key of the program selected for that timbre/track will light.

In dialog boxes such as **Write Program** or **Write Combination**, these keys are used to specify the program or combination bank that will be the writing destination, etc.

13. SEQUENCER/SAMPLING

(If the separately sold EXB-SMPL option is installed)

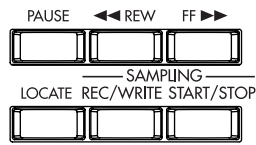

[PAUSE] key

This key pauses playback of a song or cue list (the key will light). Press the key again to cancel Pause (the key will go dark).

[◀◀ REW] key

This key rewinds playback of a song or cue list. Rewind will occur when you press the key (the key will light). (This will not operate during recording.)

[FF ▶▶] key

This key fast-forwards playback of a song or cue list. Fast-forward will occur when you press the key (the key will light). (This will not operate during recording.)

[LOCATE] key

This key resets the playback location of a song or cue list to a specified location. You can also press this key when “stuck notes” occur for some reason.

[REC/WRITE] key

When you press this key in Sequencer mode, the TR will enter recording-ready mode (the key will light). If you then press the [START/STOP] key, recording will start. (☞p.81)

When you press this key in Program, Combination, or Global modes, a dialog box will appear. If you then press the [F8] (“OK”) key, the edited content will be written. (☞p.43, 45)


When you press this key in Sampling mode (if the EXB-SMPL option is installed) and then press the [START/STOP] key, sample recording will begin. (☞p.35)

[START/STOP] key

In Sequencer mode, this key starts/stops song recording/playback, or cue list playback. (The key will blink in time with the beat during recording or playback.)

In Sampling mode (if the EXB-SMPL option is installed), press the [REC/WRITE] key and then press the [START/STOP] key to start/stop sample recording. In the SMPL 2.1-2: Sample Edit, Edit2 page, pressing this key will sound the sample.

Rear panel

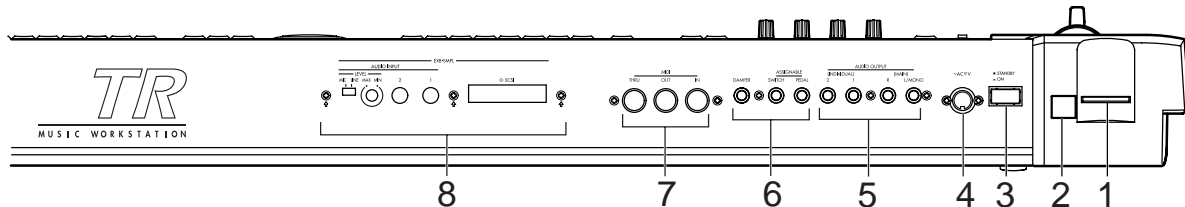

1. SD card slot


You can insert an SD card in this slot. Refer to p.14 for details on inserting, removing, and handling media.

2. USB B connector (for connecting to a computer)

You can connect your computer to this connector. Using a single USB cable, your TR can send and receive MIDI information to and from a computer. This eliminates the need for a MIDI interface and the associated cables. (☞PG p.233)

What is USB?

USB stands for **U**niversal **S**erial **B**us, and is an interface for transferring data between a computer, a keyboard and/or peripheral devices.

 The USB connector of the TR is only able to transmit and receive MIDI data.

3. [POWER] switch

This switch turns the power on/off (☞p.18).

4. AC power supply connector (~AC9V)

Connect this to the included AC/AC power supply. After connecting the power supply cable to TR, connect the other end to an AC outlet (☞p.12).

5. AUDIO OUTPUT

Connect these outputs to the input jacks of your amp or mixer. In addition to the L/MONO and R main stereo audio outputs, TR provides two individual audio outputs. The sound from each oscillator, drum, timbre/track, or insertion effect can be freely routed to any output (☞p.112-).

(MAIN) L/MONO, R

These are unbalanced phone jacks (☞p.12).

These are the main audio output jacks. By setting "Bus Select" to **L/R**, the output from an oscillator, an insertion effect, an individual drum part, or the metronome can be output to the (MAIN) L/MONO and R jacks.

When making connections in stereo, use L/MONO and R. When making connections in mono, use the L/MONO jack.

(INDIVIDUAL) 1, 2

These are unbalanced phone jacks (☞p.12).

These are individual (independent) audio output jacks. By cycling the "Bus Select" through **1, 2, 1/2** an oscillator, an insertion effect, an individual drum part, or the metronome etc. can be assigned to be output from the (INDIVIDUAL) 1, 2 jacks. The output from the **1, 2** jacks is not affected by the [VOLUME] slider.

6. Pedal connections**ASSIGNABLE PEDAL jack**

The separately sold Korg XVP-10 EXP/VOL pedal or EXP-2 foot controller (options) can be connected to this jack. (☞p.13).

Its function can be assigned in Global mode, allowing you to use the pedal to control the volume, etc. (☞p.117)

ASSIGNABLE SWITCH jack

A separately sold on/off foot switch such as the Korg PS-1 foot switch can be connected here (☞p.13).

Its function can be assigned in Global mode, allowing you to use the foot switch as a modulation controller, to select programs or combinations, or to start/stop the sequencer (☞p.117).

DAMPER jack

A separately sold switch-type pedal such as the Korg DS-1H damper pedal can be connected here.

If a DS-1H is connected, it will function as a half-damper pedal. In order to ensure that the half-damper pedal functions correctly, please adjust the polarity and the sensitivity (☞PG p.126, 128).

If any other switch-type pedal is connected, it will function as a damper switch.

Set the polarity according to the pedal that you connected. (☞PG p.128)

7. MIDI**MIDI IN connector**


Musical data and sound settings etc. are received at this connector.

Use this to play TR from another connected MIDI device (☞PG p.233).

MIDI OUT connector

Musical data and sound settings etc. are transmitted from this connector.

Use this to control another connected MIDI device from TR (☞PG p.233).

 If MIDI data is being transmitted from the TR via USB to your computer, transmission from the MIDI OUT connector is halted.

MIDI THRU connector

Musical data and sound settings etc. that are received at the MIDI IN connector are re-transmitted without change from the MIDI THRU connector.

You can use this to connect multiple MIDI devices via MIDI cables (☞PG p.233).

8. EXB-SMPL**(If the separately sold EXB-SMPL option is installed)**

These connectors are used to sample mono or stereo audio from a mic or audio device (☞p.35, 39), or to use the internal effect processor to apply effects. (☞p.115) The MIC/LINE level select switch ([MIC/LINE] switch) and the level adjustment knob ([LEVEL] knob) allow a wide range of audio sources to be input, from mic level to line level.

SCSI connector

Use a SCSI cable to connect this to a SCSI-compatible device (hard disk drive, CD-ROM drive, etc.). (☞ EXB-SMPL owner's manual)

AUDIO INPUT 1, 2 jacks

These are unbalanced phone audio input jacks. (☞p.14) Connect them to the OUTPUT jack(s) of your external audio device or mic.


[LEVEL] knob

This knob adjusts the input level of the AUDIO INPUT 1, 2 jacks. (☞p.35)

[MIC/LINE] switch


This switch selects the input level of the AUDIO INPUT 1, 2 jacks. (☞p.35)

Objects and functions in the LCD screen

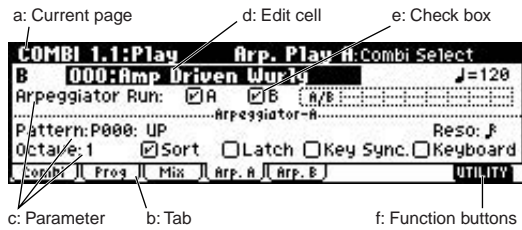

a: Current page

This indicates the currently selected page within the mode. From the left, this area shows the **mode name**, **page number:name**, **tab name**, and the **parameter name** of the edit cell.



b: Tab

Most pages are divided into two or more tabs. By pressing the closest function key [F1]–[F7], you can select a tab to access the corresponding page.

c: Parameters

The parameters for various settings are displayed in the LCD screen. Use cursor keys [▲], [◀], [▼], [▶] to select the desired parameter.

d: Edit cell

When you use the cursor keys [▲], [◀], [▼], [▶], the selected **parameter** will be highlighted in the LCD screen. This area is called the **edit cell**, and your editing will affect the highlighted area. The parameter value of the edit cell can be modified using VALUE controllers such as the [VALUE] dial or the [INC]/[DEC] keys (p.16). For parameters that accept a key number or a velocity value, you can also hold down the [ENTER] key and play a note on the keyboard to enter the key number or velocity value.

e: Check box

Use cursor keys [▲], [◀], [▼], [▶] to select a check box (edit cell), and use a VALUE controller such as the [VALUE] dial or the [INC]/[DEC] keys to add or remove the check mark. When **checked**, the parameter will function, when **unchecked**, the parameter will not function.

f: Function buttons

By pressing the function key [F1]–[F8] nearest this button, you can turn various functions on/off.

UP, OPEN:

In Media mode, these select the current directory.

UTILITY:

Accesses the utility menu where you can execute **utility menu** commands.

Other function buttons examples

Sequencer mode: EDIT/DONE, INSERT, CUT, COPY, JUMP, DONE, Tie, Rest, Back, Done (used in Cue List, Event Edit, Step Recording) REVERT (copy and paste RPPR settings)

Global mode: TEXT, KEY+, –

Sampling mode (if the separately sold EXB-SMPL option is installed):

INSERT, CUT, COPY, CREATE (create multisample), L/R, ZOOM

* Utility menu



In each page, you can press the “UTILITY” function button (the [F8] key) to access the utility menu. The utility menu contains commands that can be used in that page. The utility menu that appears will differ depending on the page that is selected.


You can also select up to ten utility menu commands by holding down the [ENTER] key and pressing a numeric key [0]–[9]. Press the [EXIT] key to close the utility menu.



For **UP**, press the [F7] key to select the desired utility menu command. You can also use the cursor keys [▲], [◀], [▼], [▶] to make your selection. For **OK**, press the [F8] key to open the dialog box of the selected utility menu command. This key also switches the status of commands that you check or uncheck.

* Dialog boxes

When you select a utility menu command etc., a **dialog box** will open.

Use the cursor keys [▲], [◀], [▼], [▶] to select parameters. Use the VALUE controllers (p.16) to input the parameter values. When selecting program or combination numbers in a dialog box, you can use the BANK [A]–[GM] keys in addition to the VALUE controllers.


As in the utility menu, press the function key [F1]–[F8] nearest  etc. (function button 2) to access the execution or operation screen. In some cases, a dialog box will appear. Follow the directions shown in the dialog box.

To execute, select  (press the [F8] key). To cancel without executing, select  (press the [F7] key). The dialog box will close. The [EXIT] key is equivalent to “Cancel,” “Done,” or “Exit.”




* Function buttons 2

Press the function key [F1]–[F8] nearest this button to execute the function.



Utility menu, etc.


* Text dialog box

When you use the function keys to select , a **text dialog box** will appear.

In this dialog box you can rename text (e.g., the name of a program, combination, or song). (p.44)

* Scroll bar

This indicates that the list contains selections or parameters that cannot all be shown in the screen at once. Use the cursor keys [▲], [◀], [▼], [▶] to move within the list.

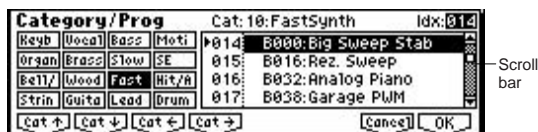


* Page menu

In Combination, Program, Sequencer, Global, or Sampling (if the separately sold EXB-SMPL option is installed) modes, pressing the [MENU] key will display a list of the pages in that mode. (The page in which you were when you pressed the [MENU] key will be highlighted.)

To select a page, press the nearest function key [F1]–[F7]. By pressing the same key you can move consecutively downward. You can also use cursor keys [▲], [◀], [▼], [▶] to move left/up/down/right.

You can also move to the desired page by holding down the [MENU] key and using numeric keys [0]–[7] to enter a two-digit page number. In addition, you can hold down the [MENU] key and use the cursor keys [◀], [▶] to move in steps of one page; in the example shown below, this would be Play → P/M → Ctrl → Prm1 → ... etc.




* Other objects

To use slider- or knob-shaped objects, use the cursor keys [▲], [◀], [▼], [▶] to select the desired item, and use the VALUE controllers to adjust the value.

Other types of objects are shown in the effect routing screen. (p.112)



Routing

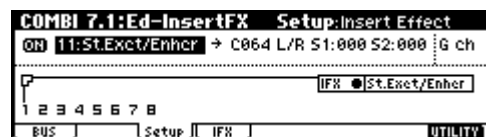

Setup

Connecting audio equipment etc.

⚠ Connections must be made with the power turned off. Please be aware that careless operation may damage your speaker system or cause malfunctions.

1. Connecting the AC/AC power supply

- Connect the included AC/AC power supply to the AC power supply inlet of TR, and then connect the other end of the cable to an AC outlet.

2. Connecting audio output devices

AUDIO OUTPUT (MAIN) L/MONO, R, (INDIVIDUAL) 1, 2

Here, you can connect a set of amplified monitor speakers or your audio system to output TR's sound. If you wish to use the AUDIO OUTPUT (INDIVIDUAL) 1-2 jacks of TR, we recommend that you use a mixer.

⚠ If you playback TR through your stereo audio system, be aware that high volumes may damage your speakers. Be careful not to raise the volume excessively.

- Connect the AUDIO OUTPUT (MAIN) L/MONO and R jacks to the INPUT jacks of your powered monitor system, mixer etc.


L/MONO and R are the main outputs. If you are outputting in stereo, make connections to the (MAIN) L/MONO jack and the R jack. If you are outputting in monaural, make connections to the (MAIN) L/MONO jack. We recommend that you playback in stereo if possible.

- If you wish to output from the AUDIO OUTPUT (INDIVIDUAL) 1, 2, jacks, connect these jacks to your mixer, and then connect the mixer output to the INPUT of your powered monitor system etc.

For details on the output of each jack (p.112-“Routing”).

Headphones

- When using headphones, plug them into the headphones jack located on the front panel.

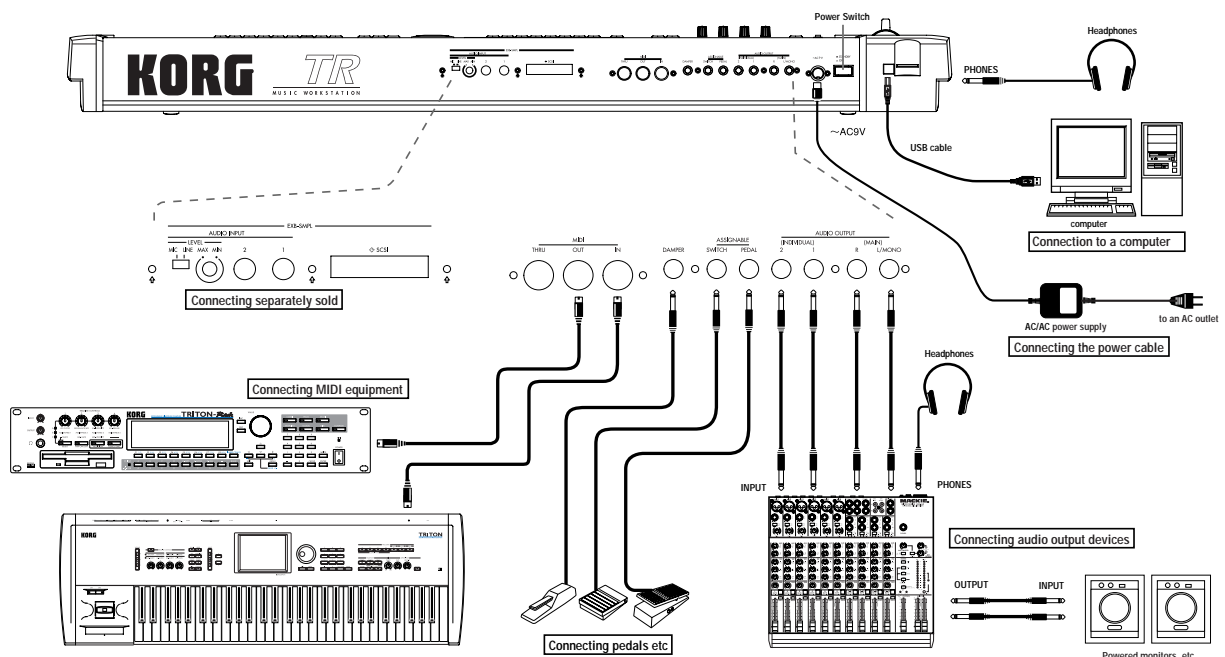

3. Connecting pedals etc.

Foot pedal connections

A foot pedal can be connected to control the volume or other functions.

Connect a separately sold Korg assignable pedal such as the XVP-10 EXP/VOL or EXP-2 to the rear panel ASSIGNABLE PEDAL jack.

The function controlled by the foot pedal is specified in GLOBAL 1.1-3: System, Foot page "Foot Pedal Assign" (PG p.117, PG p.127, 227).

Foot switch connections

A foot switch controls sostenuto, soft pedal on/off, arpeggiator on/off, to select programs or combinations, and to start/stop the sequencer etc.

Connect a separately sold Korg foot switch such as the PS-1 to the rear panel ASSIGNABLE SWITCH jack.

The function that will be controlled by the foot switch and the polarity of the foot switch can be set in GLOBAL 1.1-3: System, Foot page "Foot SW Assign," and "Foot SW Polarity" (PG p.117, PG p.127, 226).

Damper pedal connections

Allows you to sustain the sound while playing.

Connect a Korg DS-1H damper pedal (separately sold option) to the rear panel DAMPER jack. If a DS-1H is connected, you can produce half-damper effects.

The polarity of the damper pedal can be set in GLOBAL 1.1-3: System, Foot page "Damper Polarity," and its sensitivity can be adjusted by the GLOBAL 1.1-1 System utility menu command "Half Damper Calibration." (PG p.126, 128)

Connections to MIDI equipment/ computers

1. Connections to MIDI equipment

The keyboard, controllers, and sequencer etc. of TR can be used to control an external MIDI tone generator. Conversely, another MIDI keyboard or sequencer can control the tone generator of TR to produce sound.

- **Use MIDI cables to connect the MIDI connectors of TR with the MIDI connectors of your external device.**

PG p.233 "MIDI applications – Connecting MIDI devices/computers"

- ⚠ If MIDI data is being transmitted from the TR via USB to your computer, transmission from the MIDI OUT connector is halted.

2. Connections to a computer

Your performance on the TR, as well as controller and sequencer data, can be sent to a computer, and the tone generator of the TR can be played from the computer either via USB or via a MIDI interface.

- **You can use a MIDI interface to connect the MIDI connectors of TR to the MIDI connectors of your computer.**

- **You can connect the TR's USB B connector to the USB connector of your computer.**

PG p.233 "MIDI applications – Connecting MIDI devices/computers"

- ⚠ Some USB-MIDI interfaces may not be able to transmit or receive the TR's MIDI exclusive messages.

- ⚠ The USB connector of the TR is only able to transmit and receive MIDI data.


Inserting/removing a card in the SD card slot

If an SD card is inserted in the SD card slot, you can use it to save or load various types of TR data.

Inserting a card

① Insert an SD card in the SD card slot.

With the card label facing upward, insert the connector end of the card into the SD card slot and press it in until you hear a click.

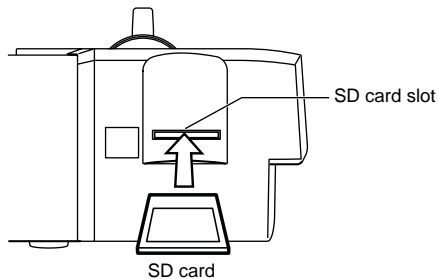

- ⚠ Make sure that the card is oriented correctly when you insert it. Forcing it in the wrong direction may damage the slot or the card, and the data may be lost.

Removing a card

- ⚠ Never remove an SD card from the slot while loading, saving, or formatting is in progress.

① Remove the card from the SD card slot.


Press the card inward; you will hear a click, and the card will pop out part-way, allowing you to pull it completely out.

Refer to the owner's manual included with your card, and observe the guidelines for handling and use.

Connecting separately sold options

By installing the separately sold EXB-SMPL option you can add two channels of audio input jacks and a SCSI connector.

For details on installing the EXB-SMPL, refer to PG p.260.

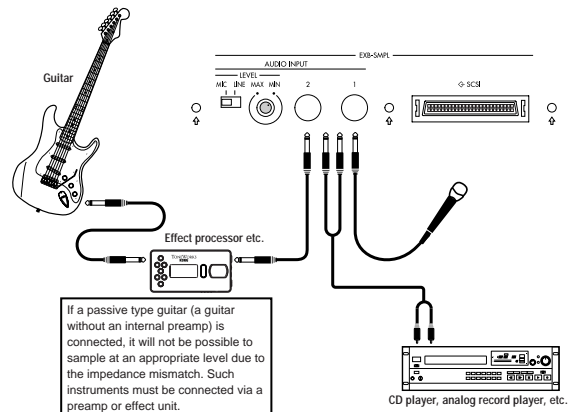

1. Audio input connections

Connect a mic or the OUTPUT jacks of an external audio device to the AUDIO INPUT 1, 2 jacks when you want to sample in Sampling mode (if the separately sold EXB-SMPL option is installed), or in Program, Combination, or Sequencer mode when you want to apply an internal effect to an external input sound and output the processed sound from the OUTPUT jacks.

- For details on connections when sampling in Sampling mode, refer to p.35.
- For details on connections when applying an effect in other modes and outputting to the OUTPUT jacks, refer to p.115.

2. SCSI connections

You can connect SCSI-compatible devices (hard disks, CD-ROM drives etc.). (EXB-SMPL Operation Manual)


Basic operation

Selecting modes, pages and tabs; setting parameters

1. Selecting modes

- In order to use a particular function on the TR, you must first select the appropriate mode. Press one of the front panel mode keys to enter the corresponding mode.

[COMBI] key:	Combination mode
[PROG] key:	Program mode
[SEQ] key:	Sequencer mode
[GLOBAL] key:	Global mode
[MEDIA] key:	Media mode
[SAMPLING] key:	Sampling mode (if the separately sold EXB-SMPL option is installed)

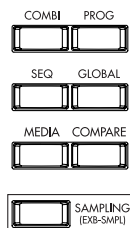

2. Selecting pages and tabs

Each mode has a large number of parameters, which are grouped into pages. Each page is further divided into as many as seven groups. These are referred to as "tabs."

Selecting a page


- ① Make sure that the desired mode is selected.

To select a mode, press the appropriate mode key. Here we will use Combination mode as an example for our explanation. Press the [COMBI] key.



- ② Press the [MENU] key.

The page menu will appear.



- note** In Media mode there is only one page, so the page menu will not appear.

- ③ Press the function key [F1]–[F7] that is nearest the page you wish to select.

If multiple pages are assigned to one function key, press the same key to move the cursor downward. You can also use the [▲], [◀], [▼], [▶] cursor keys to move.

- ④ Press the [F8] ("Open") key.

When you press the [F8] key, you will jump to the selected page, and that page will appear. As an example here, press the [F3] key three times to select "KeyZ," and then press the [F8] ("Open") key. The 3.3: Ed-Key Zone page will appear.



- note** You can also use the following alternative methods to select a page.

- Press the [MENU] key, and then use the [◀], [▶] keys to move forward or backward through the pages in the order of 1.1→2.1→2.2→3.1 etc.
- Hold down the [MENU] key, and use numeric keys [1]–[7] to enter a two-digit page number to move directly to the corresponding page. (To select the page shown above, you would press [3], [3].) If only one page is assigned to each function key (group), as in COMBI 1.1: Play or the pages of Global mode, the first digit of the numeric key [1]–[7] will move to the corresponding page.

The page selected at this time will be the page that was last selected. If there is no corresponding page, nothing will happen.

- note** When you press the [EXIT] key, you will return to 1.1 from any page.

Selecting a tab

- ⑤ Press the function key [F1]–[F7] that is nearest the tab displayed at the bottom of the LCD screen.

As an example, we will select the “Slope” tab. Press the [F3] key.



note Some pages have no tabs.

- ⑥ To move to another page, press the [MENU] key and repeat the procedure from step ③.

3. Selecting parameters


Use the [▲], [◀], [▼], [▶] cursor keys to select the parameter that you wish to edit.

In Combination mode pages that display timbres 1–8, or in Sequencer mode pages that display tracks 1–8 or 9–16, you can hold down the [TIMBRE/TRACK] key and press the nearest function key [F1]–[F8] to select the desired timbre or track.

4. Setting a parameter

The parameter value in the edit cell can be set by using the front panel VALUE controllers ([INC]/[DEC] keys, [VALUE] dial, numeric keys [0]–[9], [-] key, [./HOLD] key, and [ENTER] key). As necessary, you can also use the BANK [A]–[GM] keys, and the [COMPARE] key. In the case of parameters that require you to enter a note or velocity value, you can enter the value by playing a key on the keyboard while holding down the [ENTER] key.

VALUE controllers

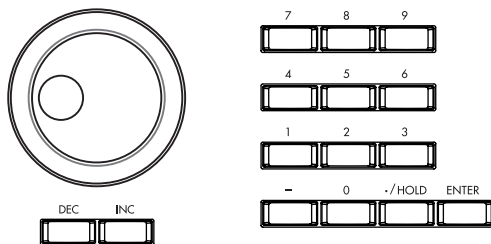

[INC]/[DEC] keys

Use these when you wish to make fine adjustments to the value.

[VALUE] dial

Use this when you wish to make large changes in a value.


Numeric keys [0]–[9], [ENTER] key, [-] key, [./HOLD] key

Use these when you know the parameter value that you wish to input.

After using the numeric keys [0]–[9] to input a number, press the [ENTER] key to finalize the parameter value. Use the [-] key to enter negative numbers.

Use the [./HOLD] key to enter a decimal point. In the 1.1: Play page of Program and Combination modes, the [./HOLD] key will perform the Category Hold or 10's Hold function. (PG p.2)

BANK [A]–[GM] keys



The BANK [A]–[GM] keys are used in Program mode to select the program bank and in Combination mode to select the combination bank. In Combination mode, they are also used to select the program bank for each timbre of the combination. In Sequencer mode, these keys are used to select the bank of the program used by each track of the song.

These keys are also used to specify the bank in dialog boxes such as Write Program or Write Combination.

[COMPARE] key



Use this key when you wish to compare an edited program or combination sound with the un-edited original (i.e., the sound that is written into memory).

When editing a program or combination, press this key. The key will light, and the last-written settings for that program number or combination number will be recalled. When you press the [COMPARE] key once again, the key will go dark and you will return to the settings that you were editing.

If you edit the settings that are recalled by pressing the [COMPARE] key (i.e., the settings that are written into memory), the key will go dark, and it will not be possible to return to the previous settings by pressing the [COMPARE] key again.


In Sequencer mode, you can use the [COMPARE] key to make “before and after” comparisons immediately after using realtime recording or step recording to record a song, or after performing a track edit operation.

For example, this can be used effectively when realtime-recording a track for a song.

- ① Realtime-record a track. (Take 1)
- ② Once again, realtime-record on the same track. (Take 2)
- ③ Press the [COMPARE] key. The key will light, and take 1 will be recalled.
- ④ Press the [COMPARE] key once again. The key will go dark, and take 2 will be recalled.

-
- ⑤ If after recording two different takes on the same track, you record a third, the Compare function will now alternate between the second and third takes. Recording a fourth take will mean that Compare now alternates between takes three and four, and so on. In this fashion, Compare always alternates between the last two recorded passes that are made on the same track.

In this way, the Compare function lets you recall the previous recording or the previous state of event editing.

-  The Compare function is not available in Global, Media and Sampling modes.

Keyboard input

When inputting a note name or velocity value as the value of a parameter, you can use the keyboard to input the setting. Hold down the [ENTER] key and play the note that you wish to enter as a value. The note name (number) or velocity value will be input. When the GLOBAL 5.1: DKit page or SEQ 5.1: RPPR, RPPR Setup page is displayed, you can hold down the [ENTER] key and play a note to recall the settings that have been assigned to the note you played.

Quick Start

Turning the power on/off

⚠ Before you turn on the power, make sure that the desired connections have been made as described in "Setup" (p.12).

1. Turning the power on

① Press the TR's [POWER] switch to turn on the power.

The LCD screen will display the name of your model, and the software version. (The following graphic shows the factory-set LCD screen. The version number is subject to change without notice.)



- ② Turn on your powered monitors or stereo amp.
- ③ Raise this instrument's [VOLUME] slider to an appropriate level, and adjust the volume of your powered monitors or stereo amp.

2. Turning the power off

- ① Set this instrument's [VOLUME] slider and the volume of your powered monitor or stereo amp to zero.
- ② Turn off the power of your powered monitor or stereo amp.
- ③ Press this instrument's [POWER] switch to turn off the power.

⚠ Never turn off the power while data is being written into internal memory. If the power is turned off while processing is being performed, memory write operations will not be completed correctly. If this occurs, this instrument will automatically initialize its internal memory so that it will operate correctly. This is not a malfunction.

While data is being written, the LCD screen will indicate "Now writing into internal memory." Data is written into internal memory by the following operations.

- Writing (updating) a Program, Combination, Global Setting, Drum Kit, or Arpeggio Patterns
- Loading Program, Combination, Global Setting, Drum Kit, or Arpeggio Patterns data in Media mode
- Receiving a MIDI data dump for Program, Combination, Global Setting, Drum Kit data, or Arpeggio Patterns

- When using Sampling mode (if the separately sold EXB-SMPL option is installed) utility commands ("Move Sample," "Move MS," "Conv.To Prog," "Time Slice," etc.) to simultaneously modify programs or drum kits.

The mode and page that will be selected when the power is turned on

The state of this instrument when the power is turned on will depend on the setting of "Power On Mode" (GLOBAL 1.1: System, Preference page).

If "Power On Mode" is **Reset** (factory setting), this instrument will automatically select the Combination mode 1.1: Play.

If "Power On Mode" is **Memorize**, this instrument will be in the mode and page that were last selected when the power was turned off.

The **Memorize** setting will remember the mode and page that were last selected, the combination number that was last selected in Combination mode, and the program number that was last selected in Program mode. If another mode is selected when the power is turned on, you can press the [COMBI] key or [PROG] key to select the 1.1: Play page with the last-selected combination number or program number.

LCD screen messages when separately sold options are installed (When the power is turned on)

This instrument allows you to install separately sold options.

When the power is turned on, the type of installed options will be displayed. After installing an option, be sure to check this display to verify that the option was installed correctly. If the option is not displayed here even though it was installed, it was not installed correctly. Turn off the power and re-install the option. (For details on installing an option, refer to PG p.260)



OPTIONS

EXB-SMPL:

The EXB-SMPL option is installed.


SIMM:

Slot1 (**MB)/Slot2 (**MB): SIMM's are installed in SIMM slots 1 and/or 2. The capacity of each SIMM is shown in parentheses.

Listening to the demo songs


Loading demo playback data

The TR contains demo songs (and preloaded data). This data can be loaded in Global mode.

- ① Press the [GLOBAL] key (the key will light).
You will enter Global mode.
Verify that the **GLOBAL 1.1: System** page is displayed. If it is not displayed, press the [EXIT] key.
- ② Press the [F8] (“UTILITY”) key to access the Utility menu.
- ③ Press the [F7] (“

A dialog box will appear.

- ④ Use the [INC]/[DEC] keys to select the data that you want to load.

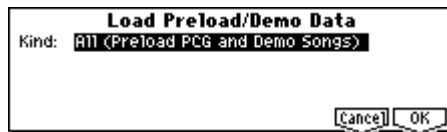


In the “Kind” field, select the data that you want to load.

In this case, select **All (Preload PCG and Demo Songs)**. When you execute the Load operation, the demo song data and preloaded data will be loaded.

- ⑤ Press the [F8] (“OK”) key.

A dialog box will ask you for confirmation.



- ⑥ Press the [F8] (“OK”) key once again.

The preloaded data and demo song data will be loaded.

- ⚠ Never turn off the power while the data is being loaded.
- ⚠ If the Memory Protected dialog box appears, uncheck the memory protect setting, and perform the Load operation again. (p.43)

note From the powered-off state, if you turn on the power while holding down the [MENU] key and [EXIT] key, the **Load All (Preload PCG and Demo Songs)** operation will be executed automatically. (The LCD screen will show a message of “Now Writing Internal Memory.”) This will load all PCG data and demo song data. Never turn off the power while the data is being loaded.

Selecting and playing a demo song in the Sequencer mode


- ① Press the [SEQ] key (the key will light).
You will enter Sequencer mode.
- ② Access the SEQ 1.1: Play/REC, Play/REC page.




If the SEQ 1.1: Play/REC, Play/REC page does not appear, select it as follows.

- 1) Press the [MENU] key.

The LCD screen will show a list of the pages in Sequencer mode.



- 2) Press the [F1] key to select “P/R,” and press the [F8] (“OPEN”) key.
- 3) Press the [F1] key. The SEQ 1.1: Play/REC, Play/REC page will be displayed.

- ③ Use the cursor keys [, [] to choose “Song Select.”

The song name will be highlighted.

- ④ Use the [INC]/[DEC] keys or other VALUE controllers to select the demo song that you wish to play.
- ⑤ Press the [START/STOP] key.
The key will blink and the selected song will play.
- ⑥ If you wish to stop playback, press the [START/STOP] key once again.

Playing a cue list

Here's how to playback the demonstration cue list. By using a cue list, you can repeatedly play multiple songs that you specify in the cue list, or play songs consecutively. (p.73)

- ① Press the [MENU] key.
- ② Press the [F2] key to select "Cue," and then press the [F8] ("OPEN") key.

The SEQ 2.1: Cue List, Setup&Play page will appear.



- ③ Press the [START/STOP] key.
- ④ To stop playback, press the [START/STOP] key once again.

If the last step is **End**, playback will stop automatically when it reaches that point. If the last step is **Continue to Step01**, playback will return to the first step and continue.

To select a cue list, choose "Cue List Select," and use the same procedure as when selecting a song. Refer to step ④ above.

Contents of the preloaded data and demo songs

Preload PCG

- Preloaded data (programs, combinations, drum kits, arpeggio patterns, global settings)

note When you load the preloaded data, it will be written into internal memory. This data is preserved even when the power is turned off.

! When this data is loaded, the current PCG data in the TR will be replaced. If you do not want to lose this data, save it to an SD card beforehand. (p.46)

Demo Songs

- Demonstration song and demonstration cue list data

note This data is loaded into the internal sequencer memory. The data will be lost when the power is turned off.

! When you load All Demo Songs, any data currently in the sequencer will be rewritten. If you wish to keep this data, you must first save it on an SD card before loading All Demo Songs. (p.46)

Selecting and playing a program

In Program mode you can select and play a program from banks A–D, G, g(d). Here we will show how to select preset programs. Select various programs and hear how they sound.

Selecting a program

- 1 Press the [PROG] key (the key will light).

You will enter Program mode. Make sure that the upper line of the LCD screen indicates “PROG 1.1: Play.”



Selecting a program number

- 2 Make sure that “Program Select” is selected.

If it is not selected, use the cursor keys [▲], [◀], [▼], [▶] to highlight the program name in “Program Select.”

- 3 Use the VALUE controllers to select the program that you wish to play.

You can use the following methods to select a program.

- Rotate the [VALUE] dial.
- Press the [INC] or [DEC] key.
- Use numeric keys [0]–[9] to specify the number, and press the [ENTER] key.

- 4 Audition the sound.

Play a note on the keyboard to hear the sound you selected.

Alternatively, you can press the [AUDITION] key (the key will light) to turn on the Audition function and the TR will automatically play a riff (phrase) suitable for the selected program.



- With the factory settings, the Audition function can be used only on the preloaded programs of banks A–D, and the preset programs G, g(d).

Selecting the program bank

In Program mode, you can switch banks to select programs from another bank.

With the factory settings, banks A, B, C, D and G, g(d) contain programs. (☞ table bellow)

- 5 Press a BANK [A]–[GM] key to select a bank.

The key will light, and the selected bank will be displayed in the left of the LCD screen. For example to select bank B, press the BANK [B] key. (The [B] key will light, and the upper left of the LCD screen will indicate Bank B.)

Bank	Prog. No.	Explanation
A, B, C, D	000...127	for preloaded programs (for user programs)
G	001...128	GM programs
g(d)	(☞VNL)	GM2 drum programs

A, B, C, D

With the factory settings, these banks contain a wide variety of preloaded programs that use the internal PCM ROM multisamples, effects, and arpeggio patterns.

128 programs can be written or rewritten to each bank A–D (for a total of 512).

G, g(d) These banks contain 128 GM programs and 9 GM drum programs that are compatible with the GM sound map. The programs of these banks are read-only. Bank G contains the GM programs. G lets you select 128 programs numbered from 001–128, and g(d) lets you select nine drum programs (☞VNL).

Each time you press the [GM] key, the bank will alternate as shown below.

G→g(d)→G→g(d)→G...

- ☞ For details of the program names etc., refer to “VNL” (Voice Name List).

Selecting programs by category

You can select programs by categories such as keyboard, organ, bass, and drums.

With the factory settings, all the preloaded programs are organized into sixteen categories. You can choose a category, and then select from the programs in that category.


On this instrument, you can use one of the following two methods to select programs by category.

Select by Category

- 1 Make sure that **PROG 1.1: Play** is displayed.
- 2 Press the **[CATEGORY]** key.



The Select by Category dialog box will appear. The categories are displayed in the left side of the screen, and a list of the programs in the selected category are displayed in the right side.

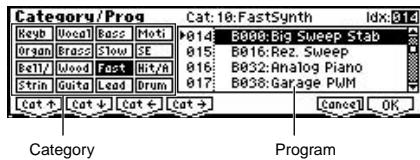

- 3 Use the **[F1]** ("**[Cat ↑]**"), **[F2]** ("**[Cat ↓]**"), **[F3]** ("**[Cat ←]**"), and **[F4]** ("**[Cat →]**") keys to select the desired category.
- 4 Use the **[▲]**, **[▼]** cursor keys to select the desired program.
- 5 To execute, press the **[F8]** ("**OK**") key. To cancel without executing, press the **[F7]** ("**Cancel**") key.

Cat. HOLD (Category Hold)

- 1 Press the **[./HOLD]** key to display **[Cat. HOLD]**.
The category will be held.



- 2 Use the cursor keys **[▲]**, **[◀]**, **[▼]**, **[▶]** to choose "Category," and use the **VALUE** controllers to specify the category.
- 3 Use the cursor keys **[▲]**, **[◀]**, **[▼]**, **[▶]** to choose "Program Select," and use the **VALUE** controllers to successively select programs in that category.
- 4 To exit the Category Hold function, press the **[./HOLD]** key twice to erase the **[Cat. HOLD]** display.

note In **PROG 1.1: Play**, pressing the **[./HOLD]** key will cycle through **[Cat. HOLD]** → **[10's HOLD]** → cancel.

Using 10's HOLD to select programs

You can fix the ten's place of the program number as you select programs.

- 1 Press the **[./HOLD]** key to make the display indicate **[10's HOLD]**.

The ten's place of the program number will be held (fixed).



- 2 By pressing a numeric key **[0]–[9]**, you can input the one's place in a single action.
- 3 You can use the **[INC]/[DEC]** keys to change the ten's place.
- 4 To cancel the 10's HOLD function, press **[./HOLD]** to erase the **[10's HOLD]** display.

Using a connected switch to select programs

A separately sold on/off-type switch (such as the separately sold Korg PS-1) can be connected to the rear panel ASSIGNABLE SWITCH connector, and assigned a program select function. (see p.117)

Selecting programs from a MIDI device

MIDI program change messages can be transmitted from an external MIDI device, and received by this instrument to select programs. (see PG p.234)

Selecting and playing a combination

In Combination mode you can select and play a combination from **banks A–C**. Select various combinations and hear how they sound.

Selecting a combination

- 1 Press the [COMBI] key (the key will light).

You will enter Combination mode. Make sure that the upper line of the LCD screen indicates “COMBI 1.1: Play.”



Selecting a combination number

- 2 Make sure that “Combi Select” is selected.
If it is not selected, use the cursor keys [▲], [▼], [▶], [◀] to highlight the combination name in “Combi Select.”
- 3 Use the VALUE controllers to select the combination that you wish to play.
☞p.21 “Selecting a program” ③
- 4 Audition the sound.
Play a note on the keyboard to hear the sound you selected.

Selecting the combination bank

In Combination mode, you can switch banks to select combinations from another bank. With the factory settings, banks A, B, and C contain combinations. (☞ table bellow)

- 5 Press a BANK [A]–[C] key to select a bank.
The key will light, and the selected bank will be displayed in the left of the LCD screen. For example to select bank B, press the BANK [B] key. (The [B] key will light, and the upper left of the LCD screen will indicate **Bank B**.)

Bank	Prog. No.	Explanation
A, B, C	000...127	for preloaded combinations (for user combinations)

A, B, C With the factory settings, these banks contain a wide variety of preloaded combinations that use multiple programs, effects, and arpeggio patterns.

128 programs can be written or rewritten to each bank A–C (for a total of 384).

- ☞ For details of the combination names etc., refer to “VNL” (Voice Name List).

Selecting combinations by category

You can select combinations from sixteen categories in the same way as for programs. With the factory settings, all the preloaded combinations are organized into sixteen categories. You can choose a category, and then select from the combinations in that category.

- ☞p.22 “Selecting programs by category”

Using 10’s HOLD to select combinations

You can fix the ten’s place of the combination number, so that a combination can be selected simply by pressing a numeric key once to change the one’s place.

- ☞p.22 “Using 10’s HOLD to select programs”

Using a connected switch to select combinations

A separately sold on/off type foot switch such as the Korg PS-1 can be connected to the rear panel ASSIGNABLE SWITCH jack, and used to select combinations. (☞p.117)

Selecting combinations from a MIDI device

MIDI program change messages can be transmitted from an external MIDI device, and received by this instrument to select combinations. (☞PG p.234)


Using controllers to modify the sound

The TR provides various controllers – a joystick, the SW1 and SW2 switches, and the REALTIME CONTROL [1], [2], [3], [4] knobs – that let you modify the tone, pitch, volume, or effects in realtime while you play.

Each time you select a program or combination, try out these controllers to hear how they affect the sound.

note Tonal changes etc. created using these controllers can be recorded on the internal sequencer or on an external MIDI sequencer.

Joystick

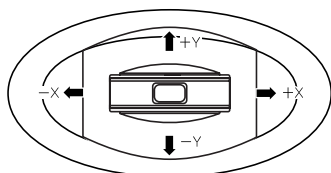

JS(+X): Move the joystick toward the right to apply an effect. Normally this is used to control the pitch (bend up).

JS(-X): Move the joystick toward the left to apply an effect. Normally this is used to control the pitch (bend down).


JS(+Y): Move the joystick away from yourself to apply an effect. Normally this is used to control the oscillator LFO (vibrato).

JS(-Y): Move the joystick toward yourself to apply an effect. Normally this is used to control filter LFO (wah).

note You can use the Lock function of [SW 1] or [SW 2] keys to hold the effect in the current joystick position, before the joystick is released to the center position. For the procedure, refer to “The lock function.”

note You can use the joystick as a source for alternate modulation or effect dynamic modulation, to control program parameters or effect parameters.

SW1, SW2



You can use these keys as sources for alternate modulation or effect dynamic modulation to control program parameters or effect parameters.

These switches can also be used to switch the octave, to turn portamento on/off, or to lock the position of the after touch **lock function** (p.25).

You can specify the way in which the [SW1] and [SW2] keys will operate: either **Toggle**, when the assigned function will be switched on/off each time the key is pressed, or **Momentary**, when the assigned function will be switched on only as long as you hold down the key.

note The function of the [SW1] and [SW2] keys can be verified for Program mode in the 1.1: Play, Program page, or for Combination mode in the 1.1: Play, Combination page. (p.26)

note When you write a program or combination, the on/off status of the [SW1] and [SW2] keys is saved.

note For details on making these settings, refer to “Setting the function of [SW1] and [SW2]” (p.119).

The Lock function

- 1 **Select program bank A001: Acoustic Piano, and play the keyboard.**


To select a program, make sure that you are in Program mode, and press the Bank [A] key, numeric key [1], and then the [ENTER] key.

- 2 **Move the joystick toward yourself (the -Y direction).**

The modulation will deepen, and at the same time, resonance will be applied to give a unique character to the sound.

- 3 **While holding the joystick toward yourself, press the [SW2] screen (The [SW2] key will light).**

The tone at this point will be maintained. (**Lock function**)

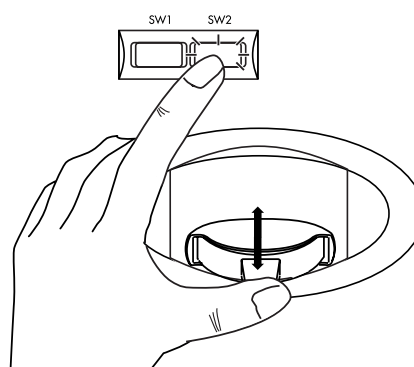

- 4 **Release the joystick, and play the keyboard.**

The tone will stay the same as it was when the [SW2] key was pressed. Moving the joystick toward yourself will not affect the sound.

note In the lower part of the LCD screen, SW2 will indicate **JS-Y Lock**. This means that the function of the [SW2] key is set to **JS-Y Lock**. (It will operate as a **Toggle** switch.)

If the function of the [SW1] or [SW2] key is set to **JS X Lock**, **JS+Y Lock**, or **JS-Y Lock**, the tone that was heard when the joystick is tilted can be maintained even after the joystick is returned to the center position.

Similarly, there is an **AfterT Lock** function that **locks the aftertouch effect**. (PG p.224)

- ⑤ Press the [SW2] key once again to defeat the lock.


note In many programs and combinations, the joystick - Y axis lock function is assigned to the [SW2] key.

REALTIME CONTROLS [1], [2], [3], [4]

These knobs can be used to control the filter cutoff frequency and resonance, the amp and filter EG, volume, portamento time, pan, pitch LFO, or the send levels to the master effects, etc.

- ① Press the **REALTIME CONTROLS [SELECT]** key to switch the function of the realtime controllers to **A-mode**, **B-mode**, or **C-mode**.

Each time you press the key, A-mode, B-mode or C-mode will be selected alternately, and the corresponding LED will light.

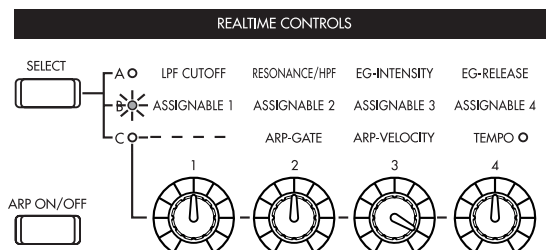

- ② Rotate the desired knob to control the sound, etc.


A-mode controls

In A-mode, knobs [1]-[4] will control/edit the following functions.

note Placing the knobs in the center (12 o'clock) position will produce the values specified by the program parameters.

Knob [1]: LPF CUTOFF


Adjust the cutoff frequency of the low pass filter. When you adjust the cutoff frequency of the filter, the brightness of the sound will change. The effect will depend on the settings of the program parameters, but normally, rotating the knob toward the left will darken the sound, and rotating it toward the right will brighten it.

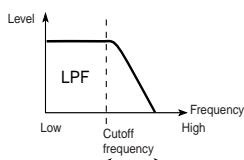


Knob [2]: RESONANCE/HPF

Adjust the resonance level of a low pass filter or the cutoff frequency of a high pass filter. The content that is controlled will depend on the filter type specified by the program.

By adjusting the filter resonance level, you can increase or decrease the resonance level to add a unique character to the sound.

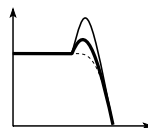


Adjusting the cutoff frequency of the high-pass filter will modify the thickness of the sound from which the low frequency range has been filtered out.

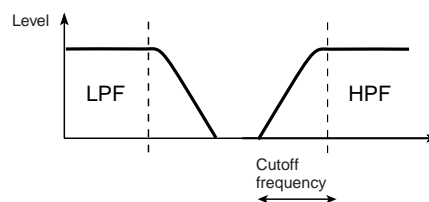

Knob [3]: EG-INTENSITY

Adjust the filter EG intensity (the depth at which the filter EG is applied).


Rotating the knob will affect the depth of the filter EG. Normally, rotating the knob toward the left will make the filter EG apply less deeply, and rotating it toward the right will make the filter EG apply more deeply. Since the filter EG will operate based on the cutoff frequency of the filter, knobs [1] and [3] will work together to control the tonal changes produced by the filter.

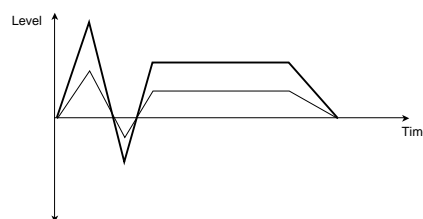

Knob [4]: EG-RELEASE

Adjust the EG release times of the filter and amp. This will determine the time from note-off until the sound disappears.

When you adjust the knob, the release times of the filter EG and the amp EG will change. Normally, rotating the knob toward the left will shorten the release time, and rotating it toward the right will lengthen the release time.

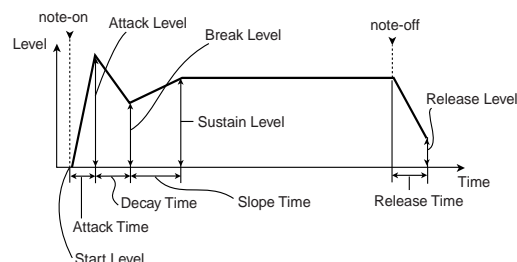

B-mode controls

You can control parameters such as volume, portamento time, pan or filter and amp EG, pitch LFO, and master effect send levels etc.

The B-mode function settings are made for each individual program, combination, or song.

In Sampling mode, the B-mode functions are set for the entire mode (if the EXB-SMPL option is installed) (p.119).

C-mode control

You can control the effect of the arpeggiator in real-time. For details on operation, refer to p.27.

Viewing the parameters that are assigned to [SW1], [SW2] keys, and the REALTIME CONTROLS B mode

In Program and Combination modes, the B-mode functions of the REALTIME CONTROLS knobs [1], [2], [3], and [4] and [SW1]/[SW2] keys can be verified in the 1.1: Play page.



Functions assigned to the [SW1] and [SW2] keys Functions assigned to Knob1-4

Keyboard

Velocity

The force with which you initially strike a note can apply an effect.

Normally this is used to control volume, or the speed or sensitivity of the EG.

After Touch

This effect can be applied by varying pressure on a key that is already being held down.

Normally this is used to control volume, tone (cutoff frequency), or LFO sensitivity etc.

Note Number

Varying amounts of an effect will be applied depending on the position of the key on the keyboard.

Normally this is used to control volume, tone (cutoff frequency), LFO sensitivity, and EG sensitivity etc.

note This can be used as a source for alternate modulation or effect dynamic modulation, to control program parameters or effect parameters.

Foot pedals

Damper Pedal

A separately sold Korg switch-type damper pedal such as the DS-1H can be connected to this instrument. If a DS-1H is connected, it will function as a half-damper pedal. The half-damper function cannot be controlled by other pedals.

Assignable Foot Switch

A separately sold on/off switch such as the Korg PS-1 foot switch can be connected to this instrument, allowing you to turn an assigned function on/off by stepping on the foot switch.

The function of the foot switch is assigned in GLOBAL 1.1: System "Foot SW Assign" (p.117).

Assignable Foot Pedal

A separately sold Korg expression pedal such as the EXP-2 foot controller or XVP-10 EXP/VOL pedal can be connected to the rear panel ASSIGNABLE PEDAL jack, and used to apply an effect.


The function of the foot pedal is assigned in GLOBAL 1.1: System Foot page "Foot Pedal Assign" (p.117).

Using the arpeggiator while you play

The **arpeggiator** is a function that automatically generates arpeggios (broken chords). Most arpeggiators produce an arpeggio when you play a chord on the keyboard.



The chord you played on the keyboard is sounded as an arpeggio (broken chord)

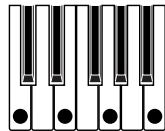

In addition to this, the TR's arpeggiator is a polyphonic arpeggiator that is able to produce a variety of chordal transformations or phrases based on the pitch or timing of the notes you play on the keyboard. These functions let you use the arpeggiator to play a wide range of patterns including drum or bass phrases, and guitar or keyboard backing riffs. It is also effective to use the arpeggiator as part of the sound-creating process when creating subtly-moving pads, synth-sounds, or sound effects.

In addition, the TR features a Dual Arpeggiator that lets you simultaneously use two arpeggio patterns in Combination mode and Sequencer mode. You can take advantage of this in many ways, such as applying separate arpeggio patterns to a drums program and a bass program, or using keyboard split or velocity to switch between two arpeggio patterns.

The TR provides five preset arpeggio patterns (the standard **UP**, **DOWN**, **ALT1**, **ALT2**, and **RANDOM**), and lets you program and store 216 user arpeggio patterns. With the factory settings, these contain a wide variety of preload user arpeggio patterns (see VNL). An arpeggio pattern that you create can also be stored as a user arpeggio pattern (see p.107).

Using the arpeggiator in Program mode

- 1 Press the [PROG] key to enter Program mode, and select a program. (see p.21 "Selecting and playing a program")

As you select various programs, you will notice that the [ARP ON/OFF] key LED will light for some programs. (see p.30 "Other settings for the arpeggiator") Play the keyboard of the TR and the arpeggio will start.

For other programs, you can press the [ARP ON/OFF] key (the key will light) to turn on the arpeggiator. Arpeggios will begin sounding when you play the keyboard.


- 2 As described in the following sections "Settings using controllers" and "Settings in the LCD screen," move the controllers or modify the parameters to change the way in which the arpeggios are played.

Settings using controllers

Arpeggiator on/off

- Each time you press the [ARP ON/OFF] key, the arpeggiator will be switched on/off.

When this is on, the key will light, and playing the keyboard will start the selected arpeggio pattern.

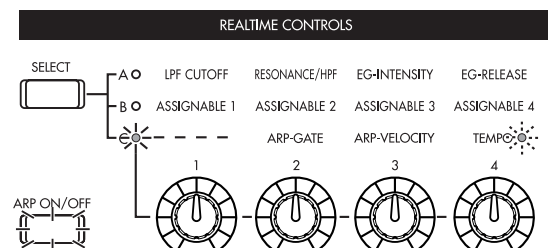

note The on/off status is saved when you write the program, Combination.

! In Combination and Song, depending on the arpeggiator A, B settings, the arpeggio may not start when you press the [ARP ON/OFF] key to turn it on (see p.29).

Adjusting the arpeggiator tempo

- 1 Press the **REALTIME CONTROLS [SELECT]** key to make the right “C” LED light.
- 2 Rotate the **[TEMPO]** knob to adjust the tempo.

The “♩=” value in the upper right of the LCD screen will change. You can set this in the range of **40–240**. The **[SELECT]** key LED will blink at quarter-note (♩) intervals.

You can also Use the cursor keys [**▲**], [**◀**], [**▼**], [**▶**] to select “♩=,” input the tempo using numeric keys [0]–[9], and press the **[ENTER]** key to set the tempo. Alternatively, you can set the tempo using the **[VALUE]** dial or the **[INC]/[DEC]** keys. The tempo will blink at the specified tempo.

note You can also tap the **[TIMBRE/TRACK]** key (Tap Tempo) to set the tempo (☞p.120).

note The Tempo setting is saved when you write the program.

note The arpeggio playback speed is affected by the “Reso (Resolution)” setting (1.1: Play, Arp. Play page, 6.1: Ed-Arp., Arpeg. Setup page).

note If “MIDI Clock” (GLOBAL 2.1: MIDI) is set to **External** or **Ext-USB**, the display will indicate “♩=EXT.” The tempo will be synchronized to an external MIDI device, and it will not be possible to adjust the tempo on the TR.

Adjusting the length of the arpeggio notes

- 1 Press the **REALTIME CONTROLS [SELECT]** key to make the right “C” LED light.
- 2 Rotate the **[ARP-GATE]** knob to adjust the duration of the arpeggiated notes.

Rotating the knob toward the left will shorten the notes, and rotating it toward the right will lengthen the notes. At the center position (12 o’clock), the note length will be as specified by the program parameter “Gate” (6.1: Ed-Arp., Arpeg. Setup page).

note The knob setting is saved when you write the program.

note You can control the effect by simultaneously adjusting the **REALTIME CONTROLS A-mode [4]** (**EG-RELEASE**) knob.

Adjusting the strength of the arpeggio notes

- 1 Press the **REALTIME CONTROLS [SELECT]** key to make the right “C” LED light.
- 2 Rotate the **[ARP-VELOCITY]** knob to adjust the strength of the arpeggiated notes.

Rotating the knob toward the left will make the notes weaker, and rotating the knob toward the right will make the notes stronger. At the center position (12 o’clock), the velocity will be as specified by the program parameter “Velocity” (6.1: Ed-Arp., Arpeg. Setup page).

note The knob setting is saved when you write the program.

note You can control the tone effectively by simultaneously adjusting the **REALTIME CONTROLS A-mode [1]** (**LPF CUTOFF**), **[2]** (**RESONANCE/HPF**), and **[3]** (**EG-INTENSITY**) knobs.

Settings in the LCD screen

- In **PROG 1.1: Play**, press the **[F3]** key to select the **Arp. Play** page.



Selecting an arpeggio pattern

An arpeggio pattern can be selected from preset arpeggio patterns **P000–P004** and user arpeggio patterns **U000 (INT)–215 (User)**. With the factory settings, **U000–199 (INT)** contain a wide variety of preset user arpeggio patterns (☞VNL)

- Use the cursor keys [**▲**], [**◀**], [**▼**], [**▶**] to select “Pattern,” and use the **[VALUE]** dial or the **[INC]/[DEC]** keys to select the arpeggio pattern. To select a user arpeggio pattern, use numeric keys [0]–[9] to input the pattern number, and press the **[ENTER]** key.

Changing the timing value of the arpeggio notes

The “Reso (Resolution)” parameter in the LCD screen lets you set the timing value of the arpeggiated notes in a range of ♩₃–♩.

- Use the cursor keys [**▲**], [**◀**], [**▼**], [**▶**] to select “Reso,” and use the **[VALUE]** dial or the **[INC]/[DEC]** keys to specify the spacing of the arpeggiated notes.

Selecting the octave range in which the arpeggio is sounded

Use the “Octave” in the LCD screen to specify the range of octaves in which the arpeggio will be sounded (☞p.104).

- Use the cursor keys [**▲**], [**◀**], [**▼**], [**▶**] to select “Octave,” and use the **[VALUE]** dial or **[INC]/[DEC]** keys to specify the range of octaves in which the arpeggio will be sounded.

Sounding an arpeggio in the order of the pitches in the chord you played

You can select whether the notes of the arpeggio will be sounded in the order of the pitches in the chord you played (regardless of the order in which you actually played the notes), or in the order in which you played the notes.

- Use the cursor keys [**▲**], [**◀**], [**▼**], [**▶**] to select the “Sort” check box, and use the **[VALUE]** dial or the **[INC]/[DEC]** keys to make the setting.

Checked: the arpeggio will sound each note in the order of its pitch, regardless of the order in which you actually played the notes.

Unchecked: the arpeggio will sound each note in the order in which you actually played the notes.

Letting the arpeggio continue playing even after you take your hand off the keyboard

You can select whether the arpeggio will continue playing when you take your hand off the keyboard, or whether the arpeggio will stop playing when you take your hand off the keyboard.

- Use the cursor keys [▲], [◀], [▼], [▶] to select “Latch,” and use the [VALUE] dial or the [INC]/[DEC] keys to make the setting.

Checked: The arpeggio will continue playing even after you remove your hand from the keyboard.

Unchecked: The arpeggio will stop playing when you remove your hand from the keyboard.

Synchronizing the arpeggiator to your keyboard timing

You can specify whether the arpeggio will begin at the moment you play the keyboard, or whether it will always play in synchronization to the MIDI clock tempo.

- Use the cursor keys [▲], [◀], [▼], [▶] to select “Key Sync.,” and use the [VALUE] dial or the [INC]/[DEC] keys to make the setting.

Checked: When you take your hand completely off of the keyboard and then play the first note-on, the arpeggio pattern will start from the beginning. This setting is suitable when you want the arpeggio to start from the beginning of the measure as you are playing in realtime.

Unchecked: The arpeggio will always be synchronized to the MIDI clock tempo.

Sounding both the arpeggio notes and the notes you play

- Use the cursor keys [▲], [◀], [▼], [▶] to select “Keyboard” check box, and use the [VALUE] dial or the [INC]/[DEC] keys to make the setting.

Checked: The notes you play on the keyboard and the notes played by the arpeggiator will both sound.

Unchecked: Only the arpeggio notes will sound.

Using the arpeggiator as you play in Combination mode

In Combination mode the TR provides dual arpeggiators, allowing you to run two arpeggio patterns simultaneously.

- ① Press the [COMBI] key to enter **Combination mode**, and select a combination. (see p.23 “Selecting and playing a combination”)

As you select various combinations, you will notice that the [ARP ON/OFF] key will light for some combinations. (see “Other settings for the arpeggiator”) When you play a key on the keyboard, the arpeggiator will start.

For other combinations, you can press the [ARP ON/OFF] key (the key will light) to turn on the arpeggiator.

- ② As described in the preceding section “Settings using controllers” and the following section “Settings in the LCD screen,” move the controllers or modify the parameters to change the way in which the arpeggios are played.

▲ The [ARP ON/OFF] key and the REALTIME CONTROLS C-mode [TEMPO], [ARP-GATE], and [ARP-VELOCITY] knobs are valid for both arpeggiators A and B. Their state will be memorized when the combination is written.

Settings in the LCD screen

- In COMBI 1.1: Play, press the [F4] key to select the Arp. Play A page, and make settings for arpeggiator A.

In COMBI 1.1: Play, press the [F5] key to select the Arp. Play B page, and make settings for arpeggiator B.



Select the arpeggiator(s) that will run

Use the “Arpeggiator Run” check boxes to specify the arpeggiator(s) that you want to run. The arpeggiator(s) that are checked here will operate when the [ARP ON/OFF] key is on.

However, the arpeggiator will play a timbre only if the table displayed beside the check boxes assigns arpeggiator A or B to a Timbre 1–8. These settings are made in COMBI 6.1: Ed-Arp., Setup page “Assign” (see p.105).

Arpeggiator-A, Arpeggiator-B

For each arpeggiator A and B, you can make settings for “Pattern,” “Reso (Resolution),” “Octave,” “Sort,” “Latch,” “Key Sync,” and “Keyboard.” (see p.28)


Checking the structure of a user arpeggio pattern

Let's see how combination C053: Echo Jamm is constructed.

- ① Select combination C053: Echo Jamm, and look at the Arp. Play A page and Arp. play B page.



- As you can see from the “Timbre Assign” table in the upper right, arpeggiator A is assigned to **timbre 4 and 8**, and arpeggiator B is assigned to **timbre 2**. When you play the keyboard the **U119 (INT): Dr-BigBeats 2** arpeggio pattern will play the program **B084: Drum’n’Bass Kit** of timbre 4. The **U039 (INT): Gt-Stab Rhythm** arpeggio pattern will play the program **B108: Funkin’ Guitar** of timbre 2.
- If you **uncheck** “Arpeggiator Run A” or “Arpeggiator Run B,” the unchecked arpeggiator will stop. If you **check** it once again and play the keyboard, the arpeggiator will begin running.
- Look at the COMBI 6.1: Ed-Arp., Zone page, and you will see that the A keys “Btm” and “Top” are set so that arpeggiator A will operate only for B3 and lower keys, and that the B “Top Key” and “Bottom Key” are set so that arpeggiator B will operate only for C4 and higher keys.

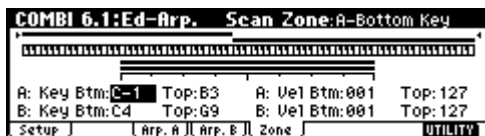

Other settings for the arpeggiator

You can also set “Gate,” “Velocity,” “Swing,” and “Scan Zone.” These parameters are set in PROG 6.1: Ed-Arp, COMBI 6.1: Ed-Arp. (p.104).

Linking the arpeggiator to program, combinations

You can specify whether the arpeggiator settings written in a program or combination will also be selected when you switch programs or combinations, or whether the arpeggiator status will not change when you switch programs or combinations.

With the factory settings, the former is selected. Use the latter when you want to keep the same arpeggio pattern running, and change only the program sound. This setting is made in “Auto Arp.” (GLOBAL 1.1: System, Basic).

Creating a user arpeggio pattern

Arpeggio patterns that you create can be written to U000 (INT)–215 (User).

These can be created in GLOBAL 6.1: Arp.Pattern (p.108).

Playing with the RPPR (Realtime Pattern Play/Recording) function

This instrument's Sequencer mode provides an **RPPR (Realtime Pattern Play/Recording)** function.

Using the **RPPR function**, each note of the keyboard can be assigned to a preset pattern or user pattern and a track that will play the assigned pattern. You can then playback the assigned pattern in realtime (and record it, if desired) simply by playing a note. (Preset patterns suitable for playing by the drum track are already provided in internal memory.)

Here we will explain how to play a demo song using the RPPR function.

- ① Load the demo song data as described in "Loading demo playback data" (p.19).
- ② Press the [SEQ] key (the key will light) to enter Sequencer mode, and access the SEQ 1.1: Play/REC, Play/REC page.
- ③ In "Song Select," select 001:Midnight Sun.

Select the song as described in "Selecting and playing a demo song in Sequencer mode" (p.19).



- ④ Make sure that the RPPR check box is checked.

Checked: The specified RPPR (set in SEQ 5.1:PPPR, RPPR Setup) will function.

Unchecked: RPPR will not function. Operation will be as in normal Sequencer mode.

- ⑤ Press a key.

The pattern assigned to that key will playback. In some cases, the pattern will continue playing after you release your hand from the keyboard. You can stop playback either by pressing that key once again, or by pressing a key in the area of C2 or below.



Shutdown Keys:

When you play a key in the range of C-1 – C2, the currently-playing pattern will stop.

Pattern Assignable:

A pattern and track can be assigned to each of the 72 keys in the range of C#2–C8. If you do not assign a key, it can be used to play as usual.

As in the example shown in the following diagram, you can make one key play a drums pattern, another key a bass phrase, and yet another key play guitar chords, all by specifying a different pattern and track for each key.

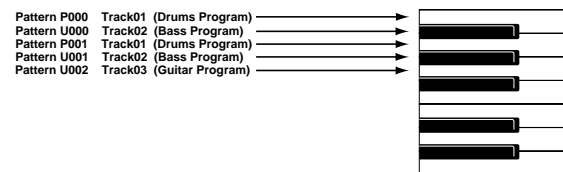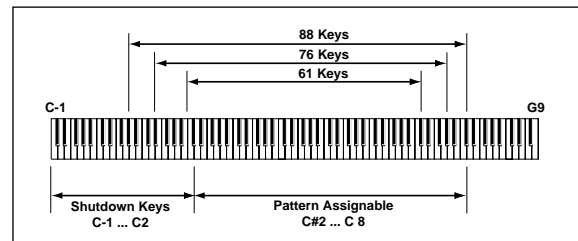

Simple program editing

By operating the performance editor and the realtime controllers you can easily and intuitively modify the sound of a program.

Program editing refers to the process of modifying the parameters that make up a program, in order to modify the sound or change the controller, effect settings etc.

note More detailed editing can be performed in PROG 2.1: Ed-Basic – 7.2: Ed-MasterFx.

Performance Edit

By using the eight sliders of the Performance Editor, you can make overall adjustments to the sound. When you move a slider, multiple program parameters are adjusted simultaneously.

① Press the [PROG] key (the key will light) to enter Program mode.

② Press the [F2] (“P.Edit”) key.

The Perform. Edit page will appear.



③ Select the Program.

④ Use the Performance Editor to adjust the sound. (see PG p.3)

Use the cursor keys [▲], [◀], [▼], [▶] to select the desired performance editor slider, and use the VALUE controller to adjust the setting.

note If you want to reset the value, press numeric key [0] and then press the [ENTER] key to restore the previous setting.

Octave: Indicates the octave setting.

Pitch Stretch: Simultaneously adjusts the transpose and tune settings of the oscillator. This allows you to produce a variety of tonal changes without losing the character of the original sound.

note This is particularly effective for acoustic-type programs such as guitar, bass, or piano. Select various programs and try this out.

OSC Balance: Adjusts the level balance between oscillators 1 and 2.

⚠ For programs whose “Mode (Oscillator Mode)” (PROG 2.1: Ed-Basic, Prog Basic page) setting is **Single**, oscillator 2 will not sound. Only the level of oscillator 1 will change. For a **Drums** program, this performance editor will have no effect.

Amp Level: Indicates the amp level. This will adjust the volume of the entire program.

Attack Time: Indicates the attack time of the filter EG and amp EG. This will adjust the speed of the attack from note-on.

⚠ In order to maximize the effect of the Attack Time adjustment, the amp EG Start Level, Attack Level, Start Level Modulation, and Attack Time Modulation parameters are also adjusted.

Decay Time: Indicates the decay time and slope time of the filter EG and amp EG.

IFX Balance: This simultaneously adjusts the “W/D (Wet/Dry)” balance of all insert effect.

MFX Balance: This simultaneously adjusts the Return 1 and 2 parameters of the master effects.

⚠ Depending on the settings of the program parameters, the result may not be noticeable.

⑤ If you want to save the modified sound, select the utility menu command “Write Program,” and write the program. (see p.43)

It is a good idea to edit the name when you write the program.

note If you want to overwrite the program using the same program number, press the [REC/WRITE] key and then press the [F8] key.

⚠ The edited content will be lost if you select another program or turn off the power before saving.

Realtime controls

The REALTIME CONTROLS [1]–[4] knobs can be used to edit parameters such as the filter cutoff frequency, resonance, the amp and filter EG, volume, portamento time, pan, pitch LFO, and master effect send level etc. (see p.25).

You can also modify settings for the arpeggiator. (see p.27)

⚠ If CC#70–79 are assigned to REALTIME CONTROLS A-mode or B-mode, the sound edited by knobs [1]–[4] can be saved by the Program Write operation (see p.43). Arpeggiator-related settings in C-mode can also be saved.

Simple combination editing

A combination is a set of multiple (up to eight) programs, and allows you to create complex sounds that could not be produced by a single program.

Combination editing refers to the process of modifying the sound of a combination by changing the program selected for each timbre or adjusting the keyboard range and velocity range, or by modifying the controller, and effect settings.

You can edit a combination in COMBI 2.1: Ed-Prog/Mix-7.2: Ed-MasterFX, but can also make settings for "Program Select," "Pan," and "Volume" in COMBI 1.1 Play as well.

An example of editing

As an example, here's how to do some simple editing on combination **Bank C064: Modern Piano**.

- ① Press the [COMBI] key (the key will light) to enter **Combination mode**.
- ② Select **Bank C064: Modern Piano**.



This combination **layers** (simultaneously sounds) the programs of timbre 1 and timbre 2. Timbre 1 sounds **C001: Attack Piano**, a piano with a crisp attack. Timbre 2 sounds **D017: Vintage EP**, a classic electric piano. These two programs are layered to produce a piano-type sound that you may have heard in various contexts.

note A **timbre** consists of a program together with multiple parameters that control that program. A combination can use up to eight of these timbres.

Selecting the program for a timbre

- ③ **Select the Prog page.**
Press the [F2] ("Prog") key. Now you can specify the programs for timbres 1–8.
- ④ **Now let's change the program of timbre 2 to a different program.**
Use the cursor keys [▲], [◀], [▼], [▶] to select "Program Select" for timbre 2 (it will be highlighted).




note You can directly select the program for a timbre by holding down the [TIMBRE/TRACK] key and pressing the nearest [F1]–[F8] key. You can select pan or volume in the same way.

For this example, select **D003: Legato Strings**. This is a layered combination with piano and rich strings. Then consecutively press the [D] key, the [3] key, and the [ENTER] key.

Alternatively, the program for a timbre can be selected by category.

Choose "**Program Select**," and press the [CATEGORY] key.

The Select by Category dialog box will appear.

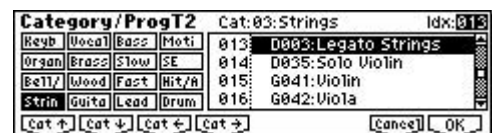

Use the [F1] ("Cat +"), [F2] ("Cat -"), [F3] ("Cat ←"), and [F4] ("Cat →") keys to select the desired category. For example if you want to select string-type programs rather than the **00: Keyboard** category shown in the above display, press the [F2] ("Cat -") key three times to select **03: Strings**. You can use the cursor keys [▲], [▼] to successively select string-type programs. When you are happy with the selected program, press the [F8] ("OK") key to finalize your selection.

Listening to the program sound of just one timbre

- Press the [F8] (“UTILITY”) key to access the utility menu, and press the [F7] key to choose “Solo Selected Timbre.” Press the [F8] (“OK”) key.



Now you will hear only the program sound of the currently selected timbre. The lower part of the LCD screen will indicate [Solo].



To cancel this setting, choose “Solo Selected Timbre” once again and press the [F8] (“OK”) key.

Adjusting the stereo location of the sound

- ⑤ Select the Mixer page.

Press the [F3] (“Mix”) key. Here you can adjust the pan and volume for timbres 1–8.



- ⑥ Adjust the stereo location in “Pan” of timbre 2.

Use the cursor key [▲], [◀], [▼], [▶] to choose “Pan” (highlighted) for timbre 2.

Use the VALUE controller to change the value.

A setting of C064 is center, L001 is far left, and R127 is far right. With a setting of RND, the stereo location will change randomly between left and right each time a note is played.

Adjusting the volume

- ⑦ Adjust the “Volume” of timbre 2.

Use the cursor key [▲], [◀], [▼], [▶] to choose “Volume” (highlighted) for timbre 2.

Use the VALUE controller to change the value.



Adjusting the volume while preserving the volume balance between timbres

- Press the [F8] (“UTILITY”) key to access the utility menu, and press the [F7] key to choose “Hold Balance.” Press the [F8] (“OK”) key.



The upper right of the LCD screen will indicate “Hold Bal.”



When you change the “Volume” value of any timbre, the volume of all timbres will also change to preserve the volume balance at the time you checked the Hold Balance setting.

To cancel this setting, choose “Hold Balance” once again and press the [F8] (“OK”) key.

Writing the combination

- ⑧ If you want to save the sound you modified, select the utility menu command “Write Combination,” and write it. (p.43)

It is a good idea to edit the name when you write the combination.

note If you want to overwrite the edited combination onto the same combination number, press the [REC/WRITE] key and then press the [F8] key.

⚠ The edits you make will be lost if you select another combination or turn off the power before saving.

Sampling (recording a sample)

If the EXB-SMPL option (sold separately) is installed, you will be able to record 48 kHz 16 bit stereo samples. Sampled sounds can be used in a program, combination, or song.

Here we will explain the process of making sampling settings, recording the actual sample, saving it, and converting a multisample into a program. We will also explain how a sample such as a drum phrase can be played back repeatedly. For other procedures and more detailed explanations, refer to p.88 and PG p.89.

Note In order to perform the steps described below, the EXB-SMPL option must be installed. (PG p.260)

Sampling a sound and playing it back as "one-shot"

1. Connect a mic and make input settings


① Turn off the power. Then turn it on again.

Note When you turn off the power, all unsaved sample data will be erased. If you want to keep any of the sample data, save it before you continue.

Note This explanation assumes that you are starting from the initial power-on state.

② Connect a mic to the AUDIO INPUT 1 jack located on the rear panel of the EXB-SMPL.

Set the AUDIO INPUT [MIC/LINE] switch to the MIC position, and set the [LEVEL] knob to the center.

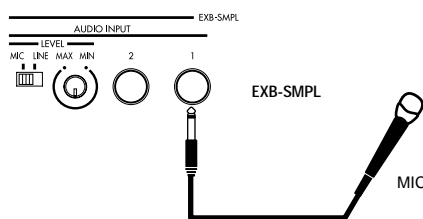

③ Press the [SAMPLING] key to enter Sampling mode.

Note If the EXB-SMPL option is not installed, the display will indicate "No Sampling Upgrade Installed," and it will not be possible to enter this mode.

④ Press the [F3] ("In/Pref") key to select the SMPL 1.1: Recording, Input/Pref page.



⑤ In the Input1 area, set "BUS" to L/R, specifying the bus to which the AUDIO INPUT 1 jack will be input.

Make sure that the Input1 level ("Lvl") is 127, and the "Pan" is L000.

Note Be aware that when "BUS" is changed from Off to L/R or IFX, the volume level to the AUDIO OUT L/MONO and R jacks or to the headphones may rise abruptly.

2. Set the recording level

① Speak into the mic at the volume that you will use for recording.


If the display indicates "ADC OVER!" (AD converter input overload!), turn the rear panel [LEVEL] knob in the direction of MIN to adjust the level appropriately.

Note For the ideal audio quality, the level should be slightly lower than when the "ADC OVER!" display appears (i.e., the highest level that does not produce an overload).

② Press the [REC/WRITE] key.

Speak into the mic at the volume that you will use for recording.

The level meter will show the input volume.

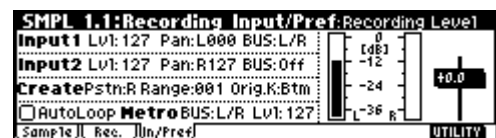

If the display indicates "CLIP!," use the VALUE controller to lower the "Recording Level" slider (located in the right of the display) from the +0.0 setting down to an appropriate level.

③ When you have finished making adjustments, press the [REC/WRITE] key.

3. Specify the recording method (Auto)

① In the lower left of the SMPL 1.1: Recording, Input/Pref page, select the "Auto Loop On" check box, and press the [DEC] key to un-check it.

② Press the [F2] ("Rec.") key to select the SMPL 1.1: Recording, Recording page.



③ In REC Setup, set "Mode (REC Mode)" to "Auto," and set "Threshold" to -30.

With this setting, recording will begin automatically when the audio input reaches -30 dB or higher in record-ready mode.

Set "Pre Trigger" to 5 ms.

With this setting, sample recording will begin 5 ms earlier than (i.e., immediately before) sampling is actually triggered, so that the very beginning of the sound is not lost.

note As an alternative to the **Auto** setting for "Mode (REC Mode)," you can set this to **Manual** and record manually. (p.39)


④ In Sample Setup, set "Mode (Sampling Mode)" to L-Mono.

With this setting, the internal L channel will be sampled in mono.

4. Create a multisample and indexes

① Press the [F1] ("Sample") key to select the SMPL 1.1: Recording, Sample page.

Immediately after the power has been turned on, 000 will be selected as the multisample "MS."

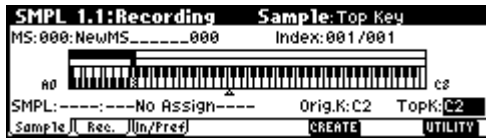


note If you want to create a new multisample, use the numeric keys to input the number of the multisample that you want to create, and press the [ENTER] key.

② Set "Orig.K (Original Key)" and "TopK (Top Key)" to C2.

When you play the key designated by "Orig.K," the sample will sound at the same pitch at which it was sampled.

note You can make this setting easily by holding down the [ENTER] key and pressing the C2 key.

③ Press the [F3] ("In/Pref") key to access the SMPL 1.1: Recording, Input/Pref page.

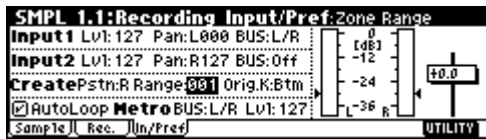


④ Set Create "Range (Zone Range)" to 001.

When you create a new index, the width of the zone will be set to one key.

5. Record a sample

① Press the [F1] ("Sample") key to access the SMPL 1.1: Recording, Sample page.

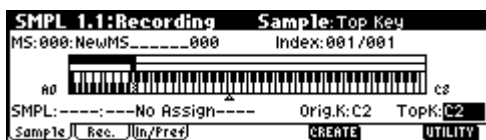


② Press the [REW/WRITE] key. Press the [START/STOP] key to enter record-ready mode.

Speak the word that you want to sample. (Example: "It's")

Recording will start when the input exceeds the "Threshold" level.

When you finish speaking, press the [START/STOP] key to stop sampling.

A sample has now been created. The sample you recorded is automatically assigned to "SMPL."

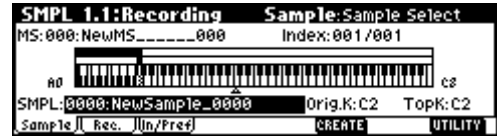

You can listen to the sampled sound by playing the "Orig.K" note or pressing the [AUDITION] key.

③ Press the [F6] ("CREATE") key to create a new index.

④ Press the [REC/WRITE] key. Press the [START/STOP] key.

Speak the word that you want to sample. (Example: "So")

When you finish speaking, press the [START/STOP] key to stop sampling.

⑤ Repeat steps ③ and ④ to record additional samples.

(Example: "Easy," "To," "Sample," "With" "TR")

⑥ Play consecutive notes on the keyboard.

Play a chromatic scale upward, starting at the C2 key. The samples you recorded will be played one after another.

(In this example, playing notes C2 through F#2 in sequence will produce "It's So Easy To Sample With TR")

Using the insert effect while you sample

① In step ⑤ of the preceding section "1. Connect a mic and make input settings," set the Input1 "Pan" to C064, and "BUS" to IFX.



② Press the [MENU] key to access the PAGE MENU.




Press the [F7] ("IFX") key, and then press the [F8] ("Open") key.

The SMPL 7.1: Insert Effect, Setup page will appear.

- ③ Select “Insert Effect,” use the numeric keys to enter 52, and press the [ENTER] key to confirm 52: Rev Hall.

Select “IFX On/Off,” and press the [INC] key to turn it ON.

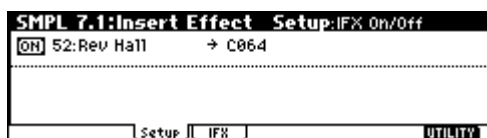

- ④ Speak into the mic, and verify that reverb is applied to the sound.

You can adjust the effect settings in the IFX page ([F4] key).

- ⑤ After pressing the [EXIT] key, press the [F2] (“Rec.”) key to access the SMPL 1.1: Recording, Recording page.



- ⑥ In Sample Setup, set “Mode (Sample Mode)” to Stereo.

Now the sound of the internal LR channels can be sampled in stereo.

- ⑦ Press the [F1] (“Sample”) key, and then press the [F6] (“CREATE”) key to create a new index.

- ⑧ Press the [REC/WRITE] key. Press the [START/STOP] key, and speak the word(s) that you want to sample.

Recording will begin according to the “Threshold” setting.

Press the [START/STOP] key to stop.

- ⑨ Play the keyboard.

When you play the “Orig.K” note or press the [AUDITION] key, the sampled sound will be heard.


Assigning a name to the sample or multisample

The TR allows you to create up to 4,000 samples and 1,000 multisamples (limited by the amount of memory). It is a good idea to assign names so that you can distinguish individual samples and multisamples.

Naming a multisample

- ① Press the [F1] (“Sample”) key to access the SMPL 1.1: Recording, Sample page.
- ② Select “MS,” and use the [INC]/[DEC] keys to select the multisample to which you want to assign a name.
- ③ Press the [F8] (“UTILITY”) key to access the utility menu, use the [F7] key etc. to select “Rename MS,”

and press the [F8] (“OK”) key.

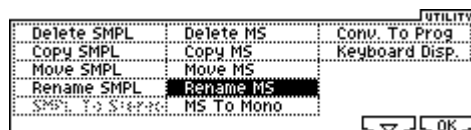

A dialog box will appear.



Press the [F5] (“Name”) key to display the text dialog box, and assign a name of SMPL_Demo.



Press the [F1] (“Clear”) key.

Input the first character. Use the [VALUE] dial and the [INC]/[DEC] keys or [▲], [◀], [▼], [▶] keys to select “S”.

Input the second character. Press the [F6] key. Use the [VALUE] dial and the [INC]/[DEC] keys or [▲], [◀], [▼], [▶] keys to select “M”.


Repeat these steps to input all of the characters, and then press the [F8] (“OK”) key twice. (p.44)

note A stereo multisample will have a -L and -R displayed at the end of the name, meaning that you will be able to input 14 characters. (The -L and -R are fixed.) You can input 16 characters for a mono multisample. This also applies to samples.

Naming a sample

- ① Press the [F1] (“Sample”) key to access the SMPL 1.1: Recording, Sample page.
- ② Select “Index,” and use the [INC]/[DEC] keys to select the sample to which you want to assign a name.

For this example, select “Index” 001.

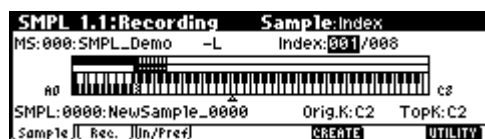

It is also possible to select a sample in “SMPL,” but since the sample assigned to each index can change, you should use “Index” to select a sample.

- ③ Press the [F8] (“UTILITY”) key to access the utility menu, use the [F7] key etc. to select “Rename SMPL,” and press the [F8] (“OK”) key.

When the dialog box appears, press the [F5] (“Name”) key to access the text dialog box, and assign the desired sample name. (Example: “It’s”) Refer to step ③ of “Naming a multisample.”

- ④ Select “Index,” select the next sample that you want to name, and use the utility menu command “Rename SMPL” to assign a name to that sample.


Saving sample data

Here's how to save a sample or multisample that you created.

- ⚠ All samples and multisamples in the TR will be lost when the power is turned off.
- ① Insert an SD card into the slot. Alternatively, make sure that settings are made correctly for a connected external SCSI device.
- ② Press the [MEDIA] key to select Media mode.
- ③ Press the [F2] ("Save") key.



- ④ If you want to save to a different device, use the media select setting (Media:) to select the device on which you want to save the data.
- ⑤ Press the [F8] ("UTILITY") key to access the utility menu, and press the [F7] key to select "Save Sampling Data." Press the [F8] ("OK") key to display the following dialog box.



- ⑥ Press the [F5] ("Name") key to access the text dialog box, assign a filename of SMPL_DM1, and press the [F8] ("OK") key.
 - ⑦ Make sure that All is selected for the "To:" field, and press the [F8] ("OK") key to save the data.
- When saving is completed, a file with an extension of .KSC together with .KMP and .KSF files in folders will be saved. For details on each file, refer to PG p.147 "About Korg format PCM data files."

Converting a multisample into a program

A multisample you created can be converted into a program. By converting the data into a program, a sample or multisample you created in Sampling mode can be used in Program mode, Combination mode, or Sequencer mode.

- ① Create a multisample. (PG p.36)
- ② Press the [F1] ("Sample") key to access the SMPL 1.1: Recording, Sample page.
- ③ Press the [F8] ("UTILITY") key to access the utility menu.

Press the [F7] key to select "Conv.To Prog," and press the [F8] ("OK") key.

The following dialog box will appear.



- ④ In the "To:" field, select the program into which the data will be converted.
- ⚠ When you execute the Convert operation, the program in the conversion destination location will be overwritten and replaced by the converted program.
- ⑤ Set the "Use Destination Program Parameters" setting.

For this example, **uncheck** this. If you execute conversion with this unchecked, the program will be created with the sound that you heard in Sampling mode.

- note** If you want to use the program parameters of a preloaded program, copy that program to bank D127 before you perform this operation. Use the "To:" field to select that program, and check "Use Destination Program Parameters" before you perform the conversion.

However if you want to convert a stereo multisample with "Use Destination Program Parameters" checked, you must change the "Mode (Oscillator Mode)" to Double for the conversion destination program ("To") before executing the conversion.

- ⑥ As necessary, press the [F5] ("Name") key to access the text dialog box and assign a program name. Press the [F8] ("OK") key. A dialog box will ask you for conformation. Press the [F8] ("OK") key once again, and the conversion will begin.
- ⑦ Listen to the converted program.

Move to Program mode, select the program (D127), and play the keyboard to hear the sound.

- ⚠ The converted program settings will automatically be stored in internal memory, but the sample data you created will be lost when the power is turned off. In order to reproduce the sound of the program after the power is turned on again, you must first load the previously-saved sample data in Media mode. When loading, it is best to set ".KSC Allocation" to Clear. When saving, it is a good idea to execute "Save All" (PG p.152) to save the samples and multisamples along with the converted program, and then load all of this data together. (PG p.143, 147)


Sampling and looping a drum phrase

Here's how you can sample a drum phrase (or similar phrase) from an audio CD, and loop the playback.

You will need to provide a drum rhythm loop sample. Initially, it is a good idea to begin with a rhythm loop sample that has a fairly simple beat. As an example, we will sample one measure of a 140 BPM drum phrase in a 4/4 time signature.

1. Connect your external audio device and make input settings


- 1 Turn off the power. Then turn it on again.

 When you turn off the power, all sampling data will be erased. Be sure to save any important data before you perform this step.

note This explanation assumes that you are starting from the default state immediately after power-on.

- 2 Connect the AUDIO INPUT 1, 2 jacks on the rear panel of the EXB-SMPL to the AUX OUT L and R jacks of your CD player.

Set the AUDIO INPUT [MIC/LINE] switch to the LINE position, and set the [LEVEL] knob near the center.

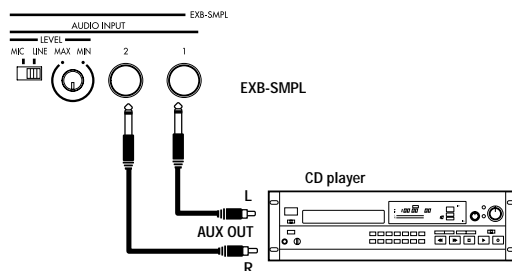


- 3 Press the [SAMPLING] key to enter Sampling mode.
- 4 Press the [F3] ("In/Pref") key to select the SMPL 1.1: Recording, Input/Pref page.



- 5 Set various parameters so that the signal from the AUDIO INPUT jacks will be input to the TR.

Make the following settings.

Input 1: "Lvl" 127, "Pan" L000, "BUS" L/R
Input 2: "Lvl" 127, "Pan" R127, "BUS" L/R

 When you change the setting from Off to L/R or IFX, the volume level of the AUDIO OUT L/MONO and R jacks or the headphone volume may rise abruptly. Please use caution.

2. Set the recording level


- 1 Play back the audio source that you want to record.

If the display indicates "ADC OVER!" (AD converter input overload!), lower the level by turning the rear panel [LEVEL] knob to an appropriate position. Alternatively, lower the level of the output source.

note The best audio quality will be obtained at a level slightly lower than when the "ADC OVER!" indication appears (i.e., the highest level that does not cause an input overload).

- 2 Press the [REC/WRITE] key.

The level meter allows you to check the volume of the input.

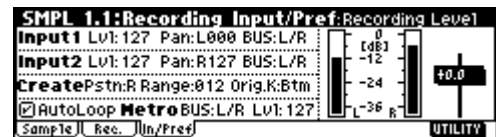

If the display indicates "CLIP!," use the VALUE controller to lower the "Recording Level" slider (located in the right of the display) from the +0.0 position to an appropriate level.

- 3 When you have finished making adjustments, press the [REC/WRITE] key. Also stop playback of your audio source.

3. Specify the recording method (Manual)

- 1 Press the [F2] ("Rec.") key to access the SMPL 1.1: Recording, Recording page.



- 2 In REC Setup, set "Mode (REC Mode)" to Manual to specify how recording will begin.


note As an alternative to setting "Mode (REC Mode)" to Manual and recording manually, you can select Auto for automatic recording. Recording can be performed using either method. (see p.35)

- 3 In Sample Setup, set "Mode (Sample Mode)" to Stereo.

With this setting, the sound of the internal LR channels can be sampled in stereo.

4. Record the sample

- 1 Press the [F1] ("Sample") key to access the SMPL 1.1: Recording, Sample page.

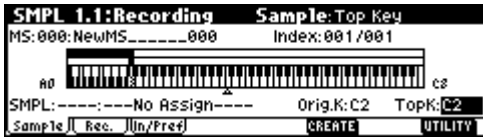

- 2 Press the [REC/WRITE] key.
- 3 At the moment that you wish to start sampling, press the [START/STOP] key.

Sampling will start.

note It is a good idea to allow a bit of extra time before you start and after you stop sampling.

- 4 At the moment that you wish to stop sampling, press the [START/STOP] key.

Sampling will stop.

A 140 BPM drum phrase has now been sampled. The sample will automatically be assigned to "SMPL."

! Sampling will stop automatically if the remaining amount of memory reaches zero.

- 5 Listen to the sampled sound, and assign a name to the sample.


Press the C2 note or the [AUDITION] key, and the sampled sound will play. After you have verified the sound, assign a name to the sample (≡p.37) (e.g., LOOP1-140 BPM). Up to 14 characters can be input as the name of a stereo sample (the two characters -L and -R at the end are fixed). When you assign a name to either the L or R channel, the other sample will be named automatically.

5. Make loop settings

Next we will delete unwanted portions from the sample, and make settings so that the sample will be looped smoothly.

note By default when the power is turned on, sampled sounds will be looped automatically. (1.1: Recording, Input/Pref page "Auto Loop On" On)

- 1 Press the [MENU] key to access the page menu. Press the [F3] key, and then press the [F8] ("Open") key to select 3.1: Loop Edit.

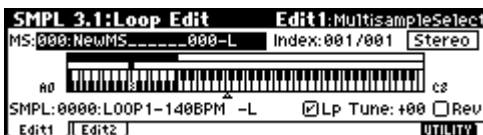

- 2 Notice that 0000: LOOP1-140BPM -L is selected for "SMPL."

- 3 Press the [F2] ("Edit2") key to access the Edit2 page.

The waveform data of the currently selected sample will be displayed.



note The selected sample is a stereo sample. The L and R waveforms will be displayed alternately when you press the [F3] ("L/R") key.

- 4 Use "S (Start)" to set the start address, "LpS (Loop Start)" to set the loop start address, and "E (End)" to set the end address.

The sample will sound as follows.


When looping is on: S → E → LpS → E → (continue repeating LpS → E)

When looping is off: S → E

Use the [←], [→] to select "S (Start)" (highlighted), and use the [VALUE] dial etc. to specify the location at which the sample will begin sounding. The vertical line in the display will move accordingly.

note As necessary, you can press the [F4]-[F7] keys to expand or shrink the waveform display. Zoom will expand/shrink the display starting at the selected "S (Start)," "LpS (Loop Start)," or "E (End)" points.


If you check "Zero (Use Zero)," locations where the waveform is at zero will automatically be found and selected when you use the [VALUE] dial etc. to set "S (Start)," "LpS (Loop Start)," or "E (End)" points. This makes it easy to set these points to addresses that will not produce clicks or noise.

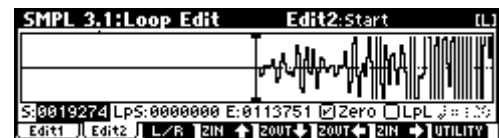

For this example, set "LpS (Loop Start)" and "S (Start)" to the same value.

note If desired, you can make a dotted vertical line appear in the sample waveform display to indicate the BPM. If you use this function with waveforms that have a specific BPM, it will be easier to make accurate settings for "E (End)."

Press the [F8] ("UTILITY") key to access the utility menu, and press the [F7] key to select "Grid." Press the [F8] ("OK") key. The following dialog box will appear.



Check “Grid,” set “Resolution” to \downarrow , and press the [F8] (“OK”) key. Set “ \downarrow (Grid Tempo)” to 140. With these settings, vertical dotted lines will be displayed at 140 BPM quarter note intervals.




Set “E (End).”

When “Lp (Loop)” is On, the dotted vertical “Grid” lines will start at “LpS (Loop Start).” If you want to set “End” at the end of one 4/4 measure, the fourth vertical line from the “LpS (Loop Start)” line will be the end of the first measure. Place “E (End)” at this vertical line.



- ⑤ Use “Truncate” to delete the unwanted data that is outside of the start (or loop start) and end addresses.

Press the [F8] (“UTILITY”) key to access the utility menu, and press the [F7] key to select “Truncate.” Press the [F8] (“OK”) key. The following dialog box will appear.

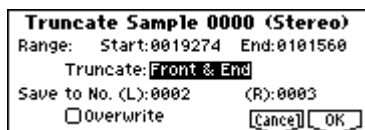

Set “Truncate” to **Front & End**. In this example, we will not change the settings of the “Save to No.” and “Overwrite” check boxes, so press the [F8] (“OK”) key to execute. When you execute the operation, the truncated samples **0002: LOOP1-140B0002-L** and **0003: LOOP1-140B0002-R** will be automatically assigned to Index 1.

- ⚠ Please refer to “A note on saving samples” (p.93) for a cautionary note regarding the “Save to No.” and “Overwrite” check boxes.

Writing to internal memory


Memory protect

To prevent programs, combinations, songs, user drum kits, and user arpeggio patterns from being overwritten accidentally, the TR provides a Memory Protect setting that prohibits writing to memory.

Before you save edited data or load data from SD card or other external media (if the EXB-SMPL option is installed), use the following procedure to turn off memory protect (uncheck the appropriate check box).

You must also turn memory protect off before loading the above data from SD card or via MIDI data dump, or before recording in Sequencer mode.

- 1 Press the [GLOBAL] key to enter Global mode (the key will light), and press the [EXIT] key to select 1.1: System.
- 2 Press the [F2] ("Pref.") key to access the 1.1: System, Preferences page.

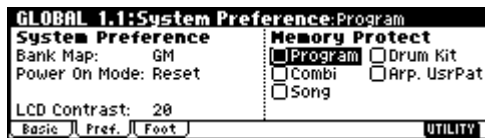

- 3 Uncheck the appropriate "Memory Protect" check box for the data that you wish to write into internal memory.

Writing a program or combination

The programs or combinations that you create by using the Performance Editor or by editing parameters in the various edit (Ed) pages can be saved in the internal memory of the this instrument. This action is referred to as "writing a program" or "writing a combination." If you want your edited data to be preserved after the power is turned off, you must write it.

There are two ways to write a program or combination.

- Before you write data into memory, you must turn off the memory protect setting in Global mode. (☞ "Memory protect")
- A combination does not contain the actual program data for each timbre, but simply remembers the number of the program used by each timbre. If you edit a program that is used by a combination, or exchange it with a different program number, the sound of the combination will also change.

Using a Utility menu command to write

- 1 Select the Utility menu command "Write Program" or "Write Combination."

The Write Program/Write Combination dialog box will appear.

note You can also access the same dialog box by holding down the [ENTER] key and pressing the [0] key.

The screen shown is for Program mode



- 2 In "Category," specify the category of the program/combination.

If the category you specify here is for a program, you can use it when selecting by category in the Cat. Hold function or the Utility menu command "Select by Category" PROG 1.1: Play, Program page ("Program Select") in the COMBI 1.1: Play, Prog page ("Program Select"), the COMBI 2.1: Ed-Prog/Mix, Prog page, or the SEQ 1.1: Play, Program page Utility menu command "Select by Category."

In the case of a Combination, the category you specify here can be selected when you use the Utility menu command "Select by Category" or the Cat. Hold function in COMBI 1.1: Play: ("Combi Select").

- 3 Use "To" to specify the bank and number of the writing destination program/combination.

Use the VALUE controller to specify the destination.

- 4 If you wish to change the name of the program/combination, press the [F5] ("Name") key.

The text dialog box will appear. Input the name of the program/combination. ☞ "Assigning a name (Rename)"

After you have input the name, press the [F8] ("OK") key to return to the Write Program/Write Combination dialog box.

- 5 To execute the Write operation, press the [F8] ("OK") key. To cancel without executing press the [F7] ("Cancel") key.

When you press the [F8] ("OK") key, the display will ask "Are you sure?" When you press the [F8] ("OK") key once again, the data will be written.

Using the [REC/WRITE] key to write

This method can only be used to write to the selected program/combination number.

- 1 Press the [REC/WRITE] key.

The following dialog box will appear.

The screen shown is for Program mode



- 2 To write the data, press the [F8] ("OK") key. To cancel without writing, press the [F7] ("Cancel") key.

Assigning a name (Rename)

You can modify the name of an edited program, combination, song, drum kit, user arpeggio patterns etc..

You can also modify the category names for programs and combinations.

These renaming operations can be performed in the following pages.

Programs	PROG 1.1...7.2 Utility: Write Program
Combinations	COMBI 1.1...7.2 Utility: Write Combination
Song	SEQ 1.1...4.4, 6.1 Utility: Rename Song
Cue list	SEQ 2.1 Utility: Rename Cue List
Tracks	SEQ 5.1, 5.2 Utility: Rename Track
Patterns	SEQ 5.1 Utility: Rename Pattern
Multisamples*	SMPL 1.1...4.1, 5.2 Utility: Rename MS
Samples*	SMPL 1.1...4.1, 5.2 Utility: Rename SMPL
Drum kits	GLOBAL 5.1 Utility: Rename Drum Kit
User arpeggio patterns	GLOBAL 6.1 Utility: Rename Arpeggio Pattern
Program categories	GLOBAL 4.1: TEXT
Combination categories	GLOBAL 4.1: TEXT
File	MEDIA, Save Utility: Save All...Save Exclusive

*: If the EXB-SMPL option is installed

① Open the text dialog box.

Refer to the above table for the relevant page. In the Utility menu commands, press “Name” (the [F5] key) in the dialog box that appears. In GLOBAL 4.1, select “TEXT” (press the [F5] key).



For example if you wish to input the text shown in the screen shown above, you would use the following procedure.

② Press the [F1] (“Clear”) key.

All text of the text box will be erased.

③ Input “A”

Use the [VALUE] dial, the [INC]/[DEC] keys, or cursor keys [▲], [◀], [▼], [▶] to select “A.” Press the [ENTER] key or [F6] (“▶”) key. The cursor will move.

④ Input “.”

Use the [VALUE] dial, the [INC]/[DEC] keys, or cursor keys [▲], [◀], [▼], [▶] to select “.” Press the [ENTER] key or [F6] (“▶”) key. The cursor will move.

Repeat this step to input all the characters.

⑤ Press the [F8] (“OK”) key.

If you selected “Name” in the dialog box of step ① to access the text dialog box, you will return to the previous dialog box. Press the [F8] (“OK”) key in that dialog box to execute the Rename operation. If you selected “TEXT” in step ① to access the text dialog box, the Rename operation will be executed.

The function buttons will have the following functions.

Clear: Erase all text.

Del (Delete): Delete the character at the cursor location.

Ins (Insert): Insert a space at the cursor location.

Cap. ⇄ (Capital): Switch between uppercase and lowercase letters.

⬅: Move the cursor to the left.

➡: Move the cursor to the right.

The following input operations can also be performed.

“0”–“9,” “-,” and “.” can be input using the numeric keys. When you input these, the cursor will advance automatically.

By pressing the [ENTER] key at the space (blank), you can input the selected text before the space.

About the Edit Buffer

When you select a program or combination in PROG 1.1: Play and COMBI 1.1: Play, the program or combination data is called into the “edit buffer.”


When you modify the parameters in 1.1: Play or in the Edit pages 2.1–7.2 of Program mode or Combination mode, the changes you make will affect the data in the edit buffer.

If you wish to save this modified data into internal memory, you must perform the Write operation.

When you perform the Write operation, the data in the edit buffer is written to the specified program number or combination number of the specified bank.

If you select another program or combination without writing, the data of the newly selected program or combination will be called into the edit buffer, and your changes will be lost.

⚠ When you press the [COMPARE] key in Program mode or Combination mode, the data from memory (i.e., the contents that were written into memory) will be temporarily called into the edit buffer. This allows you to compare the settings you are editing with the original un-edited settings.

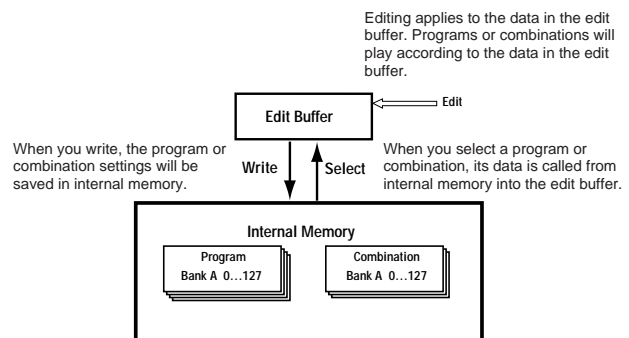

Writing global settings, user drum kits, and user arpeggio patterns

The settings you edit in Global mode can be written into internal memory. This is done using the operations **Write Global Setting**, **Write User Drum Kits**, and **Write User Arpeggio Patterns**. If you wish to use these settings after turning the power off, be sure to write the data.

There are two ways to write global settings, user drum kits, and user arpeggio patterns.

- ⚠ Before you write a user drum kit or user arpeggio pattern, the Global mode memory protect setting must be turned off (☞“Memory protect”).
- ⚠ The user arpeggio pattern settings “Tempo,” “Pattern,” “Octave,” “Resolution,” “Sort,” “Latch,” “Key Sync,” and “Keyboard” are parameters that are set independently in Program, Combination, and Song. These settings are not saved when you perform the Write operation described here. If you moved from Program or Combination mode and set these parameters, you must return to the original mode and write them.

Using a Utility menu command to write


- ① To write global settings (the various settings in GLOBAL 1.1–4.1), select the Utility “Write Global Setting” in GLOBAL 1.1–4.1, and press the [F8] (“OK”) key.

The Write Global Setting dialog box will appear.



To write user drum kits, select the Utility “Write Drum Kits” in GLOBAL 5.1, and press the [F8] (“OK”) key.


The Write Drum Kits dialog box will appear.



To write user arpeggio patterns, select the Utility “Write Arpeggio Patterns” in GLOBAL 6.1, and press the [F8] (“OK”) key.

The Write Arpeggio Patterns dialog box will appear.

The example shown is for Write Arpeggio Patterns



note The same dialog box will also appear if, in each of the above pages, you hold down the [ENTER] key and press the [0] key.

- ② To execute the Write operation, press the [F8] (“OK”) key. To cancel, press the [F7] (“Cancel”) key.

When you press the [F8] (“OK”) key, the display will ask “Are you sure?” Press the [F8] (“OK”) key once again to write the data.

Using the [REC/WRITE] key to write

- ① In the following pages, press the [REC/WRITE] key. A dialog box will appear.

Global settings: GLOBAL 1.1–4.1
User drum kits: GLOBAL 5.1
User arpeggio patterns: GLOBAL 6.1

The example shown is for Update Arpeggio Patterns




- ② To execute the Write operation, press the [F8] (“OK”) key. To cancel, press the [F7] (“Cancel”) key.

Memory in Global mode

When the power is turned on, the Global mode data is called from internal memory into the Global mode memory area. Then when you modify the parameters in Global mode, the data in the memory area will be modified. If you wish to save this modified data in internal memory, you must Write it.

When you write, the data in the memory area will be written into the global settings, drum kits, and arpeggio patterns of internal memory.

If you turn off the power without writing, the modified data in the memory area will be lost.

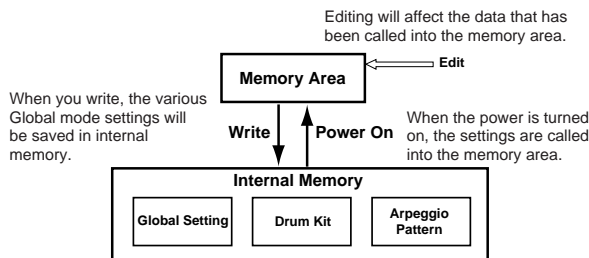

Saving on external media

For details on the data that can be saved on external media (SD card etc.) (see p.42 “Types of data that can be saved”).

⚡ Song data and cue lists in the TR’s Sequencer mode, and multisamples and samples in Sampling mode (if the EXB-SMPL option is installed) cannot be written into internal memory. This data will disappear when the power is turned off. If you wish to keep this data, you must save it on an SD card or on other external SCSI storage media.

Other types of data can also be saved on an SD card, or (if the EXB-SMPL option is installed) on external SCSI storage media (maximum 4 GB), and loaded to restore the original settings even if they have been modified. It is a good idea to save favorite settings that you create.

As an example, we will explain how to save the following data.

- Internal memory programs, combinations, global settings, user drum kits, user arpeggio patterns
- Songs, cue lists
- Multisamples and samples created in Sampling mode (if the separately sold EXB-SMPL option is installed)

⚡ If you save this data to SD card, you may need to use more than one SD card.

① Insert an SD card into the SD card slot.

For details on handling the SD card, please be sure to read “Caution when handling an SD card” (see p.100).

If the EXB-SMPL option is installed, and you want to save data on external SCSI media such as a hard disk, refer to the manual included with the EXB-SMPL and make sure that the external SCSI device is connected correctly.

You will also need to format the media if necessary. (see PG p.156)


- ② Press the [MEDIA] key to enter Media mode.
- ③ Press the [F2] (“Save”) key to access the Save page.



④ If the media contains directories, select the directory in which you want to save the data.

To move to a lower level, press the [F6] (“OPEN”) key. To move to a higher level, press the [F5] (“UP”) key.

⑤ Select the Utility menu command “Save All.”

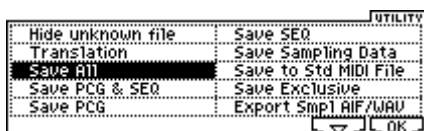

Press the [F8] (“UTILITY”) key to access the Utility menu. Press the [F7] key to select “Save All,” and then press the [F8] (“OK”) key.

A dialog box will appear. The contents, settings, and operations for the dialog box will depend on the type of data that you are saving. For details refer to PG p.152.



⑥ Press the [F5] (“Name”) key to display the text dialog box, and input the desired name. (see p.44)

⑦ Use the check boxes to uncheck items that you do not want to save.

In order to accurately reproduce the data you created, we recommend that you check all of the boxes.

⑧ Press the [F8] (“OK”) key to execute the Save operation.

The data will be saved to the SD card, and you will return to the Save page.


The time required to save the information will depend on the amount of data.

If the SD card contains an identically-named file, you will be asked whether you want to Overwrite. If you want to overwrite, press the [F8] (“OK”) key. If you want to save without overwriting, press the [F7] (“Cancel”) key, repeat the procedure from step ⑤, rename the data in step ⑥, and then save it.

⚡ If when saving a .KSC file, the save destination media already contains a directory with the same name as the .KSC file you are attempting to save, a message of “File already exists” will be displayed, and it will not be possible to execute the Save operation.

If this occurs, you can either change the name of the .KSC file you are saving, change the name of the directory on the media, or delete the directory from the media before executing the Save operation.

⑨ When the data has been saved and you return to the Save page, the LCD screen will show the file that has been saved.

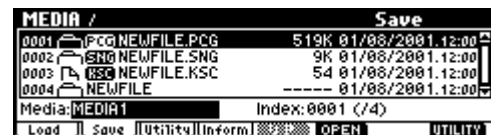

The data will be saved as the following files.

.PCG file

Programs, combinations, drum kits, user arpeggio patterns, and global settings that were saved in internal memory

.SNG file

Sequencer songs and cue lists

.KSC file

Files listing the multisamples and samples created in Sampling mode (if the separately sold EXB-SMPL option is installed).

Directory

A directory containing the multisamples (.KMP files) and samples (.KSF files) that are listed in the .KSC file

MIDI data dump


The programs (A-D), combinations (A-C), drum kits, user arpeggio patterns and global settings of internal memory, and sequencer songs, cue lists, can be transmitted as MIDI exclusive data and saved on a connected MIDI data flier, computer, or another TR. (PG p.131)


Other ways to save

In addition to “Save All,” the page menu commands include a “Save PCG” command which saves program, combination, drum kit, user arpeggio pattern, and global setting data, a “Save SEQ” command which saves only the sequencer song and cue list data, and a “Save Sampling Data” command which saves only the multisamples and samples of Sampling mode (if the EXB-SMPL option is installed). Select the page menu command that is appropriate for the data you want to save to external media.

note When using “Save All,” “Save PCG & SEQ,” and “Save PCG” to save combinations, you should also remember to save the programs used by each timbre (and the drum kits used by the programs) and user arpeggio patterns at the same time.

Similarly when saving programs, you should also remember to save the drum kits and user arpeggio patterns used by the programs.

 If your programs or drum kits use multisamples and samples that were created in Sampling mode (using the EXB-SMPL option), we recommend that you use “Save All” to save the data. When you use “Save PCG” or “Save Sampling Data” to individually save a program or drum kit, or a multisample or sample that you created in Sampling mode (using the EXB-SMPL option), we recommend that you save them under the same filename in the same directory. When you use “Load PCG” to load a .PCG file, the identically-named .KSC file will also be loaded so that the correct multisamples/samples will correspond automatically.

 When saving .KSC, .KMP, and .KSF files and the data does not fit on a single SD card (or other volume of media), another dialog box will appear, and you will be asked to specify the next volume of media (PG p.152 “If the data does not fit on the media when saving”)

Restoring the factory settings

Loading the preloaded data


The factory settings are referred to as the “**preloaded data**.” The action of restoring the programs, combinations, and global settings of the TR to their factory settings is referred to as “loading the preloaded data.”

⚠ This operation will rewrite any data that had been previously written. If you do not want to lose the previously-written data, you must first save it to SD card or external SCSI media (requires the EXB-SMPL option) (☞p.46).

① Press the [GLOBAL] key to enter Global mode. (The key will light.)


② Press the [EXIT] key.

You will be in the Global mode 1.1: System page.

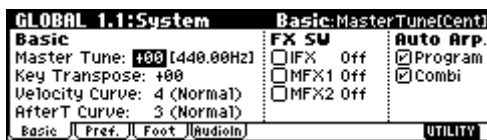


③ Press the [F8] (“UTILITY”) key to access the Utility menu.



④ Press the [F7] (“”) key to select “Load Preload/Demo Data,” and press the [F8] (“OK”) key.

A dialog box will appear.

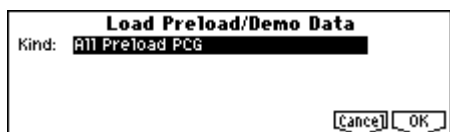


⑤ Use the [INC]/[DEC] keys to select the data that you want to load.

Use “Kind” to select the data that you want to load. For this example, select **All Preload PCG**. .PCG files contain program, combination, drum kit, arpeggio pattern, and global setting data.

⑥ Press the [F8] (“OK”) key.

A dialog box will ask you for confirmation.

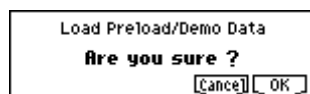

⑦ Once again press the [F8] (“OK”) key.

All the preloaded data will be loaded.

⚠ If the Memory Protected dialog box appears, uncheck the memory protect setting, and perform the load operation once again (☞p.43).

Loading individual banks or data items


The TR allows you to load individual banks, programs, or combinations. Drum kits and arpeggio patterns can also be loaded individually or as a group.

This is convenient when you want to restore just one item of factory-set data, or when you want to rearrange combinations in a specific order for live performance.

⚠ It is of course also possible to rearrange programs, but you should be aware that this may change the sounds that are used by a combination (☞p.43).

As an example, here's how to load the combination B015: Rock Organ into C064: Modern Piano.

① Perform steps ①–④ described above to access the dialog box.

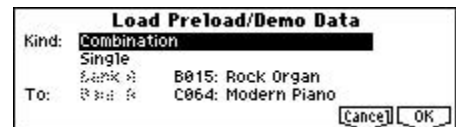

② Use the [INC]/[DEC] keys to set “Kind” to Combination.

③ Press the [▼] key to move downward, and use the [INC]/[DEC] keys to select Single.

④ Press the [▼] key to move downward, and use the [INC]/[DEC] keys to select the combination B015: Rock Organ as the copy source.

⑤ Press the [▼] key to move downward, and use the [INC]/[DEC] keys to select the combination C064: Modern Piano as the load destination (“To”).

⑥ Press the [F8] (“OK”) key twice.

The data will be loaded, and C064 will be the Rock Organ combination.

Program mode

In Program mode you can select, play and edit programs.

Program mode consists of pages 1.1: Play-7.2: Ed-MasterFX.

In 1.1: Play; you can select and play programs. You can also edit the sound in simple ways, and make arpeggiator settings. (p.32)

In 2.1: Ed-Basic-7.2: Ed-MasterFX, you can edit the parameters of the program that was selected in 1.1: Play.

When shipped from the factory, the TR contains numerous preloaded programs. You can edit these preloaded programs to create your own original programs. You can also create original programs using your own sampled waveforms or multisamples that you sampled in Sampling mode (using the EXB-SMPL option) or loaded into internal memory in Media mode.

note If the separately sold EXB-SMPL option is installed, the TR will have AUDIO INPUT jacks that allow external audio to be input. In Sampling mode you can sample these external audio input sources. In modes other than Sampling mode, the TR's internal effects can be applied to the external audio input sources, allowing a wide range of applications (p.115, PG p.128).

note All transmission and reception of MIDI data in Program mode is performed on the Global MIDI channel. The global MIDI channel is set in GLOBAL 2.1: MIDI "MIDI Channel."

How a program is organized

A program consists of the many parameters of 2.1: Ed-Basic-7.2: Ed-MasterFX. The diagram below shows the structure of a program.

Basic program editing


With the factory settings, this instrument's program bunks A, B, C and D contain preloaded programs. You can edit these programs to create your own original programs.

note For parameters in 2.1: Ed-Basic-5.3: Ed-LFOs that are set independently for each oscillator 1 and 2, you can use the Utility "Copy Oscillator" to copy settings from one oscillator to the other. This is a convenient way to make the same settings for two oscillators, or to copy settings from one oscillator to the other.

! If you wish to save an edited program into internal memory, be sure to Write the program. (p.43)

In this section we will give examples of how to modify representative parameters in each page. For details on all parameters, refer to in the PG p.1-

Programs you edit or create can be written into the 512 program memory areas of banks A-D. They can also be saved and managed on SD card in Media mode (p.43).

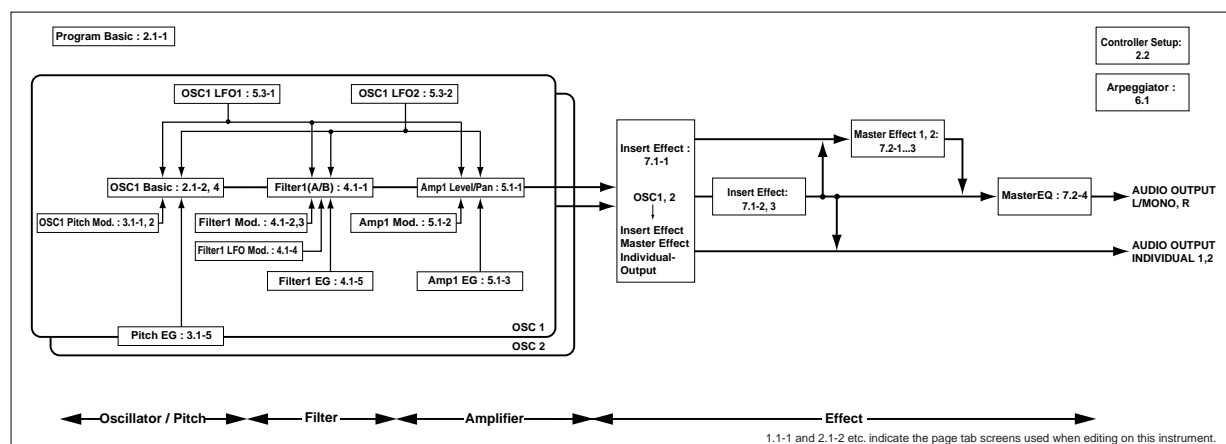

The three elements of sound

Sound can be broken down into three elements: **pitch**, **tone**, and **volume**.


On this instrument, these elements correspond to the **Pitch**, **Filter**, and **Amplifier** settings of the program. In other words you would adjust the Pitch settings to modify the pitch, the Filter settings to modify the tone, and the Amplifier settings to modify the volume. In **Oscillator** (**Oscillator**: 2.1: Ed-Basic settings) you select the waveform **multisample** that determines the basic sound, and specify its pitch. This sound is then modified by the **pitch** settings (**Pitch**: 3.1: Ed-Pitch), **filter** settings (**Filter**: 4.1, 4.2: Ed-Filter), and **amp** settings (**Amplifier**: 5.1, 5.2: Ed-Amp) to create the basic sound of the program.

This basic sound can then be modified further by using **insert effect** (7.1: Ed-InsertFX settings), **master effects**, and **master EQ** (7.2: Ed-MasterFX settings) to apply finishing touches. When arpeggiator settings (6.1: Ed-Arp.) and controller settings (2.2: Ed-Ctrl) are added to this, the final result is called a “**program**.”

note Programs that are used in Combination mode or Sequencer mode have insert effect, master effect, master EQ, arpeggiator, and controller settings that are separate from those of Program mode.

The Compare function

As you are editing a program, you can use the [COMPARE] key to listen to the previously saved version of the sound, (as it was before you began editing). Press the [COMPARE] key (the key light comes on) to hear the original version. Pressing [COMPARE] again (the light goes dark) returns you to the version you are editing.

 If you edit while the [COMPARE] key is lit, the key will go dark. That sound will be the sound that is recalled when the [COMPARE] key is dark.

Oscillator settings 2.1: Ed-Basic

In 2.1: Ed-Basic you can make oscillator-related settings. This instrument provides two oscillators, and for each oscillator you can select a basic waveform (“**multisample**”) and set the pitch. The multisamples provided by this instrument include waveforms for musical instruments such as pianos, as well as special waveforms unique to synthesizers. Multisamples reproduce the complex overtone structure and frequency characteristics that allow us to identify a sound as being “piano-like” or “guitar-like.”

Basic (Prog Basic) page



Mode (Oscillator Mode)

This sets the mode of the oscillator.

Single uses one oscillator and **Double** uses two oscillators. In the case of **Single** the maximum polyphony is **62 notes**, and in the case of **Double** the maximum polyphony is **31 notes**. If you wish to use a Drum Kit to create a drums program, select **Drums**. (PG p.51)

Mode (Voice Assign Mode)

Indicates whether the program will sound in **Poly** (polyphonically) or **Mono** (monophonically).

If this is set to **Poly**, you will be able to play chords using the program. If this is set to **Mono**, only one note will sound even if you play a chord. Normally you will set this to **Poly**, but it is effective to use **Mono** when you are playing sounds such as analog-synth bass or synth lead. Try switching between **Poly** and **Mono**, and listen to the result.

OSC1 page, OSC2 page



Specifies the multisample for oscillator 1, 2.

Selecting a multisample

The multisample will determine the basic character of the program.

- Use “**High MS Bank**” to select the multisample bank, and use “**High Multisample**” to select the multisample.

If the “**High MS Bank**” is ROM or EX, you can select preset multisamples. “**High Multisample**” can be selected from a range of ROM: **000–044**, EX: **000–044**. (PG VNL)


If “**High MS Bank**” is RAM, you can select multisamples that were created in Sampling mode or loaded in Media mode (if the EXB-SMPL option and sample data RAM is installed). In “**High Multisample**” you can select from 000–999.

note You can use the Utility “**Select by Category**” to select internal preset multisamples from 15 categories. (PG p.8)

High Multisample and Low Multisample

If you specify a High and Low multisample for an oscillator, either the High or the Low multisample will sound depending on the velocity of the note (i.e., the strength at which you play the keyboard). This function is called **velocity multisample switching**.

- ① **Specify different multisamples for “High Multisample” and “Low Multisample.”**
- ② **Specify a velocity value for “Velocity SW L→H.”**
Notes played on the keyboard at a velocity less than the value you specify will sound the **Low** multisample; velocities at or above this velocity value will sound the **High** multisample.
For example if you set “**Velocity SW L→H**” to **100**, playing the keyboard softly will sound the “Low” multisample, and playing strongly will sound the “High” multisample.
- ③ **Adjust the “Level” for High and Low multisamples to set their volume balance.**

 If you do not wish to use this function, set the “**Velocity SW L → H**” value to **001**. Only the High multisample will sound.

Rev (Reverse) check box

If this is **checked**, the multisample will be played backward. This can produce interesting results when used on sound-effects, etc. Normally you will not **check** this.

When “Oscillator Mode” = Double

To use OSC2, set “**Mode (Oscillator Mode)**” to **Double** in the Basic (Prog Basic) page.

In the same way as for OSC1, you can set High and Low multisamples for OSC2.

The playback pitch can be set independently. By using the same multisample with slightly different “Tune” settings, you can “detune” the oscillators to produce a richer sound.

note It will be convenient to use the Utility “Copy Oscillator” to make the oscillator settings match each other.

When “Oscillator Mode” = Drums



In the Basic (Prog Basic) page, set “**Mode (Oscillator Mode)**” to **Drums**. When this is set to **Drums**, you will be able to create a drum program.

This will select a **drum kit** instead of a multisample. This instrument provides sixteen factory preset drum kits that are suitable for a wide variety of music. (≡Drumkit name, VNL)

Here you can only select a drum kit. To edit or create a drum kit, use GLOBAL 5.1: DKit (≡p.98).


The following multisamples or drum kits can be used for the oscillator.

- 470 internal preset multisamples (ROM, EX)
- Multisamples (RAM) created in Sampling mode (if the EXB-SMPL option is installed)

(You can create programs using multisamples/samples that were sampled in Sampling mode or loaded in Media mode.)

- Nine internal drum kits (ROM)
- 24 user drum kits created in Global mode
(Drum samples can be freely assigned to each key to create a drum kit. For the sound of each key, you can make filter and amp settings, and specify routing to the effects and to the individual audio outputs.)

V.Zone (Velocity Zone) page

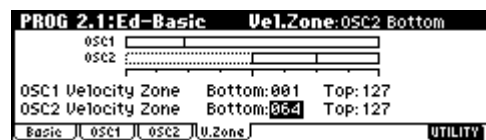

Here you can specify the range of velocities that will sound oscillators 1 and 2. In the example shown above, the velocity ranges are as follows.

- OSC1 will sound for all velocity values.
- OSC2 will sound only for strongly played notes (64 and above).
- You can use Velocity Multisample Switching in addition to this (≡“High Multisample, Low Multisample”). For this example, set “OSC1” in “**Velocity SW L→H**” to **32** and “OSC2” to **96**. The settings are shown as vertical lines in the velocity zone display.

In this example, the multisamples will sound over four levels.

Velocity values 001–031:

sound only the OSC1 Low multisample.

Velocity values 032–063:

sound only the OSC1 High multisample.

Velocity values 064–095:

sound the OSC1 High multisample and the OSC2 Low multisample.

Velocity values 096–127:

sound the OSC1 High multisample and the OSC2 High multisample.

Controller settings 2.2: Ed-Ctrl

Ctrls (Controls) page

For each program, this tab lets you make settings for the [SW1] and [SW2,] and for the B-mode of REAL-TIME CONTROLS knobs [1]–[4] (≡p.119, PG p.9, 224, 225)

Pitch settings 3.1: Ed-Pitch

Here you can specify how the pitch of the multisample selected for the oscillator will change. Pitch EG and LFO settings allow the pitch to varied over time.

The parameters of the OSC2 page and OSC2lfo page are valid only if “**Mode (Oscillator Mode)**” is set to **Double**.

OSC1 page

PROG 3.1:Ed-Pitch		OSC1:Pitch Slope	
Pitch	Pitch Slope: +12	JS(+X): +02	AMS: Off
	Ribbon(#16): +00	JS(-X): -02	Intensity: +00.00
Pitch EG	Intensity: +00.00	AMS: Off	Intensity: +00.00
Portamento	<input type="checkbox"/> Enable	<input type="checkbox"/> Fingered	Time: 000
OSC1 [OS1f0] OSC2 [OS2f0] EG		UTILITY	

Pitch

The “**JS (-X)**” and “**JS(+X)**” settings specify the amount of pitch change (in semitones) that will occur when MIDI pitch bend messages are received or when the joystick is moved to left or right. A setting of +12 allows the pitch to be controlled a maximum of one octave upward; a setting of -12 allows the pitch to be controlled a maximum of one octave downward.

“**Ribbon (#16)**” specifies the amount of pitch change (in semitones) that will occur when MIDI control change (CC) #16 messages are received or when the ribbon controller of a TRITON or other MIDI-connected instrument is moved to left or right. With a setting of +12, the pitch will rise one octave at the far right of the ribbon controller, and fall one octave downward at the far left of the ribbon controller.

Pitch EG

When the “**Intensity**” value is set to +12.00, the pitch EG specified in the Pitch EG page will produce a maximum of ±1 octave of pitch change.

Portamento

If “**Enable**” is checked, portamento will be applied. Portamento makes the pitch change smoothly when you play the next note before releasing the previous note.

The “**Time**” parameter specifies the portamento time. As this value is increased, the pitch will change over a longer time. With a value of 000, there will be no portamento.

🔊 If **Porta.SW (CC#65)** is assigned as the function of [SW1] or [SW2] key, the portamento effect can be switched on/off by [SW1] or [SW2] key.

OS1f0 (OSC1 LFO) page

PROG 3.1:Ed-Pitch		OSC1 LFO:LF01 Intensity	
Pitch LF01/2 Modulation			
LF01	Intensity: +00.00	AMS: AfterT	Intensity: +00.25
	JS+Y Int.: +01.00		
LF02	Intensity: +00.00	AMS: Off	Intensity: +00.00
	JS+Y Int.: +00.00		
OSC1 [OS1f0] OSC2 [OS2f0] EG		UTILITY	

LFO 1/2

An LFO can be used to cyclically modulate the pitch (the “vibrato” effect).

“**Intensity (LFO Intensity)**” sets the depth to which the LFO specified in 5.3: Ed-LFOs will affect the pitch. With a setting of +12.00, vibrato will produce a maximum of ±1 octave of pitch change.

“**JS+Y Int**” specifies the amount of vibrato that the LFO will produce when the joystick is pushed away from yourself.

“**Intensity (AMS Intensity)**” specifies the depth of vibrato that will be applied by the LFO when AMS (Alternate Modulation Source) is operated. For example if “AMS (LFO1 AMS)” is set to **AfterT** and you set an appropriate value for “**Intensity (AMS Intensity)**,” vibrato will be applied when you apply pressure to the keyboard or when MIDI aftertouch messages are received.

EG (Pitch EG) page

Here you can make settings for the pitch EG.


When you wish to create sound effects etc., set the pitch EG to make major changes in pitch over time. To realistically simulate the slight change in pitch that occurs when a string is plucked or at the attack of a brass or vocal sound, you can use the EG to create a subtle change in pitch at the attack (PG p.10).

EG and LFO

By using an **EG** (envelope generator) to apply time-varying change or by using an **LFO** (Low Frequency Oscillator) to apply cyclic change to pitch, filter, or amp, you can create changes in the pitch, tone, or volume.

EG (Envelope Generator)

This instrument provides a Pitch EG, Filter EG, and Amplifier EG, which produce time-varying changes in pitch, tone, and volume respectively.

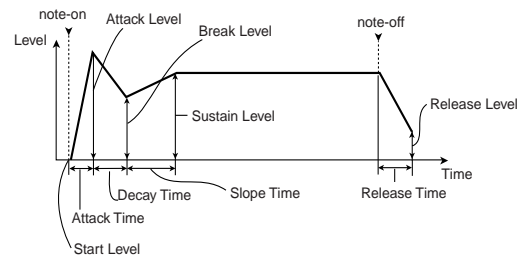

LFO (Low Frequency Oscillator)

For each oscillator, this instrument provides two LFO's that can be used to apply cyclical change in pitch, tone, and volume.


Examples of this are **vibrato** (cyclical change in pitch), **wah** (cyclical change in tone), and **tremolo** or **auto-pan** (cyclical change in volume).

Filter settings


4.1: Ed-Filter1, 4.2: Ed-Filter2

The filter allows you to diminish or emphasize specified frequency areas of the multisample selected for the oscillator. **The tone of the sound will depend significantly on the filter settings.**

This instrument provides Filter 1 for OSC1 and Filter 2 for OSC2. For each of these filters, you can select from two types (**Low Pass Resonance** or **Low Pass & High Pass**). Filter 2 can be used if “**Mode (Oscillator Mode)**” is set to **Double**.

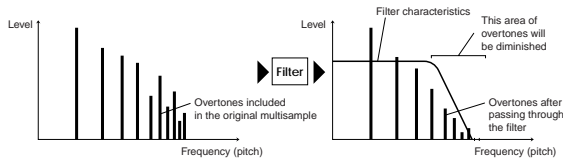

Basic page

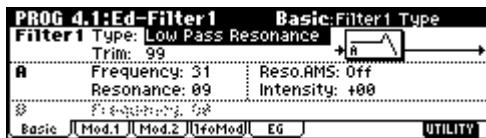

Filter Type, Filter A, Filter B


Selects the type of filter, and specify the “**Frequency**” (cutoff frequency) and “**Resonance**” (resonance level).

- **Low Pass Resonance** (24 dB/oct low pass filter with resonance): Make settings for filter A.
- **Low Pass & High Pass** (12 dB/oct low pass filter and 12 dB/oct high pass filter in series connection): Make low pass filter settings in filter A, and high pass filter settings in filter B.

Low pass filter


This is the most common type of filter, which passes the low frequency range and cuts the high frequency range. When the overtones of the high range are cut, a bright sound will become darker (more mellow).

24 dB/oct and 12 dB/oct refer to the steepness of the cut. 24 dB/oct means that the gain will decrease 24 dB in one octave (i.e., as the frequency doubles). A 12 dB/oct filter would decrease the gain 12 dB in one octave. The 24 dB/oct filter produces a steeper cut.

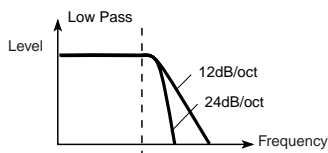

High pass filter


This type of filter passes the high frequency range and cuts the low frequency range. Use this when you wish to make the sound thinner. However if the cutoff frequency (Frequency) is raised excessively high, the volume will become very low.

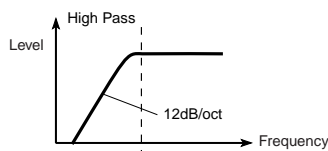


Resonance

When “**Resonance**” is set to a higher value, the overtones in the region of the cutoff frequency will be boosted as shown in the diagram below, giving a distinctive character to the sound.

When resonance is applied

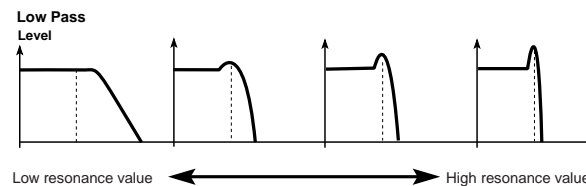

Mod.1, Mod.2 page

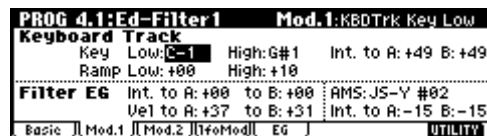

Controllers and the filter EG can be used to modulate the filter cutoff frequency that was specified in the Basic page. By using a controller to vary the tone or by using an EG to create time-varying changes, you can add a rich variety of tonal change to the sound.

Keyboard Track (Mod.1 page)

This varies the cutoff frequency according to the position of the key on the keyboard that you play.

- When Ramp “**Low**” is set to a positive (+) value, the cutoff frequency will rise as you play lower on the keyboard, making the sound brighter. When set to a negative (-) value, the cutoff frequency will fall as you play lower on the keyboard, making the sound darker.
- When Ramp “**High**” is set to a positive (+) value, the cutoff frequency will rise as you play higher on the keyboard, making the sound brighter. When set to a negative (-) value, the cutoff frequency will fall as you play higher on the keyboard, making the sound darker.
- **Int. “to A”** and “**to B**” adjust the effect that keyboard tracking will have on filters A and B (≡PG p.14).

Filter EG (Mod.1 page)

Adjusts the effect produced by the filter EG, whose settings are made in the EG page.

- Use the **Int. “to A”** and “**to B**” settings to specify the depth of the filter EG.
- Use the **Vel “to A”** and “**to B**” settings to specify the effect of velocity on the filter EG.
- “**AMS**” and “**Int to A, B**” adjust the effect that AMS will have on the filter EG depth.

These three settings will determine the depth of the tonal change produced by the filter EG.

Filter Modulation (Mod.2 page)

Set this when you wish to produce tonal change by using controllers etc. to vary the cutoff frequency.

IfoMod (LFO Mod.) page

Indicates settings that allow the LFO to produce cyclic changes in tone (a “wah” effect).

Intensity: “to A (LFO1 Int. to A)” and “to B (LFO1 Int. to B)” specify by how much the LFO will change the tone. **JS-Y Int.:** “to A” and “to B” specify the depth of the wah effect that will be produced by the LFO when the joystick of this instrument is moved toward yourself, or when CC#2 is received.

“Int. to A” and “Int. to B” specify the depth of the wah effect that will be produced by the LFO when “AMS” (Alternate Modulation Source) is operated. For example if “AMS” is set to **AfterT**, applying pressure to the keyboard of the TR, will apply a wah effect.

EG page

Indicates settings for the filter EG, which controls time-variant changes in tone (see PG p.16). Make settings for the EG here, and set the depth of its effect in the Mod.1 page “Filter EG” parameter.

Filter EG and Amplifier EG

When the Filter EG changes the cutoff frequency, the tone will change. However depending on the volume changes produced by the Amplifier EG, this can be heard in different ways. For example by changing the speed at which the tone and volume begin (attack) or decay, you can significantly vary the character of the tonal change. It is a good idea to adjust the changes of both the Filter EG (tone) and the Amplifier EG (volume) as you proceed with editing. (see “5.1: Ed-Amp1, EG page, 5.2: Ed-Amp2, EG page)


Amplifier settings

5.1: Ed-Amp1, 5.2: Ed-Amp2

These settings affect the volume. Here you can adjust the way in which the Amp EG and LFO produce time-varying and cyclic changes in volume, and how the controllers etc. will affect the volume.

Amp1 applies to OSC1, and Amp2 applies to OSC2. Amp2 can be used if “Mode (Oscillator Mode)” is set to **Double**.

For example, the volume of a piano note begins at a high volume the instant you play the note, and then decreases gradually. The volume of an organ note remains constant as long as you continue pressing the key. The volume of a note on a violin or wind instrument can be varied during the note by the musician (i.e., by regulating the amount of pressure on the bow or the force of the breath).

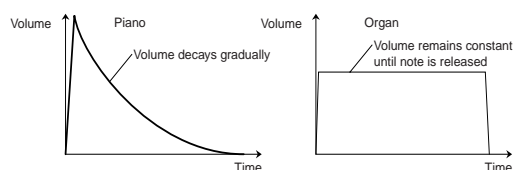

Lvl/Pan (Level/Pan) page

PROG 5.1:Ed-Amp1		Level/Pan: Amp1 Level	
Amp1	Level: 127		
Pan	Pan: C064	AMS: Note No.	
	<input type="checkbox"/> Use DKit Setting	Intensity: +00	
Lvl/Pan	Mod. EG	UTILITY	

Amp1 Level, Amp2 Level

Adjusts the volume of the sound that has passed through the oscillator, filter, and amp.

Pan

Specifies the pan (stereo position) after the signal has passed through the oscillator, filter, and amp. Normally you will set this to **C064**. If “Mode (Oscillator Mode)” is **Double** and you wish to create a sense of stereo, set the 5.1: Ed-Amp1 and 5.2: Ed-Amp2 parameter “Pan” to left and right for oscillators 1 and 2 respectively. With a setting of **Random**, the pan will change randomly each time you play a note on this instrument, producing an interesting effect.

AMS Intensity

“Intensity” specifies the depth of the panning effect that will occur when “AMS” is operated.

If you set “AMS” to **Note No.**, the pan will change according to the keyboard position at which you play a note on a this instrument. With a setting of **LFO1** or **2**, the pan will sweep from side to side (auto pan). Other settings allow you to move the oscillator pan by operating a controller.

Use DKit Setting

This is valid when “Mode (Oscillator Mode)” is set to **Drums**. If this is **checked**, the pan location specified by the Drum Kit for each drum sound will be used. If this is **unchecked**, all drum sounds will sound at the same location. Preload and GM drum kits are set to stereo settings. Normally you will leave this **checked**.

Mod. page

PROG 5.1:Ed-Amp1		Mod. KBDTrk Key Low	
Keyboard Track	Key Low: F#4	High: F#4	
	Ramp Low: +04	High: +00	
Amp Mod.	Velocity Int: +00	AMS: AfterT	Int: +00
LF01 Mod.	Intensity: +00	AMS: Off	Int: +00
LF02 Mod.	Intensity: +00	AMS: Off	Int: +00
Lvl/Pan	Mod. EG	UTILITY	

Keyboard Track

This lets you vary the volume relative to the position of the key you are playing on the keyboard.

- When Ramp “Low” has a positive (+) value, the volume will increase as you play lower on the keyboard. With a negative (-) value, the volume will decrease as you play lower on the keyboard.
- When Ramp “High” has a positive (+) value, the volume will increase as you play higher on the keyboard. With a negative (-) value, the volume will decrease as you play higher on the keyboard.

Amp Mod.

“**Velocity Int**” is used by most programs to decrease the volume of softly played notes and increase the volume of strongly played notes, and this Amp Modulation parameter adjusts the depth of this control. Normally you will set Amp Modulation to positive (+) values. As this setting is increased, there will be greater volume difference between softly played and strongly played notes.

LFO1 Mod., LFO2 Mod.


Specify how the LFO’s will produce cyclic changes in volume (the tremolo effect). The volume will be affected by the LFO(s) for which you set an “**Intensity** (LFO1 Intensity, LFO2 Intensity)” value. “**Int** (AMS Intensity)” adjusts the depth by which the tremolo effect produced by the LFO will be affected when you operate an “**AMS** (LFO1 AMS, LFO2 AMS).”

For example if you set “**AMS**” to **JS-Y #02**, tremolo will be applied when you move the joystick of this instrument. toward yourself, or when **CC#02** is received.

EG page

Here you can make settings for the amp EG, which changes the volume over time.

Every instrument has its own characteristic curve of volume change. This is part of what gives each instrument its identifiable character. Conversely, by applying a strings-type Amp EG curve to an organ-type multi-sample, you can produce a sound with a character unlike a typical organ.

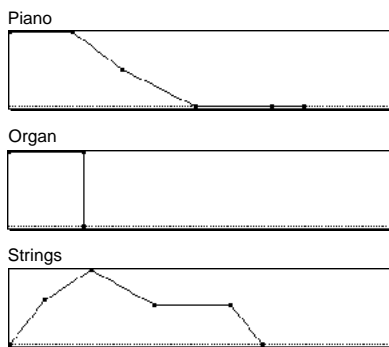

.....
LFO settings 5.3: Ed-LFOs

For each oscillator, you can use two LFO (Low Frequency Oscillator) units: LFO1 and LFO2. You are free to select the type of each LFO and set its speed. The depth of the LFO1 and LFO2 that you specify here is adjusted by the settings of the 3.1: Ed-Pitch, 4.1: Ed-Filter1, 4.2: Ed-Filter2, 5.1: Ed-Amp1, and 5.2: Ed-Amp2 pages.



OSC1 LFO1, OSC1 LFO2, OSC2 LFO1, OSC2 LFO2

“**Waveform**” selects the type of LFO. You can choose from a variety of waveforms, including standard waveforms such as **Triangle, Saw, Square, and Sine**, as well as **Step or Random PG** waveforms that produce a sample-and-hold effect (see PG p.22). You can create a wide variety of effects by adjusting the “**Ofs**,” “**Fade**,” and “**Dly**” settings, and by changing the sign (+/-) of the “**Intensity**” setting in the 3.1: Ed-Pitch, 4.1: Ed-Filter1, 4.2: Ed-Filter2, 5.1: Ed-Amp1, and 5.2: Ed-Amp2 pages. “**Frequency**” specifies the speed of the LFO.

Freq.Mod (Frequency Modulation)

“**AMS**” can be used to vary the LFO speed. This lets you change the LFO speed by operating a controller, or by the EG or Keyboard Track settings.

MIDI/Tempo Sync.

If “**MIDI/Tempo Sync**” is checked, the “**Frequency**” setting will be ignored, and the LFO will synchronize to the tempo of the sequencer and arpeggiator. This lets you produce vibrato, wah, auto-pan, or tremolo that is synchronized to the playback speed of the sequencer or arpeggiator.

.....
Arpeggiator settings 6.1: Ed-Arp.

Here you can make arpeggiator settings (see p.103).

.....
BUS settings 7.1: Ed-InsertFX BUS

You can specify the oscillator routing (the signal sent to the insert effect, master effects, and independent outputs) (see p.112).

.....
Insert Effect settings 7.1: Ed-InsertFX Setup, IFX

Here you can select insert effect and make settings for them (see p.113).

.....
Master Effect settings 7.2: Ed-MasterFX

Here you can select master effects and make settings for them. The master EQ is also set here (see p.113).

More about Alternate Modulation

Alternate Modulation is a type of modulation that can be used to control various aspects of the sound.

AMS (Alternate Modulation Source) refers to any of the numerous sources that can control alternate modulation, and includes controllers that you operate physically such as the joystick and realtime controllers, incoming MIDI data, as well as modulators such as the EG or LFO.

Since this instrument allows you apply modulation to a modulator, this type of control is referred to as “alternate modulation.”

Intensity is a parameter that sets the degree (speed or depth) to which AMS will control alternate modulation.

Combinations of modulations that are frequently used in on the synthesizer performance (such as using the joystick to vary the pitch) are also provided as special parameters separately from alternate modulation.

This instrument provides 29 types of alternate modulation.

In single mode you can use 29 alternate modulation destinations of 29 types, and in double mode you can use 55 alternate modulation destinations of 29 types. There are 42 AMS sources. (However depending on the type of modulation, some sources cannot be selected.) For details on alternate modulation and AMS, refer to PG p.215.

Suggestions on using alternate modulation

When making settings for alternate modulation, think of the effect that you wish to produce, what type of modulation will be necessary to produce that effect, and what parameter of the oscillator, filter, or amplifier needs to be controlled. Then select a source (“AMS”) and set the “Intensity.” If you proceed logically in this way, you will achieve the desired effect.

For example if you want to “control a guitar-like sound so that it appears to be approaching feedback when the joystick is moved away,” you will make settings so that the joystick controls filter modulation or the resonance level.

Auto Song Setup function

This function automatically applies the settings of the current program or combination to a new song in the sequencer.

If inspiration for a phrase or song strikes you while you’re playing a program or combination, you can use this function to start recording immediately.

Hold down the [ENTER] key and press the SEQUENCER [REC/WRITE] key. The “Setup to Record” dialog box will open and ask “Are you sure?”. Press [F8] (“OK”) key. You will automatically enter Sequencer mode, and will be in the record-ready state. Press the [START/STOP] key to start the sequencer and begin recording.

Combination mode

In Combination mode you select, play and edit combinations.

Combination mode consists of pages 1.1: Play–7.2: Ed-MasterFX.

In 1.1: Play; you can select and play combinations. You can also do some overall editing, and make arpeggiator settings (see p.29, 33).

In 2.1: Ed-Basic–7.2: Ed-MasterFX; you can edit the parameters of the combination that was selected in 1.1: Play.

How a combination is organized

A combination consists of a variety of parameters that can be accessed in 2.1: Ed-Basic–7.2: Ed-MasterFX. The diagram below shows how a combination is structured.

Basic combination editing

Banks A, B, and C of the TR contain a variety of combinations that use the preloaded programs (banks A, B, C) and the preset and preloaded user arpeggio patterns and effects. You can edit these combinations to create your own original combinations.

Original programs using samples/multisamples recorded in Sampling mode (if the separately sold EXB-SMPL option is installed) or loaded into memory in Media mode can also be used in a combination. Combinations you edit or create can be written into the 384 combination memory areas of banks A–C. They can also be saved and managed on SD card in Media mode (see p.43, 46).

note If a program being edited in Program mode is used in a combination, it will sound according to the settings being edited.

! If you wish to save an edited combination in internal memory, you must write it. (see p.43)

Suggestions for editing procedure


The parameters of each timbre are set in 2.1: Ed-Prog/Mix–4.4: MIDI Filter4, and 7.1:Ed-InsertFX. This is where you create the basic combination consisting of the programs you select here.

First use 2.1: Ed-Prog/Mix to select the program for each timbre, and then use 3.3: Ed-Key Zone and 3.4: Ed-Vel Zone to specify the range in which each program will sound (layer, split, velocity switch, etc.). Then adjust the volume of each timbre, and set various other parameters.

To add finishing touches to the sound, you can make **insert effect** settings (in 7.1: Ed-InsertFX) and **master effect** and **master EQ** settings (in 7.2: Ed-MasterFX) that are separate from the effect settings of Program mode. In addition, you can make arpeggiator settings (in 6.1: Ed-Arp.) and controller settings (in 2.2: Ed-Ctrl) to create the finished **combination**.

note By using the Utility “Solo Selected Timbre”, you can listen only to the selected timbre. This is a convenient way to audition individual sounds of timbres that are layered. (see p.34)

note In pages that display all timbres 1–8, such as 2.1: Ed-Prog/Mix, you can use the [◀], [▶] keys to select timbres. You can also select timbres directly by holding down the [TIMBRE/TRACK] key and pressing one of the [F1 T1/T9]–[F8 T8/T16] keys.

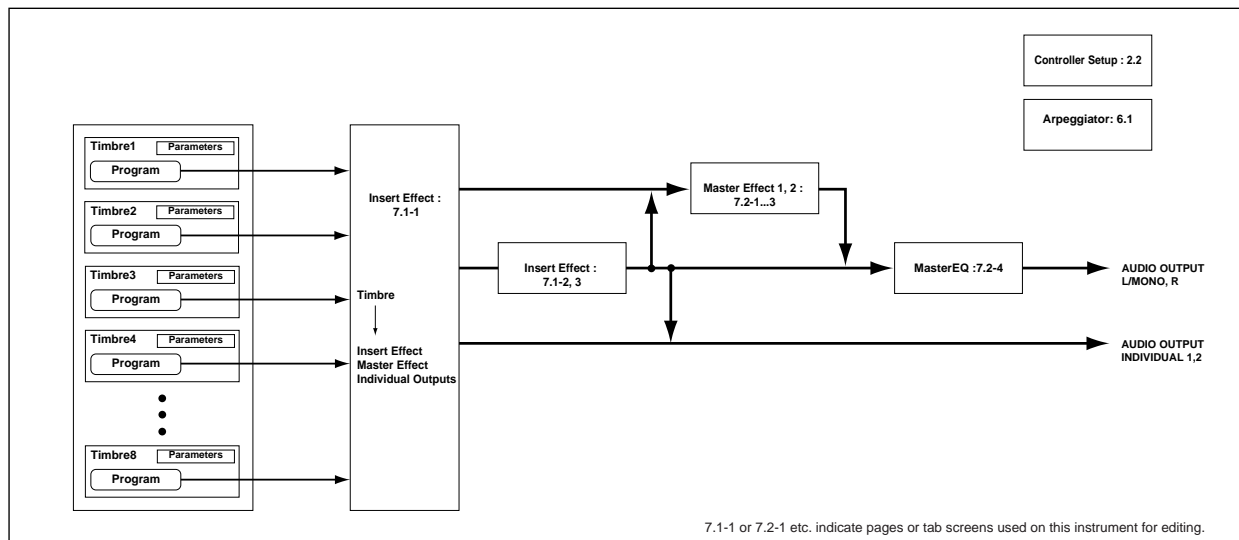


Layer, split, and velocity switch

Within a combination, you can use keyboard location and velocity to change the program that sounds. The programs assigned to each timbre can sound in three ways: as a **layer**, a **split**, or a **velocity switch**. A combination can be set to use any one of these methods, or to use two or more of these methods.


Layer

Layer refers to settings which cause two or more programs to sound simultaneously when a note is played.

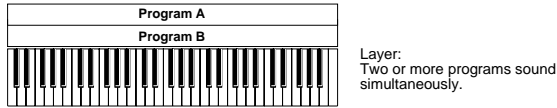


Split

Split refers to settings which cause different programs to sound on different areas of the keyboard.

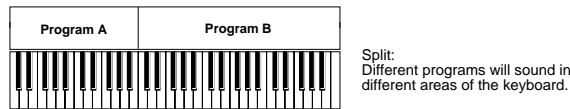


Velocity switch



Velocity Switch refers to settings which cause different programs to sound depending on the velocity (keyboard playing dynamics).

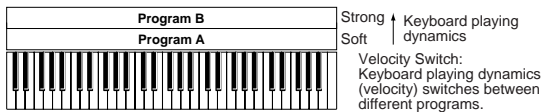

On this instrument, you can use a different program for each of up to eight timbres, and combine two or more of the above methods to create even more complex setups.

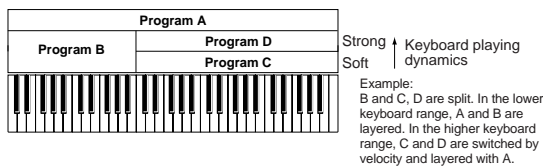

As an additional possibility, you can set the slope for a key zone or velocity zone so that the volume diminishes gradually. This lets you change a split into a **keyboard crossfade**, or a velocity switch into a **velocity crossfade**.

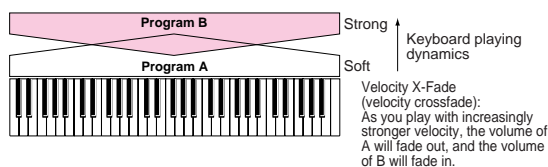

The Compare function

As you are editing a combi, you can use the [COMPARE] key to listen to the previously saved version (as it was before you began editing). Press the [COMPARE] key (the key light comes on) to hear the original version. Pressing [COMPARE] again (the light goes dark) returns you to the version you are editing.

🔊 If you continue editing when the [COMPARE] key LED is lit, the LED will go dark, and the current sound will now be the sound that is recalled when the [COMPARE] key LED is dark.

In the section below, we will edit typical parameters in each page while listening to the effect of each parameter.

For a more detailed explanation of these parameters, refer to PG p.31-.

Timbre 1–8 program, pan and volume

2.1: Ed-Prog/Mix

Here you can assign programs to each timbre 1–8, and set pan and volume for each. (These settings can also be made in the Prog and Mix pages of 1.1: Play.)

Prog page



Program Select

Assigns a program to each timbre.

note You can use the Utility menu command “Select by Category” to select programs from 16 categories. (p.33)

note You can also use the [BANK] and [A]–[GM] keys to select the bank of the program.

🔊 If you wish to select programs by receiving MIDI program changes, do so in P1.1: Play.

Mix (Mixer) page



Pan


Specifies the panning (stereo location) for each timbre. A setting of **C064** will reproduce the oscillator pan setting of the program. Moving this to left or right will move the sound to left or right while preserving the pan relationship between the oscillators. A setting of **L001** is far left, and **R127** is far right.

Volume

Adjusts the volume of each timbre. Create the overall sound by adjusting the volume balance between timbres. The “**Volume**” setting is an important aspect of creating the sound, and this setting will have a significant effect on the overall impression produced by the Combination.

..... Controller settings 2.2: Ed-Ctrl


Ctrl (Controls) page

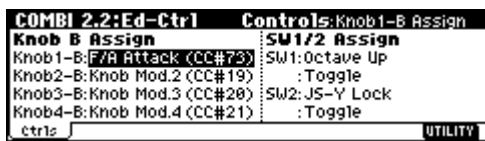

For each combination, you can specify the functions of the B-mode functions of REALTIME CONTROLS knobs [1]–[4], and the [SW1] and [SW2.] (see p.119, PG p.36, 224, 225)

..... Settings for status, MIDI channel, and playing mode 3.1: Ed-Param1

MIDI page

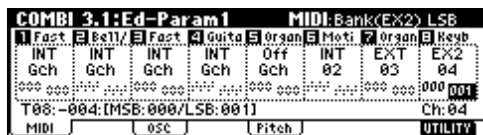

Status

Here you can specify the state of MIDI and the internal tone generator for each timbre. Normally when sounding the internal tone generator of this instrument, you will set this to **INT**. Set this to **Off** for timbres that you are not using. With settings of **Off**, **EXT**, or **EX2**, this instrument will not sound. With settings of **EXT** or **EX2**, you can control an external tone generator connected via MIDI. (see PG p.36)

MIDI Channel

Timbres that you wish to play from this instrument’s keyboard must be set to the global MIDI channel. Your playing on the keyboard is transmitted on the global MIDI channel, and will sound any timbre that matches this channel. Normally you will set this to **Gch**. When this is set to **Gch**, the MIDI channel of the timbre will always match the global MIDI channel, even if you change the global MIDI channel.


On some preloaded combinations that use the arpeggiator, timbres assigned to the arpeggiator may not have a “Status” of **INT** and “MIDI Ch” of **Gch**.

The reason for this is that these settings are for timbres that sound only when the arpeggiator is on. This is a very useful technique for creating combinations that use the arpeggiator. Refer to “Arpeggiator settings in Combination and Sequencer modes” (see p.105, PG p.43), and study the relationship between arpeggiator assignments, “Status,” and “MIDI Channel.”

Bank(EX2) MSB, Bank(EX2) LSB

This setting is valid when “Status” is set to **EX2**. It specifies the Bank Select message that will be transmitted from this instrument.

OSC page

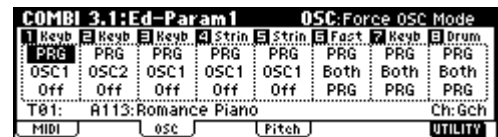

Force OSC Mode

Normally you will set this to **PRG**. If you wish to force a polyphonic program to sound monophonically, set this either to **Mono** or **LGT (Legato)**. Conversely, set this to **Poly** if you wish to force a monophonic program to play polyphonically (see PG p.37).


OSC Select

Normally you will set this to **Both**. If the timbre is using a program whose “Mode (Oscillator Mode)” is **Double**, and you want only **OSC1** or **OSC2** (not both) to sound, set this to **OSC1** (only **OSC1** will sound) or **OSC2** (only **OSC2** will sound).

Portamento

Normally you will set this to **PRG**. If you want the portamento setting specified for the program of the timbre to be forced off, set this parameter to **Off**. Conversely, if you want to forcibly turn the portamento on, or to change the portamento time, set this to a value of **001–127** to specify the portamento time.

Pitch page

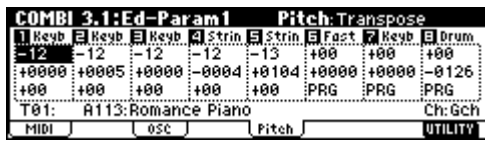

Transpose, Detune (BPM Adjust)

These parameters adjust the pitch of the timbre.

- In a layer-type combination, you can set two or more timbres to the same program, and create a richer sound by using “Transpose” to shift their pitch apart by an octave or by using “Detune” to create a slight difference in pitch between the two.
- In split-type combinations, you can use “Transpose” to shift the pitch (in semitone units) of the programs specified for each key zone.
- If you wish to change the playback pitch of a drum program, use “Detune.” If you change the “Transpose” setting, the correspondence between notes and drum sounds will change.


Adjusting the BPM of multisamples or samples created in Sampling mode (requires the EXB-SMPL option be installed)

If a timbre program uses multisamples or samples that you created in Sampling mode (or loaded in Media mode) to a specific BPM value, you can use the Utility “Detune BPM Adjust” to call up a new specified BPM value. This changes the BPM by changing the playback pitch. (PG p.38)

Note timing and scale settings

3.2: Ed-Param2

Other page

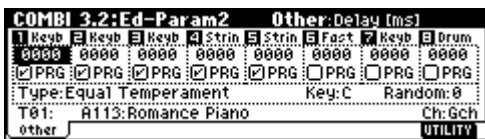

Delay [ms]

Specifies the timing at which the program of each timbre will sound. Specify the time from when you play the keyboard until the program will sound.

If you select **KeyOff** for this parameter, the timbre will sound when the note is released.

Use Prog's Scale, Combi's Scale

Specifies the scale for each timbre. If you check “Use Prog's Scale,” the scale specified by the program will be used. Timbres for which this is **not checked** will use the “Combi's Scale” setting.

Layer and split settings

3.3: Ed-Key Zone

Indicates settings such as layer, split, and keyboard crossfade.

Key page


Specifies the range of notes that will sound each timbre. Each area that sounds a timbre is referred to as a **Key Zone**. By setting key zones, you can create a combination in which different programs sound in different areas of the keyboard.

By combining key zones specified for each timbre, you can create **layered** or **split** combinations.

The upper and lower limits for the key zone of each timbre are set by the “Top Key” and “Bottom Key” respectively.

For example in the following diagram, timbres 1–3 are set to create a layered and split combination. This is specified by the key zone settings.

Timbres 2 and 3 create a layer. Timbre 1 and timbres 2/3 are split between the B3 and C4 note numbers.

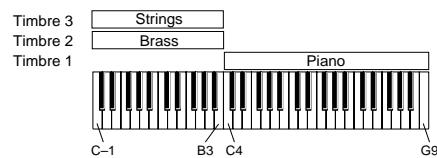

As an example here, we will explain how to create a combination like the one shown above.

- ① In the 1.1: Play, Prog page or the 2.1: Ed-Prog/Mix, Prog page, use the “Program Select” area to select the program that will be used for each timbre 1–3.

Select a piano program for timbre 1.
Select a brass program for timbre 2.
Select a strings program for timbre 3.

- ② In the MIDI page of 3.1: Ed-Param1, set “Status” to INT for all the timbres that you wish to use, and set “MIDI Channel” to either Gch or to match the global MIDI channel (a “G” will be displayed after the channel number).

- ③ In the Key page of 3.3: Edit-Key Zone, set “Top Key” and “Bottom Key.”

Set timbre 1 to a “Top Key” of G9 and a “Bottom Key” of C4.

Set timbres 2 and 3 to a “Top Key” of B3 and a “Bottom Key” of C-1.

note You can also enter these values by holding down the [ENTER] key and playing a note on the keyboard of this instrument.

Slope page

Here you can specify the range of keys over which the original volume will be reached, starting at the top key and bottom key.

In the case of the above example, you could set the key zones so that a portion of timbres 1 and 2 overlaps (i.e., is layered) with timbre 3, and set “Top Slope” and “Bottom Slope” so that the sound changes gradually, instead of changing suddenly between B3 and C4.

Velocity switch settings


3.4: Ed-Vel Zone

Here you can make settings for velocity switching and velocity crossfading.

Vel (Velocity) page

For each timbre, you can specify a range of velocities for which it will sound. The range of velocities for which a timbre will sound is called the **Velocity Zone**. By setting a velocity zone, you can set up a timbre which will be sounded only by notes played at a certain strength, and not by stronger or weaker notes. By combining timbres that have differing velocity zone settings, you can create **velocity switched** combinations.

The upper and lower limits of the velocity zone of each timbre are determined by the “**Top Velocity**” and “**Bottom Velocity**” respectively. The following diagram shows an example of a velocity switched combination in velocity will switch between timbres 1 and 2 to play different programs. Such combinations are created by setting the velocity zone.

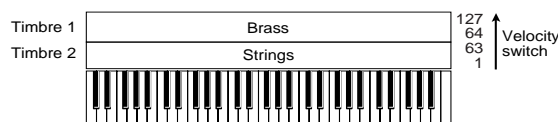

As an example, we will explain how to create a combination like the one shown above.

- 1 In the 1.1: Play, Prog page or the 2.1: Ed-Prog/Mix, Prog page, use the “Program Select” area to select the program that will be used for each timbre 1 and 2.

Select a brass program for timbre 1.
Select a strings program for timbre 2.

- 2 In the MIDI page of 3.1: Ed-Param1, set “Status” to INT for all the timbres that you wish to use, and set “MIDI Channel” to either Gch or to match the global MIDI channel (a “G” will be displayed after the channel number).

- 3 In 3.4: Ed-Vel Zone Vel page, set the “Top Velocity” and “Bottom Velocity.”

Set timbre 1 to a “Top Velocity” of 127 and a “Bottom Velocity” of 64.
Set timbre 2 to a “Top Velocity” of 63 and a “Bottom Velocity” of 1.

note You can also enter these values by holding down the [ENTER] key and playing a note on the keyboard of this instrument.

Slope page

Here you can specify the range of values over which the original volume will be reached, starting from the top velocity and bottom velocity.

In the case of the above example, you could set the velocity zones of the two timbres so that they partially overlap, and set “Top Slope” and “Bottom Slope” so that the sound changes gradually, instead of changing suddenly between velocity values of 63 and 64.

MIDI filter settings

4.1: Ed-MIDI Filter1–4.4: Ed-MIDI Filter4

For each MIDI Filter item, you can specify whether or not the corresponding MIDI message will be transmitted and received. The **checked** items will be transmitted and received.

! MIDI filter does not turn the function itself on/off, but specifies whether or not that MIDI message will be transmitted and received. For example if portamento is on, portamento will be applied to the sound of this instrument even if “Portamento SW CC#65” is unchecked.

For example if you selected a bass program for timbre 1 and a piano program for timbre 2 to create a split-type combination, you could make the following settings so that pressing the connected damper pedal would apply the damper effect only to the piano program of timbre 2.

- Set “Damper CC#64” in 4.1: Ed-MIDI Filter1, MIDI 1-2 page.

Timbre 1 “Damper CC#64”: unchecked
Timbre 2 “Damper CC#64”: checked



Arpeggiator settings

6.1: Ed-Arp.

Indicates settings for the arpeggiator (p.105).

Bus settings

7.1: Ed-InsertFX BUS

Specifies the routing for each timbre (i.e., how it is sent to the insert effect, master effects, and individual outputs). (p.114)

Insert Effect settings

7.1: Ed-InsertFX Setup, IFX

Indicates insert effect, and make settings for them. (p.114).

Master Effect settings

7.2: Ed-MasterFX

Indicates master effects, and make settings for them. Here you can also make master EQ settings (p.114).

Auto Song Setup function

This function automatically applies the settings of the current combination to a new song.

If inspiration for a phrase or song strikes you while you're playing a combination, you can use this function to start recording immediately.

Hold down the [ENTER] key and press the SEQUENCER [REC/WRITE] key. The "Setup to Record" dialog box will open and ask "Are you sure?". Press [F8] ("OK") key. You will automatically enter Sequencer mode, and will be in the record-ready state. Press the [START/STOP] key to start the sequencer and begin recording.

Sequencer mode

This instrument contains a 16-multi track MIDI sequencer. The sequencer is the center to which TR's numerous functions are integrated, allowing it to be used in a variety of situations including music production and live performance.

⚠ When you turn off the power, the settings made in Sequencer mode and the song data, cue list data, and user pattern data that you recorded are not backed up. If you wish to keep this data, you must save it on external media (SD card etc.) before turning off the power, or perform a MIDI data dump to save the data on an external data filer etc.

If you wish to save the programs, track parameters, effects, and arpeggiator function settings etc. selected for a song as a template song, use the Utility menu command "Save Template Song."

Immediately after the power is turned on, this instrument will not contain any cue list data or song data, so if you wish to playback a song on the sequencer, you must first load data from external media (SD card etc.) or receive a MIDI data dump from an external MIDI sequencer (see p.42, 101, PG p.146)

Features of the sequencer

- The sequencer lets you record a **maximum of 200,000 events** (note data etc.), up to **200** songs, and as many as **999** measures per song.
- Up to **20 cue lists** can be created.
A cue list is an arrangement of up to 99 songs that will be played as a chain. You can specify the number of times that each song will repeat. Songs in a cue list can also be converted into a single song.
- The **arpeggiator function** can be used for playback or recording.
- The **RPPR (Realtime Pattern Play/Recording) function** can be used for playback or recording.
- **Sixteen different template songs** are built-in, and contain program and effect settings suitable for various musical styles. Up to sixteen original templates that you create can be saved as user template songs.
- **One stereo insertion effect, two master effects, and a stereo master EQ** can be used for each song.
- Timing resolution is a maximum of $\frac{1}{192}$.
- **Sixteen tracks** are provided for musical data, and a **master track** contains time signature and tempo data that controls the playback.
- A **track play loop function** lets you loop specified measures independently for each track.
- **150 preset patterns** ideal for drum tracks are built in. In addition, you can **create up to 100 user patterns** for each song. These patterns can be used as musical data within a song, or can be played by the RPPR function.

- Various methods of recording are supported, including **realtime recording** in which your performance on the keyboard and controllers (including MIDI control events) is recorded just as you play, and **step recording** in which the timing, length, and velocity of each note can be specify in the LCD as you input the pitches from the keyboard.
- The musical data and control events that you recorded can be edited in various ways (including **event editing** and many other edit commands).
- When the "Status" of a track is set to **INT** or **BTH**, an external sequencer can be used to play this instrument as a **multi-timbral tone** generator. When the "Status" of a track is set to **BTH**, **EXT**, or **EXT2**, the sequencer of this instrument can **play external tone** generators.
- Playback can be **synchronized with an external MIDI device**.
- This instrument's **AMS (Alternate Modulation)** capability lets you use control changes for realtime control of the parameters of the programs used in a program. Its **MIDI Sync. functionality** lets you synchronize the LFO speed to changes in the tempo.
- **Dmod (Dynamic Modulation) functionality** lets you control effect parameters in realtime. You can also use **MIDI Sync.** to synchronize the LFO speed or delay time to changes in the tempo.
- You can assign names not only to the song, but also to each pattern and track.
- Combination settings can be copied to a song.
- Sequencer data such as a song or cue list that you create can be saved in this instrument's native format, or transmitted as a MIDI data dump.
- A song you created can be converted into SMF (Standard MIDI File) data. SMF songs can also be loaded.
- The **PLAY/MUTE/REC** and "SOLO On/Off" let you instantly play/mute any desired track.
- You can rewind or fast-forward while listening to the sound.
- The [LOCATE] key lets you move quickly to a desired location.
- If the EXB-SMPL (sold separately) option is installed, multisamples you create can be played in Sequencer mode together with the internal programs.
The Time Slice function of Sampling mode lets you divide a rhythm loop sample and create performance data that corresponds to the divided samples. In Sequencer mode you can play this performance data, and adjust the playback tempo without affecting the pitch of the rhythm loop sample. You can also exchange the note numbers of the data, or modify the timing to freely re-create the original rhythm loop.

The structure of Sequencer mode

The following describes the structure of Sequencer mode. (see diagram below)

Songs

A song consists of tracks 1–16, a master track, song parameters such as the song name, effect, arpeggiator and RPPR parameters, and 100 user patterns.

A maximum of 200 such songs can be created on this instrument.

Tracks 1–16 and the master track each consist of **setup parameters** located at the start location, and **musical data** within the track.

Setup parameters

Tracks 1–16

Bank/Program No.*, PLAY/MUTE/REC, Pan*, Volume*, Track Play Loop, Loop Start Measure, Loop End Measure, Status, MIDI Channel, Bank Select (When Status=EX2), Force OSC Mode, OSC Select, Portamento*, Transpose**, Detune**, Bend Range**, OSC On/Off Ctrl, Delay, Use Program's Scale, MIDI Filter, Key Zone, Velocity Zone, Track Name, IFX/Indiv.Out BUS Select, Send1(MFX1)*, Send2(MFX2)*

Master track

Time signature*, Tempo*

Musical data

Tracks 1–16

Note On/Off, Program Change (including Bank Select), Pitch Bend, After Touch (Poly After), Control Change, Pattern No.

* When you change the setting during realtime-recording, this will be recorded as musical data. This allows the starting settings to be modified during the playback.

** Musical data (MIDI RPN data) can be used to change the starting settings during playback. For details on control changes and RPN, refer to PG p.236, 239.

Patterns

There are two types of patterns: preset patterns and user patterns.

- **Preset patterns:** Patterns suitable for drum tracks are preset in internal memory, and can be selected for any song.
- **User patterns:** Each song can have up to 100 patterns. When using a pattern in a different song, use the Utility menu commands “Copy Pattern” or “Copy From Song” etc. to copy the pattern. The pattern length can be specified in units of a measure.


Each pattern consists of musical data for one track. It is not possible to create patterns that contain multiple tracks.

These patterns can be used as track musical data by being **placed in a track** (Utility menu command “Put to Track”) or **copied to a track** (Utility menu command “Copy to Track”). Alternatively, you can use a pattern with the **RPPR function of a song**.

Cue List

A **cue list** allows you to playback multiple songs in succession. The TR allows you to create 20 cue lists. Each cue list allows you to connect a maximum of 99 songs in any order, and to specify the number of times that each song will repeat.

The page menu command “Convert to Song” lets you convert the two or more songs in a cue list into a single song. This allows you to use a cue list to create the backing, then convert the cue list into a song and add solo phrases on unused tracks.

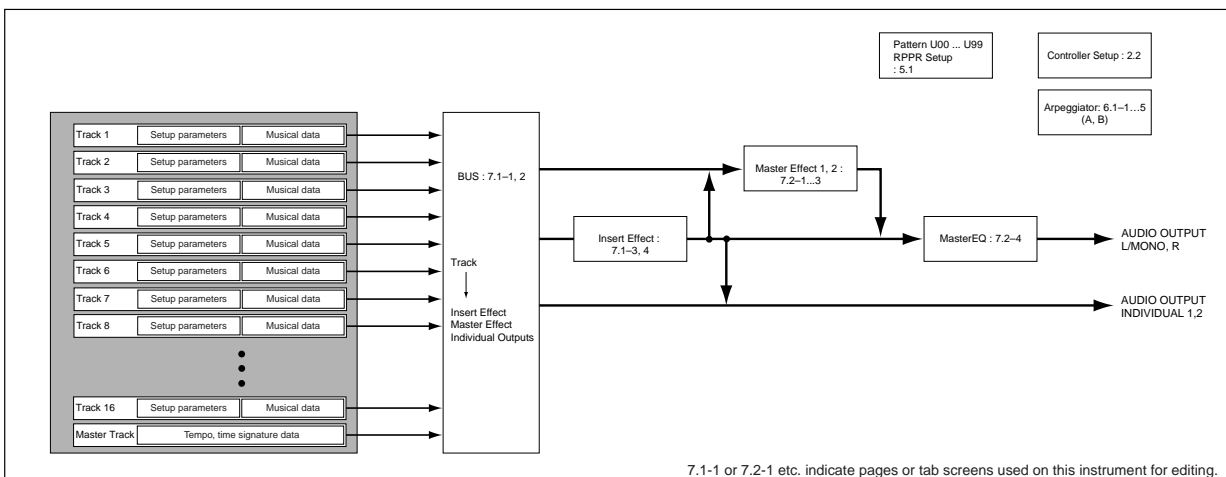

7.1-1 or 7.2-1 etc. indicate pages or tab screens used on this instrument for editing.

Producing a song

This section describes how to use the TR's sequencer. As an example, we will create a song by following the order outlined below.

"Creating the basic song"

Here we will use the convenient functions of the TR's sequencer (e.g., template songs, preset patterns, arpeggiator) to perform realtime recording and step recording.

"Editing the song"

Here we will edit the song that we created in "Creating the basic song."


"Creating a cue list"

Here we will complete the song by creating a cue list for the song that we copied etc. in "Editing the song."

Creating the basic song

1. Loading a template song, and copying preset patterns (drum phrases)

- 1 Turn off the power. Then turn it on again.

 When you turn off the power, all songs will be erased. Be sure to save any important data before you perform this step.

note This explanation assumes that you are starting from the default state immediately after power-on.

- 2 Press the [SEQ] key to enter Sequencer mode.



- 3 Load a template song.

Press the [F8] ("UTILITY") key to access the Utility menu, and then use the [F7] key or the cursor keys to select "Load Template Song" and press the [F8] ("OK") key.

A dialog box will appear.



Make sure that the template song name at the right of "From" is highlighted, and use the VALUE controller to select P13: Acid Jazz.

note There are 16 template songs, each containing program, pan, volume, and effect settings suitable for various styles of music. By loading a template into a song, you can begin recording immediately without having to make the same frequently-used settings each time. If you want to specify the program and volume etc. yourself from scratch, refer to "Making track settings for a new song" (p.70).

Use the cursor keys to move to "Copy Pattern to Track too?" Press the [INC] key to check the check box.

If this is checked, a drum pattern will be copied to the song after the template song is loaded.

Press the [F8] ("OK") key to load the template song.

A dialog box will appear.



Make sure that Preset, P109: AcidJazz 1/Std2 is selected at the right of "Pattern." If not, use the VALUE controller to select it.

You can press the [START/STOP] key to hear the selected pattern. To stop, press the [START/STOP] key once again.

Press the [F6] ("Copy") key to copy the pattern.

The "Measure" value will change from 001 to 009. This indicates that the pattern has been copied from measure 1 to measure 8, and that the next time you press the [F6] ("Copy") key, the pattern will be copied from measure 9.



Press the [F7] ("Exit") key.

In the SEQ 1.1: Play/REC, Play/REC page, the "Song Select" field will indicate S000: Acid Jazz.



note Preset patterns can be used in a song even after the above steps. This can be done by using the Utility menu commands "Put Pattern" or "Copy Pattern" (SEQ 5.1: RPPR, Pattern page) (PG p.71).

- 4 When you play the keyboard, you will hear the drum program for track 1 of the template song that was loaded.

- 5 Press the [▼] key to select "Track Select" T01: Drums.

"Track Select" is the track that will be used to record/play song data. Normally, the track selected here can be played from the keyboard, and during recording, your performance will be recorded on this track (in cases other than Multi REC or Master Track).

Use the VALUE control to select T02: Bass, and play it from the keyboard. Next select T03–T08 in order, and play them from the keyboard. (The TR has sixteen sequence tracks, but this template song specifies only tracks 1–8.)

Select T03: Elec.Piano.




- ⑥ Press the [START/STOP] key to play back the pre-set pattern that you copied. Play the keyboard while you listen to the drum pattern.
- ⑦ Press the [START/STOP] key to stop.

2. Repeatedly playing specific measures of a track (Track Play Loop)

Here's how to use Track Play Loop to repeatedly play back a drum phrase.

- ① Press the [MENU] key to access the page menu.

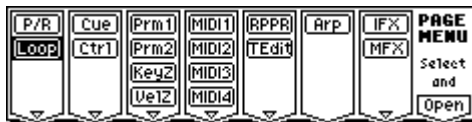

Press the [F1] key to select “Loop,” and press the [F8] (“Open”) key.

The SEQ 1.2: Loop, Track Play Loop page will appear.




- ② Check track 1 “Loop On,” leave “Loop Start Meas” as it is, and set “Loop End Meas” to 008.
- ③ When you press the [START/STOP] key, the drum phrase will be played back repeatedly.

When the playback has repeated for the number of measures in the song as specified by “Length” (the power-on default is 64 measures), it will stop automatically.

note By using “Play Intro” you can begin the loop after adding an introduction (see PG p.58).

note Track Play Loop will continue repeating for the number of measures specified by “Length.” If you want to limit the number of repetitions or place other performance data (e.g., a drum fill-in) in that track, you will need to expand the pattern into actual performance data. Use the SEQ 5.2: Track Edit Utility menu command “Repeat Measure” to specify the number of playback repetitions and expand the pattern as playback data. In the sample illustration below, performance data will be created to play measures 1–8 of track 1 for four times (i.e., 32 measures).



3. Recording the bass track

- ① If playback is occurring, press the [START/STOP] key to stop playback.

Press the [LOCATE] key to return to the beginning of the song.

The location will indicate 001:01.000.

- ② Press the [EXIT] key to access the 1.1: Play/REC page.
- ③ Use “Track Select” to select the track that you want to record.

In this example, select T02: Bass.



Press the [START/STOP] key to start playback, and practice playing the phrase that you want to record.

When you are finished rehearsing, press the [START/STOP] key to stop playback.

Press the [LOCATE] key.

note When the power is turned on, the “Recording Mode” of the TR will be set to **Over Write recording**, in which newly recorded data will be overwritten. For details on other recording modes, refer to p.81 and PG p.56.

note When recording rapid or difficult phrases, you can slow down the tempo and record at a more comfortable tempo. Simply adjust the “Tempo.” After recording, restore the original tempo.



note You can use the **Quantize** and **Resolution** functions to correct the timing of your performance as it is recorded.

For example during realtime recording, suppose that you input eighth notes at slightly inaccurate timing, as shown in line 1 of the diagram below. If you set “Reso” (Resolution) to ♩ and performed realtime recording, the timing would automatically be corrected as shown in line 2. With a setting of **Hi**, the performance will be recorded with the exact timing at which it was played.



There is also a “Quantize” function (SEQ 5.2: Track Edit Utility menu command) which corrects the timing of performance data after it has been input. If you have already recorded (without using realtime quantize) and later notice during playback that the timing is not quite right (as in line 1 of the preceding diagram), you can select the SEQ 5.2: Track Edit Utility menu command “Quantize,” set “Resolution” to ♩, and press the [F8] (“OK”) key to correct the timing as shown in line 2.

④ Press the [REC/WRITE] key.

You will hear the metronome. The TR will be in record-ready mode. (Refer to PG p.57 for details on metronome settings.)

⑤ Press the [START/STOP] key.


After a two-measure count, recording will begin. **Play the keyboard for about 16 measures, and record your performance.**

If you make a mistake or decide to re-record, press the [START/STOP] key to stop recording, and press the [COMPARE] key.

When you press the [COMPARE] key to execute the Compare function, you will return to the state prior to recording. (Refer to p.80 for the content that can be compared in Sequencer mode.)

⑥ When you are satisfied with your performance, press the [START/STOP] key to stop recording.

note For example if your performance in measures 5–8 was the best take, you can use the Track Play Loop function to repeatedly play back just this portion. In the SEQ 1, 2: Loop, Track Play Loop page, check “Loop On” for track 2, set “Loop Start Meas” to 005, and set “Loop End Meas” to 008.

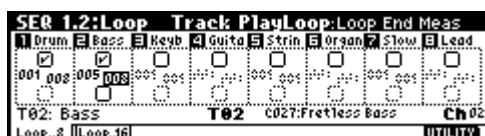

When you press the [START/STOP] key, repeated playback will begin.

note After you press the [START/STOP] key to stop playback, we recommend that you press the [LOCATE] key to return to the beginning of the song. After recording, you will automatically return to the measure at which recording began.

4. Recording arpeggio patterns

The performance of an arpeggio pattern can be recorded into a song. With the settings of this template song, the arpeggiator will function on track 4.

① In “Track Select,” choose T04: Guitar.



② Press the [ARP ON/OFF] key.

③ Press the [START/STOP] key and play single notes or chords.

Verify that arpeggios are sounded in synchronization with the tempo of the drum and bass performance, and rehearse your performance.

④ Press the [START/STOP] key to stop playback. Then press the [LOCATE] key to move the location to the beginning of the song.

⑤ Start recording.

Press the [REC/WRITE] key, and then press the [START/STOP] key.

If you play notes on the keyboard during the count-in, the arpeggio will begin at the same time that recording begins, and then that pattern will be recorded.

Play the keyboard for about 16 measures and record your performance.

Press the [START/STOP] key to stop recording.

If you made a mistake or would like to re-record, you can use the Compare function (press the [COMPARE] key) to re-record as many times as you wish.

note The arpeggio pattern is recorded as the note data that was generated. If you operate ARP-GATE or ARP-VELOCITY while recording an arpeggio pattern, this data will be recorded, but it will not be possible to add changes by overdubbing ARP-GATE or ARP-VELOCITY data afterward for those notes.

5. Recording other tracks

① As described in “Recording the bass track,” use “Track Select” to select T03: Elec.Piano, and record about 16 measures.

6. Step recording

The TR provides two main methods of recording a song. The first is **realtime recording**, in which your performance on the keyboard and operations of the joystick and other controllers are recorded in realtime. This is how we recorded the bass and electric piano tracks in the preceding sections.

The second method is **step recording**, in which you can specify the timing, note length, and velocity etc. in the LCD screen, and use the keyboard to input the pitch of the note. Only the note-on/off data is recorded. Step recording is suitable when you want to create a distinctive mechanical feel, or when you want to

record phrases that would be impossible or too rapid to play “live.”

note Rapid phrases can also be recorded in realtime by temporarily slowing down the sequencer tempo.

Here’s the procedure for step recording.

- 1 Press the [MENU] key to access the page menu. Press the [F5] key to select “TEdit,” and press the [F8] (“Open”) key.

The SEQ 5.2: Track Edit screen will appear.



- 2 Press the [▼] key to set “Track Select” to T08 (Ch:08) Lead Synth.
For this example we will input a lead performance using an analog synthesizer sound.
- 3 Press the [←] key to select “Measure (From),” and press the [DEC] key to set this to M:001.
With this setting, step recording will begin from measure 1.
- 4 Press the [F8] (“UTILITY”) key to display the Utility menu, press the [F7] key or the cursor keys to select “Step Recording,” and press the [F8] (“OK”) key.

A dialog box will appear.



- 5 Press the [←] key to select “Step.” Press the [INC] key or [DEC] key to select ♩ (16th note).

The step indicates the basic note value (length of a note or rest) that will be used when entering notes from the keyboard.

To input a triplet or dotted note, select the “-” at the right, and press the [INC] key or [DEC] key. Select “3” for a triplet, or “.” for a dotted note.

“Duration” indicates the length that the note itself will sound. Smaller values will produce a staccato note, and larger values will produce a legato note. For this example, leave this setting unchanged.

“Vel.” is the velocity (playing strength), and larger values will produce a louder volume. Set this to about 090.

If you select Key for this parameter, the velocity with which you actually played the keyboard will be input.

- 6 On the keyboard, press and then release the first note that you want to input.

The LCD screen will show numerical values for the data that you input. In the lower right, Next:[M001 01.000] will change to [M001 01.048], and when you input the next note, the data will be input at that location.

Continue pressing notes to input a melody.

note You can also delete notes or rests, or input rests or ties. (PG p.75)

- To delete a note or rest that you input, press the [F6] (“Back”) key. The previously-input note will be deleted.
- To input a rest, press the [F4] (“Rest”) key. This will input a rest of the “Step” value.
- To modify the length of a note, you can modify the “Step” value before you input the note. However if you want to extend the length (tie) of the note, press the [F5] (“Tie”). At this time, the previously-input note will be extended by the length of “Step.”



note If you want to check the note that you will input next, press the [PAUSE] key. In this state, playing a key will produce sound, but will not input a note. Press the [PAUSE] key once again to cancel the record-pause state, and resume input.

note To input a chord, simultaneously press the notes of the desired chord. Even if you do not press them simultaneously, notes that were pressed before you took your hand off of all keys will be input at the same location.

However in the above example, the program of track 8 will not sound chords. This is because the program is set to mono mode, and the song follows the setting of the program. In other words because this track is set to “Force OSC Mode” PRG, the “Voice Assign Mode” setting of Mono for the program B042: Express Lead remains valid.

- 7 When you are finished inputting, press the [F8] (“Done”) key.

- 8 Press the [START/STOP] key to play back.

When you begin step recording, all data following the recorded measure will be erased from that track.

You need to be aware of this if you begin step recording from a measure mid-way through the song.

If you want to re-input data into a measure that already contains data, perform step recording in another un-recorded track, and execute “Move Measure” or “Copy Measure” (PG p.79).

If you want to edit or add to the recorded data, you can use the “Event Edit” function (PG p.75).

7. Using controllers to record tonal changes

Let's try using the realtime controllers and the joystick to add effects to the performance that we just step-recorded on track 8.

- ① Press the [EXIT] key, and then press the [F6] ("Pref.") key to move to the SEQ 1.1: Play/Rec, Preference page.
- ② Set the "Recording Mode" to Over Dub.

Over Dub allows you to add to a previously-recorded track.



- ③ For "Track Select," make sure that T08: Lead Synth is selected.

Press the [START/STOP] key to start playback, and operate the realtime controllers and joystick to rehearse. When you are finished rehearsing, press the [START/STOP] key to stop. Press the [LOCATE] key.

- ④ Start recording.

Press the [REC/WRITE] key, and then press the [START/STOP] key.

After a two-measure count-in, recording will begin.

Operate the LFO CUTOFF or RESONANCE/HPF realtime controllers or the joystick ($\pm Y$ axis) to record their movements.

When you are finished performing, press the [START/STOP] key.

If you make a mistake or want to re-record, press the [COMPARE] key to execute the Compare function, and then re-record.

8. Saving the song

Remember to save the song you created. The data will be lost when the power of the TR is turned off. Refer to p.46 for the Save procedure.

Convenient functions for song production and checking the track settings

Monitoring just a specific track/Muting just a specific track (Solo/Mute functions)

The TR provides a Solo function that lets you play only a specific track 1–16, and a Mute function that silences only a specific track. These functions can be used in various ways. For example you can intentionally mute or solo specific tracks, or listen only to the rhythm section of the previously-recorded tracks while you record new tracks.

Let's try out the Mute and Solo functions.

- ① In SEQ 1.1: Play/REC, press the [F2] ("Prog.8") key to access the Program page.

Press the [START/STOP] key.

- ② Select the track 1 "PLAY/MUTE/REC," and press the [INC] key once.

The display will change to "MUTE," and the playback of track 1 will no longer be heard. In this way, the "mute" function allows you to silence a specified track until the track is un-muted.



Select the track 2 "PLAY/MUTE/REC" and press the [INC] key once.

- note** When selecting the parameters of various tracks as above, you can also make your selection by holding down the [TIMBRE/TRACK] key and pressing one of the [F1] (T1/T9)–[F8] (T8/T16) keys.

The display will change, and the playback of track 2 will also be muted.



To cancel muting, press the "PLAY/MUTE/REC" and press the [DEC] key.

- ③ Next select the track 1 "SOLO On/Off" and press the [INC] key once.

The display will change, and now only the track 1 playback will be heard. In this way, the Solo function lets you hear only a specified track.

- note** If both Mute and Solo are used, the Solo function will be given priority.)



Press the track 2 “SOLO On/Off” and press the [INC] key once.

The display will change, and only the playback of tracks 1 and 2 will be heard.



To turn off the Solo function, select the “SOLO On/Off” and press the [DEC] key once again. Select the track 1 and 2 “SOLO On/Off” and press the [DEC] key once each.

The display will change, and the playback of tracks 1 and 2 will be muted. If the Solo function is turned off for all tracks, playback will be according to the “PLAY/MUTE/REC” settings.

note By using the Utility menu command “Solo Selected Track,” you can listen to the sound of only the selected track. This is convenient when you want to set track parameters or to make effect settings. (PG p.51)

[LOCATE] settings

By pressing the [LOCATE] key you can move to a specified location.

The location is specified by the Utility menu command “Set Location.” You can also hold down the [ENTER] key and press the [LOCATE] key to set the location even during playback (PG p.54). Normally you will set this to 001:01.000. You will return to the beginning of the song. When you select a song, the [LOCATE] setting will automatically be set to 001:01.000.

Making track settings for a new song

Here’s how to make basic settings for a new song, such as assigning a program to each track, and setting the volume etc. You can check these settings for the template song you loaded earlier.

1. Assign a program to each track (SEQ 1.1: Play/REC, Program page)



In the SEQ 1.1: Play/REC, Program page, use “Program Select” to assign a program to each track.

At this time you can also use the Utility menu command “Select by Category” to select programs by category (PG p.55).

You can also use the Utility menu command “Copy From Combi” to copy settings from a combination (p.77, PG p.52).


note When assigning a program, you can use “Track Select” to select the track for which you are making assignments, and try playing the sound.

2. Set the pan and volume of each track (SEQ 1.1: Play/REC, Mixer page)



In the SEQ 1.1: Play/REC, Mixer page, “Pan” sets the pan of each track, and “Volume” sets the volume of each track.

3. Specify the tone generator and MIDI channel that will sound each track (SEQ 3.1: Param1, MIDI page)

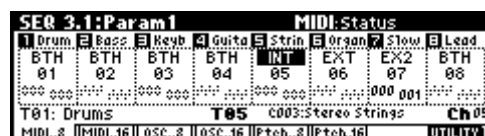

In the SEQ 3.1: Param1, MIDI page, “Status” specifies whether each track will sound the internal tone generator or an external tone generator. “MIDI Channel” specifies the MIDI channel for each track.

If the track status “Status” is set to INT, playing the track data or operating the TR’s keyboard or controllers will cause the TR’s internal tone generator to be sounded and controlled.

If “Status” is set to EXT, EX2, or BTH, playing the track data or operating the TR’s keyboard or controllers will cause an external tone generator to be sounded and controlled. (The MIDI channel of the external tone generator must be set to match the “MIDI Channel” of TR tracks that are set to EXT, EX2 or BTH.)

If “Status” is set to BTH, both the external tone generator and the TR’s own tone generator will be sounded and controlled.

If you are using the TR’s Sequencer mode as a 16-track multi-timbral tone generator, set this parameter to INT or BTH. (“Status” PG p.62)

In general, you should set “MIDI Channel” to different channels 1–16 for each track. Tracks that are sent to the same MIDI channel will sound simultaneously when either is recorded or played.

4. Make effect settings (SEQ 7.1: Insert FX, SEQ 7.2: Master FX)

Make settings for each effect in SEQ 7.1: Insert FX and SEQ 7.2: Master FX. (p.114, PG p.84)

5. Set the tempo and time signature (SEQ 1.1: Play/REC)

Make these settings in SEQ 1.1: Play/REC. “Tempo” sets the tempo, and “Meter” sets the time signature. (PG p.50)

6. Make other settings as necessary

As necessary, make arpeggiator settings (SEQ 6.1: Arp.) and MIDI filter settings (SEQ 4.1–4.4: MIDI Filter 1–4). (PG p.49–87)

When you are finished making these settings, the basic setup is complete. Record as described in "3. Recording the bass track" (p.66) and following sections.

Song editing methods

A song can be edited in a variety of ways. Here we will explain various ways in which the song we recorded in the preceding pages can be edited for the purpose of creating a Cue List (explained in the section that follows).

1. Copying a song

Here's how to copy a song. This is convenient when you want to create different variations based on a song.

① Create a new song.

Press the [EXIT] key to display the SEQ 1.1: Play/REC page. Choose "Song Select," use the **numeric keys** to input the song number that you want to newly create, and press the [ENTER] key. (For example, press the [1] key and then the [ENTER] key.) A dialog box will appear.




Decide on the number of measures, input the number in "Set Length," and press the [F8] ("OK") key.



A new song will be created. Next we will copy the song settings and playback data of another song into this newly created song.

② Select the Utility menu command "Copy From Song," and press the [F8] ("OK") key.

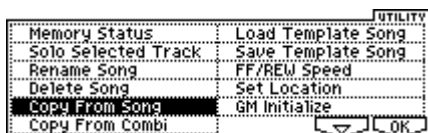

A dialog box will appear. Select the song that you want to copy (i.e., the copy source). If you select **All**, all song settings and playback data will be copied from that song. If you select **Without Track/Pattern Events**, settings other than Play Loop and RPPR will be copied. **For this example, select All.**

Press the [F8] ("OK") key to execute the copy.


③ As described in steps ① and ②, create one more new song (S002), and copy song S000 to it.

2. Naming a song

Here's how to assign a name to a song you created.

① Choose "Song Select," and use the VALUE controller to select a song. For this example, select song 002.

② In the SEQ 1.1: Play/REC page, select the Utility menu command "Rename Song," and press the [F8] ("OK") key.



A dialog box will appear. Press the [F5] ("Name") key to access the text dialog box.

Press the [F1] ("Clear") key, and input CHORUS (p.44).

When you are finished inputting the name, press the [F8] ("OK") key.

Press the [F8] ("OK") key once again to execute the Rename operation.

③ As described in steps ① and ②, assign a name of INTRO to S000, and VERSE to S001.

3. Setting the number of measures in the song

Here's how to specify the number of measures in the song. When the power is turned on, this is set to **64 measures**. If you realtime-record for more measures than this, the song will be the length of the measures you recorded.

① Select song S000: INTRO.

② Select the SEQ 5.2: Track Edit page.


In the SEQ 5.2: Track Edit page, press the [MENU] key to access the page menu, select the [F5] ("TEdit") key, and then select [F8] ("Open").



③ Press the [F8] ("UTILITY") key to access the Utility menu.

This contains various commands for editing tracks and measures.

Select "Set Song Length," and press the [F8] ("OK") key.

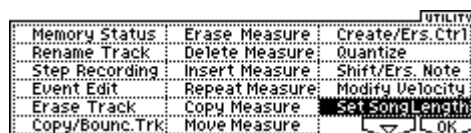

A dialog box will appear.



Input the number of measures for the song. For this example, select **008 (8 measures)** and press the [F8] (“OK”) key.

The performance data from measures 1–8 will remain, and the data of subsequent measures will be deleted. When you press the [START/STOP] key to play the song, playback will stop at the end of the 8th measure.

- ⚠ If you are using Track Play Loop, check whether the measures specified for “Loop Start Meas” and “Loop End Meas” would be deleted. If they would be deleted, use “Move Measure” (≡PG p.79) etc. to move the data into the playback area before you execute this operation.

④ **Mute tracks.**

Press the [EXIT] key to select SEQ 1.1: Play/REC, and access the Program page.

Mute all tracks other than **tracks 3 and 4**. When you play back, you will hear only the electric piano and guitar performances.



- ⑤ As described in steps ①–④, set song S001: VERSE to 008 (8 measures), making it an eight measure song.

Then mute all tracks other than **tracks 1–3**. When you play back, you will hear only the drums, bass, and electric piano.

- ⑥ As described in steps ①–④, set song S002: CHORUS to 008 (8 measures), making it an eight measure song.

4. Changing the key (transposing/modulating)

Here’s how to change the key of a song.

- ① Select song S002: CHORUS.
- ② Select the SEQ 5.2: Track Edit page.
- ③ Use the [▲], [▼] keys to select track T02 for the key change.
- ④ Specify the measures for which the key will be changed.

Press the [←] key to select “Measure (From),” and use the VALUE controller to set this to 001. Next press the [→] key to select “Measure (To End of),” and set this to 008.




- ⑤ Press the [F8] (“UTILITY”) key, select the Utility menu command “Shift/Ers.Note,” and press the [F8] (“OK”) key.



A dialog box will appear. If you did not specify the range of measures in step ④, set “From Measure” – “To Measure” to specify the range that will be edited.

Set “Mode” to Shift (Replace), and set the value to +003. (≡PG p.81)

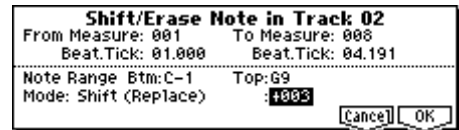

Press the [F8] (“OK”) key. The pitch of track 2 will be raised three semitones.

- ⑥ Use the same procedure to raise the pitch three semitones for each track on which performance data is recorded. However, do not change the key of track 1 which uses a drum kit.

- ⚠ If you change the key of a track that is using a drum kit, the relationship between the notes and the instruments of the drum kit will be shifted, so that the rhythm instruments will not sound correctly.

About editing

Song editing

In addition to **copying** and **renaming** a song, other operations such as **Delete** can be performed from the Utility menu commands in pages such as SEQ 1.1: Play/REC (≡PG p.52).

Track editing

Event Editing allows you to edit or insert data in a recorded track. In addition, commands such as **Create Control Data** (which lets you insert bend, aftertouch, or control change data) and other commands for deleting, copying, inserting, or moving tracks can be accessed from the Utility menu command in pages such as SEQ 5.2: Track Edit (≡PG p.75).

Pattern editing

Using the Utility menu commands of the SEQ 5.1: RPPR, Pattern page, you can use **event editing** to modify the recorded data or insert new data, and execute commands to **delete**, **copy**, or **bounce** patterns (≡PG p.70).

Creating and playing a Cue List

A **cue list** allows you to play multiple songs in succession. For example you can create a separate song for each portion (introduction, melody A, melody B, chorus, and ending) of a composition, and use the cue list to specify the order of each portion and the number of times that it will be repeated to complete the song. If you want to change the structure of the song, the cue list lets you do so in an efficient way. You can also use this as a jukebox function that will playback completed songs in the order you specify.

Step	Song	Repeat
01	S000: Intro	02
02	S001: A	02
03	S002: B	01
04	S003: Chorus	02
05	S001: A	02
06	S002: B	01
07	S003: Chorus	02
08	S001: A (Solo)	01
09	S003: Chorus	03
10	S004: Ending	02

Intro	Intro	A	A	B	Chorus
Chorus	A	A	B	Chorus	Chorus
A(Solo)	Chorus	Chorus	Chorus	Ending	Ending

Each unit in a cue list is called a “**step**,” and each step contains a song number and the number of repeats.

Here we will use a cue list to combine the previously-created songs **S000: INTRO**, **S001: VERSES**, and **S002: CHORUS**.

① Select SEQ 2.1: Cue List.

With the default settings, song **S000** will be selected for “Step” **01**, and **End** will be selected for “Step” **02**.



② Press the [F7] (“EDIT”) key

You will be able to insert or delete songs into or from the cue list.



③ Add a song to the Step area.

Use the cursor keys to select **Step 02**, and press the [F4] (“**INSERT**”) key. A song will be added to step 02. Use the VALUE controller to select **S001: VERSES**.

In the same way, select **Step 03**, and press the [F4] (“**INSERT**”) key to add a song to Step 03. Set this step to **S002: CHORUS**.

If you press [F5] (“**CUT**”), the selected step will be deleted. If you press the [F4] (“**INSERT**”) key, that step will be inserted. If you press the [F6] (“**COPY**”) key, the selected step will be copied. If you press the [F4] (“**INSERT**”) key, that step will be inserted.

④ Set the last step to End.

If you set this to **Continue to Step01**, the cue list will playback repeatedly.

⑤ In “Rep (Repeat),” specify the number of times that the song for that step will be repeated. For this example, set Step 02 S001: VERSES to 02.

⑥ Specify whether effect settings will also be switched when the song at each step is played back. If you want to effect settings to change, check the “FX” check box.

For this example, check the “FX” check box for **Step 01**, which loads the effects.


⑦ When you are finished making settings for each step, press the [F7] (“DONE”) key.

⑧ To playback at the tempo that was specified for each song, set “Tempo Mode” to Auto.

If this is set to **Manu (Manual)**, playback will use the tempo specified by “J=”.



⑨ When you press the [START/STOP] key, playback will begin from the step that is specified as the “Current Step.”

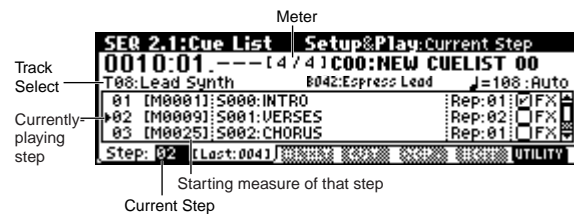

- “**Step**”: The arrow will indicate the currently playing step. **▶** indicates the currently selected “Step.” If you set “**Current Step**” while stopped, the display will change.
- “**M******”: Indicates the starting measure of that step.
- “**Meter**”: Indicates the currently-playing time signature. This cannot be changed.
- The name of a cue list can be specified by the “**Rename Cue List**” page menu command.
- When you play the keyboard, the program of the track selected by “**Track Select**” will sound. If a different program is selected for each song, the program specified for the currently playing song will sound.

note Cue list editing will automatically end if you press the [START/STOP] key, etc. (**DONE** → **EDIT**)

If playback is not connected smoothly between songs when playing a cue list

Depending on the effect settings, a certain amount of time may be required for the effects to be switched. If this occurs, the playback will not be smoothly connected from song to song.

To ensure a smooth transition from song to song, check “FX” for “Step” 01. Do not check “FX” for the remaining steps. This way, the effect settings will be made before playback begins, and there will be no time lag when cue list playback is started or when switching from song to song. Although it will not be possible to change effect types within the cue list, you can use dynamic modulation or MIDI control changes such as Effect Control to control the effects within the cue list, for example applying reverb more deeply on certain songs, or raising the LFO speed for a specific song. We recommend this method if you will be using a cue list to construct the song.

When you execute the Utility menu command “**Convert to Song**”, the effect settings of the “Step” 01 song will be specified for the song that results from the conversion.

Even if “FX” is not checked, there may be cases in which a time lag in the transition between songs, depending on the musical data of the song. Also, there may be cases in which the musical data is not played at the correct timing at the transition between songs. If this occurs, you can edit the musical data of the song, or convert the cue list to a song for playback. If you use “**Convert to Song**” to convert the cue list to a song, there will be no time lag during playback at the transition between songs, and the musical data will be played at the correct timing.

Creating multiple songs for use in a cue list

If you want to create multiple songs for use in a cue list, it is a good idea to make the various necessary settings (program and other settings for each track, effect settings, etc.) for one song (e.g., S000), and then use the Utility menu command “**Copy From Song**” in SEQ 1.1 etc. to copy it to other songs so that the settings will be consistent.



After your cue list is finished and you convert it into a song, the track settings (program, pan, volume, etc.) of each step will be converted into playback data and will be reproduced, but if the MIDI channel settings do not match, it may not be possible to convert the playback state of the cue list into a song.

Using a foot switch to switch the Step

You can use a **foot switch to switch the Step**.

If you set “**Rep(Repeat)**” to FS, a foot switch connected to the ASSIGNABLE SWITCH jack will control the timing at which the song stops repeating. Set “Foot SW Assign” (GLOBAL 1.1: System, Foot page) to **Cue Repeat Control**.

Converting a cue list to a song

Although it is not possible to record additional material onto tracks in a cue list, you can convert a cue list to a song, and then record solos etc. on vacant tracks. You will also need to convert a cue list to a song if you wish to save it onto an SD card as SMF data.

- 1 Select the Utility menu command “**Convert to Song**”.

A dialog box will appear.

- 2 In “**To,**” specify the destination song number for the converted data.

The cue list name will automatically be assigned as the song name of the converted data. (For details and cautions regarding “Convert to Song,” refer to PG p.60.)

If you wish to select a new song as the convert destination, use the numeric keys [0]–[9] to specify the song number, and then press the [ENTER] key. It is not necessary to set “Set Length” in the dialog box that appears at this time. The number of measures in the converted song will be used. Press the [F8] (“OK”) key, and the Convert Cue List dialog box will appear.



- 3 Press the [F8] (“OK”) key.

The cue list will be converted into a song. Access the SEQ 1.1: Play/REC page, select the song number that you specified as the conversion destination, and check the results.



Creating and recording RPPR (Realtime Pattern Play/Record)

This section explains how to assign a pattern to RPPR, and how to play and record. (☞ “Playing with the RPPR function” p.31)

Creating RPPR data

① Create a new song. (☞ p.71)

② Specify the program for each track.

For this example we will use a template song. Use the Utility menu command “Load Template Song” to load P14: Hip Hop/Rap. It is not necessary to copy the patterns. (☞ p.65)

③ Select the SEQ 5.1: RPPR, RPPR Setup page.

In this page, the RPPR function is automatically turned on.



④ Use “KEY” to select the key to which the pattern will be assigned.

Select C#2. This can also be selected by holding down the [ENTER] key and playing a note.

C2 and lower keys are used to stop playback, and cannot be assigned.

⑤ Check the “Assign” check box.

⑥ Set “Pat (Pattern Bank)” to the Pre pattern type, and set “Pattern Select” to pattern P121: HipHop 1/ HipHop.

⑦ Set “Track” to T01: Drums.

The selected pattern will be played according to the settings (program, etc.) of the track you select here.

⑧ Assign patterns to other keys.

Set “KEY” to D2.

Press the [F4] (“REVERT”) key.

The settings for “Assign,” “Pat (Pattern Bank),” “Pattern Select,” and “Track” will be set to the values that were specified earlier (in steps ⑤–⑦).

Choose “Pattern Select,” and press the [INC] key once to select P122: HipHop 2/HipHop.

note By using “REVERT” in this way, you can work efficiently when the patterns to be assigned have consecutive or nearby numbers, or use the same track.



Use the above method to assign several patterns from the range of P123: HipHop 3/HipHop–P135: HipHop 15/HipHop.

⑨ Press the C#2 key.

The assigned pattern will play.

Take your finger off the C#2 key, and press the D2 key.

The pattern will change, and playback will begin. At this time, the pattern operation will depend on the “Sync” and “M (Mode)” setting.

Set “KEY” to C#2, and set “Sync” to Measure. Make the same setting for D2.

Now press the notes consecutively. Notice that the patterns operate in a different way.

With the “Measure” setting, patterns will be handled in one-measure units. The second and subsequent patterns to be started will start in synchronization with units of a measure relative to the pattern that was started first.


If you change the “M (Mode)” setting to Once, the entire pattern will playback to the end even if you release your finger from the keyboard immediately.

note To stop playback, either press the same key once again, or press the C2 or lower key.

For details on “Sync,” “M (Mode),” and “Shift,” refer to PG p.73.

The assigned keys will be shown as a keyboard graphic in the LCD screen.

note Unassigned keys can be used for normal keyboard performance. Use “Track Select” to select the track that will be played from the keyboard. For example you might assign backing patterns such as

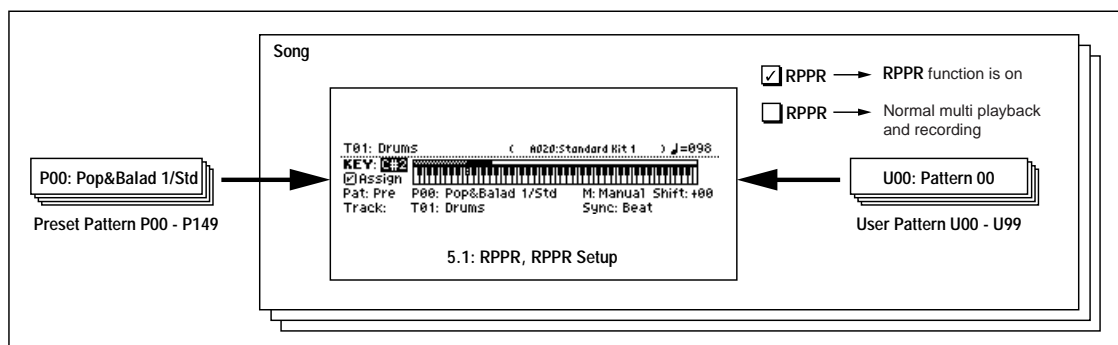

drums and bass to the C#2–B2 keys and use these keys to control pattern playback, and use keys C3 and above to play solos in realtime. It is a good idea to keep the assigned keys together in this way.

RPPR playback

Let's use the RPPR you created to perform in the SEQ 1.1: Play/REC page.

- ① In Sequencer mode, select SEQ 1.1: Play/REC.
- ② Check the "RPPR" check box.

The RPPR function will be turned on. The on/off setting is memorized for each song.



- ③ Play the keyboard, and patterns will begin playing according to the RPPR settings.

- Pattern playback for a key with a "Sync" setting of **Beat** or **Measure** will synchronize to the pattern playback of the first key. (PG p.73 "Sync")
- If you are playing the pattern in synchronization (when "Sync" is **Beat**, **Measure**, or **SEQ**), the pattern will start accurately if you play the note slightly earlier than the timing of the beat or measure. Even if you play the note slightly later than the beat or measure (but no later than a 32nd note), it will be considered to have started at the beat or measure, and the beginning of the pattern will be compressed so that the remainder of the playback will be correct.

note If you wish to trigger the RPPR function from an external MIDI device, use the MIDI channel that is selected for "Track Select."

- ④ To turn off the RPPR function, uncheck the RPPR check box.

Play RPPR while a song plays back

RPPR can be played in synchronization with the playback of a song.

Pattern playback for a key with a "Sync" setting of **SEQ** will synchronize to the playback of the song. (PG p.73 "Sync")

Start song playback, and then press the key. The pattern playback will start in synchronization with the measures of the song.

⚠ Synchronization will be lost if you use the [◀◀ REW] or [FF ▶▶] keys while a song is playing.

note If you want RPPR pattern playback to begin at the moment that song playback begins, it is a good idea to insert an empty measure containing no musical data before the song playback begins.

note If the song is stopped, the pattern will synchronize to the timing of the arpeggiator function.

Realtime-recording an RPPR performance

An RPPR performance can be recorded in realtime. If you are using only one track (**T01: Drums**) as in "Creating and recording RPPR" (p.75), set "Track Select" to **T01: Drums**, and use **single track recording** in which only one track will be recorded.

Even if RPPR uses only one track, use **multi-track recording** if you will be selecting another track in "Track Select" and recording its performance at the same time.

You should also select **multi-track recording** if you created the RPPR data using multiple tracks rather than just a single track, and want to simultaneously record the performance of multiple tracks.

note The RPPR pattern will be recorded as performance data on the tracks used by the pattern.

Here we will explain how you can simultaneously record a performance that uses both RPPR and the arpeggiator.

- ① For each RPPR pattern, set "Sync" to **SEQ**.

With a setting of **SEQ**, patterns played by the RPPR function while the sequencer is playing or recording will start in synchronization with the measures of the sequencer.



- ② We will use the arpeggiator to play the bass pattern. Follow these settings.

Set "Track Select" to **T02: Bass**.

Select the SEQ 6.1: Arp., Setup page, and set the track 2 "Assign" to A. (Make sure that A is checked for "Arpeggiator Run.")



Select the SEQ 6.1: Arp., Arp. A page, and set "Pattern" to **U099 (INT)**.



Do not check "Key Sync."

Press the [ARP ON/OFF] key. (The key will light.)

- ③ In the SEQ 1.1: Play/REC, Preference page, check the “Multi REC” check box.



If “Recording Mode” is set to **Loop All Tracks**, it will not be possible to select **Multi REC**. Set the “Recording Mode” to **Over Write**.

- ④ Select the 1.1: Play/REC, Program page.

For all tracks, the “PLAY/MUTE/REC” indication will show **REC**. The track played by RPPR will be recorded simultaneously with the track played by the arpeggiator. Set “PLAY/MUTE/REC” to **PLAY** or **MUTE** for all tracks other than tracks 1 and 2, which we will be recording.

Make sure that “Track Select” is set to **T02: Bass**. Your keyboard playing on keys not assigned to the RPPR function can be recorded on the track specified by “Track Select.”



- ⑤ In the 1.1: Play/REC, Play/REC page, make sure that the “RPPR” check box is checked.



- ⑥ Press the [LOCATE] key to set the location to 001:01.000.
 - ⑦ Press the [REC/WRITE] key, and then press the [START/STOP] key.
- Press a key that plays an RPPR pattern, and one or more keys that play the arpeggiator.

If you press a key during the pre-count before recording, the pattern playback and arpeggio performance will begin simultaneously when recording begins, and will be recorded.

Record the RPPR pattern playback and arpeggio performance.

- ⚠ When recording the playback of patterns triggered by RPPR, the timing of the recorded events may be slightly skewed. If this occurs, try setting “Reso” (Realtime Quantize Resolution) to a setting other than **Hi**.

- ⑧ When you are finished performing, press the [START/STOP] key.

Recording will end, and the sequencer will return to the location at which recording began.

If you made a mistake during your performance or would like to re-record, you can use the Compare function (press the [COMPARE] key) to re-record as many times as you wish.

- ⑨ If you want to record other tracks, un-check the “Multi REC” or “RPPR” check boxes as necessary.

In step ③, uncheck the “Multi REC” check box to defeat multi-track recording.

In step ⑤, uncheck the “RPPR” check box to turn off the RPPR function.

Recording the sound of a combination or program

Here’s how you can easily copy the settings of a combination or program, and then record.

There are two ways to do this. While playing in Program or Combination mode, you can use the Auto Song Setup function to automatically set up a song using the current settings of the program or combination. Or, you can use the page menu command in Sequencer mode to copy the settings of a program or combination into the sequencer.

Auto Song Setup function

The Auto Song Setup function automatically applies the settings stored with the current program or combination to a new song in the TR sequencer. This allows you to capture your creative moments and performances without having to manually set any of the sequencer parameters.

As an example, here’s how to use the Auto Song Setup function in Combination mode.

- ① Enter Combination mode.




- ② In the COMBI 1.1: Play, Prog page, select the desired combination. You can use the COMBI 1.1: Play, Mix page to edit the pan and volume of each timbre, and the COMBI 1.1: Play, Arp.A/Arp.B page to edit the arpeggiator settings. When you are finished editing, execute “Update Combination” or “Write Combination” if you want to save your edits.

note This operation will use the settings that are stored with the current Program or Combination. So, if you want to use the arpeggiator when you record, you will need to save the Program or Combination with the arpeggiator function switched on before you proceed.

- Hold down the [ENTER] key and press the [REC/WRITE] key.

The "Setup to Record" dialog box will appear.



- Press the [F8] ("OK") key to execute Auto Song Setup, or press the [F7] ("Cancel") key if you decide not to execute.

When you execute Auto Song Setup, the TR will automatically enter the Sequencer mode, and the settings of the previously selected program or combination will be applied to the song. The first unused song will be selected as the song.

Combination settings that are automatically set
The settings that are automatically made when you execute the Auto Song Setup command are the same as if you execute the "Copy From Combi" (PG p.52) utility menu command after making the following settings in the dialog box.

- Check "with Effects"
- Set "To" to **Track 1 to 8**
- Check "Auto adjust Arp for Multi REC"

Program settings that are automatically set

If you execute Auto Song Setup from Program mode, the program will be selected for track 1, and the following settings will be made.

- Insert effect, master effect, and master EQ settings of the program
- Arpeggiator settings of the program
- Controller Setup (2.2: Ed-Ctrl) settings of the program

- The TR will automatically enter record-ready mode, and the metronome will sound according to the Sequencer mode Pref. (Preference) settings (PG p.56).
- Press the [START/STOP] key to begin realtime recording. When you are finished recording, press the [START/STOP] key once again. (p.81 "Real-time recording")

Copy From Combi (Sequencer mode page menu commands)

Here's how to use the Copy From Combi page menu commands in Sequencer mode.


note Make sure that the global MIDI channel (GLOBAL 2.1: MIDI, "MIDI Channel") is set to **01**.

- Create a new song. (p.71)



- Execute the Utility menu command "Copy From Combination."

A dialog box will appear.



Select the combination that you want to copy (i.e., the copy source).

Press the COMBI BANK [B] key, then press numeric keys [9], [9], and finally press the [ENTER] key. B099: Steely Keys will be selected.

We will copy the effect settings of the combination as well, so check the "With Effects" check box. Since we want to copy the settings of the combination's eight timbres to tracks 1-8, select **Track 1 to 8**. Press the [F8] ("OK") key to execute the copy.

- In the SEQ 1.1: Play/REC, Preference page, check the "Multi REC" check box. (p.77)



When you perform multi-track recording, the multiple channels that are being sounded by the arpeggiator will be recorded simultaneously.

- Set the tracks not being recorded (i.e., tracks 9-16) to PLAY or MUTE. (p.69)
- Set "Track Select" to 01.

In order to play the sounds and arpeggiator in the same way as in Combination mode, set "Track Select" to the track that matches the global MIDI channel. When you play the keyboard, the sounds will be heard just as in Combination mode.

- Begin recording.

Press the [LOCATE] key to set the location to **001:01.000**.

Press the [REC/WRITE] key, and then press the [START/STOP] key.

If you play a B3 note or lower during the pre-count before recording, the arpeggio pattern will start from the beginning at the moment that recording begins. Record your performance.

- When you are finished performing, press the [START/STOP] key.

If you made a mistake or want to re-record, you can use the Compare function (press the [COMPARE] key) to re-record as many times as you want. (The "MultiREC" check box will be unchecked when you use Compare, so you will need to check it again.)

If the recorded performance is not reproduced correctly during playback


If you use the Utility menu command “Copy From Combination” to copy the settings of a combination, and then perform multi-track recording with the arpeggiator turned on, there may be cases in which the performance during recording is not reproduced by the playback.

Multiple tracks that are set to the same MIDI channel are combined into a single stream of performance data during recording. If there is a track with the same MIDI channel as the track being played by the arpeggiator, the data played by the arpeggiator will be combined with the performance data that was played manually, and all of this data will be sounded by each track of the same channel (if “Status” is INT).


In such cases, you can solve the problem by changing the MIDI channel of the track that is played by the arpeggiator, and then creating a track that will drive the arpeggiator.

If the recorded performance is not reproduced by the playback, check the following conditions.

- SEQ 6.1: Arp., Setup page
“Arpeggiator Run” A, B, and “Assign” settings

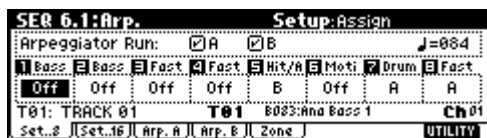

- SEQ 3.1: Param1, MIDI page “MIDI Channel” settings

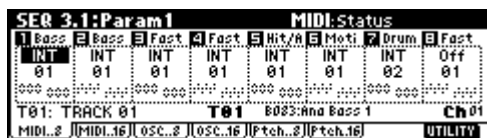

If “Arpeggiator Run” A and B are checked, and the arpeggiator is assigned to a track, make sure that “MIDI Channel” is set to other than 01.

note Make sure that the global MIDI channel (GLOBAL 2.1: MIDI, “MIDI Channel”) is set to 01.

Arpeggiator Run	MIDI Channel ^{*1}	Correction
If either “A” or “B” are checked	01 only	Correction required
	01 02, 01 03, etc.	No correction required
If both “A” and “B” are checked	01 only	Correction required
	01 02, 01 03, etc.	Correction required for only one
	01 02 03, etc.	No correction required/ Correction required ^{*2}

^{*1} If the “MIDI Channel” of multiple tracks operated by the arpeggiator is set only to 01, refer to the lines for “01 only.” If the “MIDI Channel” settings are 01 and one other channel, such as 01 and 02, or 01 and 03, then refer to the lines for “01 02, 01 03 etc.” If the “MIDI Channel” settings are 01 and multiple other MIDI channels, such as 01 and 02 and 03, then refer to the line for “01 02 03, etc.”

^{*2} Correction is necessary only if the tracks operated by a single arpeggiator are using only “MIDI Channel” 01. In some cases, correction may also be necessary if the two arpeggiators use the same MIDI channel.

Depending on the combination settings, it may also be necessary to change the track settings as well.

In the screens shown above, **combination B071: “In the Pocket”** has been copied using “Copy From Combination.” As described in steps ① and ② of the procedure given earlier, try actually copying this to see for yourself. For the arpeggiator settings of this combination, refer to p.105. Taking this setting as an example, determine whether correction is necessary, and if necessary, what needs to be corrected.

“Arpeggiator Run” A and B are checked, and “MIDI Channel” 01 and 02 are selected. Corrections must be made. Correction is necessary for one of the arpeggiators. If you perform multi-track recording with these settings, the MIDI channels of T01, 02, 03, 04, 05, and 06 are the same, so the low-register bass (T01 and T02), the high-register synth brass/pad (T03, T04 and T06), and the synth mallet played by arpeggiator B (T05) will have their performance data combined into one stream, and the performance will not be reproduced at playback. (T08 is a dummy track used to trigger arpeggiator A.)

- ① So that the synth mallet played by arpeggiator A can be recorded separately, change the MIDI channel of T05.

Select the SEQ 3.1: Param1, MIDI T01-08 page, and change the T05 “MIDI Channel” to 03.

- ② Add settings for triggering arpeggiator A.

Select the SEQ 3.1: Param1, MIDI T09-10 page, and for track 9 (or any unused track), turn “Status” Off, and set the “MIDI Channel” to 01. (T09 will be a dummy track used to trigger arpeggiator B.)

- ③ Select the SEQ 6.1: Arp., Setup T09-16 page. Set the track 9 Assign to B.

This will produce the following settings.

Track	T01	T02	T03	T04	T05	T06	T07	T08	T09
Assign	Off	Off	Off	Off	B	Off	A	A	B
Status	INT	INT	INT	INT	INT	INT	INT	Off	Off
MIDI Ch.	01	01	01	01	03	01	02	01	01

This completes the corrections. In the SEQ 1.1: Play/REC, Preference page, set “Track Select” to any track whose MIDI channel is 01. Check the “Multi REC” check box and perform multi-track recording.

Caution and other functions in Sequencer mode

TR song data and its compatibility

The following two types of song data can be loaded from SD card into this instrument's sequencer.

- **Song data saved in this instrument's own format**
This data is only for this instrument. However, it is partially compatible with the TRITON/TRITON-pro/TRITONproX/TRITON-Rack (Multi)/TRITON Le/TRITON STUDIO/TRITON Extreme and KARMA Music Workstation (PG p.250). It cannot be loaded into other instruments.
Since the performance will be faithfully reproduced, including detailed settings of this instrument, you should use this format to save song data that is intended for playback on this instrument.
- **Standard MIDI Files**
This format is not able to provide a totally faithful reproduction of the performance on this instrument in the way that this instrument's own format does (although there will be no problem for normal playback), but does provide compatibility with other SMF-compatible devices.

To load song data from SD card or save song data to SD card, use Media mode. (PG p.46, PG p.141)

The Compare function

When you perform realtime recording, step recording, or track editing, this function allows you to make before-and-after comparisons.

- ⚠ If you continue editing when the [COMPARE] key is lit, the key will go dark. This now becomes the musical data that will be selected when the [COMPARE] key is dark.

Operations for which Compare is available

- **Recording to a track**
- **Track Edit**
All commands except for the Utility menu commands "Memory Status" and "Rename Track" of the SEQ 5.2: Track Edit page.
- **Recording to a pattern**
- **Pattern Edit**
All commands except for the Utility menu commands "Memory Status," "Rename Pattern," "FF/REW Speed," and "Rename Track" of the SEQ 5.1: RPPR, Pattern page.
- **Song Edit**
SEQ 1.1-4.4 and 6.1-6.4 pages: Utility menu commands "Delete Song" and "Copy From Song"
SEQ 2.1: Cue List page: Page menu commands "Convert to Song" and "Copy Song"

In general, track and pattern event data can not be returned to its original state.

Comparing song parameters is possible only during song editing (when executing a Utility menu command).

Operations for which Compare is not available

- Editing song parameters
- Utility menu commands other than those listed above (in Operations for which Compare is available)

Memory Protect

Before you record a track or pattern, or edit the musical data, you will need to turn off the memory protect setting in Global mode. (PG p.43)

About MIDI

Track status "status"

You can make settings for this instrument's sequencer to specify whether it will sound the internal tone generator or an external tone generator.

When Track Status "Status" (3.1: Param1, MIDI.8, MIDI.16) is set to INT, operating this instrument's keyboard and controllers will sound and control this instrument's own tone generator.

When "Status" is set to EXT, EX2 or BTH, operating this instrument's keyboard and controllers will sound and control the external tone generator. (The MIDI channel of the external tone generator must match the "MIDI Channel" of the track that is set to EXT, EX2 or BTH.) With a setting of BTH, both the external tone generator and this instrument's tone generator will sound and be controlled.

Track	Drum	Bass	Keyb	Guita	Slow	Guita	Guita	Strin
01	INT	INT	INT	INT	EXT	EX2	BTH	INT
T01: Drums T01 #020:Standard Kit 1 Ch 01								
MIDI.8 MIDI.16 OSC.8 OSC.16 Fch.8 Fch.16 UTILITY								

If you wish to use the Sequencer mode of the instrument as a 16-track multi-timbral tone generator, select INT or BTH. (PG p.62 "Status")

Synchronizing the sequencer with an external MIDI device

The record/playback tempo of this instrument's sequencer can be synchronized to an external MIDI device such as a sequencer or rhythm machine (PG p.242).

Recording on the TR

The process by which your playing on this instrument's keyboard and controllers is captured on the tracks or patterns of a song as data is called "recording."

Recording a track, and recording a pattern

Recording a track

There are two ways to record to a track: **realtime recording** and **step recording**. You can choose from a further six types of realtime recording.

In addition, you can use **event editing** to modify data that has been recorded or to insert data, and use **track editing** operations such as **Create Control Data** to insert data such as bend, after touch, and control changes.

Recording a pattern

There are two ways to record a pattern: **realtime recording** and **step recording**. For realtime recording, only one recording type (loop) is available.

In addition, you can use **event edit** operations to modify data that has been recorded or to insert data.

The Utility menu command "**Get From Track**" can be used to take musical data from a desired area of a track, and use it as the musical data for a pattern. Conversely, the Utility menu commands "**Put to Track**" and "**Copy to Track**" can be used to place or to copy the musical data of a pattern in a track.

Realtime recording

This is a method of recording in which your playing on the keyboard and your operations of controllers such as the joystick are recorded in realtime.

This method of recording is normally used one track at a time, and is called **single track recording**.

As an alternative, **multitrack recording** allows you to simultaneously record multiple channels of data onto multiple tracks. This is the method you will use when using the RPPR function and the arpeggiator function to record multiple tracks of musical data at once, or when you playback existing sequence data on an external sequencer and record it onto this instrument's sequencer in realtime (see p.76).

• Overwrite

With this method, the musical data previously recorded on a track is overwritten by the newly recorded data. When you perform overwrite recording on a previously-recorded track, its musical data will be replaced by the newly recorded data.

Normally you will use this method to record, and then modify the results by using other types of realtime recording or event editing.

- ① Use "Track Select" to select the track that you want to record.
- ② Set the "Recording Mode" to Over Write. (SEQ 1.1: Play/REC, Preference page REC Setup)



- ③ In "Location," specify the location at which you wish to begin recording.
- ④ Press the [REC/WRITE] key, and then press the [START/STOP] key.

If "Metronome Setup" has the default settings, the metronome will sound for a two-measure pre-count, and then recording will begin. Play the keyboard and move controllers such as the joystick to record your performance.

- ⑤ When you finish playing, press the [START/STOP] key.

Recording will end, and the location will return to the point at which you begin recording.

At this time if you press the [PAUSE] key instead of the [START/STOP] key, recording will pause. When you press the [PAUSE] once again, recording will resume. When you are finished, press the [START/STOP] key to stop recording.

• Overdub

With this method, the newly recorded musical data is added to the existing data.

When you perform overdub recording on a previously-recorded track, the newly recorded data will be added to the previously-recorded data.

It is best to select this method when you wish to add control data, or to record tempo data onto the master track. This lets you record data without erasing the existing data.

- ① Use "Track Select" to select the track that you want to record.
- ② Set the "Recording Mode" to Over Dub. (SEQ 1.1: Play/REC, Preference page REC Setup)



- ③ For the rest of the procedure, refer to steps ③–⑤ of "Overwrite."

- **Manual punch-in**

While the song is playing, you can press the [REC/WRITE] key or a connected pedal switch at the desired location to start or stop recording. With this method, the musical data previously on the track is overwritten by the newly recorded data.

- ① Use “Track Select” to select the track that you want to record.
- ② Set the “Recording Mode” to Manual Punch In. (SEQ 1.1: Play/REC, Preference page REC Setup)



- ③ In “Location,” specify a location several measures earlier than the point at which you wish to begin recording.
- ④ Press the [START/STOP] key.
Playback will begin.
- ⑤ At the point at which you wish to begin recording, press the [REC/WRITE] key.
Recording will begin.
Play the keyboard and operate controllers such as the joystick to record your performance.

- ⑥ When you finish recording, press the [REC/WRITE] key.
Recording will end (playback will continue).

note Instead of pressing the [REC/WRITE] key in steps ⑤ and ⑥, you can use a foot switch connected to the ASSIGNABLE SWITCH jack. Set the GLOBAL 1.1: System, Foot page “Foot SW Assign” to Song Punch In/Out (p.117).

- ⑦ Press the [START/STOP] key.
Playback will stop, and you will return to the location that you specified in step ③.

- **Auto punch-in**

First you must specify the area that will be re-recorded. Then recording will occur automatically at the specified area. With this method, the musical data previously on the track is overwritten by the newly recorded data.

- ① Use “Track Select” to select the track that you want to record.
- ② Set the “Recording Mode” to Auto Punch In. (SEQ 1.1: Play/REC, Preference page REC Setup)



- ③ In “Auto P Start Meas, “Auto P End Meas” specify the area that you wish to record.
For example if you specify M005–M008, recording will occur only from measure 5 to measure 8.

- ④ In “Location,” specify a location several measures earlier than the point at which you wish to begin recording.

- ⑤ Press the [REC/WRITE] key, and then press the [START/STOP] key.

When you reach the starting location you specified in step ③, recording will begin. Play the keyboard and operate controllers such as the joystick to record your performance. When you reach the ending location you specified in step ③, recording will end. (Playback will continue.)

- ⑥ Press the [START/STOP] key.

Playback will stop, and you will return to the location you specified in step ④.

- **Loop All Tracks**

This method lets you continue recording as you add musical data. The specified region can be recorded repeatedly. This is ideal when recording drum phrases, etc.

- ① Use “Track Select” to select the track that you want to record.
- ② Set the “Recording Mode” to Loop All Tracks. (SEQ 1.1: Play/REC, Preference page REC Setup)

If “Multi REC” is checked, it will not be possible to select Loop All Tracks.



- ③ In “Loop Start Meas, “Loop End Meas” specify the area that you wish to record.

For example if you specify M004–M008, recording will occur repeatedly (as a loop) from measure 4 to measure 8.

- ④ In “Location,” specify a location several measures earlier than the point at which you wish to begin recording.

- ⑤ Press the [REC/WRITE] key, and then press the [START/STOP] key.

Playback will begin. When you reach the starting location you specified in step ③, recording will begin. Play the keyboard and operate controllers such as the joystick to record your performance.

When you reach the ending location you specified in step ③, you will return to the starting location, and continue recording.

The musical data that is loop-recorded will be added to the previously-recorded data.

- ⑥ You can also erase specific data even while you continue loop recording.

If you press the [REC/WRITE] key during loop recording, all musical will be removed from the currently selected track as long as you continue pressing the key.

By checking the “Remove Data” check box you can erase only the specified data. During loop recording, press the note that you wish to delete, and only the data of that note number will be deleted from the keyboard as long as you continue pressing that note.

Similarly, bender data will be deleted as long as you tilt the joystick in the X (horizontal) direction, and after touch data will be deleted as long as you apply pressure to the keyboard.

When you are once again ready to record musical data, uncheck the “Remove Data” check box.

⑦ Press the [START/STOP] key.

Playback will end, and you will return to the recording start location that you specified in step ④. If Loop All Tracks is selected, normal playback will be looped as well.

• Multi (multitrack recording)

Multitrack recording allows you to simultaneously record onto multiple tracks, each with a different channel. This method can be used with overwrite, overdub, manual punch-in, and auto punch-in recording.

Using the arpeggiator to record multiple tracks simultaneously

A multi-track performance using the arpeggiator function can be recorded simultaneously using multi recording (see p.79).

When simultaneously recording multiple tracks using the RPPR function


You can use multitrack recording to simultaneously record the playback of multiple tracks that are being triggered by the RPPR function. For the procedure, refer to “Realtime-recording an RPPR performance” (see p.76).

When simultaneously recording multiple tracks of MIDI data from an external sequencer, etc.

① Make sure that the TR’s MIDI IN and the external sequencer’s MIDI OUT are connected by a MIDI cable.

If they are not connected, turn off the power, make the connection, and then turn the power back on again. (see PG p.233)

② Set the MIDI Clock (GLOBAL 2.1: MIDI, MIDI page “MIDI Clock”) to External or Ext-USB, so that this instrument will synchronize to the MIDI clock of the external sequencer (see PG p.129).

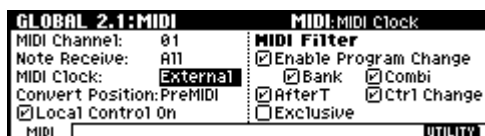

③ Create a new song, and in the SEQ 1.1: Play/REC, Preference page, check the “Multi REC” check box. Set the “Recording Mode” to Over Write.

④ Select the SEQ 1.1: Play/REC, Program page.

For the tracks that you are not recording, set “PLAY/MUTE/REC” to PLAY or MUTE.

⑤ In SEQ 3.1: Param1, MIDI page “MIDI Channel,” specify the MIDI channel for each track.

The specified channel of musical data will be recorded on that track. It is a good idea to set tracks 1–16 to MIDI channels 1–16. (This is the default setting.) Also make sure that “Status” is set either to INT or BTH.

⑥ Press the [LOCATE] key to set the location to 001:01.000.

⑦ Press the [REC/WRITE] key to enter recording-standby mode.

⑧ Start the external sequencer.

The TR’s sequencer will receive the MIDI Start message transmitted by the external sequencer, and will automatically begin recording.

⑨ When the song ends, stop the external sequencer.

This instrument’s sequencer will receive the MIDI Stop message transmitted by the external sequencer, and will automatically stop recording. You can also press the [START/STOP] key on this instrument itself to stop recording.

⑩ Playback.

In the GLOBAL 2.1: MIDI page, set “MIDI Clock” to Internal.

Set “Tempo Mode” to Auto.

When you press the [START/STOP] key, playback will begin.

note If the correct sounds do not play immediately after playback is started, you may be able to solve the problem by using the Utility menu command “Event Edit” (SEQ 5.2: Track Edit) to edit the Program Change data.

Step recording

This is a method of recording where you specify the note timing, note length, and velocity etc. in the LCD screen, and use the keyboard to input the pitches.

([p.67](#))

Only note-on/off data can be recorded with this method.

Event Edit and Create Control Data

Note data is the only type of data that can be recorded in step recording. However there are ways to record other types of data, aside from the realtime mode. You can use the Event Edit and Create Control Data functions.

Event Edit is intended as a way to edit previously-recorded data, but you can also use it to modify program numbers or insert control changes.

Create Control Data is a function that lets you create and insert controller data that changes smoothly between two specified values over the specified length of time. This is used to input bend, after touch, and control change data etc.


Realtime-recording to a pattern

Here's how you can use realtime recording to create a pattern. **User patterns** can be accessed by the **RPPR function** in the same way as preset patterns, and can be copied to or placed in a song. Playback data from a track can also be copied to a pattern.

⚠ Before you begin recording a pattern, turn off the memory protect setting in Global mode ([p.43](#)).

When realtime-recording a pattern, a pattern of the specified number of measures will playback repeatedly, allowing you to continue adding musical data to it.


- 1 Create a new song, and load the template song "P02: R&B." ([p.65](#))
- 2 Access the SEQ 5.1: RPPR, Pattern page.

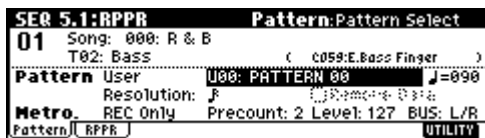


- 3 For "Track Select," select track T02: Bass.
- 4 Set "Pattern Bank" to User, and set "Pattern Select" to U00.

User patterns U00–U99 can be created for each song.

- 5 Select the Utility menu command "Pattern Param."

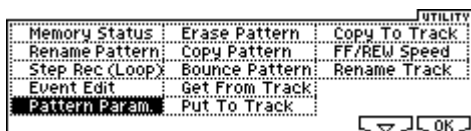

A dialog box will appear.

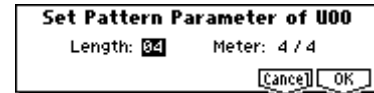

- 6 Set the number of measures in the pattern to a "Length" of 04 (four measures), and set "Meter" to a time signature of 4/4. Press the [F8] ("OK") key.
- 7 Set the "Resolution." For this example, select ♩ (16th note).
- 8 Begin realtime recording.

You can record in the same way as you did when recording tracks with Loop All Tracks. ([p.82](#))

Press the [REC/WRITE] key, and then press the [START/STOP] key.

After the pre-count, pattern recording will begin. Play the keyboard and operate the joystick and other controllers to record your performance. When you reach the end of the pattern, you will return to the beginning of the pattern and continue recording. If you continue recording, the newly recorded data will be added to the previously-recorded data.

- 9 If you want to delete specific data while you continue pattern recording, you can press the [REC/WRITE] key or check the "Remove Data" check box.
- 10 Press the [START/STOP] key to stop recording.


If you made a mistake or decide to re-record, press the [START/STOP] key to stop recording, and press the [COMPARE] key.

Using the arpeggiator for pattern recording

If the arpeggiator is set to operate for the track that is selected for "Track Select," you can turn on the [ARP ON/OFF] key and record the performance of the arpeggiator into the pattern.

For details on arpeggiator settings, refer to p.76 and PG p.82.

Control data in pattern recording

 To record control data in a pattern, you should restore the control data to its normal value within the pattern. If you fail to restore the normal value, unnecessary control data may remain in a “stuck” position when you place the pattern in a song or use the RPPR function to play the pattern. However, the following control data will be automatically reset to the following values when the song or RPPR function finishes playing the pattern, or when playback is halted.

Controller	Reset value
Modulation 1 (CC#01)	00 (zero)
Modulation 2 (CC#02)	00 (zero)
Expression (CC#11)	127 (max)
Ribbon controller (CC#16)	64 (center)
Damper switch (CC#64)	00 (zero)
Sostenuto switch (CC#66)	00 (zero)
Soft switch (CC#67)	00 (zero)
EG sustain level (CC#70)	64 (center)
Resonance level (CC#71)	64 (center)
EG release time (CC#72)	64 (center)
EG attack time (CC#73)	64 (center)
Low pass filter cutoff (CC#74)	64 (center)
EG decay time (CC#75)	64 (center)
LFO1 speed (CC#76)	64 (center)
LFO1 depth (pitch) (CC#77)	64 (center)
LFO1 delay (CC#78)	64 (center)
Filter EG intensity (CC#79)	64 (center)
SW1 modulation (CC#80)	00 (zero)
SW2 modulation (CC#81)	00 (zero)
Channel after touch	00 (zero)
Pitch bender	00 (zero)

Sampling mode

The separately sold EXB-SMPL option can be installed in the TR to add high-performance mono/stereo sampling functionality.

Features of EXB-SMPL

- **48 kHz 16 bit linear mono/stereo sampling.**
- **The EXB-SMPL includes a 16 Mbyte 72 pin SIMM sample data (waveform data) memory module.**
When this memory is installed in the TR, you can sample for approximately 2 minutes 54 seconds in monaural, or approximately 1 minute 27 seconds in stereo. By installing 72 pin SIMM modules, you can expand the memory to a maximum of 64 Mbytes, which will allow you to record up to four 2 minute 54 second samples in mono (or four 1 minute 27 second samples in stereo), for a maximum total of approximately 11 minutes 39 seconds of sampling time (approximately 5 minutes 49 seconds in stereo). (For details on expansion, refer to PG p.260.)
- **A maximum of 1,000 multisamples and 4,000 samples can be created.**
- In Media mode you can load multisample/sample data from an SD card or SCSI media.
- Korg format or Akai (S1000/3000 samples, mapped multisamples only) format sample data, and AIFF or WAVE format sample data can be loaded. (Once data has been loaded into the TR, it will all be treated as Korg format sample data.)
Sample data created on the TR can be exported (output) as an AIFF or WAVE format sample file.
- The external audio source that you are sampling can be processed by the **one insertion effect** to apply effects such as a compressor or EQ. The LFO frequency or delay time of the effect can be specified as a BPM value, which is highly effective when sampling phrase loops etc.
- Both **auto sampling** and **manual sampling** can be performed. With auto sampling, recording will begin automatically when the input level exceeds a specified threshold. In either method of sampling, you can make pre-trigger settings.
- The audio input supports both mic and line level signals.
- Data you sampled can be played immediately from the keyboard of the TR or by pressing the [AUDITION] key. It is also easy to **convert sampled data into a program**, and use it as material for the TR's HI synthesis system. Multisamples/samples that have been converted into a program can be used in a combination or song.
- The waveform can be viewed in the LCD screen, and edited by a variety of waveform editing commands that include **rate convert** (down-sampling) and reverse playback.

The following commands are also provided.

Time Slice

This automatically detects the attack portions of a kick or snare etc. in a rhythm loop sample (a looped pattern of drums etc.), and divides it into separate rhythm instrument sounds. A pattern corresponding to the divided samples is created automatically, so that you can immediately use the Sequencer mode RPPR function to play the pattern and adjust the tempo without changing the pitch. You can also do things such as adjusting the pitch of only the snare, replacing it with a different sample, or changing the playback timing on the sequencer, in this way creating a new rhythm loop based on the rhythm loop you started with. (Stereo samples are supported.)

Time Stretch

This lets you modify the tempo without changing the pitch of a sample. You can select either **Sustaining** (suitable for sustain-type instruments such as strings or vocals), or **Slice** (suitable for rhythm loops on decay-type instruments such drums). Stereo samples are supported.

Crossfade Loop

An important looping tool that helps smooth out irregularities in long loops which contain complex material. By executing Crossfade Loop, you can eliminate this problem and create natural-sounding loops.

Link (with Crossfade)

This allows you to join two samples into a single sample. You can also crossfade the overlapping portion of the samples at this time, so that the volume changes gradually, producing a natural-sounding transition.

- The **BPM Adjust function** (playback pitch adjust) lets you adjust the playback pitch of each index so that the loop frequency matches the desired BPM value.
- Start, loop start, and end addresses can be specified in units of a single sample. **Loop tune, reverse playback, and loop lock functions** are also supported.
- The **Use Zero function** automatically searches for zero-cross points, making it easy to find the beginning or end of the waveform, or locations that will not produce noise when the sample is played back.
- The **grid function** displays a BPM-based grid on the waveform display, helping you to create loops or make waveform edits that match the desired BPM.
- Each multisample allows you to create up to **128 indices**. Each index consists of a sample assignment, a key zone, an original key, a playback pitch, and settings such as level.
- The "Keyboard & Index" display lets you edit a multisample while viewing the assignments and zones of each sample.

- Sample names and multisample names of up to 16 characters can be assigned. Sample names and multisample names can also be viewed in Media mode (PG p.143 “Translation”).


How Sampling mode is organized

In Sampling mode

- An external audio signal from an external audio device or microphone connected to the AUDIO INPUT 1 and 2 jacks is passed through an analog/digital convertor, and recorded (sampled).
- You can edit the waveform and loop settings etc. of sample data that you sampled or that you loaded from an SD card, CD-ROM etc., in Media mode.
- You can assign samples to the keyboard to create a multisample. These samples and multisamples can be easily converted to a program using the Utility menu command “Conv. To Program,” and these programs can be used immediately in a combination or a song.

Sampling frequency and bit resolution

As shown in the diagram, sampling reads the level of the analog signal at fixed intervals along the time axis, and stores the levels in memory as digital data.

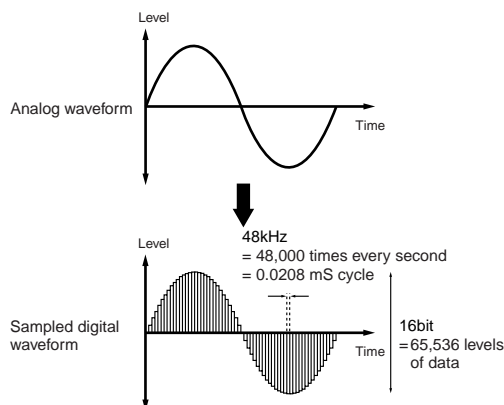

The “fixed intervals” mentioned above are generally expressed as the “sampling frequency.” 48 kHz (kilohertz) means that sampling is performed 48,000 times each second, and that the interval is $1 \text{ (second)} / 48,000 \text{ (times)} = \text{approximately } 0.00002083 \text{ (seconds)} = \text{approximately } 0.02083 \text{ mS (millisecond)}$.

The higher the sampling frequency is, the closer to the original analog signal the waveform in memory will be.

Each level is read, and converted into digital data. The accuracy at this time is determined by the bit resolution. This process converts an analog signal with infinite resolution into a digital signal with finite resolution. With 16 bit resolution, each level is indicated in 65,536 steps (the sixteenth power of two). The greater the bit resolution is, the closer to the original analog signal the waveform in memory will be.

48 kHz 16 bit sampling is the same quality as in audio devices such as DAT. A CD uses 44.1 kHz 16 bit sampling, which is a slightly lower sampling frequency.


Samples and Multisamples

Samples

The data that is recorded (sampled) into internal memory or loaded from a file is referred to as a sample or sample file. Samples consist of the actual waveform data, and parameters that specify how the data will be played back, such as Start, Loop Start, and End Address. Samples can be used in multisamples and drum kits.

The TR can hold a maximum of 4,000 samples in its internal memory.

note The TR can share a single waveform among multiple samples. This allows you to create multiple samples with different playback addresses from the same waveform without wasting internal memory. For example, suppose that you have waveform data that records a voice saying “One-Two-Three.” This single piece of waveform data could be shared by three samples, with the play-

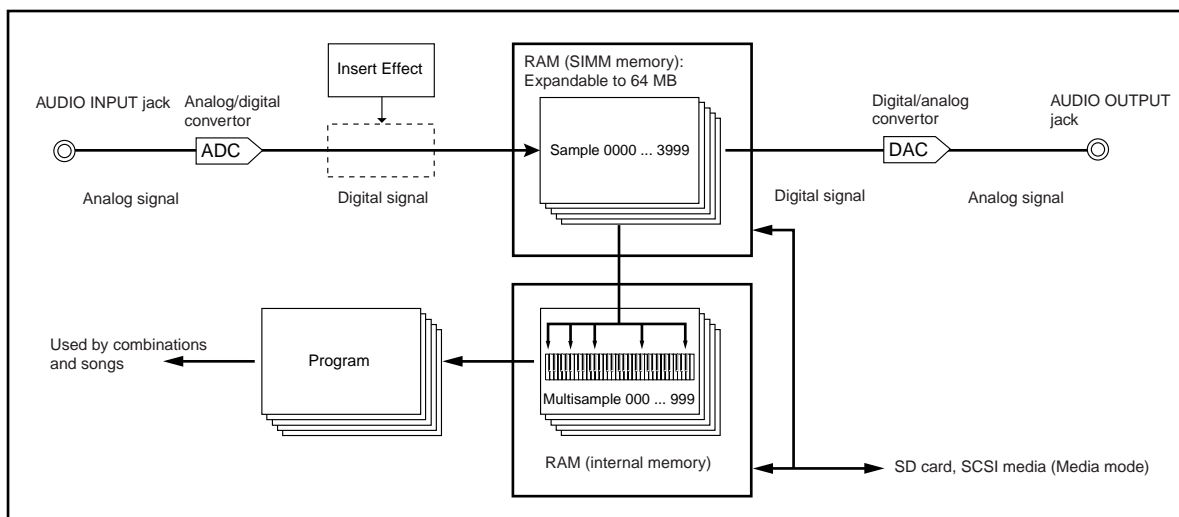

back of sample A producing “One-Two-Three,” sample B producing “One-Two,” and sample C producing “Two-Three.” (PG p.96).

Multisamples

A multisample consists of settings that make one or more samples sound in different areas of the keyboard. A multisample consist of between one and 128 “indexes.” Each index contains parameters that specify the sample that will playback, the zone for which it will playback, the original pitch key, the playback pitch, and level etc.


Using multisamples

When sampling an instrument that is able to produce a wide range of pitches, such as a piano, recording just one sample and using it (playing it back) over the entire pitch range will not produce a natural-sounding result. By using a multisample you can record separate samples for each pitch range, and assign these samples to their respective pitch ranges to avoid any unnatural sounds during playback. For example, you might record one sample per octave, and assign each of these samples to an index (keyboard area). All of the instrumental sounds in the TR’s internal preset multisamples are constructed in this way.

By assigning multiple samples such as phrase samples or rhythm loops to a multisample and arranging them across the keyboard, you can play multiple samples simultaneously. Since a different phrase could be assigned to each key, you can perform just as though you were using a pad-type sampler. Alternatively, these samples could be assigned at one-octave intervals, and played as phrase variations with different playback pitches.

The TR can hold a maximum of 1,000 multisamples in its internal memory.

A multisample can be selected as the oscillator for a program, and played as a program. In a combination, they can be combined with preset programs, and used in a multi. They can be used with the arpeggiator to produce interesting results (for example, by using the arpeggiator to automatically play sound effects or spoken samples).

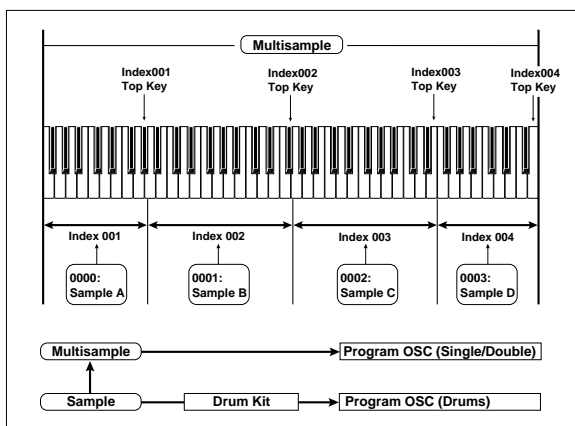

Sampling

note The multisample and sample data in the Sampling mode is not backed up when the power is turned off. If you wish to keep this data, you must save it onto an SD card or external SCSI device before turning off the power.


After the power is first turned on, memory will not contain any multisample or sample data. You must first load previously-saved data before you can playback or edit any sample data.

Preparations for sampling


Connections and settings for a monaural source

When sampling in monaural from a mic, the output of an external audio device or mixer, or an instrumental sound such as guitar or synthesizer, connect the source to the AUDIO INPUT 1 or 2.

note Guitars and other instruments with active pickups can be input directly, but instruments with passive pickups (i.e., without internal preamps) cannot be recorded at an appropriate level, due to impedance mismatching. When connecting such instruments, use a preamp or effect device.

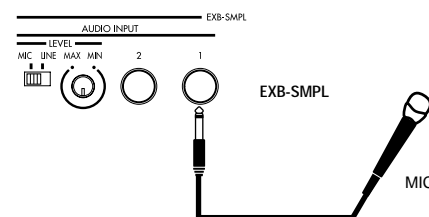

- 1 Connect the mic or external audio device to the AUDIO INPUT 1 jack.
- 2 Set the AUDIO INPUT [MIC/LINE] switch to match the input source. For input sources with a low input level, such as a microphone, select the MIC position. For other sources, select the LINE position.
- 3 The AUDIO INPUT [MIC/LINE] switch affects both the AUDIO INPUT 1 and 2 jacks.
- 3 The [LEVEL] knob will be adjusted later. For now, set it near the center.
- 4 In Sampling mode 1.1: Recording, select the Input/Pref page.

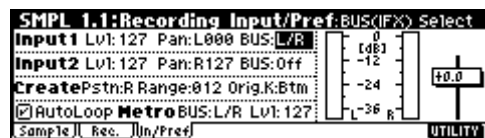

- 5 In “Input 1,” set the various parameters that specify how the signal from the AUDIO INPUT jacks will be received by the TR.
 - “Lvl” adjusts the volume. Normally you will set this to 127.

- “Pan” adjust the panning. For this example set it to **L000**.
- Set “BUS.” If you wish to use the TR’s insert effect to process the incoming sound, select **IFX** here. For this example, select **L/R**. The input sound will be sampled just as it is.

⚠ Be aware that when you change the setting from **Off** to **L/R** or **IFX**, the volume level in the AUDIO OUTPUT L/MONO and R jacks and in the headphones may rise excessively.

“Input 1” controls the AUDIO INPUT 1 jack, and “Input 2” controls the AUDIO INPUT 2 jack.


The settings above will cause the sound from the AUDIO INPUT 1 jack to be output from the AUDIO OUTPUT L/MONO jack and from the L channel of the headphones.

⑥ Use the [LEVEL] knob to set an appropriate level.

If an overload occurs in the input stage of the TR, “ADC OVER!” (AD converter overload!) will be displayed above the “Recording Level” slider. Adjust the [LEVEL] knob or the output level of the external audio device just low enough so that the “ADC OVER!” does not appear (i.e., the maximum level that does not cause an overload).

Connections and settings for a stereo source

When sampling in stereo from a stereo mic, the output of an external audio device or mixer, or synthesizer, connect the source to the AUDIO INPUT 1 and 2 jacks.

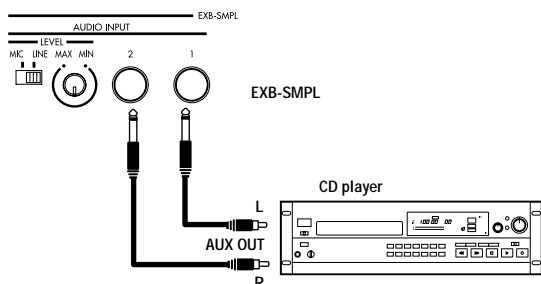

- ① Connect the L source to AUDIO INPUT jack 1, and the R source to jack 2.
- ② Make the settings described in steps ②–④ of “Connections and settings for a monaural source.”
- ③ Set the “Input 1” and “Input 2” parameters to specify how the signal from the AUDIO INPUT jacks will be received by the TR.
 - “Lvl” adjusts the volume. Set both Input 1 and Input 2 to **127**.
 - “Pan” adjust the panning. Set Input 1 to **L000**, and Input 2 to **R127**.
 - Set “BUS.” For this example, select **L/R** for both Input 1 and Input 2.

The settings in the example above will cause the sound from the AUDIO INPUT 1 and 2 jacks to be output in stereo from the AUDIO OUTPUT L/MONO and R jacks and from the headphones. The sound of AUDIO INPUT 1 will be output from the left, and AUDIO INPUT 2 from the right.


- ④ Use the [LEVEL] knob to adjust a suitable input level. (Refer to step ⑥ of “Connections and settings for a monaural source”)

The [LEVEL] knob adjusts both AUDIO INPUT 1 and 2.

Using an insert effect

The TR’s insert effect can be applied to the sound that is being input from the AUDIO INPUT 1 and 2 jacks, allowing you to record a sample with effects applied. As an example, we will explain the procedure for applying an insert effect to a stereo source and sampling the result.

- ① Make the settings of step ① and ② in “Connections and settings for a stereo source.”
- ② Set the various “Input 1” and “Input 2” parameters.
 - Set “BUS” to **IFX** for both Input 1 and 2.
 - Set “Lvl” and “Pan” to the same settings as in step ③ of “Connections and settings for a stereo source.” With these settings, the stereo source will be sent to insert effect (IFX).
- ③ Use the [LEVEL] knob to adjust to a suitable input level. (Refer to step ⑥ of “Connections and settings for a monaural source.”)
- ④ Select the 7.1: Insert Effect, Setup page.

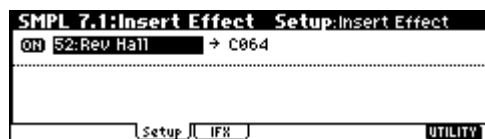

Make settings for “Insert Effect,” “IFX On/Off,” and the “Pan (CC#8)” of the sound after it has passed through the insert effect. (PG p.27, 121)

Examples of settings using the insert effect are given in “Mode (Sample Mode)” (PG p.93).

Manual sampling

There are two methods of sampling: **manual** and **auto**.


In **manual** mode, **sampling** is started by pressing the [START/STOP] key from the recording standby condition (entered by pressing the [REC/WRITE] key once). For the sampling procedure in **auto** mode, refer to “Auto sampling” (p.90).

- ① Select the 1.1: Recording, Recording page.
- ② For “Mode (REC Mode),” select **Manual**.

This will select manual recording mode.



- ③ Select the 1.1: Recording, Sample page.

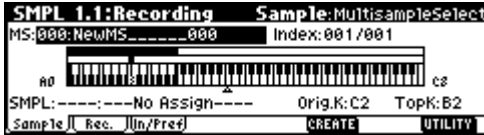

- ④ For “MS (Multisample Select),” select 000: NewMS 000.

Immediately after the power is turned on, 000: NewMS 000 will be created automatically. Use the numeric keys [0]–[9] to input the multisample number that you wish to record, and press the [ENTER] key.

If you select a new number, the Create New Multisample dialog box will appear. Press the [F8] (“OK”) key, and the new multisample will be created.



To specify the name, use the Utility menu command “Rename MS.”

- ⑤ In “SMPL (Sample Select),” select the sample that you wish to record. For this example, select ----: --- No Assign----

You may sample even in this condition. The sample will be automatically recorded to a vacant sample number.

If you wish to start by specifying the sample number to be sampled, use the [INC]/[DEC] keys or numeric keys [0]–[9] and [ENTER] key to specify the desired number.

A sample will be created when you record. A sample name such as 0000: NewSample_0000 will be assigned automatically. This name can be edited using the Utility menu command “Rename SMPL.”

If you execute sampling when an existing sample such as 0000: NewSample_0000 is selected, the new sample will be sampled to a vacant sample number. You do not need to be concerned with this setting even when you continue recording successive samples.

- ⑥ Select the 1.1: Recording, Recording page.



- ⑦ Set the “Mode (Sample Mode).”

Monaural source: If the “Input1” setting “Pan” is L000, set “Mode (Sample Mode)” to L-Mono. If “Pan” is R127, set “Mode (Sample Mode)” to R-Mono.

Stereo source: Set the “Mode (Sample Mode)” to Stereo.

- ⑧ Press the [REC/WRITE] key.



If an input signal is present, the Recording Level [dB] meter will move according to the “Pan” setting in “Input1” and “Input2.” This is the recording-standby condition.

In the case of “Connections and settings for a monaural source,” the L meter will move. In the case of “Connections and settings for a stereo source,” the L and R meters will move.

Use the “Recording Level” slider to adjust the level. For this example, set the slider to the 0.0 setting (see PG p.94).

- ⑨ At the moment that you wish to begin sampling, press the [START/STOP] key.

Sampling will begin.

- ⑩ Sampling will stop when you press the [START/STOP] key.

▲ Sampling will stop automatically when the remaining amount of memory reaches zero.

- ⑪ Either press the [AUDITION] key, or press the C2 key.

The sample you recorded will play back.

If you wish to continue recording samples, repeat steps ⑦–⑩.

Auto sampling

With **auto mode**, sampling will begin when the input signal exceeds the specified threshold level.

- ① Select the 1.1: Recording, Recording page.



- ② For “Mode (REC Mode),” select Auto.

This will select auto recording mode.

- ③ Set the “Threshold.”

When the input signal exceeds the “Threshold” level, sampling will begin automatically. The black triangles at both sides of the Recording Level [dB] meter display will indicate the specified level.

note When you use auto sampling, the attack portion of the sampled input sound may be lost, depending on the “Threshold” setting. If this occurs, you can use “Pre Trigger” to sample the sound that occurs before sampling actually begins. Normally you will set this to 0, and use it only when necessary.


- ④ Select the 1.1: Recording, Sample page.

- ⑤ Select the “MS (Multisample Select).”
(☞ “Manual sampling” step ④)
- ⑥ Select the sample in “SMPL (Sample Select)” that you wish to record.
(☞ “Manual sampling” step ⑤)
- ⑦ Select the 1.1: Recording, Recording page.
- ⑧ Set the “Mode (Sample Mode).”
(☞ “Manual sampling” ⑥ ⑦)
- ⑨ Press the [REC/WRITE] key.
- ⑩ Press the [START/STOP] key.
When the input signal exceeds the “Threshold” level, sampling will begin automatically.
- ⑪ Sampling will stop when you press the [START/STOP] key.
▲ Sampling will end automatically if the remaining amount of memory reaches zero.
- ⑫ Either press the [AUDITION] key, or press the C2 key.
The sample you recorded will play back.

Creating multisample indexes and sampling

Here’s how to create indexes for a multisample, and how to assign a sample to each index.

- ① Select the 1.1: Recording, Sample page.

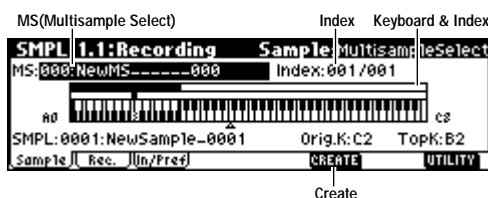

- ② Select “MS (Multisample Select),” and create a multisample. (Refer to “Manual sampling” ④)
- ③ Press the [F6] (“CREATE”) key to create an index.

Immediately after the power is turned on, the “Index” will be indicated as 001/001. This means that there is only one index. The range that is highlighted in the keyboard & Index is the range of the selected index.

Press the [F6] (“CREATE”) key several times. Each time you press it, an index will be created. The keyboard display will indicate the zone and original key location of each index. The highlighted area is the currently selected index.

- note** The index that is created when you press the [F6] (“CREATE”) key will be created according to the 1.1: Recording, Input/Pref page Create settings. (These settings can also be made in 4.1: Multisample, Pref. page Create Zone Preference. ☞ PG p.95, 120)



Immediately after the power is turned on, “Pstn (Position)” will be R (Right), “Range (Zone Range)” will be 012 (Keys), and “Orig.K (Original Key Position)” will be Btm (Bottom), so that indexes will be created as shown below.



- note** If you set “Range (Zone Range)” to 1(Key), an index will be created for each note of the keyboard. It is convenient to use 1(Key) when you wish to sample numerous takes in succession, such as when recording phrases or rhythm loops.



- ④ Select “Index.”

“Index” can also be selected by holding down the [ENTER] key and playing a note on keyboard. For this example, select 001.

- ⑤ Assign a sample to the “Index.”

If sampling RAM memory already contains samples, use “SMPL” (Sample Select) to select the sample and assign it.

If you want to record a new sample, you can sample it now.

The sample you record will be automatically assigned to the index you selected in step ④. (☞ For the sampling procedure, refer to “Manual sampling” or “Auto sampling.”)

The assigned sample will sound when you play the keyboard in the range of the index to which the sample is assigned, or when you press the [AUDITION] key.

- ⑥ Repeat steps ④ and ⑤ to assign a sample to each index.

- note** The number and order of the indexes in a multisample, the range of each index, and the original key position can be freely changed later if desired. (☞ p.94 “Multisample editing”)

Creating multiple samples

In the example procedure described above, several indexes were created (by pressing the [F6] (“CREATE”) key several times), and then samples were assigned to each “Index.”

As an alternative method, it is also possible to create one index, sample into it, and then repeat these two steps.

- ① Press the [F6] (“CREATE”) key once to create an index.
- ② Record a sample.

The recorded sample will automatically be assigned to the index you created in step ①.

③ Repeat steps ① and ②.

This is an efficient way to record multiple samples. (PG p.36)

Loop settings

With the default settings after the power is turned on, the sounds you sample will automatically be looped (1.1: Recording, Input/Pref page "AutoLoop (Auto Loop On)" On)

To edit the loop and other playback address settings for the sample, use the 3.1: Loop Edit, Edit2 page.

① Select the sample for which you wish to make loop settings.


To select the sample, use the "SMPL (Sample Select)" or "Index" parameters of 3.1: Loop Edit, Edit 1 page or of the 1.1: Recording, Sample page. (PG p.91)

⚠ If you use "SMPL (Sample Select)" to select the sample, be aware that the assignment to the index will also change.

② In the 3.1: Loop Edit, Edit1 page, use the "Lp (Loop)" check box to turn loop playback on/off for the sample.

Looping will be turned on if the box is checked. This will operate between the addresses you specify in step ④.

Loop On: S→E→LpS→E→ (LpS→E is repeated)
Loop Off: S→E

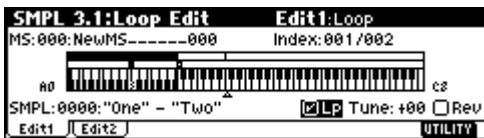

③ Select the 3.1: Loop Edit, Edit2 page.




The waveform data of the currently selected sample will be displayed. To hear this data, play a key in the keyboard range that is highlighted in "Keyboard & Index." Alternatively, you can press the [AUDITION] key to play back the data.


note In the case of a sample that was sampled with a "Mode (Sample Mode)" setting of Stereo, the waveform display will alternate between L and R each time you press the [F3] ("L/R") key. At this time, the upper right of the display will indicate [L] or [R].

④ Specify the start address in "S (Start)," the loop start address in "LpS (Loop Start)," and the end address in "E (End)."

Select "S (Start)" (highlighted), and use the [VALUE] dial or other VALUE controllers to modify the value. The corresponding vertical line will move. Set "LpS (Loop Start)" and "E (End)" in the same way. In the example shown below, "S (Start)" is set immediately before the first waveform, "LpS (Loop Start)" is set immediately before the second waveform, and "E (End)" is set as desired.

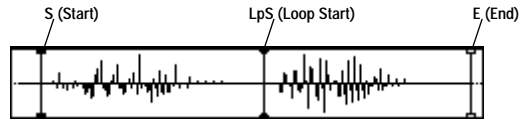


note By using the ZOOM ([F4] key-[F7] key) you can change the range that is displayed. When "S (Start)" is highlighted, zoom will be performed from the start address (PG p.101).

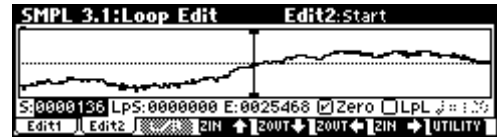

note If the "Zero (Use Zero)" check box is checked, only those addresses where the waveform data crosses the zero level will be found automatically when searching, and can be set. This lets you easily make address settings where noise is less likely to occur when looping.

⑤ If necessary, use the Utility menu command "Truncate" to delete unwanted data that falls outside the start (or loop start) and end addresses.

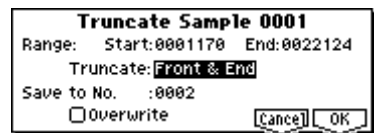

Set the parameters, and press the [F8] ("OK") key to execute the operation. (PG p.102)

⚠ For cautions on the "Save to No." and "Overwrite" check boxes, refer to "About "Overwrite"" (PG p.101).


The grid display

The Utility menu command "Grid" overlays the waveform display with a grid based on the BPM tempo value. This makes it easy to make loop settings that are synchronized to the tempo.

note In the same way, the grid display can also be used in 2.1: Sample Edit, Edit2 page. The grid can help you to edit the waveform in synchronization with the tempo.

① Select the Utility menu command "Grid".

The following dialog box will appear.

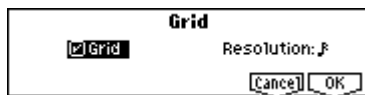

Check “Grid,” set “Resolution” as desired, and press the [F8] (“OK”) key. The dotted grid lines will appear.



- ② Set “J (Grid Tempo)” to the desired BPM tempo value.
- ③ Set the end address so that it coincides with a dotted line of the grid.

This will cause the loop interval to be the same length as the BPM value.

The grid display will be based at “LpS (Loop Start)” if looping is on. If looping is off, the grid will be based at “S (Start).”

- ④ To hide the grid display, select the Utility menu command “Grid,” uncheck “Grid,” and press the [F8] (“OK”) key.

⚠ The grid is displayed according to the playback pitch of the base key (the key shown in gray in the “Keyboard & Index” area).

You can select the base key by holding down the [ENTER] key and playing a note on the keyboard.

Sample (waveform data) editing

Editing the waveform data of the sample is done in 2.1: Sample Edit. You can use commands such as cut, copy, and normalize to edit the waveform data.

- ① Select the sample that you wish to edit.

Use “SMPL (Sample Select)” or “Index” in the 2.1: Sample Edit, Edit 1 page or the 1.1: Recording, Sample page to select the sample. (PG.91)

⚠ If you use “SMPL (Sample Select)” to select the sample, be aware that the index assignment will also change.

- ② Select the 2.1: Sample Edit, Edit2 page.



The waveform data of the currently selected sample will be displayed.

note The waveform display of a sample that was sampled with a “Mode (Sample Mode)” setting of **Stereo** can be switched between the L and R waveforms by pressing the [F3] (“L/R”) key. When you do so, [L] or [R] will be displayed alternately in the upper right.

- ③ Use “S (EditRangeStart)” and “E (EditRangeEnd)” to specify the range that you wish to edit.

The selected range will be highlighted.



If you wish to hear the sound of the selected range, press the [START/STOP] key. The selected range will play back at the pitch of the base key (the key shown in gray on the keyboard display). You can select the base key by holding down the [ENTER] key and playing a note on keyboard.

When you play a key to which the sample is assigned (the highlighted range of the keyboard displayed in “Keyboard & Index”), and the sample will be played back according to its loop settings.

note The procedure for using the ZOOM and “Zero (Use Zero)” check boxes is the same as for 3.1: Loop Edit.

- ④ From the list of Utility menu, select the desired editing command. Make the appropriate settings in the dialog box, and press the [F8] (“OK”) key to execute.

For details on each command (PG p.101).

A note on saving samples

In the dialog boxes of some Utility menu, there is a “Save to No.” setting that lets you specify the sample number to which the edited sample will be saved. At this time, a vacant sample number will be selected automatically, so you will change the setting only if you want to specify the save destination number.

If you check “Overwrite” in the dialog box of the command, the data prior to editing will be deleted, and will be overwritten by the edited data. Normally, you will execute the Write operation without checking this, so that the unedited data is preserved. When you are completely finished with your editing, you can use the Utility menu command “Delete SMPL” to delete unneeded samples.

⚠ In Sampling mode, there is no Compare function that lets you compare the data before and after editing.

If you wish to preserve the unedited state of the multisample or sample, use “Copy SMPL” or “Copy MS” (PG p.96, 97) to copy the multisample or sample before you begin editing it.

For some Utility menu commands in 2.1: Sample Edit or 3.1: Loop Edit, you can execute **without checking** the “Overwrite” setting in the dialog box, so that the sample data previous to editing will be preserved.

Multisample editing

Editing a multisample is accomplished with a number of operations i.e. creating indexes for the multisample and assigning a sample to each index, editing operations such as deleting, copying, and inserting indexes, and detailed settings such as sample level and pitch for each index.


Multisample editing is performed in 4.1: Multisample.

note Basic settings such as creating indexes and assigning samples can also be made in the 1.1: Recording, Sample page.

Editing the indices

To change the number or order of the indexes, use the **INSERT**, **CUT**, **COPY**, and **CREATE**.

- 1 Select 4.1: Multisample.

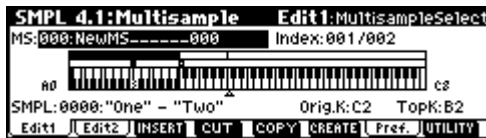

- 2 Use “MS (Multisample Select)” to select the multisample that you wish to edit.
- 3 Select the “Index.”
- 4 Press the keys corresponding to the following function buttons to edit the multisample by changing the number or order of the indexes.

To delete the selected index, press the “CUT.”

The “INSERT” is used in conjunction with the Cut and “Copy.” The contents of the index that was Cut or Copied will be inserted.

The “CREATE” has the same function as the “CREATE” in 1.1 Recording, Sample (p.91 “Creating multisample indexes and sampling”).


Modifying the settings of an index

- 1 Make the settings described in steps 1–3 of “Editing the indices.”
- 2 Set parameters for the selected index.

(p.118)

- Changing the Edit1 page “Top K (Top Key)” will change the upper limit of the zone. Simultaneously, the lower limit of the next-numbered index will also change.
- If you check “Constant Pitch” in the Edit2 page, playing any note within the zone of an index will always sound the original pitch.
- Edit2 page “Pitch” adjusts the sample pitch for each index. You can use the Utility menu command

“Pitch BPM Adj.” to set the loop interval to a desired BPM value (p.119).

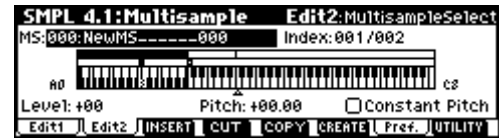

Converting a multisample to a program

The Utility menu command “Conv. To Prog” can be selected and executed in the various pages of 1.1: Recording, in 2.1: Sample Edit, in Edit 1 of 3.1: Loop Edit, in the various pages of 4.1: Multisample, and in 5.2: Ctrl Setup. When you execute this utility, the state of the currently selected multisample will be converted into a program.

In Program mode you can make filter, amp and effect settings etc., and play the sample as a program. The resulting program can be used in a combination or multi.

For details on using the Utility menu command “Conv. To Prog,” refer to p.38 and PG p.99.

Using samples in a drum kit

A sample you created in Sampling mode can be used as one of the instruments in a drum kit. In the GLOBAL 5.1: DKit, High Sample page and Low Sample page, set “Drumsample Bank” to RAM, and use “Drumsample” to select the sample that you created.

Using Time Slice to divide a sample and play it in Sequencer mode

Time Slice automatically detects the attacks of the kick and snare etc. in a rhythm loop sample (a looped sample containing a drum pattern, etc.), and automatically divides the sample at the appropriate points. The resulting samples can be automatically turned into a multisample and program. Sequencer mode performance data for replaying the divided samples can also be created automatically.

Here are some ways that you can use a time-sliced sample in a Sequencer mode song.

- Adjust the tempo of several rhythm loop samples (all of differing tempos) without affecting their pitch.
- Make realtime changes to the tempo without changing the pitch.

Here is an example of the procedure for time-slicing a rhythm loop sample in Sampling mode, and for playing the resulting rhythm loop samples in Sequencer mode.

You can try this using a rhythm loop sample that contains a drum performance. You can record this on the TR or use Media mode to load data from SD card etc. When trying this for the first time, start with a fairly simple one-measure 4/4 drum pattern. In this example we are using a 120 BPM rhythm loop sample.

- ① Access the SMPL 3.1: Loop Edit, Edit1 page.
- ② In "SMPL," select a 120 BPM rhythm loop sample.




- ③ Access the SMPL 3.1: Loop Edit, Edit2 page.



note Play back the sample, and check whether the beat plays accurately across the looped point. If not, access the SMPL 3.1: Loop Edit, Edit2 page, adjust "S (Start)" (start address) and "E (End)" (end address), and execute the "Truncate" utility menu command. (☞p.92, ☞PG p.109)

- ④ Choose the "Time Slice" utility menu command.

The Set Sample Tempo dialog box will appear.

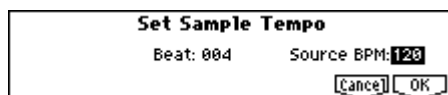


- ⑤ Specify the quarter note time signature and the tempo of the sample.

If you know the BPM, set the "Source BPM" field. If you do not know the BPM, set "Beat" and the BPM will be calculated automatically. In this example we already know the BPM, so we will set "Source BPM" to 120.

- ⑥ Press the [F8] ("OK") key.

The sample will be sliced automatically, and the dialog box will appear.

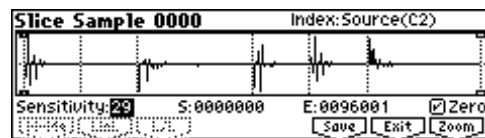

When you play the keyboard, C2 will sound the original sample (Source), and the keys D2 and above will play the divided samples.

While you listen to each of the divided samples, adjust "Sensitivity" so that each of the drums or percussion instruments are separated. For some samples, you may not be able to slice the samples cleanly by adjusting "Sensitivity." If the attack portion of the next sample is heard at the end of a sample, or if two sounds are heard in a single sample, you will need to make further edits.

note To edit, hold down the [ENTER] key and select the "Index" that is assigned to the key you want to edit. (That portion of the waveform display will be highlighted.) Then you can adjust "S (Start)" and "E (End)," use Divide to divide samples, or use Link to join samples. (☞PG p.111 step ⑦)

- ⑦ Press the [F6] ("Save") key.

The Save Smpl/MS dialog box will appear.

From here you can save the time-sliced samples and multisample.

At this time, you can adjust the settings in the "With" area to specify which program will use the samples and multisample, and the destination of the Sequencer mode performance data (track or pattern) that will be used to playback the rhythm loop sample.

- To create performance data in a track
Check "Program" and "Seq.Event"
Program: D072
Seq.Event: Track
Song: 000, Track: 01, Meter: 4/4
Start Measure: 001, Times: 008



Press the [F8] ("Save") key to save your settings. You will return to the dialog box of step ⑥.

- To create performance data in a pattern
In order to insert the data into a pattern, press the [F6] ("Save") key once again to access the Save Smpl/MS dialog box.
Check "Program" and "Seq.Event"
Program: D073

Seq.Event: **Pattern**
 Song: **001**, Pattern: **U00**, Meter: **4/4**
 RPPR: **On (checked)**, Key: **C#2**, Track: **01**



Press the **[F8]** (“Save”) key. to save your settings.
 You will return to the dialog box of step ⑥.

- ⑧ Press the **[F7]** (“Exit”) key to return to the screen of step ③.
- ⑨ Press the **[SEQ]** key to enter Sequencer mode, and set “Song Select” to **000**.

The song data that you specified in step ⑦ has been automatically set/created as shown below.


- SEQ 1.1: Play/REC, Play/REC page
 Song: **000**, Meter: **4/4**, Tempo: **120**



- SEQ 1.1: Play/REC, Prog..8 page
 Track01 Program: **D072**




- SEQ 1.1: Play/REC, Loop..8 page
 Track01 Loop On: **On**
 Loop Start Meas: **001**
 Loop End Meas: **001**
 Play Intro: **Off**

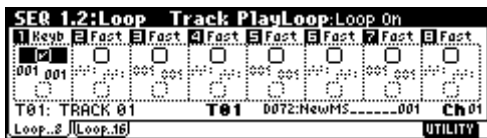

- note** If you set “Start Measure” to **other than 001** when creating performance data in a track, the parameters and programs of the SEQ 1.1: Play/REC, Loop..8 page will not be set automatically. (“Loop On” will be **Off**, and a program change will be created at the beginning of the “Start Measure.”)

- SEQ 5.2: Track Edit, Track Edit page
 Track01: track data: 8 measures (D2-)

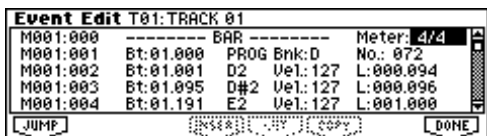

When you press the **SEQUENCER [START/STOP]** key, playback will begin. According to the Track Play Loop setting, the first measure will play as a loop.

As an example, try setting “♩ (Tempo)” to **100**.
 Notice that even if you change the playback tempo, the pitch does not change.

- note** If the beat of the rhythm loop sample is not reproduced correctly or if you hear unwanted noise when you change the tempo, the reason may be that slicing was not performed optimally in step ⑥. The accuracy with which each rhythm instrument sound is separated will significantly affect the quality of the playback. Try adjusting the separation of each sample in step ⑥.

- note** In some cases, playing back at a slower tempo may cause the playback to sound unnatural because of regions of silence between samples. Conversely when you play back at a faster tempo, unnatural noise may occur between samples. To avoid such problems, set Stretch “New BPM” or “Ratio” in step ⑦ to the tempo that you will use during playback. When you execute the time stretch command, the length of each sample will be adjusted appropriately. (PG p.112 step ⑨)

- ⑩ In “Song Select,” select **001**.

The song data that you specified in step ⑦ has been set/created automatically as shown below.



- SEQ 1.1: Play/REC, Play/REC page
 Song: **001**, Meter: **4/4**, Tempo: **120**, RPPR: **On**



- SEQ 1.1: Play/REC, Prog..8 page
 Track01 Program: **D073**



- SEQ 5.1: RPPR, RPPR Setup page
 Key: **C#2**, Assign: **On**,
 Pattern: **User, U00**, Track: **Track01**
 Pattern data: 1 measure (D2-)

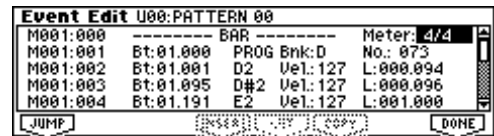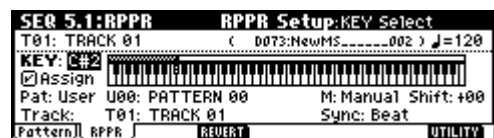

In the SEQ 5.1: RPPR, Pattern page, press the **SEQUENCER [START/STOP]** key and pattern **U00** will begin playing.

If you press the **C#2** key in the SEQ 5.1: RPPR, RPPR Setup page, the RPPR function will begin playing pattern **U00**.

As in step ⑨, you can change the playback tempo without affecting the pitch.

Editing a drum kit

Before editing a drum kit, uncheck the Memory Protect (p.43).

① In **PROG 1.1: Play**, select the program that you wish to use while editing the drum kit.


Select a drum kit program from the preload programs etc. If the drum kit that you will be editing is already being used by a program, select that program. (In the separate “VNL,” programs that use a drum kit are marked by a @ symbol.)

Set “Octave” (PROG 2.1–2) to +0 [8]. With a setting other than +0 [8], the relationship between the keys and the sounds will be incorrect.

The effects will sound using the settings of the last-selected program.

When you edit a drum kit, all programs that use that drum kit will be affected.

② Access the **High Sample** page of **GLOBAL 5.1: DKit**.

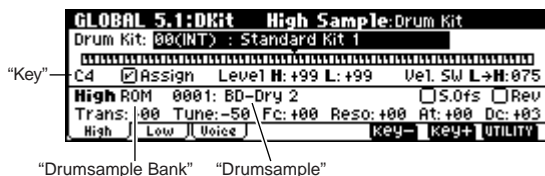

③ In “**Drum Kit**,” select the drum kit that you wish to edit.

If necessary, use the Utility “Copy Drum Kit” to copy settings from a preload drum kit or a GM drum kit.

GM drum kits **24 (GM) – 32 (GM)** cannot be selected here. (It is not possible to edit or write a GM drum kit.) If you wish to modify the settings of one of the drum kits **24 (GM) – 32 (GM)**, you can use “Copy Drum Kit” to copy it to **00 (INT) – 23 (User)**, and then edit the copy.

④ Use “**Key**” to select the note number that you wish to edit.

The drum sample parameters for the selected note number will be displayed in the High Sample, Low Sample, and Voice/Mix pages. In addition to using the VALUE controllers, you can also use the following methods to select the note number.

- Hold down the [ENTER] key and play a key on the keyboard to input that note number.
- Use the [F6] (“Key-”) and [F7] (“Key+”) keys to increment or decrement the note numbers.

⑤ Use “**Assign**” to specify whether a drum sample will be assigned to the note number.

If this is **checked**, a drum sample will be assigned to that note number. Normally you will check this. If this is **not checked**, no drum sample will be assigned to that note number. That note number will sound the drum sample assigned at its right, but a semitone lower. Use this setting when you

want only to change the pitch, such as with tom or cymbal sounds.

⑥ Use “**Drumsample Bank**” and “**Drumsample**” to select the drum sample that will be assigned to the note number.

Set the High Drumsample in the High Sample page, and the Low Drumsample in the Low Sample page. If you specify a Low Drumsample, use “Vel.SW L→H” to specify how velocity will switch between the High Drumsample and the Low Drumsample.

Set “Drumsample Bank” to **ROM** or **EX** if you want to select ROM samples. Set “Drumsample Bank” to **RAM** if you want to select samples that were recorded in Sampling mode or loaded in Media mode using the EXB-SMPL option.

About ROM drumsamples

This instrument contains 518 drumsamples in its internal memory.

You can use the Utility “Select by Category” to select ROM drum samples from fifteen categories.

For the drumsample names, refer to the separate “VNL.”

⑦ Use “**Vel. SW L→H**” to specify how velocity will switch between drumsamples.

The drumsample that sounds when you perform will depend on the velocity (keyboard playing strength) of the incoming note. This is called **velocity drumsample switching**.

If you set this to **001**, only the High Drumsample will sound.

This is the same type of function as the Velocity Multisample Switching in a program. (p.50 “High Multisample and Low Multisample”)

⑧ Set the parameters of the drumsamples that you assigned.


Set the High Drumsample parameters in the High Sample page, and the Low Drumsample parameters in the Low Sample page.

You can set parameters such as volume level (“Level”), pitch (“Trans,” “Tune”), and tone (“Fc,” “Reso”). (For details on each parameter, refer to PG p.134.)

⑨ As necessary, repeat steps ④–⑧ to set drumsample parameters for each note number.

If you wish to use the settings of another “KEY,” select the Utility “Copy Key Setup”.

⑩ Select the **Voice/Mixer** page in **GLOBAL 5.1: DKit**.

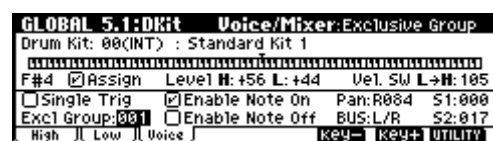

⑪ **Set the “Excl Group (Exclusive Group).”**

The “Excl Group (Exclusive Group)” setting is used when you wish to group drumsamples of the same type.

For example if the note number to which a open hi-hat and a closed hi-hat drumsample are assigned are set to the same exclusive group number, they will be grouped so that the open hi-hat and closed hi-hat can not be sounded simultaneously, ensuring that the hi-hat performance will sound natural.

⑫ **Use “BUS” to specify the output routing.**

Set this when you wish to send the output of the drumsample assigned to each note number to its own insert effect or AUDIO OUTPUT (INDIVIDUAL) jack 1-2.

For example you can specify **IFX** for snare-type sounds, and **L/R** for the other sounds. If you want to send only a specific drum sample to AUDIO OUTPUT (INDIVIDUAL) 1 and/or 2, select **1**, **2**, or **1/2**. These settings are valid if “Use DKit Setting” (PROG 7.1: Ed-InsertFX, BUS page) is **checked** for the program that uses this drum kit (☞PG p.26, 160).

⑬ **Use “Pan” to specify the stereo output position.**

The setting you make here is valid if the “Use DKit Setting” is **checked** (PROG 5.1: Ed-Amp1, Level/Pan page) for the program that uses this drum kit.

⑭ **Use “S1 (Send1(MFX1))” and “S2 (Send2(MFX2))” to set the send levels to the master effects.**

The settings you make here are valid if the “Use DKit Setting” is **checked** (PROG 7.1: Ed-InsertFX, BUS page) for the program that uses this drum kit.

⑮ **Use the Utility “Write Drum Kits” to save the data.**

If you wish to change the name of the drum kit before you save it, use the Utility “Rename Drum Kit” (☞p.44).

If you turn off the power before writing the data into memory, your edits will be lost (☞p.45 “Memory in Global mode”).

Media mode

How Media mode is organized

In Media mode you can use an SD card or a connected external SCSI device (if the separately sold EXB-SMPL is installed) to save or load various types of data. You can also make settings related to saving and loading functionality.

For details on connecting an external SCSI device and setting the SCSI ID, refer to the manual included with the EXB-SMPL.

.....

Media that can be used

SD card

▲ The SD card is not included. It must be purchased separately.

The TR supports SD cards with a power supply voltage of 2.7–3.6V and capacities of 16 MB - 1 GB, and SD card with ID.

External SCSI storage media

If the EXB-SMPL option (sold separately) is installed, the TR can save data on external SCSI media (maximum 4 GB) such as a hard disk, Zip, Jaz, ORB, or MO drive.

When the EXB-SMPL option is installed, an external SCSI device of up to 4 GB can be formatted.

note When you insert media for the first time after turning on the power, or after changing disks, you must press a function key etc. to make the TR detect the media. When the disk (or other media) is recognized, media information will appear in the LCD screen.

note If more than one volume of media is currently recognized, select “Media” and use the [INC]/[DEC] keys to switch between media.

▲ The TR cannot format media with a format of other than 512 bytes/block (such as 640 MB, 1.3 GB MO disks etc.).

Formatting media

SD card or external SCSI media (via the EXB-SMPL option) must be formatted.

Newly purchased media or media that has been used by another device cannot be used immediately on the TR. It must first be formatted for use on the TR.

The TR supports MS-DOS format.

For the formatting procedure, refer to “Format” (PG p.156).

▲ Media must be formatted. SD cards or external SCSI media that was formatted on a device other than the TR may not be recognized correctly.


▲ It is not possible to format media of other than 512 bytes per block (e.g., 640 Mbyte or 1.3 Gbyte MO disks).

SD card handling

- The SD card may be hot immediately following use. Power-off the TR and wait for the card to cool before removing it.
- SD cards are precision parts. Do not bend them, drop them, or subject them to physical shock.
- Avoid using or storing SD cards in locations of extremely high or low temperature such as in direct sunlight, a closed automobile, or near a heater, or in locations of high humidity or excessive dust.
- Avoid using or storing SD cards in locations where they may be subject to strong static electricity or electrical noise.
- Do not allow dirt or foreign matter to adhere to the contacts of an SD card. If the contacts should become soiled, gently wipe them off using a dry cloth.
- When you are not using an SD card, keep it in the protective case that was included with the card to prevent it from being damaged by static electricity.
- Do not leave an SD card where it is accessible by infants or children who might place it in their mouth and swallow it.
- Carefully read and observe the owner’s manual included with your SD card.

About the write protect setting of an SD card

SD cards have a write protect switch that prevents the data from being overwritten accidentally and lost. If you set the card’s switch to the “protected” setting, it will be impossible to write or erase data on the card, or to format it. If you need to save edited data on the card, move the switch back to its original “unprotected” setting.

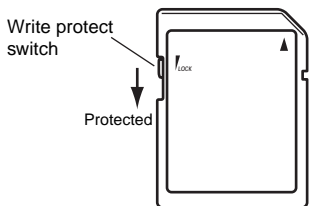

Loading data

Types of data that can be loaded

The data that can be loaded from external media (e.g., SD card) is shown in the diagram below. (For details on each type of data, refer to PG p.141)

If the EXB-SMPL option is installed, data can also be loaded from media such as a hard disk or CD-ROM.

Data loading procedure

Loading Programs, Combinations, Drum kits, User arpeggio patterns, and Global settings (loading a .PCG file)

As an example, here's how to load a .PCG file. A .PCG file contains programs, combinations, drum kits, user arpeggiator patterns, and global settings (see diagram below).


Select this if you have used "Save All" or "Save PCG" to save your own original programs and combinations, and want to reload this data.

! If you want to load programs, combinations, songs, user drum kits, and user arpeggio patterns, you must first uncheck the memory protect setting in Global mode. (p.43)


1 If you are loading data from SD card, insert the SD card into the SD card slot.

For details on handling SD cards, please refer to "Cautions when handling an SD card."

If the separately sold EXB-SMPL option is installed and you are loading data from a hard disk or other external SCSI device, refer to the manual included with the EXB-SMPL, and verify that the external SCSI device is connected correctly and that the media contains the file you want to load.

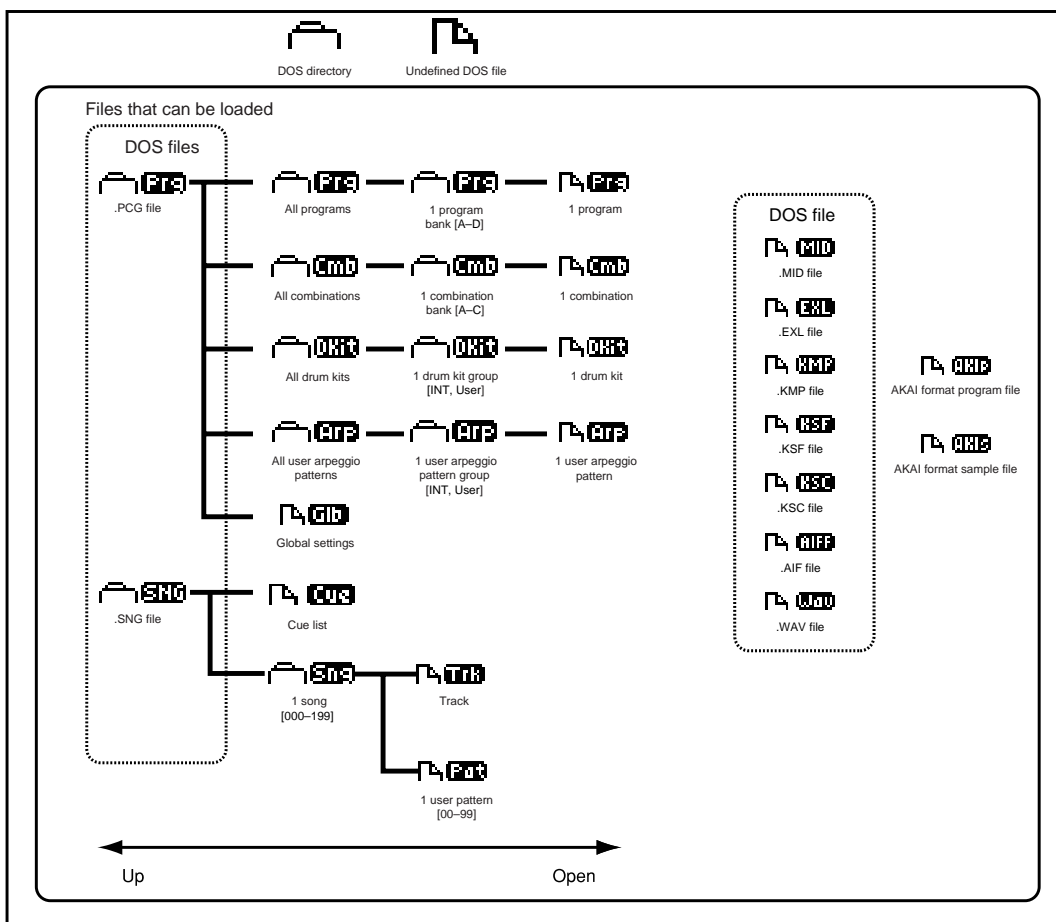

- Enter Media mode, and press any function key to make the TR recognize the media.

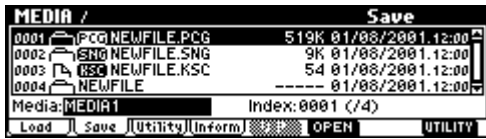

- Select the Load page.
The LCD screen will display file information.
- If you are loading from an external SCSI device, use the [INC]/[DEC] keys to select the media that contains the data you want to load.
- Use the [▲], [▼] cursor keys to select a .PCG file.
The selected file will be highlighted.

note If the data you want to load is located in a lower or higher level of the directory structure, press the [F6] (“OPEN”) or [F5] (“UP”) keys to display the desired data, and then select it.

! When you load a .PCG file, the data in the internal memory of the TR will be overwritten by the data from the .PCG file (programs, combinations, drum kits, user arpeggio patterns, global settings). If internal memory contains data that you want to keep, use “Save All” or “Save PCG” to save it before you load other data.

- In the Utility menu, select “Load Selected.”



A dialog box will appear. The display and operations will differ depending on the type of file that is to be loaded. For details on each type of file, refer to PG p.143.

- If you execute the Load operation with “Load *****.SNG too” checked, the .SNG file will be loaded at the same time as the .PCG file.

If you execute the Load operation with “Load *****.KSC too” checked, the .KSC file will be loaded at the same time as the .PCG file.



- Press the [F8] (“OK”) key to execute the Load operation.

- Loading will be halted if the specified data is not found in the file. (PG p.143)
- Never remove the media while the data is being loaded.

Saving data

For the procedure of saving data to an SD card or to external SCSI media, refer to “Saving on external media” (p.46).

Types of data that can be saved

The following types of data can be saved on external media (SD card etc.). If the separately sold EXB-SMPL option is installed, data can also be saved on high-capacity media such as a hard disk.

- .PCG files**
Programs, combinations, global settings, drum kits, user arpeggio patterns (the data specified by the “S.Item” (Select Save Items) check boxes when saving will be saved).
- .SNG files**
Songs, cue lists
- .KSC files**
Script file (.KSC files) listing the multisamples and samples created in Sampling mode (if the separately sold EXB-SMPL option is installed), with multisamples (.KMP files) and samples (.KSF files)
- Standard MIDI files (SMF)**
A single pattern of Sequencer mode can be saved as SMF data.
- System exclusive data**
System exclusive data received by the TR from an external MIDI device (the TR can be used as a data filer).
- .WAVE files, .AIFF files**
Samples you created in Sampling mode (if the separately sold EXB-SMPL option is installed) can be exported and saved as .WAVE files or .AIFF files.

note For details on each type of file and the icon associated with it, refer to the lower diagram on p.101.

Arpeggiator settings

This chapter describes the procedure for making arpeggiator settings in each mode. For details on the arpeggiator function, refer to “Using the arpeggiator while you play” (p.27).

Arpeggiator settings for a program

Arpeggiator on/off

Each time you press the [ARP ON/OFF] key, the arpeggiator will be switched on or off. When on, the [ARP ON/OFF] key will light. When you play the keyboard, an arpeggio will play according to the selected arpeggio pattern.

note The on/off setting is stored when the program is written.

Arpeggiator settings

- 1 Select the PROG 6.1: Ed-Arp., Arpeg. Setup page.



- 2 Use “♪ (Tempo)” to set the tempo.

You can adjust the tempo by rotating REALTIME CONTROLS C-mode [TEMPO] knob. The LED will blink at the specified tempo.


MIDI If “MIDI Clock” (GLOBAL 2.1: MIDI) is set to **External** or **Ext-USB**, the display will indicate “♪ = EXT.” This setting lets you synchronize the tempo with an external MIDI device. In this case, it will not be possible to change the tempo on the TR.

- 3 In “Pattern,” select the arpeggio pattern.


You can select from preset arpeggio patterns **P000–P004** and user arpeggio patterns **U000 (INT)–215 (User)**.

The way in which the pattern is played will depend on settings such as “Octave” and “Sort.” **P000–P004** in the following diagrams show how the arpeggio will be played when “Octave” is set to 1, and “Sort” is checked. **P004: RANDOM** is one possibility.


P000: UP

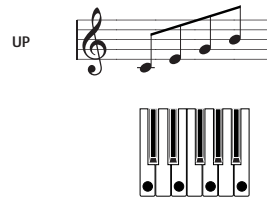


P001: DOWN

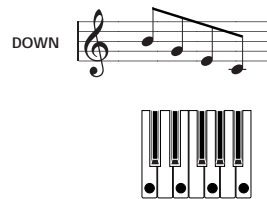


P002: ALT1

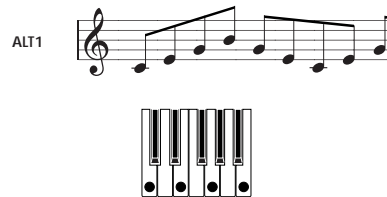

P003: ALT2

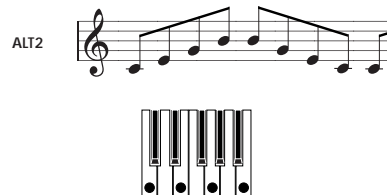

P004: RANDOM

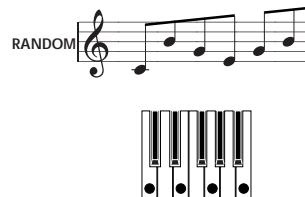

U000 (INT)–U199 (INT)


With the factory settings, various arpeggio patterns are preloaded. These include a variety of patterns such as drum or bass phrases, or guitar or keyboard backing riffs (p.27).

U200 (User) – U215 (User)

With the factory settings, these do not contain patterns.

④ **Make settings for the various parameters.**

“**Octave**”: Select the octave range in which the arpeggio will be played.

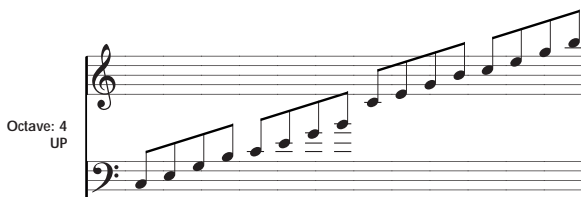

⚡ If a user arpeggio pattern is selected, the “Octave Motion” setting (GLOBAL 6.1: Arp.Pattern, Setup page) will affect the way in which the arpeggio is played.

“**Reso**”: Specifies the timing value of the arpeggio notes over a range of $\frac{1}{3}$ - $\frac{1}{2}$.

“**Gate**”: Specifies the length (gate time) of each note in the arpeggio. If a user arpeggio pattern is selected, you can set this to **Step**. In this case, the value of the “Gt” setting for each step (GLOBAL 6.1: Arp.Pattern, Edit page) will be used.

⚡ This value will be in effect when the REALTIME CONTROLS C-mode [ARP-GATE] knob is in the center position (12 o’clock). Be sure that the knob is in the center position when you make this setting.

“**Velocity**”: Specifies the velocity of the notes in the arpeggio. If this is set to **Key**, the velocity with which you actually played the note will be used. If a user arpeggio pattern is selected, you can set this to **Step**. In this case, the value of the “Vel” setting for each step (GLOBAL 6.1: Arp.Pattern, Edit page) will be used.


⚡ This value will be in effect when the REALTIME CONTROLS C-mode [ARP-VELOCITY] knob is in the center position (12 o’clock). Be sure that the knob is in the center position when you make this setting.

note When a preload user arpeggio pattern is selected, setting the “Gate” or “Velocity” to **Step** will add a sense of groove to the arpeggio pattern.

“**Swing**”: This adjusts the timing of the even-numbered notes in the arpeggio (counting from the first note), to give the pattern a sense of “swing.”

“**Sort**”: If this is **checked**, the arpeggio will be sounded in order of pitch, regardless of the order in which notes were played on keyboard (On).

If this is **unchecked**, the arpeggio will be sounded in the order in which the notes were played on keyboard (Off).

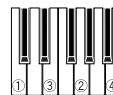

“**Latch**”: If this is **checked**, the arpeggio will continue playing even after you take your hand off the keyboard. If this is **unchecked**, the arpeggio will stop playing when you take your hand off the keyboard.


“**Key Sync**.”: If this is **checked**, the arpeggio pattern will start from the beginning when you play a note after having released all notes. This setting is suitable when you are playing in realtime, and want the arpeggio to start at the beginning of the measure. If this is **unchecked**, the arpeggio pattern will always be synchronized to the tempo of the MIDI clock. For details on synchronization, refer to “Synchronizing the arpeggiator” (p.111).

“**Keyboard**”: If this is **checked**, the notes you play on the keyboard will be heard as well as the arpeggiated notes. If this is **unchecked**, only the arpeggiated notes will be heard.

The same setting can be made by editing the parameter of the same name (or abbreviation) in the PROG 1.1: Play, Arp.Play page.

note You can use the Utility “Copy Arpeggiator” to copy arpeggiator settings from another program or combination (p.25).

⑤ **In the Scan Zone page, specify the range in which the arpeggiator will operate.**

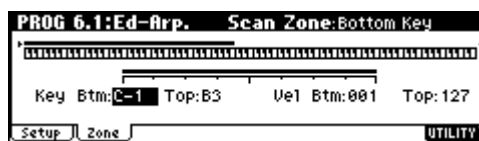

“**Key Btm**,” “**Key Top**”: The arpeggiator will operate when you play keys within the specified range. Keys outside of this range can be played in the normal manner, and will not be affected by the arpeggiator on/off.

note For example if you set “Pattern” to **P000: UP**, check “Latch,” set “Key Top” to **B3**, and “Key Btm” to **C-1**, playing a note **B3** or lower will trigger the arpeggiator. Since “Latch” is **on**, the arpeggio will continue even after you release the keys. You can use the C4 and higher keys to play conventionally along with the arpeggio sounded by the B3 and lower keys. To change the arpeggio, play keys in the range of B3 and below.

“Vel Btm,” “Vel Top”: The arpeggiator will operate when you play notes with a velocity (playing strength) that is within the specified range. Notes played with a velocity outside this range will be sounded normally, without regard to the arpeggiator on/off.

- ⑥ If you wish to save the edited program settings to internal memory, turn off memory protect in Global mode, and write the program (see p.43).

Linking the arpeggiator to a program

If you want the arpeggiator settings written in a program to be selected when that program is selected, check **Program** for “Auto Arp.” (GLOBAL 1.1: System, Basic page).

Arpeggiator settings in Combination and Sequencer modes

In Combination and Sequencer modes, the TR provides **dual arpeggiator** functionality that lets you use two arpeggio patterns simultaneously. The settings in each of these modes are made in the similar way.

As an example, the following explanation shows how to make settings in Combination mode. For a detailed explanation and example settings (see PG p.43, 82).

The dual arpeggiator functionality lets you do the following things.

- Assign an arpeggiator for each timbre. Choose from **Off**, (arpeggiator) **A**, or (arpeggiator) **B**. step ⑤
- Independently specify whether **A** and **B** will operate. step ⑥
- Select an arpeggio pattern and set parameters independently for **A** and **B**. step ⑦
- Make Scan Zone page settings so that you can use keyboard range or playing velocity to switch between normal playing and arpeggiated playing, or to switch between arpeggiators **A** and **B**. step ⑧
- Make settings for timbres that will be silent when the arpeggiator is **Off**, and will sound only when the arpeggiator is **On**. step ⑩

Arpeggiator on/off

Each time you press the [ARP ON/OFF] key, the arpeggiator will be switched on or off. When on, the [ARP ON/OFF] key will light. The selected arpeggio pattern will begin when you play the keyboard. The on/off setting is saved when the combination is written into memory.

- ▲ If “Assign” is **Off** or “Arpeggiator Run” is not **checked**, the arpeggiator will not operate even if this key is on.

Arpeggiator settings


- ① Select **COMBI 2.1: Ed-Prog/Mix, Prog** page.

Select programs for the timbres that you wish to use. For this example, select any desired program for timbres 1–4.

- ② Select **COMBI 3.1: Ed-Paraml. MIDI** page.

For the timbres that you will be using, set “Status” to **INT**, and set “MIDI Channel” to **Gch** or to the global MIDI channel (set in GLOBAL 2.1: MIDI “MIDI Channel”).

For this example, set timbres 1–4 to a “Status” of **INT**, and timbres 5–8 to a “Status” of **Off**. Set the “MIDI Channel” of timbres 1–4 to **Gch**.

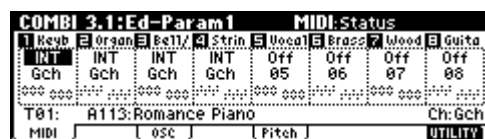

- ③ Select **COMBI 6.1: Ed-Arp., Setup** page.



- ④ Set “**J** (Temp)” to specify the tempo.

This is the same as for a program (see p.103). However, the tempo is shared by both arpeggiators A and B.

- ⑤ Make “Assign” settings.

Assign arpeggiator A or B to the desired timbres. Each timbre will be played by the arpeggiator that has been assigned to it.

- ⑥ Make “Arpeggiator Run” settings.

Check the arpeggiator(s) that you want to operate. The arpeggiator(s) checked here will run when the [ARP ON/OFF] key is turned on.

With the settings shown in the LCD screen for steps ② and ③, turning the [ARP ON/OFF] key on will cause arpeggiator A to operate for timbres 1 and 2, and arpeggiator B to operate for timbre 3. When the [ARP ON/OFF] key is turned off, timbres 1–4 will sound as a layer.

If all timbres “Assign” are **Off**, or if neither “Arpeggiator Run” **A** or **B** is **checked**, the arpeggiator will not function.

- ⑦ In the **Arp. A** and **Arp. B** pages, set the parameters for arpeggiators **A** and **B**.

The parameters for A and B are the same as for a program (see p.103).

- ⑧ In the **Scan Zone** page, specify the range in which arpeggiators **A** and **B** will operate.

The parameters for A and B are the same as for a program (see p.103).

You can use keyboard ranges or playing velocity to operate the arpeggiator, or to switch between arpeggiators A and B. By using the COMBI 3.3: Ed-Key Zone, Key page and COMBI 3.4: Ed-Vel Zone, Vel page to set keyboard ranges and velocity ranges in conjunction with each other, you can create even more variations.

⑨ If you wish to save the edited combination settings in internal memory, turn off memory protect in Global mode, and write the combination. (PG p.43).

⑩ The “Status,” “MIDI Channel” and “Assign” settings shown in the LCD screen of steps ② and ③ can be made so that certain timbres will sound only when the arpeggiator is On, and will be silent when the arpeggiator is not Off.

Although this is a somewhat sophisticated editing technique, we will describe the settings of one of the preset combinations as an example.

Combination A021: Urban Nature RnB

Select combination A021: Urban Nature RnB, and play it.

Before you play, make sure that the global MIDI channel (GLOBAL 2.1: MIDI “MIDI Channel”) is set to 01.

- Arpeggiator A is assigned to T (timbre) 4 and 8. When you play the keyboard, the arpeggio pattern U144(INT): Dr-Nature RnB will sound only the T4 program B004: Trance/GarageKit.
- The arpeggio pattern uses the Fixed Note setting, which is appropriate when playing a drum arpeggio. (“Fixed Note” is checked in, GLOBAL 6.1: Arp.Pattern, Setup page.) With this setting, the arpeggio pattern will always play the specified pitches regardless of the note numbers received from the keyboard. (PG p.138)
- The A “Key Btm” and “Key Top” (COMBI 6.1: Ed-Arp., Scan Zone page) are set so that arpeggiator A will operate only for notes B3 and lower.
- Arpeggiator A is also assigned to T8, but this is so that the T4 program B004: Trance/GarageKit will sound only when the arpeggiator is on.

Notice the timbre settings for T4 and T8

	Status	MIDI Channel	Assign
T4	INT	02	A
T8	Off	Gch	A

- If the arpeggiator is off, playing the keyboard will sound the timbre(s) that are set to Gch or to the global MIDI channel (in this case, 01). Since the “MIDI Channel” of T4 is set to 02, it will not sound. T8 is set to Gch, but since “Status” is Off it will not sound.
- Any MIDI channel that is assigned to a timbre will trigger the arpeggiator. In this case, these will be “MIDI Channel” 02 and Gch (global MIDI channel). When the arpeggiator is on, playing the keyboard will trigger arpeggiator A which is assigned to T8

(Gch). T4 will be sounded by arpeggiator A. Since the “Status” of T8 is Off, it will not sound.

- Since the “Status” of T8 is Off, it will not sound, regardless of whether the arpeggiator is on or off. It is a dummy timbre that causes T4 to sound only when the arpeggiator is on.

Combination B071: “In The Pocket”

Select and play combination B071: “In The Pocket.”

Before you play, make sure that the global MIDI channel (GLOBAL 2.1: MIDI “MIDI Channel”) is set to 01.

- Arpeggiator A is assigned to T7 and T8, and arpeggiator B is assigned to T5. When you play the keyboard, the T7 program C004: HipHop Kit will be sounded by the arpeggio pattern U143(INT): Dr-In The Pocket. The T5 program A066: Chord Trigger will be sounded by the arpeggio pattern U100(INT): Bs-Echo.
- The B “Key Btm” and “Key Top” (COMBI 6.1: Ed-Arp., Scan Zone page) are set so that arpeggiators B will operate only for the G3 note and above.
- Arpeggiator B is assigned to T8 as well, but this setting is so that the T7 program C004: HipHop Kit will sound only when the arpeggiator is on. Refer to the preceding section “Select and play Combination A021: Urban Nature RnB.”

Linking the arpeggiator to the combination

If you want the arpeggiator settings of a combination to become active when that combination is selected, check “Combi” for “Auto Arp” (GLOBAL 1.1: System, Basic page).

Creating a user arpeggio pattern

About user arpeggio patterns

The patterns that can be selected on the TR's arpeggiator are called "arpeggio patterns." There are two types of arpeggio patterns: preset arpeggio patterns and user arpeggio patterns.

Preset arpeggio patterns: There are five patterns; UP, DOWN, ALT1, ALT2, and RANDOM.

The operation of these patterns is fixed, and cannot be edited.

User arpeggio patterns: There are 216 patterns - U000(INT)-U215(User) - which can develop chords or phrases in a wide variety of ways, based on the pitches that you play on the keyboard or the timing at which you play them.

In GLOBAL 6.1: Arp.Pattern you can modify these user arpeggio patterns, or create a new user arpeggio pattern from an initialized condition. Edited user arpeggio patterns can be written to internal memory areas U000(INT)-U215(User). In Media mode, they can also be saved on external media such as an SD card. (p.46)

Editing a user arpeggio pattern

When you wish to edit a user arpeggio pattern, first turn off memory protect by **unchecking** the Memory Protect "Arp. UsrPat" check box in the Preference page of GLOBAL 1.1: System.

If you enter this mode from the Program mode, your editing will apply to the arpeggio pattern specified for the selected program.

① In Program mode, select a program for which the arpeggio pattern you wish to edit is selected, or a program that you wish to use as a basis for editing the arpeggio pattern.

② Press the [ARP ON/OFF] key to turn the arpeggiator on (the key will light).

Even if you moved to Global mode from a program in which the arpeggiator was turned off, you can use the [ARP ON/OFF] key to turn it on.

③ Select the GLOBAL 6.1: Arp.Pattern, Setup page.



④ In "Pattern," select the arpeggio pattern that you wish to edit.

For this example, select an empty user arpeggio pattern.

If a blank pattern is selected, playing the keyboard will not start an arpeggio. Although preset arpeggio patterns P000-P004 can be selected, they cannot be edited.

When you edit a user arpeggio pattern, the changes will have an effect anytime that this pattern is used in Program, Combination, or Song.

⑤ In "Lgth (Length)," specify the length of the pattern.

After the pattern has played for the length specified, it will return to the beginning. This setting can also be changed during or after editing. For this example, set it to 8.

note For the preload arpeggio patterns U000(INT)-U199(INT), simply changing the "Lgth" can significantly change the character of the pattern. Try changing the length and listening to the result.

⑥ Make settings for the "J (Tempo)," "Reso (Resolution)," "Oct (Octave)," "Sort," "Latch," "K.Sync (Key Sync)," and "Kbd (Keyboard)" parameters.

These are program parameters, but can be set from here as well.


If after moving here from Program mode, you modify these parameters and wish to keep your changes, return to Program mode and write the program. These parameters are not saved by "Write Arpeggio Pattern."

For this example, make the settings shown in the illustration ③.

⑦ The "Type (Arpeggio Type)," "Octave Motion," and "Fixed Note" parameters specify how the arpeggio will be developed.

These settings can be changed during or after editing (p.138).

⑧ Select the Edit page.

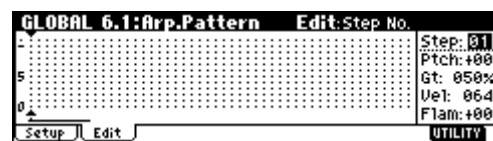


A pattern consists of Steps and Tones.

- Step:** A user arpeggio pattern can have a maximum of 48 steps. The arpeggiator will play from the first step, in steps equal to the timing value specified by "Reso (Resolution)." The vertical lines of the grid shown in the center of the LCD screen indicate the steps. Use "Step (Step No.," to select the step. For each step, specify "Ptch (Pitch Offset)," "Gt (Gate)," "Vel (Velocity)" and "Flam."


To change Step, you can either use the [←], [→] keys or select "Step (Step No.," and use the [VALUE] dial or the [INC]/[DEC] keys.

- **Tone:** At each step, a chord consisting of up to 12 tones (Tone No. 00–11) can be sounded. To input tones, select “Step (Step No.)” and then use numeric keys [0]–[9], [-], and [./HOLD] to input tones. The “Tone No.” corresponds to the [0]–[9], [-], and [./HOLD] keys as shown below. Each time you press a [0]–[9], [-], or [./HOLD] key, the corresponding tone will be turned on/off. The horizontal lines of the grid shown in the center of the LCD screen indicate the tones.


Tone00–09: [0]–[9] keys
Tone10: [-] key
Tone11: [./HOLD] key

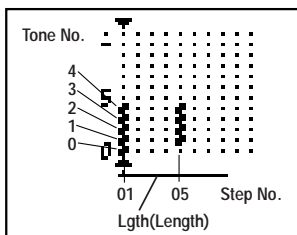

Creating an example pattern

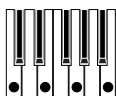

- ① Set “Step (Step No.)” to 01, and press the [0] key.
- ② Set “Step (Step No.)” to 02, and press the [1] key.
- ③ Set “Step (Step No.)” to 03, and press the [2] key.
- ④ Set “Step (Step No.)” to 04, and press the [1] key.
- ⑤ Set “Step (Step No.)” to 05, and press the [3] key.
- ⑥ Set “Step (Step No.)” to 06, and press the [1] key.
- ⑦ Set “Step (Step No.)” to 07, and press the [2] key.
- ⑧ Set “Step (Step No.)” to 08, and press the [1] key.

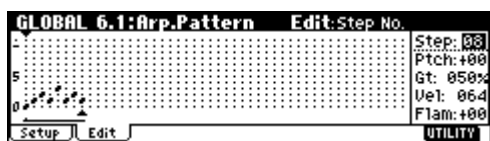

- ⑨ When you play the keyboard as shown in the illustration, the arpeggiator will begin playing.

Tone 0 corresponds to the pitch of the lowest key of chord you play on the keyboard. (If “Sort” is unchecked, it will correspond to the pitch of the first note you play.) Likewise, Tone 1 is the next highest pitch played on the keyboard, and so on up to 12 tones in any one step.

- ⑩ For steps 01–08, make settings for “Ptch (Pitch Offset),” “Gt (Gate),” “Vel (Velocity),” and “Flam.”

“**Ptch (Pitch Offset)**”: This offsets the pitch of the arpeggio note in semitones up or down. You can input the same tone for each step, and change the “Ptch (Pitch Offset)” value for each to create a melody using a single tone. (See “Melody pattern”)

“**Gt (Gate)**”: Specify the length of the arpeggio note for each step. With a setting of **LGT**, the note will continue sounding either until the next note of the same tone or until the end of the pattern. With a setting of **Off**, the note will not sound.

“**Vel (Velocity)**”: Specify the strength of the note. With a setting of **Key**, the note will sound at the strength with which it was actually played.

- ▲ The “Gt (Gate)” and “Vel (Velocity)” settings you make here will be valid if the “Gt (Gate)” and “Vel (Velocity)” parameters (PROG 6.1: Ed-Arp., Arpeg. Setup page) of the program selected in Program mode are set to **Step**. If these parameters have a setting other than **Step**, the “Gt (Gate)” and “Vel (Velocity)” that were specified for each individual step will be ignored, and all notes of the arpeggio will sound according to the settings in PROG 6.1: Ed-Arp. Be sure to verify the settings of the program.

- ▲ Before you set “Gt (Gate),” move the REALTIME CONTROLS C-mode [ARP-GATE] knob to the center position (12 o’clock).

- ▲ Before you set “Vel (Velocity),” move the REALTIME CONTROLS C-mode [ARP-VELOCITY] knob to the center position (12 o’clock).



- ⑪ To change the user arpeggio pattern name, use the Utility “Rename Arpeggio Pattern” (See p.44).


- ⑫ If you wish to save the edited user arpeggio pattern to internal memory, be sure to Write the user arpeggio pattern (See p.45).

If you turn off the power without writing, the edited contents will be lost.


- ⑬ If you wish to save the state of the program at the same time, return to Program mode and write the program (See p.43).

Other examples of creating a user arpeggio pattern

Melody pattern



- ① Set "Step (Step No.)" to 01, and press the [0] key. Set "Ptch (Pitch Offset)" to +00.
- ② Set "Step (Step No.)" to 02, and press the [0] key. Set "Ptch (Pitch Offset)" to +10.
- ③ Set "Step (Step No.)" to 03, and press the [0] key. Set "Ptch (Pitch Offset)" to +00.
- ④ Set "Step (Step No.)" to 04, and press the [0] key. Set "Ptch (Pitch Offset)" to +00.
- ⑤ Set "Step (Step No.)" to 05, and press the [0] key. Set "Ptch (Pitch Offset)" to +12.
- ⑥ For "Step (Step No.)" 06, do not enter a tone.
- ⑦ Set "Step (Step No.)" to 07, and press the [0] key. Set "Ptch (Pitch Offset)" to +00.
- ⑧ Set "Step (Step No.)" to 08, and press the [0] key. Set "Ptch (Pitch Offset)" to -02.

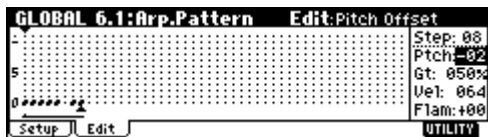


Chordal pattern



- ① Set "Step (Step No.)" to 01, and press the [0] key. Set "Gt (Gate)" to LGT.
- ② For "Step (Step No.)" 02, do not enter a tone.
- ③ Set "Step (Step No.)" to 03, and press the [1], [2], [3], [4] keys.
- ④ Set "Step (Step No.)" to 04, and press the [1], [2], [3], [4] keys.
- ⑤ For "Step (Step No.)" 05, do not enter a tone.
- ⑥ Set "Step (Step No.)" to 06, and press the [1], [2], [3], [4] keys. Set "Gt (Gate)" to LGT.
- ⑦ For "Step (Step No.)" 07, do not enter a tone.
- ⑧ Set "Step (Step No.)" to 08, and press the [1], [2], [3], [4] keys.

note To simulate the timing nuances of a strummed guitar chord, select "Flam." In Program mode, select an acoustic guitar program, and choose the user arpeggio pattern that you created here. In the Setup page of PROG 6.1: Ed-Arpeg., set "Gate" to Step.

Then return to the GLOBAL 6.1: Arp.Pattern, Edit page. For odd-numbered steps, set "Flam" to a positive (+) value. For even-numbered steps, set "Flam" to a negative (-) value.

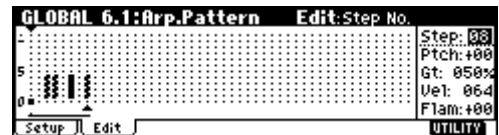

Drum pattern


You can use the arpeggiator to play a rhythm pattern by using "Fixed Note" with a drum program.

- ① Select a drum kit program.
For this example, select preset program A020: Standard Kit 1.
- ② Select the GLOBAL 6.1: Arp.Pattern, Setup page, and set the parameters.

Check "Fixed Note." If this is checked, tones will always sound at the specified pitch.

If you set "Mode (Fixed Note Mode)" to Trigger All Tones, playing a single note will cause all Tones to sound.

If you set "Mode (Fixed Note Mode)" to Trigger As Played, the notes you play will determine how Tones are sounded. (p.110)

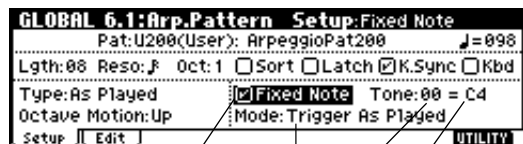

Fixed Note | Tone No. | Fixed Note No.
Mode(Fixed Note Mode)

If "Fixed Note" is checked, you will be able to set "Tone No." and "Fixed Note No." Select "Tone No.," and then set "Fixed Note No." to specify the note number that the tone will sound. Here, set "Tone No." and "Fixed Note No." as follows.

Tone No.	Fixed Note No.
00	C2 (kick)
01	F2 (snare)
02	F#3 (closed hi-hat)
03	A#3 (open hi-hat)

The drumsamples that correspond to each note number will differ depending on the drum kit. You will find it convenient to audition the drum sounds from the keyboard, and then input the "Fixed Note No." by holding down the [ENTER] key and playing the desired note.

- ⑧ If you wish to save the state of the combination at the same time, return to Combination mode and write the combination (p.43).

note When editing a user arpeggio pattern, pay attention to the global MIDI channel, the channel of each track, and the arpeggiator assignments, and make sure that the arpeggiator you are hearing is the pattern that you wish to edit.

⚠ If you moved here from Sampling mode (if the separately sold EXB-SMPL option is installed), the arpeggiator will not turn on. Nor will it be possible to edit arpeggio patterns.

Synchronizing the arpeggiator

The note timing of the arpeggiator will differ depending on the state of the arpeggiator “Key Sync.” check box.

If this is **checked**, the arpeggiator will operate at the timing of the first note-on you play from a state in which all keys are released.

If this is **unchecked**, the arpeggiator will operate in synchronization with the internal or external MIDI clock.

The paragraphs below explain how synchronization occurs when the “Key Sync.” check box is **unchecked**. (However, synchronization with Song Start and with the MIDI realtime command Start message are exceptions to this.)

Synchronization between arpeggiators A and B

In Combination and Sequencer mode, two arpeggiators can operate simultaneously. In this case, if you start an arpeggiator (whose “Key Sync.” is **unchecked**) while the other arpeggiator is already running, the arpeggiator you started will synchronize to the “♩ (Tempo)” based on the timing of the already-running arpeggiator.

note If “Key Sync.” is **checked**, A and B will each operate on their own timing.

Synchronization between the arpeggiators and sequencer in Sequencer mode

When song playback is stopped

- The arpeggiator will synchronize to the “♩ (Tempo)” based on the timing of the internal MIDI clock.
- In Sequencer mode when an RPPR pattern is playing, the arpeggiator will synchronize to the beats of that pattern.
- If you want the RPPR pattern playback to synchronize to the currently-running arpeggiator, set “Sync” (SEQ 5.1: RPPR, RPPR Setup page) to **SEQ**. Playback will synchronize to the “♩ (Tempo)” timing of the arpeggiator.

When a song is being played or recorded

- The arpeggiator will synchronize to the beats based on the timing of the song.

Synchronization with Song Start

- When the arpeggiator is on (the [ARP ON/OFF] key is on) and running, receiving a Song Start message will reset the arpeggiator to the beginning of the pattern. (This has no relation to the “Key Sync.” setting.)
- In Sequencer mode when the “Key Sync.” setting is **unchecked** and the [ARP ON/OFF] key is on, starting the arpeggiator by pressing notes during the pre-count before recording will cause the arpeggiator to start (and be recorded) from the beginning of the arpeggio pattern at the moment that recording begins.

Synchronization with an external sequencer in Program, Combination, or Sequencer modes

In Program, Combination, and Sequencer modes when “♩ (Tempo)” is **EXT** (GLOBAL 2.1: MIDI “MIDI Clock” set to **External** or **Ext-USB**), the TR will synchronize to MIDI Clock and Start messages received from an external MIDI sequencer (or similar device) connected by a MIDI cable.

Synchronization to external MIDI clock

- The arpeggiator will synchronize to the “♩ (Tempo)” based on the timing of the external MIDI clock.

Synchronization to the MIDI Start message

- When the arpeggiator is on and operating, receiving a MIDI Start message will cause the arpeggiator to reset to the beginning of the pattern. (This has no relation to the “Key Sync.” setting.)

Effects settings

The effect section of the TR provides one **insert effect**, two **master effects**, one **master EQ** (stereo 3-band EQ), and a **mixer** that controls the routing of these components.


You can choose from 89 types of full-digital effects for each effect. The effects are categorized as follows.

Categories of the 89 effect types

01–15	Filter and dynamics effects, such as EQ and compressor
16–31	Pitch and phase modulation effects, such as chorus and phaser
32–40	Other modulation and pitch-shift effects such as rotary speaker and pitch shifter
41–51	Early reflection and delay effects
52–57	Reverb effects
58–89	Mono and mono-chain effects in which two mono effects are connected in series


Effects in each mode

In **Program mode**, **insert effect** can be used as part of the sound-creating process, in the same way that the output sound of the oscillator (OSC) is processed by the filter and amp to create the final sound. Then the **master effects** can be used to apply spatial-type effects such as reverb. The stereo 3-band **master EQ** located immediately before the OUTPUT (MAIN) L/MONO and R outputs is used to make final adjustments in tone. These settings can be made independently for each program.

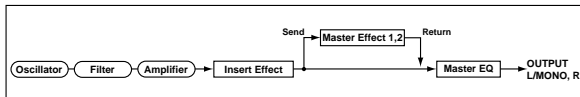


In **Combination mode**, and **Sequencer mode**, **insert effect** can be used to help create the sound of each timbre/track. The **master effects** are used to apply overall spatial processing, and the **master EQ** is used to make overall adjustments in tone.

These settings are made in Combination mode independently for each combination, and in Sequencer mode for each song the entire mode.

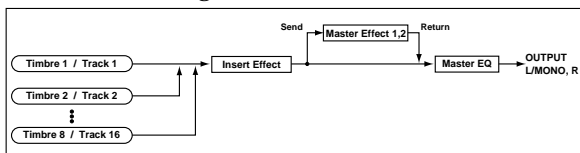


In **Sampling mode** (if the separately sold EXB-SMPL option is installed), the sound of an external source that is input from AUDIO INPUT 1 and 2 can be processed by the **insert effect** as the sound is sampled. Sampling mode settings are made by the "Input 1" and "Input 2" parameters of the SMPL 1.1: Recording, Input/Pref page. The settings here are valid only within Sampling mode.



The external input from **AUDIO INPUT 1** and **2** (if the separately sold EXB-SMPL option is installed) can be used outside of Sampling mode. In Program, Combination, and Sequencer modes, the external input sound can be processed by the **insert effect**, **master effects**, and **master EQ**.

This means that you can use the TR as a 2-in/4-out effect processor.

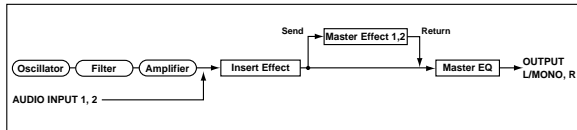


Routing settings and effect settings

The insert effect, master effects, and master EQ that can be used in each mode are structured identically. However, you can change the routing to specify how the oscillator(s) of a program, the timbres of a combination, or the tracks of a song will be sent to the insert effect or master effects. In the pages that follow, we will explain how you can make routing settings and effect settings in each mode.

Effect settings for a program

Routing

- ① Select the PROG 7.1: Ed-InsertFX, BUS page.

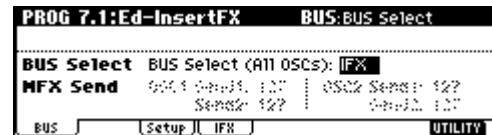

- ② Set "BUS Select (All OSCs)" to specify where the oscillator output will be sent.

L/R: The output will not be sent to the insert effect. After passing through the master EQ, the sound will be sent to AUDIO OUTPUT (MAIN) L/MONO and R.

IFX: The output will be sent to insert effect IFX.

1, 2, 1/2: The output will be sent to AUDIO OUTPUT (INDIVIDUAL) 1 or 2. It will not be sent to the insert effect, the master effects, or the master EQ.

Off: The output will not be sent to AUDIO OUTPUT (MAIN) L/MONO, R, or to (INDIVIDUAL) 1, 2 (After passing through the master effects, it will be output from AUDIO OUTPUT (MAIN).) Select this when you wish to connect the output to the master effects in a series connection at the send levels specified by “MFX Send.”

- ③ “MFX Send” specifies the send level from each oscillator to the master effects.


This is valid only if “BUS Select (All OSCs)” is set to L/R or Off.

If IFX is selected for “BUS Select (All OSCs),” the send level to the master effects is adjusted by the “Send 1 (MFX1)” and “Send 2 (MFX2)” parameters (PROG 7.1: Ed-InsertFX, Setup page) after the signal has passed through the insert effect.

Insert effect

- ① Access the PROG 7.1: Ed-InsertFX, Setup page.

The Setup page displays the state of the routing and insert effect settings. In this page you can also make “BUS Select” settings. Use the [▲], [▼] cursor keys to select (All OSCs), and use the [INC]/[DEC] keys to make the setting.

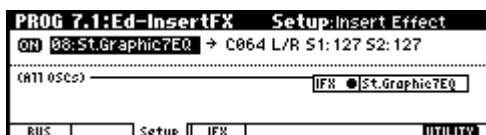

- ② In “Insert Effect,” select the desired insert effect.

note You can use the Utility “Select by Category” to select effects from six categories.

- ③ In “On/Off,” turn the insert effect on/off.

If this is set to Off, the result will be the same as if **00: No Effect** is selected. The input sound will be output without change.

note You can use the Utility “Copy Insert Effect” to copy effect settings from another program, etc.

- ④ Set the “Pan (CC#8),” “BUS Select,” “S1 (Send1 (MFX1)),” and “S2 (Send2 (MFX2))” parameters that follow the insert effect.

“Pan (CC#8):” Set the pan. This is valid only if “BUS Select” is set to L/R.

“BUS Select”: Specify the output destination. Normally you will set this to L/R. If you want to output the sound from AUDIO OUTPUT (INDIVIDUAL) 1 and/or 2, set this to 1, 2, or 1/2.

“Send1 (MFX1),” “Send2 (MFX2):” Set the send level to the master effects. For this example, set these to 127.

- ⑤ Move to the IFX page, and set the parameters of the effect that you selected for the insert effect.

For details on the parameters of each effect, refer to PG p.168–.

Master effects

The input level of the master effect is determined by the send level 1 and 2 settings (routing step ③, or insert effect step ④). If send levels 1 and 2 are 0, no master effects will be applied. Send level 1 is for MFX1, and send level 2 is for MFX2.

- ① Select the PROG 7.2: Ed-MasterFX, Setup page.



- ② In “Master Effect 1” and “Master Effect 2,” select the type of each master effect.

The procedure is the same as for the insert effect. (⇒step ①)

▲ The input/output of the master effect is mono-on/stereo-out. Even if you select a stereo-input type effect, the input will be monaural.

- ③ In “On/Off,” switch each master effect on/off.

If this is Off, the output of the master effect will be muted.

- ④ Specify the routing of master effects 1 and 2.

For details on the routing settings, refer to PG p.163.

- ⑤ In “Rtn (Return 1, 2),” adjust the output level of each master effect.

▲ For each effect, the W value of “W/D” (Wet/Dry) is the effect output level. This is multiplied by the return value (“Rtn”=127 is x1.0) to determine the actual master effect output level.

- ⑥ Move to the MFX1 or MFX2 page, and set the parameters of the effect that you selected as the master effect.

For details on the parameters of each effect, refer to PG p.168–.

Master EQ

- ① Use the stereo 3-band master EQ to make final equalizing adjustments immediately before the sound is output from the AUDIO OUTPUT L/MONO and R jacks.

Master EQ settings can be made in “Master EQ Gain [dB]” of the PROG 7.2: Ed-MasterFX, Setup page, or in the Master EQ page.

For details on master EQ parameters, refer to PG p.213.

Effect settings for the AUDIO INPUT (requires the EXB-SMPL option)

Even in modes other than Sampling mode, the TR's effects can be applied to the external audio source connected to the AUDIO INPUT 1 and 2 jacks. The effect section of the TR can be used as a 2-in 4-out effect processor.

Routing

In modes other than Sampling mode (i.e., in Combination, Program, and Sequencer modes) the audio input routing from the AUDIO INPUT 1, 2 jacks is specified in the GLOBAL 1.1: System, Audio In page.

① Enter Global mode from Program mode.

⚡ If you enter Global mode from Sampling mode, the "Input 1" and "Input 2" settings of Sampling mode will be maintained, and you will not be able to hear the settings made in Global mode. You must move here from a mode that can access external audio signals (Combination, Program, or Sequencer). In Sampling mode, the settings you make here are ignored. AUDIO INPUT 1, 2 settings for Sampling mode are made by the "Input 1" and "Input 2" parameters in the In/Pref page of SMPL 1.1: Recording (☞ p.114, PG p.128).

② Select the GLOBAL 1.1: System, Audio In page.

GLOBAL 1.1: System		Audio In: Input2 BUS Select	
(Setup for COMBI, PROG, SEQ)			
input1	Level: 127	BUS(IFX/Indiv.) Select: L/R	
	Pan: L000	Send1: 000	Send2: 000
input2	Level: 127	BUS(IFX/Indiv.) Select: L/R	
	Pan: R127	Send1: 000	Send2: 000

③ Set the parameters for "Input1" and "Input2."

"Input1" corresponds to AUDIO INPUT 1 jack and "Input2" corresponds to AUDIO INPUT 2 jack.

"Level": Set the signal level from AUDIO INPUT 1 and 2. Normally you will set this to 127. If the sound is still distorted even when this level is lowered significantly, it is possible that the distortion is occurring before the AD converter. Adjust the [LEVEL] knob or the output level of your external audio source.

"Pan": Set the panning of the signal from AUDIO INPUT 1 and 2. When you are inputting a stereo audio source, you will normally set Input 1 to L000, and Input 2 to R127 (or Input 1 to R127, and Input 2 to L000). When you are inputting a monaural audio source, you will normally set this to C064.

"BUS (IFX/Indiv.) Select": In the same way as for the oscillator of a program, specify the bus to which the external audio source from AUDIO INPUT jacks 1 and 2 will be sent (☞ p.112).

"Send 1," "Send 2": Specify the send levels from the AUDIO INPUT 1, 2 (external input sound) to the master effects, in the same way as for the program oscillators. This setting can be made only if "BUS (IFX/Indiv.) Select" is L/R or Off (☞ p.113).

If "BUS (IFX/Indiv.) Select" is set to IFX, this is set by "Send1 (MFX1)" and "Send2 (MFX2)" (Setup page) after the sound has passed through the insert effect.

⚡ If "BUS (IFX/Indiv.) Select" is set to other than Off and "Level" is raised, the external audio source will be input to the TR. At this time, if audio cables are connected to the AUDIO INPUT 1, 2 jacks, any noise component will be input to the TR even if there is no actual audio input, and (depending on the settings) will be output from the AUDIO OUTPUT L/MONO, R, 1, 2 jacks. If you are not using an external audio source, and are playing only the internal programs, combinations, and songs, you should set "BUS (IFX/Indiv.) Select" to Off, or set "Level" to 0.

If audio cables are not connected to the rear panel AUDIO INPUT 1, 2 jacks, the input to the TR will be 0.

About dynamic modulation (Dmod) D_{mod}

Dynamic modulation (Dmod) is a function that lets you use MIDI messages or the TR's controllers to control specific effect parameters in realtime.

BPM/MIDI Sync is another function that controls effect parameters, and is used to synchronize the LFO speed of modulation-type effects or the delay time etc. of delay-type effects to the tempo of the arpeggiator or an external sequencer.

For details on each of these functions, refer to PG p.221.

Setting example:

We will show how you can use dynamic modulation to control an effect parameter in realtime.

① As described in the procedure for "Effect settings for a program" (☞ p.112), set "IFX" to 49: LCR BPM Delay. Verify that a delay sound is being output.

② Select the PROG 7.1: Ed-InsertFX, IFX page.

Using the Dmod function to vary the delay level by pushing the joystick

③ Set "InLvl Mod" to +100.


④ Set "Src" to JS+Y#1.

The joystick will control the input level to the effect. When you set "Src" to JS+Y#1, the delay sound will no longer be output; however it will gradually increase as you move the joystick away from yourself.

PROG 7.1: Ed-InsertFX		IFX: LCR BPM Delay	
BPM:	120	TimeOver? >	---
L Bs: J	Times: 3	Level: 20	HiDamp: 0% LoDamp: 0%
C Bs: J	Times: 1	Level: 20	InLvl Mod: +100 Src: JS+Y#1
R Bs: J	Times: 1	Level: 20	Spread: 50
C Fb:	+10 Off	/+0	I/W/D: 50:50 Off /+0

Using the Dmod function to vary the feedback level by operating [SW1] key

- ⑤ In the PROG 2.2: Ed-Ctrl, Controls page, set the function of “SW1” to SW1 Mod. (CC#80), Toggle.
- ⑥ Return to the PROG 7.1: Ed-InsertFX, IFX page, and set the C Fb (C Delay Feedback) “(Source)” to SW1 #80.
- ⑦ Set “(Amount)” to +30.

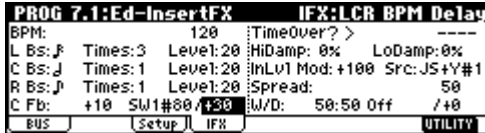

- ⑧ Press the [Exit] key etc. to return to the PROG 1.1: Play page.


When you (move the joystick away from yourself and) press the [SW1] key, the feedback level will increase, and the delay sound will continue repeating.

The “(Amount)” setting determines the feedback level when the [SW1] key is pressed. If you set “(Amount)” to -10 and press the [SW1] key, the feedback level will be 0.

Using the BPM/MIDI Sync. function to synchronize the delay time to arpeggiator tempo changes.

- ⑨ Set “BPM” to MIDI.
- ⑩ For L, C, and R, set “L/C/R Bs” and “Times” as desired.

For this example, set “L/C/R Bs” to ♩ and “Times” to 1 so that the effect will be easily understandable. The delay time will repeat at an interval of a 8th note.

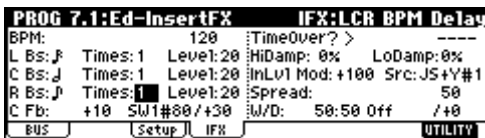

- ⑪ Set the realtime controller function to C-mode, and rotate REALTIME CONTROLS knob [4] (“TEMPO”).

When you (move the joystick away from yourself and) rotate the knob, the delay time will change.

- ⑫ Turn on the [ARP ON/OFF] key to start the arpeggiator.

Move the joystick away from yourself and select the desired arpeggio pattern.

When you rotate REALTIME CONTROLS knob [4], the delay time will change in synchronization to any changes you make in the arpeggiator tempo.

- ⚠ If you rotate the REALTIME CONTROLS knob [4] to change the tempo while the delay is sounding, noise may occur in the delay sound. This is because the delay sound becomes discontinuous, and is not a malfunction.

note For some effects, you can synchronize the LFO frequency to the tempo. Set the effect parameters “BPM/MIDI Sync” to On, and “BPM” to MIDI. For details refer to PG p.172.

Other functions

Tuning to another instrument/ Transposing

When you play this instrument together with other instruments, or along with music on a CD or tape, you may need to adjust the tuning so that the pitch matches. To adjust the tuning, use GLOBAL 1.1: System Basic page “Master Tune.” The tuning can be adjusted in a range of -50 – +50 cents (one semitone is 100 cents).

You can also transpose by changing the pitch in semitone steps. To transpose the pitch of the entire this instrument, use GLOBAL 1.1: System Basic page “Key Transpose.” The pitch can be transposed over a range of ± 1 octave.

Here we will explain how to adjust the tuning and transposition of the entire this instrument in Global mode.

- ① Press the [GLOBAL] key to enter Global mode.
- ② Press the [EXIT] key.
- ③ Press the [F1] (“Basic”) key.
- ④ To adjust the tuning, select “Master Tune.” to adjust the transposition, select “Key Transpose.”
- ⑤ Use the VALUE controllers to adjust the setting.

You can use numeric keys [0]–[9] to enter a value and press the [ENTER] key. Alternatively, you can use the [VALUE] dial, or the [INC]/[DEC] keys.

note If you wish to keep this setting after the power is turned off, you must Write the Global settings to memory. (☞ p.43)

Bypassing the effects

Normally, effects are turned on/off within each program, combination, or song, or in Sampling mode. However if you want the entire-instrument to not use any effects, you can use this Global bypass feature.

- ① Press the [GLOBAL] key to enter Global mode.
- ② Press the [EXIT] key.
- ③ Press the [F1] (“Basic”) key.
- ④ To turn off insert effect, check the “IFX Off” check box.

To turn off master effect 1, check the “MFX1 Off” check box. To turn off master effect 2, check the “MFX2 Off” check box.

Specifying the function of the Assignable Switch and Assignable Pedal

Set the assignable function of a footswitch (such as the Korg PS-1) connected to the ASSIGNABLE SWITCH jack.

This switch can act as a source for alternate modulation or effect dynamic modulation, or switch portamento on/off, control the sostenuto effect, turn the soft pedal effect on/off, turn the arpeggiator on/off, select programs or combinations (up/down), start/stop the sequencer, punch-in/out on the sequencer, or be a trigger to advance the cue list step (☞ PG p.226).

- This setting is made in GLOBAL 1.1: System, Foot page “Foot SW Assign.”

You can specify the assignable function that will be performed by a footpedal (such as the Korg XVP-10 EXP/VOL or EXP-2) connected to the ASSIGNABLE PEDAL jack.

This pedal can be used to control master volume, alternate modulation or effect dynamic modulation, portamento pitch change speed, volume, the pan following an insert effect, pan, volume, or send levels to the master effects (☞ PG p.227).

- This setting is made in GLOBAL 1.1: System, Foot page “Foot Pedal Assign.”

note You can use this as a source for alternate modulation or effect dynamic modulation, and use it to control program parameters or effect parameters. In this case, set “Foot Switch Assign” to **Foot SW (CC#82)**, and “Foot Pedal Assign” to **Foot Pedal (CC#04)**.

Here we will show how to make settings that allow an assignable switch to change programs or combinations.

- ① Connect a Korg PS-1 pedal switch (or other momentary footswitch) to the ASSIGNABLE SWITCH jack.
- ② Press the [GLOBAL] key to enter Global mode.
- ③ Press the [EXIT] key.
- ④ Press the [F3] (“Foot”) key.
- ⑤ Select “Foot SW Assign,” and select either Program Up or Program Down.

If you select **Program Up**, the next higher program number will be selected each time you press the foot switch.

If you select **Program Down**, the next lower program number will be selected each time you press the foot switch.

- ⑥ Set “Foot SW Polarity” to the polarity of the pedal you connected.

If you connected a Korg PS-1 pedal switch, select (-) **KORG Standard**. The pedal will not function correctly if you do not select the correct polarity.

note If you wish to keep this setting after the power is turned off, you must Write the Global settings to memory. (p.45)

- ⑦ Press the [PROG] key to enter PROG 1.1: Play, or press the [COMBI] key to enter COMBI 1.1: Play. Then press the foot switch, and the program/combination will change.

Selecting different Velocity and Aftertouch curves

You can change the way in which velocity or after touch will affect the volume or tone. Using this feature, you can (for example) make the volume of the notes more consistent even when they are played with varying velocities (dynamics). Each curve has its own character, so you can select the curve that is appropriate for your own playing dynamics, playing style, and the effect that you wish to obtain (PG p.124).

- ① Press the [GLOBAL] key to enter Global mode.
- ② Press the [EXIT] key.
- ③ Press the [F1] (“Basic”) key.
- ④ To change the velocity curve, select “Velocity Curve” and specify the desired curve.

To change the after touch curve, select “AfterT Curve,” and specify the desired curve.

note If you wish to keep this setting after the power is turned off, you must Write the Global settings to memory. (p.45)

note This setting will affect the operation of the entire this instrument.

note Each program has parameters that allow you to adjust the effect of velocity (playing dynamics), and the change will depend on the settings of these parameters. These parameters can be individually set in detail in Program mode.

Creating original scales

You can create your own original scales. You can create sixteen different User Octave Scales in which the pitch of each note in the octave is repeated for all octaves, and one User All Note Scale in which the pitch of each of the 128 notes can be specified independently.

note If you wish to keep this setting after the power is turned off, you must Write the Global settings to memory. (p.45)

The user scales you create here can be used by specifying the scale for a program, for each timbre of a combination, or for each track of a song (“Changing the scale”)

Changing the scale

You can specify the scale for each program, for each timbre in a combination, or for each track of a song (Sequencer mode).

These settings are made by “Type” in the following pages, and by “Use Program’s Scale” for a combination or sequencer.

Program mode	PROG 2.1: Ed-Basic, Prog Basic
Combination mode	COMBI 3.2: Ed-Param2, Other
Sequencer mode	SEQ 3.2: Param2, Other (Othr..8/Othr..16)

Here we will show how to make settings in Sequencer mode.

- ① Press the [SEQ] key to enter Sequencer mode.
- ② Press the [MENU] key, and then press the [F3] key to select “Prm2” Press the [F8] (“Open”) key.
- ③ Select the [F1] (“Othr..8”) key or the [F2] (“Othr..16”) key.
- ④ If you wish to use the scale that is specified for the program used by a track, check the “Use Prog’s Scale” check box for that track.

Tracks that are not checked will use the scale specified by Scale “Type.”

- ⑤ Set “Type (Song’s Scale)” to select the scale for the entire currently selected song.

note If you wish to keep this setting after the power is turned off, you must Write the Global settings to memory. (p.43-)

Setting the function of [SW1] and [SW2]

You can specify the function of the [SW1] and [SW2] keys (PG p.224).

The functions of the [SW1] and [SW2] keys are set independently for each program, combination, and song. In and Sampling mode, the functions of these keys are set for the entire mode.

You can specify the function that will be performed by the [SW1] and [SW2] keys, and can also select between **Toggle** (when the function will be switched on/off each time the [SW1] or [SW2] key is pressed) and **Momentary** (when the function will be on only while you continue holding the [SW1] or [SW2] key).

These settings are made by “SW1/2 Assign” in the following pages.

Program mode	PROG 2.2: Ed-Ctrl, Controls
Combination mode	COMBI 2.2: Ed-Ctrl, Controls
Sequencer mode	SEQ 2.2: Controller, Controls
Sampling mode*	SMPL 5.2: Controller, Controls

*: If the EXB-SMPL option is installed

note When you write a program or combination, the on/off status of the [SW1] and [SW2] keys is memorized.

note You can use these keys as alternate modulation or effect dynamic modulation sources, and control program parameters or effect parameters. In this case, you will normally select **SW1 Mod.(CC#80)** and **SW2 Mod.(CC#81)**.

For an example in which the [SW1] key is specified as an effect dynamic modulation source for a program and used to control an effect, refer to p.116.

note If you wish to keep this setting after the power is turned off, you must Write the Global settings to memory. (p.43-)

note The settings of Sampling mode cannot be saved.

Setting the B-mode functions of REALTIME CONTROLS [1]–[4]

You can specify the B-mode functions of REALTIME CONTROLS knobs [1]–[4]. (PG p.225)

The B-mode functions are set independently for each program, combination, or song. The functions in Sampling mode (if the separately sold EXB-SMPL option is installed) are set for the entire mode.

These settings are made by “Knob B Assign” in the following pages.

Program mode	PROG 2.2: Ed-Ctrl, Controls
Combination mode	COMBI 2.2: Ed-Ctrl, Controls
Sequencer mode	SEQ 2.2: Controller, Controls
Sampling mode*	SMPL 5.2: Controller, Controls

*: If the EXB-SMPL option is installed

note You can use these knobs as sources for alternate modulation or effect dynamic modulation, and control program parameters or effect parameters. In this case, you will normally select **Knob Mod.1(CC#17)**, **Knob Mod.2(CC#19)**, **Knob Mod.3(CC#20)**, and **Knob Mod.4(CC#21)**.

Here we will give an example of how knob [1] can be used to control the filter and amp EG attack of a program.

- ① Press the [PROG] key to enter Program mode.
- ② Press the [MENU] key, and then press the [F2] key to select “Ctrl” Press the [F8] (“Open”) key.
- ③ Select the Knob 1-B “Knob B Assign”, and select F/A Attack (CC#73).
- ④ Press the REALTIME CONTROLS [SELECT] key to select B-mode, and turn knob [1] to control the EG attack of the filter and amp.

note If you wish to keep this setting after the power is turned off, you must Write the Global settings to memory. (p.43-)

note The settings of Sampling mode cannot be saved.

Adjusting the contrast (brightness) of the LCD screen

Use the GLOBAL 1.1: System, Preference page “LCD Contrast” to make adjustments. (PG p.121, PG p.127)

Using this instrument as a data filer

MIDI exclusive data transmitted from an external device can be received by this instrument and saved on an SD card (the Data Filer function). This is done using the Media mode Save page “Save Exclusive” (PG p.154).

Tap tempo control

A tap tempo control function is available in Program, Combination, and Sequencer modes.

While the arpeggiator or sequencer is playing in any of these modes, you can control the playback tempo in real-time by lightly pressing the [TIMBRE/TRACK] key several times at the desired tempo.

This function is convenient when you want to match the playback tempo of the arpeggiator or sequencer playback to another beat in real-time.

The Tap tempo feature also provides real-time control over any BPM or tempo based effects.

The following example shows the procedure for using Tap tempo in Program mode.

- 1 In Program mode, select C004: HipHop Kit.



- 2 In the PROG 1.1: Play, select the Arp. Play page and check the “Latch” check box.



- 3 Turn on the front panel ARPEGGIATOR [ON/OFF] key.
- 4 Lightly press the [TIMBRE/TRACK] key several times at the desired beat. The tempo “J=” display in the upper right of the LCD will change according to the playback tempo.

When you play the keyboard, the arpeggiator will play a drum pattern at the specified tempo.

- 5 Lightly press the [TIMBRE/TRACK] key on the beat, and slightly shorten the intervals at which you press the key.

The playback tempo of the drum pattern will speed up slightly.

- Tap tempo control can be used whenever the [TEMPO] knob can be operated. For example, the tempo cannot be controlled while a song is playing in Sequencer mode with “Tempo Mode” (PG p.51) set to Auto.

note The tap tempo control function can also be controlled from a foot switch connected to the ASSIGNABLE FOOT SWITCH jack, as well as by the [TIMBRE/TRACK] key. (PG p.127 Global mode “Foot SW Assign”)

Shortcuts

[MENU] key + numeric keys [0]–[9] x2

- Access the various pages within each mode. Hold down the [MENU] key, and use numeric keys [0]–[9] to input a two-digit page number.

[MENU] key + [◀], [▶] keys

- Access the various pages within each mode. Hold down the [MENU] key, and use the [◀], [▶] keys to move.

[TIMBRE/TRACK] key + function keys [F1]–[F8]

- Access the parameters within each page. In pages of Combination Sequencer mode that show timbres 1–8/tracks 1–8 or 9–16 (such as COMBI 1.1: Play, Prog), hold down the [TIMBRE/TRACK] key and press the [F1 T1/T9]–[F8 T8/T16] keys to move the cursor.

[ENTER] key + numeric keys [0]–[9]

- Access the Utility menu commands of each page (up to ten items). Hold down the [ENTER] key and press a numeric key [0]–[9] to select from up to ten of the Utility menu items.

[ENTER] key + keyboard

By holding down the [ENTER] key and pressing a note on the keyboard of the TR, you can perform the following input operations.

- Input note number values or velocity values
- Select “KEY” in GLOBAL 5.1: DKit, SEQ 5.1: RPPR, RPPR Setup page

[ENTER] key + [LOCATE] key

- In Sequencer mode, set the current location as the “Location” (equivalent to the Utility menu command “Set Location”)

Appendices

Troubleshooting

If you experience problems, refer to the relevant item and take the appropriate measures.

Power does not turn on

- Is the AC/AC power supply connected to an outlet? [PG p.12](#)
- Is the [POWER] switch turned on?
Turn on the rear panel [POWER] switch.

The power is turned on, but nothing is shown in the LCD screen.

The TR functions normally when you play the keyboard or perform other operations.

- Due to changes in the surrounding temperature, the LCD screen may on rare occasions be difficult or impossible to read. If this occurs, perform the following procedure. ([PG p.127](#))
 - ① Press the [EXIT] key three times, and press the [GLOBAL] key.
 - ② Hold down the [EXIT] key, and press the [REC/ WRITE] key.
 - ③ Rotate the [VALUE] dial to adjust the LCD screen.

The power is turned on, but the LCD screen does not display normally, or an error message is displayed. There is no sound when you play the keyboard, and the TR does not function normally.

- This type of problem may occur if a data writing operation to internal memory was not completed correctly, for example if the power of the TR was turned off while a program or other data was being written. If this occurs, use the following procedure to initialize the TR's internal memory.

- ① Turn off the power.
- ② Hold down the [MENU] key and the [9] key, and turn on the power.

The TR will be initialized, and data will be written into internal memory. While the data is being written, the LCD screen will indicate "Now writing into internal memory."

No sound

- Are connections made correctly to your amp, mixer, or headphones?..... [PG p.12](#)
- Is your amp or mixer turned on?
- Is Local Control turned on?
In GLOBAL 2.1: MIDI, check the "Local Control On" check box. [PG p.130](#)
- Is the [VOLUME] slider raised? [PG p.5](#)

- If there is no sound from the OUTPUT (INDIVIDUAL) 1, 2 jacks, make sure that "BUS Select (IFX/Indiv.Out Assign)" or "Bus Select" following the insert effect is set to 1, 2, 1/2.... [PG p.112](#)
- If specific tracks in Sequencer mode do not sound, Make sure that the "PLAY/MUTE/REC" or "PLAY/MUTE" is set to **PLAY**..... [PG p.69](#)
- Make sure that the "Status" is INT or BTH. [PG p.70](#)
- Are the "Key Zone" and "Velocity Zone" set so that sound will be produced when you play?
..... [PG p.65](#)

Notes do not stop

- In PROG 2.1: Ed-Basic, select the Prog Basic page, make sure that the "Hold" check box is unchecked. [PG p.5](#)
- In GLOBAL 1.1: System, Foot page, make sure that "Damper Polarity" or "Foot SW Polarity" is set correctly.
..... [PG p.128](#)

Noise or oscillation is heard

- When using the BPM/MIDI Sync function to control the delay time of an effect, noise may occur in the delay sound. This noise is due to discontinuities in the delay sound, and is not a malfunction.
- When using an effect on the external audio source being input from AUDIO INPUT 1 and 2, oscillation may occur depending on the type of effect or on the parameter settings. Please adjust the input level, output level, and effect parameters. You need to be particularly careful when using a high-gain effect.
- After a sample edit has been executed, or after a stereo sample has been recorded, a small noise may be heard. This has no effect on the audio data that was edited or sampled.

Effects are not applied

- Are the GLOBAL 1.1: System, Basic page "IFX Off," "MFX1 Off," or "MFX2 Off" settings **checked**?
..... [PG p.124, 125](#)
- If you are in Combination, Sequencer, and master effects are not applied when you raise the "S1 (Send1 (MFX1))" or "S2 (Send2 (MFX2))" of the timbre/track, does "Return 1" or "Return 2" from the master effect need to be raised?
..... [PG p.47, 86](#)
Alternatively, has "Send 1" or "Send 2" for each oscillator of the program used by the timbre/track been lowered? [PG p.45, 84](#)

note The actual send level is determined by multiplying the send setting of each oscillator in the program with the send setting of the timbre/track.

When you loaded data, a combination or song does not sound correctly

- In the dialog box from which you saved the data, did you check the check boxes for each item that you wanted to save? [p.46](#)
- In the dialog box when saving the data, did you check the check boxes for each item that you wanted to save?
- Are the bank/number of the programs used by the song the same as when the song was created?

Playback does not start when you press the [START/STOP] key in Sequencer mode

- Is the GLOBAL 2.1: MIDI, MIDI page “MIDI Clock” set to **Internal**? [PG p.129](#)

Can't record in Sequencer mode

- In the GLOBAL 1.1: System, Preference page, is the Memory Protect “Song” check box unchecked? [PG p.127](#)
- Is the GLOBAL 2.1: MIDI, MIDI page “MIDI Clock” set to **Internal**? [PG p.129](#)

Arpeggiator does not start

- Is the [ARP ON/OFF] key turned on (lit)?
- If the arpeggiator does not start for a combination or song, make sure that “Arpeggiator Run” is checked, and that an arpeggiator is selected for “Assign.” [p.29, PG p.35, 82](#)
- Is the GLOBAL 2.1: MIDI “MIDI Clock” parameter set to **Internal**? [PG p.129](#)
- If the [ARP ON/OFF] key does not respond in GLOBAL 6.1: Arp.Pattern, you may have moved here from Sampling mode or Media mode.

No sound when the [AUDITION] key is turned on

- The Audition function is available only in Program mode.
- If no sound is played when you turn on the [AUDITION] key in Program mode, make sure that the PROG 2.1: Ed-Basic, Audition page parameter “Audition Riff” has not been turned Off. [PG p.9](#)
- If no sound is played when you turn on the [AUDITION] key in Sampling mode, check the following points.
Is a sample correctly assigned to the currently selected “Index”?
Are the “S (Start),” “LpS (Loop Start),” and “E (End)” address settings correct?..... [PG p.109](#)
- If you are in the SMPL 2.1: Sample Edit, Edit2 page, are the “S (Edit Range Start)” and “E (Edit Range End)” settings correct?..... [PG p.100](#)

RPPR does not start

- Is the SEQ 1.1: Play/REC “RPPR” setting checked? [PG p.51](#)
- Are “Assign,” “Pattern Select,” and “Track” set correctly? [p.75, PG p.73](#)
- If the GLOBAL 2.1: MIDI “MIDI Clock” parameter set to **Internal**? [PG p.129](#)

You converted GM/GS/XG format SMF data and played it in Sequencer mode, but it does not sound correctly

- Execute “GM Initialize” to initialize the settings. [PG p.54](#)
- Is GLOBAL 1.1: System, Preference page “Bank Map” set to **GM**?..... [PG p.126](#)
- Make sure that the “Status” is **INT** or **BTH**. [p.70, PG p.62](#)

Settings for oscillator 2 are not displayed

- Make sure that the PROG 2.1: Ed-Basic, Prog Basic page “Mode (Oscillator Mode)” parameter is set to **Double**. [p.51, PG p.5](#)

Data is not transmitted from the MIDI OUT connector

- If MIDI data is being transmitted from the TR via USB to your computer, transmission from the MIDI OUT connector is halted. If the USB connection is broken, transmission from the MIDI OUT connector will resume.

This instrument does not respond to incoming MIDI data

- Are all MIDI cables connected correctly? [p.12, PG p.233](#)
- Is the MIDI data being received on the channel on which it is being transmitted? [PG p.129](#)

This instrument does not respond correctly to incoming MIDI data

- Are the GLOBAL 2.1: MIDI, MIDI page MIDI Filter settings “Enable Program Change,” “Bank,” “Combi,” “Ctrl Change,” and “AfterT” each **checked**? [PG p.130](#)
- If you wish to receive MIDI exclusive messages, is the GLOBAL 2.1: MIDI, MIDI page MIDI Filter “Exclusive” item checked? [PG p.131](#)
- Does this instrument support the types of messages that are being sent to it?

Can't format the SD card

- Does the media meet the requirements for use on the TR? [p.100](#)
- Is the media inserted correctly? [p.14](#)

Can't save/load data on an SD card

- Is the card inserted correctly? [p.14](#)
- Is the card formatted?..... [p.100, PG p.156](#)

- Is the SD card set to the “protected” setting? Turn off the write protect switch, insert the card back into the slot, and perform the save or load operation once again. PG p.100

Pressing the [SAMPLING] key does not enter Sampling mode.

- Is the EXB-SMPL installed correctly? PG p.260

Cannot input sound

- Is the EXB-SMPL installed correctly? PG p.260
- Is your audio source connected to the AUDIO INPUT 1, 2 jacks? PG p.35
- Is the [LEVEL] knob raised? PG p.35
- Is the [MIC/LINE] switch set appropriately? PG p.35
- If there is no sound in Sampling mode, go to SMPL 1.1: Recording, select the Input/Pref page, and make sure that “Lvl” and “BUS” are set correctly. PG p.35, PG p.95
- If there is no sound in Program, Combination, or Sequencer modes, go to GLOBAL 1.1: System, select the Audio In page, and make sure that “Input1 Level,” “Input1 BUS Select,” “Input2 Level” and “Input2 BUS Select” are set correctly. PG p.115, PG p.128
- If sound is still not input even after you have set “Input 1 Level,” “Input 2 BUS Select,” “Input 2 Level,” and “Input 2 BUS Select” in the GLOBAL 1.1: System, Audio In page, temporarily lower the “Input 1 Level” and “Input 2 Level,” and then move to Program, Combination, or Sequencer mode. Turn return to Global mode, and make the settings once again. PG p.115

Cannot record a sample

- Are one or more SIMM modules installed? PG p.260
- Is there free memory area? PG p.120
Select a different memory bank. PG p.92
Delete unneeded samples. PG p.96
Save important samples before deleting them. PG p.96, 153

The TR does not recognize when MO media has been exchanged, and does not correctly display the media information after the exchange.

- If you are able to switch the mode setting of your MO drive between DOS/V(PC/AT) and Mac settings, please use DOS/V(PC/AT) mode. For details on changing the mode of your drive, refer to the owner’s manual for your MO drive.
- Use the Media mode Media Information page utility “Scan SCSI device” to remount the SCSI device.
- If your MO drive does not have a mode setting, or if the media exchange is not recognized even after you switch the mode, use the drive select button to select a different drive, and then re-select the MO drive.


Can’t install the driver included CD-ROM.

- Is the USB cable connected correctly?
- Is the CD-ROM inserted in your CD drive? Make sure that the CD-ROM is inserted correctly.
- Could the lens of your CD drive be dirty? Use a commercially-available lens cleaner to clean the lens.
- Are you attempting to install from a network CD drive? This software cannot be installed from a network-connected CD drive.
- Are you able to use USB? If you are using Windows XP, go to [Control Panel] → [System], and select the [Hardware] tab. In [Device Manager], check the settings for Universal Serial Bus Controller and USB Root Hub.
- Has the TR been detected as an unknown device? If you are using Windows XP, go to [Control Panel] → [System], select the [Hardware] tab, and check [Device Manager]. If the TR has not been detected correctly, it will be displayed in “Other devices” or “Unknown devices.” Reconnect the USB cable; if the TR is again displayed as an “Unknown device,” the computer has failed to detect it correctly. Delete the “Unknown device” entry, and reinstall the driver. PG p.265

Your software does not respond to the TR

- Is the USB cable connected correctly?
- Did you install the driver?
- Has your computer detected the connected TR? If you are using Windows XP, go to Control Panel → “Sounds and Audio Devices Properties” and click the Hardware tab.

If you are using Mac OS X, go to Macintosh HD → Application folder → Utility folder → “Audio MIDI Settings,” select the “MIDI Devices” tab, and check that the TR has been detected.

 Some computers may not recognize the TR because of their hardware configuration.

- Check the TR’s assignments and USB-MIDI port settings.
- The connected device or software may not support the messages you are transmitting. Refer to the owner’s manual of the connected device or software to verify that it responds to the messages you are transmitting.

Specifications and options

Specifications

System

HI (Hyper Integrated) synthesis system

Modes

Combination, Program, Sequencer, Global, Media, Sampling (if the separately sold EXB-SMPL option is installed)

Tone generator

HI (Hyper Integrated) synthesis system

Polyphony: 62 voices (62 oscillators) in single mode
31 voices (62 oscillators) in double mode

Filters: 24 dB/oct LPF with resonance
12 dB/oct LPF + HPF

Alternate modulation function

Waveform memory

64 Mbyte PCM ROM

(470 multisamples, 518 drumsamples)

If the separately sold EXB-SMPL option is installed:

Sample data RAM (SIMM): 16 Mbyte included with the EXB-SMPL (expandable up to 64 Mbyte)

Effect section

1 insert effect (stereo in/out),

2 master effects (mono in/stereo out),

1 master EQ (3-band stereo), all usable simultaneously

89 effect types (available for insert effects or master effects)

Effect dynamic modulation function

Combinations/Programs

384 user memory combinations (384 preloads)

512 user memory programs (512 preloads)

128 + 9 drum ROM programs (GM sound map compatible)

383 audition riffs

Drum Kits

24 user drum kits (16 preloads)

9 ROM GM drum kits (GM2 sound map compatible)

Dual polyphonic arpeggiator

Use two arpeggiators simultaneously
(Combination, Sequencer modes)

5 preset arpeggio patterns

216 user arpeggio patterns (216 preloads)

Sequencer

16 timbres, 16 tracks + 1 master track

Maximum capacity: 200,000 notes

Resolution ♩/192

200 songs

20 cue lists

150 preset patterns, 100 user patterns (for each song)

16 preset/16 user template songs

Supports TR format and SMF (formats 0 and 1)

RPPR (Realtime Pattern Play/Recording) function
(One set is available for each one song)

Media mode

Load, save, utility

Data filter function (save/load MIDI exclusive data)

Loading from CD-ROM (ISO 9660 level1) is supported
(if the separately sold EXB-SMPL option is installed)

Combinations, programs, drum kits, user arpeggio patterns (.PCG) created on the TRITON/TRITONpro/TRITONproX or the TRITON-Rack can be convert-loaded.

Songs (.SNG) created on the TRITON/TRITONpro/TRITONproX can be convert-loaded.

Sampling (if the separately sold EXB-SMPL option is installed)

48 kHz, 16 bit linear

Maximum sample data memory capacity 64 Mbyte
(with SIMM expansion)

4000 samples, 1000 multisamples

(128 indexes for each multisample)

Time Slice, Time Stretch, and various other editing functions

Able to load AIFF, WAVE, AKAI (S1000/3000), Korg format sample data can be loaded

Sample data can be exported in AIFF or WAVE formats

Keyboard

61 key, 76 key: synth action; velocity & aftertouch

88 key: Weighted; velocity & aftertouch.

Controllers

Joystick, [SW1]/[SW2] keys, REALTIME CONTROLS

knobs [1]-[4] and [SELECT] key, [ARP ON/OFF] key

User interface

Graphical user interface: 240 × 64 pixel LCD display

Mode keys:

[COMBI], [PROG], [SEQ], [GLOBAL], [MEDIA], [SAMPLING]

Value controllers:

[VALUE] dial, [INC]/[DEC] keys, numeric keys ([0]...[9], [-], [./ HOLD])

Cursor keys [▲], [◀](-), [▼], [▶](+),

[MENU/PAGE +/-] keys, [EXIT] key, [ENTER] key,

[COMPARE] key, [F1]...[F8](T1/T9...T8/T16) key,

[TIMBRE/TRACK] key

BANK keys:

PROG BANK: [A], [B], [C], [D], [GM]

COMBI BANK: [A], [B], [C]

SEQUENCER control keys:

[PAUSE], [REW], [FF], [LOCATE]

SEQUENCER/SAMPLING (if the separately sold EXB-SMPL option is installed) control keys:

[REC/WRITE], [START/STOP]

Other:

[AUDITION] key, [CATEGORY] key

Audio outputs

1/4" AUDIO OUTPUT (MAIN) L/MONO, R:

1/4" AUDIO OUTPUT (INDIVIDUAL) 1, 2

Output impedance 1.1 [k Ω]
(L/MONO is 550 [Ω] for mono)

Maximum output level

L/MONO, R: +12.0 [dBu]

(INDIVIDUAL)1,2: +11.6 [dBu]

Load impedance 100 [k Ω] or greater

1/4" AUDIO OUTPUT HEADPHONE

Output impedance 33 [Ω]

Maximum output level 36 [mW]

Load impedance 33 [Ω]

Audio inputs (if the separately sold EXB-SMPL option is installed)

AUDIO INPUT 1, 2

LEVEL [MIC/LINE] switch, [LEVEL] knob

Input impedance: 10 [k Ω]

Nominal level

LINE +3 [dBu] @ [INPUT] knob= min.

-30 [dBu] @ [INPUT] knob= max.

MIC -18 [dBu] @ [INPUT] knob= min.

-53 [dBu] @ [INPUT] knob= max.

Maximum level

LINE +13 [dBu] @ [INPUT] knob = min.

-20 [dBu] @ [INPUT] knob= max.

MIC -8 [dBu] @ [INPUT] knob= min.

-43 [dBu] @ [INPUT] knob= max.

Source impedance: 600 [Ω]

Control inputs

DAMPER (half-damper supported), ASSIGNABLE SWITCH/PEDAL

MIDI

MIDI IN, OUT, THRU, USB B connector

SD card slot

Usable media: 2.7-3.6 V (16 MB - 1 GB)

Other

AC power inlet, switch

Support for options

EXB-SMPL (one 16Mbyte 72-pin SIMM is included)

72-pin SIMM memory slots x 2 (for sample data RAM)

Dimensions (W x D x H)

61-key model: 1045 x 302 x 95 (mm)

76-key model: 1257 x 302 x 95 (mm)

88-key model: 1414 x 365 x 123 (mm)

Weight

61-key model: 7.8kg

76-key model: 9.2kg

88-key model: 24.1kg

Power consumption:

13W (if the EXB-SMPL option and two 32Mbyte SIMM are installed)

Included items:

CD-ROM (KORG USB-MIDI driver, Voice Name List)

AC/AC power supply 9VAC 3.0A

Operating requirements for connection to a computer

Windows

Operating system

Microsoft Windows XP Home Edition/Professional

Computer

A computer with USB connector that meets the above requirements

Macintosh

Operating system

Mac OS X 10.2 or later

Computer

An Apple Macintosh with USB connector that meets the requirements for the above operating system

Options

Expansion board

EXB-SMPL Sampling upgrade

Expression/volume pedal:

XVP-10 EXP/VOL pedal

Foot controller:

EXP-2

Damper pedal:

DS-1H

Pedal switch:

PS-1

Other:

MIDI cable

* Appearance and specifications of this product are subject to change without notice. (Aug/05)

Index

Numerics

10's HOLD 22

A

ADC OVER!..... 35, 39

After Touch..... 26

After touch curve..... 118

Alternate Modulation .. 1, 24, 56, 63

Amp EG 54

Amplifier..... 54

Arpeggiator 27, 63

Assign..... 105

Gate..... 6

Key Sync 29

Length of each note 28, 104

Length of the arpeggio note. 108

Link, Combination..... 106

Link, Program 105

Octave..... 104

on/off 27, 103, 105

Order 104

Range..... 104, 105

Strength of notes 28

Synchronization..... 111

Tempo 6, 28, 105

Timing 104

Velocity 6, 104

Arpeggio pattern 103

Assignable Foot Pedal..... 26

Assignable Foot Switch..... 26

ASSIGNABLE Pedal..... 117

ASSIGNABLE PEDAL jack 9

ASSIGNABLE Switch..... 117

ASSIGNABLE SWITCH jack..... 9

Assigning a name 44

AUDIO INPUT... 4, 9, 14, 35, 39, 87,

88, 89, 112, 114, 115, 121, 123, 125

AUDIO OUTPUT..... 2, 8, 12

Audition function 7

Audition riff 7

Auto pan 54

Auto sampling 89

Auto Song Setup 56, 62

B

BANK keys 7

Base key..... 93

Bit resolution 87

BPM 60, 92

BPM Adjust function..... 86

Broken chord 27

BUS Select

AUDIO INPUT 115

Combination, Sequencer 114

Program..... 112

Sampling..... 89

C

Cat. HOLD (Category Hold) 22

Category 7

Category Hold 16

Drumsample 98

Check box 10

CLIP! 39

COMBI BANK 7

Combination 1, 23, 33, 57

Effect 112

Organization 57

Compare function

Combination 58

Program 50

Sequencer 80

Connection

AC/AC power supply..... 12

Audio equipment 12

Audio input..... 14

Damper pedal 13

Foot switch..... 13

MIDI equipment/computer ... 13

Pedal..... 13

Constant Pitch..... 94

Continue sounding 108

Controller 24

Copy 78

Copy Key Setup..... 98

Create Control Data 84

Crossfade Loop..... 86

Cue List..... 20, 64, 73

Current page 10

Cutoff frequency 25, 53

D

Damper effect..... 13

DAMPER jack 9

Data dump 42, 47

Data filer 120

Decay Time..... 32

Detune sound..... 51

Dialog..... 11

Dmod 115

Double..... 50, 51, 54

Drum kit 97, 98

Dual arpeggiator 2, 105

Dynamic Modulation..... 1, 63, 115

E

Edit

Combination..... 57

Pattern edit..... 72

Program..... 49

Song edit..... 72

Track edit 72

Edit Buffer 44

Edit cell..... 7, 10, 16

Effect

Combination, Sequencer..... 112

Program..... 112

Sampling 112

EG..... 52

Amp (Amplifier) EG..... 54

EG-INTENSITY 25

EG-RELEASE..... 25

Filter EG 53

Pitch EG..... 52

Event Edit..... 17, 84

EXB-SMPL..... 1, 2, 9, 42, 86

Excl Group (Exclusive Group).... 99

[EXIT] key 7

External media 102

External SCSI storage media 100

F

Filter EG 53

Filter Modulation..... 53

Filter Type..... 53

Foot pedal 26

Foot switch..... 9, 13

Force OSC Mode 59

Format 100, 122

Front panel..... 5

Function button..... 10

G

Global 45, 97

GM2 3

Grid 92

Guitar input 88

H

HI (Hyper Integrated) 1

High Multisample, Low

Multisample..... 50

High pass filter 53

I	
IFX Balance	32
Index.....	36, 37, 86, 88, 91, 92, 93, 94
(INDIVIDUAL) 1, 2	9
Input setting	39
Insert effect	55, 61, 112
Combination, Sequencer	114
Program	113
Sampling	89, 114
J	
Joystick.....	5, 24
K	
Key Sync.	29, 104
Key Zone.....	57, 60
Keyboard & Index	93
Keyboard crossfade.....	58
Keyboard input.....	17
Keyboard Track	53, 54
.KMP file	102
.KSC file	102
L	
Layer.....	58, 60
LCD screen	6, 10, 120
LCD screen messages when separately sold options are installed.....	18
Level	
AUDIO INPUT	115
Program	54
Level meter	39
LFO	52, 55
Link.....	86
Combination.....	106
Program	105
Load	
Data	101
Demo data	19
Preload data	48
RPPR.....	31
Lock function	24
Loop.....	40
Sample.....	92
Song.....	66
Loop the playback	39
Song.....	63
Low Pass & High Pass	52
Low pass filter.....	53
Low Pass Resonance	52
LPF CUTOFF.....	25
M	
(MAIN) L/MONO, R.....	9
Manual sampling.....	89

Master effect.....	113
Combination, Sequencer	114
Program	113
Sampling	114
Master EQ.....	112
Combination, Sequencer	114
Program	113
Sampling	114
Master track	64
Memory protect.....	43, 80
[MENU PAGE +/-] key	7
MIDI.....	13
MIDI Channel	
Combination	59
Program.....	49
MIDI Clock.....	28, 83, 104, 111
MIDI connector	9
MIDI data file	47
MIDI filter	61
MIDI pitch bend data	52
Mode (REC Mode)	39
Mode (Sample Mode).....	92, 93
Monaural source	90
Monophonic.....	50, 59
Multisample. 1, 36, 37, 38, 50, 87, 97	
N	
Note Number.....	26
O	
Octave	24, 28, 32, 60
Arpeggiator.....	104
on/off	
power	18
Organization	
Combination	57
Program.....	49
Sampling	87
Sequencer	64
Original scale	118
OSC Select	59
Oscillator	50
Oscillator Mode.....	97
P	
Page menu.....	11
Pan	
AUDIO INPUT.....	115
Combination	59
Drum kit	99
Program.....	54
Sampling	89
Sequencer	70
Pattern.....	64
Pattern Assignable	31
.PCG file.....	102
Pedal connection	9

Pitch.....	24, 51
Combination.....	60
Drum kit.....	97, 98
Program	50, 51, 52, 56
Sampling	36, 86, 93, 94
Sequencer.....	63, 85
Pitch BPM Adj.	94
Pitch EG.....	52
Pitch Offset	108
Pitch Stretch.....	32
Playback pitch	51, 60
Polyphonic.....	50, 59
Portamento	52, 59
Preload data.....	20, 42, 48
PRELOAD PCG	20
Preset data	42
Preset pattern	64
PROG BANK.....	7
Program	1, 30
Effect.....	112
Organization.....	49
Sequencer.....	78
Q	
Quantize.....	67
R	
REALTIME CONTROLS ..	5, 25, 26, 28, 29, 32, 51, 59, 119
Realtime recording	16, 81
Auto punch-in.....	82
Loop All Tracks.....	82
Manual punch-in	82
Multi	83
Overdub	81
Overwrite.....	81
Pattern	84
Rear panel.....	8
Recording (Sample)	
Auto	35
Manual	39
Recording (Song)	
Arpeggio pattern	67
Bass track	66
Pattern	81
Track	81
Recording level	35, 39
Rename.....	44
Resolution.....	66, 77, 104
Resonance	53
RESONANCE/HPF	5, 25
Restoring the factory settings	48
REVERT	10
Riff (phrase).....	7
ROM drumsample.....	98

Routing
 AUDIO INPUT..... 115
 Combination, Sequencer..... 114
 Program 112
 Sampling..... 114
 RPPR..... 2, 31, 63, 64, 76, 83, 122

S

Sample..... 37, 87
 Recording..... 35
 Save..... 93
 Sampling..... 88
 Effect..... 112
 Organization..... 87
 Sampling frequency 87
 Save..... 42, 46, 47, 100, 102
 Scale 60, 118
 Scroll bar 11
 SCSI connector 9
 SD card..... 100
 Select
 10's HOLD
 Combination 23
 Program..... 22
 Arpeggio pattern 28
 Category
 Combination 23
 Program..... 22
 Combination..... 23
 Combination bank 23
 Combination number..... 23
 Page 15
 Parameter..... 16
 Program 21
 Program bank..... 21
 Program number 21
 Tab 16
 Select by Category 22
 Selecting a tab..... 16
 Selecting mode 15
 Selecting parameter..... 16
 Send
 AUDIO INPUT..... 115
 Combination, Sequencer..... 114
 Program 113
 Sequencer..... 2, 3, 13, 19, 31, 63
 Effect..... 112
 Organization..... 64
 Setting a parameter 16
 Shortcuts 120
 Shutdown Keys..... 31
 SIMM..... 86
 Single 32, 50
 SMF (Standard MIDI File) ... 42, 102
 .SNG file 102
 Song 64
 Song data 80
 Split..... 58, 60
 Step 107

Step recording..... 67, 84
 Stereo..... 90, 92
 Stereo source 90
 SW1, SW2 5, 24, 119
 Synchronization
 Arpeggiator..... 111
 System exclusive data..... 42, 102

T

Tab 10
 Template Song 63, 65
 Tempo
 Arpeggiator 105
 Song..... 66
 Text dialog box 11
 Three elements of sound 50
 Timbre..... 57, 58, 59, 60
 Time Slice 86
 Time Stretch 86
 Tone..... 5, 24, 50, 52, 56, 108
 Sound at the specified pitch . 109
 Track Play Loop..... 66
 Track status 80
 Transpose 60
 Tremolo/auto-pan 52
 Truncate..... 41
 Tuning..... 117

U

Use DKit Setting 99
 User arpeggio pattern..... 30, 107
 Chordal pattern 109
 Drum pattern 109
 Melody..... 109
 User pattern 64
 User template song 63
 Utility menu 10

V

VALUE controller 6, 10, 11, 16
 Velocity 26, 58, 118
 Velocity crossfading..... 61
 Velocity curve 118
 Velocity drumsample switching . 98
 Velocity multisample switching . 50
 Velocity SW L→H 51
 Velocity switch 58, 61
 Velocity zone..... 61
 Vibrato effect..... 52
 Volume... 5, 18, 24, 32, 34, 50, 52, 54,
 58, 59
 Combination 59
 Sampling..... 88
 Sequencer 70

W

Wah effect 53
 Write7, 8, 30, 32, 34, 42, 43, 49, 57, 97

Z

Zero (Use Zero) 40, 92
 Zero crosses 92
 ZOOM 92

IMPORTANT NOTICE TO CONSUMERS

This product has been manufactured according to strict specifications and voltage requirements that are applicable in the country in which it is intended that this product should be used. If you have purchased this product via the internet, through mail order, and/or via a telephone sale, you must verify that this product is intended to be used in the country in which you reside.

WARNING: Use of this product in any country other than that for which it is intended could be dangerous and could invalidate the manufacturer's or distributor's warranty.

Please also retain your receipt as proof of purchase otherwise your product may be disqualified from the manufacturer's or distributor's warranty.

KORG KORG INC.

4015-2 Yanokuchi, Inagi-city, Tokyo 206-0812 Japan

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>