



| TU500F | User Guide

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.

| TU500F | User Guide

MMBB0208245 (1.0) 



| TU500F | Guide de l'utilisateur



Une partie du contenu de ce manuel peut différer de votre téléphone, selon le logiciel qui est installé ou votre fournisseur de services.

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS:

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

1. The limited warranty for the product extends for ONE (1) year beginning on the date of purchase of the product by the original end user.
2. The limited warranty extends only to the original end user of the product and is not assignable or transferable to any subsequent purchaser/end user.
3. This warranty is good only to the original end user of the product during the warranty period as long as it is in Canada.
4. Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
5. During the applicable warranty period, LG will repair or replace at LG's sole option, without charge to the original end user, any defective component part of the phone or accessory.
6. LG may use rebuilt, reconditioned or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned or new product.

2. WHAT THIS WARRANTY DOES NOT COVER:

1. Defects or damages resulting from use of the product in other than its normal and customary manner.
2. Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation or other acts which are not the fault of LG, including damage caused by spills of food or liquids.
3. Breakage or damage to antennas unless caused directly by defects in material or workmanship.
4. The fact that the Customer Service Department at LG was not notified by the original end user of the alleged defect or malfunction of the product, during the warranty period.
5. Products which have had their serial numbers removed or made illegible.
6. Damage resulting from use of non-LG approved accessories.
7. All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.

8. Products serviced by non-authorized persons or companies.

Notes:

1. This limited warranty supersedes all other warranties, expressed or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of merchantability or fitness for a particular purpose.
2. Shipping damage is the sole responsibility of the shipping company.

3. EXCLUSION OF LIABILITY:

No other express warranty is applicable to this product.

THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS CANADA, INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

4. HOW TO GET WARRANTY SERVICE:

To obtain warranty service, please call the following telephone number from anywhere in Canada:

LG Electronics Canada, Inc.

Tel. 1-888-542-2623

www.lg.ca (see links to "Wireless Phone Service")



LG Electronics Canada Inc.

Mississauga, Ontario



| TU500F User Guide |

- English

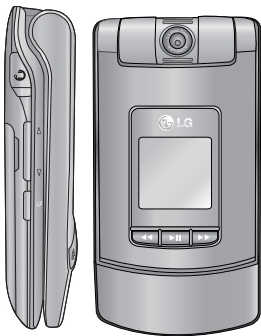


Table of Contents

For Your Safety	6	Adjusting the Volume	27
Your Phone	13	Answering a Call	28
Phone Components		Vibrate Mode (Quick)	
Task menu key	16	Signal Strength	
Display Information	17	Entering Text	29
Getting Started	19	T9 Mode	
Installing the SIM		ABC Mode	
Charging the Battery	20	123 Mode (Numbers Mode)	
Memory card slot	22	Symbol Mode	30
Inserting the memory card		Changing the Text Input Mode	
Removing the memory card		Using the T9 Mode	
Turning Your Phone		Using the ABC Mode	31
On and Off	23	Using the 123 (Numbers) Mode	32
Access Codes		Using the Symbol Mode	
Barring Password	24	T9 dictionary	33
General Functions	25	Selecting Functions and Options	34
Making a Call		In-Call Menu	35
Making a Voice/Video Call		During a Call	
Making a Call by Send Key		Conference Calls	36
Making International Calls		Menu Tree	38
Making a Call From the Contacts			
Making and answering a video call	26		

Table of Contents

Call History	41	Games	52
Missed Calls		Images	
Dialed Calls		Messaging	53
Received Calls		Video	
All Calls	42	News & Info	
Call Duration		Internet	54
		Internet Settings	55
		Security	
		Browser Settings	
Media	43	i.Fido	59
Camera		Internet	
Take Photo		Video Calling	
Record Video	44	Video/Radio	
Music Player	45	Mobile TV	
Audio & Ring Tunes	48	Music	
Graphics		More Service	
Video	49		
Other Files			
Games & Applications	50	Messages	60
Games		Fido IM	
Applications	51	New Message	65
		Inbox	69
		Drafts	70
		Outbox	
		Sent	71
Fido Mall	52		
Go To			
Music & Tones			

Table of Contents

Call Voicemail	71	Contacts	81
Watch Videomail	72	Contact List	
Templates		New Contact	
Text Templates		Caller Groups	
Multimedia Templates		Speed Dial List	
Signature	73	Copy All Contacts	82
Message Settings		Delete All Contacts	
Text Message		Service Dial Numbers	
Multimedia Message		My Numbers	
Voice and Videomail	74		
Download Messages	75	Settings	83
Tools	76	Audio & Ring Tunes	
Alarm Clock		Ring Tunes	
Calendar		Volume	
Notepad	77	Ring Alert Type	
Calculator	78	Key Tones	
Tip Calculator		Message Alert Tones	
World Clock		Display	84
Tasks		Wallpapers	
Stop Watch	79	Backlight Timer	
Unit Converter	80	Menu Styles	
Date Finder		Languages	
D-Day Counter		Dialing Fonts	
		Clocks & Calendar	

Table of Contents

Color Schemes	84	Fixed Dial Number	93
Bluetooth	85	Change Codes	
Bluetooth On/Off	86	Connection	94
Device List		Network Profiles	
Bluetooth Files		USB Connection Mode	
Bluetooth Settings	87	Network Selection	
Date & Time		Preferred Network List	
Set Date		Dial Up Networking	
Date Format		Flight Mode	95
Set Time		Check Memory	
Time Format		Common	
Auto Update	88	Reserved	
Call		SIM	
Call Forwarding		Memory Card	
Call Barring	89	Handset Information	96
Send My Number		Reset Settings	
Auto Redial		Clear Memory	
Answer Mode	90	Reset Default	
Minute Minder			
Call Waiting		Q&A	97
Call Reject		Accessories	100
Send DTMF Tones	91	Safety Guidelines	102
Video Calls		Glossary	125
Security	92		
Lock Handset			
PIN Code Request			

For Your Safety

Important Information

This user guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment.

Before You Start

Safety Instructions

WARNING! To reduce the possibility of electric shock, do not expose your phone to high humidity areas, such as the bathroom, swimming pool, etc.

Always store your phone away from heat. Never store your phone in settings that may expose it to temperatures less than 32°F or

greater than 104°F, such as outside during extreme weather conditions or in your car on a hot day. Exposure to excessive cold or heat will result in malfunction, damage and/or catastrophic failure.

Be careful when using your phone near other electronic devices. RF emissions from your mobile phone may affect nearby in adequately shielded electronic equipment. You should consult with manufacturers of any personal medical devices such as pacemakers and hearing aides to determine if they are susceptible to interference from your mobile phone. Turn off your phone in a medical facility or at a gas station. Never place your phone in a microwave oven as this will cause the battery to explode.

For Your Safety

IMPORTANT! Please read the TIA SAFETY INFORMATION on page 82 before using your phone.

Safety Information

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

- ▶ Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.
- ▶ Do not dispose of your battery by fire or with hazardous or flammable materials.
- ▶ Make sure that no sharp-edged items come into contact with the battery. There is a risk of this causing a fire.
- ▶ Store the battery in a place out of reach of children.
- ▶ Be careful that children do not swallow any parts such as rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.
- ▶ Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- ▶ When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.
- ▶ Do not use a hand-held phone while driving.
- ▶ Do not use the phone in areas where its use is prohibited. (For example: aircraft).

For Your Safety

- ▶ Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.
 - ▶ Never store your phone in temperatures less than - 4°F or greater than 122°F.
 - ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
 - ▶ Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
 - ▶ Do not use your phone in high explosive areas as the phone may generate sparks.
 - ▶ Do not damage the power cord by bending, twisting, pulling, or heating.
- Do not use the plug if it is loose as it may cause a fire or electric shock.
- ▶ Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
 - ▶ Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
 - ▶ Do not disassemble the phone.
 - ▶ Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
 - ▶ Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.

For Your Safety

- ▶ Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- ▶ Do not hold or let the antenna come in contact with your body during a call.
- ▶ An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.
- ▶ Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Memory card information and care

- ▶ Always insert/ remove the memory card while the handset power is off. If you remove it while the power is on, it may be damaged.
- ▶ If a damage cannot be fixed, format the memory card.
- ▶ The memory card cannot be used for recording copyright-protected data.
- ▶ Do not write forcefully on the memo area.
- ▶ Carry and store the memory card in its case.
- ▶ Do not allow the memory card to get wet.
- ▶ Do not leave the memory card in extremely hot location.
- ▶ Do not disassemble or modify the memory card.

For Your Safety

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

CAUTION

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could

impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with skin, a minor burn may result. Contact your local dealer for a replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.6 inches (1.5cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches(1.5cm) must be maintained between the user s body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used.

For Your Safety

Body-worn accessories that cannot maintain 0.6 inches(1.5cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Vehicle Mounted External Antenna (optional, if available)

A minimum separation distance of 8 inches (20cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions:
(1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

Cautions for Battery

- ▶ Do not disassemble.
- ▶ Do not short-circuit.
- ▶ Do not expose to high temperature: 60°C (140°F).]
- ▶ Do not incinerate.

For Your Safety

Battery Disposal

- ▶ Please dispose of your battery properly or bring to your local wireless carrier for recycling.
- ▶ Do not dispose in fire or with hazardous or flammable materials.

Adapter (Charger) Cautions

- ▶ Using the wrong battery charger could damage your phone and void your warranty.
- ▶ The adapter or battery charger is intended for indoor use only.

Do not expose the adapter or battery charger to direct sunlight or use it in places with high humidity, such as the bathroom.

Avoid damage to your hearing


- ▶ Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that

you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- ▶ If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Your Phone

Phone Components

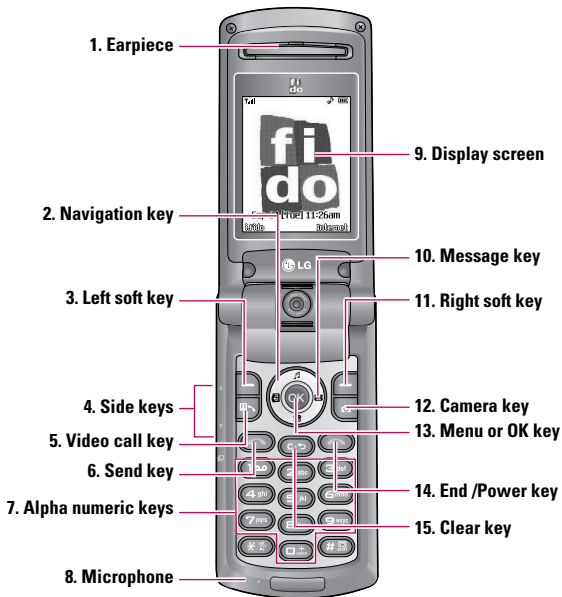

Your Phone

Your Phone's Features

1. Earpiece

2. Navigation key: Use for quick access to phone functions.

3,11. Left soft key/Right soft key:

Each of these keys performs the functions indicated by the text on the display immediately above them.

4. Side keys: These keys are used to control the volume of the ring in standby mode and speaker volume during a call.

5. Video call key: To make and answer a video call.

6. Send key: You can dial a phone number and answer incoming calls. Press this key in standby mode to quickly access the most recent incoming, outgoing and missed calls quickly.

7. Alphanumeric keys: These keys are used to dial a number in standby mode and to enter

numbers or characters in edit mode.

8. Microphone: Can be muted during a call for privacy.

9. Display screen: Displays phone status icons, menu items, Web information, pictures and more in full color.

10. Message key: Use to retrieve or send text messages.


12. Camera key: Press this key to use the camera feature or to go directly to camera mode.

13. Menu or OK key: Press this key in standby mode to access the main menu. Allows you to select and confirm menu options.


14. End/Power key: Allows you to power the phone on or off, end calls, or return to Standby Mode.


15. Clear key: Allows you to delete the characters entered or to go back to the previous screen.

Your Phone

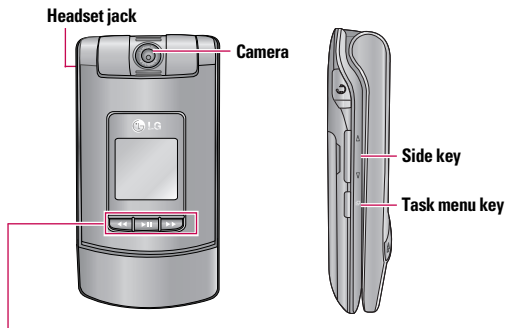


Music player hot keys

 : (on the play list) Moves the cursor to the previous track. (during playback) Rewinds the current track. Press and hold down this key until you find the spot you'd like to listen to.

 : Press this key twice to activate the music player. The play list is displayed. (Note: When there is no music in the play list,

"No Songs" displays and it goes back to standby mode.) Press once again to play the music.

 : (on the play list) Moves the cursor to the next track. (during playback) Fast forwards the current track. Press and hold down this key until you find the spot you'd like to listen to.

Your Phone

Note

- ▶ Music Player Hot keys only work when the folder is closed.

Task menu key


Multitask simultaneously with voice and data - browse the web, make calls, play games, send and receive messages, and listen to MP3s. All at once.

When you want to start a new task while a task is running already

For example, to play a MP3 file while you write a message:

1. Press and hold the Task menu key. In idle mode, you can also press the Task key shortly and select the [Menu] by pressing the left soft key to the same screen.

2. Select MP3 Player.

The Multitasking icon  will appear on the annunciator area.


3. Play a music file you want to listen to.

When you want to identify running tasks and enter the menu for a task among them

For example, to move to Music Player while you write a message:

1. Press the Task menu key.
2. The Task Menu will be displayed.
3. Identify the running tasks using the up and down navigation keys.
4. Select the Music Player task from the menu and press OK. You will be moved to the selected task.

Display Information

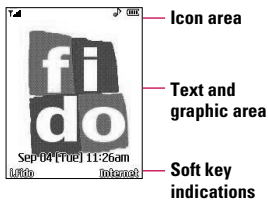












Area	Description
First line	Displays various icons.
Middle lines	Display messages, instructions and any information that you enter, such as number to be dialed.
Last line	Shows the functions currently assigned to the two soft keys.






On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.

Icon	Description
	Indicates the strength of the 3G network signal.
	Indicates the strength of the network signal.
	Indicates that the EDGE service is available. Connection to the EDGE service allows you to transfer data at a speed of 200Kb/s (depending on network availability). Check with your operator for network coverage and service availability.
	Indicates that GPRS service is available.
	Indicates that Flight mode has been activated.
	Indicates the status of the battery charge.
	Indicates that a call is in progress.

Your Phone

Icon	Description
	Indicates that the alarm has been set and is on.
	Indicates the Schedule function.
	Indicates the receipt of a message.
	Indicates the receipt of a Voicemail.
	Indicates that Ring has been set for alert.
	Indicates that Ring and vibration has been set for alert.
	Indicates that Silent has been set for alert.
	Indicates that Vibration has been set for alert.
	Indicates that the speakerphone has been activated.
	Indicates that the Bluetooth® function has been activated.
	Indicates that the data is being transmitted using a Bluetooth connection.

Icon	Description
	Indicates that the connection to a headset with Bluetooth has been activated.
	Indicates that the connection to a hands-free with Bluetooth has been activated.
	Indicates that the connection to a stereo Bluetooth device has been activated.
	Indicates that the connection to a hand-free & stereo with Bluetooth has been activated.
	Indicates that the Multitasking function has been activated.

* The **Bluetooth**® word mark and logos are owned by the **Bluetooth SIG**, Inc. and any use of such marks by LG Electronics is under license. Other trademarks and trade names are those of their respective owners.


Getting Started


Installing the SIM

When you subscribe to a cellular network, you are provided with a plug-in SIM loaded with your subscription details, such as your PIN, any optional services available and many others.


Important!

The plug-in SIM and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM out of the reach of small children.

1. If necessary, switch off the phone by holding down the  [END] key until the power-off image appears.
2. Remove the battery. To do so:

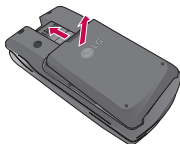


3. Slide the SIM into the SIM socket so that it locks the card into place. Make sure that the notched corner is at the top left and the gold contacts of the card face into the phone.

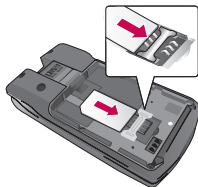


Note

When you need to remove the SIM, slide it, as shown, and take it out of the socket.

Getting Started

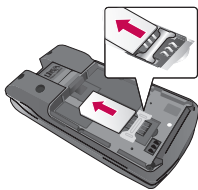

4. To insert the battery, align the golden contacts of the battery with the corresponding connectors on the battery compartment. Press down on the opposite end of the battery until it snaps into place.

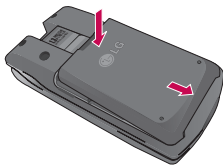


5. Attach back cover by sliding it up into position until it clicks.

Charging the Battery

Use of unauthorized accessories could damage your phone and void your warranty.

To use the travel charger provided with your phone:

1. With the battery in position in the phone, connect the lead from the travel charger to the bottom of the phone. Check that the arrow on the lead connector is facing towards the front of the phone.
2. Connect the travel charger to a standard AC wall outlet. Only use the travel charger that comes with the package.

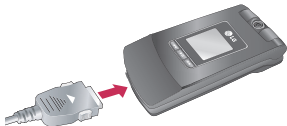


Getting Started

Warning

The travel charger must be unplugged before you remove the battery, otherwise, the phone could be damaged.

- When charging is finished, disconnect the travel charger from the phone by pressing on the grey tabs on both sides of the connector while pulling the connector out.

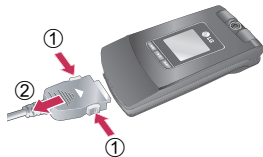

Note

- ▶ If your phone is powered on while charging, you'll see the bars on the battery indicator icon cycle. When the battery is fully charged, the bars on the battery indicator icon will flash on and off.

If the battery fails to charge completely:

- ▶ After turning the phone on and off, please attempt to recharge the battery.
- ▶ After detaching and reattaching the battery, please attempt to recharge the battery.

Getting Started

Memory card slot

The TU500F supports the microSD memory card. The memory card can be inserted into the side of the TU500F device. You can use this card to save data files such as MP3 songs.

Note


Only use memory cards that have been approved by the manufacturer. Some memory cards might not be compliant with the handset.

Inserting the memory card

Insert the memory card into the slot until the memory card is fully inserted into the slot, as shown in the figure below:


Note

The gold connectors must be face down and inserted first into the memory card slot.

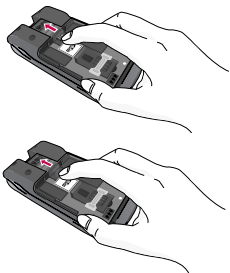



Removing the memory card

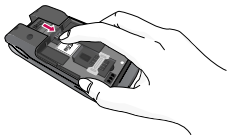1. Push the memory card down into the slot with the tip of your finger.
2. Carefully pull the memory card out of slot.



Getting Started

Turning Your Phone On and Off


1. Hold down the  [END] key until the phone switches on.
2. If the phone asks for a PIN, enter the PIN and press the  key.

The phone searches for your network and after finding it goes to the idle screen as illustrated below. From the idle screen, you can make or receive a call.



Note

The display language is preset to Automatic at the factory. To change the language, use the Language menu option (Menu 9.2.5).

3. When you wish to switch the phone off, hold down the  [END] key until the power-off image displays.

Access Codes

You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes can be changed by using the **Change Codes** feature (Menu 9.6.4).

Getting Started

Security code (4 digits)

The security code protects the unauthorized use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the Restore Factory Settings menu. The security code default setting can be modified from the Security Settings menu.

Barring Password






The barring password function is required when you use the Call Barring function.

The password is obtained from the service provider when you subscribe to this function.


General Functions

Making a Call

Making a Voice/Video Call

1. Make sure your phone is powered on.
2. Enter a phone number including the area code. To edit a number on the display screen, simply press the  key to erase one digit at a time.
 - ▶ Press and hold the  key to erase the entire number.
3. Press the  [SEND] key to make a voice call. Press the  [Video Call] key to make a video call.
4. When finished, press the  [END] key.



Making a Call by Send Key

1. Press the  [SEND] key, and the most recent incoming, outgoing and missed phone numbers will be displayed.


2. Select the desired number by using the navigation key.

3. Press the  [SEND] key.

Making International Calls

1. Press and hold the  key and the international access character '+' will appear.
2. Enter the country code, area code, and the phone number.
3. Press the  [SEND] key.



Ending a Call

When you have finished a call, press the  [END] key.

Making a Voice/Video From the Contacts

You can store names and phone numbers dialed frequently in the SIM as well as in the phone memory known as the Contacts.

General Functions

You can dial a number by simply selecting a name in the contacts and pressing the  [SEND] key. To make a video call press the  key.



Making and answering a video call


Note

- ▶ Only the default ringtone can be heard when there is an incoming call of a Video Call.

You can make a video call in a 3G covered service area. If the called user has a 3G video phone in a 3G covered service area, the call will be established. You can also answer a video call for video incoming call. To make/answer a video call, do the following.

1. Input the phone number using the keypad, or select the phone number from the calls made/received lists.

- ▶ To correct mistakes, press the  key briefly to delete the last number, or press and hold the  key to delete all numbers.

2. If you do not want to use the speakerphone, ensure you have the headset plugged in.
3. To start the video function, press  .

Note

- ▶ The video call may take some time to connect. Please be patient. The connection time will also depend on how quickly the other party answers the call. While the video call is connecting, you will see your own images; after the other party has answered, their image will be displayed on screen.

4. Adjust the camera position if necessary.

General Functions

5. You can access the following options by pressing the right soft key [Options].

- ▶ End Call
- ▶ Hide My Picture
- ▶ Capture
- ▶ View sender number
- ▶ Settings: You can set the camera related options.
 - Zoom: x1 / x2
 - Night Mode: On / Off
 - Quality: Super Fine / Fine
 - Rev Cam: Off / On

Note

▶ When in a Video Call:

If the camera is rotated away from the user, the image transmitted to the other person will appear upside down. To reverse the image being transmitted, simply press the Camera button on the keypad. Pressing the Camera button again will reverse the image again.

▶ Others

- Contacts: You can save the number in the Address Book.
- Messaging: You can send a text message or a multimedia message.
- Email: You can send an email.
- Write Note: You can take notes.

6. Press the end key to finish the call, or close the handset.

Adjusting the Volume



During a call, if you want to adjust the earpiece volume, use the side keys of the phone.

In idle mode, you can adjust the ring volume using the side keys.

General Functions


Answering a Call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Contact) is displayed.

1. Open the flip and press the  [SEND] key or the left soft key to answer an incoming call. If **Any Key** has been set as the answer mode (Menu 9.5.5), any key press will answer a call except for the  [END] key or the right soft key.

Note


- ▶ To reject an incoming call, press and hold the side keys on the left side of the phone.
- ▶ If **Flip Open** has been set as the Answer Mode (Menu 9.5.5), you do not need to press any key. You can answer the call simply by opening the flip.

2. End the call by closing the phone or pressing the  [END] key.

Notice

You can answer a call while using the Contact or other menu features.

Vibrate Mode (Quick)

Vibrate Mode can be activated by pressing and holding down the  [Star] key.

Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator on your phone's display screen.

General Functions

Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Address Book, writing a message, or creating scheduling events in the calendar all require entering text.

The following text input methods are available on the phone.

T9 Mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter.


The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode (Numbers Mode)

Type numbers using one keystroke per number.

To change to 123 mode in a text entry field, press  key until 123 mode is displayed.

A long press changes the mode to 123.

General Functions


Symbol Mode

This mode allows you to enter special characters.

Note

You can select a different T9 language from the menu option. The default setting on the phone is T9 disabled mode.



Changing the Text Input Mode


Change the text input mode by pressing . You can check the current text input mode in the upper right corner of the screen.

Using the T9 Mode


The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on a built-in dictionary.



As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.


- ▶ The word changes as letters are typed - ignore what's on the screen until the word is typed completely.
- ▶ If the word is still incorrect after typing completely, press the  [Star] key once or more to cycle through the other word options.
- ▶ If the desired word is missing from the word choices list, add it by using the ABC mode.




General Functions

2. Enter the whole word before editing or deleting any keystrokes.
3. Complete each word with a space by pressing the  key or the right navigation key.

To delete letters, press . Press and hold down  to erase the letters continuously.

Notice

To exit the text input mode without saving your input, press the  [END] key.

2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to erase the letters continuously.

Note

Refer to the table below for more information on the characters available using the keys.

Using the ABC Mode

Use the keypad keys to enter your text.

1. Press the key labeled with the required letter:
 - ▶ Once for the first letter
 - ▶ Twice for the second letter
 - ▶ And so on

General Functions


Key	Characters in the Order Display	
	Upper Case	Lower Case
1	.,'@?!-:/1	.,'@?!-:/1
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	Space Key, 0 (Long press)	Space Key, 0 (Long press)

Using the 123 (Numbers) Mode

The 123 Mode enables you to enter numbers in a text message (a telephone number, for example) more quickly. Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Using the Symbol Mode

The Symbol Mode enables you to enter various symbols or special characters.

To enter a symbol, press the  [Star] key. Use the navigation keys to select the desired symbol and press the [OK] key.



General Functions

T9 dictionary

The T9 dictionary is a feature that allows the user to add any unique or personal words to the T9 standard language database.

Within the T9 dictionary function, the user can add, modify, delete or reset personal words.

Selecting Functions and Options

Your phone offers a set of functions that allow you to customize the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked the left soft  key and the right soft  key. Each menu and sub-menu allows you to view and alter the settings of a particular function.

Soft key functions vary depending on the mode of the phone. The label on the bottom of the display screen immediately above the soft keys indicates the current function.

Press the left soft key to access the available i.Fido.



Press the right soft key to access the available Internet.

Press the key to access the available Menu. A short press allows you to select and confirm menu options.

In-Call Menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the right soft key [**Options**].


During a Call

The menu displayed on the handset screen during a call is different from the default main menu displayed when in idle screen, and the options are described below.


Making a Second Call


You can select a number you wish to dial from the Address Book to make a second call. Press the right soft key then select Contacts.

Swapping Between Two Calls



To switch between two calls, press the  [SEND] key or the right soft key, and then select **Swap**.

Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the  [SEND] key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting. This feature, known as **Call Waiting**, is only available if your network supports it.

If Call Waiting is on, you can put the first call on hold and answer the second call, by pressing the  [SEND] key.

Rejecting an Incoming Call


You can reject an incoming call without answering by simply pressing the  [END] key. During a call, you can reject an incoming call by pressing the  [END] key.

In-Call Menu

Muting the Microphone

You can mute the microphone during a call by pressing the left soft key **[Mute]**. The handset can be unmuted by pressing the left soft key **[Unmute]**. When the handset is muted, the caller cannot hear you, but you can still hear the caller.

Using the Speakerphone

You can use the integrated Speakerphone during a call by pressing the  key. The loudspeaker is automatically deactivated when you end the call.



Warning

Due to higher volume levels, don't place the phone near your ear while the speakerphone is enabled.

Conference Calls

The conference service provides you with the ability to have a simultaneous conversation with more than one caller. The conference call feature can be used only if your network service provider supports this feature. A conference call can only be set up when you have one call active and one call on hold, meaning both calls must have been answered. Once a conference call is set up, calls may be added, disconnected or separated (that is, removed from the conference call but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu. The maximum number of callers in a conference call is five. Once started, you are in control of the conference call, and only you can add calls to the conference call.


Making a Second Call

You can make a second call while currently on a call simply by entering the second number and pressing the  [SEND] key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls, by pressing the  [SEND] key.

Setting Up a Conference Call

To set up a conference call, place one call on hold, conference in the second active call by pressing the right soft key and select the Join Calls sub menu option from the Conference Call menu.

Activate the Conference Call on Hold

To activate a conference call on hold, press the  [SEND] key.


Adding Calls to the Conference Call

To add a call to an existing conference call, press the right soft key, and then select the Join Calls sub menu from the Conference Call option.

Private Call in a Conference Call

To have a private call with one caller from a conference call, press the right soft key and select the Private Menu from the Conference Call option. When the numbers of the callers are displayed, select the one you wish to speak in private.

Ending a Conference Call

Currently active conference call can be disconnected by pressing the  [END] key.

Menu Tree

The following illustration shows the available menu structure and indicates the:

- ▶ Number assigned to each menu option.
- ▶ Page where you can find the feature description.

1. Call History	
1.1 Missed Calls	
1.2 Dialed Calls	
1.3 Received Calls	
1.4 All Calls	
1.5 Call Duration	
2. Media	
2.1 Camera	
2.2 Music Player	
2.3 Audio & Ring Tunes	
2.4 Graphics	
2.5 Video	
2.6 Other Files	
	3. Games & Applications
	3.1 Games
	3.2 Applications
	4. Fido Mall
	4.1 Go To
	4.2 Music & Tones
	4.3 Games
	4.4 Images
	4.5 Messaging
	4.6 Video
	4.7 News & Info
	4.8 Internet
	4.9 Internet Settings

Menu Tree

5. i.Fido
5.1 Internet
5.2 Video Calling
5.3 Video/Radio
5.4 Mobile TV
5.5 Music
5.6 More Service
6. Messages
6.1 Fido IM
6.2 New Message
6.3 Inbox
6.4 Drafts
6.5 Outbox
6.6 Sent
6.7 Call Voicemail
6.8 Watch Videomail
6.9 Templates
6.0 Message Settings

7. Tools
7.1 Alarm Clock
7.2 Calendar
7.3 Notepad
7.4 Calculator
7.5 Tip Calculator
7.6 World Clock
7.7 Tasks
7.8 Stop Watch
7.9 Unit Converter
7.0 Date Finder
7.* D-Day Counter

Menu Tree

8. Contacts
8.1 Contact List
8.2 New Contact
8.3 Caller Groups
8.4 Speed Dial List
8.5 Copy All Contacts
8.6 Delete All Contacts
8.7 Service Dial Numbers
8.8 My Numbers

9. Settings
9.1 Audio & Ring Tunes
9.2 Display
9.3 Bluetooth
9.4 Date & Time
9.5 Call
9.6 Security
9.7 Connection
9.8 Flight Mode
9.9 Check Memory
9.0 Handset Information
9.* Reset Settings

Call History

You can check the record of missed, received, and dialed calls only if the network supports Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time of the call. You can also view call times.

Missed Calls Menu 1.1

- View the number, if available, and call it or save it in the Address Book
- Enter a new name for the number and save both in the Address Book
- Send a message using this number
- Delete the call from the list

Dialed Calls Menu 1.2

- View the number, if available, and call it or save it in the Address Book
- Enter a new name for the number and save both in the Address Book
- Send a message using this number
- Delete the call from the list

Received Calls Menu 1.3

- View the number, if available, and call it or save it in the Address Book
- Enter a new name for the number and save both in the Address Book
- Send a message using this number
- Delete the call from the list

Call History

All Calls

Menu 1.4

Allows you to view all of missed, received, and dialed call records.

Call Duration

Menu 1.5

This allows you to view the duration of incoming and outgoing calls. You can also reset the call times. The following timers are available:

Last Call

Length of the last call.

Received Calls

Length of the incoming calls.

Dialed Calls

Length of outgoing calls.

All Calls

Total length of all calls made and incoming calls received since the timer was last reset.

Camera

Menu 2.1

Take Photo (Menu 2.1.1)

Using the camera module built into your phone, you can take pictures of people or events while on the move. Additionally, you can send photos to other people in a picture message. The right soft key [Options] will bring up the following options.

- ▶ **Change to Video Mode:** Go to the video application, enables you to record a video clip.
- ▶ **Resolution:** Sets the image size to 1280*960 (default), 640*480, 320*240 or 160*120. The selected image size appears on the capture screen.
- ▶ **Quality:** You can select the desired quality of photo by selecting either Super Fine, Fine or Normal mode by using the navigation keys.

- ▶ **Reverse View:** Allows you to reverse the image by using the Side Keys.
- ▶ **View Full Screen:** Allows you to view the subject in full screen.
- ▶ **Self Timer:** Determines the camera timer.
- ▶ **Advanced Settings**
 - **White Balance:** This adjusts the Light Effect level and you can select from the following options: Auto / Daylight / Incandescent / Cloudy / Fluorescent / Night Mode - Color
 - **Color Effect:** Allows you to apply special effects to the picture. Press the left or right navigation key to find the tone you want to use from the following options: Color, Sepia, Mono and Negative.

Media

- **Shutter Tones:** Allows you to select a sound when you press the shutter. Tone 1 / Tone 2 / Tone 3 / Off

- ▶ **Default Settings:** This restores the default camera settings (Size, Brightness, Zoom, etc.).


Note

In Take Photo mode, you can adjust the zoom scale by using the up/down navigation keys. The maximum zoom scale depends on the resolution as follows.

Resolution	Zoom scale
1280*960	x1
640*480	x1~x2
320*240	x1~x2
160*120	x1~x4

In Take Photo mode, you can adjust the brightness by using the left/right navigation key.

Record Video (Menu 2.1.2)

You can record a video clip in this menu by pressing the Camera key. Before starting to record, press the right soft key [Options] to set the following values. Select the desired value and press the  key to confirm.

- ▶ **Change to Photo Mode:** Go to the camera application which enables you to take a still picture.
- ▶ **Video Record Mode:** Sets the recording mode to either MMS Video Mode or General Mode.
- ▶ **Quality:** Determines the quality of a video clip.
- ▶ **Reverse View:** Allows you to reverse the image.
- ▶ **White Balance:** This adjusts the light effect level and you can select from the following options:

Auto / Daylight / Incandescent / Cloudy / Fluorescent/ Night mode.

- ▶ **Color Effects:** Allows you to apply special effects to the video clip. Press the Left/Right Navigation Keys to find the tone you want to use from the following options: Color, Sepia, Mono and Negative.
- ▶ **Default Settings:** This restores the default camera settings (Size, Brightness, Zoom, etc.).

Note

In Video Record mode, you can adjust the zoom scale by using the up/down navigation keys. The maximum zoom scale depends on the resolution as follows.

Resolution	Zoom scale
320*240	x1~x2
176*144	x1~x2

In Record Video mode, you can adjust the brightness by using the left/right navigation keys.

Music Player

Menu 2.2

- ▶ **All Songs:** You can view the entire playlist in the internal/external memory.
- ▶ **Playlists:** You can create your own playlists by choosing songs from the All Songs menu list.
- ▶ **Shuffle Songs:** Plays music files in random order.
- ▶ **Settings**
 - **Set Shuffle:** Plays all tracks in random order.
 - **Set Repeat:** Allows you to set the play mode such as Repeat One, All or Off.
 - **Visualization:** Allows you to select the desired equalizer on the main screen.

Media

- **Equalizer:** Allows you to select the desired sound style.

Note

Copyrights of music files may be protected by copyright and intellectual property laws. Therefore, it may be required to obtain necessary permissions or licenses before you can reproduce or copy the materials. In some countries, national law prohibits copying of copyrighted materials for personal archive as well. Prior to downloading or copying the files, please ensure that you adhere to the applicable laws and laws of corresponding countries or regions regarding the Terms of Use of materials.

Transferring Music

Listen to music on your phone.

Transfer your favorite tunes today!

1. You must convert your music to either .MP3, .AAC, or .AAC+ format using the media player of your choice.
2. Remove the battery and insert the microSD™ card* (gold contacts facing down) into the slot at the top of the phone.
3. Power on the phone and connect it to your PC using a USB data cable.*
4. When the Hardware Wizard pops up, click **Cancel**.
5. The PC recognizes the phone as a **Removable Disk** under **My Computer**.

Open the folder where your music is stored and transfer your files by dragging and dropping them onto the **Removable Disk** icon.

6. When finished, press the **Right Soft Key for Exit** and disconnect the USB cable.

Warning

Do not disconnect phone while file transfer is in progress.



Requirement: Windows 2000 or later Not compatible with Mac OS.



*microSD card and USB data cable sold separately



Note

The number of files you can store depends on the size and format options of your memory card.

Playing Music

To listen to music that you have transferred to your phone, follow these quick easy steps:

Playing Music with the Flip Open

1. Press the **OK** Key, select **Media(2) Music Player (2)**, then **All Songs (1)** or **Playlists (2)**. Select a song or playlist.

Media

2. Press **OK** to play/pause. Press **up** or **down** on the Navigation Key to change the volume, and **left** or **right** to go to the previous or next song.
3. Press the **Left Soft Key** for **Minimize** to access other phone functionality while music is playing.

Playing Music with the Flip Closed

1. Press and hold the **▶/|| Key**. Select **All Songs** or a playlist. Use the left side volume keys to scroll.
2. Press **▶/||** to play/pause the music. Use the **◀◀** or **▶▶** keys to go to the previous or next song.
3. Press and hold the **▶/|| Key** to exit the music player.

Audio & Ring Tunes

Menu 2.3

- ▶ **Download Ring Tunes:** This menu option connects to Fido's ringtone download site.
- ▶ **Record Voice:** You can record your own audio by pressing the center key [OK].
- ▶ **Files:** You can view the audio files in the list.

Graphics

Menu 2.4

- ▶ **Download Graphics:** This menu option connects to Fido's graphic download site.

Note

Additional charges may be incurred when downloading graphics. Contact your service provider for further information.


- ▶ **Take Photo:** You can take your own photo by pressing the center key [OK].
- ▶ **Make Animated GIF:** You can make an animation file with the selected images in the list.
- ▶ **Files:** You can view the graphic files in the list.

Video

Menu 2.5

- ▶ **Download TV/Video:** This menu option connects to Fido's tv/video download site.
- ▶ **Record Video:** You can record your own video by pressing the center key [OK].
- ▶ **Files:** You can view the video files in the list.

Note

DRM (Digital Rights Management) Contents Copyright protected contents. DRM sometimes restricts some functions, such as send, and edit. The  indicates content controlled by DRM protection.

Other Files

Menu 2.6

When you receive files of an undefined format (such as .vcs, .vcf, etc.) via E-mail, the files are saved in this folder.

The following [Options] are available.

- ▶ **Delete:** You can delete the selected file.
- ▶ **Rename:** You can edit the name of the selected file.
- ▶ **New Folder:** You can create a new folder.
- ▶ **Sort By:** You can sort the folders by name, date and type.
- ▶ **Delete All:** You can delete all files.
- ▶ **Multi Delete:** You can delete several files at once.
- ▶ **Information:** You can view information about the selected folder.

Games & Applications

Games

Menu 3.1

Java is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard Netscape or MS Internet Explorer browsers, Java MIDlet can be downloaded using a WAP enabled phone. Depending on the service provider, Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed within the Games menu where you can select, execute or delete. Java program files saved in the phone are in .JAD and .JAR formats.

Note

The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.

Warning

Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment. J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.

- ▶ **Download Games:** This menu option connects to Fido's game download site.
- ▶ **Games List:** You can see the default and downloaded games in the list.

Games & Applications

Applications

Menu 3.2

This menu displays the list of Java programs downloaded using WAP. All previous downloaded programs can be selected, deleted, or viewed in detail within the Application menu.

Fido Mall

Go To

Menu 4.1

This menu option connects to Fido' application download site. This allows users to search the various applications by connecting to the Internet.

Music & Tones

Menu 4.2

This menu option connects to Fido' Music and Tones download site.

Note

Additional charges may incur when downloading ringtone. Contact your service provider for further information.

Games

Menu 4.3

This menu option connects to Fido' game download site. This allows users to download the various games by connecting to the Internet.

Note

Additional charges may incur when downloading games. Contact your service provider for further information.

Images

Menu 4.4

This menu option connects to Fido' images download site.

Note

Additional charges may incur when downloading graphics. Contact your service provider for further information.

Messaging

Menu 4.5

This menu option connects to Fido' Messaging site.

Note

Additional charges may incur when downloading graphics. Contact your service provider for further information.

News & Info

Menu 4.7

This menu option connects to Fido' application download site. This allows users to get the general information by connecting to the Internet.

Video

Menu 4.6

This menu option connects to Fido' Video site.


Note

Additional charges may incur when downloading graphics. Contact your service provider for further information.

Fido Mall

Internet

Menu 4.8

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports, and flight information. These services are specially designed for mobile phones and they are maintained by the WAP service providers. Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services. To exit the browser at any time, press the  key. The idle screen is displayed.

Navigating with the WAP Browser

You can surf the Internet using either the phone keys or the WAP Browser menu.

Using the Phone Keys

When surfing the Internet, the phone keys function differently from the phone mode.

Key	Description
up/down navigation key	Scroll each line of the content area

Using the WAP Browser Menu

There are various menu options available when surfing the Wireless Web.

Note

The WAP Browser menus may vary, depending on your version of the browser.

Internet Settings Menu 4.9

Security (Menu 4.9.1)

A list of the available certificates is shown.

- ▶ **Certificates:** You can see the list of certificates and view them in detail.
- ▶ **Clear Session:** Removes the secure session.

Browser Settings (Menu 4.9.2)

▶ Accounts

This includes the network information used to connect the browser to the Internet.

Select the desired account by pressing the soft key, which is labelled as "Activate". This will activate the account that will be used for future connection. Fido WAP is the predefined account that is set as default.

- **Activate:** Select the account among the list of accounts, so it can be used for future connection.
- **View:** Allows you to see the specific account information.
- **Edit:** Allows you to change the account information.
- **Delete:** Allows you to delete the account.
- **New:** Allows you to create a maximum of 20 new accounts.

Note

You cannot edit and delete pre-installed accounts.

In order to create a new account, please fill in the network information.

- 1. Account Name:** Name associated with new account.
- 2. Homepage:** Homepage URL

Fido Mall

- 3. Connection Mode:** Select from UDP(CO), UDP(CL), TCP with Proxy, TCP without Proxy
- 4. Proxy Address:** Proxy server address
- 5. Proxy Port Number:** Proxy server's port number
- 6. Security:** Select the secure or non-secure mode.
- 7. Time Out:** Values between 10 to 600 seconds
- 8. Network Profiles:** You can choose one from the network profiles. Note you can create a new network profile by selecting the list option on the center key.

Note

1. The account information will be available from your operator.
2. Creating or editing an account requires care. The browser cannot connect to the Internet if the account information is not correct.

► Cache Settings

The web pages you have accessed are stored in the memory of the phone.

- **Clear Cache:** Remove all cached data in the memory.
- **Allow Cache:** Set a value to determine whether a connection attempt is made through the cache or not.

Note

A cache is a buffer memory, which is used to store data temporarily, especially when it is online.

► Cookie Settings

The information or services you have accessed are stored in the cookie.

- **Delete Cookies:** Remove all cookies.

- **Allow Cookies:** Set a value to determine whether a connection attempt is made through the cookie or not.

▶ **Character Encoding**

Select a character set from the following list:

- 1 Automatic
- 2 English(ASCII)
- 3 English(ISO)
- 4 English(LATIN)
- 5 Unicode(UCS2 BE)
- 6 Unicode(UCS2 LE)
- 7 Unicode(UCS2 Auto)
- 8 Unicode(UTF-16 BE)
- 9 Unicode(UTF-16 LE)
- 0 Unicode(UTF-16 Auto)
- * Unicode(UTF-8)

▶ **Scrolling Control**

This allows you to determine the scroll speed and select from **1 Line, 2 Lines** or **3 Lines**.

▶ **Show Image**

This allows you to view pictures when browsing.

▶ **AuthWallet**

If set to On, the user's personal information such as ID and Password used to access the Internet site will be saved automatically for future use.

Online menu

Once you are connected to the Internet, the following menu options are available:

- **Back:** Moves to the previous page.
- **Forward:** Moves to the next page.
- **Reload:** Loads the current page again.

Fido Mall

- **Home:** Moves to the initial homepage.
- **Go to URL:** Connects to the specific URL after editing.
- **Bookmarks:** You can add or save the current page to Bookmark or view the list saved under Bookmark.
- **Settings:** You can set browser related options such as Clear cache, Clear cookies, etc.

Internet

Menu 5.1

You can access to the Fido' services by launching the browser.

Video Calling

Menu 5.2

You can make/answer a video call to a 3G video phone the other party must have a 3G video phone and be in a video call service area.

1. Enter the number including the full area code.
2. Press the OK [Video Call]key to make a video call.
3. Pree the END key to finish the call, or close the handset.

Note

The video call may take some time to connect. Please be patient. The connection time will also depend on how quickly the other party answer the call. While the video call is connecting, you will see your own images; after the other party has answered, their image will be displayed on screen.

Video/Radio

Menu 5.3

'Fido On Demand' brings you on-demand access to the live radio and the video clip

Mobile TV

Menu 5.4

'Mobile TV' lets you enjoy the live channels by launching Mobile TV

Music

Menu 5.5

'Fido Music Player' allows you to listen to the music which stored in both external and internal memory cards and also connects you to the music download site.

More Service

Menu 5.6

The services provided by Fido, allow you to surf the internet and download the applications.

Messages

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), voice mail, as well as the network's service messages.

Fido IM

Menu 6.1

The Instant Messaging feature can only be used with the support of the network operator or communities such as Windows Live and Y! Messenger. For Instant Messaging users, a valid User ID and Password will be required in order to login and exchange messages as well as checking the online status.

There are two ways to use the Instant Messaging feature.

1. Through the Main Menu.
2. Through the Message hotkey (the right navigation key).
Short pressing the hotkey will

bring up the available IM clients. The menu items below might not appear since not all IM communities support the various options. Also the menu strings may appear differently based on the selected IM communities. The keywords such as User ID, Login and Contact will be used as general terms in IM menus according to the currently selected communities such as Windows Live and Y! Messenger.

Offline Menu

Sign In

This allows users to login by filling in the User ID and Password.

Note

Once the User ID and Password are saved, you will not be required to type them in again during Login process. This feature is optional.

Saved Conversations

This is where a user can view saved conversations.

Settings

- ▶ **My Status:** Allows you to set your status to Available, Busy or Invisible.
- ▶ **Set Sound:** Allows you to set on/off an alert for the Contact when they have activity on their session.
- ▶ **Default Provider:** Allows you to set the default IM community to login.
- ▶ **Save Password:** You may save your password in Login input.
- ▶ **Auto Sign In:** You may set the automatic IM Login process by choosing between the **'When Power On'** or **'When IM Start'** options.
- ▶ **Network:** You may check your IM Network Profiles or Server Address information.

IM Information

This indicates the Instant Messaging Client Information such as Client Name and Version Number.

Online Menu / 1 to 1 conversation

After a successful Login, a list of contacts with Screen Names will appear on screen. Depending on the cursor location in the contacts, the following menu options will be available.

When cursor is located on a Conversations List

Note

The Conversations List contains both the active contact where a conversation has taken place as well as an unknown contact.

Messages

Note

When you select the left/right navigation key or the Confirm key on the Conversation List, it offers the ability to view or hide conversations.

- ▶ **Send Message to...:** This offers the ability to send a message to an unknown contact. When selected, a User ID must be typed in prior to starting an IM session or conversation.
- ▶ **Saved Conversations:** You may view or delete the stored conversation session.
- ▶ **Settings**
 - **Display Name:** This function is setting your display name which will be shown to others. It will be shown to others if you set your display name.
 - **My Status:** Allows you to set your status to Available, Busy or Invisible.
- **List Sort By:** There are two options for WL in order to sort out contact list.
- 1. **All Contacts:** Online contact and Offline contact will be shown together on contact list which is called Mobile Device. Both Online Contact and Offline Contact will be shown in alphabetical orders.
- 2. **Online and Offline:** Online contact list and Offline contact list will be shown separately by the name of 'Online' and 'Offline', respectively. The list will be shown in alphabetical orders.
- **Set Sound:** Allows you to set an alert for the Contact when they have activity on their session.
- **Save Password:** You may save your password in Login input.

- **Auto Sign In:** You may Login to an IM client automatically with the 'When Power On' or 'When IM Start' options.

- ▶ **Sign Out:** This begins the Logout process.

When cursor is located on a Conversation

- ▶ **End Conversation:** This closes the selected conversation. If an unknown contact was selected, that contact is deleted.
- ▶ **Block/Unblock Contact:** This allows you to block/unblock the selected Conversations Contact.
- ▶ **Contact Info:** This allows you to view the User ID and Status Text information.
- ▶ **Settings:** Please refer to the previous Settings Menu.
- ▶ **Sign Out:** This begins the Logout process.

When cursor is located on a Contact List

- ▶ **Add Contact:** This adds a new contact to the selected contacts' list; in the meantime this searches for the contact on the basis of E-mail Address, First Name, or Last Name.
- ▶ **Send Message to...:** This offers the ability to send a message to an unknown contact. When selected, the User ID must be typed in prior to starting an IM session or conversation.
- ▶ **Refresh Contact List:** This refreshes the present information on the contacts within the contacts.
- ▶ **Blocked List:** This list is the blocked contacts.
- ▶ **Saved Conversations:** This is where a user can view saved conversations.

Messages

- ▶ **Settings:** Please refer to the previous Settings Menu.
- ▶ **Sign Out:** This begins the Logout process.

When cursor is located on a Contact

- ▶ **Add Contact:** This adds a new contact to the selected contacts list; in the meantime this searches for the contact on the basis of E-mail Address, First Name, or Last Name.
- ▶ **Delete Contact:** This deletes the selected Contact.
- ▶ **Block/Unblock Contact:** This allows or blocks conversation with the selected Contact.
- ▶ **Refresh Contact:** This refreshes the present information on the selected contact.
- ▶ **Contact Info:** This allows you to view information. It provides User ID, Status Text.

- ▶ **Settings:** Please refer to the previous Settings Menu.
- ▶ **Sign Out:** This begins the Logout process.

Menu options available in the Conversation screen

- ▶ **Back to Contacts:** This brings the screen back to the contacts.
- ▶ **Insert:** You can insert Symbol, Template and emoticons in the conversation screen.
- ▶ **Add to Contact List:** This adds a new contact to the selected contacts list; in the meantime this searches for the contact on the basis of E-mail Address, First Name, or Last Name.
- ▶ **Block/Unblock Contact:** This allows or blocks conversation with the selected Contact.
- ▶ **Save Conversation:** Stores the currently active conversation.

- ▶ **End Conversation:** This ends the active conversation and clears the conversation buffer.
- ▶ **Settings:** Please refer to the previous Settings Menu.
- ▶ **Text Entry Mode:** Sets the text input mode such as abc, Abc, ABC, T9 abc, T9 Abc, T9 ABC and 123.
- ▶ **Text Entry Settings:** This selects the T9 predictive mode Language.

Note

- In the conversation window, you can use the up/down navigation key for scrolling through the conversation.
- Maximum number of characters supported by a message is 400 characters for receiving and 128 characters for sending.
- The present information might not update in real time so the "Refresh List"/"Refresh Contact" option can be used for the most up to date status.

New Message

Menu 6.2

Note

If you select a graphic or an audio file while writing a multimedia message, the file loading time will take about 5 seconds. You will not be able to activate any key during the file loading time. When the file loading is complete, you will be able to write a multimedia message.

Editing a message

The following options are available for Editing a Message. (Press the left soft key [Insert])

- ▶ **Symbol:** You can insert symbols ranging from sentence notes to emoticons. Select the one you want by navigating the left/right soft keys [**Previous/Next**].
- ▶ **Graphic:** You can select a graphic image by using the left/right navigation keys. You can preview the selected

Messages

picture by pressing the left soft key [View].

- ▶ **Audio:** You can insert various ringtones.

Note

vCard, vCalendar, vNote and vTask are created by Address Book, Calendar, Notepad and Tasks respectively. Go to the Tools and Address Book sections for more detailed information.

- ▶ **Video:** You can insert a video clip by using the center key [Insert].
- ▶ **New Photo:** You can insert a new image taken from the camera by pressing [Capture]. The following camera options are available when you press [Options]:
 - **Resolution:** The resolution of the image can be captured in **1280*960/640*480/320*240/160*120**

- **Quality:** The quality of the captured image can be **Super Fine/Fine/Normal**
- **Reverse View:** You can view the photo upside down
- **View Full Screen:** Extends the photo screen to full.
- **Self Timer:** Camera timer can be set to **Off/3 Seconds/5 Seconds/10 Seconds**
- **Advanced Settings:** Set the **White Balance** as **Auto/Daylight/Incandescent/Cold/Fluorescent/Night mode**. **Color Effects** includes options such as **Color/ Sepia/ Mono/Negative**. **Shutter Tones** can be set to **Tone 1/ Tone 2/ Tone 3/ Off**.
- **Default Settings:** Allows you to set to the default settings.
- ▶ **New Audio:** You can record a new audio by pressing the center key [Record].

After recording a new audio, you can cancel it by pressing the right key [**Cancel**]. To control the new audio menu, choose [**Options**] by pressing the right key. Under [**Options**], choose one of following

- **Record Mode:** Set as **MMS** or **General Mode**.
 - **Quality:** Set the audio's quality to **Fine**, **Normal** or **Economy**.
 - **Primary Storage:** You can assign the primary storage to **Handset Memory** or **Memory Card**.
- ▶ **New Video:** You can record new video by pressing the center key [**Record**].
- ▶ **Subject:** Type a subject into the message.
- ▶ **Others:** Allows you to insert **vCard**, **vCalendar**, **vNote** or **vTask**.

▶ **Template**

- **Text:** You can easily insert the frequently used sentences in the text message.
 - **Multimedia:** The preset multimedia templates are available.
 - **Signature:** Input your own signature created in (Menu 6.9.3). For further details, see page 73.
- ▶ **Contact:** You can browse one of your contacts and insert it.
- ▶ **Slide:** You can insert a slide and place it to **Insert Slide Before** or **Insert Slide After**.

Using Options

Press right soft key [Options].

- **Preview:** Shows the created multimedia message before sending it.(Only for Multimedia Message)

Messages

- **Remove:** Removes the selected multimedia or vObject.(Only for Multimedia Message)
- **Save to Drafts:** Saves the selected message to draft.
- **Select Slide:** If the message has more than one slide, you can select and move to the desired slide.(Only for Multimedia Message)
- **Settings:** For more details, refer to Message Settings(page 73).
- **Set Slide:** Sets the Duration, Text color and background color of the selected slide.(Only for Multimedia Message)
- **Text Entry Mode:** Sets the text input mode. For more details, refer to **Entering Text** (page 29).
- **Text Entry Settings: Text Entry Languages** allows you to set the text entry language to English or French. **T9 Next Word Prediction** is available when it is

set to **On**. Use **T9 Dictionary** to add words or delete/reset/modify words.

- **Cancel:** Allows you to exit the text input mode without saving your input message.

Sending a Message

After completing a message using the **Insert/Options**, select **Send To** to send a message.

- Enter the recipient(s) as To, Cc and Bcc. You can use the Contacts option to choose a recipient.
- Press the right soft key [**Options**].

You can insert symbols, refer to recent messages or recent calls to set as a recipient, and edit your message. For the **Save to Drafts**, **Text Entry Mode**, **Text Entry Settings** and **Cancel** options, see the descriptions above.

Inbox

Menu 6.3

You will be alerted when you receive a message. They will be stored in the Inbox. In the Inbox, you can identify each message by icons. If you are notified that you have received a multimedia message, you can download the whole multimedia message by selecting it in the Receive menu. The following [Options] are available in the Inbox list.

- ▶ **Save Contact Info:** You can save the sender's phone number in the Contact List.
- ▶ **Delete:** You can delete the current message.
- ▶ **Forward:** You can forward the selected message to another party.

- ▶ **Reply All:** Allows you to reply to all recipients on the selected message (Only for Multimedia messages).
- ▶ **Information:** You can view information about received messages; Message type, Subject, Sender's address, Message date & time, Priority, Message size, Attached Files (Only for Multimedia messages).
- ▶ **Multi Delete:** Deletes a number of messages you have selected from the folder.
- ▶ **Delete All Read Messages:** You can delete all read messages.
- ▶ **Delete All:** You can delete all messages.

Messages

Drafts

Menu 6.4

You can view the messages saved as a draft. The draft messages are listed with the date and time of when the messages were saved.


The following [Options] are available.

- ▶ **Information:** Allows you to view the information on the message.
- ▶ **Multi Delete:** Allows you to delete multiple messages you select from the folder.
- ▶ **Delete All:** Deletes all messages in the folder.

Outbox

Menu 6.5

Outbox is a temporary storage place for messages waiting to be sent.

When you press the  [SEND] key, you can make a call to the number of the recipient number of the selected message.

If the message is not sent from the Outbox, you will receive a sound alert along with a Message



Sending Fail notice on the screen. Another attempt will be made to send the failed message and after two unsuccessful attempts, the message will no longer be sent automatically. In order to send the message that has failed, you must press **Resend** from the Options menu.

After the maximum number of **Send** attempts has been reached the Send function has failed.

If you were trying to send a text message, open the message and check that the Sending options are correct.

Messages

When the message Send has failed, the following [Options] are available.

- ▶ **Delete:** Deletes the selected message which has failed.
- ▶ **Edit:** Allows you to edit the selected message.
- ▶ **Error Status:** Allows you to see the error status of the failed message.
- ▶ **Information:** Allows you to view the information on the message.
- ▶ **Delete All:** Deletes all messages in the folder.

Sent

Menu 6.6

This is where you can view the lists and contents of sent messages and also verify if transmission was successful.

The following [Options] are available.


- ▶ **Delete:** Deletes the selected message from the Sent list.
- ▶ **Information:** Allows you to view information on the message.
- ▶ **Delete All:** Deletes all messages in the folder.


Call Voicemail

Menu 6.7

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).

Before using this feature, you must enter the voice server number obtained from your service provider.

This may already be available; to check the voicemail, press and hold the  key


When new voicemail is received, the symbol  will be displayed on the screen.

Messages

Note

Please check with your network service provider for details of their service in order to configure the handset accordingly.

Watch Videomail Menu 6.8

'Watch Videomail' menu lets you access to your video mailbox if provided by your network. You must set the mail server number before using this feature. To check the Watch Videomail, press and hold the  key in standby mode.

Templates Menu 6.9

Text Templates (Menu 6.9.1)

There are 6 predefined messages in the list. You can view and edit the template messages or create new messages.

The following [Options] are available.

- ▶ **Send:** Allows you to send the selected template via Message.
- ▶ **Delete:** Allows you to delete the selected template message.
- ▶ **Edit:** Allows you to write a new message or edit the selected template message.
- ▶ **Delete All:** Deletes all messages in the folder.

Multimedia Templates

(Menu 6.9.2)

1. You can add new multimedia templates by pressing the left soft key [New].
2. The following choices are available under Options.
 - ▶ **Preview:** You can preview multimedia messages you have created.

Messages

- ▶ **Text Entry Mode:** Sets the text input mode as abc, Abc, ABC, T9 abc, T9 Abc, T9 ABC and 123.
- ▶ **Text Entry Settings:** Allows you to set the text entry language to English or French.
- ▶ **Cancel:** Allows you to exit the text input mode without saving your message.
- ▶ **Email Gateway:** You can send the text message to an Email Address via this gateway.
- ▶ **Message Subject:** You can enter the SMS Subject from this menu.
- ▶ **Reply via Same Message Center:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.
- ▶ **Insert Signature:** You can insert your own signature (Menu 6.9.3) that you created.

Signature (Menu 6.9.3)

This feature allows you to create your Text signature. You can use symbols, templates and contacts as part of the signature.

Message Settings Menu 6.0

Text Message (Menu 6.0.1)

- ▶ **Message Center Number:** If you want to send a text message, you can get the address of the SMS center by using this menu.
- ▶ **Priority:** You can set the priority of the message you choose.
- ▶ **Message Subject:** You can enter the MMS Subject when this menu is on.

Multimedia Message

(Menu 6.0.2)

Messages

- ▶ **Validity Period:** This network service allows you to set how long your multimedia messages will be stored at the message center.
- ▶ **Request Delivery Receipt:** Allows you to request a delivery confirmation mail for a Multimedia message.
- ▶ **Send Delivery Receipt:** Allows you to send a delivery confirmation mail for a Multimedia Message.
- ▶ **Request Read Receipt:** Allows you to request a message read confirmation mail for a Multimedia Message
- ▶ **Send Read Receipt:** Allows you to send a message read confirmation mail for a Multimedia Message.
- ▶ **Automatic Download:**
 - **On:** You can always receive multimedia messages automatically.
 - **Off:** You only receive notification messages in the inbox and then you can check the notifications.
- ▶ **Message Center:** The details for the Multimedia gateway are pre-loaded onto your handset and should not be changed.
- ▶ **Message Size:** This menu allows you to determine the maximum size of a Multimedia message when writing the message.

Voice and Videomail (Menu 6.0.3)

This menu allows you to set the voice and video center number if this feature is supported by the network service provider. Please check with your network service provider for details of their service in order to configure the handset accordingly.

Messages

Download Messages

(Menu 6.0.4)

You can set the Service option to determine whether you will receive service messages or not.

You can set the Automatic Download option to determine whether you will automatically connect to the service or not.

Tools


Alarm Clock

Menu 7.1

The alarm function allows you to set up multiple separate alarms. You can also set the time, repetition interval and alarm sound.

Select your desired alarm setting to configure from the alarm list. If there is no alarm setting, press the left soft key [New] to add a new alarm.

- ▶ **Time:** Select the desired set time mode using the navigation key. Input your desired alarm time by specifying the hour and minute. If the time is in 12 hour clock format, you have to select either am' or pm' using the center soft key.
- ▶ **Repeat:** Select the desired repeat mode using the navigation key.

- ▶ **Alarm Tone:** Select the alarm sound to use for the alarm using the  key.

- ▶ **Memo:** Input alarm name.





Calendar

Menu 7.2

When you enter this menu a calendar will be displayed.

The square cursor is used to locate a particular day.

The bottom bar on the calendar indicates schedule(s) for that day. This function helps to remind you of the schedule. The phone will sound an alarm tone if it has been set for a specific schedule item.

Key	Description
up/down navigation key	Weekly
left/right navigation key	Daily
 key/  key	Annually
 key/  key	Monthly

The following [Options] are available:

- ▶ **Search:** Allows you to search the saved schedule(s) by pressing the character keys.
- ▶ **Delete:** Allows you to delete the selected schedule.
- ▶ **Send via:** Sends the selected schedule by Message or Bluetooth.
- ▶ **Set Holiday:** Allows you to set your personal holiday for the selected date.
- ▶ **View All:** Allows you to view all saved schedules.

- ▶ **Go to Date:** Allows you to jump to a specific date.
- ▶ **Delete Schedules:** Deletes the defined schedules such as Old Schedules, Daily, Weekly, Monthly or All Schedules.

Notepad

Menu 7.3

You can create up to a maximum of 30 memos.

1. Select a memo pad you want to edit.
2. Press the left soft key [New] to create a new memo.
3. Input the memo and press the center key [Save] to save.


Tools

Calculator

Menu 7.4

The calculator function allows you to add, subtract, multiply and divide. You can input numbers using the number keys, and input operators using the up, down, left, and right navigation keys.

You can input a decimal point by pressing the  [Star] key.

Whenever you press the  key, characters are sequentially deleted in reverse order.

Tip Calculator

Menu 7.5

This feature allows you to quickly and easily calculate the tip amount based on the total bill as well as the split of the total bill based on the number of people.

World Clock

Menu 7.6

The World clock function provides time information on major cities worldwide.

1. You can view the time of desired city using the navigation or the right soft key [Options] - [Cities].
2. You can select a desired city as a base using the left soft key [Home zone].

If you want to use Dual Clock, you must set "Homezone" to system time where you are currently staying

Tasks

Menu 7.7

This feature allows you to save and manage a task.

1. To add a new To do item, select the left soft key [New] in the Task enquiry screen.

2. Input due date, notes, priority and status for the new Task.
3. Press the left soft key [Save] to save the Task item.

The following [Options] are available in the Task list.


- ▶ **Status:** Allows you to change the status of the selected task as In Progress or Completed.
- ▶ **Delete:** Deletes the selected task.
- ▶ **Send Via:** Enables the selected task to be sent via Message and Bluetooth.
- ▶ **Edit:** Allows you to edit a saved task.
- ▶ **View Calendar:** The calendar pop-up window is displayed.
- ▶ **Delete Tasks:** Deletes All Completed, All Past Tasks or All Tasks.

Stop Watch

Menu 7.8

This menu allows you to record the elapsed time of an event. The duration of an individual lap time (up to 20 times) and the total time can be displayed.

▶ New Time

1. To start timing, press the center key [Start]. The running time is displayed as HH.MM.SS.hh (hours, minutes, seconds, hundredths of a second).
2. During the timing, you can record an individual lap time by pressing the right soft key [Lap]. Up to 20 lap times can be recorded.
3. You can stop or restart timing by pressing the  key.
4. To reset the stop watch, press the left soft key [Reset].

Tools


- ▶ **Saved Times:** You can see the saved recorded times which are in the lap time list of the **New Time** option.

Unit Converter Menu 7.9

This function converts any measurement into a unit you want.

There are 6 types of units that can be converted: Area, Length, Weight, Temperature, Volume, and Velocity.

Note

You can input a decimal number by pressing the  [Star] key.

Date Finder Menu 7.0

The date finder shows the start date, the target date and the number of remaining days.

D-Day Counter Menu 7.*

1. To add a new D-Day Counter item, select the left soft key [New].
 2. Input the Date and notes when you add an item.
 3. Press the left soft key [Save] to save the item.
- ▶ **Edit:** You can edit the selected item.
 - ▶ **Delete:** You can delete the selected item.
 - ▶ **Show at Idle Screen:** You can see the Remaining days for this item (D-Day) on the Idle screen top right corner.
 - ▶ **Delete All:** Deletes all saved items.

Contacts

Contact List

Menu 8.1

This menu allows you to save and manage contact address information. The Contacts' functions allow you to add a new address or search saved contact addresses by name.

New Contact

Menu 8.2

This menu allows you to add a new contact address. You can enter input contact address information including name, phone numbers, email addresses, group information items, memos, ring tones, and image (photograph).

You have to select the Handset or the SIM memory using the left and right navigation keys.

Caller Groups

Menu 8.3

This menu allows you to manage group information. By default, there are 4 groups: family, friends, colleagues and school. You can also configure a ring tone for a group so that the group ring tone sounds when a call from a specific contact address within that group arrives and there is no ring tone configured for the specific contact address.

Speed Dial List

Menu 8.4

This menu allows you to configure the speed dial numbers. You can select a number from 3 to 9 as a speed dial. You can configure speed dial numbers for any of the 7 numbers for a specific contact address so that a contact address may have multiple speed dial numbers.

Contacts

Copy All Contacts

Menu 8.5

This menu allows you to copy all of the information from your SIM, e.g. name, handset number, etc., to your handset. If a name is duplicated during the copying operation, the information is also duplicated.

- ▶ **SIM to Handset:** You can copy the entry from the SIM card to the phone memory.
- ▶ **Handset to SIM:** You can copy the entry from the handset memory to the SIM card (not all the data will be copied).

Delete All Contacts

Menu 8.6


You can delete all entries in the **SIM** and the **Handset**.

Press the  [END] key to return to standby mode.

Service Dial Numbers

Menu 8.7

You can view the list of Service Dialing Numbers (SDN) assigned by your network provider. Such numbers could include the emergency, directory assistance and voice mail numbers.

1. Select the Service dial number option.
2. The names of the available services will be shown.
3. Use the up/down navigation keys to select a service. Press the  [SEND] key.

My Numbers


Menu 8.8

This displays your phone numbers stored in the SIM.

Settings

Audio & Ring Tunes

Menu 9.1

There can be 4 sound modes: General, Vibrate All, Silent and Ear Mic. General, Vibrate, and All Silent modes can be changed from the Volume menu under Ring tone. In addition, pressing and holding the  [Star] key on idle screen mode can swap Normal and Manner mode. Ear Mic is available when respective instruments are attached.

Ring Tunes (Menu 9.1.1)

Shows and plays ring tones. These can be downloaded ring tones from Ring tone shops.

Volume (Menu 9.1.2)

This menu controls Ringtone, Key Tone, Call and Multimedia volume. It is available on Ring tone volume level 1~7.

Ring Alert Type (Menu 9.1.3)

Supports 3 ring alert types. Ring, Ring and Vibration, and Ring after Vibration.

Key Tones (Menu 9.1.4)

This menu option allows you to select a tone that sounds when a key is pressed. You can set the key tone to on or off.

Message Alert Tones

(Menu 9.1.5)

Allows you to select an alert tone which is played when a message is received. You can select any one from 10 message alert tones.

Note

Full length music tracks cannot be set as ringtones.

Settings

Display

Menu 9.2

Wallpapers (Menu 9.2.1)

You can select the background picture in standby mode.

Backlight Timer (Menu 9.2.2)

Use this to select whether or not the phone uses the backlight.

Menu Styles (Menu 9.2.3)

You can configure the menu style to Icon style or List style.

Languages (Menu 9.2.4)

You can change the language for the display text on your phone. This change will also affect the Language Input mode.

Dialing Fonts (Menu 9.2.5)

You can configure the font size and color of the numbers which appear in the home screen when you make a call.

Clocks & Calendar (Menu 9.2.6)

This feature allows you to select the internal/external LCD clock or Calendar display on the standby screen.

If you want to use Dual Clock, you must set "Homezone" to system time where you are currently staying.

Color Schemes (Menu 9.2.7)

You can change the color of the menu, soft key area, title bar area, and cursor by changing the Color Schemes.

You can select the Color Schemes from **Orange**, **Metal**, and **Sky**.

Bluetooth

Menu 9.3

Your phone has built-in Bluetooth wireless technology, which makes it possible for you to connect your phone wirelessly to other Bluetooth devices such as a hands free device, PC, PDA, a remote screen, or other phones. Only one of the devices registered in your phone can be connected at a time. (To make a connection to the same type of device or change Bluetooth preferences, disconnect the existing device first.)

You can have a conversation via a cordless Bluetooth hands-free phone or browse the Internet, wirelessly connected via a mobile phone. You can also exchange, for example, business cards, calendar items and pictures.

Streaming audio or radio is not supported through Stereo Bluetooth.

Hands-free profile

This icon appears when the hands-free profile is used between the hands-free device and the phone. This allows you to call using a Bluetooth connection.

A2DP profile

This icon appears when the A2DP profile is used between the stereo headset device and the phone. This allows you to listen to an audio clip. A2DP is the Advanced Audio Distribution Profile, which provides support for streaming either mono or stereo audio using Bluetooth.

Hand-free +A2DP profile

This icon appears when both profiles of the hands-free and the A2DP are used between the compatible device and the phone.

Settings

This allows you to call and listen to an audio clip using a Bluetooth connection.

For using each device, see a manual that comes with the device.

Note

We recommend that your phone and the Bluetooth device you are communicating with be no more than 10 metres apart. The connection may be improved if there are no solid objects in between your phone and the other Bluetooth device.

Bluetooth On/Off (Menu 9.3.1)

This menu sets the Bluetooth on or off using the navigation key.

Device List (Menu 9.3.2)

This function allows you to view the list of all devices that are paired with your phone at once.

To add a new device, press the left soft key [New]

1. Select the [New] key to search the device that can be connected and which is within range.
2. If you want to stop searching, press the right soft key [Cancel].
3. All of the devices found are displayed in the pop-up menu.

Select the desired device by pressing the OK key, and entering the password.

Bluetooth Files (Menu 9.3.3)

This option enables you to view a list of saved application files downloaded via Bluetooth. You can add an application file stored in your phone and memory card.

Bluetooth Settings (Menu 9.3.4)

This menu allows you to configure the profile for a Bluetooth.

▶ **My Visibility**

1. Selecting the Show option exposes your phone to other Bluetooth devices.
2. Selecting Hide shows your phone only to already paired devices.

▶ **My Name:** Allows you to change the handset's name that can be seen by other Bluetooth devices.

▶ **My Address:** You can check your Bluetooth address. You cannot change the default setting.

▶ **Primary Storage:** You can assign the primary storage to **Handset Memory** or **Memory Card**.

Date & Time

Menu 9.4

Set Date (Menu 9.4.1)

This allows you to enter the day, month and year. You can change the date format via the Date Format menu option.

Date Format (Menu 9.4.2)

MM/DD/YYYY(month/day/year)

DD/MM/YYYY(day/month/year)

YYYY/MM/DD(year/month/day)

Set Time (Menu 9.4.3)

This allows you to enter the current time. You can choose the time format via the Time Format menu option.

Time Format (Menu 9.4.4)

12 Hours/24 Hours

Settings

Auto Update (Menu 9.4.5)

Select On to set the phone to automatically update the time and date according to the current local time zone.

Call

Menu 9.5

Call Forwarding (Menu 9.5.1)

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your service provider. Select one of the divert options, for example, select If busy to divert voice calls when your number is busy or when you reject incoming calls.

The following options are available:

► **Voice Calls**

- **All Voice Calls:** Diverts voice calls unconditionally.

- **If Busy:** Diverts voice calls when the phone is in use.
- **If No Answer:** Diverts voice calls which you do not answer.
- **If Out of Reach:** Diverts voice calls when the phone is switched off or out of coverage.
- **All Data Calls:** Diverts to a number with a PC connection unconditionally.
- **All Fax Calls:** Diverts to a number with a fax connection unconditionally.

► **Video Calls**

- **All Video Calls:** Diverts all incoming video calls unconditionally.
- **If Busy:** Diverts incoming video calls when the line is busy.
- **If No Answer:** Diverts incoming video calls when there is no answer.

- **If Out of Reach:** Diverts incoming video calls when the handset is turned off or the handset is out of the network service coverage.


Call Barring (Menu 9.5.2)

- ▶ **All Outgoing:** The barring service for all outgoing calls.
- ▶ **Outgoing International:** The barring service for all outgoing international calls.
- ▶ **Outgoing International Except Home Country:** The barring service for all international outgoing calls except home network.
- ▶ **All Incoming:** The barring service for all incoming calls.
- ▶ **Incoming When Roaming:** The barring service for all incoming calls when roaming.

Send My Number (Menu 9.5.3)

This network service allows you to set your phone number to be displayed **On** or hidden **Off** from the person you are calling. You can select **Set by Network** if you prefer to have different settings for different service providers.

Auto Redial (Menu 9.5.4)

Select **On**, your phone redials the number you're trying to call up to 10 times after you hear a quick, engaged signal. Press  [END] to stop the call attempts.

This feature attempts to redial numbers that are engaged due to the wireless network. It does not redial numbers to an engaged party.

Settings



Note

There will be no alert indicating the call has been connected.

You must stay on the line to hear when the call is connected.

Answer Mode (Menu 9.5.5)

This allows you to determine how to answer the phone.

- ▶ **Any Key:** You can answer an incoming call by pressing any key, except the  [END] key.
- ▶ **Send Key Only:** You can only answer an incoming call by pressing the  [SEND] key.
- ▶ **Flip Open:** When the phone rings, you can answer a call simply by opening the flip.

Minute Minder (Menu 9.5.6)

This option allows you to specify whether the phone will beep every minute during an outgoing call to keep you informed of the length of the call.

Call Waiting (Menu 9.5.7)

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Deactivate** to request the network to deactivate call waiting, or **View Status**, to check if the function is active or not.

Call Reject (Menu 9.5.8)

This menu allows you to enable or disable call reject for all numbers or a specific number.

- ▶ **Call Reject On/Off:** This feature allows you to reject or not the incoming calls unconditionally by disconnecting.

When the **Reject All Calls** option is set, all incoming calls are routed directly to Voicemail.

- ▶ **Call Reject List:** Configures conditional call reject mode. Press the left soft key [New] to add the phone number to be rejected to the list. When you add a number to the list, you can add the number by entering it directly or by searching for the number in the Contact List.

Send DTMF Tones (Menu 9.5.9)

You can send the DTMF (dual tone multi-frequency) tones of the number on the display during a call.

This option is helpful for entering a password or account number when you call an automated system, like a banking service.

Video Calls (Menu 9.5.0)

- ▶ **My Picture Size:** This menu allows you to configure your own picture size to either Large, Medium or Small.
- ▶ **My Picture Position:** This menu allows you to configure your screen alignment to bottom right or bottom left.
- ▶ **Hide My Picture:** This menu allows you to hide your picture.
- ▶ **Mirror:** This menu allows you to reverse your picture as a mirror image.
- ▶ **Substitute Picture:** This menu allows you to substitute your picture with another picture.

Settings

Security

Menu 9.6

Various codes and passwords are used to protect the features and settings of your phone. They are described in the following sections.

Lock Handset (Menu 9.6.1)

You can use a security code to avoid unauthorized use of the phone.

If you set phone lock to When Power On, the phone will request a security code whenever you switch the phone on. If you set the phone lock to When SIM changed, your phone will request a security code only when you change your SIM. If you set the phone lock to Immediately, your phone will lock immediately.

PIN Code Request (Menu 9.6.2)

When the PIN code request feature is set to 'On', you must enter your PIN each time you switch the phone on.

Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note

Before setting the PIN code request feature to Off, you must enter your PIN

The following [Options] are available:

- ▶ **On:** You must enter the PIN each time the phone is switched on.
- ▶ **Off:** The phone connects directly to the network when you switch it on.

Fixed Dial Number (Menu 9.6.3)

This allows you to restrict your outgoing calls to selected phone numbers, if this function is supported by your SIM. The PIN2 code is required.

The following [Options] are available:

- ▶ **FDN On/Off:** Select whether to activate FDN or not. PIN authentication is required.
- ▶ **FDN List:** Displays the current FDN list. You can edit, add, or delete fixed dial numbers. PIN2 authentication is required to edit the list. And the configuration information is saved on the SIM. The information saved on the SIM is used when FDN restricts outgoing calls.

Change Codes (Menu 9.6.4)

The Change codes feature allows you to change your current password to a new one. You must enter the current password before you can specify a new one.

You can change the access codes for: **Security Code, PIN1, PIN2**

Note

PIN: Personal Identification Number.

Settings

Connection

Menu 9.7

Network Profiles (Menu 9.7.1)

This menu shows the Network Profile. You can register, delete and edit by using the Options Menu. However, you cannot delete or edit default configurations provided by Fido.

USB Connection Mode

(Menu 9.7.2)

You can transfer files from a compatible PC to the memory in your phone using the Mass Storage. When you connect the phone to a PC using the USB cable, this will be displayed as a removable disk through Windows Explorer.

Network Selection (Menu 9.7.3)

- ▶ **Automatic:** This function automatically searches for the network and registers the handset to the network.
- ▶ **Manual:** This function enables you to search the network list and specify which network to attempt registration with.

Preferred Network List

(Menu 9.7.4)

You can add and delete preferred lists in the current SIM card.


Dial Up Networking (Menu 9.7.5)

You can use your phone with a variety of PC connectivity and data communications applications. Select USB and Bluetooth you want to use for the data connection.

Flight Mode

Menu 9.8

This allows you to use only the phone's features that do not require the use of the wireless network when you are in an airplane or in places where the wireless network is prevented.

If you set the flight mode on, the  icon will be displayed on the screen instead of the network signal icon.

- ▶ **On:** You cannot make (or receive) any calls, including emergency calls, or use other features that require network coverage
- ▶ **Off:** You can deactivate the flight mode and restart your handset to access the network.

Check Memory

Menu 9.9

Common (Menu 9.9.1)

This function shows the status of the user memory of the handset.

Reserved (Menu 9.9.2)

This function shows the status of the reserved memory for the user (Text Message, Contact List, Calendar, Tasks, Memo).

SIM (Menu 9.9.3)

This function shows the status of the SIM card user memory.

Memory Card (Menu 9.9.4)

If your phone has a multimedia memory card in the card slot, you can save images, sounds, and videos on the memory card. You can check the current status of the external memory card in the Memory status menu.

Settings

Handset Information

Menu 9.0

This menu is used to view My Numbers, Manufacturer and Model Name information etc.

Reset Settings Menu 9.*

This function allows you to restore factory settings. To do this, you need the security code.

Clear Memory (Menu 9.*.1)

Deletes downloaded/user created contents (e.g.: images, videos) from Handset content and the External Memory card.

- ▶ **Handset Contents:** Deletes all downloaded/user created Images, Videos & Sounds from the Handset Memory.

- ▶ **Handset Personal Info.:**

Restores Personal Information stored in the handset memory (e.g.: address book, messages, tasks, alarm, Calendar schedules) to default values.

- ▶ **Memory Card:** Deletes all contents from the External Memory Card.

Reset Default (Menu 9.*.2)

Restores the settings (e.g.: Audio, Display, Language, Date & Time, Bluetooth Settings) stored in the handset memory to default values.

Please check to see if any problems you have encountered with the phone are described in this section before taking the phone in for a service or calling a service engineer.

Q How do I view the list of outgoing calls, incoming calls and missed calls?

A Press the  [SEND] key.

Q How do I view all numbers stored in the memory?

A Press the down navigation key.

Q Why is the connection inconsistent or not audible in certain areas?

A When the frequency environment is unstable in a certain area, connection may be inconsistent and not audible. Relocate to another area and try again.

Q Why is the connection not consistent or abruptly disconnects even when established?

A When frequency is unstable or weak or if there are too many users, connection may be cut off even after it was established. Please try again later or attempt after relocating to other areas.

Q Why does the LCD not turn on?

A Remove the battery and turn on the power after placing it back in. If there is no change, fully charge the battery and try again.

Q&A

Q Why is there an echo when a connection is made with certain telephones in a certain area?

A This is called the 'Echo Phenomenon', which occurs if the connection volume is too high or caused by special properties (semi-electronic telephone exchange) of the equipment on the other end.

Q Why does the phone heat up?

A The phone may get hot when there is a very long call duration or when games are played or even when surfing the Internet for a long time. This has no effect upon the life of the product or performance.

Q Why does the battery life get shorter in standby mode?

A The battery is worn out. As time passes, the battery life gradually

becomes shorter. If the battery lasts about half the amount of time as when first purchased, it's time to purchase a new battery.

Q Why does the battery run out so quickly during normal use?

A It is due to the user environment or a large number of calls or a weak signal.

Q Why is no number dialed when you recall an Address Book entry?

A Check that the number has been stored correctly by using the Address book Search feature. Re-store them, if necessary.

Q I cannot find the lock, PIN, or PUK code. What is my password?

A The default lock code is '0000'. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.


Accessories

There are a variety of accessories available for your mobile phone. You can select these options according to your personal communication requirements. Consult your local dealer for availability.

Travel Adapter

This adapter allows you to charge the battery. It supports standard U.S. 120 Volt 60Hz outlets.

It takes under 4 hours to charge a completely discharged battery.

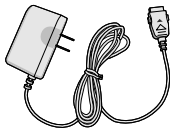

Battery


Standard battery is available.



Vehicle Power Adapter

You can operate the phone and trickle charge the phone battery from your vehicle by using the vehicle power adapter.


It takes 5 hours to charge a completely discharged battery.

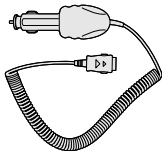

Accessories


Stereo headset

Allows hands-free operation. Includes earpiece and microphone.

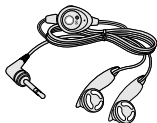

Data Cable Kit

* When installing, make sure to connect to the PC after your phone and the cable have been connected. Otherwise, your PC may have a problem.

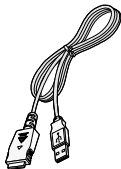

Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.

Safety Guidelines

TIA Safety Information

Provided herein is the complete TIA Safety Information for Wireless Handheld phones. Inclusion of the text covering Pacemakers, Hearing Aids, and Other Medical Devices is required in the owner's manual for CTIA Certification. Use of the remaining TIA language is encouraged when appropriate.

Exposure to Radio Frequency Signal

Your wireless handheld portable telephone is a lowpower radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by

both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

Safety Guidelines

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

- ▶ Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a

higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- ▶ Give full attention to driving - driving safely is your first responsibility;
- ▶ Use hands-free operation, if available;
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Safety Guidelines

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6') inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- ▶ Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- ▶ Should not carry the phone in a breast pocket.
- ▶ Should use the ear opposite the pacemaker to minimize the potential for interference.

- ▶ If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Safety Guidelines

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a 'blasting areas or in areas posted: 'Turn off two-way radio'. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, marked clearly.

Safety Guidelines

Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. **DO NOT** place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.

Charger and Adapter Safety

- ▶ The charger and adapter are intended for indoor use only.

Battery Information and Care

- ▶ Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- ▶ The battery does not need to be fully discharged before recharging.
- ▶ Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.

Safety Guidelines

- ▶ Do not disassemble or impact the battery as it may cause electric shock, short-circuit, and fire. Store the battery in a place out of reach of children.
- ▶ Keep the battery's metal contacts clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- ▶ Recharge the battery after long periods of non-use to maximize battery life.
- ▶ Battery life will vary due to usage patterns and environmental conditions.
- ▶ Use of extended backlighting, MEdia Net Browsing, and data connectivity kits affect battery life and talk/standby times.
- ▶ The self-protection function of the battery cuts the power of the

phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- ▶ Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- ▶ Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- ▶ When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- ▶ If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may

Safety Guidelines

short-circuit the phone. Always cover the receptacle when not in use.

- ▶ Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- ▶ Using a damaged battery or placing a battery in your mouth may cause serious injury.
- ▶ Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- ▶ Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- ▶ When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- ▶ Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- ▶ Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Centre to replace the damaged antenna.
- ▶ Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Centre.

Safety Guidelines

- ▶ Do not paint your phone.
- ▶ The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- ▶ When you use the phone in public places, set the ring tone to vibration so as not to disturb others.
- ▶ Do not turn your phone on or off when putting it in your ear.

FDA Consumer Update

The U.S. Food and Drug Administration Centre for Devices and Radiological Health Consumer Update on Mobile Phones.

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed

Safety Guidelines

by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so

that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- ▶ Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- ▶ Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- ▶ Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have

Safety Guidelines

responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- ▶ National Institute for Occupational Safety and Health
- ▶ Environmental Protection Agency
- ▶ Occupational Safety and Health Administration (Administración de la seguridad y salud laborales)
- ▶ Occupational Safety and Health Administration
- ▶ National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal

Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

Safety Guidelines

3. What kinds of phones are the subject of this update?

The term 'wireless phone' refers here to handheld wireless phones with built-in antennas, often called 'cell', 'mobile', or 'PCS' phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called 'cordless phones,' which have a base unit connected to the telephone wiring in a house,

typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered

Safety Guidelines

or treated with cancer causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures.

However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years

Safety Guidelines

follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important

questions about the effects of exposure to radiofrequency energy (RF). The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues. The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and

Safety Guidelines

academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radio frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radio frequency energy (RF) exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies.

The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your

Safety Guidelines

phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, 'Recommended Practice for Determining the Spatial- Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques,' sets forth the first consistent test methodology for measuring the rate at which RF is

deposited in the heads of wireless phone users. The test method uses a tissuesimulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

Safety Guidelines

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone

away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and

Safety Guidelines

increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and

Safety Guidelines

defibrillators are safe from wireless phone EMI. The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a 'compatible' phone and a 'compatible' hearing aid at the same time. This standard was approved by the IEEE in 2000. The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cdrh/phones/index.html>)

Federal Communications Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)
(<http://www.nrpb.org.uk/>)

Safety Guidelines

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility.

When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
3. Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the

Safety Guidelines

call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

5. Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a “to-do” list while driving a car, you are not watching where you are going. It is common sense. Don’t get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip— dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations — with your phone at your side,

Safety Guidelines

help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a "Good Samaritan" in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency

services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

For more information, please call to 888-901-SAFE, or visit our website www.wow-com.com

Consumer Information on SAR (Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for

Safety Guidelines

exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. * Tests for SAR are conducted using standard operating positions specified by the

FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model.

Safety Guidelines

The highest SAR value for this model phone when tested for use at the ear is 1.12 W/kg and when worn on the body, as described in this user's manual, is 0.612 W/kg. (Body-worn measurements differ among phones models, depending upon available accessories and FCC requirements.) While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJCU500.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Glossary

To help you understand the main technical terms and abbreviations used in this booklet and take full advantage of the feature on your mobile phone, here are a few definitions.

Call Barring

Ability to restrict outgoing and incoming calls.

Call Waiting

Ability to inform users that they have an incoming call when engaged on another call.

GPRS (General Packet Radio Service)

GPRS guaranties continuous connection to the Internet for mobile phone and computer users. It is based on the Global System for Mobile Communication (GSM) circuit-switched cellular phone connections and the Short

Message Service (SMS).

GSM (Global System for Mobile Communication)

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

Java

Programming language generating applications that can run on all hardware platforms, whether small, medium or large, without modification.

It has been promoted for and geared heavily to the Web, both for public Web sites and Intranets. When a Java program runs from a Web page, it is called a Java applet. When it is run on a mobile phone or pager, it is called a MIDlet.

Glossary

Line Identification Services (Caller ID)

Service allowing subscribers to view or block the telephone numbers of callers.

Conference Calls

Ability to establish a conference call involving up to five additional parties.

Phone Password

Security code used to unlock the phone when you have selected the option to lock it automatically each time it switches on.

Roaming

Use of your phone when you are outside your home area (when traveling for example).

SDN (Service Dial Number)

Telephone numbers supplied by your network provider and giving access to special services, such as voice mail, directory inquiries, customer support and emergency services.

SIM

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM fits into a small slot on the back of the phone and is protected by the battery.

SMS (Short Message Service)

Network service sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received (up to 160 characters long) can be displayed, received, edited or sent.

Patent Information

This product was manufactured under one or more of the following U.S.

patents: 5276765 5749067 6061647

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>