

SD-YD250



Download from Www.Somanuals.com. All Manuals Search And Download.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- 1. READ ALL INSTRUCTIONS BEFORE USE.
- 2. Follow all warnings and instructions marked on the product.
- 3. Unplug this product from wall outlet when not in use and before cleaning. Do not immerse appliance in water or other liquid. Use a soft sponge and mild detergent when cleaning the inside of the pan or kneading blade. The cabinet may be cleaned with a cloth, dampened with a mild soap and water solution.
- 4. Do not touch hot surfaces. Use mitts when handling hot materials, and allow metal parts to cool before cleaning.
- 5. Close supervision is necessary when any appliance is used near children.
- 6. Do not allow anything to rest on power cord. Do not plug in cord where persons may walk on, or trip over it.
- 7. Do not operate any appliance with a damaged cord or plug. Refer servicing of appliance to an authorized Panasonic service center if the unit should malfunction or be damaged in any manner.
- 8. This appliance is not intended for commercial use. It is for household use only.
- 9. The use of attachments not recommended by manufacturer may cause damage or injury.
- 10. Avoid contacting moving parts.
- 11. Do not use outdoors. Do not use appliance for other than intended use.
- 12. Do not let cord hang over edge of table or counter, or touch hot surfaces.
- 13. Do not place on or near a hot gas or electric burner, or in a heated oven.
- 14. To disconnect, grip plug and pull from wall outlet. Never pull on cord.
- 15. The unit may vibrate or move during the kneading process. Do NOT place the unit near the edge of a countertop. Place the unit securely where movement of the unit will not cause it to fall off the countertop.

SAVE THESE INSTRUCTIONS

Note:

- A. A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- B. Extension cords are available and may be used if care is exercised in their use.
- C. If extension cord is used:
 - the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
 - (2) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- D. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Table of Contents

Basic principles when baking with <i>Bread Bakery</i> [*]	3
-Basic features	3
Baking programs	4
Parts identification	5
Control panel-display/functions	6
How to use	
-To use the timer for baking loaves only	
with the BAKE option	10
-Using the BAKE RAPID option	10
-Using the DOUGH option	11
-Using the BAKE ONLY program	11—12
How to clean	12
Slicing and storing the bread	13
Leakage of bread ingredients from the bread pan	
Specifications	13
Display indications for abnormal conditions	14
Before calling for service	
Ingredients	17—18
Other ingredients used for flavored loaves	19
Tips for baking whole wheat & multigrain breads	19
Differences in baking results	
Recipes	21—33
Basic recipes	21—23
Whole wheat recipes	24—25
Multigrain recipes	26
French recipes	27
Dough recipes	
Pizza dough recipes	
Bake only recipes	
Warranty	

Basic Features

MENU Bread programs available:

BASIC	For producing loaves of bread using strong wheat flour (bread flour).
WHOLE WHEAT	For loaves using whole wheat flour as the main ingredient.
	For breads with cereals/grains such as rye, millet, soy, corn etc. mainly using wholemeal strong flour.
	For loaves with crisp crust and open texture. The taste is crisp because sugar is not included in the ingredients.
PIZZA	A rapid dough program for pizza, focaccia and other Italian breads.
BAKE ONLY	A program for baking cakes only.

SELECT) Baking options available:

BAKE The unit automatically mixes ingredients, kneads the dough, rises it and bakes it.

- BAKE RAPID The unit mixes ingredients, kneads the dough, rises it and automatically bakes it faster than the standard BAKE option.
- BAKE SANDWICH. . . The unit automatically makes a medium size loaf of bread with a soft crust suitable for sandwich slices.
- BAKE RAISIN The unit automatically makes bread as in the BAKE option. A beeper sounds to let you know when to add dried fruits, such as raisins. This is to prevent them from being crushed during the kneading process.

DOUGH The unit automatically prepares dough for pizzas, dinner rolls, donuts, croissants, etc.

DOUGH RAISIN The unit automatically prepares dough as in the DOUGH option. A beeper sounds to let you know when to add dried fruits as in the BAKE RAISIN option.

- A 13-hour timer allows you to prepare everything the night before and wake up to the aroma of freshly baked bread. (Certain BAKE options only). The result may differ when the timer is used.
- The beep sounds eight times when baking on the BAKE option or rising of dough on the DOUGH option is completed.
- The beep also sounds in the BAKE RAISIN and DOUGH RAISIN option, when the machine pauses for 1 minute during the kneading process to add the raisins, chopped dried fruits and / or nuts.



The choice of size and crust color is possible for the following options: If not selected, the *Bread Bakery* will automatically select XL size with a medium crust.

	5	Size Selectio	n	Crust	Colour Sele	ection
	XL	L	М	Dark	Medium	Light
basic BAKE	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark
basic BAKE RAPID	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark	\checkmark
basic BAKE RAISIN	\checkmark	\checkmark	\checkmark		\checkmark	\checkmark
whole wheat BAKE	\checkmark	\checkmark	\checkmark			
whole wheat BAKE RAPID	\checkmark	\checkmark	\checkmark			
whole wheat BAKE RAISIN	\checkmark	\checkmark	\checkmark			

• Size and crust colour will be affected by the room temperature and the quality of flour and/or other ingredients.

NOTE: • The duration of each process is approximate and will vary according to the ambient temperature.

- The following time is when the timer is not used. (The availability to choose the timer is indicated with a tick (\mathcal{V}) in the "timer" column.)
- •There will be keep-warm of up to 60 minutes after the baking is complete until the STOP pad is pressed, for all BAKE options. The keep-warm is not available for the DOUGH option and the BAKE ONLY option.
- •For BAKE RAISIN & DOUGH RAISIN options, there will be a break of 3 minutes during the kneading process to add dried fruits and nuts.


BAKE options

		Basic Bake Basic Bake Sandwich	Basic Bake Rapid	Basic Bake Raisin	Whole Wheat Bake Whole Wheat Bake Sandwich Multigrain Bake	Whole Wheat Bake Rapid	Whole Wheat Bake Raisin	French Bake	Bake Only
P	Rest	30 ~ 60 min	—	30 ~ 60 min	60 ~ 90 min	15 min	60 ~ 90 min	40 min ~ 1 hr 55 min	—
0	Knead	15 ~ 30 min	15 ~ 20 min	15 ~ 30 min	15 ~ 25 min	15 ~ 25 min	15 ~ 25 min	10 ~ 20 min	—
e s	Rise	1 hr 50 min ~ 2 hr 20 min	approx. 1 hour	1 hr 50 min ~ 2 hr 20 min	2 hr 20 min ~ 2 hr 50 min	approx. 1 hr 40 min	2 hr 20 min ~ 2 hr 50 min	2 hr 55 min ~ 4 hr 10 min	—
s	Bake	50 min	35 min	50 min	50 min	45 min	50 min	55 min	30 ~ 90 min
	Total	4 hours	1 hr 55min	4 hours	5 hours	3 hours	5 hours	6 hours	30 ~ 90 min
	Timer	\mathcal{V}			\mathcal{V}			\mathcal{V}	

DOUGH options

		Basic Dough Basic Dough Raisin	Whole Wheat Dough Whole Wheat Dough Raisin Multigrain Dough	French Dough	Pizza Dough
_	Rest	30 ~ 50 min	55 ~ 75 min	40 min ~ 1 hr 35 min	_
P r	Knead	15 ~ 30 min	15 ~ 25 min	10 ~ 20 min	10 ~ 15 min
o c e	Rise	1 hr 10 min ~ 1 hr 30 min	1 hr 40 min ~ 2 hours	1 hr 45 min ~ 2 hr 40 min	10 ~ 15 min
s	Knead			_	Approx. 10 min
Ū	Rise			_	Approx. 10 min
	Total	2 hr 20 min	3 hr 15 min	3 hr 35 min	45 min
	Timer				

Parts identification

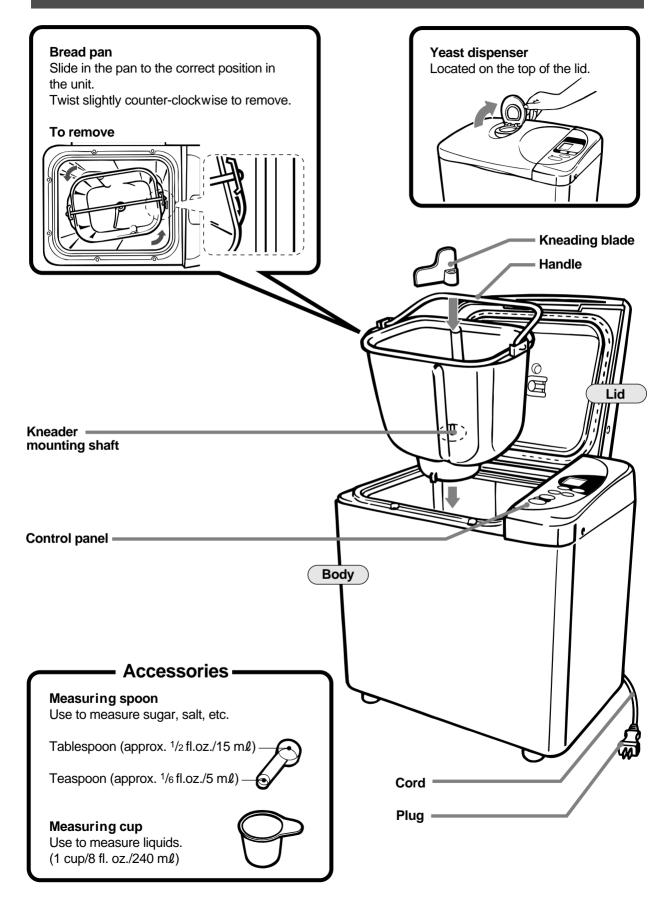


Control panel-display/functions

Be sure you understand the function of each pad before using the \mathcal{B} read \mathcal{B} akery.

NOTE: The unit has a protective film overlay on the control panel to prevent scratching or marring during shipping.


You may peel this film off and discard it.

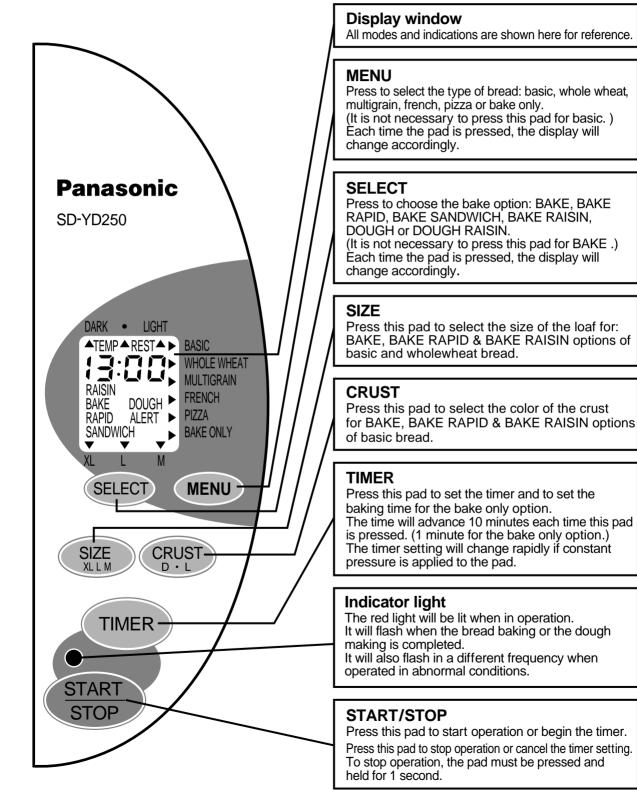

How to use

		Steps	Notes
1		Remove the bread pan from the unit. Twist slightly counter-clockwise and pull up, using the handle. Mount the kneading blade on the shaft. Make sure that the kneading blade and the kneading shaft are free of bread crumbs.	The kneading blade is designed to fit loosely on the shaft with some room for turning.
2		Place all the ingredients <u>except the</u> liquids and dry yeast inside the bread pan. RAISIN modes only You may place dried fruits later when the beeper sounds to prevent them from being crushed (see step 10.)	See recipes on P. 21 33. Flour, dry milk, salt, sugar, butter, etc., first.
3		Pour water and other liquids, if any, into the bread pan.	
4		Place the bread pan inside the body. Be sure the bread pan contacts the bottom of the unit. Turn the handle down.	Wipe off any moisture or foreign matter from the outside of the bread pan before placing it in the unit. If the bread pan is not placed correctly, the dough will not be kneaded properly.
5	Yeast dispenser lid	Close the top lid. Fill the yeast dispenser with the correct amount of dry yeast. After START/STOP is pressed, the yeast will automatically drop into the bread pan at the proper time. Close the yeast dispenser lid.	If any moisture remains on the dispenser, the yeast may not drop completely.
6		Close the top lid. Plug into a 120 volt outlet. D:DD appears. DO NOT press START at this stage (The machine will default to an extra large basic bread with medium crust, if START is pressed now.). Select your program first.	Position the unit away from edge of the table or counter- top. The unit may vibrate or move during the kneading process. Place the unit where it will not fall off should the unit move during the kneading process.

	Steps	Notes
7 DARK LIGHT BASIC WHOLE WHEAT MULTIGRAIN FRENCH PIZZA BAKE ONLY XL L M SELECT MENU	Press select to choose the type of bread indicated on the right of display. Keep pressing the pad to move the arrow down the list of bread types. For basic, it is not necessary to press this pad. For bake only program, refer to P.11 — 12 for instructions.	See P. 3 for choice of bread programs.
BASIC WHOLE WHEAT MULTIGRAIN RAPID SANDWICH XL L M	Press SELECT to choose BAKE RAPID, BAKE SANDWICH, BAKE RAISIN, DOUGH or DOUGH RAISIN. SELECT MENU For BAKE, it is not necessary to press this pad.	See P. 3 for choice of baking options. The option you require will flash
SIZE Select size.	CRUST Select crust color.	See availability of size and color selection on P. 3.
ORK LIGHT DARK LIGHT BAKE BASIC WHOLE WHEAT MULTIGRAIN RENCH VIL M DARK BASIC WHOLE WHEAT MULTIGRAIN RENCH NENCH NENCH MULTIGRAIN RENCH NENCH NENCH	 Press START/STOP. When the red light comes on, the program is set and no pads are now operable. "REST " begins. The resting settles the temperature of the bread pan and ingredients. After rest, the process will proceed to knead, then to rise and finally, bake. The time remaining until the bread is finished is displayed in hours and minutes. (3:59, 3:58 · · ·) Note: To cancel, press START/STOP and hold for 1 second. The display will go blank, begin again from step 7. 	 When TEMP blinks, see P.14. There will be no mixing action during resting. A clicking noise may be heard during operation. This is not a malfunction. For information of the process of each option, see P. 4. The time required for each of the steps will vary according to factors such as voltage fluctuation and room temperature.
RAISIN options only	In the last part of kneading, there will be two sessions of beep sound. RAISIN on display will blink and kneading will stop for 3 minutes. Add the dried fruits during this period to prevent them from being crushed. Close the lid and leave the unit. When 3 minutes have passed, kneading will begin again and the RAISIN will stop blinking.	The raisin beep will sound : For basic: 42~72 minutes from Start. For whole wheat: 72~102 minute from Start. Do not put your finger in the dough or touch the bread pan while adding the dried fruits. During operation, do not remove the pan, nor unplug the power cord The timer cannot be used for this option.

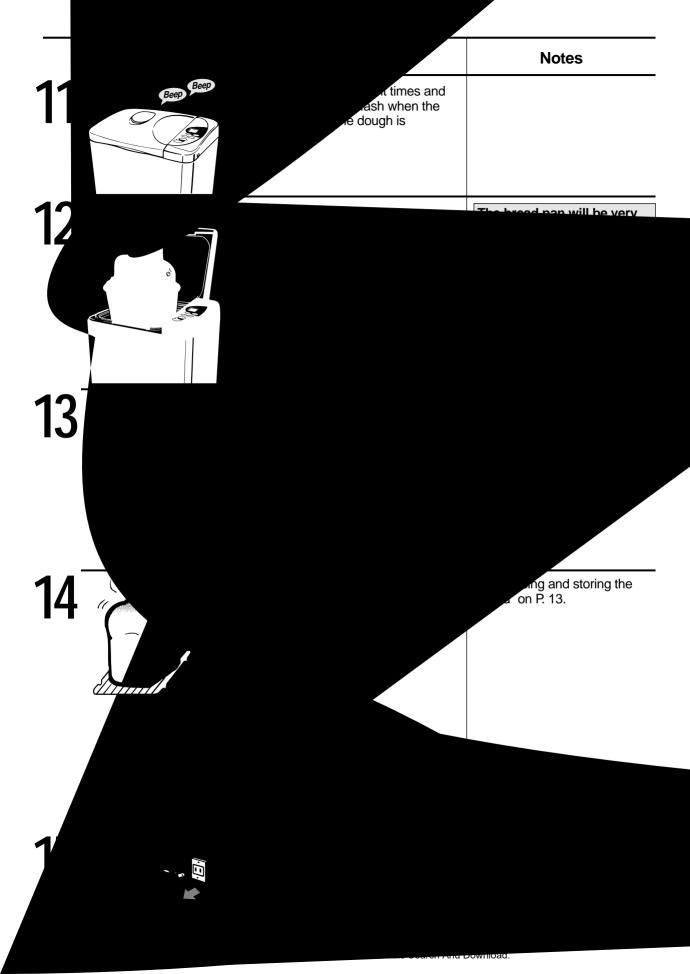

To use the timer (BAKE option only)

Follow the same steps as in pages 7-9 except step 9. For step 9, follow the instructions below.


	Steps	Notes
TIMER	Press TIMER to set the amount of time in which you want the bread to be ready.	See P. 6 for further explanation of the TIMER pads.
	Time may be set for any length of time from 4 hours to 13 hours for BASIC, from 5 hours to 13 hours for WHOLE WHEAT and MULTIGRAIN, from 6 hours to 13 hours for FRENCH.	
	Example: If the present time is 9:00 p bread to be finished at 6:30 set the timer to <i>9:30</i> (9 hou time required until the comp ours 30 minutes)	am tomorrow morning, rs and 30 minutes), the
START STOP	Press START/STOP.	There will be no action while the timer is working.
DARK LIGHT AREST BAKE BAKE XL L M The above display is for basic—BAKE, XL size, medium colour.	The time remaining before the bread is finished is displayed in hours and minutes.	

Using the BAKE RAPID option

Follow the previous steps 1-6. For step 7, choose either BASIC or WHOLE WHEAT (there is no BAKE RAPID option for the MULTIGRAIN or FRENCH). For steps 8 & 9, follow the instructions below.



MENU



Then select size and crust colour.



Press START pad.



The remaining time is displayed in hours and minutes.

The above display is for BASIC-BAKE (RAPID) option, XL size, medium color.

The timer cannot be used for this option.

Using the DOUGH option

Follow the previous steps 1–7.

		Steps	Notes
8	SELECT	Press SELECT to choose DOUGH or DOUGH RAISIN.	Dough will flash.
U	START	Note: For PIZZA DOUGH, press select until the arrow points at it. You do not have to press SELECT.	
	START STOP	Press Start pad.	
	راس	DOUGH will stop flashing.	
	will begin.	After rest, the process to make the dough time is displayed in hours and minutes.	The resting settles the temperature of the bread pan and ingredients.
9	when the dough	sound eight times and the indicating light will flash is completed. Press STOP pad when the beeper the bread pan. Close the lid. Unplug after use.	
	START STOP	The display will go out when the beeper stops, but the indicating light will flash until the STOP pad is pressed.	
10	Shape and give oven as per the	e dough final rising before baking in a conventional recipes given.	
11		completed, remove from the oven, using your d cool on a wire rack.	The timer cannot be used for this option.

Using the bake only program

		Steps	Notes
1		Prepare cake in a separate mixing bowl.	Follow instructions in the Cookbook for details.
2		 Place the mixture carefully into the lined bread pan. (The kneading blade must be removed.) 	Ensure that the bread pan is lined with baking parchment so the cake mixture does not touch the sides.
3	MENU	Press select to choose BAKE ONLY.	

		Steps	Notes
4	TIMER	Press TIMER to set the required time. (Between 30 to 90 minutes.) The Timer cannot be used to delay the start of baking.	Time indication starts from 30 minutes and moves up to 1 hour 30 minutes in 1 minute increment.
5	STOP	Press START / STOP.	
6	of the ba If the bal repeating pressed.	mpletion of baking, you may check the consistency ked product by piercing the centre with a skewer. king is still insufficient, you may additionally bake by g above steps 3 & 4, after START/STOP has been The additional baking time may be set as long as mulated baking time does not exceed 90 minutes.	When checking with a skewer, take utmost care not to burn yourself as the oven cavity will be extremely hot.

How to clean

Before cleaning the unit, unplug and allow the unit to cool.

Yeast dispenser opening	Body and Lid
Lid	Body and lid should be wiped clean with a damp cloth. Use only mild liquid detergent. For baked-on materials, use a non scratch scourer and detergent on the interior.
	Do not use cleansers, steel wool pads, or other abrasive materials.
Temperature sensor	Do not use benzine, thinner, alcohol, etc.
	Temperature sensor Wipe gently and avoid deforming the temperature sensor.
Yeast dispenser	Yeast dispenser
	Wipe clean with a dry cloth. If a damp cloth is used, the
Body	dispenser must be dry completely before reuse.
	Bread pan and kneading blade
	If the kneading blade cannot be easily removed from the pan by twisting the mounting shaft, pour lukewarm water into the cooled
	pan and allow to soak for 5—10 minutes. Remove the blade. Always remove the blade and wash the pan with mild, liquid
	detergent after each use. DO NOT SUBMERGE THE PAN IN WATER.
	Do not use other abrasive materials or the pan may be scratched.
Kneader mounting shaft	These parts are not dishwasher safe.
	Measuring cup and spoon Rinse and wipe dry.

1. Be sure that the unit and the bread pan have dried completely before storing.

2. On the interior of the body some discolouration may occur with use.

Slicing and storing the bread

Cool the bread on a wire rack before slicing or storing.

Slicing homemade bread

Homemade bread can be cut with a bread knife.



Place the loaf on its side and cut with a sawing motion.

Storing homemade bread

After cooling the bread completely at room temperature, wrap it in a foil or a plastic bag to preserve freshness.

To enjoy the taste of freshly baked homemade bread, try to consume your bread as soon as possible.

For longer storage, wrap well and store in the freezer.


It is better to slice the loaf before freezing.

Leakage of bread ingredients from the bread pan

With extended use, a small quantity of ingredients may leak out from the outlet of the bread pan. This is normal. The bread pan is designed so that the ingredients in the kneader mounting shaft unit may be discharged to prevent rotation stoppage.

When the kneader mounting shaft does not rotate, it is necessary to replace the kneader mounting shaft unit with a new one.

Consult with your authorised Panasonic Service Centre for servicing or for purchase of replacement parts.

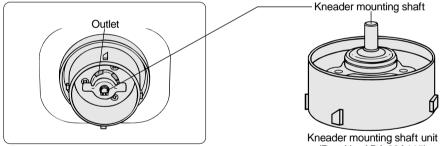

(Part No. ADA 29A115)

Specifications

Power supply	120V AC 60 Hz
Power consumed	550 W
Capacity	max. 21 ³ /4 oz./620 g of bread flour min. 14 ³ /4 oz./400 g of bread flour
Timer	Digital timer (up to 13 hours)
Protective device	Self-resetting motor protector
Dimensions (H X W X D)	approx. 14 X 13 ¹ / ₃ X 9
Weight	approx. 15 lbs.
Accessories	Measuring cup, measuring spoon

Download from Www.Somanuals.conf.3Att Manuals Search And Download.

Display indications for abnormal conditions

Yes No

Download from Www.Somanuals.colfl. All Manuals Search And Download.

Before calling for service

Unplugged. O Implugged. Ingredient spilled on heater element. O Implugged. Power interruption (display 0:00). Implugged. O Start/Stop pad was pressed after starting. Implugged. Implugged. Top lid was open during operation. Implugged. Implugged. Selection was wrong (DOUGH option was chosen). Implugged. Implugged. Bread left in bread pan too long after baking. Implugged. Implugged. Bread sliced just after baking (Steam was not allowed to escape). Implugged. Implugged. Water added after kneading flour. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged. Implugged.	
Power interruption (display 0:00). Start/Stop pad was pressed after starting. Top lid was open during operation. Selection was wrong (DOUGH option was chosen). Bread left in bread pan too long after baking. Bread sliced just after baking (Steam was not allowed to escape). Water added after kneading flour. Kneading blade not installed properly in pan.	
Top lid was open during operation. Image: Constant operation operation operation. Selection was wrong (DOUGH option was chosen). Image: Constant operation operation. Bread left in bread pan too long after baking. Image: Constant operation operation. Bread sliced just after baking (Steam was not allowed to escape). Image: Constant operation operation. Water added after kneading flour. Image: Constant operation operation. Kneading blade not installed properly in pan. Image: Constant operation.	
Top lid was open during operation. Image: Constant operation operation operation. Selection was wrong (DOUGH option was chosen). Image: Constant operation operation. Bread left in bread pan too long after baking. Image: Constant operation operation. Bread sliced just after baking (Steam was not allowed to escape). Image: Constant operation operation. Water added after kneading flour. Image: Constant operation operation. Kneading blade not installed properly in pan. Image: Constant operation.	
Top lid was open during operation. Image: Constant operation operation operation. Selection was wrong (DOUGH option was chosen). Image: Constant operation operation. Bread left in bread pan too long after baking. Image: Constant operation operation. Bread sliced just after baking (Steam was not allowed to escape). Image: Constant operation operation. Water added after kneading flour. Image: Constant operation operation. Kneading blade not installed properly in pan. Image: Constant operation.	
Kneading blade not installed properly in pan.	
Kneading blade not installed properly in pan.	
Kneading blade not installed properly in pan.	
Kneading blade not installed properly in pan.	
Net enque	
Net enough	
Not enough	
Too much	0
Flour Not enough Yeast Not enough Yeast Too much No yeast No yeast	
တ္ 🛓 Yeast Too much	0
Sector Yeast Too much No yeast No yeast	
Image: Second state Not enough	
Water Not enough Water Too much	0
B ≥ No sweetening agents	
Not enough Not enough Vater Too much No sweetening agents Ingredients used other than prescribed. Flour Old flour used. Vrong type of flour used. Yeast not placed in pan first, or liquids	0
Old flour used.	
Wrong type of flour used.	0
Yeast not placed in pan first, or liquids touched yeast before kneading.	0
Yeast Old yeast used.	
Wrong type of yeast used.	
Temperature of water was either too hot or too cold. (Not within op merature range of 68±8°F/20±5°C.)	

	Collapsed	Bread	Unlea	evened or not	leavened en	ough	Not baked.	Slices
	after over-rising.	doesn't rise enough.	Top of bread floured.	Under- browned and sticky.	Browned and floured sides, center sticky and raw.	Sides brown but flour coated bottom.		unevenly and is sticky.
				0			0	
				0			0	
							0	
							0	
_								
								0
					0			
			0					
						-		
						0		
		0		0				
	0							
		^		0		0		
	\bigcirc	0				0		
	0	0						
		0						
		0						
		0						
		0						
_		0						
		0						
		0						

-

Ingredients

Since the bread program on your Automatic *Bread Bakery*® is completely computerised, the success of your loaf depends on the quantity and quality of the ingredients

Flour:

Wheat flour provides the bulk and structure of bread. Flour is classified into two types, strong flours which are milled from hard wheat and weak flours which are milled from soft wheat. The difference in the two types



of wheat is the content of proteins that form gluten (gluten is the important constituent of bread which provides its structure and its stretchy, chewy texture. Gas which is released during fermentation is trapped within the elastic network of gluten, thus making the dough rise. Gluten development mostly takes place during dough kneading).

Strong flours contain a high content of protein necessary for the development of gluten. Always use strong flour - labelled as suitable for bread making when using the recipes in this book.

Weak flour such as cake flour and pastry flour, are less in protein content and are suitable for products which have a light, crumbly texture and do not require much gluten development.

All purpose flour is used for many purposes, as the name suggests, in home baking. It is slightly weaker than bread flour. In our recipes, it is blended with the bread flour and not used alone.

Self rising flour is a white flour to which baking powder and sometimes salt have been added.

Weak flours, all purpose flour and self-rising flour may not be substituted for bread flour in the included recipes.

Whole wheat flour is made by grinding the entire wheat kernel, including the bran and germ. 100% whole wheat bread or breads containing a high percentage of whole wheat flour will be lower in height and heavier in texture than bread baked with a high percentage of bread flour. This is because the gluten strands are cut by the edges of bran flakes and the germ, rich in minerals, inhibits fermentation. **Rye flour** contains some proteins but these do not form sufficient gluten. Therefore, bread baked with rye flour will be dense and heavy. When a recipe in this book calls for rye flour, do not use more than the stated quantity, as it could overload the motor.

Other flour: Products milled from other grains are occasionally used in bread. i.e. corn meal, rice, millet, soy, oat, buckwheat and barley flours. These do not contain protein that form sufficient gluten and therefore they should not be substituted for bread flour in the recipes. For gluten free bread making see page 6. Do not add more than the stated amount in the following recipes, otherwise a good result will not be achieved.

Sugars:

Sugars or sweetening agents have the following purposes in bread making:

- They add sweetness and flavour.
- They add softness and fineness to the texture.

They give crust colour.

- They contribute to keeping qualities by retaining moisture.
- They provide food for yeast.

Besides granulated sugar or caster sugar, brown sugar, honey and molasses can be substituted in the recipes. Recipes including fruit generally require less added sugar due to the high sugar content of the fruit.

Fats:

The major purpose of fats in bread baking are:

- They tenderize the bread.
- · They add flavour and richness.
- They contribute to keeping qualities by retaining moisture.

Any fat can be used, however, we recommend butter for the best flavour and texture.



Ingredients

Milk and milk products:

Their main purposes are:

- · They enhance flavour.
- They increase the nutritional value of bread.
- · Milk solids include protein, lactose (milk sugar), and minerals.

Most recipes call for the use of milk powder.

NEVER use fresh milk on the overnight programme. Otherwise it may sour during the rest time, spoiling the final flavour.

Salt:

Salt has the following functions in bread baking.

- · It strengthens gluten structure and makes it more stretchable.
- · It inhibits yeast growth.
- · It enhances the flavour.

Therefore, too much salt will inhibit fermentation whereas too little will result in weak gluten structure. Both will result in a bread with low volume and poor texture. Use ordinary table salt. DO NOT USE coarselv GROUND SALT.

Liauid:

Cold tap water should (For BAKE RAPID, lukewarm water

should be used, especially during the verv cold winter months.) Cold fresh milk can be substituted to improve the keeping quality and



nutritional value of the loaf, which will have a softer browner crust.

NEVER use fresh milk on the overnight program. Always measure the liquid stated in the recipe carefully, using the measuring cup provided. TOO MUCH LIQUID will cause the dough to collapse, giving a poor appearance.



Yeast

Yeast is microsc a leaver It acts o into carb This gas of yeast The alco

Yeast is veast is prelimina and may For *Bred*

fresh ve ferment instant not disso in the bre As there activate, sensor to during th

We use t our recip loaf. Yeast mu storage.

For longe

60°F-10


70°F to 90°F.....Best growth (renne and proofing temperatures for bread growth)

Above 120°FYeast is killed

Chemical leaveners

Chemical leaveners are those that release gases produced by chemical reactions. Chemical leaveners used in this book are baking soda (sodium bicarbonate) and baking powder.

Download from Www.Somanuals.dom. All Manuals Search And Download.

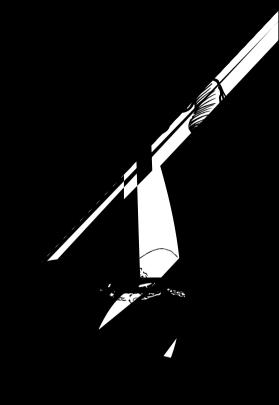

TIPS TOT DAKING WHOLE WHEAT AND HURLIGIAN DIEAUS

The result of breads, such as whole wheat breads and multigrain breads, are affected greatly by the quality of ingredients, especially the flour. The flour quality is affected by the keeping methods, the temperature, humidity, etc. Another important factor about the flour is that its quality also differs from year to year, season to season due to the quality of the wheat crop affected by the weather.

Sometimes due to bad weather conditions, the crop may not grow with as much gluten forming properties as it would require to produce flour for making excellent breads.

When the quality of flour is poor, the bread may not rise, or collapse after rising due to weak gluten. In such cases, take the following measures to obtain better results.

- 1. At least 1/8 of the flour (about 7 oz.) should be white bread flour, rather than whole wheat flour.
- and/or 2. Reduce 1/8 cup to 1/4 cup of water from the regular amount.

If above still does/do not solve problems,

3. Reduce the amount of dry yeast to 1 teaspoon.

The loaf produced by above methods may be low or small.

Baking results of choice of ingree should be reme

¥Bake at optir

Temperature i to sense the te it should be re For optimum r

Temperature of the same temperature of adjust. When u adjust water to

Other environn humidity, the end necessary rega

¥Measure the i

Accurate meas more accurate t in weight as wel The only ingredi liquids and very weigh by a kitche ingredient in the i Level the top with cup or spoon on t

Correct way to use a measuring cup. (Use provided measur

¥Always

Electr'

the straight edge of remove the excess.

ey become outdated. he refrigerator y place (below 68¡F).

visual inspection. of 105;F to 115;F ivating if foam does

one.

Basic

BAKE & BAKE RAPID mode For BAKE RAPID mode, add extra 1 tsp of dry yeast. C=cup(s), tsp=teaspoon(s), TBSP=Tablespoon(s) <Note for measuring flour> The amounts shown in () are not as precise as weight measurements. For better results, please use weight measurements. (1 cup = 4.92 oz.)

Basic White Bread

	Х	L	l	L		Μ	
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	
Bread flour	(4 ⁷ / ₁₆ C)	21 ³ /4 oz.	(3 ¹¹ / ₁₆ C)	18¹/₄ oz.	(3 C)	14 ³ /4 oz.	
Salt	2 tsp		2 tsp		1 ¹ /2 tsp		
Dry milk	2 TBSP		2 TBSP		11/2 TBSP		
Butter	2 ¹ / ₂ TBSP		2 TBSP		1 ¹ / ₂ TBSP		
Sugar	2 TBSP		1 ³ /4 TBSP		1 ¹ / ₂ TBSP		
Water	1 ³ /4 C	14 fl.oz.	1 ¹ /2 C	12 ¹ /4 fl.oz.	1 ¹ /4 C	10 fl.oz.	
Dry yeast	1 ¹ /2 tsp		1¹/₄ tsp		1 tsp		

Carrot Spice Bread

(): measurements not as precise as weight measurements.

	Х	L		_	М	
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Bread flour	(4 ⁷ / ₁₆ C)	21 ³ /4 oz.	(3 ¹¹ / ₁₆ C)	18 ¹ /4 oz.	(3 C)	14 ³ /4 oz.
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		1 ¹ /2 TBSP	
Butter	2 ¹ / ₂ TBSP		2 TBSP		1 ¹ / ₂ TBSP	
Carrots, grated	1/4 C		2 ¹ / ₂ TBSP		2 TBSP	
Allspice	4 tsp		1TBSP		2 tsp	
Honey	2 TBSP		2TBSP		1 ¹ /2 TBSP	
Water	11/2 C	12 ¹ /4 fl.oz.	17/16 C	11 ¹ /4 fl.oz.	1 ¹ /8 C	9 fl.oz.
Dry yeast	11/2 tsp		1¹/₄ tsp		1 tsp	

Cranberry Bread

(): measurements not as precise as weight measurements.

	X	L			м	
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Bread flour	(4 ⁷ / ₁₆ C)	21 ³ /4 oz.	(3 ¹¹ / ₁₆ C)	18¹/₄ oz.	(3 C)	14 ³ /4 oz.
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		11/2 TBSP	
Butter	2 ¹ / ₂ TBSP		2 TBSP		1 ¹ / ₂ TBSP	
Sugar	2 TBSP		1 ³ /4 TBSP		1 ¹ / ₂ TBSP	
Cranberry juice	³ /4 C	6 fl.oz.	5/8 C	5 fl.oz.	1/2 C	4 fl.oz.
Water	1 C	8 fl.oz.	¹⁵ /16 C	7¹/₄ fl.oz.	³ /4 C	6 fl.oz.
Dry yeast	1 ¹ /2 tsp		1¹/₄ tsp		1 tsp	

Egg Bread

(): measurements not as precise as weight measurements.

	X	L	L	_	Μ	
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Bread flour	(4 ⁷ / ₁₆ C)	21 ³ /4 oz.	(3 ¹¹ / ₁₆ C)	18¹/₄ oz.	(3 C)	14 ³ /4 oz.
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		1 ¹ /2 TBSP	
Butter	2 ¹ / ₂ TBSP		2 TBSP		1 ¹ /2 TBSP	
Sugar	2 TBSP		1 ³ /4 TBSP		1 ¹ /2 TBSP	
Egg	2		2		1	
Milk with the egg*	1 ³ /4 C	14 fl.oz.	11/2 C	12 ¹ /4 fl.oz.	1¹/₄ C	10 fl.oz.
Dry yeast	1 ¹ /2 tsp		1¹/₄ tsp		1 tsp	

*Place the egg (s) inthe measuring cup, then add milk.

(): measurements not as precise as weight measurements.

Herb Bread

	X		L		Ν	Λ
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Bread flour	(4 ⁷ / ₁₆ C)	21 ³ /4 oz.	(3 ¹¹ / ₁₆ C)	18 ¹ /4 oz.	(3 C)	14 ³ /4 oz.
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		1 ¹ /2 TBSP	
Butter	2 ¹ / ₂ TBSP		2 TBSP		1 ¹ /2 TBSP	
Dry parseley	1/4 C		3 TBSP		2 TBSP	
Caraway seeds	3 TBSP		2 TBSP		1 TBSP	
Dill seeds	3 TBSP		2 TBSP		1 TBSP	
Water	1 ⁷ /8 C	15 fl.oz.	1 ⁷ /16 C	11 ¹ /4 fl.oz.	11/8 C	9 fl.oz.
Dry yeast	1 ¹ /2 tsp		1¹/₄ tsp		1 tsp	

Download from Www.Somanuals.com. All Mangasy Benefits Angt of which as weight measurements.

BAKE & BAKE RAPID mode For BAKE RAPID mode, add extra 1 tsp of drv veast. C=cup(s), tsp=teaspoon(s), TBSP=Tablespoon(s) <Note for measuring flour> The amounts shown in () are not as precise as weight measurements. For better results, please use weight measurements. (1 cup = 4.92 oz.)

Milk Bread

	XL		L	L		1
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Bread flour	(4 ⁷ / ₁₆ C)	21 ³ /4 oz.	(3 ¹¹ /16 C)	18¹/₄ oz.	(3 C)	14 ³ /4 oz.
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		1 ¹ / ₂ TBSP	
Butter	2 ¹ / ₂ TBSP		2 TBSP		1 ¹ / ₂ TBSP	
Sugar	2 TBSP		1 ³ /4 TBSP		1 ¹ / ₂ TBSP	
Milk	1 ¹³ /16 C	14 ¹ / ₂ fl.oz.	1 ¹ /2 C	12 ¹ /4 fl.oz.	1 ¹ /4 C	10 fl.oz.
Dry yeast	11/2 tsp		1¹/₄ tsp		1 tsp	

Pepperoni & Cheese Bread

(): measurements not as precise as weight measurements.

Basic

	Х	L	L	-	Ν	Λ
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Bread flour	(4 ⁷ /16 C)	21 ³ /4 oz.	(3 ¹¹ / ₁₆ C)	18 ¹ /4 oz.	(3 C)	14 ³ /4 oz.
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		1 ¹ /2 TBSP	
Sugar	2 TBSP		1 ³ / ₄ TBSP		1 ¹ / ₂ TBSP	
Pepperoni, finely chopped		4 oz.		3 oz.		2 oz.
Provolone cheese, chopped	³ /8 C		1/4 C		1/8 C	
Parmesan cheese, grated	³ /16 C		1/8 C		1/16 C	
Garlic powder	1/2 tsp		1/2 tsp		1/4 tsp	
Onion powder	1/2 tsp		1/2 tsp		1/4 tsp	
Oregano	1/4 tsp		1/4 tsp		1/4 tsp	
Olive oil	1 TBSP		2 tsp		1 tsp	
Water	15/8 C	13 fl.oz.	17/16 C	11 ¹ /2 fl.oz.	1 ³ /16 C	9 ¹ / ₂ fl.oz.
Dry yeast	1 ¹ /2 tsp		1 ¹ /4 tsp		1 tsp	

Rye Bread with Onions and Caraway

(): measurements not as precise as weight measurements.

	Х	L	L	-	Μ	
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Bread flour	(4 ⁷ / ₁₆ C)	21 ³ /4 oz.	(3 ¹ / ₁₆ C)	18¹/₄ oz.	(3 C)	14 ³ /4 oz.
Rye flour	1/4 C		³ /16 C		¹ /8 C	
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		1 ¹ / ₂ TBSP	
Sugar	2 TBSP		1 ³ / ₄ TBSP		1 ¹ / ₂ TBSP	
Butter	2 ¹ / ₂ TBSP		2 TBSP		1 ¹ / ₂ TBSP	
Onions, chopped	³ /8 C		1/4 C		1/8 C	
Caraway seeds	1 ¹ /2 TBSP		1 TBSP		2 tsp	
Water	1 ¹ / ₂ C	12 ¹ /4 fl.oz.	1 ³ /8 C	11 fl.oz.	1 ³ /16 C	9 ¹ / ₂ fl.oz.
Dry yeast	11/2 tsp		1¹/₄ tsp		1 tsp	

Spicy Cheese

(): measurements not as precise as weight measurements.

(): measurements not as precise as weight measurements.

11/2 TBSP

3/16 C

3/16 C

1¹/16 C

1 tsp

8³/₄ fl.oz.

	Х	ίL		_	Μ	
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Bread flour	(4 ⁷ / ₁₆ C)	21 ³ /4 oz.	(3 ¹ / ₁₆ C)	18¹/₄ oz.	(3 C)	14 ³ /4 oz.
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		11/2 TBSP	
Sugar	2 TBSP		1 ³ / ₄ TBSP		11/2 TBSP	
Dry mustard	2 tsp		1 ¹ /2 tsp		1 tsp	
Black pepper	1/2 tsp		1/2 tsp		1/4 tsp	
Butter	2 ¹ / ₂ TBSP		2 TBSP		1 ¹ /2 TBSP	
Cheddar cheese, shredded	³ /8 C		1/4 C		³ /16 C	
Worcester sauce	2 TBSP		1 ¹ /2 TBSP		1 TBSP	
Water	1 ⁷ /8 C	15 fl.oz.	1 ⁹ /16 C	12 ¹ / ₂ fl.oz.	1 ⁵ /16 C	10 ¹ / ₂ fl.oz.
Dry yeast	1 ¹ /2 tsp		1 ¹ /4 tsp		1 tsp	

Zucchini

Bread flour

Cinnamon

Walnuts, finely chopped

Zucchini, grated

Salt

Dry milk

Sugar

Butter

Water

Dry yeast

XL М C/TBSP/tsp oz./fl.oz. C/TBSP/tsp oz./fl.oz. C/TBSP/tsp oz./fl.oz. (47/16 C) 21³/4 oz. (3¹/₁₆ C) 18¹/4 oz. 14³/4 oz. (3 C) 2 tsp 2 tsp 11/2 tsp 2 TBSP 2 TBSP 11/2 TBSP 2 TBSP 13/4 TBSP 11/2 TBSP 2 tsp 11/2 tsp 1 tsp 1/2 tsp 1/4 tsp Cloves, Powdered 1 tsp

2 TBSP

1/4 C

1/4 C

15/16 C

1¹/4 tsp

(): measurements not as precise as weight measurements.

10¹/₂ fl.oz.

Download from Www.Somanuals.co22 All Manuals Search And Download.

12 fl.oz.

2¹/₂ TBSP

5/16 C

5/16 C

11/2 C

11/2 tsp

Basic Raisin

Select BAKE RAISIN mode C=cup(s), tsp=teaspoon(s), TBSP=Tablespoon(s) Ingredients in *italics* should be added at the beep. <Note for measuring flour> The amounts shown in () are not as precise as weight measurements. For better results, please use weight measurements. (1 cup = 4.92 oz.)

Basic Raisin

	XL			L		1
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Bread flour	(4 ⁷ / ₁₆ C)	21 ³ /4 oz.	(3 ¹¹ / ₁₆ C)	18 ¹ /4 oz.	(3 C)	14 ³ /4 oz.
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		11/2 TBSP	
Butter	2 ¹ / ₂ TBSP		2 TBSP		1 ¹ / ₂ TBSP	
Sugar	2 TBSP		1 ³ / ₄ TBSP		1 ¹ / ₂ TBSP	
Water	1 ³ /4 C	14 fl.oz.	1 ¹ /2 C	12 ¹ /4 fl.oz.	1 ¹ /4 C	10 fl.oz.
Dry yeast	1 ¹ /2 tsp		1 ¹ /4 tsp		1 tsp	
Raisins		4.4 oz.		3 ¹ /2 oz.		3 oz.

(): measurements not as precise as weight measurements.

*If you find that the raisins do not get mixed into the dough but remain burnt on the surface of the loaf, which then come off after being baked, increase 1—2 tablespoons of water to make the dough softer the next time.

Fruit Nut Bran

	X	L	l	-	М	
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Bread flour	(4 ⁷ / ₁₆ C)	21 ³ /4 oz.	(3 ¹¹ / ₁₆ C)	18¹/₄ oz.	(3 C)	14 ³ /4 oz.
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		11/2 TBSP	
Butter	2 ¹ / ₂ TBSP		2 TBSP		11/2 TBSP	
Sugar	2 TBSP		1 ³ / ₄ TBSP		1 ¹ / ₂ TBSP	
Bran flakes	1/4 C		1/4 C		1/8 C	
Sliced almonds	³ /8 C		⁵/16 C		1/4 C	
Water	1 ³ /4 C	14 fl.oz.	1 ¹ /2 C	12 ¹ /4 fl.oz.	1 ¹ /4 C	10 fl.oz.
Dry yeast	1 ¹ /2 tsp		1¹/₄ tsp		1 tsp	
Dried fruit bits		3 ¹ / ₂ oz.		3 oz.	•	2 oz.

(): measurements not as precise as weight measurements.

Basic Sandwich

Select BAKE SANDWICH mode

C=cup(s), tsp=teaspoon(s), TBSP=Tablespoon(s) These loaves are all one size. Size selection cannot be made. <Note for measuring flour> The amounts shown in () are not as precise as weight measurements. For better results, please use weight measurements. (1 cup = 4.92 oz.)

Basic Sandwich

C/TBSP/tsp	oz./fl.oz.
(3 C)	14 ³ /4 oz.
1 ¹ /2 tsp	
1 ¹ /2 TBSP	
11/2 TBSP	
1 ¹ /2 TBSP	
1 ¹ /4 C	10 fl.oz.
1 tsp	
	(3 C) 1 ¹ / ₂ tsp 1 ¹ / ₂ TBSP 1 ¹ / ₂ TBSP 1 ¹ / ₂ TBSP 1 ¹ / ₂ TBSP 1 ¹ / ₄ C

(): measurements not as precise as weight measurements.

Walnut Cinnamon

	C/TBSP/tsp	oz./fl.oz.
Bread flour	(3 C)	14 ³ /4 oz.
Salt	1 ¹ /2 tsp	
Dry milk	1 ¹ /2 TBSP	
Butter	1 ¹ /2 TBSP	
Brown sugar	1 ¹ /2 TBSP	
Cinnamon	1 tsp	
Walnuts	³ /16 C	
Water	1¹/4 C	10 fl.oz.
Dry yeast	1 tsp	

(): measurements not as precise as weight measurements.

Whole Wheat

100% Whole Wheat

	XL		L	-	М	
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Whole wheat flour	(4 ⁵ / ₁₆ C)	21 ³ /16 oz.	(3 ¹¹ / ₁₆ C)	18 ¹ /4 oz.	(3 C)	14 ³ /4 oz.
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		1 ¹ /2 TBSP	
Butter	2 ¹ / ₂ TBSP		2 TBSP		1 ¹ /2 TBSP	
Molasses	2 TBSP		1 ³ / ₄ TBSP		1 ¹ /2 TBSP	
Water	1 ³ /4 C	14 fl.oz.	1 ¹ /2 C	12¹/₄ fl.oz.	1¹/4 C	10 fl.oz.
Dry yeast	11/2 tsp		1¹/₄ tsp		1 tsp	

Honey Walnut

XL М C/TBSP/tsp oz./fl.oz. C/TBSP/tsp oz./fl.oz. C/TBSP/tsp oz./fl.oz. 14³/4 oz. 21³/16 oz. (3¹¹/₁₆ C) 18¹/₄ oz. Whole wheat flour (4⁵/₁₆ C) (3 C) 1¹/2 tsp Salt 2 tsp 2 tsp Dry milk 2 TBSP 2 TBSP 11/2 TBSP Butter 21/2 TBSP 2 TBSP 11/2 TBSP Walnuts, finely chopped 1/2 C 13/4 3/8 C 1¹/2 oz. 1/4 C 1¹/₄ oz. Honey 2 TBSP 1³/₄ TBSP 11/2 TBSP Water 11/4 C 1³/₄ C 14 fl.oz. 1¹/2 C 12¹/₄ fl.oz. 10 fl.oz. 11/2 tsp 11/4 tsp 1 tsp Dry yeast

Nut Bran

(): measurements not as precise as weight measurements.

(): measurements not as precise as weight measurements.

	XL		L	-	М	
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Whole wheat flour	(2 ¹ / ₈ C)	10 ¹ /2 oz.	(1 ⁷ /8 C)	9 ¹ /8 oz.	(1 ¹ / ₂ C)	7 ³ /8 oz.
Bread flour	(2 ¹ /8 C)	10 ¹ /2 oz.	(17/8 C)	9 ¹ /8 oz.	(1 ¹ / ₂ C)	7 ³ /8 oz.
Salt	2 tsp		2 tsp		11/2 tsp	
Dry milk	2 TBSP		2 TBSP		1 ¹ /2 TBSP	
Almond slices	1/2 C		³ /8 C		1/4 C	
Bran flakes	1/2 C		³ /8 C		1/4 C	
Honey	2 TBSP		1 ³ / ₄ TBSP		1 ¹ / ₂ TBSP	
Water	1 ³ /4 C	14 fl.oz.	1 ¹ /2 C	12¹/₄ fl.oz.	11/4 C	10 fl.oz.
Dry yeast	1 ¹ /2 tsp		1¹/₄ tsp		1 tsp	

Peanut Sesame

(): measurements not as precise as weight measurements.

	XL		L		Ν	М	
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	
Whole wheat flour	(2 ¹ / ₈ C)	10 ¹ /2 oz.	(1 ⁷ /8 C)	9 ¹ /8 oz.	(1 ¹ / ₂ C)	7 ³ /8 oz.	
Bread flour	(2 ¹ /8 C)	10 ¹ /2 oz.	(1 ⁷ /8 C)	9 ¹ /8 oz.	(1 ¹ / ₂ C)	7 ³ /8 oz.	
Salt	2 tsp		2 tsp		1 ¹ /2 tsp		
Dry milk	2 TBSP		2 TBSP		11/2 TBSP		
Peanut butter	1/4 C	21/4 oz.	³ /16 C	2 oz.	1/8 C	1 ¹ /2 oz.	
Brown sugar	2 TBSP		11/2 TBSP		1 TBSP		
Sesame seeds	³ /8 C		1/4 C		1 ¹ /8 C		
Water	1 ¹³ /16 C	14 ¹ /2 fl.oz.	19/16 C	12 ¹¹ /2 fl.oz.	11/4 C	10 fl.oz.	
Dry yeast	11/2 tsp		11/4 tsp		1 tsp		

Whole Wheat Yogurt

 XL
 L
 M

 C/TBSP/tsp
 oz./fl.oz.
 C/TBSP/tsp
 oz./fl.oz.

 (45/16 C)
 21³/16 oz.
 (3¹¹/16 C)
 18¹/4 oz.
 (3 C)
 14³/4 oz.

	or i bor risp	02./11.02.	0/1001/100	02./11.02.	0/1001/100	02./11.02.
Whole wheat flour	(4 ⁵ / ₁₆ C)	21 ³ /16 oz.	(3 ¹¹ / ₁₆ C)	18¹/₄ oz.	(3 C)	14 ³ /4 oz.
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		11/2 TBSP	
Butter	2 ¹ / ₂ TBSP		2 TBSP		1 ¹ /2 TBSP	
Brown sugar	2 TBSP		11/2 TBSP		1 TBSP	
Sesame seeds	³ /8 C		1/4 C		1/8 C	
Yogurt (plain)	1 C		³ /4 C		1/2 C	
Water	¹⁵ /16 C	7 ¹ /2 fl.oz.	⁷ /8 C	7 fl.oz.	¹³ /16 C	6 ¹ / ₂ fl.oz.
Dry yeast	11/2 tsp		1¹/₄ tsp		1 tsp	

(): measurements not as precise as weight measurements.

(): measurements not as precise as weight measurements.

Download from Www.Somanuals.co24. All Manuals Search And Download.

Whole Wheat Raisin

Select BAKE RAISIN mode C=cup(s), tsp=teaspoon(s), TBSP=Tablespoon(s) Ingredients in *italics* should be added at the beep. <Note for measuring flour> The amounts shown in () are not as precise as weight measurements. For better results, please use weight measurements. (1 cup = 4.92 oz.)

Whole Wheat Raisin

	XL		L	_	М	
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Whole wheat flour	(4 ¹ / ₄ C)	21 oz.	(3 ¹¹ / ₁₆ C)	18¹/₄ oz.	(3 C)	14 ³ /4 oz.
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		11/2 TBSP	
Butter	2 ¹ / ₂ TBSP		2 TBSP		1 ¹ /2 TBSP	
Molasses	2 TBSP		1 ³ / ₄ TBSP		1 ¹ /2 TBSP	
Water	1 ⁷ /8 C	15 fl.oz.	15/8 C	13 fl.oz.	1 ⁵ /16 C	10 ³ /4 fl.oz.
Dry yeast	1 ¹ /2 tsp		1 ¹ /4 tsp		1 tsp	
Raisins		4.4 oz.		3 ¹ /2 OZ.		3 oz.

(): measurements not as precise as weight measurements.

*If you find that the raisins do not get mixed into the dough but remain burnt on the surface of the loaf, which then come off after being baked, increase 1—2 tablespoons of water to make the dough softer the next time.

Apple Raisin

	Х	L	L	_	М	
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Basic flour	(2 ¹ / ₈ C)	10 ¹ /2 oz.	(1 ¹³ /16 C)	9 oz.	(1 ¹ / ₂ C)	7¹/₃ oz.
Whole wheat flour	(2 ¹ /8 C)	10 ¹ /2 oz.	(1 ¹³ /16 C)	9 oz.	(11/2 C)	7 ¹ / ₃ oz .
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		1 ¹ /2 TBSP	
Butter	2 ¹ / ₂ TBSP		2 TBSP		1 ¹ /2 TBSP	
Sugar	1 ¹ / ₂ TBSP		1 TBSP		2 tsp	
Cinammon	2 tsp		1 ¹ /2 tsp		1 tsp	
Apple, grated	1/2 C	3 ³ /4 oz.	³ /8 C	3 oz.	1/4 C	1 ³ /4 oz.
Water	1 ³ /8 C	11 fl.oz.	1¹/₄ C	10 fl.oz.	1 ¹ /16 C	8 ¹ /2 fl.oz.
Dry yeast	1 ¹ /2 tsp		1 ¹ /4 tsp		1 tsp	
Raisins		4.4 oz.		3 ¹ /2 OZ.		3 oz.

Orange Anise

(): measurements not as precise as weight measurements.

	X	L	l	-	Μ	
	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.	C/TBSP/tsp	oz./fl.oz.
Basic flour	(2 ¹ / ₈ C)	10 ¹ /2 oz.	(1 ¹³ /16 C)	9 oz.	(1 ¹ / ₂ C)	7 ¹ /3 oz.
Whole wheat flour	(2 ¹ /8 C)	10 ¹ /2 oz.	(1 ¹³ /16 C)	9 oz.	(11/2 C)	7 ¹ / ₃ oz.
Salt	2 tsp		2 tsp		1 ¹ /2 tsp	
Dry milk	2 TBSP		2 TBSP		1 ¹ /2 TBSP	
Butter	2 ¹ / ₂ TBSP		2 TBSP		1 ¹ /2 TBSP	
Brown sugar	2 TBSP		1 ¹ /2 TBSP		1 TBSP	
Anise	3 tsp		2 tsp		1 tsp	
Orange juice	³ /4 C	6 fl.oz	5/8 C	5 fl.oz	1/2 C	4 fl.oz
Water	1 C	8 fl.oz	¹⁵ /16 C	71/4 fl.oz	³ /4 C	6 fl.oz
Dry yeast	1 ¹ / ₂ tsp		1 ¹ /4 tsp		1 tsp	
Orange zest, chopped	³ /8 C		1/4 C		2 TBSP	

(): measurements not as precise as weight measurements.

Whole Wheat Sandwich

Select BAKE SANDWICH mode

C=cup(s), tsp=teaspoon(s), TBSP=Tablespoon(s) These loaves are all one size. Size selection cannot be made. <Note for measuring flour>

The amounts shown in () are not as precise as weight measurements. For better results, please use weight measurements. (1 cup = 4.92 oz.)

Whole Wheat Sandwich

	C/TBSP/tsp	oz./fl.oz.
Whole wheat flour	(3 C)	14 ³ /4 oz.
Salt	1 ¹ /2 tsp	
Dry milk	11/2 TBSP	
Butter	1 ¹ /2 TBSP	
Molasses	1 ¹ /2 TBSP	
Water	11/4 C	10 fl.oz.
Dry yeast	1¹/₄ tsp	

(): measurements not as precise as weight measurements.

Whole Wheat Herb

	C/TBSP/tsp	oz./fl.oz.
Whole wheat flour	(3 C)	14 ³ /4 oz.
Salt	1 ¹ /2 tsp	
Dry milk	1 ¹ /2 TBSP	
Butter	1 ¹ /2 TBSP	
Brown sugar	11/2 TBSP	
Basil flakes	1 TBSP	
Parsley flakes	1 TBSP	
Garlic powder	1 ¹ /2 tsp	
Water	1 ¹ /4 C	10 fl.oz.
Dry yeast	1 ¹ /4 tsp	

Select BAKE mode C=cup(s), tsp=teaspoon(s), TBSP=Tablespoon(s) These loaves are all one size. Size selection cannot be made. <Note for measuring flour> The amounts shown in () are not as precise as weight measurements. For better results, please use weight measurements. (1 cup = 4.92 oz.)

Anadama

	C/TBSP/tsp	oz./fl.oz.
Whole wheat flour	(3 ³ / ₄ C)	18²/₃ oz.
Salt	2 tsp	
Dry milk	2 TBSP	
Butter	2 ¹ /2 TBSP	
Cornmeal	1/4 C	
Molasses	2 TBSP	
Water		13 ¹ /2 fl.oz.
Dry yeast	1 ¹ /2 tsp	

(): measurements not as precise as weight measurements.

Ancient

	C/TBSP/tsp	oz./fl.oz.
Whole wheat flour	(3 ³ / ₄ C)	18²/₃ oz.
Salt	2 tsp	
Dry milk	2 TBSP	
Butter	2 ¹ / ₂ TBSP	
Brown sugar	3 TBSP	
Amaranth grains	2 TBSP	
Quinoa grains	2 TBSP	
Water		13 ¹ / ₂ fl.oz.
Dry yeast	1 ¹ / ₂ tsp	

(): measurements not as precise as weight measurements.

Bran & Sesame

	C/TBSP/tsp	oz./fl.oz.
Whole wheat flour	(3 ³ / ₄ C)	18²/₃ oz.
Salt	2 tsp	
Dry milk	2 TBSP	
Butter	2 ¹ / ₂ TBSP	
Brown sugar	2 TBSP	
Sesame seeds	1/4 C	
Wheat bran cereal	1/4 C	¹ /2 OZ .
Water		13 ¹ / ₂ fl.oz.
Dry yeast	1 ¹ /2 tsp	

(): measurements not as precise as weight measurements.

Cracked Wheat Sunflower

	C/TBSP/tsp	oz./fl.oz.
Whole wheat flour	(3 ³ / ₄ C)	18²/₃ oz.
Salt	2 tsp	
Dry milk	2 TBSP	
Butter	2 ¹ / ₂ TBSP	
Brown sugar	2 TBSP	
Cracked wheat cereal	1/4 C	
Unsalted sunflower seeds	1/4 C	
Honey	2 TBSP	
Water		13¹/₂ fl.oz.
Dry yeast	1¹/₂ tsp	

(): measurements not as precise as weight measurements.

Multigrain

	C/TBSP/tsp	oz./fl.oz.
Whole wheat flour	(1 ³ / ₄ C)	8 ¹ /2 oz.
Bread flour	(2 C)	10 oz.
Soy flour	2 TBSP	
Cornmeal	2 TBSP	
Cracked wheat cereal	2 TBSP	
Oatmeal	1 TBSP	
Flax seeds	1 TBSP	
Salt	2 tsp	
Dry milk	2 TBSP	
Butter	2 ¹ /2 TBSP	
Molasses	2 TBSP	
Water		13 ¹ /2 fl.oz.
Dry yeast	1 ¹ /2 tsp	

(): measurements not as precise as weight measurements.

Seven Grain

	C/TBSP/tsp	oz./fl.oz.
Whole wheat flour	(3 ³ / ₄ C)	18²/₃ oz.
Salt	2 tsp	
Dry milk	2 TBSP	
Butter	2 ¹ /2 TBSP	
7—grain cereal	³ /8 C	
Molasses	2 TBSP	
Water		13 ¹ /2 fl.oz.
Dry yeast	1 ¹ /2 tsp	

(): measurements not as precise as weight measurements.

Multigrain

French

Select BAKE mode

C=cup(s), tsp=teaspoon(s), TBSP=Tablespoon(s) This loaf is one size. Size selection cannot be made. <Note for measuring flour>

The amounts shown in () are not as precise as

weight measurements.

For better results, please use weight measurements. (1 cup = 4.92 oz.)

French Bread

	C/TBSP/tsp	oz./fl.oz.
Bread flour	(3 C)	14 ³ /4 oz.
Salt	1 ¹ /2 tsp	
Butter	1 TBSP	
Water		10 ¹ /2 fl.oz.
Dry yeast	1 tsp	

(): measurements not as precise as weight measurements.

Select DOUGH mode

C=cup(s), tsp=teaspoon(s), TBSP=Tablespoon(s) This loaf is one size. Size selection cannot be made. <Note for measuring flour> The amounts shown in () are not as precise as weight measurements. For better results, please use weight measurements. (1 cup = 4.92 oz.)

Baguette (French sticks) (Yield 2)

	C/TBSP/tsp	oz./fl.oz.
Bread flour	(3 C)	14 ³ /4 oz.
sugar	1 TBSP	
Salt	1 ¹ /2 tsp	
Dry milk	1 TBSP	
Butter	2 TBSP	
Water		8 ³ /4 fl.oz.
Dry yeast	1 ¹ /2 tsp	
Poppy seeds,	3 TBSP	
optional		

(): measurements not as precise as weight measurements.

- A Make the dough according to instructions on P.7—9.
- 2 Divide the dough into 2 equal portions. Roll each portion into a ball.
- **3** Place the dough in a greased bowl. Cover. Rest for about 20 minutes. (Place in the refrigerator during the summer time.)
- $4 \mathop{\mathsf{Roll}}_{\mathsf{pin.}} \mathsf{each \ ball \ into \ a \ rectangle, \ using \ a \ rolling}$
- 5 Starting at one short edge, roll the dough up tightly into a thin log, pinching the edges to seal. Taper and round ends.
- 6 Place on a greased baking pan. Spray water on top. Proof at 90_iF for 60 minutes or until nearly doubled.

7 Brush with water. With a sharp knife, make 3 or 4 diagonal cuts about 1/4 inch deep across top of the logs.

8 Sprinkle with poppy seeds if desired.

9 Bake in 375; F oven for 25 to 30 minutes or until golden brown. If your oven allows for steaming, bake with steam for first 10 minutes.

Download from Www.Somanuals.co28 All Manuals Search And Download.

Select DOUGH mode C=cup(s), tsp=teaspoon(s), TBSP=Tablespoon(s) <Note for measuring flour> The amounts shown in () are not as precise as weight measurements. For better results, please use weight measurements. (1 cup = 4.92 oz.)

Dinner Rolls (Yield 18)

16 oz. (3 ¹ / ₄ C) ¹ / ₄ C 1 ¹ / ₂ tsp 3 TBSP 3 TBSP 7 ¹ / ₂ fl.oz. (¹⁵ / ₁₆ C) 1 ¹ / ₂ tsp	bread flour sugar salt dry milk butter or margarine water dry yeast
1	egg, beaten
3/4 TBSP	for brushing on top poppy seeds, optional for sprinkling on top
3/4 TBSP	sesame seeds, optional for sprinkling on top
Variation : Whole Wheat Dinner Rolls Replace 1 ^{1/2} cups bread flour with whole wheat flour.	

(): measurements not as precise as weight measurements.

Make the dough according to instructions on P.7—9.

2 Divide the dough into 18 equal portions. Roll each portion into a ball. Cover with a plastic wrap and rest for 20 minutes.

3 Roll one end of the ball on a lightly floured surface to make a cone.

4 Roll each cone into a wedge shape, approximately ¹/₄ inch thick, using a rolling pin.

9 Bake in 350;F oven for 10 to 15 minutes or until golden brown.

Spray water on

top. Proof at

90;F for 30 to 50

minutes or until

nearly doubled.

6 Place seam greased baking pan.

5 Starting with roll up the wedge loosely towards the narrower end.

















Basic

Select DOUGH mode C=cup(s), tsp=teaspoon(s), TBSP=Tablespoon(s) <Note for measuring flour> The amounts shown in () are not as precise as weight measurements. For better results, please use weight measurements. (1 cup = 4.92 oz.)


Croissants (Yield 18)


(): measurements not as precise as weight measurements.

Make the dough according to instructions on P.7—9.

 $2 \begin{array}{l} \mbox{Place the dough in a greased bowl. Cover.} \\ \mbox{Rest the dough in the refrigerator for 30} \\ \mbox{minutes.} \end{array}$

3 Roll 7 oz. of chilled butter between two sheets of waxed paper into a 10X7 inch rectangle. Place back in the refrigerator. Chill at least 1 hour.

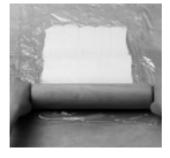



5 Place the rolled out butter over two-thirds of the dough. Fold the third without butter over the center third.





6 Fold the remaining third on top. Seal edges. Rest the dough in the refrigerator for 20 to 30 minutes.




7 Place the dough at right angles to the previous position in #5. Roll out into 12 inch square. Fold into thirds. Wrap and place into refrigerator for 20 to 30 minutes. Fold and roll twice more. Wrap and chill after each rolling. After the final folding, chill several hours or overnight.



8 Cut dough crosswise into thirds. Cut each third in thirds. Cut each third diagonally to form two triangles.

9 Roll up each triangle loosely, starting from the side opposite the point. Curve ends.

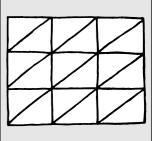



10 Place seam side down on a greased baking pan. Spray water on top. Proof at 90;F for 30 to 50 minutes or until nearly doubled.



1 Brush with beaten egg. Bake in 375_iF oven for 10 to 15 minutes or until golden brown.


Variation: Danish Pastries (Yield 8)

10 ³ /4 oz. (2 ³ / ₁₆ C) 5 ¹ /4 oz. (1 ¹ / ₈ C) 3 TBSP	bread flour cake flour dry milk
1 tsp 2 oz.	salt butter or margarine
6 fl.oz. (³ /4 C)	water
2 tsp	dry yeast
7 oz.	butter or margarine for
	folding in the dough
1	egg, beaten for brushing on top
Fillings	
1/2 3/4 C	apricot jam or marmalade
1/4 1/3 C	canned fruit filling or preserves
1/2 3/4 C	nut streusel
¹ /2 ³ /4 C	cheese filling

(): measurements not as precise as weight measurements.

1 Follow steps 1 to 6 on P.29. Follow step 7, but repeat the process of folding into thirds and placing in the refrigerator four times, instead of three. Finally, wrap and chill for several hours or overnight.

2 Roll out the dough into 14x17 inches. Cut into 8 squares. Roll each out into about 7 inch square.



3 Place the filling of your choice in the center of each square. Brush the four corners lightly with water to help them seal when pressed together.

4 Fold two opposite corners over the center. Press down firmly to seal together.

5 Fold the other two corners over the center and press all four corners tightly together.



6 Place on greased baking pan. Spray water on top.

Proof, brush with beaten egg and bake as croissants.

Brioche (Yield 12)


16 oz. (3 ¹ / ₄ C) 2 TBSP 1 ¹ / ₂ TBSP 1 ¹ / ₂ tsp 3 fl.oz. (³ / ₈ C) 3 oz. (¹ / ₂ C) 4 2 ¹ / ₂ tsp	bread flour sugar dry milk salt water butter or margarine eggs dry yeast egg, beaten for brushing on top		
12 brioche or cake cups			
(): measurements not	as precise as weight measurements.		

Make the dough according to instructions on P.7—9.

2 Place the dough in a greased bowl. Cover. Rest the dough in the refrigerator for 30 minutes.

3 Divide the dough into 12 equal portions. Roll each portion into a ball. Cover with a plastic wrap and rest for 20 minutes.


4 Using the edge of the hand, pinch off about one-fourth of the dough without detaching it. Roll the dough on the bench so that both parts are round.



Use the edge of the hand and roll.

5 Place the dough in the tin largeend first. With fingertips, press the small ball around its circumference into the large one.

6 Place tins on baking pan. Spray water on top. Proof at 90;F for 30 to 50 minutes or until the larger ball rises above the tin.





7 Brush with beaten egg.

Bake in 350; F oven for 10 to 15 minutes or until golden brown.

Pizza Dough

C=cup(s), tsp=teaspoon(s), TBSP=Tablespoon(s) <Note for measuring flour> The amounts shown in () are not as precise as weight measurements. For better results, please use weight measurements. (1 cup = 4.92 oz.)

Pizza (Use pizza program)

Ingredients: Makes 6 small or 2 large

1 tsp 16³/₄ oz. (3³/₈ C) 1 TBSP 1³/₄ TBSP 1 tsp 1 TBSP 11³/₄ fl.oz. dry yeast bread flour milk powder sugar salt butter

2/3 cup tomato paste, for brushing on top3 cups Mozzarella cheese, for sprinkling on top

water

(): measurements not as precise as weight measurements.

Press MENU until arrow points at pizza . Press Start/Stop.

2 Knead dough on a lightly floured surface until it becomes elastic and springs back when touched.

3 Divide into 6 balls or 2 large balls, and place in warm area for 10 minutes.

4 Shape each ball into a flat circle. Place the circles on a baking tray and prick with a fork.

- **5** Let rest for 15 minutes at room temperature.
- 6 Brush each circle with 2 tablespoons tomato paste. Sprinkle with Mozzarella cheese. Top with your favorite topping, such as sliced onions, pepperoni, prochuto ham, olives.
- 7 Bake in a preheated 340...F oven for 15—20 minutes.

Focaccia (Use pizza program)

Ingredients: Makes 1 large		
2 tsp 16 ^{3/4} oz. (3 ^{3/8} C) 2 TBSP 2 TBSP 2 tsp 2 TBSP 11 ¹ / ₈ fl.oz. 1 tsp	dry yeast bread flour milk powder sugar salt olive oil water bread improver, optional	
Topping: ^{1/4} C 1 TBSP 2 tsp 2 tsp (1 cup bread flour, et	olive oil fine sea salt dried oregano dried basil xtra for kneading)	

(): measurements not as precise as weight measurements.

- Press MENU until arrow points at pizza . Press Start/Stop.
- 2 Knead dough on a lightly floured surface until it becomes elastic and springs back when touched.
- 3 Shape into a flat circle, place on a baking tray, make holes with the end of a wooden spoon 5 cm apart over the surface of the dough.

Cover and let rest in a warm place for 20—25 minutes until almost doubled in size.

5 Brush surface with olive oil, sprinkle with sea salt, oregano and basil.

6 Bake in a preheated 340...F oven for 26—30 minutes.

C=cup(s), tsp=teaspoon(s), TBSP=Tablespoon(s) <Note for measuring flour> The amounts shown in () are not as precise as weight measurements. For better results, please use weight measurements. (1 cup = 4.92 oz.)

BAKE ONLY

This program can be used for baking cakes and tea breads. It is not suitable for all types of cake, such as light sponge cakes, Chiristmas pudding, or those that require going into a hot oven.

Make sure that the kneading blade is removed from the pan and the bottom and sides of the bread pan are lined with a waxed baking paper before the cake mixture is added.

Ensure that the cake mixture is kept inside the baking sheet.

The maximum baking time is 1 hour and 30 minutes.

Banana Tea Loaf

8 oz. (15/8 C)	self raising flour	
1/4 tsp	bicarbonate of soda	
1/2 tsp	salt	
3 oz.	butter	
2 oz.	caster sugar	
1 lb 2 oz.	bananas (with skin), peel & mash	
1	medium sized egg, beaten	
Optional glaze: apricot jam		
	walnut/banana chips	

(): measurements not as precise as weight measurements.

- Sieve flour, salt, bicarbonate of soda together into a bowl.
- 2 Rub the butter into the flour until it resembles fine breadcrumbs.
- **3** Stir in the sugar, bananas and the beaten egg, mix well.
- 4 Remove the kneading blade from the bread pan and line the bottom and sides with baking parchment.
- 5 Place the mixture into the bread pan, being careful to ensure that the mixture is inside the baking parchment.
- Select the bake only program and enter 45 minutes on the timer.
- After baking, test with a skewer to see if the cake is cooked. If the cake requires extra time, select the bake only program again and enter a further 3 5 minutes on the timer. If it is still just slightly sticky, this will cook through during the stand period.
- B Take the bread pan out of the bread maker using oven gloves and leave to stand for 5 — 10 minutes before removing from the bread pan and allowing to cool.
- Glaze if desired. Soften the jam, spread over the top of the warm teabread, and sprinkle with walnut or banana chips.

Fruity Cake

2 oz.chopped dates2 oz.chopped walnuts4 oz.chopped cherries10 fl.oz.water3 oz.butter3medium sized eggs, beaten9 oz. (113/16 C)plain flour1 tspbicarbonate of soda	4 oz. 10 fl.oz. 3 oz. 3 9 oz. (1 ¹³ / ₁₆ C)	chopped cherries water butter medium sized eggs, beaten plain flour
-------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------	---------------------------------------------------------------------------------

(): measurements not as precise as weight measurements.

- Place the fruit, dates, walnuts, cherries, water and butter together and heat until the fat has melted and the liquid is hot. This can be done on the hob or in the microwave oven. (High power for 4 — 5 minutes)
- 2 Allow to cool slightly, then add eggs, flour and the bicarbonate of soda. Mix well.
- **2** Remove the kneading blade from the bread
- pan and line the bottom and sides with baking parchment.
- 4 Place the mixture into the bread pan, being careful to ensure that the mixture is inside the baking parchment.
- 5 Select bake only program and enter 55 minutes on the timer.
- 6 After baking, test with a skewer to see if the cake is cooked. If the cake requires extra time, select the bake only program again and enter a further 3 5 minutes on the timer. If it is still slightly sticky, this will cook through during the stand period.
- 7 Take the bread pan out of the bread maker using oven gloves. Leave to stand for 5 10 minutes before removing from the bread pan and allowing to cool.

BAKE ONLY

C=cup(s), tsp=teaspoon(s), TBSP=Tablespoon(s) <Note for measuring flour> The amounts shown in () are not as precise as weight measurements. For better results, please use weight measurements. (1 cup = 4.92 oz.)

Gingerbread

1 oz. 3 oz. 2 oz. 3 oz. 8 oz. (1 ⁵ / ₈ C) 1 ¹ / ₂ tsp 1 ¹ / ₂ tsp 1 ¹ / ₂ tsp 5 f. c=	demerara sugar butter golden syrup black treacle plain flour ground ginger baking powder bicarbonate of soda salt
5 fi.oz.	milk modium cized and heaten
	medium sized egg, beaten

(): measurements not as precise as weight measurements.

- Warm sugar, butter, golden syrup and treacle together until just melted. This can be done on the hob or in the microwave oven (High power for 1 minute).
- Stir in all of the sieved dry ingredients.
- Mix in the milk and the beaten egg.
- - Beat thoroughly with a wooden spoon.
- Remove the kneading blade from the bread pan and line the bottom and sides with baking parchment.
- Place the mixture into the bread pan, being careful to ensure that the mixture is inside the baking parchment.
- Select bake only program and enter 35 minutes on the timer.
- After baking, test with a skewer to see if the cake is cooked. If the cake requires extra time, select the bake only program again and enter a further 3 — 5 minutes on the timer. If it is still just slightly sticky, this will cook through during the stand period.
- Take the bread pan out of the bread maker using oven gloves. Leave to stand for 5 - 10 minutes before removing from the bread pan and allowing to cool.

Marbled Chocolate & Vanilla Cake

8 oz.butter3 oz.caster sugar4medium sized eggs8 oz. (15/8 C)self raising flour1 tspvanilla essence3 oz.plain chocolate1 TBSPmilk1 TBSPcocoa powder	
----------------------------------------------------------------------------------------------------------------------------------------------------	--

(): measurements not as precise as weight measurements.

- Cream together the butter and the sugar.
- Beat in the eggs gradually.
- Fold in the flour, then divide the mixture into O two bowls.
- Add the vanilla essence to one bowl and mix in.
- Melt the chocolate with the milk and add to the **O** other bowl with the cocoa powder, mix well.
- Remove the kneading blade from the bread pan and line the bottom and sides with baking parchment.
- Place alternate spoonfuls of the vanilla and chocolate mixture into the bread pan, being careful to ensure that the mixture is inside the baking parchment. Then using a spoon lightly swirl the two colours together so that they combine but are not mixed.
- Select the bake only program and enter 50 O minutes on the timer.
- After baking, test with a skewer to see if the cake is cooked. If the cake requires extra time, select the bake only program again and enter a further 3 — 5 minutes on the timer. If it is still just slightly sticky, this will cook through during the stand period.
- 0 Take the bread pan out of the bread maker using oven gloves. Leave to stand for 5 10 minutes before removing from the bread pan and allowing to cool.

Panasonic Consumer Electronics Company, Division of Matsushita Electric Corporation of America One Panasonic Way Secaucus, New Jersey 07094 Panasonic Sales Company, Division of Matsushita Electric of Puerto Rico, Inc Ave. 65 de Infanteria, Km. 9.5 San Gabriel Industrial Park, Carolina, Puerto Rico 00985

PANASONIC Automatic Bread Maker Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as the Warrantor) will repair or replace this product with new or refurbished parts or equivalent product, free of charge in the USA or Puerto Rico, for one (1) year from the date of the original purchase in the event of a defect in materials or workmanship.

Carry-in or mail-in service in the USA can be obtained during the warranty period by contacting a Panasonic Services Company (PASC) Factory Servicenter listed in the Servicenter Directory. Or call, toll free, 1-800-211-7262 to locate a PASC Authorized Servicenter. Carry-in or mail-in service in Puerto Rico can be obtained during the warranty period by calling the local Panasonic Sales Company telephone number listed in the Servicenter Directory.

This warranty is extended only to the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty service is rendered.

When shipping the unit carefully pack it and send it prepaid, adequately insured and preferably in the original carton. Include a letter detailing the complaint and provide a day time phone number where you can be reached.

Also, the purchaser will be responsible for shipping the unit to a PASC Factory Servicenter or PASC Authorized Servicenter.

This warranty only covers failures due to defects in materials and workmanship which occur during normal use. The warranty does not cover damage which occurs in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accident, misuse, abuse, neglect, mishandling, faulty installation, misapplication, set-up adjustments, improper operation or maintenance, alteration, modification, introduction of sand, humidity or liquids, power line surge, improper voltage supply, lightning damage, maladjustment of consumer controls, improper operation, commercial use such as hotel, office, restaurant, or other business or rental use of the product, or service by anyone other than a PANASONIC SERVICES COMPANY authorized repair facility, or damage that is attributable to acts of God.


LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCTS, OR ARISING OUT OF ANY BREACH OF THE WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If you have a problem with this product that is not handled to your satisfaction, then write to the Consumer Affairs Department at the Company address indicated above.

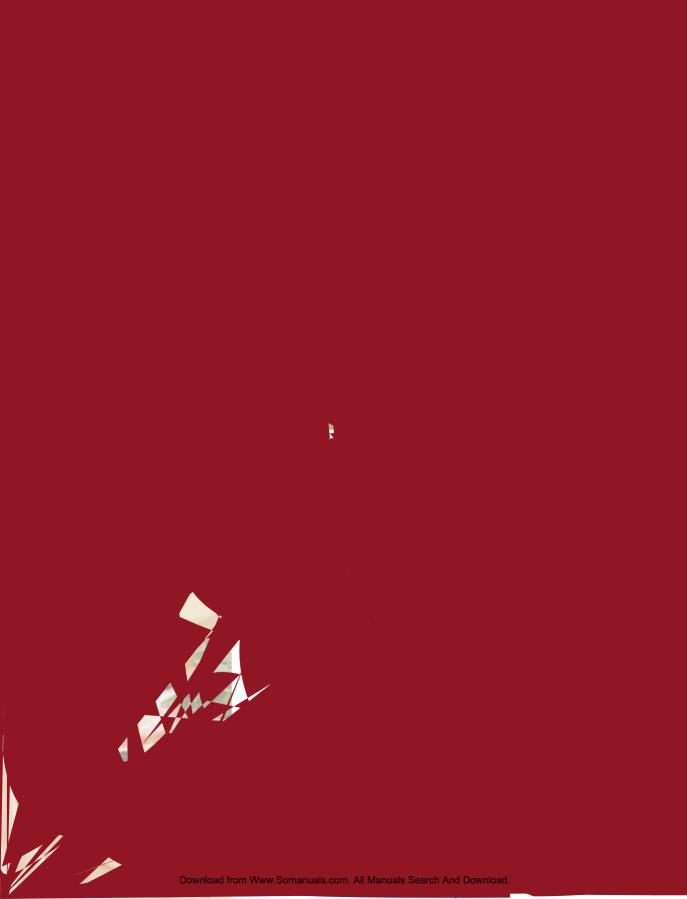

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com