

IMPORTANT FOR FUTURE REFERENCE

lease	complete this information and retain these
	instructions for the life of the equipment:
	Model #:

Model	#:	
Carrial	ш.	

Serial #: ______ Date Upgraded: ______

Technician:

Installation Instructions for the PE14D/PG14D Manual Fill Option



Tool required to perform this upgrade:

5/32" Allen Key	5/16" Socket, Nut Driver, or Wrench
3/8" Wrench	1/2" Wrench
3/4" Wrench	7/8" Wrench
13/16" Wrench	1 1/4" Wrench
1/2" Punch	Hammer
Teflon Tape	#2 Phillips
Channel Locks	

Before you begin :


Verify that you have all the parts for the model that you are upgrading by checking the kit number and contents against the kit picture.



WARNING The power supply to the appliance MUST be disconnected before performing this procedure.




WARNING Ensure that the gas supply to this appliance is turned OFF before performing this procedure.

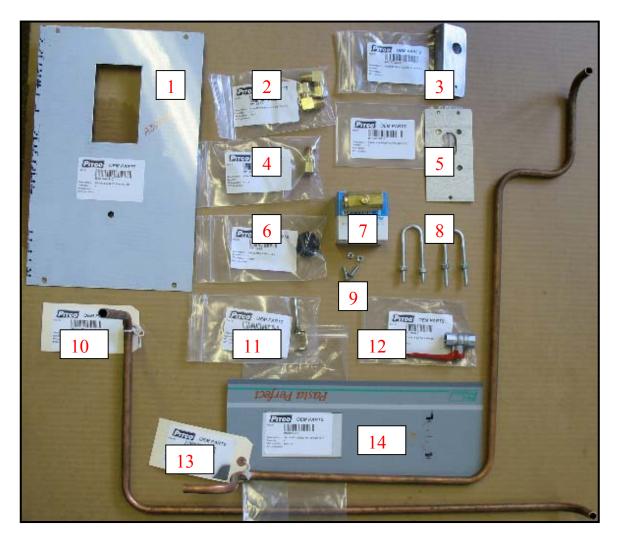

Ensure kit is complete. Part number B8702901-CL.

1.	Qty.1	B3615401-C	Bezel
2.	Qty.3	PP10911	Fitting
3.	Qty.1	А8017902-С	Bracket
4.	Qty.1	PP10830	Fitting
5.	Qty.1	A1826101-C	Bracket
6.	Qty.1	PP10944	Knob
7.	Qty.1	PP10726	Check Valve
8.	Qty.2	PP10270	U-Bolt
9.	Qty.2	PP10694	Screw
9.	Qty.4	P0092300	Nut
10.	Qty.1	A8017501	Piping
11.	Qty.1	B8029301	Handle Extension
12.	Qty.1	PP10945	Valve
13.	Qty.1	A8017401	Piping
14.	Qty.1	A6066901	Overlay

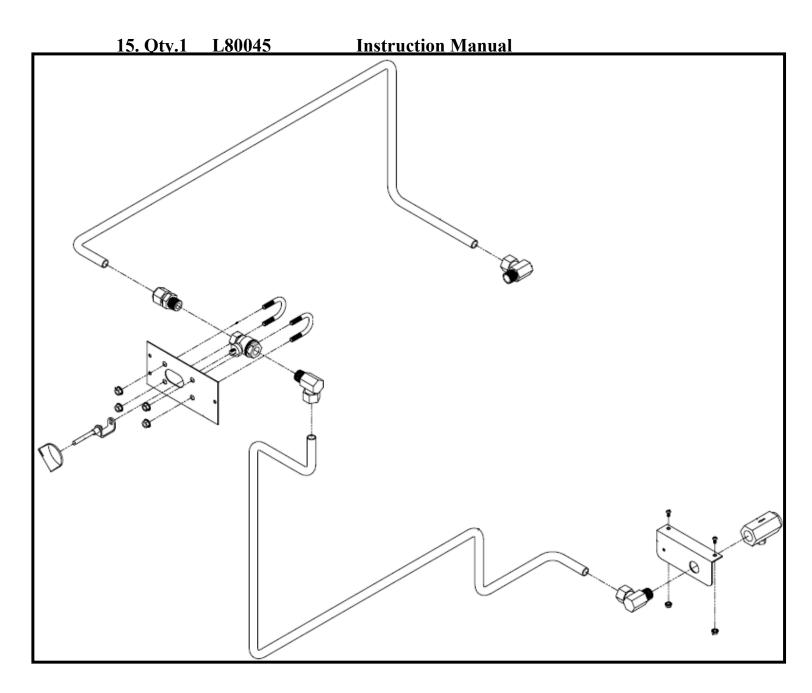

Exploded Part view

- 1. From the back, remove the eight 5/16" screws that hold the rear cover on.
- 2. With the rear of the tank exposed, remove the fill port plug with a 1/2" in wrench. Then remove the reducer with a 7/8" wrench. Save the reducer, as it will be reused.




3. With the nylon plug exposed it can now be removed. The hole in the tank is smaller than the coupling. The nylon plug needs to be removed out the rear. It can be punched out from the front inside of the tank, or pulled from the rear. The plug will not be reused. Be sure not to damage the threads of the coupling. Clean any debris from the reducer and the coupling. Apply Teflon tape to the reducer and reinstall.



4. Apply Teflon tape to the 90° compression fitting (PP10911) and install. Make sure the fitting is at the 3 o'clock position when fully tightened.



 Apply the compression fitting (PP10830) to the front end of the fill piping (A8017501) before install. Apply the remaining two 90° compression fitting (PP10911) to each end of the supply piping (A8017401). After each end is compressed remove the body of the fitting

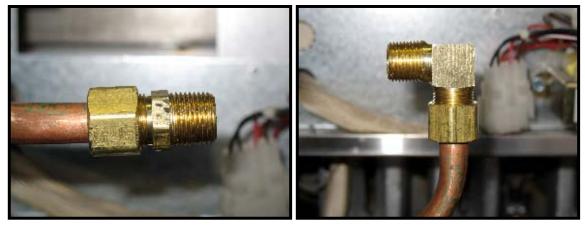

6. Install the fill piping from the rear of the unit. The piping should sit on top of the left tank support. Insert the rear end of the piping in to the rear compression fitting and tighten the fitting.




L80-045 Rev0 (11/07)


7. Apply Teflon tape to the rear fitting of the supply piping. Install the check valve (PP10726) onto the rear fitting of the supply piping with the support bracket (A1826101-C) between the valve and fitting.




8. Install the supply piping assembly from the front. The assembly should contain the piping, two fittings, check valve, and mounting bracket. Mount the bracket to the bottom rear cabinet brace using the two Phillips head screws (PP10694) and two of the six kep nuts (P0092300). When mounted, reinstall the rear cabinet cover using the original screws.

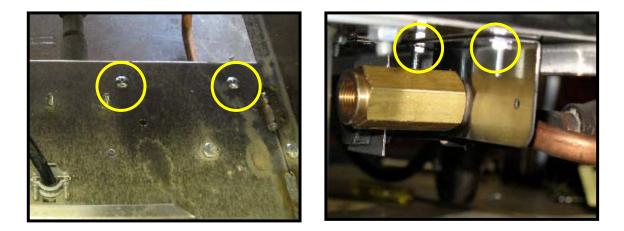

9. From the front of the unit, remove the four Allen head screws with a 5/32" Allen Key. Unplug the computer and set front panel assembly aside. Remove the heat shield via three 5/16" screws.

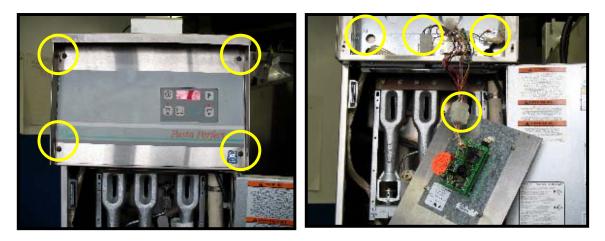

10. With the heat shield removed remove the no fill option cover plate. The plate is held in place with three 5/16" screws with 3/8" kep nuts.

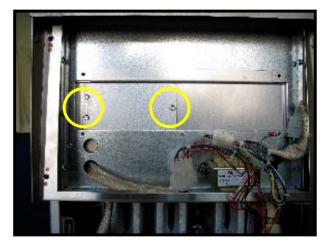

11. With the cover removed you should see your supply and fill piping.



11. Apply Teflon tape the NPT ends of the fitting bodies removed earlier. Assemble the fittings with fill valve (PP10945). Add the knob extension to the assembly and install. Make sure the flat side of the "D" shaft faces the 90° fitting.





12.Install the manual fill option cover plate (A1826101-C) using the original hardware. Install two the u-bolts (PP10270) and four kep nuts (P0092300) and tighten.




13.Using a pair of channel locks brake off the extra studs of the U-bolts. Reinstall the heat shield using the original hardware.





14. Apply the new manual fill option overlay (A6066901) to the new manual fill option bezel (B3615401-C). With a 3/8" wrench, remove the four kep nuts that hold the controller to the original bezel and install it onto the new bezel using the original hardware.

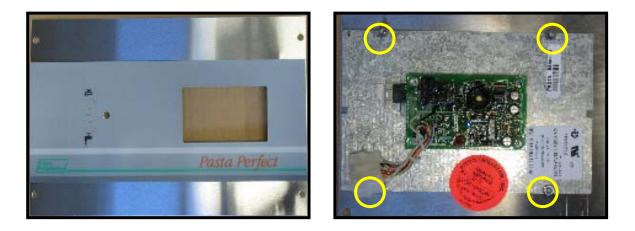

15.Reconnect the controller plug and mount the bezel using the original hardware. Install the fill knob and tighten the set screw. Make sure the knob only travels within the markings of the overlay.



16.If a water source is available, hook it up and inspect all connection points for leaks. If a water source is not available fill the tank with water and inspect all connection points below the water line.

THIS PAGE LEFT INTENTIONALLY BLANK

In the event of problems with or questions about your order, please contact the Pitco Frialator factory at (800)258-3708 US and Canada only (603)225-6684 World Wide In the event of problems with or questions about your equipment, please contact the Pitco Frialator Authorized Service and Parts representative (ASAP) covering your area, or contact Pitco at the numbers listed to the left.

MAILING ADDRESS – P.O. BOX 501, CONCORD, NH 03302-0501 SHIPPING ADDRESS – 10 FERRY ST., CONCORD, NH 03301

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com