



PL2010MW
LCD Monitor

USER'S GUIDE

www.planar.com

Contents

Contents	1
Preface	2
Installation	4
Unpacking	4
Connecting the LCD Monitor and Base	5
Viewing Angle Adjustment	5
Detaching LCD Monitor from Its Stand	5
Interface for Arm Applications	5
Connecting the Display	5
Connecting the AC Power	6
Connecting the Audio Cable	6
Setting Up the LCD Monitor	6
Power Management System	6
Display Controls	7
User Controls	7
Adjusting the Monitor's Display	8
Technical Information	11
Specifications	11
Standard Timing Table	13
Troubleshooting	15
Product Registration and Technical Support	16

Preface

This manual is designed to assist users in setting up and using the LCD Monitor. Information in this document has been carefully checked for accuracy; however, no guarantee is given to the correctness of the contents. The information in this document is subject to change without notice. This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer.

FCC Statement Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reposition or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced monitor technician for help.

Warning

Use only shielded signal cables to connect I/O devices to this equipment. You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This device complies with part 15 FCC Rules. Operation is subject to the following two conditions (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

Canadian DOC Notice



This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Important Safety Instructions

Please read the following instructions carefully. This manual should be retained for future use.

1. To clean LCD Monitor screen;
 - Power off LCD Monitor and unplug the AC Cord.
 - Spray a non-solvent cleaning solution onto a rag.
 - Gently clean the screen with dampened rag.
2. Do not place the LCD Monitor near a window. Exposing the monitor to rain water, moisture or sunlight can severely damage it.
3. Do not apply pressure to the LCD screen. Excess pressure may cause permanent damage to the display.
4. Do not remove the cover or attempt to service this unit by yourself. Servicing of any nature should be performed by an authorized technician.
5. Store LCD Monitor in a room with a room temperature of -20° ~ 60°C (or -4° ~ 140°F). Storing the LCD Monitor outside this range could result in permanent damage.
6. If any of the following occurs, immediately unplug your monitor and call an authorized technician.
 - * Monitor to PC signal cable is frayed or damaged.
 - * Liquid spilled into LCD Monitor or the monitor has been exposed to rain.
 - * LCD Monitor or the case is damaged.
7. Only use the supplied main lead to connect the monitor. For a nominal current up to 6A and a device weight above 3 kg, a line not lighter than H05VV-F, 3G, 0.75 mm² must be used.

Important Recycle Instruction:



LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS. FOR MORE INFORMATION, CONTACT THE ELECTRONIC INDUSTRIES ALLIANCE AT WWW.EIAE.ORG. FOR LAMP SPECIFIC DISPOSAL INFORMATION CHECK WWW.LAMPRECYCLE.ORG.



Contains Mercury, Dispose of Properly

Installation

Unpacking

Before unpacking the LCD Monitor, prepare a suitable workspace for your Monitor and computer. You need a stable and clean surface near a wall power outlet. Make sure that LCD Monitor has enough space around it for sufficient airflow. Though the LCD Monitor uses very little power, some ventilation is needed to ensure that the Monitor does not become too hot.

After you unpack the LCD Monitor, make sure that the following items were included in the box:

- * LCD Monitor
- * User's Manual
- * Base
- * Monitor-to-PC VGA Cable
- * Stereo Jack Audio Cable
- * Monitor-to-PC DVI-D Cable
- * Power Cord

If you find that any of these items is missing or appears damaged, contact your dealer immediately.

Connecting the LCD Monitor and Base

When you open the box, place the base and put on the desk first. Then connect the LCD monitor and base. (See fig. 1-1)

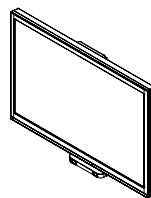


Figure 1-1

Viewing Angle Adjustment

The LCD Monitor is designed to allow users to have a comfortable viewing angle. The viewing angle can be adjusted from -5° to +20°. (See fig. 1-2)

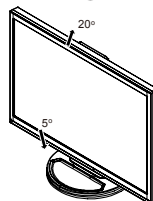


Figure 1-2

Warning

Do not force the LCD Monitor over its maximum viewing angle settings as stated above. Attempting this will result in damaging the Monitor and Monitor stand.

Detaching LCD Monitor from Its Stand

Unscrew screws ❶ from the base support column and pull down ❷ the hinge to release.

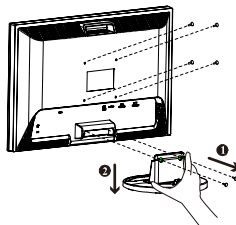


Figure 1-3

Interface for Arm Applications

Before installing to mounting device, please refer to Fig.1-3.

The rear of this LCD display has four integrated 4 mm, 0.7 pitch threaded nuts, as well as four 5 mm access holes in the plastic covering as illustrated in Figure 1-4. These specifications meet the VESA Flat Panel Monitor Physical Mounting Interface Standard (paragraphs 2.1 and 2.1.3, version 1, dated 13 November 1997).

Note :Please using M 4mm x 11mm (L) screw for this application.

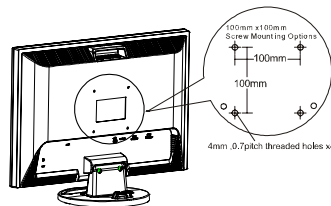


Figure 1-4

Connecting the Display

1. Power off your computer.
2. Connect one end of the signal cable to the LCD Monitor's VGA port or DVI port. (See Fig 1-5)
3. Connect the other end of the signal cable to the VGA port or DVI port on your PC.
4. Make sure connections are secure.

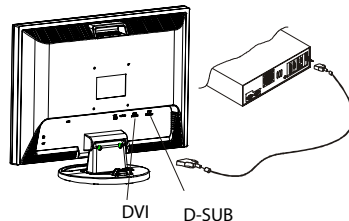


Figure1-5

Connecting the AC Power

1. Connect the power cord to the LCD Monitor.(See Fig. 1-6)
2. Connect the power cord to an AC power source.

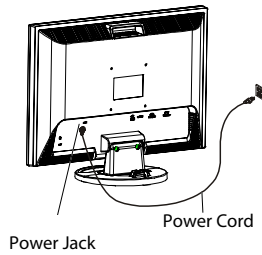


Figure1-6

Connecting the Audio Cable

1. Connect the audio cable to the "LINE OUT" jack on your PC's audio card or to the front panel's "AUDIO OUT" jack of your CD ROM drive. (See Fig. 1-7)
- Connect the other end of the audio cable to the LCD Monitor's "LINE IN" jack.

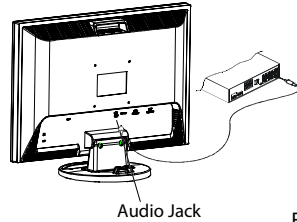


Figure1-7

Setting Up the LCD Monitor

1. Make sure the AC power cord is connected to the LCD Monitor.
2. Turn on the LCD Monitor's power switch, located on the bezel of the monitor.

Power Management System

This LCD Monitor complies with the VESA DPM Power Management guidelines. If you have VESA's DPM™ compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. If input from keyboard, mouse or other input devices is detected by the computer, the monitor will automatically "wake up". When the LCD Monitor is in power saving mode, the monitor screen will be blank and the power LED indicator will light yellow.

Display Controls

User Controls

A brief description and the location of all LCD Monitor functions controls and indicators:

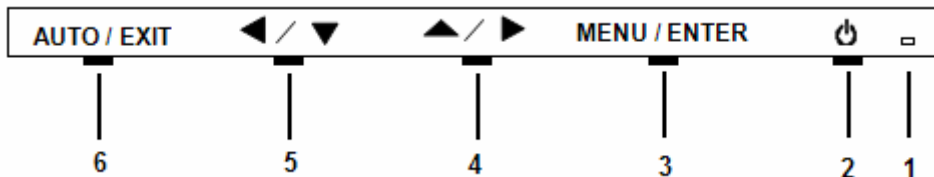






Figure 2-1





1		Power LED will be Green when monitor is on, be yellow when in power saving mode, be dark when monitor in off mode.
2		Power ON/OFF switch. Push to power on or power off. (Toggle switch)
3	Menu/Enter	Shows main OSD menu/ Enter key (in OSD menu)/ Audio mute and unmute (must activate Volume OSD first, push ▲ / ► then Menu/Enter)
4		Shows Volume OSD/ Moves right or up (in OSD menu)
5		Selects input source/ Moves left or down (in OSD menu)
6	Auto/Exit	Auto adjustment (in D-Sub input only)/ Exit OSD menu/ Exit (in OSD menu)





Adjusting the Monitor's Display

Main OSD



Main Menu icon	Sub Menu item	Sub Menu item	Description
	Preset Mode	STANDARD	Default Setting. Reflects native display capability.
		MOVIE	Displays scenes in clearest detail. Pictures and photographs appear in vibrant colors with sharp detail.
		GAME	Enhances color.
		TEXT	Optimal balance of brightness and contrast prevent eyestrain. The most comfortable way to read onscreen text
		PHOTO	Enhances colors and emphasize fine detail.
	Brightness		Adjusts the background brightness of the screen image.
	Contrast		Adjusts the contrast between the foreground and background of the screen image.
	Auto Contrast		Adjusts the contrast of screen image automatically.
	Black Level		Adjusts the black level of screen image.
Sharpness		Adjusts the scaling effect. (smoother or sharper.)	

	Expansion Mode	FULL	Selects wide format for display.
		ASPECT	Selects 4:3 format for display.
	Auto Adjustment		Auto adjusts the H/V Position, Phase and Clock of picture. (available in analog mode only)
	H. Position		Adjusts the horizontal position. (available in analog mode only)
	V. Position		Adjusts the vertical position. (available in analog mode only)
	Clock		Adjusts picture Clock. (available in analog mode only)
	Phase		Adjusts picture Focus. (available in analog mode only)
	9300K		Sets the color temperature to 9300K.
	7500K		Sets the color temperature to 7500K.
	5000K		Sets the color temperature to 5000K.
	sRGB		Sets the color temperature to sRGB.
	User	R/G/B	Allows users to adjust red/green/blue intensity.
	Language		Multi-language selection.
	OSD H. Position		Adjusts the horizontal position of the OSD.
	OSD V. Position		Adjusts the vertical position of the OSD.
	OSD Turn Off		Adjusts the OSD timeout.
	Volume		Adjusts the volume of audio
	Input Select	D-SUB	Selects input signal to analog (D-Sub)
		DVI	Selects input signal to digital (DVI)
	XGA Select	1024x768 1280x768 1360x768	Selects the XGA resolution of choice.
	DDC/CI	ON/OFF	Turns ON/OFF DDC/CI support
	Recall		Clear each old status and return all adjusted parameters to factory preset values.

	Expansion Mode	FULL	Selects wide format for display.
		ASPECT	Selects 4:3 format for display.
	Auto Adjustment		Auto adjusts the H/V Position, Phase and Clock of picture. (available in analog mode only)
	H. Position		Adjusts the horizontal position. (available in analog mode only)
	V. Position		Adjusts the vertical position. (available in analog mode only)
	Clock		Adjusts picture Clock. (available in analog mode only)
	Phase		Adjusts picture Focus. (available in analog mode only)
	9300K		Sets the color temperature to 9300K.
	7500K		Sets the color temperature to 7500K.
	5000K		Sets the color temperature to 5000K.
	sRGB		Sets the color temperature to sRGB.
	User	R/G/B	Allows users to adjust red/green/blue intensity.
	Language		Multi-language selection.
	OSD H. Position		Adjusts the horizontal position of the OSD.
	OSD V. Position		Adjusts the vertical position of the OSD.
	OSD Turn Off		Adjusts the OSD timeout.
	Volume		Adjusts the volume of audio
	Input Select	D-SUB	Selects input signal to analog (D-Sub)
		DVI	Selects input signal to digital (DVI)
	Resolution Select	720/640x400 1360/1280/1024x768 1680/1400x1050	Selects the resolution of choice.
	DDC/CI	ON/OFF	Turns ON/OFF DDC/CI support
	Recall		Clear each old status and return all adjusted parameters to factory preset values.

Technical Information

Specifications

LCD Panel	
Size	20W"
Display Type	Active matrix color TFT LCD
Resolution	1680 x 1050
Display Dot	1680 x (RGB) x 1050
Display Color	16.2M with FRC or Dithering

Video		
Input Signal	Analog RGB 0.7Vp-p	Digital TMDS
Input Impedance	75 Ohm \pm 2%	
Polarity	Positive, Negative	
Amplitude	0 - 0.7 \pm 0.05 Vp	
Multi-mode Supported	Horizontal Frequency: 30 ~ 83 kHz Vertical Frequency: 56 ~ 75 Hz	30~80kHz 56~75Hz

Control	
Power switch (hard and soft types)	On/Off switch with LED indicator

Audio	
Input	500mVrms
Output	1W +1W

OSD	
Brightness	Digital
Contrast	Digital
Horizontal Position	Digital
Vertical Position	Digital
Phase	Digital
Clock	Digital
Display Mode Setup	Use EEPROM to save settings in memor.

Power Management

Mode	Power Consumption*	AC Input	LED Color
DPM On	48 W maximum	240 VAC	Green
DPM Off	2 W maximum	240 VAC	Yellow
DC switch off Off	1 W maximum	240 VAC	Dark
Disconnected	2 W maximum	240 VAC	

*Meeting VESA DPM requirements measured from AC Input end of AC power cord.

Sync Input	Analog	Digital
Signal	Separate TTL compatible horizontal and vertical synchronization.	TMDS
Polarity	Positive and negative	--

Plug & Play	Supports VESA DDC2B DDC/CI functions	
External Connection		
Power Input (AC input)	AC socket	
Video Cable	15-pin D-sub / DVI-D connector Monitor-to-PC DVI-D Cable	
Audio Cable	Stereo Jack	
Power Input (AC input)	AC socket	
Environment		
Operating Condition	Temperature	5°C to 40°C/41°F to 104°F
	Relative Humidity	20% to 80%
Storage Condition	Temperature	-20°C to 60°C/-4°F to 140°
	Relative Humidity	5% to 85%
Power Supply (AC Input)		
Input Voltage	Single phase, 100 ~ 240VAC, 50 / 60 Hz	
Input Current	1.5 A maximum	
Size and Weight		
Dimensions	471.9 (W) x 367.1 (H) x 198 (D) mm	
Net Weight	4.3 ± 0.3 kg	
Gross Weight	5.7 ± 0.3 kg	

Standard Timing Table

If the selected timing is NOT included in table below, this LCD monitor will use the most suitable available timing.

TIMING NAME	FH (KHz) FV (Hz)	SYNC POLARITY	TOTAL/ ACTIVE (DOT / LINE)		SYNC WIDTH	FRONT PORCH		BACK PORCH	PIXEL FOREQ.(MHz)
						(DOT / LINE)			
640x350	31.469	+	800	640	96	16	48	25.175	
VGA-350	70.087	-	449	350	2	37	60		
640x400	31.469	-	800	640	96	16	48	25.175	
VGA-GRAPH	70.087	+	449	400	2	12	35		
640x480	31.469	-	800	640	96	16	48	25.175	
VGA-480	59.94	-	525	480	2	10	33		
640x480	35	-	864	640	64	64	96	30.24	
APPLE MAC-480	66.67	-	525	480	3	3	39		
640x480	37.861	-	832	640	40	16	120	31.5	
VESA-480-72Hz	72.809	-	520	480	3	1	20		
640x480	37.5	-	840	640	64	16	120	31.5	
VESA-480-75Hz	75	-	500	480	3	1	16		
720x350	31.47	+	900	720	108	18	54	28.322	
70Hz	70.087	-	449	400	2	37	60		
720x400	31.469	-	900	720	108	18	54	28.322	
VGA-400-TEXT	70.087	+	449	400	2	12	35		
832x624	49.725	-	1152	832	64	32	224	57.2832	
APPLE MAC-800	74.55	-	667	624	3	1	39		
800x600	35.156	+	1024	800	72	24	128	36	
SVGA	56.25	+	625	600	2	1	22		
800x600	37.879	+	1056	800	128	40	88	40	
VESA-600-60Hz	60.317	+	628	600	4	1	23		
800x600	48.077	+	1040	800	120	56	64	50	
VESA-600-72Hz	72.188	+	666	600	6	37	23		
800x600	46.875	+	1056	800	80	16	160	49.5	
VESA-600-75Hz	75	+	625	600	3	1	21		
848x480	31.02	+	1088	848	112	16	112	33.75	
VESA	60	+	517	480	8	6	23		
1024x768	48.363	-	1344	1024	136	24	160	65	
XGA	60.004	-	806	768	6	3	29		
1024x768	53.964	+	1328	1024	176	16	112	71.664	
COMPAQ-XGA	66.132	+	816	768	4	8	36		
1024x768	56.476	-	1328	1024	136	24	144	75	
VESA-768-70Hz	70.069	-	806	768	6	3	29		

TIMING NAME	FH (KHz) FV (Hz)	SYNC POLARITY	TOTAL/ ACTIVE (DOT / LINE)		SYNC WIDTH	FRONT PORCH	BACK PORCH	PIXEL FOREQ.(MHz)
					(DOT / LINE)			
1024x768	60.023	+	1312	1024	96	16	176	78.75
VESA-768-75Hz	75.029	+	800	768	3	1	28	
1024x768	60.24	-	1328	1024	96	32	176	80
1152x864	54.054	+	1480	1152	96	40	192	80
(60Hz)	59.27	+	912	864	3	13	32	
1152x864	63.851	+	1480	1152	96	32	200	94.499
(70Hz)	70.012	+	912	864	3	1	44	
1152x864	67.5	+	1600	1152	128	64	256	108
(75Hz)	75	+	900	864	2	2	32	
1152x870	68.68	-	1456	1152	128	32	144	100
(75Hz)	75.06	-	915	870	3	3	39	
1280x720	44.772	-	1664	1280	128	64	192	74.5
(60Hz)	59.855	+	748	720	5	3	20	
1280x960	60	+	1800	1280	112	96	312	108
(60Hz)	60	+	1000	960	3	1	36	
1280x960	70	+	1800	1280	112	96	312	126
(70Hz)	70	+	1000	960	3	1	36	
1280x960	75	+	1800	1280	112	96	312	135
(75Hz)	75	+	1000	960	3	1	36	
1280x1024	64	+	1688	1280	112	48	248	108
VESA-1024-60Hz	60	+	1066	1024	3	1	38	
1280x1024	80	+	1688	1280	144	16	248	135
VESA-1024-75Hz	75	+	1066	1024	3	1	38	
1360x768	75	+	1792	1360	112	64	256	85.5
60Hz	75	+	795	768	6	3	18	
1440x900	55.469	+	1600	1440	32	48	80	88.75
Red. BLKing 60Hz	59.901	-	926	900	6	3	17	
1440x900	55.935	-	1904	1440	152	80	232	106.5
60Hz	59.887	+	934	900	6	3	25	
1440x900	70.635	-	1936	1440	152	96	248	136.75
75Hz	74.984	+	942	900	6	3	33	
1680x1050	64.674	+	1840	1680	32	48	80	119
Red. BLKing 60Hz	59.883	-	1080	1050	6	3	21	
1680x1050	65.29	-	2240	1680	176	104	280	146.25
60Hz	59.954	+	1089	1050	6	3	30	
1680x1050	82.306	-	2272	1680	176	120	296	187
75Hz	74.892	+	1099	1050	6	3	40	

Note :

DVI can not supporting 1680x1050@75Hz. Mode 640x350, 640x400 and 720x400 will locate on middle position but cannot be expanded to full screen on vertical direction.

Troubleshooting

This LCD Monitor has pre-adjusted using factory standard VGA timings. Due to the output timing differences among various VGA cards in the market, users may initially experience an unstable or unclear display whenever a new display mode or new VGA card is selected.

Attention

This LCD Monitor Supports Multiple VGA Modes.

Refer to the Standard Timing Table for a listing of modes supported by this LCD Monitor.

PROBLEM Picture is unclear and unstable

The picture is unclear and unstable, please perform the following steps:

1. Enter PC to "Shut Down Windows" status while you're in MS-Windows environment.
2. Check the screen to see if there's any black vertical stripes appear. If there are, take advantage of the "Clock" function in OSD menu and adjust (by increment or decrement numbers) until those bars disappear.
3. Move to "Phase" function in OSD menu again and adjust the monitor screen to its most clear display.
4. Click "No" on "Shut Down Windows" and back to the normal PC operating environment.

PROBLEM There is no picture on LCD Monitor

If there's no picture on the LCD Monitor, please perform the following steps:

1. Make sure the power indicator on the LCD Monitor is ON, all connections are secured, and the system is running on the correct timing. Refer to Chapter 3 for information on timing.
2. Turn off the LCD Monitor and then turn it back on again. If there is still no picture, press the Adjustment Control button several times.
3. If step 2 doesn't work, connect your PC system to another external CRT. If your PC system Functions properly with a CRT Monitor but it does not function with the LCD Monitor, the output timing of the VGA card may be out of the LCD's synchronous range. Please change to an alternative mode listed in the Standard Timing Table or replace the VGA card, and then repeat steps 1 and 2.

PROBLEM There is no picture on LCD Monitor

If you have chosen an output timing that is outside of the LCD Monitor's synchronous range (Horizontal: 30 ~ 80 kHz and Vertical: 56 ~ 75 Hz), the OSD will display a "Out of Range" message. Choose a mode that is supported by your LCD Monitor.

Also, if the signal cable is not connected to LCD monitor at all or properly, the monitor screen will display a message "No Input Signal".

Product Registration and Technical Support

Register Your Planar Products Today

Thank you choosing Planar. To assure you receive all the benefits of your Planar product and services, register your Planar product today.

Visit our website to register your product at http://www.planar.com/support/product_registration.html

Cables, Replacement Lamps, Accessories

To find cables, replacement lamps and accessories for your Planar projector, LCD monitor, touch screen or other Planar products visit our online store at www.PlanarOnline.com or find other stores who carry Planar products at <http://www.planar.com/howtobuy>

Technical Support

Visit Planar at <http://www.planar.com/support> for product registration, operations manuals, touch screen drivers, warranty information and access to Planar's Technical Library for online troubleshooting.

To speak with Planar Customer Support please have you model and serial number available and dial:

Planar Support

Tel: 1-866-PLANAR1 (866-752-6271) or +1 503-748-5799 outside the US.

Hours: 24 hours a day, 7 days a week.

Toll or long distance charges may apply.

Planar Systems, Inc.

Customer Service

24x7 Online Technical Support: <http://www.planar.com/support>

1195 NW Compton Drive

Beaverton, OR 97006-1992

Tel: 1-866-PLANAR1 (866-752-6271), or +1 503-748-5799 outside the United States,

Hours: 24 hours a day, 7 days a week

©2008 Planar Systems, Inc.

Planar is a registered trademark of Planar Systems, Inc. Other brands and names are the property of their respective owners. Technical information in this document is subject to change without notice.

HDPNRW2010I

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>