

Sprint®



Sprint PCS® Phone Guide

- Setting Up Service
- Phone Basics
- Sprint PCS Service Features
- Safety and Warranty

**Sprint PCS Vision™ Phone
VI-2300 by Sanyo®**

SANYO

Sprint®



Sprint PCS® Service

Sprint PCS VisionSM Phone
VI-2300 by Sanyo®

www.sprint.com

© 2005 Sprint Nextel. All rights reserved. No reproduction in whole or in part without prior written approval. Sprint, the "Going Forward" logo, the NEXTEL name and logo, and other trademarks are trademarks of Sprint Nextel. Sanyo is a registered trademark of Sanyo Electric Co., Ltd.

Download from Www.Somanuals.com. All Manuals Search And Download.

Table of Contents

Welcome to Sprint	i
Introduction	ii
Section 1: Getting Started	1
1A. Setting Up Service	3
Getting Started With Sprint PCS Service	4
Setting Up Your Voicemail	5
Sprint PCS Account Passwords	6
Getting Help	7
Section 2: Your Sprint PCS Phone	11
2A. Your Sprint PCS Phone: The Basics	13
Front View of Your Phone	14
Viewing the Display Screen	17
Features of Your Sprint PCS Phone	19
Turning Your Phone On and Off	21
Using Your Phone's Battery and Charger	22
Displaying Your Phone Number	25
Making and Answering Calls	26
Entering Text	45
2B. Controlling Your Phone's Settings	51
Sound Settings	52
Display Settings	60
Location Settings	68
Airplane Mode	69
TTY Use With Sprint PCS Service	70
Phone Setup Options	71

2C. Setting Your Phone's Security	81
Accessing the Security Menu	82
Using Your Phone's Lock Features	82
Restricting Calls	85
Using Special Numbers	86
Erasing the Contacts Directory	86
Erasing All Downloads	87
Resetting Your Phone	87
Resetting and Locking Your Phone Through SMS	88
Security Features for Sprint PCS Vision	90
2D. Controlling Your Roaming Experience	91
Understanding Roaming	92
Setting Your Phone's Roam Mode	94
Controlling Roaming Charges Using Call Guard	95
2E. Navigating Through Menus	97
Menu Navigation	98
Menu Structure	98
Viewing the Menus	99
2F. Managing Call History	103
Viewing History	104
Call History Options	105
Making a Call From Call History	106
Saving a Phone Number From Call History	107
Prepending a Phone Number From Call History	108
Erasing Call History	109
2G. Using the Contacts Directory	111
Displaying the Contacts List	112

Adding a New Contacts Entry	112
Finding Contacts List Entries	113
Contacts List Entry Options	115
Adding a Phone Number to a Contacts Entry	116
Editing a Contacts Entry	117
Erasing a Contacts Entry From the List	117
Assigning Speed Dial Numbers	118
Assigning an Image to a Contacts Entry	119
Selecting a Ringer for an Entry	120
Secret Contacts Entries	121
Dialing Sprint PCS Services	122
2H. Using the Phone's Scheduler and Tools	123
Managing the Calendar	124
Using Your Phone's Scheduler	125
Using the Call Alarm Feature	128
Using the To Do List	131
Purging All Events, Call Alarms, or To Do List Items	135
Personal Information Management	135
Using Your Phone's Tools	137
Downloading Files Through Sprint PCS Vision	142
2I. Using Your Phone's Voice Services	147
Using Voice-Activated Dialing	148
Managing Voice Memos	151
Setting Up Screen Call	155
2J. Using Sprint PCS Ready Link	159
Getting Started With Sprint PCS Ready Link	160
Making and Receiving a Sprint PCS Ready Link Call	162
Adding and Editing Ready Link Contacts	169

Erasing Ready Link List Entries	175
Updating Your Sprint PCS Ready Link Lists	177
Managing Sprint PCS Ready Link Settings	178
Section 3: Sprint PCS Service Features	183
3A. Sprint PCS Service Features: The Basics	185
Using Voicemail	186
Using SMS Text Messaging	196
Using Caller ID	207
Responding to Call Waiting	207
Making a Three-Way Call	209
Using Call Forwarding	210
3B. Sprint PCS Vision	211
Getting Started With Sprint PCS Vision	212
Understanding Messaging	220
Using Email	222
Accessing Alternate Email Providers	224
Using Instant Messaging	225
Experiencing Wireless Online Chat	226
Downloading Premium Services Content	228
Accessing Games	230
Accessing Ringers	232
Accessing Screen Savers	235
Exploring the Web	238
Sprint PCS Vision FAQs	245
3C. Sprint PCS Voice Command	247
Getting Started With Sprint PCS Voice Command	248
Creating Your Own Address Book	249

Making a Call With Sprint PCS Voice Command	250
Accessing Information Using Sprint PCS Voice Command ...	251
Section 4: Safety and Warranty Information	253
4A. Safety	255
Getting the Most Out of Your Reception	256
Maintaining Safe Use of and Access to Your Phone	257
Using Your Phone With a Hearing Aid Device	259
Caring for the Battery	261
Acknowledging Special Precautions and the FCC Notice	262
Owner's Record	264
Phone Guide Proprietary Notice	264
4B. Manufacturer's Warranty	265
Manufacturer's Warranty	266
Index	271

Welcome to Sprint

Sprint is committed to bringing you the best wireless technology available. We built our complete, nationwide network from the ground up, so all your services – whether it's Voicemail, Caller ID, email, or Sprint PCS Picture Mail – will work the same wherever you go on the Nationwide Sprint PCS Network.

This guide will familiarize you with our technology and your new Sprint PCS Phone through simple, easy-to-follow instructions. It's all right here – from setting up your account passwords and voicemail to using the most advanced features of Sprint PCS VisionSM.

Welcome and thank you for choosing Sprint.

Introduction

This **Phone Guide** introduces you to Sprint PCS Service and all the features of your new phone. It's divided into four sections:

- ◆ **Section 1:** Getting Started
- ◆ **Section 2:** Your Sprint PCS Phone
- ◆ **Section 3:** Sprint PCS Service Features
- ◆ **Section 4:** Safety Guidelines and Warranty Information

Throughout this guide, you'll find tips that highlight special shortcuts and timely reminders to help you make the most of your new phone and service. The Table of Contents and Index will also help you quickly locate specific information.

You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, simply locate that section in the Table of Contents and go directly to that page. Follow the instructions in that section, and you'll be ready to use your phone in no time.

Getting Started



Setting Up Service

In This Section

- ◆ **Getting Started With Sprint PCS Service**
 - ◆ **Setting Up Your Voicemail**
 - ◆ **Sprint PCS Account Passwords**
 - ◆ **Getting Help**
-

Setting up service on your new Sprint PCS Phone is quick and easy. This section walks you through the necessary steps to unlock your phone, set up your voicemail, establish passwords, and contact Sprint for assistance with your Sprint PCS Service.

Getting Started With Sprint PCS Service

Determining if Your Phone is Already Activated

If you purchased your phone at a Sprint Store, it is probably activated, unlocked, and ready to use. If you received your phone in the mail, it probably has been activated; all you need to do is unlock it.

If your phone is not activated, please refer to the Welcome to Sprint brochure included with your phone.

Unlocking Your Phone

To unlock your phone, follow these easy steps:

1. Press **END/0** to turn the phone on.
2. Press **Unlock** (left softkey).

Note: To select a softkey, press the softkey button directly below the softkey text that appears at the bottom left and bottom right of your phone's display screen. Softkey actions change according to the screen you're viewing and will not appear if there is no corresponding action available.



3. Enter your four-digit lock code. (For security purposes, the code is not visible as you type.)

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone number or try 0000 or NATL (6285). If none of these work, call Sprint Customer Service at: 1-888-211-4PCS (4727).

Setting Up Your Voicemail

All unanswered calls to your Sprint PCS Phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your voicemail and personal greeting as soon as your Sprint PCS Phone is activated.

To set up your voicemail:

1. Press and hold .
2. Follow the system prompts to:
 - Create your pass code
 - Record your greeting
 - Record your name announcement
 - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages simply by pressing and holding , bypassing the need for you to enter your pass code)

Note: If you are concerned about unauthorized access to your voicemail account, Sprint recommends you enable your voicemail passcode.

For more information about using your voicemail, see “Using Voicemail” on page 186.

Sprint PCS Account Passwords

As a Sprint PCS customer, you enjoy unlimited access to your personal account information, your voicemail account, and your Sprint PCS Vision account. To ensure that no one else has access to your information, you will need to create passwords to protect your privacy.

Account Password

If you are the account owner, you'll have an account password to sign on to www.sprint.com and to use when calling Sprint Customer Service. Your default account password is the last four digits of your Social Security number. If you are not the account owner (if someone else receives the invoice for your Sprint PCS Service), you can get a sub-account password at www.sprint.com.

Voicemail Password

You'll create your voicemail password (or pass code) when you set up your voicemail. See "Setting Up Your Voicemail" on page 5 for more information on your voicemail password.

Sprint PCS Vision Password

With your VI-2300 by Sanyo, you may elect to set up a Sprint PCS Vision Password. This optional password may be used to authorize purchase of Premium Services content and to protect personal information on multi-phone accounts.

For more information, or to change your passwords, sign on to www.sprint.com or call Sprint Customer Service at **1-888-211-4PCS(4727)**.

Getting Help

Visit www.sprint.com

You can go online to:

- Access your account information
- Check your minutes used (depending on your Sprint PCS Service Plan)
- View and pay your bill
- Make your life easier by enrolling in Online Invoicing and Automatic Payment
- Purchase accessories
- Shop for the latest Sprint PCS Phones
- View available Sprint PCS Service Plans and options
- Learn more about Sprint PCS Vision and other great products like Sprint PCS Picture MailSM, games, ringtones, screen savers, and more

Reaching Sprint Customer Service

You can reach Sprint Customer Service many different ways:

- Dial  on your Sprint PCS Phone
- Sign on to your account at www.sprint.com
- Call us toll-free at **1-888-211-4727** (Consumer customers) or **1-888-788-4727** (Business customers)
- Write to us at Sprint Customer Service, P.O. Box 8077, London, KY 40742

Receiving Automated Invoicing Information

For your convenience, your phone gives you access to invoicing information on your Sprint PCS Account. This information includes balance due, payment received, invoicing cycle, and an estimate of the number of minutes used since your last invoicing cycle. (Normal airtime usage will apply.)

To access automated invoicing information:

▶ Press *** 4 TALK**.

Note: This service may not be available in all Affiliate areas.

Sprint PCS Directory Assistance

You have access to a variety of services and information through Sprint PCS Directory Assistance, including residential, business, and government listings; assistance with local or long-distance calls; movie listings; and hotel, restaurant, shopping, and major local event information. There is a per-call charge, and you will be billed for airtime.

To call Sprint PCS Directory Assistance:

▶ Press **4 1 1 TALK**.

Sprint PCS Operator Services

Sprint PCS Operator Services provides assistance when placing collect calls or when placing calls billed to a local telephone calling card or third party.

To access Sprint PCS Operator Services:

- ▶ Press **0 TALK** ..

For more information or to see the latest in products and services, visit us online at www.sprint.com.

Note: Sprint PCS Operator Services may not be available in all Affiliate areas.

Your Sprint PCS Phone



Your Sprint PCS Phone: The Basics

In This Section

- ◆ **Front View of Your Phone**
 - ◆ **Viewing the Display Screen**
 - ◆ **Features of Your Sprint PCS Vision Phone**
 - ◆ **Turning Your Phone On and Off**
 - ◆ **Using Your Phone's Battery and Charger**
 - ◆ **Displaying Your Phone Number**
 - ◆ **Making and Answering Calls**
 - ◆ **Entering Text**
-

Your Sprint PCS Vision Phone is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. This section will guide you through the basic functions and calling features of your VI-2300 by Sanyo.

Front View of Your Phone




Key Functions














1. **Earpiece:** Lets you hear the caller's voice.
2. **Main LCD (display):** Displays the phone's main menu, features, modes, etc.
3. **Softkey (left):** Lets you select the menu corresponding to the bottom left line on the Main LCD.
4. **Navigation Key:** Lets you navigate quickly and easily through the menu options. You can access the menu shortcuts by pressing **Right:** Contacts, **Left:** Shortcut, **Up:** Messaging, and **Down:** Downloads.
5. **MENU/OK:** Lets you access the phone's menus and select menu options.
6. **Web Key:** Lets you launch the Browser.
7. **TALK Key:** Lets you place or receive calls, answer Call Waiting, or use Three-Way Calling.
8. **Microphone:** To speak into or record your voice.
9. **Accessories Connector:** Connects accessories such as a travel charger (included) and USB cable (not included).
10. **Standard Charger Jack:** Connects Standardized AC Travel Charger (not included).
11. **Keypad:** Lets you enter numbers, letters, and characters, and navigate within menus. Press and hold keys 2-9 for speed dialing.
12. **SPEAKER Key:** Lets you place or receive calls in speakerphone mode.
13. **END/POWER Key:** Lets you turn the phone on/off, end a call, or return to standby mode.


















14. **BACK Key:** Lets you display the previous page or clear characters from the screen.
15. **Softkey (right):** Lets you select the menu corresponding to the bottom right line on the Main LCD.
16. **Speaker:** Lets you hear the different ringers and sounds. You can mute the ringer when receiving incoming calls by pressing **END/Ⓚ**, **BACK**, or the Side Up/Down Key. Also lets you hear the caller's voice in speakerphone mode.
17. **Sub LCD:** Lets you monitor the phone's status and see who's calling without opening the phone.
18. **LED Indicator:** Shows your phone's connection status at a glance.
19. **Antenna:** Fully extend the antenna for the best reception.
20. **Headset Jack:** Allows you to attach an optional phone headset for hands-free phone use. (For Monaural Headset Only.)
21. **Ready Link/Memo Button:** Allows you to access the Sprint PCS Ready Link List or Voice Memo menu. (See "Using Sprint PCS Ready LinkSM" on page 159.)
22. **Side Up/Down Key:** Lets you adjust the receiver volume during a call or ringer volume in standby mode. Press and hold to make a voice dial or redial with the flip closed.

Viewing the Display Screen

Your phone's display screen provides a wealth of information about your phone's status and options. This list identifies the symbols you'll see on your phone's display screen:

Tip: To view a list of your phone's icons and descriptions, from the main menu select **Settings > Phone Info > Help**. To display an icon's description, highlight it and press .

-  shows your current signal strength. The more lines you have, the stronger your signal.
-  means your phone cannot find a signal.
-  indicates a call is on hold.
-  tells you a call is in progress.
-  indicates the Sprint PCS Ready Link service is available.
-  indicates the Sprint PCS Ready Link service is available and the speakerphone mode is set to on.
-  indicates the Sprint PCS Ready Link service is unavailable.
-  indicates Sprint PCS Vision/Sprint PCS Ready Link access is dormant.
-  indicates Sprint PCS Vision/Sprint PCS Ready Link access is active.
-  indicates Sprint PCS Vision/Sprint PCS Ready Link access is disabled.
-  indicates you are "roaming" off the Nationwide Sprint PCS Network.
-  indicates you have new voicemail messages. Press and hold  to call your voicemail box.

-  indicates you have new text messages and/or picture messages.
-  indicates you have voicemail messages and text messages.
-  shows the level of your battery charge. The more black you see, the more power you have left.
-  shows your battery is charging.
-  indicates you have menus to scroll (in four directions).
-  indicates the vibrate feature is set.
-  indicates volume level 4 or 1 and vibrate feature are set.
-  indicates 1 beep feature is set.
-  indicates the voice call ringer setting is off.
-  indicates all the sound settings are off.
-  indicates the Location Service of your phone is enabled.
-  indicates the Location Service of your phone is disabled.
-  indicates you have a new caller's message.
-  indicates the Screen Call Auto setting is on.
-  indicates your phone is in TTY mode.
-  indicates Headset mode is set to Sprint PCS Ready Link and a headset is connected.
-  indicates the speakerphone mode is set to on.

Note: Display indicators help you manage your roaming charges by letting you know when you're off the Nationwide Sprint PCS Network and whether you're operating in digital or analog mode. (For more information, see Section 2D: Controlling Your Roaming Experience on page 91.)

Features of Your Sprint PCS Phone

Congratulations on the purchase of your Sprint PCS Vision Phone VI-2300 by Sanyo. This phone is lightweight, easy-to-use, and reliable, and it also offers many significant features and service options. The following list previews some of those features and options and provides page numbers where you can find out more:

- Dual-band/tri-mode capability allows you to make and receive calls while on the Nationwide Sprint PCS Network and to roam on other analog and 800 and 1900 MHz digital networks where Sprint has implemented roaming agreements (page 91).
- Sprint PCS Vision provides access to the wireless Internet in digital mode (page 211).
- Email (page 222) and SMS Text Messaging (page 196) provide quick and convenient text messaging capabilities.
- Sprint PCS Voice Command™ lets you dial phone numbers by speaking someone's name or the digits of their phone number (page 247).
- Games, ringers, screen savers, and other applications can be downloaded to your phone to make your Sprint PCS Vision Phone as unique as you are (page 228).
- The built-in organizer lets you schedule alerts to remind you of important events (page 123).

- Speed Dialing lets you call a phone number stored in your Contacts directory using one touch dialing (page 43).
- The Contacts directory (page 111) can store up to 500 numbers and 300 email and Web addresses in 300 entries (entries can store up to seven numbers each). A separate Sprint PCS Ready Link Contacts List (page 163) provides easy access to up to 200 personal contacts and 200 company-provided contacts.
- Sprint PCS Ready LinkSM allows you to enjoy quick, two-way, “walkie-talkie-style” communication with one or several Sprint PCS Ready Link users (page 159).

Turning Your Phone On and Off

Turning Your Phone On

To turn your phone on:

- ▶ Press **END/⓪**.

Once your phone is on, it may display “Looking for service...,” which indicates that your phone is searching for a signal.

When your phone finds a signal, it automatically enters standby mode – the phone’s idle state. At this point, you are ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone automatically returns to standby mode.

In Power Save mode, your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint PCS Service by pressing any key (when your phone is turned on).

Tip: The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

Turning Your Phone Off

To turn your phone off:

- ▶ Press and hold **END/⓪** for two seconds until you see the powering down animation on the display screen.

Your screen remains blank while your phone is off (unless the battery is charging).

Using Your Phone's Battery and Charger

Battery Capacity

Your Sprint PCS Phone is equipped with a Lithium Ion (Lilon) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 3.25 hours of continuous digital talk time (up to 1.75 hours in analog).

When the battery reaches 5% of its capacity, the low battery icon appears. When there are approximately 5 minutes of talk time left, the phone sounds an audible alert and then powers down.



Note: Long backlight settings, searching for service, vibrate mode, and browser use affect the battery's talk and standby times.

Tip: Be sure to watch your phone's battery level indicator and charge the battery before it runs out of power.

Installing the Battery

To install the Lilon battery:


1. Insert the battery into the opening on the back of the phone and gently press down.
2. Place the battery cover into the position as indicated in the diagram, then slide it until you hear it snap into place.

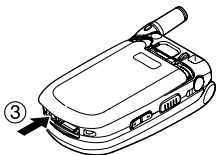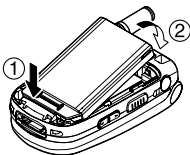

Removing the Battery

To remove your battery:

1. Make sure the power is off. Press the battery release latch, then slide the battery cover and remove it.
2. Use your thumbnail to lift and then remove the battery as indicated in the diagram.

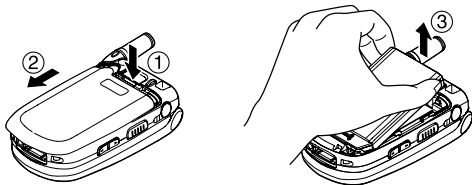

Charging the Battery

Your Sprint PCS Phone's Lilon battery is rechargeable and should be charged as soon as possible so you can begin using your phone.





Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you will lose all the information you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge is getting too low, the battery icon (☐) appears and the phone displays a warning message.

Always use a Sprint-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

Warning: Using the wrong battery charger could cause damage to your phone and void the warranty.

Using the Travel Charger

To use the travel charger provided with your phone:




1. Plug the travel charger into a wall outlet.
2. Plug the other end of the travel charger into the accessories connector at the bottom of your phone (with the battery installed).
 - **Charging when your phone is turned on:**
The battery icon  appears on the display while charging. The battery icon turns to  when charging is completed.
 - **Charging when your phone is turned off:**
The battery icon  appears, and the message “BATTERY CHARGING--Power Off--” is shown on the display while charging. When the battery is completely discharged, it may take several minutes until the message is shown on the display. The battery icon turns to , and the message changes to “CHARGING COMPLETE--Power Off--” when charging is completed.


It takes approximately 3.5 hours to fully recharge a completely rundown battery. With the Sprint-approved Lilon battery, you can recharge the battery before it becomes completely run down.

Displaying Your Phone Number

Just in case you forget your phone number, your Sprint PCS Vision Phone can remind you.

To display your phone number:

1. Press  to access the main menu.
2. Select **Contacts** and press .
3. Select **My Phone#** and press .

Tip: You can also display your phone number from the Phone Info menu. Press , select **Settings**, select **Phone Info**, and select **Phone#/User ID**.

Making and Answering Calls

Making Calls

Placing a call from your Sprint PCS Phone is as easy as making a call from any land line phone. Just enter the number and press **TALK** and you're on your way to clear calls.


To place a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number. (If you make a mistake while dialing, press **BACK** to erase one digit at a time. Press and hold **BACK** to erase the entire number.)
3. Press **TALK** or **SPEAKER**. (To place a call when you are roaming and Call Guard is enabled, see "Controlling Roaming Charges Using Call Guard" on page 95.)
4. When you're finished, press **END/0** to end the call.

Tip: To redial your last outgoing call, press **TALK** or **SPEAKER** twice.


Tip: When making calls off the Nationwide Sprint PCS Network, always dial using 11 digits (1 + area code + phone number).

You can also place calls from your Sprint PCS Phone by using Sprint PCS Voice CommandSM (page 247), Speed Dialing (page 43), using your Call History listings (page 106), and using Voice-Activated Dialing (page 148).

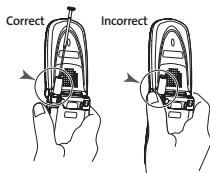

Important: To maximize performance when using your Sprint PCS Phone, extend the antenna before a call and do not touch the antenna during a call.


To place a call with the flip closed:

1. Make sure your phone is on.
2. Press and hold  on the left side of the phone.
3. Follow the system prompts. (The call will be made in speakerphone mode, unless you have a headset attached to the phone.)
 - **Redial** to redial the last number you called.
 - **Voice Dial** to use the Voice Dial function (see “Using Voice-Activated Dialing” on page 148).

Tip: This function is available only when the Side Key Guard setting is off. See page 75 for the Side Key Guard.

Note: To use a Voice Dial, you must have stored Voice Dial entries (see “Programming Voice Dial Tags” on page 149).

Dialing Options

Dialing options are displayed when you press **Options** (right softkey) after entering numbers in the phone's standby mode. To select an option, highlight it and press .

- **Abbrev. Dial** to dial the phone number in your Contacts list that ends with the digits you entered. (See “Using Abbreviated Dialing” on page 44.)
- **Call** to dial the phone number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Send Text** to send a text message (mobile numbers only). (See “Sending a Text Message” on page 198.)
- **Save Phone#** to save the phone number in your Contacts list. (See “Saving a Phone Number” on page 38.)
- **Find** to display Contacts list entries that end with the digits you entered. (See “Finding a Phone Number” on page 39.)
- **[H] Hard Pause** to insert a hard pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 40.)
- **[T] 2-Sec. Pause** to insert a 2-second pause. (See “Dialing and Saving Phone Numbers With Pauses” on page 40.)
- **Hyphen** to insert a hyphen. (Hyphens are generally for visual appeal only; they are not necessary when entering numbers.)

Tip: To speed dial a phone number, press and hold the appropriate speed dial key (locations 2-9). See “Assigning Speed Dial Numbers” on page 118.

Answering Calls

To answer an incoming call with the flip open:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. Press **TALK** or **SPEAKER** to answer an incoming call. (Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any number key. See "Setting Any Key Answer" on page 75 for more information.)

Tip: Press **Ignore** (left softkey) when you do not want to answer the call.


To answer an incoming call with the flip closed:

1. Make sure your phone is on. (If your phone is off, incoming calls go to voicemail.)
2. When your phone rings or vibrates, press and hold the Ready Link/Memo Button (**||||**) on the left side of the phone. (The call will be answered in speakerphone mode.)
– or –
Open the phone to use the earpiece.

Note: If the setting for Open Flip is set to "No Action," opening the phone will not answer the call. (See "Setting the Open/Close Flip Option" on page 74.)

Your Sprint PCS Vision Phone notifies you of incoming calls in the following ways:

- The phone rings and/or vibrates.
- The LED flashes.
- The backlight illuminates.
- The screen displays an incoming call message.
- If available, the phone number of the caller is displayed.
- If the phone number is in your Contacts list, the contact's name is displayed.

The following options are also displayed by pressing **Options** (right softkey). To select an option, highlight it and press .

- **Call Guard** to answer the call when you are in roaming mode. See page 95 for setting Call Guard.
- **Answer** to answer the call.
- **Answer:Speaker** to answer the call in speakerphone mode.
- **Answer on Hold** to put the call on hold. (See “Setting Answer on Hold” on page 32.)
- **Screen Call** to answer the call by using a pre-recorded announcement. (Appears when you are in a Sprint PCS Service area or digital roaming area. See page 155 for the setting.)
- **Quiet Ringer** to mute the ringer. (Appears when the ringer is set.)

Tip: Your Sprint PCS Phone offers additional ways to answer calls. (See page 72 for Auto Answer and page 75 for Any Key Answer.)

Answering a Roam Call With Call Guard Enabled

Call Guard is an option that helps you manage your roaming charges when making or receiving calls while outside the Nationwide Sprint PCS Network. Please see Section 2D: Controlling Your Roaming Experience on page 91 for more information about roaming.

To answer a call when you are roaming and Call Guard is enabled:



1. Press **TALK** or **SPEAKER**.
2. Press **1** to proceed while the pop-up message is displayed.

Note: When your phone is off, in an active Sprint PCS Vision Connection, or on a Sprint PCS Ready Link call, incoming calls go directly to voicemail.



Setting Answer on Hold

This feature allows you to hold an incoming call when you cannot answer immediately.

To set Answer on Hold:

1. When you receive an incoming call, press **Options** (right softkey).
2. Highlight **Answer on Hold** and press . (The caller hears a message to wait for you to answer.  will display on the screen while the call is on hold.)


To resume the call:

- ▶ Press **Answer** (left softkey) or .
- or-
- ▶ Press **Options** (right softkey), highlight **Answer** or **Answer:Speaker** and press .


Note: Answer on Hold is not available in analog areas.

Ending a Call

To disconnect a call when you are finished:

- ▶ Close the phone or press .

Note: If the setting for Close Flip is not set to “End Call,” closing the phone will not end the call. (See “Setting the Open/Close Flip Option” on page 74.)

Tip: Time/Date is displayed when you press  while the phone is in use.

Using the Speakerphone

The speakerphone feature lets you hear audio through the speaker and talk without holding the phone. When the speakerphone is activated, use the Side Up/Down Key to adjust the volume.

To turn the speakerphone on during a call:

▶ Press **SPEAKER**.

– or –

Press **Options** (right softkey), highlight **Speaker On**, and press **MENU OK**.

To turn the speakerphone off during a call:

▶ Press **SPEAKER**.

– or –

Press **Options** (right softkey), highlight **Speaker Off**, and press **MENU OK**.

Warning! Due to higher volume levels, do not place the phone near your ear during speakerphone use.

Changing the Ringer Volume

To change the ringer volume, press the Side Up/Down key when the phone is open and in standby mode.

Note: To change the ringer volume from the main menu, see “Adjusting the Phone’s Volume Settings” on page 56.


Adjusting Volume During a Conversation

When you need to adjust the receiver volume during a conversation, use the Side Up/Down key, or press the navigation key up or down while a call is in progress.


Muting a Call


There are times when it's necessary to mute a call so that your caller does not hear you or certain background noise.

To mute a call:

- ▶ Press **Options** (right softkey), highlight **Mute**, and press . (When the phone is muted, “**Mute**” appears on the display.)

To unmute a call:



- ▶ Press **Options** (right softkey), highlight **Unmute**, and press .

Tip: To use this feature with the flip closed, press and hold  (located on the side of your phone).

Missed Call Notification

When an incoming call is not answered, the Missed Call log is displayed on your screen.

To display the Missed Call entry:

- ▶ Press **View** (left softkey). (To call an entry, highlight the entry you want to call and press  or .)

Calling Emergency Numbers

You can place calls to 911 (dial **9** **1** **1** and press **TALK**), even if your phone is locked or your account is restricted. Once you dial the numbers, your phone will enter Emergency mode.

Press **Options** (right softkey) to display the options. To select an option, highlight it and press **MENU OK**.

- **Speaker On** to activate speakerphone mode. (If you are in speakerphone mode, the option will appear as **Speaker Off** to deactivate.)
- **Unlock Phone** to unlock your phone (appears only if the phone is locked).
- **Close Menu** to close the pop-up menu (appears only if the phone is unlocked).

Tip: Press **My Phone** (left softkey) to display your phone number during Emergency mode.

To exit Emergency mode:

1. Press **END/⓪**.
2. Press **Options** (right softkey) to display the options.
3. Highlight **Exit Emergency** and press **MENU OK**.

Note: When you are in Emergency mode, you can only exit from the options menu.

To select Emergency mode options:

1. Press **END/⓪** during a 911 call.
2. Press **Options** (right softkey).
 - **Call 911** to call 911.
 - **Call 911:Speaker** to call 911 in speakerphone mode.
 - **Exit Emergency** to exit Emergency mode.
3. Select an option and press **MENU OK**.

In-Call Options

During a call, your phone displays menu options when you press **Options** (right softkey). To select an option, highlight it and press **MENU OK**.

- **Flash** to answer an incoming Call Waiting call or to connect a third party during Three-Way Calling.
- **Mute** or **Unmute** to mute or reactivate your phone's microphone.
- **Speaker On** or **Speaker Off** to activate or deactivate speakerphone mode. You can adjust the speakerphone volume using the Side Up/Down key.


Warning! Due to higher volume levels, do not place the phone near your ear during speakerphone use.

- **Three -Way Call** to call a third party.
- **Call History** to access the Call History menu. (See “Managing Call History” on page 103.)
- **Contacts** to access the Contacts menu. (See “Using the Contacts Directory” on page 111.)

- **Messaging** to access the Messaging menu.
(See “Sprint PCS Messaging” on page 220.)
- **Settings** to access the Settings menu.
(See “Controlling Your Phone’s Settings” on page 51.)
- **Tools/Extras** to access the Tools/Extras menu.
(See “Using the Phone’s Scheduler and Tools” on page 123.)

Note: The Flash menu appears only for Call Waiting and Three-Way Calling. The Three-Way Call menu does not appear in Roaming areas.

End-of-Call Options

To display the following options, press **Options** (right softkey) within 10 seconds after disconnecting a call. To select an option, highlight it and press .




- **Call Again** to dial the phone number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Save Phone#** to save the phone number in your Contacts list.
 - **Go to Phone Book** appears when the number is already in your Contacts list. (See “Saving a Phone Number” on page 38.)

Note: The End-of-Call options are not displayed for calls identified as No ID or Restricted.

Saving a Phone Number

Your Sprint PCS Vision Phone can store up to 500 phone numbers in up to 300 Contacts entries (an entry may contain up to seven numbers). Each entry's name can contain 16 characters. Your phone automatically sorts the Contacts entries alphabetically. (For more information, see Section 2G: Using the Contacts Directory on page 111.)

To save a number from standby mode:

1. Enter a phone number.
2. Press **Options** (right softkey).
3. Highlight **Save Phone#** and press .
4. Select a label by highlighting **Mobile, Home, Work, Pager, Fax, Other, or No Label** and press .
5. Enter a name and press .





Once you have stored an entry in the Contacts list, you are prompted to select the following entry modes:

- **New Name** to enter a new name.
 - **From Ph. Book** to select a name from the Contacts entry list.
6. Press **Save** (left softkey).
 7. Press **Done** (left softkey) to return to standby mode.

Finding a Phone Number

You can search Contacts list entries for phone numbers that contain a specific string of numbers.

To find a phone number:

1. Enter the last four or more digits of the number and press **Options** (right softkey). (The more numbers you enter, the more specific the search becomes.)
2. Highlight **Find** and press . (The Contacts entry that ends with the digits you entered appears.)
3. Scroll to your desired entry.
 - Press  to display the entry details.
 - Press  or  to dial.

Dialing and Saving Phone Numbers With Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers.

There are two types of pauses available on your phone:

- **Hard Pause** sends the next set of numbers when you press **TALK**.
- **2-Sec. Pause** automatically sends the next set of numbers after two seconds.

Note: You can have multiple pauses in a phone number and combine 2-second and hard pauses.

To dial or save phone numbers with pauses:

1. Enter the phone number and press **Options** (right softkey).
2. Highlight either **Hard Pause** or **2-Sec. Pause** and press **MENU OK**. (Hard pauses are displayed as a “H” and 2-second pauses as a “T”.)
3. Enter additional numbers (for example, a passcode or an extension).
4. To dial the number, press **TALK** or **SPEAKER**. (When dialing a number with a hard pause, press **TALK** to send the next set of numbers.)
– or –
To save the number in your Contacts list, press **Options** (right softkey), highlight **Save Phone#**, and press **MENU OK**.

Plus Code Dialing

Your phone's Plus Code Dialing feature can automatically dial the international access code when you are traveling outside of the United States. (Not available in some areas.)

To make a call using Plus Code Dialing:




1. From standby mode, press and hold **+ 0** until a "+" sign appears on the phone display.
2. Enter the country code and phone number and press **TALK** or **SPEAKER**.

To remove the plus sign from your phone's display:



- ▶ Press and hold **+ 0** while the plus sign is displayed or press **END/0** to cancel the call.



Dialing From the Contacts Directory



To dial directly from a Contacts entry:

1. Press  to access the main menu.
2. Select **Contacts** and press .
3. Select **Find/Add Entry** and press .

Shortcut: Press the navigation key right to list entries.

4. Scroll to the desired entry in the Contacts list and press .
5. Select the number you want to call.
6. Press **Options** (right softkey) for the menu options.
7. Highlight **Call** or **Call:Speaker On** and press  to place a call.

Tip: You can also place a call by pressing , , or **Call** (left softkey) during step 5 above.

Note: The icons next to each entry represent the Contacts labels (for example, Mobile, Home, Work, etc.). A triangle next to an icon means there is another label for the entry. Press the navigation key right or left from the Contacts list to select the desired label and press  or  to call the selected number.

Using Speed Dialing

With this feature, you can dial your favorite entries using one key press for locations 2-9. (See “Assigning Speed Dial Numbers” on page 118.)

To use speed dial for voice calls:

- ▶ From standby mode, press and hold the appropriate key for approximately two seconds.
– or –
- ▶ From standby mode, press the appropriate key and press **TALK** or **SPEAKER**.

The display confirms that the number has been dialed when it shows “Connecting...”.

To use speed dial for Sprint PCS Ready Link calls:

- ▶ From standby mode, press the appropriate key then press and hold **LINK**. (See “Assigning Speed Dialing for Sprint PCS Ready Link Entries” on page 178.)




The display confirms that the number has been dialed when it shows “R-Link calling...”



Note: Speed dialing may not be available when you are roaming; when you are roaming off the Nationwide Sprint PCS Network, you must always dial using eleven digits (1 + area code + number).


Using Abbreviated Dialing

Abbreviated Dialing is another form of speed dialing. It allows you to dial a number by entering the last 3-6 digits of any number in your Contacts directory. This feature becomes available when you enable Abbreviated Dialing and enter the appropriate digits of a phone number. See page 76 for the setting.

To place a call using Abbreviated Dialing:

1. Dial the last 3-6 digits of a contact's phone number.
2. Press **Options** (right softkey) to display the dialing options.
3. Highlight **Abbrev. Dial** and press , , or .

Tip: You can also place a call by pressing  or  during step 2 above.

Note: If there is no matched number, your phone dials the number you set for abbreviated dial with the last four or five digits you entered. If there are matched numbers in your Contacts list, the abbreviated dial list will be displayed. To place a call, select a number and press .

Entering Text

Selecting a Character Input Mode

Your Sprint PCS Vision Phone provides convenient ways to enter words, letters, punctuation, and numbers whenever you are prompted to enter text (for example, when adding a Contacts entry or when sending email messages).

To change the character input mode:

1. When you display a screen where you can enter text, press **Mode** (right softkey).
2. Select a character input mode:
 - **Add Word** to store words that you use frequently.
 - **Preset Messages** to enter preset messages. (For Text Message only.)
 - **Recent Messages** to enter messages you have used recently. (For Text Message only.)
 - **Signature** to enter your signature. (For Text Message only.)
 - **T9 Word** to enter characters using predictive T9 Text Input (see next page).
 - **Alphabet** to enter characters by tapping the keypad.
 - **SYMBOL** to enter symbols.
 - **NUMBER** to enter numbers.
 - **PRESET SUFFIX** to enter a preset suffix.
 - **SMILEYS** to enter smile pictures.
 - **Emoticons** to enter an emotion icon. (For Text Message only.)

- **Select Language** to select the language (English or Spanish).
- **Erase All** to erase all text (if applicable).
- **Paste** to paste copied or cut text (if applicable).
- **Select Text** to select stored text for copying or cutting.

Note: Preset Suffix and Smileys do not apply in Sprint PCS Ready Link mode.

Entering Characters Using T9 Text Input

T9 Text Input lets you enter text in your Sprint PCS Vision Phone by pressing keys just once per letter. (To select the **T9 Word** mode when entering text, see “Selecting a Character Input Mode” on the previous page.)

T9 Text Input analyzes the letters you enter using an intuitive word database and creates a suitable word. (The word may change as you enter more letters.) To accept a word and insert a space, press **Space#**. To select from alternative words, highlight the desired word and press **MENU OK** or press **Space#** to continue.




If you make a mistake, press **BACK** to erase a single character. Press and hold **BACK** to delete a word.


Adding a Word to the T9 Database

If a word you want to enter does not display as an option when you are using T9 Text Input, you can add it to the database.

To add a word to the T9 Text Input database:


1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.

3. Select **Others** and press .
4. Select **Text Entry** and press .
5. Select **Add Word** and press .
6. Enter the word using multi-tap (Alphabet) text entry and press **Save** (left softkey).

Tip: To confirm the words you have added, select **My Words** and press  during step 5 above.

Selecting the T9 Settings

To customize the T9 Settings:

1. Follow steps 1-4 on the previous page.
2. Select **T9 Settings** and press .
3. Select from the following options:
 - **Predict.Text Mode** to allow T9 text input to recognize words you have added to the T9 database. (See the previous page to add the T9 Words.)
 - **Word Choice List** to display word choice list when using T9 text input.
 - **Show aft enter** to select the number of digits you must enter to display the Words Choice List.
 - **Show aft wait** to select how many seconds the phone should wait to display the Words Choice List.

For more information about T9 Text Input, visit the Tegic Website at www.T9.com.

Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad, select the **Alphabet** mode (see “Selecting a Character Input Mode” on page 45). Press the corresponding key repeatedly until the desired character appears. By default, the first letter of an entry is capitalized and following letters are lowercase.

Characters scroll in the following order:


Key	English Sequence	
	Upper Case	Lower Case
1	., @ 1 ? ! * # /	
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
+ 0	0	
Space#	Space	
Shift >	Unshifted One-character- shifted Caps Lock	

In Spanish mode, characters scroll in the following order:

Key	Spanish Sequence	
	Upper Case	Lower Case
1	., @ 1 ¿ ? ¡ ! * # /	
2	A Á B C 2	a á b c 2
3	D E É F 3	d e é f 3
4	G H Í 4	g h í 4
5	J K L 5	j k l 5
6	M N Ñ O Ó 6	m n ñ o ó 6
7	P Q R S 7	p q r s 7
8	T U Ú Ü V 8	t u ú ü v 8
9	W X Y Z 9	w x y z 9
+ 0	0	
Space#	Space	
Shift >	Unshifted One-character- shifted Caps Lock	

(See “Display Language” on page 73 for changing to Spanish language mode.)

After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Tip: The beginning of the word after the space is changed to upper/lower case depending on shift mode. You can change the shift mode by pressing **Shift** .

Controlling Your Phone's Settings

In This Section

- ◆ Sound Settings
 - ◆ Display Settings
 - ◆ Location Settings
 - ◆ Airplane Mode
 - ◆ TTY Use With Sprint PCS Service
 - ◆ Phone Setup Options
-

Using the menu options available on your Sprint PCS Vision Phone, you can customize your phone to sound, look, and operate just the way you want it to. This section describes how you can change your phone's settings to best suit your needs. Take a few moments to review these options and to adjust or add settings that are right for you.

Sound Settings

Ringer Types








Ringer types help you identify incoming calls and messages. You can assign ringer types to individual Contacts entries, types of calls, and types of messages.

- **Preprogrammed Ringers** include a variety of standard ringer types and familiar music.
- **Vibrating Ringer** alerts you to calls or messages without disturbing others.
- **Downloaded Ringers** can be downloaded right to your phone. (See “Downloading Premium Services Content” on page 228 and “Ringers” on page 232.)



Selecting Ringer Types for Voice Calls

Your VI-2300 by Sanyo provides a variety of ringer options that allow you to customize your ringer and volume settings. These options allow you to identify incoming calls by the ringer.

To select a ringer type for voice calls:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Sounds** and press .
4. Select **Ringer Type** and press .
5. Select **Voice Calls** and press .
6. Select **With Caller ID** or **No Caller ID** and press .
7. Scroll to your desired ringer type and press .








To select a distinctive ringer for voice calls while roaming:

1. Follow steps 1-5 above.
2. Select **Roaming** and press .
3. Select **Distinctive** and press 
 - To confirm the ringer, press **Play** (right softkey).
 - If you want to deactivate this feature, select **Normal** during step 3 above.

Note: The Normal ringer is available only when you are in a digital roaming area.








Selecting Ringer Types for Sprint PCS Ready Link Calls

To select a ringer type for Sprint PCS Ready Link calls:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Sounds** and press .
4. Select **Ringer Type** and press .
5. Select **Ready Link** and press .
6. Select **Ready Link Calls, R-Link Missed, or R-Link Floor Tone**, and press .
7. Scroll to your desired ringer type and press .

Selecting Ringer Types for Voicemail, Messaging, or Calendar/Alarm







To select a ringer type for voicemail, messaging, or calendar/alarm:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Sounds** and press .
4. Select **Ringer Type** and press .
5. Select **Voicemail, Messaging, or Calendar/Alarm**, and press .
6. Press , scroll to your desired ringer type, and press .



Selecting a Tone Length

Longer tone lengths may be better for tone recognition when dialing voicemail or other automated systems.

To select a tone length:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Sounds** and press .
4. Select **Others** and press .
5. Select **Tone Length** and press .
6. Select **Short** or **Long** and press .







Setting a Start-up/Power-off Tone

1. Follow steps 1-4 above.
2. Select **Start-up Tone** or **Power-off Tone** and press .
3. Scroll to your desired tone and press 
 - To confirm the tone, press **Play** (right softkey).

Using Voice Prompt

This feature allows you to hear voice prompts at Voice Memo, Screen Call setting, etc. (default setting is Off).

To enable or disable voice prompt:







1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Sounds** and press .
4. Select **Others** and press .
5. Select **Voice Prompt** and press .
6. Select **On** or **Off** and press .

Tip: When ringer volume is set to "Silence All," voice prompts cannot be heard. See page 59 for Silence All.

Setting Up Key Press Echo

With this feature, you can hear a voice say the numbers when you press the keypad. This feature is available when you are in standby mode.







To turn Key Press Echo on or off:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Sounds** and press .
4. Select **Others** and press .
5. Select **Key Press Echo** and press .
6. Select **On** or **Off** and press .







Adjusting the Phone's Volume Settings

You can adjust your phone's volume settings to suit your needs and your environment.

To adjust the ringer and key volume:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Sounds** and press .
4. Select **Ringer/Key Vol.** and press .
5. Select **Ringer Volume**, **Calendar/Alarm**, **Start-up/Pw-off**, or **Key Beep** and press .
6. Select a volume level by pressing the navigation key up or down and press .




To adjust the earpiece or speaker volume:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Sounds** and press .
4. Select **Receiver Vol.** and press .
5. Select either **Earpiece** or **Speaker** and press .
6. Select a volume level by pressing the navigation key up or down and press .

Tip: You can adjust the ringer volume in standby mode (or the earpiece volume during a call) by using the Side Up/Down key.

To adjust the application volume:






This setting is available for the volume of downloaded data and browser.

1. Follow steps 1-3 above.
2. Select **Application Vol.** and press .
3. Press , select a volume level by pressing the navigation key up or down, and press .


Alert Notification

Your Sprint PCS Phone can alert you with an audible tone when you change service areas, once a minute during a voice call, for incoming or missed Sprint PCS Ready Link calls, or when a call has been connected.

To set alerts:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Sounds** and press .
4. Select **Alerts** and press .
5. Select your desired option and press .
 - **Service** sets an alert to notify you of network services parameter changes.
 - **Ready Link** sets an alert to notify you of Ready Link calls. Select **Ready Link Calls** for incoming Sprint PCS Ready Link calls, or **R-Link Missed** for missed Sprint PCS Ready Link calls.
 - **Voicemail** sets an alert to notify you of voice messages. Select **Ringer Length** to set the ringer length of Voicemail notification.
 - **Messaging** sets an alert to notify you of text messages. Select **Ringer Length** to set the ringer length of Messaging notification.
 - **Minute Beep** sets a minute reminder that beeps ten seconds before the end of each minute during a call.
 - **Signal Fade** sets an alert to notify you when your phone loses a signal during a call.







Tip: You can select **Once** or **Repeat Alert** if you select Ready Link Calls, R-Link Missed, Voicemail, or Messaging. **Repeat Alert** sounds an alert every two minutes for twenty minutes. (For Ready Link Calls, it sounds for 20 seconds continuously.)

6. Use your navigation key to select a setting and press .

Silence All

There may be times when you need to silence your phone entirely. The phone's Silence All option allows you to mute all sounds without turning your phone off.

To activate Silence All:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Sounds** and press .
4. Select **Ringer/Key Vol.** and press .
5. Select **Ringer Volume** and press .
6. Press the navigation key down until **Silence All** appears on the display and press .

Shortcut: To activate Silence All, you can press the Side Up/Down key down repeatedly in standby mode until **Silence All** appears on the display screen.

Tip: When Ringer Volume is set as Silence All, other items are changed to Off and cannot be highlighted.

To deactivate Silence All:







- ▶ From standby mode, press the Side Up/Down key up repeatedly to select a desired volume level.

Display Settings


Changing the Text Greeting

The text greeting can be up to fifteen characters and is displayed on your phone's screen in standby mode. You may choose to display a custom greeting or you may display "Sprint" on the phone's screen.

To display or change your custom greeting:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Display** and press .
4. Select **Greeting** and press .
5. Select **Custom** and press 
 - You can customize the greeting by entering a personalized greeting. (See "Entering Text" on page 45.)
6. Press .







To display the default greeting ("Sprint"):

1. Follow steps 1-4 above.
2. Select **Default** and press .

Changing the Backlight Time Length

The backlight setting lets you select how long the display screen and keypad are backlit after any key press is made.

To change the backlight setting:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Display** and press .
4. Select **Backlight** and press .
5. Select **Main LCD, Key, or Sub LCD** and press .
6. Select your defined time length and press .










Note: The **Always On** setting returns to the previous value the next time you turn on the phone.

Note: Long backlight settings affect the battery's talk and standby times.

Changing the Display Screen Animation

Your new Sprint PCS Vision Phone offers options for what you see on the display screen during various phone functions.




To set the animation display:





1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Display** and press .
4. Select **Animation** and press .
5. Select **Standby, Outgoing Calls, or Service Search**, and press .
6. Press , scroll to your desired option, and press .
 - For standby, you can also set the animation starting time. Select **after** and press , then highlight your desired setting time and press .
 - To deactivate this feature, select **Off** during step 6 above.

Changing the Display for Incoming Calls

You can set the color or downloaded image to be shown on the Incoming Calls display.

To set your incoming calls display:






1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Display** and press .

4. Select **Incoming Calls** and press .
5. Press , scroll to a desired color or image, and press .
6. Select your desired color and press .

Changing the Display for Area Name

This feature enables you to show the area of the phone number you are calling or are called from when the number is not registered in your Contacts list. For example, a call to or from 213-555-5555 will display “California.”







To set your area name display:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Display** and press .
4. Select **Match Area Code** and press .
5. Select **On** and press 
 - This feature is available only when the phone number is 10 digits, or 11 digits beginning with 1 and matches an area code.
 - The area name will not be displayed when the number of an incoming call is saved in your Contacts list.

Changing the Display for Standby Mode

This feature enables you to select a variety of items to display in standby mode.

To set your standby display:








1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Display** and press .
4. Select **Standby Display** and press .
5. Select your desired item and press 
 - **Screen Saver** selects the screen saver to display.
 - **Calendar** displays the Calendar.
 - **Digital Clock** displays the local time in digital view.
 - **World Clock** displays the time of the selected city or country along with the local time.
 - **Default** returns the standby display to its default setting.
6. Press  to save the setting to follow each system prompt or when confirming the preview display.

Tip: In an area without service, the signal search display appears instead of the display for standby mode.

Changing the Screen Saver

Your new Sprint PCS Phone offers you the option of displaying a screen saver while in standby mode.






To assign a screen saver:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Display** and press .
4. Select **Standby Display** and press .
5. Select **Screen Saver** and press .
6. Press , select your desired screen saver and press .
7. Press **Save** (left softkey) to save the screen saver.

Changing the Background

You can customize your phone display's appearance by selecting a color scheme to reflect your personality.






To change the display's background:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Display** and press .
4. Select **Background** and press .
5. Select your desired color and press .

Changing the Contrast

You can customize the display's contrast of your phone.

To change the display's contrast:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Display** and press .
4. Select **Contrast** and press .
5. Select your desired contrast and press .

Changing the Font Size

You can change the font size settings for the message and browser.

To change the font size:







1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Display** and press .
4. Select **Font Size** and press .
5. Select **Messaging** or **Browser** and press .
6. Select your desired font size and press .

Tip: From the font example display, select your desired font size by pressing the navigation key right or left.

Setting Return to Standby Mode

This feature allows you to set the way to return to standby mode.

To set this feature:






1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Display** and press .
4. Select **Return to Idle** and press .
5. A message appears. Press **OK** (left softkey) to continue.
6. Select **Automatically** or **End Key** and press 
 - **Automatically** to return to standby mode automatically in 30 seconds.
 - **End Key** to return to standby mode by pressing .

Note: **End Key** setting affects the battery's talk and standby times.

Setting Sleep Mode

This feature helps conserve your battery power by restricting the display when the phone is not in use.

To set sleep mode:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Display** and press .
4. Select **Sleep Mode** and press .
5. Select your desired option and press 
 - To deactivate this feature, select **Off** during step 5 above.






Location Settings



Your Sprint PCS Vision Phone is equipped with a Location feature for use in connection with location-based services that may be available in the future.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note: Even if the Location feature is enabled, no service may use your location without your express permission.

To turn your phone's Location feature on or off:







1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Location** and press . (You will see a message on the display.)
4. Press  or **OK** (left softkey) to continue.
 - Press the navigation key down to read the whole message.
5. Select **On** or **Off** and press .

When the Location feature is on, your phone's standby screen will display the  icon. When Location is turned off, the  icon will display.

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games, Voice Memo, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

To turn Airplane Mode on or off:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Others** and press .
4. Select **Airplane Mode** and press . (You will see a message on the display.)
5. Press  or **OK** (left softkey) to continue.
6. Select **On** or **Off** and press .

While in Airplane Mode, your phone's standby screen will display "Phone Off."









TTY Use With Sprint PCS Service


A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your phone is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it supports digital wireless transmission. Your phone and TTY device will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

When establishing your Sprint PCS Service, please call Sprint Customer Service via the state Telecommunications Relay Service (TRS) by first dialing **7 1 1 TALK**. Then provide the state TRS with this number: 866-727-4889.

To turn TTY mode on or off:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Others** and press .
4. Select **TTY** and press . (You will see a message on the display.)
5. Press  or **OK** (left softkey) to continue.
6. Select **Enable** or **Disable** and press .

Note: When you connect TTY devices, your phone will display the  icon in TTY mode. If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

IMPORTANT NOTICE: 911 Emergency Calling

Sprint recommends that TTY users make Emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs) rendering some communications unintelligible. The problem encountered appears related to TTY equipment or software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and PSAP community are currently working to resolve this.

Phone Setup Options


Shortcut

Your phone offers you the option of assigning a shortcut key to a favorite or often-used function. Pressing the navigation key to the left in standby mode will launch your personally designated shortcut.



To assign your shortcut key:

1. Press the navigation key left.
2. Select an unassigned number and press **Add** (right softkey).
3. Select your desired menu and press **Set** (right softkey).

To edit the shortcut name:

1. Press the navigation key left.
2. Select your desired menu and press **Options** (right softkey).
3. Highlight **Edit Name** and press .
4. Edit the name and press **OK** (left softkey).
5. Press **Save** (left softkey) to save the name.







To unassign the shortcut:

1. Press the navigation key left.
2. Select your desired menu and press **Options** (right softkey).
3. Highlight **Reset** and press .
4. Select **Yes** and press 
 - To unassign all shortcuts, select **Reset All** during step 3 above.

Auto Answer Mode

You may set your phone to automatically pick up incoming calls in speakerphone mode or when connected to an optional hands-free car kit and headset.






To set Auto Answer mode:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Others** and press .
4. Select **Auto Answer** and press .
5. Select **Car Kit/Headset** or **Speakerphone** and press .
6. Select **5 Seconds**, **15 Seconds**, or **Off** and press .

Display Language






You can choose to display your Sprint PCS Phone's onscreen menus in English or in Spanish.

To assign a language for the phone's display:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Others** and press .
4. Select **Language** and press .
5. Select **English** or **Español** and press .

Setting the Current Time

To set the current time when you are roaming in an area with no digital network:







1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Others** and press .
4. Select **Set Time/Date** and press .
5. Set the current time and date and press .

Note: This feature is only available when you are in an area with no digital network available.



Setting the Open/Close Flip Option

This feature enables you to answer an incoming call by opening the flip or to end a call by closing the flip.

To activate the Open Flip feature:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Others** and press .
4. Select **Open/Close Flip** and press .
5. Select **Open** and press .
6. Select **Answer Call** and press 
 - To deactivate this feature, select **No Action** during step 6 above.

To activate the Close Flip feature:

1. From step 5 above, select **Close** and press . (You will see a message on the display.)
2. Press **OK** (left softkey) to continue.
3. Select an option from the following and press 
 - **End Call** to end the call.
 - **Mute** to continue the call. Your voice is muted, however you can hear the caller's voice from the speaker.

Note: The Close Flip feature does not apply during Ready Link calls or when you are using the speakerphone, a headset, or a car kit.

Setting Any Key Answer

This feature allows you to answer incoming calls by pressing any key (except **END/∅**, **BACK**, softkeys, and sidekeys).

To turn any key answer on or off:

1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Others** and press **MENU OK**.
4. Select **Any Key Answer** and press **MENU OK**.
5. Select **On** or **Off** and press **MENU OK**.

Setting the Side Key Guard

This feature enables you to lock the Side Up/Down key while the flip is closed.

To turn the Side Key Guard on or off:






1. Press **MENU OK** to access the main menu.
2. Select **Settings** and press **MENU OK**.
3. Select **Others** and press **MENU OK**.
4. Select **Side Key Guard** and press **MENU OK**.
5. Select **On** or **Off** and press **MENU OK**.
 - **Key Guard** appears when the Side Up/Down key is pressed while the Side Key Guard is enabled.

Note: This feature does not apply when the flip is open.

Setting Abbreviated Dialing




Abbreviated Dialing is another form of speed dialing. It allows you to dial a number by entering 3-6 digits of any number in your Contacts directory. If the digits you enter do not match any stored Contacts entry, your phone will automatically prepend the digits you specify.


To activate this feature:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Others** and press .
4. Select **Abbrev. Dial** and press .
5. Select **Ph. Book Match** and press .
6. Select **Enable** and press .

Tip: With the Phone Book match feature, your phone displays the Contact's name and phone number if the incoming call or outgoing call is in your Contacts list.

To set your prepend number:

1. Follow steps 1-4 above.
2. Select **Prepend** and press .
3. Select **Enable** and press .
4. Select **Prepend#** and press .

5. Enter a five- or six-digit number and press  or **OK** (left softkey).
 - To deactivate this feature, highlight **Disable** during step 3 above.

Tip: To dial the prepend number, see “Using Abbreviated Dialing” on page 44.

Note: This setting does not apply to 911 or Directory Assistance.






Setting Headset Mode

This feature allows you hands-free phone use. Set the headset mode to Voice Call and press the Turbo Button (the operation button) on the headset to activate useful functions.

To connect the headset:

- ▶ Simply plug the headset into your phone’s headset jack.

To set headset mode:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Others** and press .
4. Select **Headset Mode** and press .
5. Select an option and press :
 - **Voice Call:** Press the Turbo Button to activate Voice Dial. Press twice to redial the last call. Press and hold to record a Voice Memo.
 - **Ready Link:** Press and hold the Turbo Button to redial the last Sprint PCS Ready Link call.

- **Off:** Select Off if you do not wish to assign a Turbo Button setting or if your headset does not have a Turbo Button.






Tip: For an explanation of the Headset Mode setting, press **Info** (right softkey) during step 5 above.

Note: When using the headset, **DO NOT** set the volume too high. Listening at high volume for an extensive period of time may cause hearing loss.

Setting Message Notification

You can see an icon or an icon and pop-up message notification when you receive a text message or voicemail.




To set message notification:





1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Messaging** and press .
4. Select **Notification** and press .
5. Select **Msgs and Icon** or **Icon Only** and press .

Editing Preset Messages

Your phone can store pre-set messages for use with text messaging. You can edit your phone's default preset messages through the Settings menu.

To edit your phone's preset messages:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Messaging** and press .







4. Select **Preset Msgs** and press .
5. Select the message you want to edit and press .
6. Use your keypad to edit the message and press **OK** (left softkey) or  to save your changes. ("Preset Msgs Saved" will display.)
 - To reset all messages, press **Options** (right softkey), select **Reset All Msgs**, and press  twice during step 5 above.

Note: For information on editing text, see "Entering Text" on page 45.

Setting a Callback Number

With this feature, you can notify your recipients of your callback number with the text message.








To set the callback number:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Messaging** and press .
4. Select **Send Callback#** and press .
5. Select an option from the following and press 
 - **None** to send no callback number.
 - **My Phone#** to send your Sprint PCS Phone number.
 - **Other** to send a specific callback number. To set a number, enter a phone number and press .

Setting Your Signature

This feature allows you to send a message with your signature.

To set your signature:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Messaging** and press .
4. Select **Signature** and press .
5. Press , select **On**, and press .
6. Select **Text** and press .
7. Enter your signature and press **OK** (left softkey).
8. Press **Save** (left softkey) to save your signature.

Note: You can insert your signature even when your signature setting is off. Press **Mode** (right softkey) and select **Signature** while composing your message.

Setting Your Phone's Security

In This Section




- ◆ Accessing the Security Menu
 - ◆ Using Your Phone's Lock Features
 - ◆ Restricting Calls
 - ◆ Using Special Numbers
 - ◆ Erasing the Contacts Directory
 - ◆ Erasing All Downloads
 - ◆ Resetting Your Phone
 - ◆ Resetting and Locking Your Phone Through SMS
 - ◆ Security Features for Sprint PCS VisionSM
-

By using the security settings on your Sprint PCS Vision Phone, you receive peace of mind without sacrificing flexibility. This section will familiarize you with your phone's security settings. With several options available, you can customize your phone to meet your personal needs.

Accessing the Security Menu

All of your phone's security settings are available through the Security menu. You must enter your lock code to view the Security menu.

To access the Security menu:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Security** and press .
4. Enter your lock code. (The Security menu is displayed.)



Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone Number or try 0000. If none of these work, call Sprint Customer Service at 1-888-211-4PCS (4727).


Using Your Phone's Lock Features

Locking Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint Customer Service, or special numbers.

To lock your phone:

1. From the Security menu (see "Accessing the Security Menu" above), select **Lock Phone** and press .
2. Select **Lock Now** or **On Power-up** and press .

3. Depending on your preference, highlight either **Full Lock** or **Excp. Incom.Calls** and press .
- **Full Lock:** No phone calls can be made and only special numbers can be received. (You can still make a call to Emergency number, Sprint Customer Service, and special numbers.)
 - **Excp. Incom.Calls:** No phone calls can be made, however all incoming calls can be received. (You can still make a call to Emergency number, Sprint Customer Service, and special numbers.)

Tip: If you want to cancel the “On Power-up” setting before turning the phone off, select **Unlocked** during step 2 above.

Unlocking Your Phone





To unlock your phone:

1. Press **Unlock** (left softkey).
2. Enter your lock code.

Lock Services

With this feature, you can choose to restrict access to Sprint PCS Vision services and incoming and outgoing voice calls and Sprint PCS Ready Link calls.



To activate lock services:

1. From the Security Menu, select **Others** and press .
2. Select **Lock Services** and press .
3. Select **Voice Calls, PCS Vision, or Ready Link** and press .
4. Select **Locked** and press .
 - To deactivate this feature, select **Unlocked** during step 4 above.

When voice calls are locked, only emergency calls may be placed.

Changing the Lock Code

To change your lock code:

1. From the Security Menu, select **Others** and press .
2. Select **Change Lock** and press .
3. Enter a new lock code (“1234” for example).
4. Reenter the new code.

Calling in Lock Mode

You can place calls to 911, Sprint Customer Service, and to your special numbers when in lock mode. (For information on special numbers, see “Using Special Numbers” on page 86.)

To place an outgoing call in lock mode:

- ▶ To call an Emergency number, special number, or Sprint Customer Service, enter the phone number and press **TALK**.

Restricting Calls

There may be occasions when you want to limit the numbers your phone can call or from which it can receive calls. You can use the Restrict Calls setting to do just that. (The Restrict Calls setting does not apply to 911 or Sprint Customer Service.)

To restrict calls:

1. From the Security Menu, select **Others** and press **MENU OK**.
2. Select **Limit Use** and press **MENU OK**.
3. Select **Outgoing Calls** or **Incoming Calls** and press **MENU OK**.
4. Select your desired option and press **MENU OK**.
 - **Allow All** lets you make or receive all calls.
 - **Phone Book Only** lets you make or receive calls to or from Contacts entries, voicemail, or special numbers only.
 - **Special #s Only** lets you make or receive calls to or from three special numbers only. (See “Using Special Numbers” on page 86.)






Note: Restricted incoming calls are forwarded to voicemail.

Using Special Numbers

Special numbers are important numbers that you have designated as being “always available.”

You can save 3 special numbers in addition to your Contacts entries (the same number may be in both directories).

To add or replace a special number:


1. From the Security Menu, select **Others** and press .
2. Select **Special #s** and press .
3. Select an entry number and press .
4. Enter your desired phone number and press .
– or –
Press **Options** (right softkey), select **From Phone Book** or **Vicemail**, select a number, and press .


Note: Special numbers cannot be called in the voice call locked state. (See “Lock Services” on page 84.)

Erasing the Contacts Directory

You can quickly and easily erase all of the contents of your Contacts directory.

To erase all the names and phone numbers in your Contacts directory:



1. From the Security Menu, select **Erase Ph. Book** and press . (You will see a message on the display.)
2. Press **OK** (left softkey) to continue.

3. If you're sure you want to erase your Contacts, select **Yes** and press .

Note: If you have an incoming or outgoing call restriction set to **Phone Book Only** (see “Restricting Calls” on page 85), you will not be allowed to erase the Contacts directory.

Erasing All Downloads



To erase all data downloaded from the Web:

1. From the Security Menu, select **Erase Download** and press . (You will see a message on the display.)
2. Press **OK** (left softkey) to continue.
3. If you're sure you want to erase all data downloaded from the Web, select **Yes** and press .
 - If you have assigned downloaded data, the function returns to its default setting.

Resetting Your Phone

Resetting the phone restores all the factory defaults, including the ringer types and display settings. The Contacts, Call History, Scheduler, and Messaging are not affected.

To reset your phone:

1. From the Security Menu, select **Reset Phone** and press . (You will see a message on the display.)
2. Press **OK** (left softkey) to continue.
3. If you're sure you want to reset your phone, select **Yes** and press .

Resetting and Locking Your Phone Through SMS

When your phone is lost or stolen, you can erase your important personal information (such as Contacts entries, call history, and messages) and lock your phone by sending a special formatted SMS message to your phone.

From your computer, sign on to www.sprint.com and send a message to your phone (input your 10-digit Sprint PCS Phone Number) in the following format:

\\RESET**<Passcode>** RESET

<Passcode> – your defined passcode.





The default passcode is your phone's 11-digit ESN (Electronic Serial Number), which is written on the package or on the phone itself.




The locked phone will display the following message:

"If found, please call Sprint Customer Service 1-888-211-4727."

Note: To send a message from mailer software, input your 10-digit Sprint PCS Phone Number followed by "@messaging.sprint.com."

To activate this feature, the following presetting is required:


1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Security** and press .
4. Enter your lock code.
5. Select **Others** and press .

6. Select **Found Me** and press .
7. Select **Reset/Lock** and press .
8. Select **Enable** and press .

To unlock a phone that has been locked through SMS, bring the phone to a Sprint Store.

Changing the Passcode

To change the passcode for the special formatted SMS messages:





1. Follow steps 1-6 above.
2. Select **Chg Passcode** and press .
3. Enter new passcode (11 digits).
4. Reenter the new passcode.

Security Features for Sprint PCS VisionSM





Enabling and Disabling Sprint PCS Vision Services

You can disable Sprint PCS Vision services without turning off your phone; however, you will not have access to all Sprint PCS Vision services, including Web and messaging. Disabling Sprint PCS Vision will avoid any charges associated with Sprint PCS Vision services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may enable Sprint PCS Vision services again at any time.

To disable Sprint PCS Vision services:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **PCS Vision** and press .
4. Select **Disable Vision** and press . (A message will appear.)
5. Press **Disable** (right softkey) to confirm that you want to sign out.

To enable Sprint PCS Vision services:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **PCS Vision** and press .
4. Select **Enable Vision** and press .
5. Press **OK** (left softkey) to sign in.

Controlling Your Roaming Experience

In This Section

- ◆ Understanding Roaming
 - ◆ Setting Your Phone's Roam Mode
 - ◆ Controlling Roaming Charges Using Call Guard
-

Roaming is the ability to make or receive calls when you're off the Nationwide Sprint PCS Network. Your new dual-band/tri-mode Sprint PCS Vision Phone VI-2300 by Sanyo works anywhere on the Nationwide Sprint PCS Network and allows you to roam on other analog and 1900 and 800 MHz digital networks where we've implemented roaming agreements with other carriers.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding Roaming

Recognizing the Roaming Icon on the Display Screen

Your phone's display screen always lets you know when you're off the Nationwide Sprint PCS Network. Any time you are roaming, the phone displays the roaming icon (R). If you are roaming on a digital system, the roaming icon will display along with the text **Digital Roam**, and on an analog system, with the text **Analog Roam**.

Tip: Remember, when you are using your phone off the Nationwide Sprint PCS Network, always dial numbers using 11 digits (1 + area code + number).

Note: Unless your Sprint PCS Service Plan includes roaming, you will pay a higher per-minute rate for roaming calls.

Roaming on Other Digital Networks

When you're roaming on digital networks, your call quality and security will be similar to the quality you receive when making calls on the Nationwide Sprint PCS Network. However, you may not be able to access certain features, such as Sprint PCS Vision.

Note: Sprint PCS Ready Link Service is not available in roaming areas.

Roaming on Analog Networks

When you roam on analog networks, you will experience a similar quality provided by other analog carriers today. Although some features, such as Sprint PCS Vision, Sprint PCS Ready Link, and Sprint PCS Voice Command, will be unavailable, you can still make and receive calls and access

voicemail. If you are accustomed to Sprint PCS Service, you may notice some of the following differences when using analog service:

- You are more likely to experience static, cross-talk, fade-out, and dropped calls.
- Some features which are standard on the Nationwide Sprint PCS Network, such as call waiting, Sprint PCS Vision, Sprint PCS Ready Link, and direct international dialing, may not be available.
- Though callers can leave voicemail messages while you are roaming, you may not receive notification until you return to the Nationwide Sprint PCS Network. (See “Checking for Voicemail Messages While Roaming” on the next page.)
- There are security and privacy risks (eavesdropping and cloning) that exist with conventional analog services today.
- Your battery’s charge will deplete more quickly and you will need to recharge it more often when you use your phone for analog roaming.

Note: If you’re on a call when you leave the Nationwide Sprint PCS Network and enter an area where roaming is available (whether digital or analog), your call is dropped. If your call is dropped in an area where you think Sprint PCS Service is available, turn your phone off and on again to reconnect to the Nationwide Sprint PCS Network.

Note: When using your phone in analog mode, the phone may feel warm. This is normal for analog operation.

Checking for Voicemail Messages While Roaming

When you are roaming off the Nationwide Sprint PCS Network, you may not receive on-phone notification of new voicemail messages. Callers can still leave messages, but you will need to periodically check your voicemail for new messages if you are in a roaming service area for an extended period of time.

To check your voicemail while roaming:

- ▶ Dial 1+area code+your Sprint PCS Phone Number.

When you return to the Nationwide Sprint PCS Network, voicemail notification will resume as normal.






Setting Your Phone's Roam Mode

Your Sprint PCS Vision Phone allows you to control your roaming capabilities. By using the **Roaming** menu option, you can determine which signals your phone accepts.

Set Mode

Choose from three different settings on your dual-band/tri-mode phone to control your roaming experience.

To set your phone's roam mode:






1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Roaming** and press .
4. Select **Set Mode** and press .
5. Select an option from the following and press .

- **Sprint Only** allows you to access the Nationwide Sprint PCS Network only and prevents roaming on other networks.
- **Automatic** seeks Sprint PCS Service. When Sprint PCS Service is unavailable, the phone searches for an alternate system.
- **Roaming Only** forces the phone to seek a roaming system. The previous setting (Sprint Only or Automatic) is restored the next time the phone is turned on.

Controlling Roaming Charges Using Call Guard

Your phone has two ways of alerting you when you are roaming off the Nationwide Sprint PCS Network: the onscreen roaming icon and Call Guard. Call Guard makes it easy to manage your roaming charges by requiring an extra step before you can place or answer a roaming call. (This additional step is not required when you make or receive calls while on the Nationwide Sprint PCS Network.)

To turn Call Guard on or off:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Roaming** and press .
4. Select **Call Guard** and press .
5. Select **On** or **Off** and press .

To place roaming calls with Call Guard on:

1. From standby mode, dial 1 + area code + the seven-digit number. (You can also initiate a call from the Contacts directory, Call History, or Messaging.)
2. Press **TALK** or **SPEAKER** (or press **Options** [right softkey] and highlight **Call** or **Call:Speaker On** and press **MENU OK**).
3. Press **1** to proceed while the pop-up message is displayed.
– or –
Press any key to erase the pop-up message, press **Options** (right softkey), highlight **Roam Call** or **Roam:Speaker On**, and press **MENU OK**.

To answer incoming roaming calls with Call Guard on:

- ▶ Press **Options** (right softkey), highlight **Answer** or **Answer:Speaker**, and press **MENU OK**.
- or –
1. Press **TALK** or **SPEAKER**.
 2. Press **1** to proceed while the pop-up message is displayed.

Reminder: If the Call Guard feature is set to **On**, you need to take extra steps to make and receive roaming calls, even if you have selected the **Roaming Only** setting.

Navigating Through Menus

In This Section

- ◆ **Menu Navigation**
 - ◆ **Menu Structure**
 - ◆ **Viewing the Menus**
-

Every function and feature of your VI-2300 by Sanyo can be accessed through an onscreen menu. This section is a road map to using your Sprint PCS Vision Phone. Please take a few moments to learn your way around and you'll find your phone easier to use.


Menu Navigation

The navigation key on your Sprint PCS Vision Phone allows you to scroll through menus quickly and easily.






To navigate through a menu, simply press the navigation key up or down.

Menu Structure

Selecting Menu Items

As you navigate through the menu, menu options are highlighted. Select any numbered option by simply pressing the corresponding number on the phone's keypad. You may also select any item by highlighting it and pressing .

For example, if you want to view your last incoming call:

1. Press  to access the main menu.
2. Select **Call History** by pressing  or by highlighting it and pressing . (It may already be highlighted.)
3. Select **Incoming** by pressing  or by highlighting it and pressing . (If you have received any calls, they are displayed on the screen.)

Backing Up Within a Menu

To go to the previous menu:

- ▶ Press .

To return to standby mode:

- ▶ Press .

Shortcuts

Use your navigation key to quickly access your phone's menus.

- **Right** to take a shortcut to the **Contacts** menu.
- **Left** to take a shortcut to the **My Shortcut** menu.
(See page 71 for setting.)
- **Up** to take a shortcut to the **Messaging** menu.
- **Down** to take a shortcut to the **Downloads** menu.

Viewing the Menus

Menu Diagram

The following list outlines your phone's menu structure.

1. Call History

1. Outgoing
2. Incoming
3. Missed
4. Erase History

2. Contacts

1. Find/Add Entry
2. Speed Dial #s
3. My Phone#
4. Services

3. Messaging

1. Send Text
2. PictureMail
3. Text Msgs
4. Instant Msg.
5. Go to Email
6. Voicemail

4. Web

5. Downloads

1. Games
2. Ringers
3. Screen Savers
4. Applications
5. Dynamic 1-10 (If applicable)
6. Others (If applicable)

6. Settings

1. Sounds
 1. Ringer/Key Vol.
 2. Ringer Type
 3. Alerts
 4. Receiver Vol.
 5. Application Vol.
 6. Others
2. Display
 1. Backlight
 2. Greeting
 3. Font Size
 4. Background
 5. Contrast
 6. Animation
 7. Incoming Calls
 8. Match Area Code
 9. Standby Display
 10. Return to Idle
 11. Sleep Mode
3. PCS Vision
 1. Enable (or Disable) Vision
 2. Net Guard
 3. Update Profile
4. Ready Link
 1. Enable/Disable
 2. List Update
 3. Sounds
 4. Speakerphone

- 5. Default View
- 6. Floor Display
- 7. R-Link Guard
- 8. Restart
- 9. Help
- 5. Location
- 6. Roaming
 - 1. Set Mode
 - 2. Call Guard
- 7. Messaging
 - 1. Notification
 - 2. Preset Msgs
 - 3. Send Callback#
 - 4. Signature
- 8. Security
 - 1. Lock Phone
 - 2. Erase Ph. Book
 - 3. Erase Download
 - 4. Reset Phone
 - 5. Others
- 9. Others
 - 1. Airplane Mode
 - 2. Text Entry
 - 3. Any Key Answer
 - 4. Auto Answer
 - 5. Open/Close Flip
 - 6. Abbrev. Dial
 - 7. Headset Mode
 - 8. TTY
 - 9. Side Key Guard
 - 10. Set Time/Date
 - 11. Language
- 0. Phone Info
 - 1. Phone#/User ID
 - 2. Help
 - 3. Version
 - 4. Advanced

7. Tools/Extras

1. Voice Services
 1. Voice Memo
 2. Screen Call
 3. Voice Dial
2. Calendar
3. Alarm Clock
4. Calculator
5. Stop Watch
6. World Clock
7. PC Sync
8. Update Phone

Managing Call History

In This Section

- ◆ Viewing History
 - ◆ Call History Options
 - ◆ Making a Call From Call History
 - ◆ Saving a Phone Number From Call History
 - ◆ Prepending a Phone Number From Call History
 - ◆ Erasing Call History
-




The Call History keeps track of incoming calls, calls made from your Sprint PCS Vision Phone, and missed calls. This section guides you through accessing and making the most of your Call History.

Viewing History

You'll find the Call History feature very helpful. They are lists of the last 20 voice calls and the last 10 Ready Link calls that you placed, accepted, or missed. Call History makes redialing a number fast and easy. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and contact's name (if the phone number is in your Contacts list). Duplicate calls (same number and type of call) may only appear once on the list (except missed calls).

To view a Call History entry:

1. Press  to access the main menu.
2. Select **Call History** and press .
3. Select **Outgoing, Incoming, or Missed** and press . (The selected Call History list will display.)

Tip: You can switch the voice call history to the Sprint PCS Ready Link call history by pressing **R-Link** (left softkey). To return to the voice call history, press **Voice Call** (left softkey). This option is not available when Sprint PCS Ready Link mode is set to **Disable** (see page 160), or Sprint PCS Ready Link is locked (see page 84).







Call History Options

For additional information and options on a particular call, highlight a Call History entry and press **Options** (right softkey).

- **Call** to dial the phone number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Send Text** to send a text message. (See page 198 for details.)
- **Save Phone#** to save the phone number (if applicable).
 - **Go to Phone Book** appears when the number is already in your Contacts list. (See “Saving a Phone Number From Call History” on page 107.)
- **Prepend** to add numbers to the beginning of the phone number. (See “Prepending a Phone Number From Call History” on page 108.)
- **Copy to Personal** to copy the phone number to the Ready Link Personal List. (Only appears when Sprint PCS Ready Link mode is set to Enable and the number does not match any stored entry in your Personal List.)
- **Erase** to erase the entry.

Making a Call From Call History

To place a call from Call History:




1. Press  to access the main menu.
 2. Select **Call History** and press .
 3. Select **Outgoing, Incoming or Missed** and press .
 4. Scroll to the entry you want to call.
 5. Press  or .
- or –
- Press **Options** (right softkey), highlight **Call** or **Call:Speaker On**, and press .

Note: You cannot make calls from Call History to entries identified as **No ID** or **Restricted**.

Saving a Phone Number From Call History

Your Sprint PCS Vision Phone can store up to 500 phone numbers in up to 300 Contacts entries (an entry may contain up to seven numbers). Each entry's name can contain sixteen characters.

To save a phone number from Call History:




1. Scroll to the call history entry you want to save.
2. Press **Options** (right softkey) to display the options.
3. Highlight **Save Phone#** and press .
4. Select the appropriate label (**Mobile, Home, Work, Pager, Fax, Other, or No Label**) and press .
5. Enter a name and press .
Once you have stored an entry in the Contacts list, you are prompted to select the following entry mode:
 - **New Name** to enter a name directly.
 - **From Ph. Book** to select a name from the Contacts list.
6. Press **Save** (left softkey).


Note: You cannot save phone numbers already in your Contacts list or from calls identified as **No ID** or **Restricted**. If the selected entry has already been stored in the Contacts list, **Go to Phone Book** appears during step 3 above.

Prepending a Phone Number From Call History

If you need to place a call from Call History and you happen to be outside your local area code, you can add the appropriate prefix by prepending the number.

To prepend a phone number from Call History:

1. Scroll to a call history entry and press **Options** (right softkey).
2. Highlight **Prepend** and press .
3. Enter the digits you want to add to the number.
4. Press  or  to place a call.







To select another option, press **Options** (right softkey), highlight it and press .

- **Call** to dial the phone number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Save Phone#** to store the phone number in your Contacts directory.
- **H Hard Pause** to insert a hard pause.
- **T 2-Sec. Pause** to insert a 2-second pause.

Erasing Call History

To erase individual Call History entries, see “Call History Options” on page 105.

To erase Call History:

1. Press  to access the main menu.
2. Select **Call History** and press .
3. Select **Erase History** and press .
4. Select **Outgoing, Incoming, Missed,** or **All** and press .
5. Select **Voice Calls** or **Ready Link** and press 
 - **Voice Calls** to erase call history for voice calls.
 - **Ready Link** to erase call history for Sprint PCS Ready Link calls.
6. Select **Yes** and press .

Using the Contacts Directory




In This Section

- ◆ **Displaying the Contacts List**
 - ◆ **Adding a New Contacts Entry**
 - ◆ **Finding Contacts List Entries**
 - ◆ **Contacts List Entry Options**
 - ◆ **Adding a Phone Number to a Contacts Entry**
 - ◆ **Editing a Contacts Entry**
 - ◆ **Erasing a Contacts Entry From the List**
 - ◆ **Assigning Speed Dial Numbers**
 - ◆ **Assigning an Image to a Contacts Entry**
 - ◆ **Selecting a Ringer for an Entry**
 - ◆ **Secret Contacts Entries**
 - ◆ **Dialing Sprint PCS Services**
-

Now that you know the basics that make it easier to stay in touch with people and information, you're ready to explore your phone's more advanced features. This section explains how to use your phone's Contacts directory and helps you make the most of your contacts and time when you are trying to connect with the important people in your life.

Displaying the Contacts List




To display your contacts list:

- ▶ Press the navigation key right.
– or –
- 1. Press  to access the main menu.
- 2. Select **Contacts** and press .
- 3. Select **Find/Add Entry** and press .

Adding a New Contacts Entry

Your Sprint PCS Vision Phone can store up to 500 phone numbers in up to 300 Contacts entries (an entry may contain up to seven numbers). Each entry's name can contain sixteen characters.

To add a new entry:

1. Press the navigation key right to display the Contacts list.
2. Highlight **<Add Contact>** and press .
3. Enter a name and press .
4. Select the appropriate label, enter the phone number or address, and press .
5. Press **Save** (left softkey).





Tip: You can also add a new Contacts entry by entering a number from standby mode. See “Saving a Phone Number” on page 38.

Finding Contacts List Entries


There are several ways to display your Contacts entries: by name, by speed dial number, by Sprint PCS Ready Link List, and by voice dial tags. Follow the steps outlined in the sections below to display entries from the Contacts list menu.

Finding Names

To find Contacts list entries by name:

1. Press the navigation key right to display the Contacts list.
2. Scroll to select your desired entry or press **Options** (right softkey), select the option from the following and press . (The options appear alternately.)
 - **Find:First Name** will search the entry by first name.
 - **Find:Full Name** will search the entry by part of the name.
3. Enter the first letter of the name or part of the name. (The display shows the entries beginning with the letter entered.)
4. To display the entry's details, select your desired entry and press .
5. To make the call, press , , or **Call** (left softkey).




To find Sprint PCS Ready Link List entries:

1. Press the navigation key right to display your Contacts list.
2. Press **Go to** (left softkey). Highlight your desired list and press .
 - **Phone Book** to display the Contacts list.
 - **Company List** to display the Company List.
 - **Company Groups** to display the Company Group List.
 - **Personal List** to display the Personal List.
 - **Personal Groups** to display the Personal Group List.
3. Scroll through the list to select your desired entry.

Note: The **Go to** (left softkey) option does not appear when Sprint PCS Ready Link mode is set to **Disable** (see page 160), or Sprint PCS Ready Link is locked (see page 84).






Finding Speed Dial Numbers

To find phone numbers you have stored in speed dial locations:



1. Press  to access the main menu.
2. Select **Contacts** and press .
3. Select **Speed Dial #s** and press . (The Speed Dial numbers list appears.)

Finding Voice Dial Numbers

To find phone numbers you have stored in Voice Dial:

1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Voice Services** and press .
4. Select **Voice Dial** and press .
5. Select **Review** or **Review:Speaker** and press . (The Voice Dial numbers list appears.)

Contacts List Entry Options





To access a contact's options, display the Contacts list, highlight an entry and press . Then select a phone number and press **Options** (right softkey). To select an option, highlight it and press .

- **Edit** to edit the selected entry.
- **Call** to dial the selected number.
- **Call:Speaker On** to dial the phone number in speakerphone mode.
- **Send Text** to send a text message (mobile numbers only). (See page 198 for details.)
- **Call Alarm** to set a call alarm for the entry. (See page 128 for Call Alarm.)
- **Set Speed Dial** to assign speed dial numbers to your favorite entries. (See "Assigning Speed Dial Numbers" on page 118.)
- **Set Voice Dial** to set a voice dial for the entry. (See page 148 for Voice Dial.)

- **Prepend** to alter a phone number by adding numbers to the beginning of the entry. (See “Prepending a Phone Number From Call History” on page 108.)
- **Copy to Personal** to copy the phone number to your Ready Link Personal List. (Only appears when Sprint PCS Ready Link mode is set to Enable and the number does not match any stored entry in your Personal List.)





Adding a Phone Number to a Contacts Entry

To add a phone number to an entry:

1. Press the navigation key right to display the Contacts list.
2. Scroll to the entry you wish to add and press .
3. Select a phone number, press **Options** (right softkey), highlight **Edit**, and press .
4. Select the label field you want to add and press .
5. Enter the number and press .
6. Press **Save** (left softkey).



Editing a Contacts Entry

To make changes to an entry:

1. Press the navigation key right.
2. Scroll to the entry you wish to edit and press .
3. Select a phone number, press **Options** (right softkey), highlight **Edit**, and press .
– or –
Select an email address or Web address and press **Edit** (right softkey).
4. Select the field you want to edit and press .
5. Edit the entry by using your keypad and press .
6. Press **Save** (left softkey) to save your changes.

Erasing a Contacts Entry From the List







To erase the selected entry:

1. Press the navigation key right.
2. Scroll to the entry you wish to delete by using the navigation key and press **Options** (right softkey).
3. Highlight **Erase Contact** and press .
4. Select **Yes** and press .

Assigning Speed Dial Numbers

With this feature you can dial Contacts directory entries with one key press for locations 2-9. For details on how to make calls using speed dial numbers, see “Using Speed Dialing” on page 43.

To assign Speed Dial:





1. Press  to access the main menu.
2. Select **Contacts** and press .
3. Select **Speed Dial #s** and press .
4. Select an available speed dial location and press .
5. Select an entry from the list and press .
6. Select the phone number you want to set as a speed dial and press .

Note: If you attempt to assign an already in-use speed dial location to a new phone number, a dialog will appear asking if you wish to overwrite the existing speed dial assignment. Select **Yes** to assign the location to the new phone number or **No** to cancel. To delete the previous speed dial assignment, select **Reset**.

Assigning an Image to a Contacts Entry

You can assign an image to a Contacts entry. The image is displayed when the entry calls you.





To assign an image for an entry:


1. Press the navigation key right.
2. Select the entry for which you want to assign the image and press .
3. Press **Options** (right softkey), highlight **Edit**, and press  or if you are selecting email/web address, press **Edit** (right softkey).
4. Scroll down to **Picture ID** and press .
5. Select your desired image by using the navigation key and press , then press **OK** (left softkey) to assign.
6. Press **Save** (left softkey) to save the image type.

Selecting a Ringer for an Entry

You can assign a ringer type to a Contacts entry so you can identify the caller by the ringer type. (See “Ringer Types” on page 52.)

To select a ringer type for an entry:



1. Press the navigation key right.
2. Select the entry for which you want to set the incoming ringer and press .
3. Press **Options** (right softkey), highlight **Edit**, and press  or if you are selecting email/web address, press **Edit** (right softkey).
4. Scroll down to **Ringer** and press .
5. Scroll to your desired ringer and press . (When you highlight a ringer type, a sample ringer will sound.)
6. Press **Save** (left softkey) to save the ringer type.

Note: If you set an animation ringer (indicated with the  icon) and an image, your Sprint PCS Phone plays the ringer (audio) of the animation ringer and displays the image you selected.



Secret Contacts Entries

You can hide an entry's phone number(s) and require your lock code to edit the entry by making it secret. The entry name is still displayed, but the entry's phone numbers are replaced with "<Secret>".

To make an entry secret:

1. Press the navigation key right.
2. Scroll to the Contacts entry you want to tag as secret.
3. Press **Options** (right softkey) to display the menu options.
4. Highlight **Set Secret** and press .
5. Enter the 4-digit lock code.
6. Select **On** and press .

To make an entry public:








1. Press the navigation key right.
2. Scroll to the Contacts entry you want to tag as public.
3. Press **Options** (right softkey) to display the menu options.
4. Highlight **Set Secret** and press .
5. Enter the 4-digit lock code.
6. Select **Off** and press .

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or your Sprint PCS Phone Number or try 0000. If none of these work, call Sprint Customer Service at 1-888-211-4PCS (4727).

Dialing Sprint PCS Services

Your Contacts list is preprogrammed with contact numbers for various Sprint PCS Services. You must be in digital mode to access Sprint PCS Services.

To dial a service:

1. Press  to access the main menu.
 2. Select **Contacts** and press .
 3. Select **Services** and press .
 4. Select **Cust Service, Dir Assistance, Account Info, Sprint Operator, or Voice Command** and press .
 5. Press  or .
- or —
- Press **Options** (right softkey), highlight **Call or Call:Speaker On**, and press .

Using the Phone's Scheduler and Tools

In This Section

- ◆ **Managing the Calendar**
 - ◆ **Using Your Phone's Scheduler**
 - ◆ **Using the Call Alarm Feature**
 - ◆ **Using the To Do List**
 - ◆ **Purging All Events, Call Alarms, or To Do List Items**
 - ◆ **Personal Information Management**
 - ◆ **Using Your Phone's Tools**
 - ◆ **Downloading Files Through Sprint PCS Vision**
-




Your Sprint PCS Vision Phone is equipped with several personal information management features that help you manage your busy lifestyle. This section shows you how to use these features to turn your phone into a time management planner that helps you keep up with your contacts, schedules, and commitments. It takes productivity to a whole new level.

Managing the Calendar

Use the Calendar to remind you of events or important calls you need to make. You can schedule up to 100 events, 15 Call Alarms, and 20 To-Do List items.

Displaying Your Calendar

To display your calendar:

1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Calendar** and press .


Note: In a no-service area or an analog service area, it's necessary to set the actual time and date to use the Calendar function after removing and installing your battery. Set the current Time/Date by using numeric keys and/or the navigation key (Right/Left: move cursor, Up/Down: change value). You can set any time from 12:00 AM, Jan 1, 2000 to 11:59 PM, Dec 31, 2099.

Setting Holidays

You can set your personal holidays by displaying the date in red on the Calendar display. The default holidays displayed in red are Sundays and national holidays.

Note: You can set holidays from Jan 1, 2000 to Dec 31, 2020.

To set personal holidays:

1. From the Calendar display, highlight the day you want to set to the holiday by using the navigation key.
2. Press **Options** (right softkey), highlight **Holiday**, and press .

3. Highlight **Set Date** or **Set Weekly** from the options and press .




Tip: The current day is framed by a rectangle.

Using Your Phone's Scheduler


Adding an Event to the Scheduler

Your Scheduler helps organize your time and reminds you of important events (up to 100 events).

To add an event:

1. From the Calendar display (see the previous page), select the day you want to add an event and press **Options** (right softkey).
2. Highlight **Add Event** and press .
3. Select **Schedule** and press .
4. Enter the description using your keypad and press  (or press **Mode** [right softkey] to select a description from "From To Do List").

Note: The "From To Do List" option will not appear if there are no items stored in the To Do List. See "Adding To Do List Items" on page 131 for details.

5. Select the following items and press 
 - **Description** to enter a description of your event (up to 14 characters).
 - **From** to schedule the start time.
 - **To** to schedule the end time.
 - **Location** to edit the location of your event (up to 14 characters).

- **Alarm** to select your desired ringer.
- **Alarm Time** to edit the alarm time (number of hours or minutes before the event starts). Default alarm time is 10 minutes before.
- **Repeat** to set the event's repeating status. Select **None, Daily, Weekly, Monthly, or Yearly.**

6. Press **Save** (left softkey) to schedule the event.

Tip: The date you have scheduled events for is indicated by "▶".

Tip: Press the navigation key up or down to scroll by week through the Scheduler calendar and the Side Up/Down key to scroll by month.

Event Alerts


There are several ways your Sprint PCS Vision Phone alerts you of scheduled events:


- By playing the alert tone (depending on the Ringer Type and Ringer Volume setting).
- By blinking the LED.
- By displaying the event's description on the Main LCD when the flip is open.
- By lighting the LCD backlight (depending on the backlight setting).

Event Alert Menu

When your phone is turned on and you have an event alarm scheduled, your phone alerts you and displays the event summary.

To respond to an event alert:

1. Press **View** (left softkey) to silence the alarm and see the event details.
2. Highlight the unchecked event and press  to see the event details or press **Options** (right softkey) for the following options.

To select an option, highlight it and press .

- **Snooze** to repeat the alarm in ten minutes.
- **Exit** to exit the options.




Note: If you press **Exit** (left softkey) during step 2 above, you are prompted to erase the unchecked event. Select **Yes** to erase or **No** to cancel.

Using the Call Alarm Feature

Adding a Call Alarm to the Scheduler

You can set call alarms to notify you when you need to place a call. The call alarm will let you know when and to whom to place a scheduled call. You can set up to 15 call alarms.

To add a call alarm to the Scheduler:

1. From the Calendar display (see page 124), select the day you want to add an event and press **Options** (right softkey).
2. Select **Add Event** and press .
3. Select **Call Alarm** and press .
4. Enter the phone number directly or press **Options** (right softkey) for options.
 - **From Phone Book** to select the desired number from your Contacts list.
 - **Vicemail** to select the number for voicemail access.
5. Select the following items and press .
- **Time/Date** to edit the start time and date.
- **Alarm** to select the ringer alarm.
- **Repeat** to set the Call Alarm's repeat status. Select **None, Daily, Weekly, Monthly, or Yearly**.
6. Press **Save** (left softkey).

Tip: You can also add a call alarm from the Contacts menu (see “Contacts List Entry Options” on page 115).

Call Alarm Alerts




There are several ways your Sprint PCS Phone alerts you of a scheduled call alarm:

- By playing the alert tone (depending on the Ringer Type and Ringer Volume setting).
- By blinking the LED.
- By displaying the call alarm notification on the Main LCD when the flip is open.
- By lighting the LCD backlight (depending on the backlight setting).

Call Alarm Menu

When your phone is turned on and you have scheduled a call alarm, your phone alerts you and displays the name or phone number you wish to call.

To respond to a call alarm:





1. Press  or **View** (left softkey) to silence the alarm and see the call alarm details.
2. Highlight the unchecked event and press  to see the call alarm details, or press **Options** (right softkey) for the following options (to select an option, highlight it and press ):
 - **Call** to dial the scheduled phone number.
 - **Call:Speaker On** to dial the scheduled phone number in speakerphone mode.
 - **Snooze** to repeat the alarm in ten minutes.

- **Save Phone#** to save the scheduled phone number in your Contacts list. **Go to Phone Book** appears when the number is already in your Contacts list. (See “Saving a Phone Number” on page 38.)

Note: If you press **Exit** (left softkey) during step 2 above, you are prompted to erase the unchecked event. Select **Yes** to erase or **No** to cancel.




Editing an Event or Call Alarm

To edit an event or call alarm:

1. From the Calendar display (see page 124), select the date for which you set events and press .
2. Select one of the events or call alarms and press . (The event or call alarm details appear.)
3. Select the information you want to edit and press .
4. Enter or select a new setting and press .
5. Press **Save** (left softkey).




Viewing a Future or Past Day's Scheduled Events

To view a future or past day's scheduled events:

1. From the Calendar display (see page 124), press **Options** (right softkey).
2. Highlight **Go To Date** and press .
3. Enter the date by using numeric keys and the navigation key and press  or **OK** (left softkey).
4. Press  once again to view the day's event list.

Erasing an Event or Call Alarm

To erase a scheduled event or call alarm:





1. From the Calendar display (see page 124), select the date for which you set events and press .
2. Select one of the events or call alarms and press **Options** (right softkey).
3. Highlight **Erase Event** and press .
4. Select **Yes** and press .

Using the To Do List

Adding To Do List Items



Your phone can store and manage up to 20 To Do List items.

To add an item to your To Do List:

1. From the Calendar display (see page 124), press **Options** (right softkey).
2. Highlight **To Do List** and press .
3. Press **Options** (right softkey).
4. Highlight **Add Item** and press .
5. Enter the description (up to 14 characters) and press .
6. Select **Priority** and press  to edit the To Do's priority. You can select from **Normal**, **Urgent**, or **Done**.
7. Press **Save** (left softkey).




Viewing the To Do List

To view your To Do List:

1. From the Calendar display (see page 124), press **Options** (right softkey).
2. Highlight **To Do List** and press 
 - To see the details of each To Do List item, select an item and press .


Editing To Do List Items


To edit a To Do List item:

1. From the To Do List display, highlight the item you want to edit and press .
2. Select the information you want to edit and press .
3. Edit the description or change the priority and press .
4. Press **Save** (left softkey).

Adding a To Do List Item to the Scheduler





To add your To Do List item to the scheduler:

1. From the To Do List display (see above), select the item you want to add to the schedule and press **Options** (right softkey).
2. Highlight **Add To Schedule** and press 
 - **Add To Schedule** to extract the item from the To Do List and make it a scheduled event.

3. Enter the description, time/date, alarm, and other information using your keypad and press . (See “Adding an Event to the Scheduler” on page 125 for entering.)
4. Press **Save** (left softkey).

Deleting Items From the To Do List



To delete To Do List items:

1. From the To Do List display (see the previous page), highlight the item you want to erase and press **Options** (right softkey).
2. Highlight your desired option and press .
 - **Erase Item** to erase an item from the To Do List.
 - **Erase Selection** to erase multiple selected To Do List items at one time. Press  to check the box(es) next to the To Do List item(s) you want to delete and press **Erase** (left softkey) to erase. To check all boxes, press **Options** (right softkey), highlight **Check All**, and press .
 - **Erase All** to erase all To Do List items.
3. Select **Yes** and press .



Note: If you have saved a To Do List item to the scheduler, deleting it from the To Do List will not delete it from the scheduler. To remove an item saved to the scheduler, see “Erasing an Event or Call Alarm” on page 131.

Viewing Memory in Your Scheduler

To view available memory space and options:




1. From the Calendar display (see page 124), press **Options** (right softkey).
2. Highlight **View Memory** and press .
3. Select **Schedule**, **Call Alarm**, or **To Do List** and press . (The available memory space and options display.)

For further options:

4. Press **Options** (right softkey).
5. Highlight an option and press 
 - **Erase Old** deletes old events or call alarms.
 - **Erase Selection** deletes the To Do List items you selected. (See “Deleting Items From the To Do List” on the previous page.)
 - **Erase Done** deletes the To Do List items that have been completed.
 - **Erase All** deletes all events, call alarms, or To Do List items.
6. Select **Yes** or **No** and press .

Purging All Events, Call Alarms, or To Do List Items





To delete all scheduled events, call alarms, or To Do List items:

1. From the Calendar display (see page 124), press **Options** (right softkey).
2. Highlight **Erase Memory** and press .
3. Select one item from the options and press 
 - **Erase Old** deletes old events, call alarms, and To Do List items that are done.
 - **Erase All** deletes all events, call alarms, and To Do List items.
4. Select **Yes** and press .

Personal Information Management






Displaying Your User Address

To display the phone's current user address:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Phone Info** and press .
4. Select **Phone#/User ID** and press 
 - If you sign out, <PCS Vision Disabled> appears on the display.





Finding Icon Definitions

To view an explanation of icons that appear on the display:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Phone Info** and press .
4. Select **Help** and press .
5. Select the item for which you want to see the explanation and press . (The icon's explanation appears.)





Displaying the Version Information

To display the version number of the software, hardware, PRL (Preferred Roaming List), PRI (Product Release Instructions), etc., installed on your Sprint PCS Phone:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Phone Info** and press .
4. Select **Version** and press .

Displaying Advanced Information

To display advanced information such as technology and frequency:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Phone Info** and press .
4. Select **Advanced** and press .







Using Your Phone's Tools

In addition to helping you be more efficient and organized, your Sprint PCS Vision Phone offers useful and entertaining tools.

Using the Alarm Clock

Your phone comes with a built-in alarm clock with alarm capabilities.

To use the alarm clock:

1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Alarm Clock** and press .
4. A caution message will appear on the display. Press **Continue** (left softkey) to continue.
5. Select the box under the following items and press 
 - **Alarm** to set the alarm On/Off. Select **On** and press .
 - **Time** to enter the alarm time. Enter the desired alarm time and press .
 - **Repeat** to select the alarm frequency. Select **None** to set your alarm once or **Daily** to set your alarm daily.
6. Press **Done** (left softkey) to save the alarm settings.

Note: Alarm will not sound when the phone is powered off.

To stop the alarm:

- ▶ Press any key to stop the alarm.
 - Press **Exit** (right softkey) to exit the alarm clock display.




Tip: The alarm stops in 30 seconds automatically.


Note: In a no-service area or an analog service area, it's necessary to set the actual time and date to use the Alarm Clock function after removing and installing your battery.

Using the World Clock

This feature is available only in digital service areas.




To view the world clock display:

1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **World Clock** and press .
4. The world clock display appears.
 - Press the navigation key right or left to change countries.

Tip: Press **Summer** (left softkey) or **Standard** (right softkey) to select between daylight savings and standard time (if applicable). The  icon is shown in summer mode.

Using the Stop Watch


To start the stop watch:

1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Stop Watch** and press 
 - Press **Start** (left softkey) to start the stop watch operation.
 - Press **Stop** (left softkey) to stop the stop watch operation.
 - Press **Resume** (left softkey) to start the stop watch operation again.

To record a lap time while the stop watch is running:

- Press **Lap** (right softkey) to record time of first lap.
- Press **Lap** (right softkey) again to record next lap. (You may continue this until lap 5.)





To display the stop watch options:

1. During stop watch operation, press **Options** (right softkey).
2. To select an option, highlight it and press 
 - **Go to Lap List** to display a saved Lap List. Press **Detail** (left softkey) to display the lap list detail or press **Options** (right softkey) for further options.
 - **Edit Title** to edit the current lap list's title.
 - **Erase This** to erase an individual Lap List.
 - **Erase All** to erase all existing Lap Lists.
 - **Save to Lap List** to save the recorded lap times.
 - **Reset** to reset the time to zero and clear any recorded lap times.

Using the Calculator

Your phone comes with a built-in calculator.


To use the calculator:

1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Calculator** and press .
4. Enter numbers using your keypad. (Press the left softkey to insert a decimal point.)
5. Press the appropriate navigation key for an arithmetic option (**Up** for addition, **Down** for subtraction, **Left** for multiplication, **Right** for division).
6. Enter numbers and press  for the result.
 - To clear the numbers, press **CLR** (right softkey).





Updating Your Phone

Your VI-2300 by Sanyo allows you to update its software version over the air. You will be notified if a new software version is available for your phone. You can also check if an update is available through the **Tools/Extras** menu.

To update your phone:

1. Press **Yes** (left softkey) when an update notification appears.
2. Read the information screen and press **Next** (left softkey) to continue.
3. Select **Update Phone** and press  to update your phone.



To update your phone through the Tools/Extras menu:

1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Update Phone** and press .
4. If a new software version is available, press **Yes** (left softkey) to continue.
5. Read the onscreen information and press **Next** (left softkey) to continue.
6. Select **Update Phone** and press  to update your phone's software version.


Downloading Files Through Sprint PCS Vision

Your Sprint PCS Phone allows you to download images (screen savers), ringers, games, etc., from a Sprint PCS Vision connection. It is also possible to download from certain menus (Contacts list, Ringer Setting, or Display Setting).

To download a file from the Downloads menu:

1. Press  to access the main menu.
2. Select **Downloads** and press .



Shortcut: Instead of steps 1 and 2 above, press the navigation key down.



3. Press **Options** (right softkey) to display options.
4. Select **Get New** and press . (The browser will launch and display the Downloads main screen.)
5. Select your desired file and follow the system prompts.

Confirming the Downloaded Data

The downloaded data will automatically be classified as games, ringers, images (screen savers), or applications. However, if any data has a different category, it will be classified as dynamic (the folder name is variable). If data doesn't belong to any of the above, it will be classified as others.

To confirm the downloaded data:




1. Press  to access the main menu.
2. Select **Downloads** and press .

3. Select your desired data folder (for example, **Games**, **Ringers**, or **Screen Savers**) and press .
4. Select the downloaded data you want to confirm and press .

Tip: The names of dynamic folders are variable depending on data.

You can manage your contents in the browser.

To confirm your Content Manager:







1. Press  to access the main menu.
2. Select **Downloads** and press .
3. Press **Options** (right softkey), select **My Content Manager**, and press .

Downloaded Data Options

Selecting Download Settings






This feature is available when you select a Java application.

To select the settings for the downloaded data:

1. Press  to access the main menu.
2. Select **Downloads** and press .
3. Select **Games** or **Applications** and press .
4. Select the data for which you want to select settings and press **Options** (right softkey).
5. Highlight **Settings** and press .
6. Select **Network Access** and press .
7. Select your desired option and press .

Assigning the Downloaded Data






To assign the downloaded data:

1. Press  to access the main menu.
2. Select **Downloads** and press .
3. Select **Ringers** or **Screen Savers** and press .
4. Select the data you want to assign and press **Options** (right softkey).
5. Highlight **Set as** and press .
6. Highlight the menu you want to assign and press .

Sorting the Downloaded Data

The files downloaded via the Web are stored in alphabetical order. You may also store the data in memory size order.





To sort downloaded files:

1. Press  to access the main menu.
2. Select **Downloads** and press .
3. Select a folder and press .
4. Press **Options** (right softkey).
5. Highlight **Sort by** from the options and press .
6. Highlight your desired option (**Name** or **Size**) and press .

Viewing the Downloaded Data Size

This feature allows you to confirm each downloaded file's size and the remaining download capacity.




To view the data size:

1. Press  to access the main menu.
2. Select **Downloads** and press .
3. Select a folder and press .
4. Press **Options** (right softkey).
5. Highlight **Icon/Size** and press . (Data size is displayed at the left of the downloaded data name.)

Viewing the Memory Space





This feature allows you to confirm how much memory is left and may be used for downloading files.

To view the available memory space:

1. Press  to access the main menu.
2. Select **Downloads** and press .
3. Press **Options** (right softkey).
4. Highlight **View Memory** and press . (**Used** and **Free** memory size are displayed.)

Erasing the Downloaded Data

To erase the selected downloaded data:

1. Press  to access the main menu.
2. Select **Downloads** and press .
3. Select a folder and press .
4. Select the downloaded data you want to erase and press **Options** (right softkey).
5. Highlight **Erase** and press .
6. Follow the onscreen prompts to erase the data.

Tip: To erase all data, select **Erase All** during step 5 above.

Note: It takes a while when you erase a large amount of downloaded data.

Using Your Phone's Voice Services

In This Section

- ◆ **Using Voice-Activated Dialing**
 - ◆ **Managing Voice Memos**
 - ◆ **Setting Up Screen Call**
-

Your Sprint PCS Vision Phone's Voice Services let you place calls using your voice, store voice reminders, and record memos right on your phone. This section includes easy-to-follow instructions on using voice-activated dialing and managing voice memos.

Using Voice-Activated Dialing

In addition to Sprint PCS Voice Command™ (see page 247), you can use a voice dial tag to automatically dial a phone number in your Contacts. (A voice dial tag is a command you record and use to place calls without using the keypad.) Your phone can store up to 30 voice dial tags. (To create a voice dial tag, see “Adding a New Contacts Entry” on page 112 or “Editing a Contacts Entry” on page 117.)


Making a Call Using Voice-Activated Dialing

To use a voice dial tag to call a phone number:

With the flip open:

1. Press **TALK** or **SPEAKER** briefly.
2. Follow the system prompts and recite the entry’s Voice Dial tag into your phone’s microphone.








With the flip closed:

1. Press and hold .
2. Follow the system prompts and recite the entry’s Voice Dial tag into your phone’s microphone.

Note: To use the Voice Dial function, you must have a stored entries for Voice Dial (see “Programming Voice Dial Tags” on the next page).

Programming Voice Dial Tags








To program a voice dial tag:

1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Voice Services** and press .
4. Select **Voice Dial** and press .
5. Select **Program** and press .
6. The phone will prompt you to say the name you want to program. Wait for the beep and then say the name.
7. Respond to the prompt by repeating the name after the beep.
8. Enter or highlight the Voice Dial entry (name) in the Contacts list and press .
9. Select the labeled category that includes your desired phone number and press . (The display shows “Voice Dial Recorded.”)

Note: Record Voice Dial tags in a quiet environment and without the aid of an accessory (for example, a headset or hands-free car kit).

Reviewing Voice Dial Tags

To review voice dial tags:







1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Voice Services** and press .
4. Select **Voice Dial** and press .
5. Select **Review** or **Review:Speaker** and press .
6. Select the desired entry and press .
– or –
Select the desired entry and press **Options** (right softkey). Then highlight your desired option and press .

Options:

- **Play** to play the recorded voice dial tag.
- **Speaker On** to play the recorded voice dial tag in speakerphone mode. (If you are in speakerphone mode, the option will appear as **Speaker Off** to deactivate.)
- **Erase** to erase the voice dial tag. Select **Yes** to erase and **No** to cancel.


Erasing All Voice Dial Tags

To erase all voice dial tags:

1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Voice Services** and press .
4. Select **Voice Dial** and press .
5. Select **Erase All** and press .
6. Select **Yes** and press .






Managing Voice Memos

You can use your phone's Voice Services to record brief memos to remind you of important events, phone numbers, or grocery list items.

Tip: If you haven't signed up for the Sprint PCS Ready Link service and Sprint PCS Ready Link mode is set to Disable, you can use the Ready Link/Memo Button () as a Voice Memo button in standby mode. You can use it to record memos or display Memo options.

Recording Voice Memos

To record a voice memo:

1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Voice Services** and press .
4. Select **Voice Memo** and press .
5. Select **Record** and press .
6. Start recording after the beep.

To end the recording of your memo:

▶ Press **MENU/OK**, **BACK**, or **END/⓪**.

Tip: To record in speakerphone mode, press and hold **SPEAKER** in standby mode.

To record the other party's voice during a phone call:

1. During a call, press **Options** (right softkey).
2. Select **Tools/Extras** and press **MENU/OK**.
3. Select **Voice Services** and press **MENU/OK**.
4. Select **Voice Memo** and press **MENU/OK**.
5. Select **Record** and press **MENU/OK**.
6. Start recording after the beep.

To end the recording during a phone call:

▶ Press **MENU/OK** or **BACK** while recording.

– or –

Press **END/⓪** to stop recording and disconnect the call.

Recording also stops when the other party hangs up the call.







- Call recording is disabled while you are roaming in analog service areas.
- When the recording capacity is full, highlight an old memo and press **Erase** (left softkey). Then select **Yes** and press **MENU/OK** to make room for additional memos.

Note: Your phone can store up to 12 memos and the total available recording time is 72 seconds (maximum of 18 seconds per memo).


Tip: Voice Memos are stored with the date and time stamp in reverse chronological order, except when recorded in a no service area.


Reviewing Voice Memos

To play the voice memos you have recorded:

1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Voice Services** and press .
4. Select **Voice Memo** and press .
5. Select **Play** or **Play:Speaker** and press .
6. Select one memo from the list and press .

– or –







If you want to play all memos continuously, highlight **All** and press .

7. Press  to stop playing.
 - Press **Slow** (left softkey) or **Fast** (right softkey) to change the playing speed.
 - To play the newer/older memo, press the navigation key right or left.




Tip: To set the speakerphone mode on or off, press **Options** (right softkey), highlight **Speaker On/Off**, and press  during step 6 above.

Erasing Voice Memos

To erase all voice memos:

1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Voice Services** and press .
4. Select **Voice Memo** and press .
5. Select **Erase All** and press .
6. Select **Yes** and press .

To erase individual memos:


1. Follow steps 1-4 above.
2. Select **Play** or **Play:Speaker** and press .
3. Display the memo list, highlight the memo you want to erase, and press **Options** (right softkey).
4. Select **Erase** and press .
5. Select **Yes** and press .

Setting Up Screen Call









This feature enables you to screen incoming calls by using a recorded announcement, either one that is pre-recorded or one that you record. You can also record the caller's message into the Voice Memo list.






Activating Screen Call



To start Screen Call when you have incoming calls:

1. When the phone rings or vibrates, press **Options** (right softkey) to display the options.
2. Highlight **Screen Call** and press .

To set Auto Screen Call:







1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Voice Services** and press .
4. Select **Screen Call** and press .
5. Select **Auto** and press .
6. Select **On** and press .
7. Set the answering time by using numeric keys or by pressing the navigation key up or down.
8. Press  or **OK** (left softkey). (The  icon is displayed on the standby display.)

Tip: If a new caller's message is waiting,  appears on the display. The memos recorded while activating "Screen Call" are shown with "" or "" icon in the list ("": once played, "": not played yet). To listen to the message, see "Reviewing Voice Memos" on page 153.

Tip: While the caller's message is being recorded, press  to answer the call, or press  to stop recording and disconnect the call.

Selecting an Announcement for Screen Call






To select a Screen Call announcement:






1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Voice Services** and press .
4. Select **Screen Call** and press .
5. Select **Announcement** and press .
6. Depending on your preference, highlight **Pre-Recorded** or **Custom** and press .

Recording Your Name for a Pre-Recorded Announcement

You can use a pre-recorded announcement with or without your name. If you record your name, your phone uses your name recording to announce that you are not available to answer the call.

To record your name:






1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Voice Services** and press .
4. Select **Screen Call** and press .
5. Select **Announcement** and press .
6. Select **Pre-Recorded** and press **Edit** (right softkey).

7. Select **Record Name** and press .
- If your name has already been recorded, select **Yes** or **No** to overwrite the existing recording.
8. Press  to start the first recording. (Press  to stop recording.)
9. After the first recording, press  again to start the second recording.
10. Press  to stop recording.

Tip: The maximum recording time is 12 seconds.

Recording a Customized Announcement







To record an announcement:

1. Follow steps 1-5 on the previous page.
2. Select **Custom** and press **Edit** (right softkey).
3. Highlight **Record** and press .
- When an announcement has already been recorded, select **Yes** or **No** to overwrite the existing recording.
4. Press  to start the first recording. (Press  to stop recording.)
5. After the first recording, press  again to start the second recording.
6. Press  to stop recording.

Tip: The maximum recording time is 12 seconds.




Reviewing an Announcement

To review an announcement:

1. Press  to access the main menu.
2. Select **Tools/Extras** and press .
3. Select **Voice Services** and press .
4. Select **Screen Call** and press .
5. Select **Announcement** and press .
6. Select **Pre-Recorded** or **Custom** and press **Edit** (right softkey).
7. Highlight **Play** or **Play:Speaker** and press .

Erasing an Announcement

To erase an announcement:

1. Follow steps 1-6 above.
2. Select **Erase Name** to erase the name for a Pre-Recorded announcement and press .
– or –
Select **Erase** to erase the message for a Custom announcement and press .
3. Select **Yes** and press .

Using Sprint PCS Ready LinkSM



In This Section

- ◆ Getting Started With Sprint PCS Ready Link
 - ◆ Making and Receiving a Sprint PCS Ready Link Call
 - ◆ Adding and Editing Ready Link Contacts
 - ◆ Erasing Ready Link List Entries
 - ◆ Updating Your Sprint PCS Ready Link Lists
 - ◆ Managing Sprint PCS Ready Link Settings
-

Your Sprint PCS Vision Phone gives you the ability to quickly connect with other Sprint PCS Ready Link users for walkie-talkie-style communication from anywhere, to anywhere on the Nationwide Sprint PCS Network. It's ideal for quick two-way conversations with your friends, family, and co-workers.






This section explains the features and options of Sprint PCS ReadyLink.


Getting Started With Sprint PCS Ready Link

Sprint PCS Ready Link allows you to enjoy quick, two-way, “walkie-talkie-style” communication with your friends, family, and co-workers. You can make 1-to-1 or 1-to-many calls (up to 5 others on the same call) to any other Sprint PCS Ready Link user, anywhere on the Nationwide Sprint PCS Network. You can make and receive Sprint PCS Ready Link calls when your phone displays the  or  icon.

Setting Sprint PCS Ready Link Mode


To enable or disable Sprint PCS Ready Link mode:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Ready Link** and press .
4. Select **Enable/Disable** and press .
5. Select **Enable** and press . (The default setting is **Disable**.)
 - **Enable:** Lets you make or receive Sprint PCS Ready Link calls any time your phone is not in use.
 - **Disable:** Disables your phone’s Sprint PCS Ready Link service; you will not be able to make or receive Sprint PCS Ready Link calls or access your Ready Link contacts.

Tip: If you haven’t signed up for the Sprint PCS Ready Link service and Sprint PCS Ready Link mode is set to **Disable**, or the Sprint PCS Ready Link service is locked, you can use the Ready Link/Memo Button () as a Voice Memo button in standby mode.

Preparing Your Phone for Sprint PCS Ready Link Service

Every time you turn on your phone, your phone will identify itself and make itself available to the Ready Link network.

- ▶ When you turn on your phone in an area where Sprint PCS Ready Link service is available, your phone will display “Preparing Ready Link service...Please wait.” (The  icon appears on the display. Your phone is now ready to make and receive Sprint PCS Ready Link calls.)


Ready Link Call Alerts

There are several ways your Sprint PCS Phone alerts you during Sprint PCS Ready Link calls.

When you make or receive a Sprint PCS Ready Link call:

- The phone sounds (depending on the Ringer Type).
- The backlight illuminates.
- The screen displays a Sprint PCS Ready Link call message.
- The other party's Sprint PCS Ready Link number and name (if available) are displayed.
- The screen displays who has the floor.

The LED indicates when the floor is open or not:


- The LED Off indicates the floor is open. (You can take the floor and speak by pressing and holding .)
- The LED On indicates you or another contact have the floor.

Sprint PCS Ready Link Display Screens

Sprint PCS Ready Link Main Screen




Sprint PCS Ready Link In-Call Screen

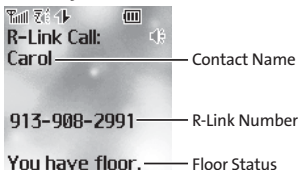


Making and Receiving a Sprint PCS Ready Link Call

Displaying the Sprint PCS Ready Link List


- ▶ From standby mode, press **R-Link** (left softkey) or the Ready Link/Memo button on the side of your phone () to access the Sprint PCS Ready Link List.

Tip: The first time you access the list, the Sprint PCS Ready Link Help message will appear. Press **Yes** (left softkey) and **Next** (left softkey) to read a brief introduction of Sprint PCS Ready Link.

Selecting a Contacts List

When your phone displays a Sprint PCS Ready Link List, the left softkey is labeled **Go to**. To switch to another contact list, press **Go to** (left softkey), highlight your desired list, and press .



- **Company List/Company Groups** contain company-provided contacts (up to 200 entries each). Your company list can only be created and modified by an authorized administrator on the Sprint PCS Ready Link server. When the lists are empty, Company List/Company Groups will not appear on the display.
- **Personal List/Personal Groups** contain your personal Ready Link contact names and numbers, separately or in groups. You can create and edit your own Personal List. Your phone can store a total of 200 entries (you may include up to five contacts per group).
- **Outgoing** shows the last 10 different Sprint PCS Ready Link calls you placed.
- **Incoming** shows the last 10 different Sprint PCS Ready Link calls you accepted.
- **Missed** shows the last 10 Sprint PCS Ready Link calls you missed.

Note: The  icon next to the group name indicates a group.




Making a Sprint PCS Ready Link Call (1-to-1 Call)



You can place a 1-to-1 Sprint PCS Ready Link call by entering a Sprint PCS Ready Link number or by selecting a contact from the Sprint PCS Ready Link List.

To place a Sprint PCS Ready Link call by selecting a contact:

1. Press **R-Link** (left softkey) or press .
2. Press **Go to** (left softkey), highlight the list from which you want to place a call (**Company List, Personal List, Outgoing, Incoming, or Missed**), and press .

Tip: You can also select **Enter R-Link#** from the **Go to** option to enter a Sprint PCS Ready Link number directly. (See page 166 for details.)

3. Scroll to the contact you want to call, and press and hold  to place the call and get the floor. (You will see **R-Link calling...** and **Connecting...** followed by **“You have floor.”** You can now begin speaking.)
– or –
Scroll to the contact you want to call and press and release  to place the call. (The call will connect as described above, but **“Floor is open.”** will appear on the screen and either you or your contact may press and hold  to take the floor and speak.)

Note: During a Sprint PCS Ready Link call, the **“floor”** is the right to speak. When you see **“Floor is open.”**, the first person to press the Ready Link/Memo button () can speak (while holding the button). Only the person who has the floor can speak. The phone beeps if you press  when another contact has the floor.

4. Continue holding **[MUTE]** as you speak. (When you are finished speaking, release **[MUTE]** to allow the other contact to speak. When the other party takes the floor, you will see the speaker's name and phone number and the text "**has floor.**")
5. When you are finished, press **[END/⊙]**.

Note: When neither party has the floor during a Sprint PCS Ready Link call, "**Floor is open.**" appears on the display. If no one takes the floor for 20 seconds, the Sprint PCS Ready Link call ends automatically.

Tip: If you press **[TALK]** or **[SPEAKER]** during step 3 above, you can make a standard voice call.

Making a Sprint PCS Ready Link Call (Group Call)

You can make a Sprint PCS Ready Link call to all members in a Group entry, which you have in your Sprint PCS Ready Link List. You can communicate with up to five members at a time.

To place a Sprint PCS Ready Link Group call:

1. Press **R-Link** (left softkey) or press **[MUTE]**.
2. Press **Go to** (left softkey), highlight the list from which you want to make a Group call (**Company Groups**, **Personal Groups** or **Outgoing**), and press **[MENU OK]**.
3. Scroll to the group you want to call, and press and hold **[MUTE]** to place the call and take the floor. (You will see **R-Link calling...** and **Connecting...** followed by "**You have floor.**" Continue with the Sprint PCS Ready Link call as described on the previous page.)
 - To make a Sprint PCS Ready Link call to a group member, select your desired group, highlight your desired group member, and press and hold **[MUTE]**.

- If one of the group members takes the floor, you will see the member's name and Sprint PCS Ready Link number on the display.

4. When the call is finished, press **END/⊕**.

Tip: The phone beeps if you press **|||||** when another contact has the floor.

Tip: You can also make a Group Call after checking the group member.

Press **MENU OK** to display group members, highlight **<Call Group>** and press and hold **|||||** during step 3 above.



Tip: To redial your last Sprint PCS Ready Link call, highlight **Redial** and press **|||||** from the Sprint PCS Ready Link List.

Making a Sprint PCS Ready Link Call by Entering a Number

To place a Sprint PCS Ready Link call by entering a number:

1. From standby mode, enter the Sprint PCS Ready Link number you want to dial.
2. Press **|||||** to place the Sprint PCS Ready Link call.
(Continue holding **|||||** to take the floor and speak.)
 - The contact's name appears on the display if there is a matched number in your Sprint PCS Ready Link List.
3. Continue with the Sprint PCS Ready Link call, pressing and holding **|||||** to speak and releasing it to allow others to reply.
4. When the call is finished, press **END/⊕**.

– or –


1. Press **R-Link** (left softkey) or press .
2. Press **Go to** (left softkey), highlight **Enter R-Link#** and press .
3. Enter the Sprint PCS Ready Link number you want to dial.
4. Follow steps 2-4 above.

Note: Sprint PCS Ready Link numbers must contain 10 digits (area code + phone number) or 11 digits (1 + area code + phone number). Your Sprint PCS Ready Link number is the same as your Sprint PCS Phone number.


Missed Call Notification for Sprint PCS Ready Link Calls





When an incoming Sprint PCS Ready Link call is not answered, the Missed Call Notification is displayed on your screen.

To call the last Missed Sprint PCS Ready Link call:

- ▶ Simply press  while the Missed Call Notification is displayed. (Continue with the Sprint PCS Ready Link call as described previously.)

To display the Missed Ready Link Call Log:

- ▶ Press **View** (left softkey). To call the entry, highlight the entry you want to call, and press and hold . (Continue with the PCS Ready Link call as described previously.)

Note: When you display Missed Calls entries, you will see the  icon next to the name. Once you confirm the entry by pressing , the icon turns to the  icon. The  icon will remain until you make or receive a Sprint PCS Ready Link call to or from the entry.

Receiving a Sprint PCS Ready Link Call

To receive a Sprint PCS Ready Link call:

1. Make sure your phone's Sprint PCS Ready Link mode is enabled (see "Setting Sprint PCS Ready Link Mode" on page 160).
2. When you receive a Sprint PCS Ready Link call from a contact, "R-Link Call," the contact's name, and the Sprint PCS Ready Link number appear on the display. (You do not need to take any action to answer the call.)
 - When you receive a group call, "Group Call" and the Sprint PCS Ready Link number appear.
 - If nobody takes the floor for 20 seconds, the call will be a missed Ready Link call.
3. If the person placing the call has kept the floor (held the Ready Link/Memo button), you will see the contact name and Sprint PCS Ready Link number along with "**has floor.**," and you will hear the caller speaking.
4. When the caller finishes speaking and releases **[M]**, you will see "**Floor is open.**" on the display screen. Press and hold **[M]** to take the floor and reply to the caller. (You will see "**You have floor.**" and hear a tone confirming that you may speak.)
5. When the conversation is finished, press **[END/⓪]**.

Tip: You can also receive a Sprint PCS Ready Link call with the flip closed. Press and hold **[M]** to take the floor when the floor is open.

Note: You can change the volume and the speakerphone setting while a Sprint PCS Ready Link call is activated. **Volume:** Adjust the voice volume by using the Side Up/Down key or by pressing the navigation key up or down except when you are pressing and holding **[M]**. **Speaker:** Switch the speakerphone on or off by pressing **[SPEAKER]**.

Adding and Editing Ready Link Contacts

Copying an Entry to Personal List or Personal Group List

You can copy an entry to your Personal Lists from several different sources. If the selected entry is already stored in the Personal Lists, the “copy” option does not appear.

To copy an entry from the Sprint PCS Ready Link List:


1. Press **R-Link** (left softkey) or press **||||**.
2. Press **Go to** (left softkey), highlight the list from which you want to copy an entry (**Company List, Company Groups, Outgoing, Incoming, or Missed**), and press **MENU OK**.
3. Select the entry you want to copy (or scroll to highlight the **Redial** entry at the top of your screen) and press **Options** (right softkey). To select an option, highlight it and press **MENU OK**.
 - **Copy to Personal** to copy the contact to the Personal List.
 - **Copy Group** to copy the group to the Personal Group List.
 - **Copy to Ph. Book** to copy the contact to the Contacts list.
4. Press **Yes** (left softkey) to copy and save the entry to your Personal List or Personal Group List.

Note: Your Company Lists can only be set up and edited by an authorized administrator on the Sprint PCS Ready Link server. You cannot add or edit contacts/groups to your Company Lists.

Saving a Sprint PCS Ready Link Number

When you have finished a Sprint PCS Ready Link call, you will see the Sprint PCS Ready Link number and the text “R-Link call ended.” on the display. If the number is already stored in the Personal Lists, the **Save** softkey does not appear.




To save the number from the end call display:

1. From the end display, press **Save** (right softkey).
2. Enter a name and press .
3. Press **Save** (left softkey).
4. Press **Yes** (left softkey).

Finding an Entry in the Sprint PCS Ready Link List

You can find your desired entry by entering a few letters.

To find a Sprint PCS Ready Link entry:

1. Press **R-Link** (left softkey) or press .
2. Press **Go to** (left softkey), highlight your desired list (**Company List**, **Company Groups**, **Personal List**, or **Personal Groups**), and press .
3. Enter the first letter or the first few letters of the name.
 - The display shows the list beginning with the letter(s) you entered.
4. Scroll through the list and press  to select your desired entry.

Sprint PCS Ready Link Options

When you use Sprint PCS Ready Link, several options are available by pressing **Options** (right softkey). To select an option, highlight it and press .

- **Edit** to edit a Sprint PCS Ready Link number and/or name. (See page 172.)
- **Send Text** to send a text message. (See page 198 for details.)
- **Copy to Personal** to copy a contact to the Personal List. **Copy Group** appears when you highlight a group. (This option doesn't appear if the entry is already in the Personal List or when you select Personal List/Personal Groups.)
- **Copy to Ph. Book** to copy a contact to your phone's Contacts directory.
- **Erase** to erase a contact. **Erase Group** appears when you highlight a group.
- **Add Contact** to add a new contact. (See page 172 for details.) **Add Group** appears when you highlight a group list. (See page 173 for details.)
- **Find:First Name** to find a contact by first name.
- **Find:Full Name** to find a contact by part of the name.
- **Erase R-Link List** to erase entries saved in the Sprint PCS Ready Link List (except Company List/Company Groups).
- **Help** to see the Sprint PCS Ready Link instruction page.

Adding a New Contact to Your Personal List

You can store a total of 200 entries in the Personal Lists.

To add a new Sprint PCS Ready Link contact:


1. Press **R-Link** (left softkey) or press **||||**.
2. Select **<Add Contact>** and press **MENU OK**.
– or –
Select a contact and press **Options** (right softkey). Then highlight **Add Contact** and press **MENU OK**.
3. Enter a name for the new contact and press **MENU OK**. (This is the name you will see when calling or receiving a call from the contact.)
4. Select **R-Link Number**, enter the contact's 10-digit Sprint PCS Ready Link number (their Sprint PCS Phone number) and press **MENU OK**.
5. Press **Save** (left softkey) to save the new contact to your Personal List.

Tip: You are not allowed to use the following symbols during step 3: :, @, ;, /, *, (, and).

Editing a Contact in Your Personal List

To edit a Personal List contact:







1. Press **R-Link** (left softkey) or press **||||**.
2. Scroll to the entry you want to edit and press **Options** (right softkey).
3. Highlight **Edit** and press **MENU OK**.


4. Select the field you want to edit (**Name** or **R-Link Number**), and press .
5. Edit the entry, press **OK** (left softkey), and press **Save** (left softkey) to save your changes.


Adding a New Group to Your Personal Group List

You can add new groups to the Personal Group List. Each group can include up to five members. You can enter a group member directly, or select the member from the Company List or Personal List.

To add a new Sprint PCS Ready Link group entry:





1. Press **R-Link** (left softkey) or press .
2. Press **Go to** (left softkey), highlight **Personal Groups**, and press .
3. Select **<Add Group>** and press .
– or –
Select an entry and press **Options** (right softkey). Then highlight **Add Group** and press .
4. Enter a Group Name, press , and press **Next** (left softkey).
5. To add contacts to the group, press **Add** (right softkey).
6. Highlight one item from the following and press :
 - **New** to add a new contact. See the previous page for details.
 - **from Company** to add a contact from your Company List (if applicable).
 - **from Personal** to add a contact from your Personal List.

7. Scroll to the contacts you want to add and press  or **Pick** (right softkey) to include the entries.
8. Press **Done** (left softkey) when you are finished selecting contacts, then press **Update** (left softkey) to update your Personal Group List with the new group entry.

Tip: You can also add members directly. From step 5 above, highlight **<Add Members>** and press . Enter the new member's name and R-Link number and press **Save** (left softkey) to save the entry.



Editing a Group in Your Personal Group List

To edit a group name:

1. Press **R-Link** (left softkey) or press .
2. Press **Go to** (left softkey), highlight **Personal Groups**, and press .
3. Scroll to the group entry you want to edit and press **Options** (right softkey).
4. Highlight **Edit** and press .
5. Edit the group name and press  or **OK** (left softkey).

Tip: If you don't need to edit the group name, press **Next** (left softkey) during step 5 above and skip step 6.




6. Press **Save** (left softkey) to save your changes.
7. To edit a group member, scroll to the contact you want to edit and press **Options** (right softkey).
 - **Edit** to edit a group member's name and phone number.
 - **Erase** to erase the group member.
 - **Add New** to add a new group member.

- **Add (Company)** to add a new group member from the Company List (if applicable).
 - **Add (Personal)** to add a new group member from the Personal List.
 - **Details** to display a group member's information.
8. Highlight **Edit** and press .
 9. Select the field you want to edit (**Name** or **R-Link Number**) and press .
 10. Edit the entry, press **OK** (left softkey), and press **Save** (left softkey) to save your changes.
 11. Press **Update** (left softkey) to update your Personal Group List.





Erasing Ready Link List Entries

Erasing an Entry in Your Personal List or Personal Group List

To erase a contact or a group:

1. From the Sprint PCS Ready Link List, press **Goto** (left softkey), highlight **Personal List** or **Personal Groups**, and press .
2. Scroll to the entry you want to erase and press **Options** (right softkey).
3. Highlight **Erase** and press .
 - **Erase Group** appears when you select Personal Groups.
4. Select **Yes** and press .



To erase a group member:

1. From the Sprint PCS Ready Link List, press **Goto** (left softkey), highlight **Personal Groups**, and press .
2. Scroll to your desired group and press  to display the group members.
3. Select the contact you want to erase and press **Options** (right softkey).
4. Highlight **Erase** and press .
5. Select **Yes** and press .
6. Press **Update** (left softkey) to update your Personal Group List.


Erasing a Sprint PCS Ready Link List

You can erase all entries saved in the Sprint PCS Ready Link List (except Company List/Company Groups).

To erase a Sprint PCS Ready Link List:

1. From the Sprint PCS Ready Link List, press **Options** (right softkey).
2. Highlight **Erase R-Link List** and press .
3. Select your desired option and press .
 - **Outgoing** to erase all outgoing Sprint PCS Ready Link calls.
 - **Incoming** to erase all incoming Sprint PCS Ready Link calls.
 - **Missed** to erase all missed Sprint PCS Ready Link calls.

- **All Calls** to erase all Sprint PCS Ready Link call history, except redial.
- **All Personal Ent.** to erase all entries in your Personal List and Personal Groups. You are prompted to enter your 4-digit lock code.





4. Select **Yes** and press .

Tip: The Redial number will not be erased.

Updating Your Sprint PCS Ready Link Lists

Updating the Company Lists and Personal Lists









To update your Company Lists and Personal Lists manually through the Sprint PCS Ready Link server:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Ready Link** and press .
4. Select **List Update** and press .


Managing Sprint PCS Ready Link Settings

Assigning Speed Dialing for Sprint PCS Ready Link Entries

To assign Speed Dialing for Sprint PCS Ready Link entries:

1. Press  to access the main menu.
2. Select **Contacts** and press .
3. Select **Speed Dial #s** and press .
4. Select an unassigned number and press .
5. Press **Go to** (left softkey), highlight the list from which you want to set a speed dial (**Company List, Company Groups, Personal List, or Personal Groups**) and press .
6. Select the contact and press 
– or –
Select the group and press , select an option, and press 
 - **Set as** to assign the selected group as a speed dial.
 - **Details** to display the group details. You can select the group member from the group list.





To use Speed Dial for a Sprint PCS Ready Link entry:

- ▶ From standby mode, press the appropriate key and press .

Restarting the Sprint PCS Ready Link Service

This feature allows you to update the Ready Link network information of your phone.






To restart the Sprint PCS Ready Link service:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Ready Link** and press .
4. Select **Restart** and press .

Setting Ready Link Guard

This feature enables you to display the warning message when you cannot receive Sprint PCS Ready Link calls. The warning message will appear when you are launching a Web or Java application.








To set the Ready Link Guard:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Ready Link** and press .
4. Select **R-Link Guard** and press . (A message will appear.)
5. Press **OK** (left softkey) to continue.
6. Select **On** or **Off** and press .

Setting Ringer Types for Sprint PCS Ready Link Calls

Your Sprint PCS Vision Phone provides a variety of ringer types that allow you to customize your ringer.

To select a ringer type for Sprint PCS Ready Link calls:





1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Ready Link** and press .
4. Select **Sounds** and press .
5. Select **Ringer Type** and press .
6. Select **Ready Link Calls, R-Link Missed, or R-Link Floor Tone**, and press .
7. Scroll to your desired ringer type and press .
 - To confirm the ringer, press **Play** (right softkey).




Tip: You can change the ringer type in another way (see “Selecting Ringer Types for Sprint PCS Ready Link Calls” on page 53).

Setting an Alert Notification for Sprint PCS Ready Link Calls

Your Sprint PCS Phone can alert you with an audible tone when you receive a Sprint PCS Ready Link call.

To set alerts for Sprint PCS Ready Link calls:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Ready Link** and press .
4. Select **Sounds** and press .






5. Select **Alerts** and press .
6. Select **Ready Link Calls** or **R-Link Missed** and press .
7. Use the navigation key to select **Once, Repeat Alert** for Ready Link Calls or **Once, Repeat Alert**, or **Off** for R-Link Missed.
8. Press  to save the setting.

Tip: You can set alerts in another way (see “Alert Notification” on page 58).

Setting the Speakerphone for Sprint PCS Ready Link Calls

You can set the speakerphone on or off when a Sprint PCS Ready Link call is activated. By default, the speakerphone is set to on.

To set the speakerphone on or off:






1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Ready Link** and press .
4. Select **Speakerphone** and press .
5. Select **On** or **Off** and press .

Note: If the phone’s ringer volume is set to Vibrate, Ringer off, or Silence All, the speakerphone turns off. Press  to turn the speakerphone mode on.

Setting the Default View of the Sprint PCS Ready Link List

You can select the default Sprint PCS Ready Link List when Sprint PCS Ready Link is launched.




To select the default view of the Sprint PCS Ready Link List:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Ready Link** and press .
4. Select **Default View** and press . (The available lists appear.)
5. Select your desired list and press .

Setting the Floor Display of the Sprint PCS Ready Link Calls

With this feature, you can select the floor display for the Main LCD during Sprint PCS Ready Link calls.

To select the floor display:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **Ready Link** and press .
4. Select **Floor Display** and press .
5. Select **Text Only** or **Text & Image** and press .

Sprint PCS Service Features



Sprint PCS Service Features: The Basics

In This Section

- ◆ Using Voicemail
 - ◆ Using SMS Text Messaging
 - ◆ Using Caller ID
 - ◆ Responding to Call Waiting
 - ◆ Making a Three-Way Call
 - ◆ Using Call Forwarding
-


Now that you've mastered your phone's fundamentals, it's time to explore the calling features that enhance your **Sprint PCS Service**. This section outlines your basic Sprint PCS Service features.

Using Voicemail

Setting Up Your Voicemail

All unanswered calls to your Sprint PCS Vision Phone are automatically transferred to your voicemail, even if your phone is in use or turned off. Therefore, you will want to set up your Sprint PCS Voicemail and personal greeting as soon as your Sprint PCS Vision Phone is activated.


To set up your voicemail:

1. Press and hold  1.
2. Follow the system prompts to:
 - Create your passcode
 - Record your greeting
 - Record your name announcement
 - Choose whether or not to activate One-Touch Message Access (a feature that lets you access messages and bypassing the need for you to enter your passcode)

Note: If you are concerned about unauthorized access to your voicemail account, Sprint recommends you enable your voicemail passcode.

Voicemail Notification


There are several ways your Sprint PCS Vision Phone alerts you of a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By the LED blinking red.
- By displaying the  icon at the top of your screen.

New Voicemail Message Alerts


When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

To call your voicemail:

- ▶ Press and hold .

To display your Missed Log:

- ▶ Press  or **View** (left softkey).


Important: When you are roaming off the Sprint Nationwide PCS Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your Sprint PCS Phone Number. When your voicemail answers, press  and enter your passcode. You will be charged roaming rates when accessing voicemail while roaming off the Nationwide Sprint PCS Network.

Note: Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on. You may not receive new messages out of a Sprint PCS Service Area.



Retrieving Your Voicemail Messages

You can review your messages directly from your Sprint PCS Vision Phone or from any other touch-tone phone. To dial from your Sprint PCS Vision Phone, you can either speed dial your voicemail or use the menu keys.

Using One-Touch Message Access

- ▶ Press and hold . (Your phone will dial your voicemail box.)

Using the Menu Keys on Your Phone to Access Your Messages


1. Press  to access the main menu.
2. Select **Messaging** and press .


Shortcut: Press the navigation key up to display the Messaging menu.

3. Select **Voicemail** and press .
4. Select **Call Voicemail** or **Call:Speaker On**, and press .

Note: You are charged for airtime minutes when you are accessing your voicemail from your Sprint PCS Vision Phone.

Using a Phone Other Than Your Sprint PCS Vision Phone to Access Messages

1. Dial your Sprint PCS Phone Number.
2. When your voicemail answers, press .
3. Enter your passcode.

Tip: When you call into voicemail you first hear the header information (date, time, and sender information) for the message. To skip directly to the message, press  during the header.

Vicemail Button Guide

Here's a quick guide to your keypad functions while listening to voicemail messages. For further details and menu options, see "Voicemail Menu Key" on page 194.

1	2	3
Date/Time	Send Reply	Advance
4	5	6
Replay	Rewind	Forward
7	8	9
Erase	Call Back	Save
* 	0	#
Cancel	Help	Skip



VoiceMail Options

Your Sprint PCS Vision Phone offers several options for organizing and accessing your voicemail.

Using Expert Mode



Using the Expert Mode setting for your personal voicemail box helps you navigate through the voicemail system more quickly by shortening the voice prompts you hear at each level.

To turn Expert Mode on or off:

1. Press and hold  **1** to access your voicemail. (If your voicemail box contains any new or saved messages, press  to access the main voicemail menu.)
2. Press **3** to change your Personal Options, following the system prompts.
3. Press **4** for Expert Mode.
4. Press **1** to turn Expert Mode on or off.

Setting Up Group Distribution Lists

Create up to 20 separate group lists, each with up to 20 customers.

1. Press and hold  **1** to access your voicemail. (If your voicemail box contains any new or saved messages, press  to access the main voicemail menu.)
2. Press **3** to change your Personal Options, following the system prompts.
3. Press **2** for Administrative Options.

4. Press **5** for Group Distribution Lists.
5. Follow the voice prompts to create, edit, rename, or delete group lists.

Sprint PCS Callback

Return a call after listening to a message without disconnecting from voicemail.

- ▶ Press **8** after listening to a message. (Once the call is complete, you're returned to the voicemail main menu.)

Voicemail-to-Voicemail Message

Record and send a voice message to other Sprint PCS Voicemail users.

1. From the main voicemail menu, press **2** to send a message.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record and send your voice message.

Voicemail-to-Voicemail Message Reply

Reply to a voice message received from any other Sprint PCS Voicemail user.

1. After listening to a voice message, press **2**.
2. Follow the voice prompts to record and send your reply.

Vicemail-to-Vicemail Message Forwarding

Forward a voice message, except those marked “Private,” to other Sprint PCS Vicemail users.

1. After listening to a message, press **6**.
2. Follow the voice prompts to enter the phone number.
3. Follow the voice prompts to record your introduction and forward the voice message.

Vicemail-to-Vicemail Receipt Request

Receive confirmation that your voice message has been listened to when you send, forward, or reply to other Sprint PCS users.

1. After you have recorded a message, press **1** to indicate you are satisfied with the message you recorded.
2. Press **4** to mark receipt requested.
3. Press **1** to send your voicemail message.

Continue Recording

When leaving a voice message, you can choose to continue recording even after you've stopped.

- ▶ Before pressing **1** to indicate that you are satisfied with the message you recorded, press **4** to continue recording.

Extended Absence Greeting






When your phone is turned off or you are off the Nationwide Sprint PCS Network for an extended period, this greeting can be played instead of your normal personal greeting.

1. From the main voicemail menu, press **3** for Personal Options.
2. Press **3** for Greetings.
3. Press **3** to record an Extended Absence Greeting.

Clearing the Message Icon

Your phone may temporarily continue to display the message icon after you have checked your voice and text messages.





To clear the icon from the display screen:

1. Press  to access the main menu.
2. Select **Messaging** and press .
3. Select **Voicemail** and press .
4. Select **Clear Count** and press .
5. Select **Yes** and press .

Displaying Your Voicemail Details

This feature allows you to show the number of new voicemail messages and the time you received the voicemail notification.

To display your voicemail details:

1. Press  to access the main menu.
2. Select **Messaging** and press .
3. Select **Voicemail** and press .
4. Select **Details** and press .

Voicemail Menu Key

Following the prompts on the voicemail system, you can use your keypad to navigate through the voicemail menu. The following list outlines your phone's voicemail menu structure.

- 1** Listen
 - 1** Envelope Information
 - 2** Reply
 - 3** Advance 8 Seconds
 - 4** Replay
 - 5** Rewind
 - 6** Forward Message
 - 7** Erase
 - 8** Callback
 - 9** Save
 - 0** Options
- 2** Send a Message


- 3** Personal Options
 - 1** Notification Options
 - 1** Phone Notification
 - 2** Numeric Paging to a Sprint PCS Phone
 - ✕** Return to Personal Options Menu
 - 2** Administrative Options
 - 1** Skip Pass code
 - 2** Autoplay
 - 3** Message Date & Time On/Off
 - 4** Change Pass code
 - 5** Group Distribution List
 - ✕** Return to Personal Options Menu
 - 3** Greetings
 - 1** Personal Greetings
 - 2** Name Announcement
 - 3** Extended Absence Greeting
 - ✕** Return to Personal Options Menu
 - 4** Expert Mode (On/Off)
- 8** Place a Call
 - ✕** Disconnect

Using SMS Text Messaging

Now you can send and receive text messages right from your Sprint PCS Phone. Messaging allows you to stay connected to friends, family, and co-workers 24 hours a day anywhere on the Nationwide Sprint PCS Network.

Note: In some instances, when you receive a text message, the accents with characters will be erased.

New Messages

When you receive a new message, the message notification and the  icon will appear. Press **View** (left softkey) to display the message details.



- Press **Call** (left softkey) to dial the callback number. (Appears when a callback number is highlighted.)
- Press **Reply** (left softkey) to reply to the sender. (Appears when the sender's phone number or email address is highlighted.)
- Press **Go** (left softkey) to go to the Website. (Appears when a URL is highlighted.)
- Press **Forward** (left softkey) to forward the message. (Appears only if there is no sender's phone number, email address, or callback number.)
- Press **Options** (right softkey) to display options. (See page 201 for details.)

Tip: You may receive a Service Indication (SI) message on your phone. It consists of header information, the text message and a URL, where more information can be retrieved. To display the message details, press **View** (left softkey).




Displaying Messages

To display a message from the message notification alert, see “New Messages” on the previous page.

To display a text message from the main menu:

1. Press  to access the main menu.
2. Select **Messaging** and press .

Shortcut: Press the navigation key up to display the Messaging menu.






3. Select **Text Msgs** and press . (The folder list appears.)
4. Select **Inbox, Sent, Outbox, Drafts**, or your defined folder and press . (The message list appears.)
5. Select the header of the message you want to see and press . (The message detail appears.)

Tip: Press the navigation key right to read the next message from the message detail display; press the navigation key left to read the previous message (Inbox, Sent, and your defined folder only).

Sending a Text Message

With Messaging, you can use a person's wireless phone number to send and receive text messages from your Sprint PCS Vision Phone to their messaging-ready phone – and they can send messages to you.

To send a text message:


1. Press  to access the main menu.
2. Select **Messaging** and press .
3. Select **Send Text** and press .
4. Select an option from the following and press 
 - **Phone Book Entry** to select a recipient from your Contacts list. Highlight the box next to an entry and press  to select. Or select **<Add Entry>** to enter a new entry. Press **Done** (left softkey) when you are finished selecting/entering recipients.
 - **Company List Ent.** to select a recipient from your Company list.
 - **Personal List Ent.** to select a recipient from your Personal list.
 - **Personal Grp. Ent.** to select a recipient from your Personal Group member.
 - **Mobile Phone#** to enter a mobile phone number directly.
 - **Email Address** to enter an email address directly.
 - **From Recent List** to select recipients from a list of recent message recipients.

Tip: If you have unsent messages in **Outbox**, you will be notified to send the message during step 4 above. Press **OK** (left softkey) to go to **Outbox**. Press **Cancel** (right softkey) to create a new message.



Tip: **Company List Ent.**, **Personal List Ent.**, and **Personal Grp. Ent.** options appear only when Sprint PCS Ready Link mode is enabled. See page 160 for the setting.

5. Press **Next** (left softkey) when you are finished selecting and entering recipients (you may include up to 10 recipients).

Tip: To add recipients, press **Options** (right softkey) and select **Add Recipient** during step 5 above.

6. To enter a message, select **Message** and press .
7. Use your keypad to enter a text message (or press **Mode** [right softkey] to select from **Preset Messages**, **Recent Messages**, or **Signature**), and press **OK** (left softkey).



Tip: The **Signature** option appears only when you set your signature (see page 80).

8. To set the message priority, scroll to **Priority** and press .
9. Select **Ordinary** or **Urgent** and press .

10. To change the recipients or to save the message as a draft, press **Options** (right softkey) and select an option from the following.
- **Chg Recipients** to change Recipients.
 - **Send Callback#** to select from **None**, **My Phone#**, or **Other** to notify your recipients of your callback number. (See “Setting a Callback Number” on page 79.)
 - **Save to Drafts** to save the message to a Drafts folder.

Tip: The oldest message in the drafts folder will be erased automatically when you save more than 10 messages.


11. Press **Send** (left softkey) to send the message.

Note: If there is a failure when sending a message in no-service area, you are prompted to select to send the message automatically. Press **Yes** (left softkey), and the message goes to the Outbox folder with the  icon. If you press **No** (right softkey), the message goes to the folder with the  icon.

Message Options

Several options are available when you display a folder list, message list, or message details.


Folder List Options


From the folder list display, press **Options** (right softkey). (See “Displaying Messages” on page 197 for displaying the list.) To select an option, highlight it and press .


- **Edit Folder** to edit the folder (self-defined folder only).
- **Erase Folder** to erase the folder (self-defined folder only).
- **Create Folder** to create a new self-defined folder.
- **Compose New** to compose a new message.
- **Erase Messages** to erase messages (if applicable).



Note: When you erase a folder, the messages within the folder are also erased. If the folder contains a new (unread) message or locked message, you are prompted to select **Erase** or **Don't Erase**.

Message List Options


From the message list display, press **Options** (right softkey). (See “Displaying Messages” on page 197 for displaying the list.) To select an option, highlight it and press .



- **Reply** to reply to the message. (Inbox and your defined folder only.)
- **Forward** to forward the message. (Inbox, your defined folder, and Sent only.)
- **Edit** to edit a message. (Outbox and Drafts only.)
- **Send** to send a message. (Outbox and Drafts only.)
- **Move** to move a message to another folder. (Inbox and your defined folder only.)
- **Lock** to lock a message. Locked messages will not be erased automatically. To unlock the message, select **Unlock** and press . (Inbox, your defined folder, and Sent only.)
- **Compose New** to compose a new message.
- **Sort by** to sort the message. (Inbox, your defined folder, and Sent only.)
- **Erase** to erase the selected message.
- **Erase Read Msgs** to erase read messages in the folder (except locked messages). (Inbox and your defined folder only.)
- **Erase All** to erase all messages in the folder (except locked messages).

Tip: Locked messages will be displayed with the  icon.

Tip: To make a call from the list, highlight a message and press  or  (if applicable).

Message Details Options

From the message details display, press **Options** (right softkey) to display message options. (See page 197 for displaying.) The following options are available for messages in the Inbox, the Sent folder, and any defined folders. To select an option, highlight it and press .



- **Call(Goto List)** to display any phone numbers in the message to make a call. Select a number and press **Call** (left softkey) to make a call.
- **Call:Speaker On** to display any phone numbers in the message to make a call in speakerphone mode. Select a number and press **Call** (left softkey) to make a call.
- **Prepend** to add numbers to the beginning of the phone number.
- **Go to URL List** to display any URLs in the message.
- **Send Text** to display any phone numbers and email addresses to send a message.
- **Reply** to reply to the message. (Inbox and defined folder only.)
- **Forward** to forward the message.
- **Move** to move a message to another folder. (Inbox and defined folder only.)
- **Lock** to lock the message. Locked messages will not be erased automatically. To unlock the message, select **Unlock** and press .
- **Font Size** to select a font size.
- **Save to Ph. Book** to save the phone numbers, email addresses, and URLs. Select a data category and press  to save.

- **Go to Phone Book** to go to the Contacts list.
- **Copy to Personal** to copy the phone number to the Ready Link Personal List (if applicable).
- **Compose New** to compose a new message.
- **Erase** to erase the message.

Changing the Display Font Size of a Message

From a message details display (except in the Outbox and Drafts folder), press **Options** (right softkey) to display message options.




To adjust the display font size:

1. Highlight **Font Size** and press .
2. Select your desired font size and press .

Prepending a Phone Number From a Message

From a message details display (except in the Outbox and Drafts folder), press **Options** (right softkey) to display message options.







To add a prefix to a phone number:

1. Highlight **Prepend** and press .
2. Select your desired phone number and press **OK** (left softkey).
3. Enter the digits or pauses you want to add to the number.
4. Press  or  to make a call.



Message Folders

Incoming text messages are stored in folders in your phone's Messaging menu. You may add up to ten folders or use the phone's default folder.

To add a new folder:




1. Press  to access the main menu.
2. Select **Messaging** and press .
3. Select **Text Msgs** and press .
4. Press **Options** (right softkey).
5. Highlight **Create Folder** and press .
6. Enter a folder name and press **OK** (left softkey).
7. Choose from the following optional features for the added folder and press  to save each item. Scroll to each item and press .
 - **Auto Filing** to file the incoming messages automatically into the self-defined folder by keywords.
 - **Keyword** to enter a keyword for Auto Filing.
 - **Notify** to set the notification display and ringer on or off.
 - **Envelope Icon** to set the notification icon on or off.
8. Press **Save** (left softkey) to save the folder.

To edit a folder:

1. From the folder list display, highlight a defined folder.
2. Press **Options** (right softkey).
3. Highlight **Edit Folder** and press .
4. Select the box you wish to edit and press .
5. Enter or select a new folder name or setting.
6. Press **OK** (left softkey).
7. Press **Save** (left softkey).




Erasing Messages

To erase an individual message:

1. From the folder list display, select **Inbox**, **Sent**, **Outbox**, **Drafts**, or your defined folder and press .
2. Select the message you want to erase and press **Options** (right softkey).
3. Highlight **Erase** and press . (A confirmation will display.)
4. Select **Yes** and press .

Tip: To erase all messages, select **Erase All** during step 3 above.

To erase selected messages:

1. From the folder list display, press **Options** (right softkey).
2. Highlight **Erase Messages** and press .
3. Select **Read**, **Unread**, and/or **Sent**, and press  to check the appropriate box(es).
4. After selecting the box(es), press **Done** (left softkey).
5. Select **Erase** and press  to erase selected messages (except locked messages).

Using Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you place a call, just follow these easy steps.

To block your phone number from being displayed for a specific outgoing call:

1. Press **✖ 6 7**.
2. Enter the number you want to call.
3. Press **TALK** or **SPEAKER**.

To permanently block your number, call Sprint Customer Service.

Responding to Call Waiting

When you're on a call, Call Waiting alerts you of incoming calls by sounding one beep. Your phone's screen informs you that another call is coming in and displays the caller's phone number. (This feature may not be available while you are in analog area.)

To respond to an incoming call while you're on a call:

- ▶ Press **TALK** (or press **Options** [right softkey], highlight **Flash**, and press **MENU OK**). (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- ▶ Press **TALK** again (or press **Options** [right softkey], highlight **Flash**, and press **MENU OK**).

To respond to an incoming call when Answer on Hold is activated:

- ▶ Press **TALK** (or press **Options** [right softkey], highlight **Flash**, and press **MENU OK**).
(The Answer on Hold will be automatically deactivated. See page 32 for Answer on Hold.)

To switch back to the first caller:

- ▶ Press **TALK** again (or press **Options** [right softkey], highlight **Flash** and press **MENU OK**).

Tip: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing **✖** **7** **0** before placing your call. Call Waiting is automatically reactivated once you end the call.

Making a Three-Way Call

With Three-Way Calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

To make a Three-Way Call:

1. Enter a number you wish to call and press **TALK** or **SPEAKER**.
2. Once you have established the connection, press **TALK** (or press **Options** [right softkey], highlight **Three-Way Call**, and press **MENU OK**). (This puts the first caller on hold.)
3. Dial the second number you wish to call and press **TALK** (or press **Options** [right softkey], highlight **Call** or **Call:Speaker On**, and press **MENU OK**).
4. When you're connected to the second party, press **TALK** again (or press **Options** [right softkey], highlight **Flash**, and press **MENU OK**) to begin your three-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Note: Call Waiting and Three-Way Calling may not be available while roaming off the Nationwide Sprint PCS Network.

Using Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when Call Forwarding is activated.

To activate Call Forwarding:

1. Press **✖ 7 2**.
2. Enter the area code and phone number to which your future calls should be forwarded.
3. Press **TALK**. (You will hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:

1. Press **✖ 7 2 0**.
2. Press **TALK**. (You will hear a tone to confirm the deactivation.)

Note: You are charged a higher rate for calls you have forwarded.

Note: Sprint PCS Ready Link calls cannot be forwarded.

Sprint PCS VisionSM

In This Section

- ◆ Getting Started
 - ◆ Understanding Messaging
 - ◆ Using Email
 - ◆ Alternate Email Providers
 - ◆ Using Instant Messaging
 - ◆ Experiencing Wireless Online Chat
 - ◆ Downloading Premium Services Content
 - ◆ Games
 - ◆ Ringers
 - ◆ Screen Savers
 - ◆ Exploring the Web
 - ◆ Sprint PCS Vision FAQs
-

Sprint PCS VisionSM brings you clarity you can see and hear with advanced multimedia services. These features – including Sprint PCS Messaging, games, downloadable ringers and screen savers, and portable Web access – are easy to learn and use. Clearly, it's a whole new way to look at wireless.

This section introduces these advanced services and walks you through the necessary steps to start taking advantage of Sprint PCS Vision Services. For complete details and instructions, see the Sprint PCS Vision User's Guide online at www.sprint.com.

Getting Started With Sprint PCS Vision

With your VI-2300 by Sanyo and Sprint PCS Service, you are ready to start enjoying the advantages of Sprint PCS Vision. This section will help you learn the basics of using your Sprint PCS Vision services, including managing your User Name, launching a Vision connection, and navigating the Web with your Sprint PCS Vision Phone.

For complete Sprint PCS Vision instructions, please visit www.sprint.com and download the comprehensive Vision user guide.

Your User Name

When you buy a Sprint PCS Vision Phone and sign up for service, you're automatically assigned a User Name. A User Name is typically based on your name and a number, followed by "@sprint.com." For example, the third John Smith to sign up for Sprint PCS Vision services might have jsmith003@sprint.com as his User Name. If you want a particular User Name, you can visit www.sprint.com and get the name you want – as long as nobody else has it.






When you use Sprint PCS Vision services, your User Name is submitted to identify you to the Nationwide Sprint PCS Network. The User Name is also useful as an address for Email, as a way to personalize Web services, and as an online virtual identity.

Your User Name will be automatically programmed into your Sprint PCS Vision Phone. You don't have to enter it.

Updating Your User Name

When you change the programmed User Name and select a new one, you have to update your User Name through your Sprint PCS Phone.

To update your User Name:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **PCS Vision** and press .
4. Select **Update Profile** and press 
 - If you want to cancel, press  while processing.

Finding Your User Name



If you aren't sure what your Sprint PCS Vision User Name is, you can easily find it online or on your Sprint PCS Vision Phone.

To find your User Name:


- **At www.sprint.com.** Sign on to your account using your Sprint PCS Phone Number and password. To view your Sprint PCS Vision User Name, click on the **My Personal Information** menu and then click **PCS Vision User Name**.
- **On your Phone.** To find your User Name, access your phone's main menu, go to **Settings > Phone Info > Phone#/User ID**.

Launching a Sprint PCS Vision Connection

To launch a Sprint PCS Vision connection:

1. Press  to access the main menu.
2. Select **Web** and press . (Your Sprint PCS Vision connection will launch and the Sprint PCS Vision Home page will display.)

The Sprint PCS Vision Home Page

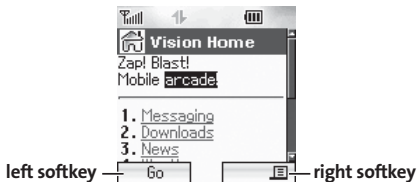

Note: If Net Guard is enabled and displayed (see next page), press **OK** (left softkey) to continue and launch the Web.

Tip: When Ready Link Guard is set to on, a warning message will appear. Press **Continue** (left softkey) to continue. (See page 179 for Ready Link Guard.)






While connecting, the following will appear on the screen:
Connecting...Please wait..

If you had a previous Sprint PCS Vision connection, the last page you visited (for example, Email or ESPN Top News) will display when you launch your browser. When this occurs, you may not see the “Connecting...” message when you launch the session. Though the browser is open, you are not currently in an active data session - that is, no data is being sent or received.

Net Guard

When you first connect to the Web, the Net Guard will appear to confirm that you want to connect. This feature helps you avoid accidental connections. You can disable the Net Guard in the future by selecting **Always Auto-Connect** when the Net Guard is displayed.




To change your Net Guard settings:

1. Press  to access the main menu.
2. Select **Settings** and press .
3. Select **PCS Vision** and press .
4. Select **Net Guard** and press .
5. Select **On** or **Off** and press .

Note: When enabled, the Net Guard appears only once per session. The Net Guard does not appear if the phone is merely re-connecting due to a time-out.

Sprint PCS Vision Connection Status and Indicators

Your phone's display lets you know the current status of your Sprint PCS Vision connection through indicators which appear at the top of the screen. The following symbols are used:

-  Your Sprint PCS Vision connection is active (data is being transferred); the transmit/receive symbol will blink to indicate data transmission. Incoming voice calls go directly to voicemail; outgoing voice calls can be made, but the Sprint PCS Vision connection will terminate.
-  Your Sprint PCS Vision connection is dormant (no data is being sent or received). Though not currently active, when dormant the phone can restart an active connection quickly; voice calls can be made and received.
-  Your phone is not currently able to access Sprint PCS Vision service features.

If no indicator appears, your phone does not have a current Sprint PCS Vision connection. To launch a connection, see “Launching a Sprint PCS Vision Connection” on page 214.

Navigating the Web


Navigating through menus and Websites during a Sprint PCS Vision session is easy once you've learned a few basics. Here are some tips for getting around:

Softkeys

During a Sprint PCS Vision session, the bottom line of your phone's display contains one or more softkeys. These keys are shortcut controls for navigating around the Web, and they correspond to the softkey buttons directly below the phone's display screen.

Tip: Depending on which Websites you visit, the labels on the softkeys may change to indicate their function.

To use softkeys:

- ▶ Press the desired softkey button. (If an additional pop-up menu appears when you press the softkey button, select the menu items using your keypad [if they're numbered] or by highlighting the option and pressing )

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some Websites.

To scroll line by line through Websites:

- ▶ Press the navigation key up or down.


To scroll page by page through Websites:

- ▶ Press the Side Up/Down key.


Selecting

Once you've learned how to use softkeys and scroll, you can start navigating the Web.

To select on-screen items:

- ▶ Use the navigation key to highlight the desired item, then press the desired softkey button (or press ).

Tip: You'll find that the left softkey is used primarily for selecting items. This softkey is often labeled "Go."

Tip: If the items on a page are numbered, you can use your keypad (number keys) to select an item. (The tenth item in a numbered list may be selected by pressing the  key on your phone's keypad, even though the number 0 doesn't appear on the screen.)


Links allow you to jump to different Web pages, select special functions, or even place phone calls.


To select links:

- ▶ Highlight the link and select the appropriate softkey.

Going Back

To go back one page:


- ▶ Press the  key on your phone.

Note: The  key is also used for deleting text (like a BACKSPACE key) when you are entering text.

Going Home

To return to the Sprint PCS Vision home page from any other Web page:

- ▶ Press the right softkey, then highlight **Home** and press **OK** (left softkey).

Tip: You can also return to the Sprint PCS Vision home page by pressing and holding the  key.



Sprint PCS Messaging


Understanding Messaging

Now you can send and receive emails and text messages, receive Sprint PCS Picture Mails, and participate in Web-based chatrooms right from your Sprint PCS Vision Phone.

Messaging allows you to stay connected to friends, family, and co-workers 24 hours a day anywhere on the Nationwide Sprint PCS Network.

Note: For complete details on text messaging, see “Using SMS Text Messaging” on page 196.




Viewing Sprint PCS Picture MailSM


When a new Sprint PCS Picture Mail message arrives, you will see the  icon on your display screen. You can view picture messages from the message notification screen or from the Messaging menu.

To view a new Sprint PCS Picture Mail message from the notification screen:

- ▶ Press **View** (left softkey). (The browser will launch and display the picture.)

To view Sprint PCS Picture Mail messages from the main menu:

1. Press  to access the main menu.
2. Select **Messaging** and press .
3. Select **PictureMail** and press . (The Sprint PCS Picture Mail list appears.)

4. Select your desired picture message and press . (The Sprint PCS Picture Mail detail appears.)
5. Press **View** (left softkey) to display the picture mail. (The browser will launch and display the picture mail message.)

Note: You can receive and view incoming Sprint PCS Picture Mail messages with your VI-2300's Vision connection. Sending pictures requires a Sprint PCS Vision Picture Phone, Video Phone, or Multimedia Phone with built-in camera. Visit www.sprint.com for a complete list of available phones.

Signing Up for Updates

With Updates, you can have news and information sent directly to your Sprint PCS Vision Phone at the times you choose.

To select the information you want to send to your Sprint PCS Vision Phone:

1. Log on to the Internet from your computer.
2. Go to the site from which you want to receive information. (A few of the sites you can visit are America Online®, Yahoo!, MSN® and eBay®. The location where you request updates within each site will vary.)
3. Where indicated on the site, input your 10-digit Sprint PCS Phone number followed by “@messaging.sprint.com.” (For example: 5551234567@messaging.sprint.com.)

Upon completing the registration process, you should begin receiving updates on your Sprint PCS Vision Phone as requested.




Using Email

With Email, you can set up an account at no additional charge and perform many of the typical email functions from your Sprint PCS Vision Phone that you can from your personal computer.

You can manage your Email account from your Sprint PCS Vision Phone or from your personal computer at www.sprint.com. You can also access other select email providers from the Web through your Email.

Accessing Email Messages

To access Email messages:

1. Press  to access the main menu.
2. Select **Messaging** and press .
3. Select **Go to Email** and press . (If you're a first-time user, your phone will prompt you to set up your Email account by establishing a User Name and password.)
4. To view your messages, press **Inbox** (left softkey).
5. Scroll to select the message you wish to read and press the left softkey.
6. Once you've read a message, use the quick actions at the end of each message (**Reply**, **Reply All**, **Forward**, **Erase**, **Add to Folder**, or **Main**).

Composing Email Messages

To compose an Email message:

1. From the Email menu (see steps 1-3 above), press **Compose** (left softkey).
2. Scroll to select the address box and enter the address of the person to whom you're sending a message, then press the left softkey.
3. Scroll to select the message box and enter the subject and your message.
4. Select **Send** when your message is ready to be delivered.

Accessing Alternate Email Providers

With Sprint PCS Vision, you can use popular email services such as AOL® Mail, Yahoo!® Mail, MSN Hotmail, and EarthLink® to keep in touch even while you're on the go.

Using Alternate Email Providers

To access email providers from your Sprint PCS Vision Phone:

1. From the Sprint PCS Vision home page, select **Messaging**.
2. Select **Email**.
3. Select an email provider, such as **AOL Mail**, **Yahoo! Mail**, **MSN Hotmail**, or **EarthLink**.
4. Use your keypad to enter the required sign in information for the selected provider, such as user name, email address, and/or password, and select **Sign In**. (Your mailbox for the selected provider will display.)

Note: The information required for sign in will vary depending on the email provider you are accessing.

5. Follow the onscreen instructions to read, reply to, compose, send, and manage your email account.

Using Instant Messaging

Sprint PCS Vision also provides you with access to popular instant messaging (IM) clients, including Yahoo!® Messenger, MSN® Messenger, and AOL® Instant Messenger™.

Accessing Instant Messaging

To access instant messaging clients from your Sprint PCS Vision Phone:

1. Press the navigation key up and select **Instant Msg.**
– or –
From the Sprint PCS Vision home page, select **Messaging** and select **Instant Messaging**.
2. Select an email provider, such as **AOL Instant Messenger**, **MSN Messenger**, or **Yahoo! Messenger**.
3. Use your keypad to enter the required sign in information for the selected provider, such as user name and/or password, and select **Sign In**. (Your IM screen for the selected provider will display.)




Note: The information required for sign in will vary depending on the instant messaging provider you are accessing.

4. Follow the onscreen instructions to read, reply to, compose, send, and manage your IM account.


Experiencing Wireless Online Chat

Sprint PCS Vision gives you the ability to join wireless chatrooms from your Sprint PCS Vision Phone, to send text messages and icons to chatroom participants, or to launch a one-on-one (private) chatroom.


To access a chatroom from the browser:

1. Press  to access the main menu.
2. Highlight **Web** and press .
3. Select **Messaging**.
4. Select **Chat**.
5. Select **Enter**. (You will see a disclaimer for Wireless Chat.)
6. Select **I Agree** to enter the Chat menu.
7. Use your keypad to enter a nickname and press  (right softkey), then select **Enter**.
8. Select a chatroom from the menu for example, "Friends" or "Singles". (Once in the chatroom, you may scroll through the postings to read messages from other chatroom participants.)


To post a message:

1. During an active chatroom session, select **Add text**.
2. Enter your message.
3. Press  (right softkey) and select **Send**.

To set up a private chatroom:

1. During an active chatroom session, press  (right softkey) and select **1->1**.
2. Select a chatter with whom you'd like to launch a private chatroom.

To exit a chatroom:

- ▶ Press  (right softkey) and select **Leave**.





Note: To avoid inadvertent data usage charges, you should sign out of chatrooms when you are ready to exit.

Downloading Premium Services Content

With Sprint PCS Vision and your new Sprint PCS Vision Phone, you have access to a dynamic variety of Premium Service content, such as downloadable Games, Ringers, Screen Savers, and other applications. The basic steps required to access and download Premium Service content are outlined below.

Accessing the Download Menus

To access the Sprint PCS Vision download menus:

1. Press  to access the main menu.
2. Select **Downloads** and press .
3. Select the type of file you wish to download (**Games**, **Ringers**, **Screen Savers**, or **Applications**) and press .
4. Select **Get New** and press . (The browser will launch and take you to the corresponding download menu.)

To access the Sprint PCS Vision download menus from the Web browser:

- ▶ From the Sprint PCS Vision home page, select **Downloads**, then select **Games**, **Ringers**, or **Screen Savers** to go to the corresponding download menu. (For more information on navigating the Web, see “Navigating the Web” on page 217.)


Selecting an Item to Download

You can search for available items to download in a number of ways:

- **Featured** displays a rotating selection of featured items.

- **Browse Category** allows you to narrow your search to a general category, such as Movie/TV Themes for Ringers or College Logos for Screen Savers. (There may be several pages of available content in a list. Select **Next 9** to view additional items.)
- **Search** allows you to use your keypad to enter search criteria to locate an item. You may enter an entire word or title or perform a partial-word search (for example, entering “goo” returns “Good Ol’ Boy,” “The Good, the Bad, and the Ugly,” and “Goofy - Club”).

Downloading an Item

Once you've selected an item you wish to download, highlight it and press  or **OK** (left softkey). You will see a summary page for the item including its title, the vendor, the download detail, the file size, and the cost. Links allow you to view the **License Details** page, which outlines the price, license type, and length of license for the download, and the **Terms of Use** page, which details the Premium Services Terms of Use and your responsibility for payment.

To download a selected item:

1. From the information page, select **Buy**. (The item will download automatically. When the **New Download** screen appears, the item has been successfully downloaded to your phone.)

Note: If you have not previously purchased an item, you will be prompted to create your purchasing profile.

2. Once the item has been successfully downloaded and the completed screen appears, select your desired option to assign the ringer or screen saver, run the application, listen to music, play the game, etc.



Games





Accessing Games

You can play a variety of entertaining and graphically-rich games on your Sprint PCS Vision Phone. New games are easy to download and play.

Tip: For complete instructions on downloading, see “Downloading Premium Services Content” on page 228.

Downloading Games

To download an available game to your phone:

1. Press  to access the main menu.
2. Select **Downloads** and press .
3. Highlight **Games** and press .
4. Highlight **Get New** and press . (The browser will launch and take you to the Games download menu.)
5. Use your navigation key to highlight and select a game you wish to download. (For more information on navigating the Web, see “Navigating the Web” on page 217.)
6. Select **Buy** from the item information page. (The game will download automatically. When the **New Download** screen appears, the game has been successfully downloaded to your phone.)

Note: If you have not previously purchased an item, you will be prompted to create your purchasing profile.

7. Select an option to continue:
 - Select **Run** to quit your Vision session and launch the game.
 - Select **Shop** to browse for other games to purchase and download.
 - Press **END/⓪** to quit the browser and return to standby mode.

Note: You may store a limited number of downloaded Games on your phone, depending on the file sizes.

Playing Games

To play a downloaded game on your Sprint PCS Vision Phone:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Highlight **Games** and press **MENU OK**.
4. Select the game you wish to play and press **MENU OK**.
5. Press the left softkey if a prompt displays the days remaining on the game license.
6. Follow the onscreen instructions to play the game.

To quit a game:

1. When you are finished playing, press **END/⓪**. (A prompt will display: "Resume the Application?")
2. Select **Yes** to continue playing.
– or –
Select **No** to exit.



Ringers





Accessing Ringers

You can personalize your Sprint PCS Vision Phone by downloading and assigning different ringers to numbers in your Contacts list.

Tip: For complete instructions on downloading, see “Downloading Premium Services Content” on page 228.

Downloading Ringers

To download an available ringer to your phone:

1. Press  to access the main menu.
2. Select **Downloads** and press .
3. Highlight **Ringers** and press .
4. Highlight **Get New** and press . (The browser will launch and take you to the Ringers download menu.)
5. Use your navigation key to highlight and select a ringer you wish to download. (For more information on navigating the Web, see “Navigating the Web” on page 217.)
6. From the item information page, select **Buy**. (The ringer will download automatically. When the **New Download** screen appears, the ringer has been successfully downloaded to your phone.)

Note: If you have not previously purchased an item, you will be prompted to create your purchasing profile.

7. Select an option to continue:
 - Select **Set as** to quit your Vision session and assign the ringer.
 - Select **Shop** to browse for other ringers to purchase and download.
 - Press **END/⓪** to quit the browser and return to standby.

Note: You may store a limited number of downloaded Ringers on your phone, depending on the file sizes.

Assigning Downloaded Ringers

You can assign downloaded ringers directly from the Downloads menu or through your phone's Settings menu.

To assign a downloaded ringer from the Downloads menu:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Highlight **Ringers** and press **MENU OK**.
4. Highlight a downloaded ringer and press **Options** (right softkey).
5. Highlight **Set as** and press **MENU OK**.
6. Highlight **Voice Calls, Voicemail, Messaging, Calendar/Alarm, Start-up Tone, Power-off Tone, Phone Book, or Ready Link Calls**, and press **MENU OK**. The following two items need an extra step:
 - **Voice Calls** requires you to highlight **With Caller ID** or **No caller ID** and press **MENU OK**.
 - **Phone Book** requires you to highlight the Contacts entry you want to assign and press **MENU OK**.

(A message appears confirming that the ringer has been assigned.)

To assign a downloaded ringer from the Settings menu:

- ▶ Please see one of the following:
 - “Selecting Ringer Types for Voice Calls” on page 52.
 - “Selecting Ringer Types for Sprint PCS Ready Link Calls” on page 53.
 - “Selecting Ringer Types for Voicemail, Messaging, or Calendar/Alarm” on page 54.
 - “Setting a Start-up/Power-off Tone” on page 55.
 - “Selecting a Ringer for an Entry” on page 120.

Note: You may assign a ringer to more than one type of call.

Purchasing Ringers

You can purchase ringers directly from your phone by following the instructions on page 232 or through www.sprint.com.



Screen Savers





Accessing Screen Savers

Download unique images to use as screen savers – or make it easy to tell who’s calling by assigning specific images to numbers in your Contacts list.

Tip: For complete instructions on downloading, see “Downloading Premium Services Content” on page 228.

Downloading Screen Savers

To download an available Screen Saver to your phone:

1. Press  to access the main menu.
2. Select **Downloads** and press .
3. Highlight **Screen Savers** and press .
4. Highlight **Get New** and press . (The browser will launch and take you to the Screen Savers download menu.)
5. Use your navigation key to highlight and select a Screen Saver you wish to download. (For more information on navigating the Web, see “Navigating the Web” on page 217.)

6. From the item information page, select **Buy**. (The screen saver will download automatically. When the **New Download** screen appears, the screen saver has been successfully downloaded to your phone.)

Note: If you have not previously purchased an item, you will be prompted to create your purchasing profile.

7. Select an option to continue:
 - Select **Set as** to quit your Vision session and assign the screen saver.
 - Select **Shop** to browse for other screen savers to purchase and download.
 - Press **END/⓪** to quit the browser and return to standby mode.




Note: You may store a limited number of downloaded Screen Savers on your phone, depending on the file sizes.

Assigning Downloaded Screen Savers

Downloaded Screen Savers may be assigned directly from the Downloads menu or through the Settings menu.

To assign a downloaded Screen Saver from the Downloads menu:

1. Press **MENU OK** to access the main menu.
2. Select **Downloads** and press **MENU OK**.
3. Highlight **Screen Savers** and press **MENU OK**.
4. Highlight a downloaded Screen Saver and press **Options** (right softkey).

5. Select **Set as** and press .
6. Highlight one of **Incoming Calls, Screen Saver, or Phone Book** and press . The following item needs an extra step:
 - **Phone Book** requires you to highlight your desired Contacts entry and press .(A message appears confirming that the image has been assigned.)

Note: Depending on the data, you can select where to assign downloaded images: Image data can be assigned to Incoming Calls, Screen Saver, or Phone Book. Animation data can be assigned to Standby, Outgoing Calls, or Service Search.

Note: You may assign a Screen Saver to more than one task.

Purchasing Screen Savers

You can purchase Screen Savers directly from your phone by following the instructions on page 235, or through www.sprint.com.



Web

Exploring the Web

With Web access on your Sprint PCS Vision Phone, you can browse full-color graphic versions of your favorite Websites, making it easier than ever to stay informed while on the go. Follow sports scores and breaking news and weather and shop on your Sprint PCS Vision Phone anywhere on the Nationwide Sprint PCS Network.

In addition to the features already covered in this section, the Sprint PCS Vision home page offers access to these colorful, graphically rich Web categories. Many sites are available under more than one menu – choose the one that's most convenient for you.

- **News.** Get up-to-the-minute news regarding finance, business, sports, and entertainment at sites like CNNtoGo, Bloomberg, USA Today, and ABCNews.
- **Weather.** Access The Weather Channel to get current weather conditions and forecasts.
- **Entertainment.** Get the latest buzz on your favorite stars as well as movie and music reviews at Websites like E! Online, Pocket BoxOffice™, and TastNtalk.
- **Sports.** Enjoy current news, statistics, and sports scores, as well as updates of events in progress at ESPN.com and other sports sites.
- **My Account.** Check minutes and Sprint PCS Vision usage, view your current invoice, or make a payment.

Using the Browser Menu


Navigating the Web from your phone using the Sprint PCS Vision home page is easy once you get the hang of it. For details on how to navigate the Web, select menu items, and more, see “Navigating the Web” on page 217.

Although the Sprint PCS Vision home page offers a broad and convenient array of sites and services for you to browse, not all sites are represented, and certain functions, such as going directly to specific Websites, are not available. For these and other functions, you will need to use the browser menu. The browser menu offers additional functionality to expand your use of the Web on your Sprint PCS Vision Phone.

Opening the Browser Menu

The browser menu may be opened anytime you have an active Sprint PCS Vision session, from any page you are viewing.

To open the browser menu:

- ▶ Press  (right softkey) from any page during an active Sprint PCS Vision session. (The browser menu will display.) (To launch a Sprint PCS Vision session, please see “Launching a Sprint PCS Vision Connection” on page 214.)

Options available under the browser menu include:



- **Home.** Returns the browser to the Sprint PCS Vision home page.
- **Forward.** Allows you to go forward to the pages you have visited.
- **Mark this page.** Allows you to create new bookmarks.
- **View Bookmarks.** Allows you to view and access bookmarked sites.

- **Search.** Launches a Google search.
- **Show URL.** Displays the URL (Website address) of the site you're currently viewing.
- **Go to URL....** Allows you to navigate directly to a Website by entering its URL (Website address).
- **History.** Displays the pages you have visited.
- **Refresh this page.** Reloads the current Web page.
- **More...** Displays the additional menu options.
 - **Restart Browser.** Restarts the browser application.
 - **Send Page.** Allows you to send a URL you're viewing through SMS text messaging.
 - **Preferences.** Allows you to configure and manage your browser settings. (Edit Home Page, Revert Home Page, Font Size, Color Setting, Show Images, Delete Cookies, Send Referrer, Title Tag, Sound Volume, and About Browser.)

Creating a Bookmark

Bookmarks allow you to store the address of your favorite Websites for easy access at a later time.



To create a bookmark:

1. Launch the Web page you want to mark.
2. Press  (right softkey) to go to the browser menu.
3. Select **Mark this page** and press  or **OK** (left softkey).

Note: Bookmarking a page does not store the page contents, just its address. Some pages cannot be bookmarked. Whether a particular Web page may be marked is controlled by its creator.



Accessing a Bookmark

To access a bookmark:

1. Access the browser menu by pressing  (right softkey).
2. Select **View Bookmarks** and press **OK** (left softkey).
3. Highlight the bookmark you'd like to access and press  or **OK** (left softkey) to go to the Website.



Editing a Bookmark

To edit a bookmark:

1. Launch the Web and press  (right softkey) to access the browser menu.
2. Select **View Bookmarks** and press **OK** (left softkey).
3. Select the bookmark you wish to edit and press  (right softkey).
4. Select **Edit Address** or **Edit Title** and press **OK** (left softkey).
5. Press **Edit** (right softkey), use your keypad to edit the address or title, and press **OK** (left softkey).
6. To save the bookmark, press **OK** (left softkey).

Deleting a Bookmark


To delete a bookmark:

1. Launch the Web and press  (right softkey) to access the browser menu.
2. Select **View Bookmarks** and press **OK** (left softkey).
3. Highlight the bookmark you wish to erase and press  (right softkey).
4. Select **Delete** and press **OK** (left softkey).
5. Press **Yes** (right softkey).

Tip: To delete all bookmarks, select **Delete All** during step 4 above.


Moving a Bookmark

To move a bookmark:

1. Access the **View Bookmarks** menu as outlined above in steps 1-2, and press  (right softkey).
2. Select **Reorder** and press **OK** (left softkey).
3. Highlight the bookmark you wish to move and press **Move** (left softkey).
4. Move the bookmark to a new location by pressing the navigation key up or down and press **Drop** (left softkey).
5. When you're finished, press **Finish** (right softkey).

Going to a Specific Website


To go to a particular Website by entering a URL (Website address):

1. Launch the Web and press  (right softkey) to display the browser menu.
2. Select **Go to URL...** and press **OK** (left softkey).
3. Select **Address** and press **OK** (left softkey).
4. Use your keypad to enter the URL of the Website you wish to go to and press **OK** (left softkey).

Note: Not all Websites are viewable on your phone.

Reloading a Web Page


To reload (refresh) a Web page:

1. Launch the Web and press  (right softkey) to display the browser menu.
2. Select **Refresh this page** and press **OK** (left softkey).

Restarting the Web Browser

If the Web browser appears to be malfunctioning or stops responding, you can usually fix the problem by simply restarting the browser.


To restart the Web browser:

1. From an active Sprint PCS Vision connection, press  (right softkey) to display the browser menu.
2. Select **More...** and press **OK** (left softkey).
3. Select **Restart Browser** and press **OK** (left softkey).

Sending a Web Page



This feature allows you to send a URL (Website address) you're viewing through SMS text messaging.

To send a Web page:

1. From an active Sprint PCS Vision connection, press  (right softkey) to display the browser menu.
2. Select **More...** and press **OK** (left softkey).
3. Select **Send Page** and press **OK** (left softkey).
4. To complete and send a Web Page, follow steps 4-11 in "Sending a Text Message" on page 198.

Adjusting the Browser Sound Volume

To adjust the browser sound volume:

1. From an active Sprint PCS Vision connection, press  (right softkey) to display the browser menu.
2. Select **More...** and press **OK** (left softkey).
3. Select **Preferences** and press **OK** (left softkey).
4. Select **Sound Volume** and press **OK** (left softkey).
5. Select your desired volume level by pressing the navigation key up or down and press .

Sprint PCS Vision FAQs


How will I know when my phone is ready for Sprint PCS Vision service?

When your phone is ready, your User Address will be displayed in the Phone#/UserID menu. Go to **Settings > Phone Info > Phone#/User ID**.

How do I sign-in for the first time?

You are automatically signed in to access Sprint PCS Vision services when you turn on your phone.



How do I know when my phone is connected to Sprint PCS Vision services?

Your phone automatically connects when Sprint PCS Vision service is used or an incoming message arrives. Your phone will also display the  icon. (Connecting takes about 10-12 seconds.)

Can I make calls and use Sprint PCS Vision services at the same time?

You cannot use voice and Sprint PCS Vision services simultaneously. If you receive a call while Sprint PCS Vision service is active, the call will be forwarded to voicemail. You can place an outgoing call anytime, but it will interrupt any in-progress Sprint PCS Vision session.

When is my data connection active?

Your connection is active when data is being transferred. Outgoing calls are allowed; incoming calls go directly to voicemail. When active, the  (Sending) or  (Receiving) indicator flashes on your phone's display screen.

When is my data connection dormant?

If no data is received for 10 seconds, the connection goes dormant. When the connection is dormant, voice calls are allowed. (The connection may become active again quickly.) If no data is received for an extended period of time, the connection will terminate.

Can I sign out of data services?

You can sign out without turning off your phone; however, you will not be able to browse the Web or use other Sprint PCS Vision services. While signed out, you can still place or receive phone calls, check voicemail, and use other voice services. You may sign in again at any time. To sign out, go to **Settings > PCS Vision > Disable Vision** in your phone's menu.

Sprint PCS Voice CommandSM

In This Section

- ◆ Getting Started with Sprint PCS Voice CommandSM
 - ◆ Creating Your Own Address Book
 - ◆ Making a Call with Sprint PCS Voice Command
 - ◆ Accessing Information Using Sprint PCS Voice Command
-

With Sprint PCS, reaching your friends, family, and co-workers has never been easier – especially when you're on the go. You can even listen to Web-based information, such as news, weather, and sports. Your voice does it all with Sprint PCS Voice Command.

This section outlines the Sprint PCS Voice Command service.

Getting Started With Sprint PCS Voice Command

With Sprint PCS Voice Command:

- You can store all your contacts' phone numbers, so you can simply say the name of the person you want to call.
- There's no need to punch in a lot of numbers, memorize voicemail passwords, or try to dial while you're driving.
- You can call anyone in your address book – even if you don't remember their phone number.
- You don't need to worry about losing your contacts or address book. This advanced service is network-based, so if you switch or happen to lose your Sprint PCS Phone, you won't lose your contacts or address book.

It's Easy to Get Started

There are two easy ways to sign up for Sprint PCS Voice Command:

- ▶ Sign up when you purchase and activate your phone.
- ▶ Just dial ***2TALK** from your Sprint PCS Phone to contact Sprint Customer Service and sign up.

There is a monthly charge for Sprint PCS Voice Command.

Creating Your Own Address Book

You can program up to 500 names into your personal address book, with each name having up to five phone numbers. That's 2,500 phone numbers, and with the advanced technology of Sprint PCS Voice Command, you can have instant access to all of them.

There are four ways to update your address book:

- **On the Web.** Go to www.talk.sprint.com and sign on with your Sprint PCS Phone Number and password to access a fully functional Web-based address book to create and update your contacts.
- **Use an Existing Address Book.** Automatically merge address books from desktop software applications with Sprint SyncSM Services for no additional charge. Simply click on the “Click to synchronize” button within your Sprint PCS Voice Command personal address book at www.talk.sprint.com.
- **Use Voice Recordings.** Simply dial  **TALK** and say, “Add name.” You will then be asked to say the name and number you want to add to your personal address book. Your address book can store up to 20 voice recorded names at once.
- **Call Directory Assistance.** If you don't have a computer or Internet access handy, you can have Sprint PCS Directory Assistance look up phone numbers for you and automatically add them to your address book. Just dial  **TALK** and say “Call operator” and we'll add two names and all the numbers associated with those names to your address book for our standard directory assistance charge.

Making a Call With Sprint PCS Voice Command

To make a call with Sprint PCS Voice Command:

1. Press **✕ TALK** and you'll hear the "Ready" prompt.
2. After the "Ready" prompt, simply say, in a natural voice, "Call" and the name of the person or the number you'd like to call. (For example, you can say, "Call Jane Smith at work," "Call John Baker on the mobile phone," "Call 555-1234," or "Call Bob Miller.")
3. Your request will be repeated and you will be asked to verify. Say "Yes" to call the number or person. (The number will automatically be dialed.) Say "No" if you wish to cancel.

Tip: Keep in mind that Sprint PCS Voice Command recognizes not only your voice, but any voice, so that others can experience the same convenience if they use your phone.

For more helpful hints on Sprint PCS Voice Command, including a list of recognized commands and an interactive tutorial, visit www.talk.sprint.com.

Accessing Information Using Sprint PCS Voice Command

To access information using Sprint PCS Voice Command:

1. Press **✕** **TALK**.
2. Say “Call the Web” and choose from a listing of information categories like news, weather, and sports.
– or –
Simply say “Call news room,” “Call the weather,” “Call Sports Central,” etc.

Note: Sprint PCS Voice Command is not available while roaming off the Nationwide Sprint PCS Network.

Safety and Warranty Information



Safety

In This Section

- ◆ **Getting the Most Out of Your Reception**
 - ◆ **Maintaining Safe Use of and Access to Your Phone**
 - ◆ **Using Your Phone With a Hearing Aid Device**
 - ◆ **Caring for the Battery**
 - ◆ **Acknowledging Special Precautions and the FCC Notice**
 - ◆ **Owner's Record**
 - ◆ **Phone Guide Proprietary Notice**
-

Part of getting the most out of your Sprint PCS Phone is learning how the phone works and how to care for it. This section outlines performance and safety guidelines that help you understand the basic features of your phone's operation.

Getting the Most Out of Your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal. If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability; you can also check it yourself by pressing any key. Anytime the Power Save feature is activated, a message is displayed on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radiofrequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your Sprint PCS Phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining Your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna raised, fully-extended, and over your shoulder.
- Try not to hold, bend, or twist the phone's antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.

Note: For the best care of your phone, only Sprint authorized personnel should service your phone and accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to Your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Tip: Purchase an optional hands-free car kit at your local Sprint Store, or call the Sprint PCS Accessory Hotline™ at 1-800-974-2221 or by dialing

#

2

2

2

on your Sprint PCS Vision Phone.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radiofrequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems and/or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.

- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your Sprint PCS Invoice.

Using Your Phone With a Hearing Aid Device

Your Sprint PCS® Phone has been tested for hearing aid device compatibility. When some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated.

Phones that have been rated will have an "M3" or "M4" rating on the box.

Your VI-2300 by Sanyo has an M3 rating.

Note: Phones rated M3 or M4 meet FCC requirements and may generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

The M3/M4 ratings do not guarantee successful interoperation between your phone and hearing aid device. Results will vary depending on the level of immunity of your hearing device and degree of your hearing loss.

The more immune your hearing aid device is, the less likely you are to experience interference noise from your wireless phone. Hearing aid devices should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your aids. Most new hearing aids have at least

an M2 immunity level. Add the “M” ratings of your hearing aid and your phone to determine probable usability:







- Any combined rating equal to or greater than six offers best use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for “best use.”

Sprint further suggests you experiment with multiple phones (even those not labeled M3 or M4) while in the store to find the one that works best with your hearing aid device. Should you experience interference after purchasing your phone, promptly return it to the store. With the Sprint 14-day Risk-Free Guarantee you may return the phone within 14 days of purchase for a full refund.

Getting the Best Hearing Device Experience With Your VI-2300

To further minimize interference:

- There is usually less interference on the microphone setting than the telecoil setting.
- Set the phone’s Display and Keypad backlight settings to ensure the minimum time interval:
 1. Press  to access the main menu.
 2. Select **Settings** and press .
 3. Select **Display** and press .
 4. Select **Backlight** and press .
 5. Select **Main LCD** or **Key** and press .
 6. Select the minimum time interval setting and press .
- Use phones with a pull-out antenna. Phones with embedded antennae may produce more interference.
- Position the phone so the antenna is farthest from your hearing aid.
- Move the phone around to find the point with least interference.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Sprint-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4° F to 140° F (-20° C to 60° C)

More than one month:

-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Lilon) Batteries

For safe disposal options of your Lilon batteries, contact your nearest Sprint authorized service center.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Note: For safety, do not handle a damaged or leaking Lilon battery.

Acknowledging Special Precautions and the FCC Notice

FCC Notice

This phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protections Association, One Batterymarch Park, Quincy, MA 02269, Attn.: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least 1.9 centimeters from your body when transmitting. Use of non-Sprint approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC Website at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the VI-2300 are:

AMPS/CDMA modes (Part 22):

Head: 1.450 W/kg; Body-worn: 1.130 W/kg

PCS mode (Part 24):

Head: 1.280 W/kg; Body-worn: 0.957 W/kg

FCC Radiofrequency Emission

This phone meets the FCC Radiofrequency Emission Guidelines.

FCC ID number: AEZSCP-23H. More information on the phone's SAR can be found from the following FCC Website: <http://www.fcc.gov/oet/fccid>.

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model: Sprint PCS Vision Phone VI-2300 by Sanyo

Serial No.:

Phone Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

Phone Guide template version 5A_int (July 2005)

Manufacturer's Warranty

In This Section

◆ Manufacturer's Warranty

Your Sprint PCS Phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your Sprint PCS Phone, please visit www.sprint.com and click on the "Terms & Conditions" link at the bottom or call Sprint PCS Customer Solutions at 1-888-211-4PCS.

Manufacturer's Warranty

Customer Limited Warranty

SPRINT SPECTRUM, L.P., (Sprint) offers you a limited warranty that the enclosed subscriber unit (Product), including accessories in the product package, will be free from defects in material or workmanship as follows:

SUBSCRIBER UNIT:

A. SPRINT ONE (1) YEAR LIMITED WARRANTY: For a period of one (1) year from the date of purchase, Sprint will, at its option, either pay the parts and labor charges to any authorized PCS' Phone service facility to repair or replace a defective product (with new or rebuilt parts/replacements). After this one (1) year period, you must pay all parts, shipping and labor charges.

B. REPAIRS: For a period equal to the remainder of the original limited warranty period on an original Product or for the 180 days after the date of repair/replacement, whichever is longer, Sprint will repair or replace (with new or rebuilt replacement) defective parts or Product used in the repair or replacement of the original Product under this Limited Warranty.

Proof of purchase in the form of a bill of sale or receipted invoice warranty repair document which is evidence that the Product is within the warranty period must be presented to obtain warranty service. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Products.

Transfer or resale of a Product will automatically terminate warranty coverage with respect to the Products.

This limited warranty does not cover and is void with respect to the following: (i) Products which have been improperly installed, repaired, maintained or modified (including the antenna); (ii) Products which have been subjected to misuse (including Products used in conjunction with hardware electrically or mechanically incompatible or used with accessories not supplied by Sprint), abuse accident, physical damage, abnormal operation, improper handling and storage, neglect, exposure to fire, water or excessive moisture or dampness or extreme changes in climate or temperature, (iii) Products operated outside published maximum ratings; (iv) cosmetic damage; (v) Products on which warranty stickers or Product serial numbers have been removed, altered, or rendered illegible; (vi) customer instruction; (vii) cost of installation, removal or reinstallation; (viii) signal reception problems (unless caused by defect in

material and workmanship); (ix) damage the result of fire, flood, acts of God or other acts which are not the fault of Sprint and which the Product is not specified to tolerate, including damage caused by mishandling and blown fuses; (x) consumables (such as fuses); or (xi) any Products which have been opened, repaired, modified or altered by anyone other than Sprint or a Sprint authorized service center.

This warranty does not cover customer education, instruction, installation, set up adjustments, or signal reception problems.

This warranty is valid only in the United States.

USE WITH ACCESSORIES NOT SUPPLIED BY SPRINT OR OTHERWISE NOT EXPRESSLY AUTHORIZED BY SPRINT MAY BE DANGEROUS.

SPRINT SPECIFICALLY DISCLAIMS LIABILITY, AND SHALL HAVE NO OBLIGATION TO PROVIDE TO BUYER ANY OTHER REMEDY, FOR ANY AND ALL DIRECT, INDIRECT, SPECIAL, GENERAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO LOSS OF PROFITS, LOST SALES, LOSS OF USE OF THE PRODUCT, OR ANTICIPATED PROFITS ARISING OUT OF USE OF OR INABILITY TO USE ANY PRODUCT (FOR EXAMPLE, WASTED AIRTIME CHARGES DUE TO THE MALFUNCTION OF A PRODUCT), DAMAGE DUE TO IMPROPER OPERATION OR MAINTENANCE, INSTALLATION, CONNECTION TO IMPROPER VOLTAGE SUPPLY. OR ATTEMPTED REPAIR OF THE PRODUCT BY ANYONE OTHER THAN A FACILITY AUTHORIZED BY SPRINT. THIS WARRANTY DOES NOT COVER PRODUCTS SOLD AS IS OR WITH ALL FAULTS, OR CONSUMABLES, (SUCH AS FUSES). THIS WARRANTY DOES NOT APPLY WHEN THE MALFUNCTION RESULTS FROM USE OF THE PRODUCT IN CONJUNCTION WITH ACCESSORIES, PRODUCTS OR ANCILLARY OR PERIPHERAL EQUIPMENT NOT SUPPLIED BY OR EXPRESSLY AUTHORIZED FOR USE BY SPRINT, AND WHERE IT IS DETERMINED BY SPRINT THAT THERE IS NO FAULT WITH THE PRODUCT ITSELF.

REPAIR OR REPLACEMENT, AS PROVIDED UNDER THE WARRANTY, IS YOUR SOLE AND EXCLUSIVE REMEDY FOR BREACH OF THE LIMITED WARRANTY. TO THE EXTENT PERMITTED BY APPLICABLE LAW, SPRINT MAKES NO OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, WITH RESPECT TO THE PRODUCTS FOR A PARTICULAR PURPOSE OR AGAINST INFRINGEMENT WITHIN THE TIME PERIOD SPECIFIED IN THE LIMITED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some States do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty last, so the above limitations or exclusions may not apply to you.

This limited warranty gives you specific legal rights, and you may have other rights which vary from State to State.

For other Warranty Service Information, please call SPRINT CUSTOMER SERVICE at 1- 888- 211- 4727.

Copyright(c) 2005 ACCESS Systems America Inc. ACCESS, NetFront are registered trademarks or trademarks owned by ACCESS Co., Ltd. in Japan and selected countries worldwide. NetFront is a registered trademark of NetFront Communications, Inc. in the United States and is used under a license. Portions of this software are based in part on the work of the Independent JPEG Group.

Copyright (c) 2005 InnoPath Software. All rights reserved.

Index

A

- Abbreviated Dialing 44, 76
- Airplane Mode 69
- Alarm Clock 137
- Alert Notification 58
- Answer on Hold 32
- Answering Calls 29
- Any Key Answer 75
- AOL Instant Messenger 225
- AOL Mail 224
- Area Name 63
- Auto Answer 72

B

- Background 65
- Backlight 61
- Battery
 - Capacity 22
 - Charging 23
 - Disposal 261
 - Installing 22
 - Removing 23
- Bookmarks 240
- Browser Menu 239

C

- Calculator 140
- Calendar 124
- Call Alarm 128
- Call Forwarding 210
- Call Guard 95
- Call History
 - Erasing 109

Making a Call 106

Options 105

Prepending 108

Saving 107

Viewing 104

Call Waiting 207

Callback Number 79

Caller ID 207

Chat 226-227

Contacts

Adding 112

Adding a Phone Number
116

Dialing From 42

Displaying 112

Editing 117

Entry Options 115

Erasing 86, 117

Finding 113

Secret Entries 121

Contrast 66

D

- Dialing Options 28
- Display Screen Icons 17
- Display Settings 60
- Downloads
 - Assigning 144
 - Downloading Files
142, 228
 - Erasing 87, 146
 - Games 230
 - Ringers 232
 - Screen Savers 235
 - Settings 144

E

EarthLink 224
Email 222-223
Emergency Numbers 35
End-of-Call Options 37
Entering Text 45
Event Alerts 126

F

FCC Notice 262
Font Size 66

G

Games 230
Greeting 60

H

Headset Mode 77
Help 7

I

In-Call Options 36
Instant Messaging 225
Introduction ii

K

Key Press Echo 56

L

Language 73
Location Settings 68
Lock Code 84
Locking Your Phone 82

M

Making Calls 26
Menu Diagram 99
Message Notification 78

MSN Hotmail 224
MSN Messenger 225

N

Net Guard 215

O

Open/Close Flip Option 74

P

Passwords
 Sprint PCS Account 6
 Sprint PCS Vision 6
 Voicemail 6
Phone (illus.) 14
Phone Number
 Dialing With Pauses 40
 Displaying 25
 Finding 39
 Saving 38
Plus Code Dialing 41
Preset Messages
 Editing 78
 Selecting 199

R

ReadyLink - See Sprint PCS
 ReadyLink
Resetting
 Passcode 89
 Phone 87
 Through SMS 88
Restricting Calls 85
Return to Standby 67
Ringer Types 52
Ringers 232

Roaming
Analog Networks 92
Digital Networks 92
Setting Roam Mode 94

S

Scheduler 125
Screen Call 155
Erasing an Announcement
158
Recording a Customized
Announcement 157
Recording Your Name 156
Selecting an
Announcement 156
Screen Savers 65, 235
Security Menu 82
Shortcut 71
Side Key Guard 75
Signature 80
Silence All 59
Sleep Mode 67
SMS Text Messaging
196-206
Displaying Messages 197
Erasing Messages 206
Message Folders 205
Message Options 201
New Messages 196
Sending Messages 198
Speakerphone 33
Special Numbers 86
Speed Dialing 43
Assigning Numbers 118
Sprint PCS Picture Mail 220

Sprint PCS ReadyLink
159-182
Adding and Editing
Contacts 169-175
Call Alerts 161
Contacts Lists 163
Erasing List Entries 175
Making a Call (1-to-1) 164
Making a Call (Group) 165
Missed Call Notification
167
Options 171
ReadyLink Guard 179
Receiving a Call 168
Ringer Types 180
Saving a Number 170
Setting R-L Mode 160
Settings 178
Speakerphone 181
Speed Dialing 178
Updating R-L Lists 177
Sprint PCS Services
Customer Service 7
Dialing 122
Directory Assistance 8
Operator Services 9
Sprint PCS Vision 211-246
Downloading Premium
Services Content 228
Enabling and Disabling 90
FAQs 245
Games 230
Home Page 214
Launching 214

- Messaging 220-221
- Navigating the Web 217
- Net Guard 215
- Ringers 232
- Screen Savers 235
- Status and Indicators 216
- User Name 212
- Sprint PCS Voice Command 247-251
- Start-up/Power-off Tone 55
- Stop Watch 139

T

- T9 Text Input 46
- Three-Way Calling 209
- Time, Setting 73
- To Do List 131
- Tone Length 54
- TTY Use 70
- Turning Your Phone Off 21
- Turning Your Phone On 21

U

- Unlocking Your Phone 4, 83
- Updating Your Phone 141

V

- Voice Command - See Sprint PCS Voice Command
- Voice Dial Tags 149
- Voice Memos 151
- Voice Prompt 55
- Voice-Activated Dialing 148
- Vicemail
 - Clearing the Icon 193
 - Expert Mode 190

- Menu Key 194
- Message Alerts 187
- Notification 186
- Options 190
- Retrieving 187
- Setting Up 5, 186
- Volume Settings 56

W

- Warranty 266
- Web 238
- World Clock 138

Y

- Yahoo! Mail 224
- Yahoo! Messenger 225

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>