

---

**C3224/C3828**  
**DSc332/DSc338**  
**LD232c/LD238c**  
**Aficio™ 2232C/2238C**

**Operating Instructions**  
**Copy Reference**



- 
- 1** Placing Originals
  - 2** Copying
  - 3** Color Adjustment/Program
  - 4** Troubleshooting
  - 5** User Tools (Copier/Document Server Features)
  - 6** Specifications

## Introduction

This manual describes detailed instructions on the operation and notes about the use of this machine. To get maximum versatility from this machine all operators are requested to read this manual carefully and follow the instructions. Please keep this manual in a handy place near the machine.

## Important


Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.



## Notes

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.



## Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

## Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see P.3 “Machine Types”.)

- Type 1: C3224/DSc332/LD232c/Aficio 2232C
- Type 2: C3828/DSc338/LD238c/Aficio 2238C

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

## Power Source

120V, 60Hz, 12A or more

Please be sure to connect the power cord to a power source as shown above. For details about power source, see “Power Connection” in the General Settings Guide.

# Manuals for This Machine

The following manuals describe the operational procedures of this machine. For particular functions, see the relevant parts of the manual.

## **Note**

- Manuals provided are specific to machine type.
- Adobe Acrobat Reader is necessary to view the manuals as a PDF file.
- Two CD-ROMs are provided:
  - CD-ROM 1 “Operating Instructions for Printer/Scanner”
  - CD-ROM 2 “Scanner Driver & Document Management Utilities”

## ◆ **General Settings Guide**

Provides an overview of the machine and describes System Settings (paper trays, Key Operator Tools, etc.), Document Server functions, and troubleshooting.

Refer to this manual for Address Book procedures such as registering fax numbers, e-mail addresses, and user codes.

## ◆ **Network Guide (PDF file - CD-ROM1)**

Describes procedures for configuring the machine and computers in a network environment.

## ◆ **Copy Reference (this manual)**

Describes operations, functions, and troubleshooting for the machine's copier function.

## ◆ **Facsimile Reference <Basic Features>**

Describes operations, functions, and troubleshooting for the machine's facsimile function.

## ◆ **Facsimile Reference <Advanced Features>**

Describes advanced functions and settings for key operators.

## ◆ **Printer Reference 1**

Describes system settings and operations for the machine's printer function.

## ◆ **Printer Reference 2 (PDF file - CD-ROM1)**

Describes operations, functions, and troubleshooting for the machine's printer function.

## ◆ **Scanner Reference (PDF file - CD-ROM1)**

Describes operations, functions, and troubleshooting for the machine's scanner function.

### ❖ **Manuals for DeskTopBinder V2 Lite**

DeskTopBinder V2 Lite is a utility included on the CD-ROM labeled “Scanner Driver & Document Management Utilities”.

- DeskTopBinder V2 Lite Setup Guide (PDF file - CD-ROM2)  
Describes installation of, and the operating environment for DeskTopBinder V2 Lite in detail. This guide can be displayed from the **[Setup]** display when DeskTopBinder V2 Lite is installed.
- DeskTopBinder V2 Lite Introduction Guide (PDF file - CD-ROM2)  
Describes operations of DeskTopBinder V2 Lite and provides an overview of its functions. This guide is added to the **[Start]** menu when DeskTopBinder V2 Lite is installed.
- Auto Document Link Guide (PDF file - CD-ROM2)  
Describes operations and functions of Auto Document Link installed with DeskTopBinder V2 Lite. This guide is added to the **[Start]** menu when DeskTopBinder V2 Lite is installed.

### ❖ **Manuals for ScanRouter V2 Lite**

ScanRouter V2 Lite is a utility included on the CD-ROM labeled “Scanner Driver & Document Management Utilities”.

- ScanRouter V2 Lite Setup Guide (PDF file - CD-ROM2)  
Describes installation of, settings, and the operating environment for ScanRouter V2 Lite in detail. This guide can be displayed from the **[Setup]** display when ScanRouter V2 Lite is installed.
- ScanRouter V2 Lite Management Guide (PDF file - CD-ROM2)  
Describes delivery server management and operations, and provides an overview of ScanRouter V2 Lite functions. This guide is added to the **[Start]** menu when ScanRouter V2 Lite is installed.

### ❖ **Other manuals**

- PS3 Supplement (PDF file - CD-ROM1)
- Unix Supplement (Available from an authorized dealer, or as a PDF file on our Web site.)

# What You Can Do with This Machine

## <Color Functions/Color Adjustments>

### Color Copying (see p.29)

You can switch the color copy mode depending on the type of originals used and the desired finish.


#### Full Color Copy (see p.29)

Copies using four colors: yellow, magenta, cyan and black.




#### Black/White Copy (see p.29)

Copies in black and white, even when the original is in color.




#### Single Color Copy (see p.29)

Copies in the designated color.

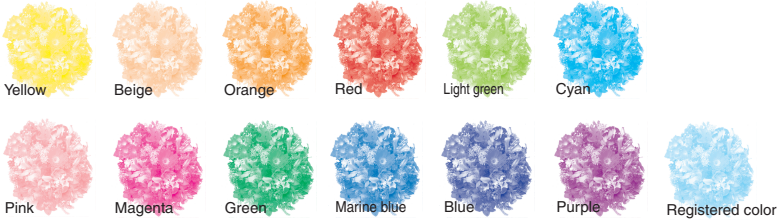


#### 2-Color Copy (see p.29)

Color: Copies using 2 registered colors.

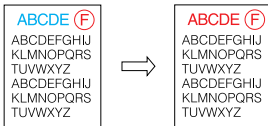

Black/Red: Copies the red part of the original in red, and copies all other areas in black and white.

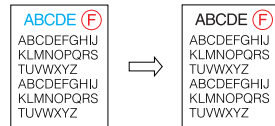


GCM0022e

## Color Copying (see p.29)


### Convert Colors (see p.31)

Copies by changing a specific color in the original to another color.

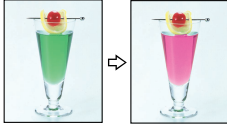


### Erase Specified Color (see p.32)

Copies by deleting a specific color in the original.

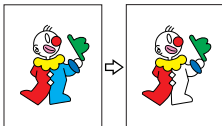



### Color Background (see p.32)

Copies by adding a color to the whole page.

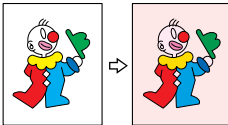

### Stamping on Copies (see p.70)

Copies with the date, page numbers, etc. The stamp color can be yellow, red, cyan, magenta, green, blue, and black.

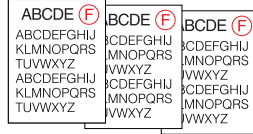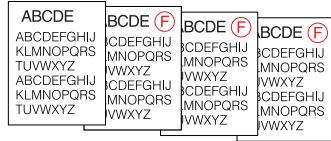


Printed inserts types:

- Preset Stamp (p.70)
- User Stamp (p.72)
- Date Stamp (p.75)
- Page Numbering (p.77)

GCM0029e

## Adjusting Colors (see p.87)


### Primary Colors

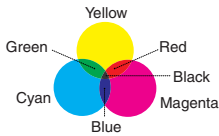

Colors can be created by combining the 3 primary colors: yellow, magenta and cyan. Black can be made by combining yellow, magenta and cyan, however, as there might be some slight differences, "black" will be expressed using a black toner.


### Adjust Color (see p.87)

Adjusts the specific colors (yellow, red, magenta, blue, cyan and green) by mixing them with adjacent colors in the color circle.

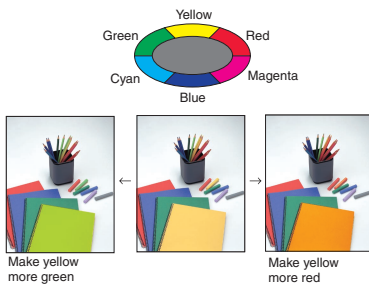

### Color Balance (see p.88)

Adjusts the overall color tone of copies.

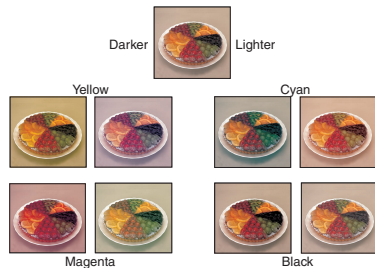

## Adjusting Images (see p.90)

### Sharp/Soft (see p.90)

Adjusts the outline of the image.



### Background Density (see p.91)

Adjusts the background density of the image.



### Contrast (see p.90)

Adjusts the shades of the image.



### Other Adjustments (see p.91)

- ◆ Adjust U.C.R (see p.91)
- ◆ Text/Photo Sensitivity (see p.91)
- ◆ A.C.S. Sensitivity (see p.125)
- ◆ Color Sensitivity (see p.125)


GCM0023e

# What You Can Do with This Machine


Functions differ depending on machine type and options. See p.4 "Functions Requiring Optional Configurations".

## Types of Duplex Copies


- 1-sided 2 Pages → 2-sided 1 Page (see p.55  
"❖ 1 Sided → 2 Sided")




- 2-sided 1 Page → 2-sided 1 Page (see p.55  
"❖ 2 Sided → 2 Sided")




- 1-sided 4 Pages → 2-sided 1 Page (see p.58  
"❖ 1 Sided 4 Pages → Combine 2 Side")

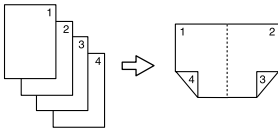


- 2-sided 2 Pages → 2-sided 1 Page (see p.59  
"❖ 2 Sided 4 Pages → Combine 2 Side")




- 1-sided 8 Pages → 2-sided 1 Page (see p.58  
"❖ 1 Sided 8 Pages → Combine 2 Side")

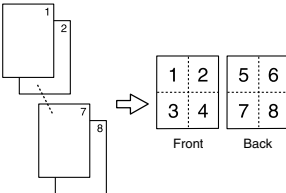


- 2-sided 4 Pages → 2-sided 1 Page (see p.59  
"❖ 2 Sided 8 Pages → Combine 2 Side")

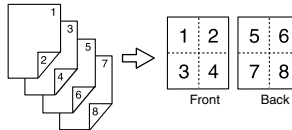


- 1-sided 16 Pages → 2-sided 1 Page (see p.59  
"❖ 1 Sided 16 Pages → Combine 2 Side")

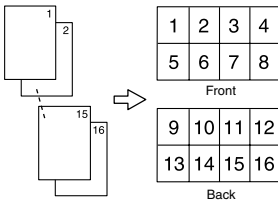


- 2-sided 8 Pages → 2-sided 1 Page (see p.59  
"❖ 2 Sided 16 Pages → Combine 2 Side")

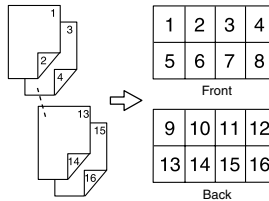

- Bound Originals → 2-sided Pages (see p.60  
"❖ Book → 2 Sided")



- Front/Back Bound Originals → 2-sided Pages (see p.60  
"❖ Front & Back → 2 Sided")







## Copying Book Originals

1-sided → Magazine (see p.61 "❖ 1 Sided → Magazine")

Open to Left

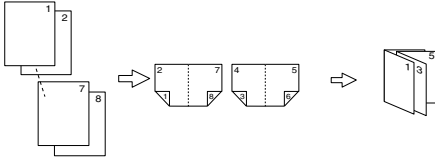


Open to Right

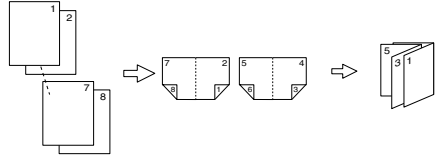


2-sided → Magazine (see p.62 "❖ 2 Sided → Magazine")

Open to Left




Open to Right




## Combining Multiple Pages onto a Single Page (see p.57 "One-Sided Combine")


● 1-sided 2 Pages → 1-sided 1 Page




● 2-sided 1 Page → 1-sided 1 Page




● 1-sided 4 Pages → 1-sided 1 Page

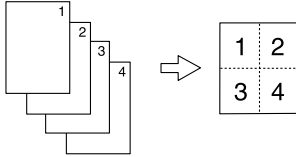


● 2-sided 2 Pages → 1-sided 1 Page



● 1-sided 8 Pages → 1-sided 1 Page

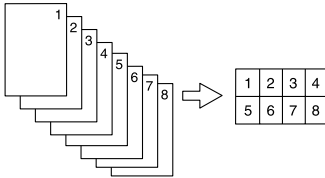


● 2-sided 4 Pages → 1-sided 1 Page

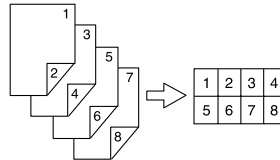


## Copying Originals Such as Books (see p.60 "Series Copies")

● Bound Originals → 1-sided Pages




## Copying 2-Sided Pages onto 1-Sided Pages (see p.55 "2 Sided → 1 Sided")


● 2-sided 1 Page → 1-sided 2 Pages




● Bound Originals → 2-sided Pages



## Copying onto Envelopes (see p.26)



● Front/Back Bound Originals → 2-sided Pages



# TABLE OF CONTENTS

<b>Manuals for This Machine</b> .....	<b>i</b>
<b>What You Can Do with This Machine &lt;Color Functions/Color Adjustments&gt;</b> ...	<b>iii</b>
<b>What You Can Do with This Machine</b> .....	<b>vi</b>
<b>Notice</b> .....	<b>1</b>
<b>How to Read This Manual</b> .....	<b>2</b>
<b>Machine Types</b> .....	<b>3</b>
<b>Functions Requiring Optional Configurations</b> .....	<b>4</b>
<b>Control Panel</b> .....	<b>5</b>
Display Panel .....	<b>7</b>

## 1. Placing Originals

---

<b>Originals</b> .....	<b>9</b>
Sizes and Weights of Recommended Originals .....	<b>9</b>
Sizes Detectable by Auto Paper Select .....	<b>11</b>
Missing Image Area .....	<b>12</b>
<b>Placing Originals</b> .....	<b>13</b>
Original Orientation .....	<b>13</b>
Placing Originals on the Exposure Glass.....	<b>14</b>
Placing Originals in the Auto Document Feeder .....	<b>15</b>

## 2. Copying

---

<b>Basic Procedure</b> .....	<b>19</b>
Interrupt Copy .....	<b>20</b>
Left Original Beeper .....	<b>21</b>
Job Preset .....	<b>21</b>
<b>Copying from the Bypass Tray</b> .....	<b>22</b>
When copying onto OHP Transparencies or Thick Paper .....	<b>24</b>
When Copying on the Back Side of the Paper.....	<b>25</b>
When copying onto envelopes .....	<b>26</b>
<b>Making A3, 11" x 17" Full Bleed Copies</b> .....	<b>28</b>
<b>Color Functions</b> .....	<b>29</b>
Selecting a Color Mode.....	<b>29</b>
Convert Colors .....	<b>31</b>
Erase Color .....	<b>32</b>
Color Background .....	<b>32</b>

<b>Copier Functions .....</b>	<b>33</b>
Adjusting Copy Image Density .....	33
Selecting the Original Type .....	34
Selecting Copy Paper .....	35
Preset Reduce/Enlarge .....	38
Zoom .....	39
Auto Reduce/Enlarge .....	40
Size Magnification .....	41
Directional Magnification (%) .....	41
Directional Size Magnification (Inch) .....	42
Sort .....	43
Stack .....	46
Staple .....	47
Punch .....	51
Duplex .....	55
1 Sided Combine .....	57
2 Sided Combine .....	58
Series Copies .....	60
Copying Book Originals .....	61
Image Repeat .....	63
Double Copies .....	64
Centering .....	65
Positive/Negative .....	66
Mirror .....	66
Erase .....	67
Margin Adjustment .....	69
Preset Stamp .....	70
User Stamp .....	72
Date Stamp .....	75
Page Numbering .....	77
Covers .....	81
Slip Sheets .....	82
<b>Storing Data in the Document Server .....</b>	<b>83</b>
<b>Programs .....</b>	<b>85</b>
Storing a Program .....	85
Changing a stored program .....	86
Deleting a Program .....	86
Recalling a Program .....	86
<b>3. Color Adjustment/Program</b>	
<hr/>	
<b>Color Adjustment .....</b>	<b>87</b>
<b>Color Balance .....</b>	<b>88</b>
Color Balance Program .....	88
<b>Image Adjustment .....</b>	<b>90</b>
<b>User Color .....</b>	<b>92</b>
Adjusting Colors Based on the Selected Color .....	92
Mixing Colors Manually with the Number Keys .....	94
Deleting User Colors .....	94
Sampling the User Colors .....	94

## 4. Troubleshooting

---

<b>If Your Machine Does Not Operate As You Want.....</b>	<b>95</b>
When a Message Is Displayed.....	95
<b>If You Cannot Make Clear Copies.....</b>	<b>97</b>
<b>If You Cannot Make Copies As You Want .....</b>	<b>98</b>
When Memory Is Full .....	101

## 5. User Tools (Copier/Document Server Features)

---

<b>User Tools Menu (Copier/Document Server Features) .....</b>	<b>103</b>
<b>Accessing User Tools (Copier/Document Server Features).....</b>	<b>110</b>
Changing Default Settings .....	110
Exiting User Tools .....	111
<b>Settings You Can Change with User Tools .....</b>	<b>112</b>
General Features <sup>1</sup> / <sub>5</sub> .....	112
General Features <sup>2</sup> / <sub>5</sub> .....	113
General Features <sup>3</sup> / <sub>5</sub> .....	114
General Features <sup>4</sup> / <sub>5</sub> .....	115
General Features <sup>5</sup> / <sub>5</sub> .....	115
Reproduction Ratio <sup>1</sup> / <sub>2</sub> .....	116
Reproduction Ratio <sup>2</sup> / <sub>2</sub> .....	116
Edit <sup>1</sup> / <sub>2</sub> .....	117
Edit <sup>2</sup> / <sub>2</sub> .....	118
Stamp.....	121
Input/Output .....	124
Adjust Color Image.....	125

## 6. Specifications

---

<b>Combination Chart.....</b>	<b>127</b>
<b>Supplementary Specifications.....</b>	<b>128</b>
<b>INDEX.....</b>	<b>139</b>



# Notice

Do not copy any item for which copying is prohibited by law.

Copying the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, and driver's licenses.

The color samples in this manual may differ slightly from the colors of actual copies.

This machine has a function that prevents making counterfeit bank notes. This function may prevent originals similar to bank notes from being copied properly.

# How to Read This Manual

---

## Symbols

---

This manual uses the following symbols:

### **WARNING:**

This symbol indicates a potentially hazardous situation that might result in death or serious injury if you misuse the machine by not following the instructions under this symbol. Be sure to read the instructions, all of which are included in the Safety Information section in the General Settings Guide.

### **CAUTION:**

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are included in the Safety Information section in the General Settings Guide.

- WARNINGS and CAUTIONS are notes for your safety.

### **Important**

If these instructions are not followed, paper might misfeed, originals might be damaged, or data might be lost. Be sure to read these instructions.

### **Preparation**

This symbol indicates prior knowledge or preparations are required before operation.

### **Note**

This symbol indicates precautions for operation, or actions to be taken following user error.

### **Limitation**

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

### **Reference**

This symbol indicates where further relevant information can be found.

[   ]

Keys that appear on the machine's display panel.









[   ]

Keys built into the machine's control panel.



# Machine Types

This machine comes in two models which vary by copy speed. To confirm which model you have, see the inside front cover of this manual.

	Type 1	Type 2
Copy speed/B&W	32 copies/minute (A4  , 8 <sup>1</sup> / <sub>2</sub> " × 11"  )	38 copies/minute (A4  , 8 <sup>1</sup> / <sub>2</sub> " × 11"  )
Copy speed/Full Color	24 copies/minute (A4  , 8 <sup>1</sup> / <sub>2</sub> " × 11"  )	28 copies/minute (A4  , 8 <sup>1</sup> / <sub>2</sub> " × 11"  )

# Functions Requiring Optional Configurations

Certain functions require special machine configuration and extra options. See the table below.


○ Required options

Function	Batch	SADF	Mixed Size	Shift Sort	Stack	Staple	Staple (Saddle Stitch)	Punch
Auto Document Feeder (ADF)	○	○	○					
2 tray finisher <sup>*1</sup>				○	○	○		○
Booklet finisher <sup>*1</sup>				○	○	○	○	○

<sup>\*1</sup> The paper tray unit is required in order to install the finisher.

# Control Panel

This illustration shows the control panel of a machine with options fully installed.

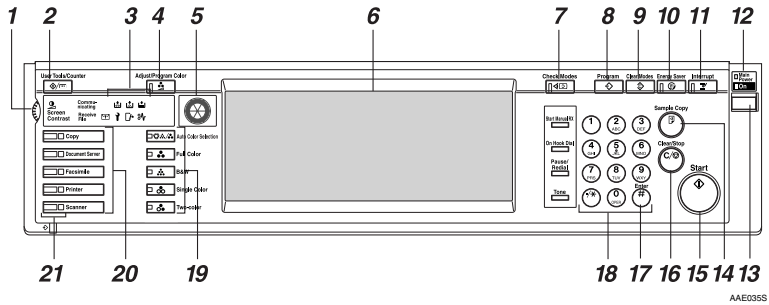

## 1. Screen Contrast knob

Adjusts display panel brightness.

## 2. [User Tools/Counter] key

- User Tools  
Press to change the defaults and conditions to meet your requirements. See p.103 "User Tools (Copier/Document Server Features)".
- Counter  
Press to check or print the counter value. See "Counter", *General Settings Guide*.
- Inquiry  
Press to find out where to order expendable supplies and where to call when a malfunction occurs. You can also print these details. See "Inquiry", *General Settings Guide*.

## 3. Indicators

Display the status of the machine or indicate errors.

- : Add Staple indicator
- : Add Toner indicator
- : Load Paper indicator
- : Service Call indicator
- : Open Cover indicator
- : Misfeed indicator

See "Control Panel", *General Settings Guide*.

## 4. [Adjust/Program Color] key

Use this key to adjust and register colors. See p.87 "Color Adjustment/Program", p.92 "User Color".

### Note

- When image quality is adjusted, the lamp in the [Adjust/Program Color] key is lit.

## 5. Color Circle

Refer to this when adjusting colors. See p.87 "Color Adjustment".

## 6. Display panel

Displays operation status, error messages, and function menus. See "Display Panel", *General Settings Guide*.

## 7. [Check Modes] key

Press to check the entered copy job settings.

## 8. [Program] key

Press to register frequently used settings, or recall registered settings. See p.85 "Programs".

## 9. [Clear Modes] key

Press to clear the previous copy job settings.

### 10. **[Energy Saver] key**

Press to switch into and out of Energy Saver mode. See "Saving Energy", *General Settings Guide*.

### 11. **[Interrupt] key**

Press interrupt a long copy job to make copies during copying or scanning. See p.20 "Interrupt Copy".

### 12. **Main power indicator and On indicator**

The main power indicator turns on when you turn on the main power. The **On** indicator lights when the power is on.

#### **Important**

Do not turn off the main power switch while the **On** indicator is turning on or is flashing. The hard disk may malfunction.

### 13. **Operation switch**

Press to turn the power on (the **On** indicator turns on). To turn the power off, press again (the **On** indicator turns off). See "Turning On the Power", *General Settings Guide*.

### 14. **[Sample Copy] key**

Press to make a single set of copies or prints to check print quality before making multiple sets. See p.45 "Sample copy".

### 15. **[Start] key**

Press to start copying. Press to start scanning or printing documents stored using the Document Server function.

### 16. **[Clear/Stop] key**

- Clear  
Press to delete a number entered.
- Stop  
Press to stop a job in progress.

### 17. **[#] key**

Press to enter a numerical value.

### 18. **Number keys**

Press to enter the number of copies and data for a selected function.

### 19. **Color Selection Key (Copy mode)**

Switch keys depending on the type of original, or the copying purpose:

**[Auto Color Selection]** : 

**[Full Color]** : 

**[Black & White]** : 






**[Single Color]** : 

**[Two-color]** : 

See p.29 "Color Functions"

### 20. **Function keys**

Press to select one of the following functions:

- Copy: 
- Document Server: 
- Facsimile: 
- Printer: 
- Scanner: 



### 21. **Function status indicators**

Display the status of the above functions:

- Green: active
- Red: interrupted

# Display Panel


The function items displayed serve as selector keys. You can select or specify an item by lightly pressing them.

When you select or specify an item on the display panel, it is highlighted like this: . Keys appearing as  cannot be used.

## Note

- The following illustration is an example of the panel display when the booklet finisher and 2 tray paper unit installed.

## ◆ Initial copy display

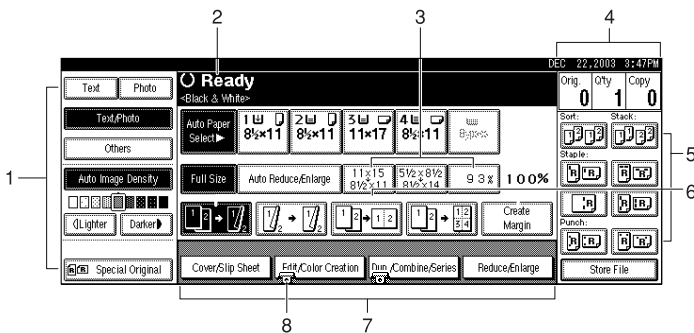

AAE0385

**1.** Original function, Image Density and Special Original function.

**2.** Operational status and messages.

**3.** You can register up to three frequently used reduce/enlarge ratios other than the fixed reduce/enlarge ratios. See p.116 "Shortcut R/E".

**4.** Numbers of originals scanned into memory, copies set, and copies made.

**5.** Sort, Stack, Staple, Punch functions.

**6.** Displays contents of the Shortcut keys. You can register frequently used functions in these keys. See p.114 "Copy Function Key: F1-F5".

**7.** Displays available functions. Press a function name to display its menu. For example, press [Reduce/Enlarge] to bring up the Reduce/Enlarge menu.

**8.** A clip mark indicates the currently selected function.



# 1. Placing Originals

## Originals

### Note







- ❑ Highlighter pen colors are difficult to reproduce. Depending on the color used, they may not come out on copies, or may come out as a different color.

---







## Sizes and Weights of Recommended Originals

---

### ◆ Metric version

Where original is placed	Original size	Original weight
Exposure glass	Up to A3	--
ADF	One-sided originals: A3  – B6 JIS (Japanese Industrial Standard)  	40–128 g/m <sup>2</sup>
	Two-sided originals: A3  – A5  	52–105 g/m <sup>2</sup>

### ◆ Inch version

Where original is placed	Original size	Original weight
Exposure glass	Up to 11" × 17"	--
ADF	One-sided originals: 11" × 17"  – 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "  	11–34 lb.
	Two-sided originals: 11" × 17"  – 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "  	14–28 lb.

### Note

- ❑ The maximum number of originals that can be placed in the ADF is about 80.
- ❑ The weight range for originals when using the Mixed Size function is 52–81 g/m<sup>2</sup>, 13.8–21.5 lb.

---

## Originals not recommended for the Auto Document Feeder (ADF)

---

1

Placing the following types of originals in the ADF can cause paper misfeeds or result in damage to the originals. Place these originals on the exposure glass instead.

- Originals other than those specified on p.9 “Sizes and Weights of Recommended Originals”.
- Stapled or clipped originals
- Perforated or torn originals
- Curled, folded, or creased originals
- Pasted originals
- Originals with any kind of coating, such as thermal fax paper, art paper, aluminum foil, carbon paper, or conductive paper
- Originals with perforated lines
- Originals with indexes, tags, or other projecting parts
- Sticky originals such as translucent paper
- Thin originals that have low stiffness
- Thick originals such as postcards
- Originals of inappropriate weight
- Bound originals such as books
- Transparent originals such as OHP transparencies or translucent paper

 **Note**

- The original might become dirty if it is written on with a pencil or a similar instrument.



## Sizes Detectable by Auto Paper Select

○ : Detectable size × : Undetectable size

### ◆ Metric version


Size	A3 ☐	B4 JIS☐	A4 ☐☐	B5 JIS☐☐	A5 ☐☐	B6 JIS☐☐	11"× 17" ☐	8 <sup>1</sup> / <sub>2</sub> " × 14" ☐	8 <sup>1</sup> / <sub>2</sub> " × 11" ☐☐	5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> " ☐☐	8 <sup>1</sup> / <sub>2</sub> " × 13" ☐
Location of the original											
Exposure glass	○	○	○	○	×	×	×	×	×	×	○
ADF	○	○	○	○	○	○*1	○	×	○	×	○

\*1 The machine cannot detect two-sided originals of B6 JIS size.


### ◆ Inch version

Size	A3 ☐	B4 JIS☐	A4 ☐☐	B5 JIS☐☐	A5 ☐☐	11"× 17" ☐	8 <sup>1</sup> / <sub>2</sub> " × 14" ☐	8 <sup>1</sup> / <sub>2</sub> " × 11" ☐☐	5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> " ☐☐	8 <sup>1</sup> / <sub>2</sub> " × 13" ☐	10"× 14" ☐
Location of the original											
Exposure glass	×	×	×	×	×	○	○	○	×	×	×
ADF	○	×	○	×	×	○	○	○	×	×	×

### ◆ Exposure glass

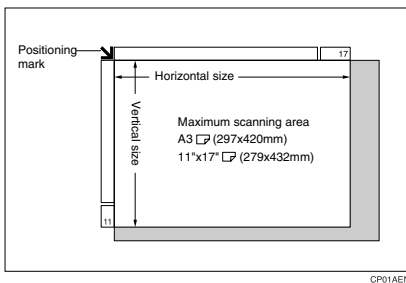

### ◆ ADF

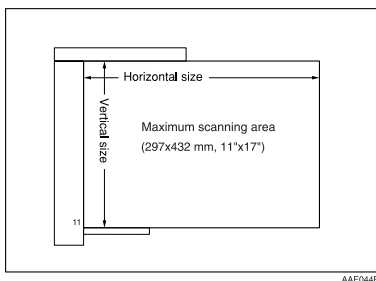

**Note**

- ❑ When copying custom size originals, make sure you specify the size of the originals. If not, the image may not be copied properly. See p.17 "Placing custom size originals".

1


**Sizes difficult to detect**

It is difficult for the machine to automatically detect the sizes of the following types of originals, so select the paper size manually.

- Originals with indexes, tags, or other protrusions
- Transparent originals such as OHP transparencies or translucent paper
- Text or picture dense original
- Originals containing solid images
- Originals containing solid images around their edges

**Missing Image Area**

Even if you correctly place originals in the ADF or on the exposure glass, margins of a few millimeters on all four sides of the original might not be copied.

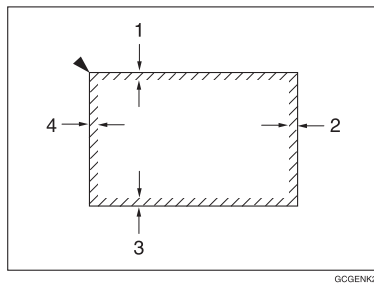

GGGENK2E

**1.** 0.5 - 4.0 mm, 0"- 0.16"

**3.** 0.5 - 4.0 mm, 0"- 0.16"

**2.** 0.5 - 6.0 mm, 0"- 0.24"

**4.** 1.5 - 5.0 mm, 0.06"- 0.20"

# Placing Originals

## Note

- ❑ Place originals only when all correction fluid and ink has completely dried. Not taking this precaution could dirty the exposure glass, thus resulting in blemished copies.

## Reference

For original sizes you can set, see p.9 "Originals".

## Original Orientation




This function is useful for copying torn originals or large originals.



You can set the original orientation in the following ways.


### ❖ Standard orientation

Select this function when original orientation is the same as copy paper orientation.

### ❖ 90° turn

Use this to copy A3 , B4 JIS  or 11" × 17"  size originals. The machine rotates the copy image by 90°. This is useful for copying large originals using the Staple, Duplex, Combine, or Stamp functions.

For example, to copy A3  or 11" × 17"  originals with the Staple function selected:

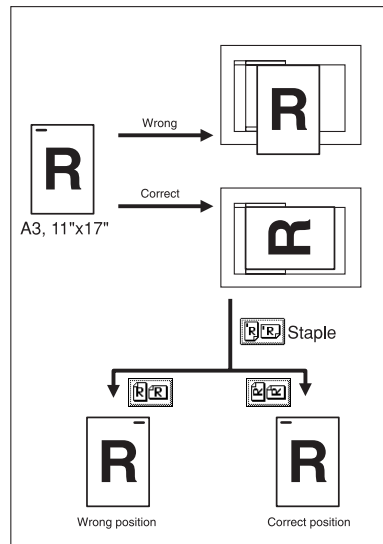


AAE043S

## Note

- ❑ It is recommended that you use the Original Orientation function with the Auto Paper Select or Preset Reduce/Enlarge function.


**1** Press [Special Original].

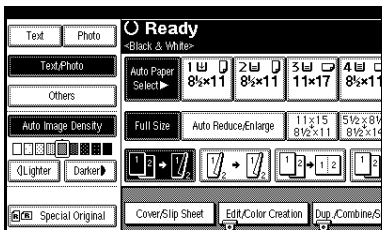

**2** Select the original orientation.


Standard orientation

**1** Make sure  is selected.

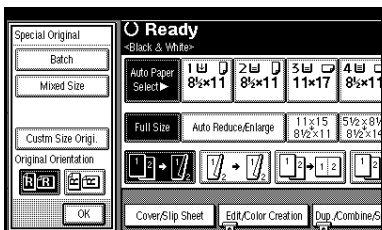

90° turn

**1** Place the original in the landscape orientation, and then press .

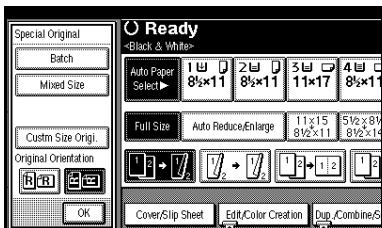

**3** Press [OK].

## Placing Originals on the Exposure Glass

**1** Lift the exposure glass cover or the ADF.


**Important**

- Do not lift the exposure glass cover or the ADF forcefully. Otherwise, the ADF cover might open or be damaged.

**Note**

- Be sure to lift the exposure glass cover or ADF more than 30°. Otherwise, the size of the original might not be detected correctly.

**2** Place the original face down on the exposure glass. It should be aligned with the rear left corner.

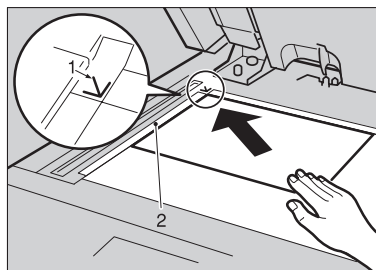

**1.** Positioning mark

**2.** Scale

**Note**

- Start with the first page to be copied.

**3** Lower the exposure glass cover or ADF.


## Placing Originals in the Auto Document Feeder

Settings should be made accordingly in the following situations:

- ❖ **When placing originals consisting of more than 80 pages:**  
p.15 “Batch”
- ❖ **When placing originals one by one:**  
p.16 “SADF”
- ❖ **When placing originals of the same width but different sizes:**  
p.17 “Placing originals of mixed sizes”
- ❖ **When placing custom size originals:**  
p.17 “Placing custom size originals”

### Note


- Do not stack originals above the limit mark on the side guide of the ADF.
- The last page should be on the bottom.
- Do not place objects on the sensors or cover them with your hands, or the original size may not be detected properly. Also, do not place anything on the exposure glass cover as this could cause a malfunction.

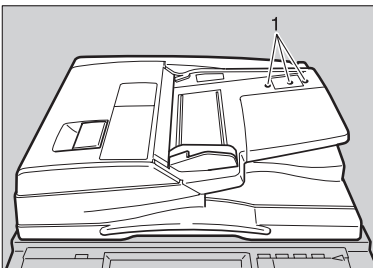

ZHVH002J

### 1. Sensors

- 1** Set the document guide to the original size.
- 2** Place the aligned originals face up into the ADF.

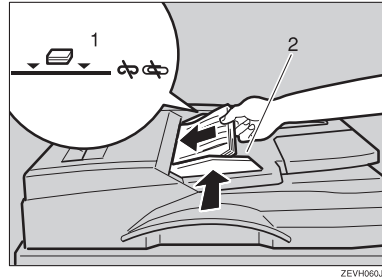

ZEVH060J

### 1. Limit mark

### 2. Document guide

#### Note

- Straighten any curls in the originals before placing them in the ADF.
- To prevent multiple sheets from being fed at once, fan the originals before placing them in the ADF.
- Place the originals squarely.


### Batch

The Batch mode enables you to copy originals of more than 80 pages as a single document, even if you place the originals into the ADF in installments.

### Important

- Place special originals, such as translucent paper, one by one.

**1** Press **[Special Original]**.

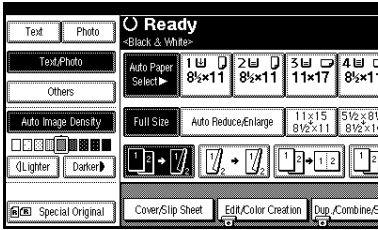

**2** Press **[Batch]**, and then press **[OK]**.

**Note**

- If **[SADF]** is displayed, change the settings. See p.124 “Switch to Batch (SADF)”.

**3** Place the first installment of the originals, and then press the **[Start]** key.

**4** After the originals has been fed, place the next installments.

**5** When the Sort, Combine, or Duplex function is set, press the **[#]** key after all originals have been scanned.

**6** Press the **[Start]** key.

**SADF**

In SADF mode, even when an original is placed one page at a time into the ADF, each page is automatically fed as it is placed.


**Preparation**

To use the SADF function, set the User Tools (Copier/Document Server Features) such that **[SADF]** is displayed when you press **[Special Original]**. See p.124 “Switch to Batch (SADF)”.

**Reference**

For related default settings, see p.116 “Shortcut R/E”.

**1** Press **[Special Original]**.

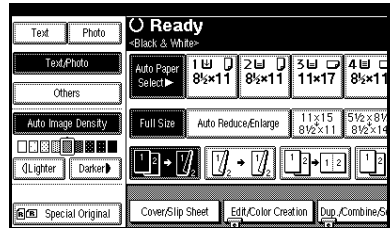

**2** Press **[SADF]**, and then press **[OK]**.

**3** Place one page of an original, and then press the **[Start]** key.

**4** When the machine instructs you to place another original, place the next page.

The second and subsequent pages will feed in automatically without a need to press the **[Start]** key.

**Note**

- When the Sort, Combine or Duplex function is set, press the **[#]** key after all originals have been scanned.
- In SADF mode, an original must be set within a specified time after the previous original has been fed. You can adjust this time from 3 seconds to 99 in 1 second increments. See p.124 “SADF Auto Reset”.

## Placing originals of mixed sizes


When placing different size originals of the same width in the ADF together, the machine automatically checks the sizes of the originals and makes copies.

### Note

- When placing same width originals of different sizes in the ADF and making copies without using the Mixed size function, parts of the original image might not be copied, or the paper might jam.
- Copy speed and scanning speed may slow down.
- You can place originals of two different sizes at once.
- Sizes of originals that can be placed together using this function are as follows:


Metric version	A3 <input type="checkbox"/> , B4 JIS <input type="checkbox"/> , A4 <input type="checkbox"/> , B5 JIS <input type="checkbox"/>
Inch version	11" × 17" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> " × 14" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> " × 11" <input type="checkbox"/>

### 1 Press [Special Original].

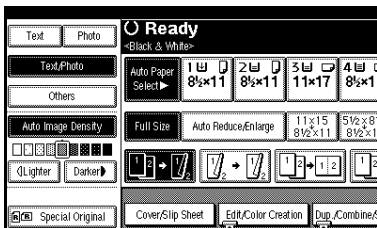

### 2 Press [Mixed Size], and then press [OK].

### 3 Align the rear and left edges of the originals as shown.

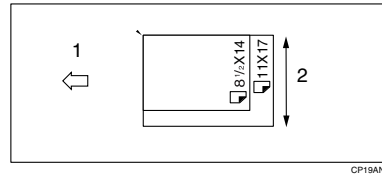

### 1. Place the originals into the ADF

### 2. Vertical size

### 4 Adjust the guide to the size of the widest original.

### 5 Place the aligned originals face up in the ADF.

### 6 Press the [Start] key.


## Placing custom size originals

When placing custom size originals in the ADF, specify the size of the originals.

### Note

- Paper with a vertical size of 128–297 mm (5.1"–11.6") and a horizontal size of 128–432 mm (5.1"–17") can be placed with this function.

### 1 Press [Special Original].

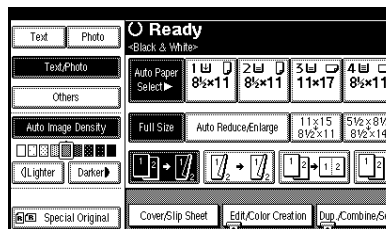

### 2 Press [Custm Size Ori].

**3** Enter the horizontal size of the original using the number keys, and then press [#].

 **Note**

If you make a mistake, press [Clear] or the [Clear/Stop] key, and then enter the value again.

**4** Enter the vertical size of the original using the number keys, and then press [#].

**5** Press [OK].

**6** Place the originals, and then press the [Start] key.



# 2. Copying

## Basic Procedure

- 1 When the machine is set for user codes, enter a user code (up to eight digits) using the number keys, and then press the **[#]** key.

The machine is now ready to copy.


### Reference

For users codes, see "Key Operator Tools", *General Settings Guide*.

- 2 Make sure "O Ready" is shown on the display.

If any other function is displayed, press the **[Copy]** key.

### ◆ Initial copy display

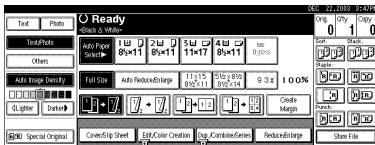

- 3 Make sure no previous settings remain.

### Note

- When there are previous settings remaining, press the **[Clear Modes]** key before entering your settings.

- 4 Place the originals.

### Reference

p.13 "Placing Originals"

- 5 Make the necessary settings.

- 6 Enter the required number of copies using the number keys.

### Note

- The maximum copy quantity that can be set is between 1 and 999.

- 7 Press the **[Start]** key.

Copying starts.

### Note

- When placing originals on the exposure glass, press the **[#]** key after all the originals are scanned.
- Copies are delivered face down.

## How to operate

- ◆ To stop the machine during a multi-copy run

Press the **[Clear/Stop]** key.

- ◆ To return the machine to the initial condition after copying

Press the **[Clear Modes]** key.

- ◆ When clearing entered values

Press the **[Clear/Stop]** key or **[Clear]** on the display.

- ◆ To check the settings

Press the **[Check Modes]** key.

## Interrupt Copy

Use this function to interrupt a long copy job to make urgently needed copies.

### Limitation

- You cannot use Interrupt Copy when fax originals are being scanned.

### **1** Press the **[Interrupt]** key.

The **Interrupt** indicator lights.

---

### When scanning is interrupted

**1** Remove the originals that were being copied, and then place the originals you want to copy.

**2** Press the **[Start]** key.

Copying starts.

**3** When copying is complete, remove the originals and copies.

**4** Press the **[Interrupt]** key again.

The **Interrupt** indicator turns off.

**5** When the display prompts you to do so, place the former set of originals again.

**6** Press the **[Start]** key.

### Note

- The previous copy job's settings are restored and the machine continues copying from where it left off.

---

When the machine continues copying

**1** Place the originals you want to copy.

**2** Press the **[Start]** key.

The machine stops the previous job and starts copying the new originals.

**3** When copying is complete, remove originals and copies.

**4** Press the **[Interrupt]** key again.

The **Interrupt** indicator goes out.

The previous copy job's settings are restored and the machine continues copying from where it left off.

## Left Original Beeper

The beeper sounds and an error message is displayed if you leave originals on the exposure glass after copying.

### Note


- See p.114 "Tone: Original remains".

## Job Preset

You can make settings for the next copy job while copying is in progress.

If a long copy job is in progress and you do not want to wait for it to finish, you can use this function to make settings for the next copy job in advance. When the current copy job finishes, the next job begins automatically.

- 1** Press **[Next Job]** when "Copying" is displayed.

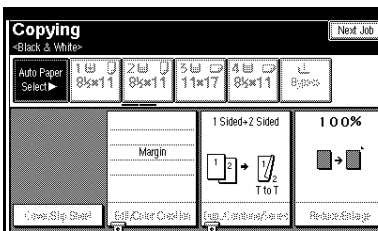

- 2** Make settings for the next copy job.

- 3** Place the originals in the ADF, and then press the **[Start]** key.

All originals are scanned.

- 4** Press **[To "Printing"]**.

Returns to the initial copy display.

After the current copy job, the next job starts automatically.

### Note

- You can switch the display to the current copy job by pressing **[To "Printing"]**. You can switch the display to the preset job by pressing **[To "Reserving"]**.

# Copying from the Bypass Tray

2

Use the bypass tray to copy onto special paper such as OHP transparencies, thick paper, thin paper, and copy paper that cannot be loaded in the paper trays.

### Preparation

When copying from the bypass tray, select **[1 Sided]** for copying in **[Dup./Combine/Series]** (for example **[1 Sided]** → **[1 Sided]**).

### Note

- ❑ The machine can automatically detect the following sizes as standard size copy paper:


Metric version	A3, A4, A5, B4 JIS, B5 JIS, B6 JIS
Inch version	11" × 17", 8 <sup>1</sup> / <sub>2</sub> " × 11", 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "

- ❑ Select the paper size when making horizontal copies.
- ❑ If you use non-standard size copy paper or special paper, you should input its vertical and horizontal dimensions directly. See p.17 "Placing custom size originals". The sizes you can input are as follows:

Metric version	<ul style="list-style-type: none"> <li>• Vertical: 90.0 – 305.0 mm</li> <li>• Horizontal: 148.0 – 457.2 mm</li> </ul>
Inch version	<ul style="list-style-type: none"> <li>• Vertical: 3.55" – 12.00"</li> <li>• Horizontal: 5.83" – 18.00"</li> </ul>


- ❑ When copying onto OHP transparencies or paper heavier than 128 g/m<sup>2</sup> (about 34 lb.), you need to specify the paper type. See p.24 "When copying onto OHP Transparencies or Thick Paper".
- ❑ You must specify the paper size when using paper (tracing paper, etc.) of less than 59g/m<sup>2</sup> thickness.
- ❑ The maximum number of sheets you can load at one time depends on paper type. The maximum number of sheets should not exceed the upper limit.
- ❑ Some kinds of envelopes might cause misfeed and wrinkle. If this happens, push down the fusing unit's green lever. See p.26 "When copying onto envelopes". Also, be sure to place the front face of the envelope downward.
- ❑ Paper of 433 mm in length, or larger, is likely to jam, crease, or not feed in properly.

## **1** Open the bypass tray.

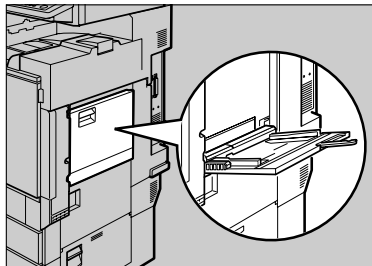

ZK0VH120J

- Insert the paper with the side you want to copy facing up until you hear the beep, and align the paper guide to the paper size.

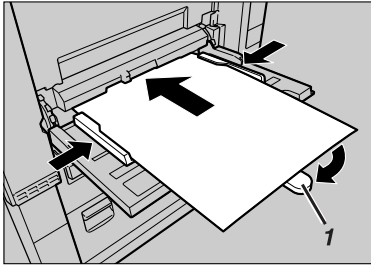

ZKXH130J

1: Extender

### ⚠ Important

- ❑ If the guides are not flush against the copy paper, image skewing or misfeeds might occur.

### 📝 Note

- ❑ Do not stack paper over the limit mark, if you do image skewing or misfeeds might occur.
- ❑ Swing out the extender to support paper sizes larger than A4, 8<sup>1</sup>/<sub>2</sub>" × 11" .
- ❑ Fan paper to get air between the sheets and avoid multi-sheet feeds.

- Select the paper type and size.

### 📝 Note


- ❑ When copying onto OHP transparencies or thick paper, see p.24 "When copying onto OHP Transparencies or Thick Paper".
- ❑ When copying on the back side of paper, see p.25 "When Copying on the Back Side of the Paper".

## When copying onto standard size paper

- Press the [#] key.

The "Bypass Tray Paper" screen is displayed.

- Press [Select Size].

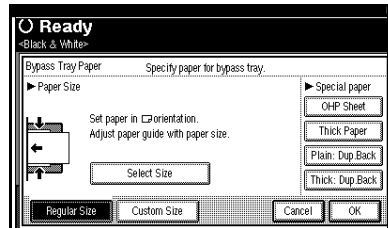


- Select the paper size.

- Press [OK] twice.

## When copying onto custom size paper

- Press the [#] key.

- Press [Custom Size].

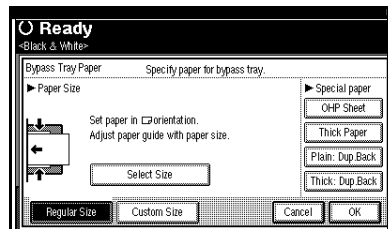


- Enter the vertical size of the paper using the number keys, and then press [#].

- 4 Enter the horizontal size of the paper using the number keys, and then press [#].

**Note**

- If [Horiz] is not highlighted, press [Horiz].
- To register the custom size entered, press [Program], and then press [Exit].

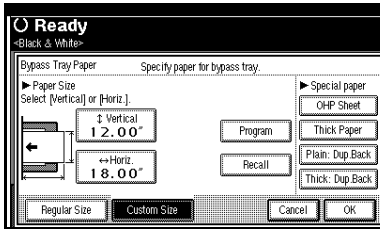

- 5 Press [OK].

- 4 Place the originals, and then press the [Start] key.

**Note**

- When the Sort function is set, press the [#] key after all originals have been scanned.

- 5 When your copy job is finished, press the [Clear Modes] key to clear the settings.

## When copying onto OHP Transparencies or Thick Paper

To make copies onto OHP transparencies or thick paper, you need to specify the paper type and size. See p.23 “When copying onto standard size paper”, p.23 “When copying onto custom size paper”.

**Important**

- We recommend you use OHP transparencies made by this manufacturer.

**Note**

- Paper will be delivered to external tray when copying onto OHP transparencies or thick paper from the bypass tray, even if you have specified not to use the external tray as the output tray.

- 1 Open the bypass tray, and then adjust the guides to the paper size.


- 2 Gently insert the OHP transparencies or thick paper face up until the beeper sounds.

**Important**

- When copying onto OHP transparencies, make sure that the cut positions are set properly.
- To avoid paper misfeeds, fan the paper before loading it in the tray.

- 3 Press the [#] key.

**4** Select [OHP Sheet] or [Thick Paper].

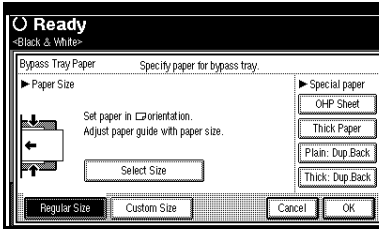

**5** Select the paper size.

**6** Press [OK] twice.

**7** Place the originals, and then press the [Start] key.

**Important**

- When copying onto OHP transparencies, remove copied sheets one by one.

**8** When your copy job is finished, press the [Clear Modes] key to clear the settings.

## When Copying on the Back Side of the Paper

Using the bypass tray, you can make copies on the back of paper which has already been copied on the other side.

**Note**

- Do not use paper that has already been copied onto by other equipment.
- Copies made on the back side of the paper should be originals with very little image area, such as text originals.
- If the paper is curled, straighten it out, and then insert it. If the paper is not straightened out, it can cause paper jams.

**Original and paper orientations**

Pay attention to the orientation of paper and originals.

**Top to top**

Orientation of placing originals	Placing originals on the Bypass Tray	Orientation of copying
<p>Exposure glass</p>		
<p>Optional document feeder (ADF)</p>		
<p>Exposure glass</p>		
<p>Optional document feeder (ADF)</p>		

GCMR703E


◆ Top to bottom

Orientation of placing originals	Placing originals on the Bypass Tray	Orientation of copying
<p>Exposure glass</p>		
<p>Optional document feeder (ADF)</p>		
<p>Exposure glass</p>		
<p>Optional document feeder (ADF)</p>		

GCMRY04E

2

- 1 Open the bypass tray, and then adjust the guides to the paper size.
- 2 Gently insert the copied paper with the side you want to copy face up until the beeper sounds.
- 3 Press the [#] key.
- 4 Select the paper size.
- 5 Select [Plain: Dup.Back] or [Thick: Dup.Back].

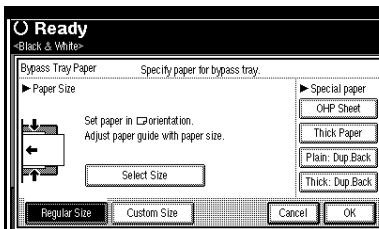


- 6 Press [OK] twice.
- 7 Place the originals, and then press the [Start] key.

## When copying onto envelopes

**Note**

- When placing an original on the exposure glass, place the original with the bottom line aligned to the left scale.
- When placing originals in the ADF, place the originals with the bottom line inserted in the ADF.
- When inserting envelopes, be sure to unfold the flaps and position them opposite to the paper feed direction.

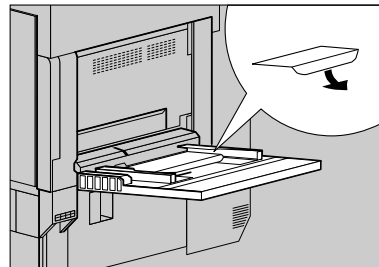

A4E014S

**Reference**

For more information about supported size of envelope, see "Recommended Paper Sizes and Types", *General Settings Guide*.

- 1 Open the bypass tray, and then insert the envelopes with the side you want to copy face up until the beeper sounds.
- 2 Align the paper guide to the envelope side.
- 3 Press the [#] key.
- 4 Select the paper size, and then select [Thick Paper] for the paper type.
- 5 Press [OK].




- 6** Place the originals, and then press the **【Start】** key.
- 7** When your copy job is finished, press the **【Clear Modes】** key to clear the settings.

## Making A3, 11" × 17" Full Bleed Copies

You can make A3, 11" × 17" full bleed copies with 12" × 18" paper. This is useful for making A3, 11" × 17" size copies with a colored background (e.g. catalogues).

2

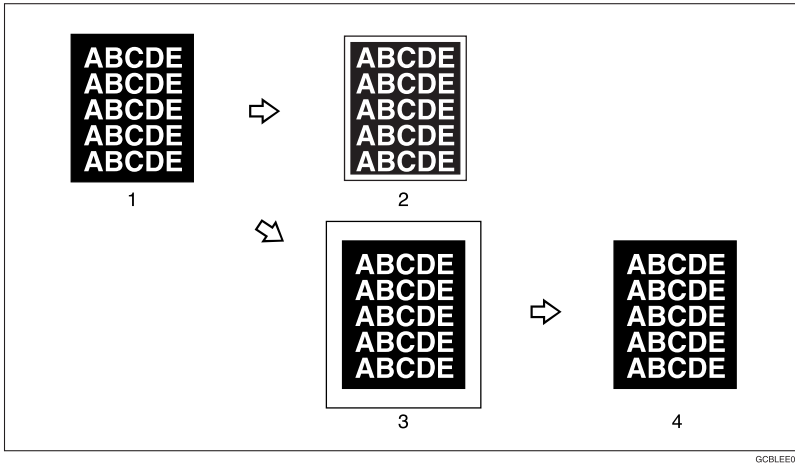

**1. A3, 11" × 17" size Original**

**2. In standard copy mode, margins appear on copies**

**3. 12" × 18" Full Bleed Copy**

**4. Cut around the margins to produce a full image**

**Note**

- You can use this function with 12" × 18" paper.
- When A3, 11" × 17" full bleed copying is made, the original image is copied onto the center.
- You can only use this function with the bypass tray.

# Color Functions

## Selecting a Color Mode

Select a Color mode that best suits your originals and copying requirements.

### Reference

For color images, see p.iii “What You Can Do with This Machine <Color Functions/Color Adjustments>”

The following basic functions are explained in this section.

### ❖ Auto Color Selection

Judges the color of the original automatically, and copies either in full color or black/white.

### ❖ Full Color Copy

Copies by overlaying yellow, magenta, cyan, and black.

### ❖ Black/White Copy

Copies in black regardless of the color of the original.

### ❖ Single Color Copy

Copies in one designated color.

### Note

- Yellow, magenta, and cyan will be copied with one toner color, but beige, orange, red, light green, pink, green, marine blue, blue and purple uses 2 toner colors to copy.

### ❖ Two Color Copy

- Two Color Copy (Normal)  
Copies black and other parts in two specified colors.

### Note


- You can select from basic colors and registered colors.

- Two Color Copy (Red & Black)  
Copies the red part in red, and all the other parts in black or white.

### Note

- When the width of the color is set to “Wider”, colors close to orange and purple will be recognized as red. This adjustment will be valid in “Erase Color” and “Convert Colors”. See p.125 “Color Sensitivity”


### 1 Select the type of color key.

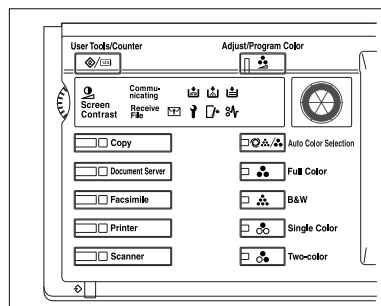

ZGHS013N

When the **[Single Color]** key is selected

**1** Select designation method of color ( **[Basic Color]**, **[User Color]** ).

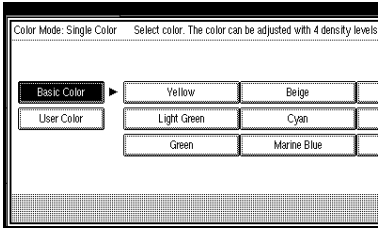


**2** Select the color, and then press **[OK]**.

**Note**

- When copied using the registered color, the original will be copied lighter than the registered color.
- Press **[Lighter]** or **[Darker]**, and you can adjust the density in 4 steps.

When the **[Two-color]** key is selected

**1** Select either **[Two-color]** or **[Red & Black]**.

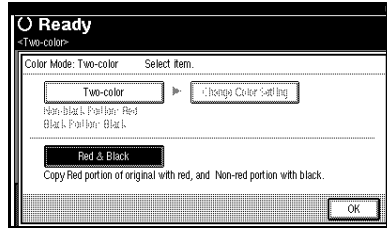

When **[Red & Black]** is pressed


**1** Press **[OK]**.

When **[Two-color]** is pressed

- 1** Press **[Change Color Setting]**.
- 2** Press **[Black Portion]**, and then select the color to be replaced by black.

**Note**

- When selecting a color from the user colors, press **[User Color]**.
- 3** Press **[Non-black Portion]**, and then select the color to replace the black color of the original.

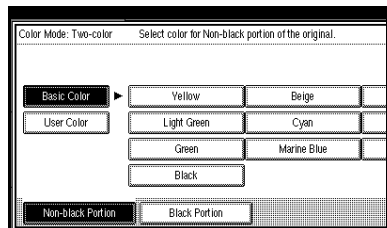

**4** Press **[OK]** twice.

## Convert Colors


Copies by changing the color in the original to a different color.

### Note

- It is possible to specify up to 4 colors.
- The width of the color to be converted can be adjusted in 5 levels. If the color width is set to "Wider" and red has been specified, colors which are close to magenta or orange, will also be converted. The color width can be adjusted in the "User Tools". See p.125 "Color Sensitivity"

**1** Press the **[Full Color]** key.


**2** Press **[Edit/Color Creation]**.

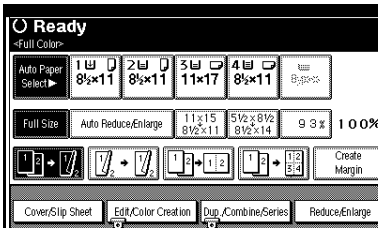

**3** Press **[Color Creation]**.

**4** Press **[Convert Color]**.

**5** Select any one item from **[Conversion 1]** to **[Conversion 4]**.

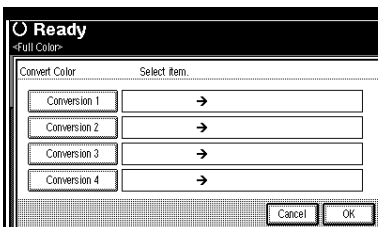

**6** Select the color to be converted.

**7** Select the new color to be converted.

### Note

- You can adjust the density of each color in 4 levels.
- When you want to change the converted color, press from **[Conversion 1]** to **[Conversion 4]** and make the selection again.
- When changing between more than two colors, repeat steps **5** to **7**.

### Selecting from [User Color]

**1** Press **[User Color]**.

**2** Select from the registered colors, then press **[OK]**.

**8** After selecting all the colors to be converted, press **[OK]**.

**9** Press **[OK]** 3 times.

**10** Place the originals, and then press the **[Start]** key.


## Erase Color

You can erase a certain color in the image of the original.

### Note

- It is possible to select up to 4 colors.
- The width of the color to be deleted can be adjusted in 5 levels. If the color width is set to "Wider" and red has been specified, colors which are close to magenta or orange, will also be deleted. The color width can be adjusted in the "User Tools". See p.125 "Color Sensitivity"

### 1 Press [Edit/Color Creation].

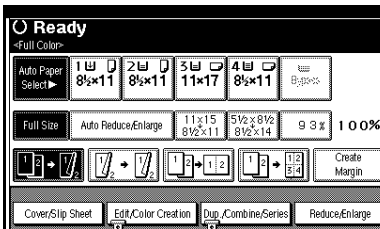

### 2 Press [Color Creation].

### 3 Press [Erase Color].

### 4 Select the color to be erased.

### Note

- You can cancel the selection by pressing the selected (highlighted) key.
- You can erase 4 colors at once.

### 5 Press [OK] after selecting all the colors to be deleted.

### 6 Press [OK] twice.

### 7 Place the originals, and then press the [Start] key.


## Color Background

Copies by adding a color in the whole page.

### Note

- Since the Color Background function overprints the entire original, the color of the image may change.

### 1 Press [Edit/Color Creation].

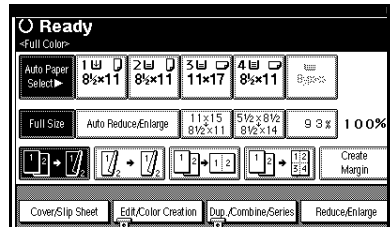

### 2 Press [Color Creation].

### 3 Press [Color Background].

### 4 Select the background color, then press [OK].

### Note

- You can adjust the density of each color in 4 levels.
- You can cancel the selection by pressing the selected (highlighted) key.

### Selecting from the [User Color]

#### 1 Press [User Color].

#### 2 Select a registered color, and then press [OK].

### 5 Press [OK] twice.

### 6 Place the originals, and then press the [Start] key.

# Copier Functions


## Adjusting Copy Image Density

There are three types of adjustment available:

- ❖ **Auto Image Density**  
The machine automatically adjusts image density.
- ❖ **Manual image density**  
You can adjust the general density of the original in nine increments.
- ❖ **Combined auto and manual image density**  
Use when copying originals with dirty backgrounds (such as newspapers). You can adjust foreground density while leaving the background unchanged.


### Auto image density

- 1** Make sure [Auto Image Density] is selected.

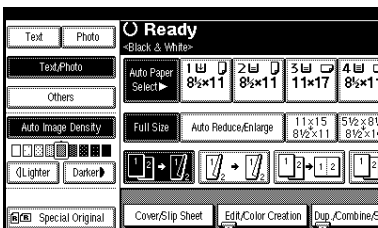


### Manual image density

- 1** Press [Auto Image Density] to cancel it.
- 2** Press [Lighter] or [Darker] to adjust image density.

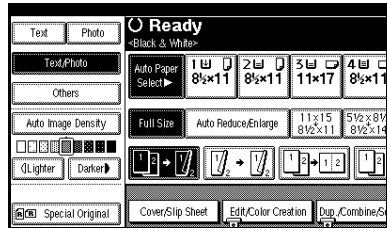

### Combined auto and manual image density

- 1** Make sure [Auto Image Density] is selected.
- 2** Press [Lighter] or [Darker] to adjust image density.

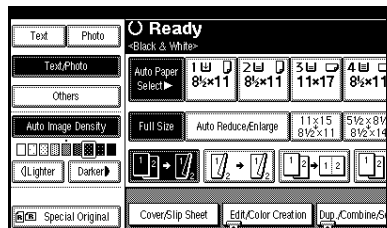

## Selecting the Original Type

Select one of the following six types to match originals:

### ❖ Text

When originals contain only text (no pictures).

### ❖ Text/Photo

When originals contain photographs or pictures alongside the text.

### ❖ Photo

When you need to reproduce delicate tones of photographs and pictures.

### Note

If you select “Text/Photo” or “Photo” as the original type, select the photo type from among the three options below:

- Glossy Photo  
Use when copying developed photographs.
- Printed Photo  
Use when copying photographs or pictures that are printed on paper (e.g. magazines).
- Copied Photo  
Use when copying copies or originals generated by printers.

### ❖ Generation Copy

When originals are copies (generation copies), the copy image can be reproduced sharply and clearly.

### ❖ Pale

When you need to reproduce originals that have lighter lines in pencil, or faintly copied slips. Faint lines are copied with greater clarity.

### ❖ Map


You can configure the machine to scan Map originals. If “Original Type Display” has been set to “Display” (from Copier/Document Server Features on the User Tools menu), select “Map” from the “Others” menu. If “Original Type Display” has been set to “Hide”, select “Map” from the “Original Type” menu.

### Reference

p.112 “Original Type Display”

p.112 “Original Photo Type Priority”

### 1 Press the appropriate key to select the original type.

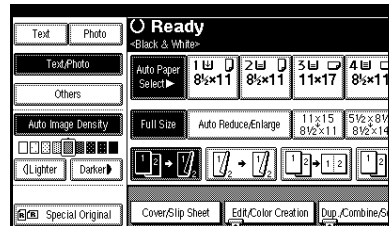

If the original type keys are not displayed

### 1 Press [Original Type].

### 2 Select the original type, and then press [OK].



## Selecting Copy Paper

There are two ways to select copy paper:

### ❖ Auto Paper Select

The machine selects a suitable size of copy paper automatically based on original size and reproduction ratio.

### ❖ Manual Paper Select

Choose the paper you want to copy onto from a paper tray, bypass tray, or Large Capacity Tray (LCT).

#### Reference

p.12 "Sizes difficult to detect"

p.112 "Paper Display"

#### Note

- See the following table for copy paper sizes and orientations that can be used with Auto Paper Select (when copying at a ratio of 100%).

#### ❖ Metric version

Where original is placed	Paper size and orientation
Exposure glass	A3, B4 JIS, A4, B5 JIS
ADF	A3, B4 JIS, A4, B5 JIS, A5, 11" × 17", 8 1/2" × 11"


#### ❖ Inch version

Where original is placed	Paper size and orientation
Exposure glass	11" × 17", 8 1/2" × 14", 8 1/2" × 11"
ADF	A3, A4, 11" × 17", 8 1/2" × 14", 8 1/2" × 11"

- Only the paper trays set to **[No display]** or **[Recycled paper]** in Paper Type and also set to **[Yes]** in Apply Auto Paper Select can be selected for the Auto Paper Select function. See "Paper Type: Tray 1–4" in "Tray Paper Settings", *General Settings Guide*.
- Auto Paper Select cannot be used if all the paper trays are set to other than **[No display]** or **[Recycled paper]**.

## Auto Paper Select

**1** Make sure [Auto Paper Select] is selected.

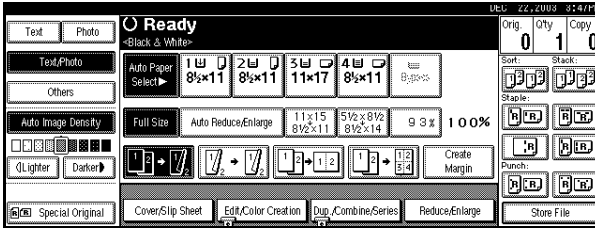


**Note**

- ❑ Trays with a key mark are not automatically selected. See “Paper Type” in “Tray Paper Settings”, *General Settings Guide*.

## Manual Paper Select

**1** Select the paper tray, bypass tray or LCT.

The selected paper tray is highlighted.

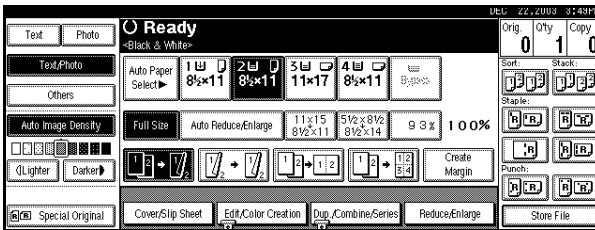



**Reference**


p.22 “Copying from the Bypass Tray”

If the paper type keys are not displayed


- 1** Press [Auto Paper Select].
- 2** Select the paper type.





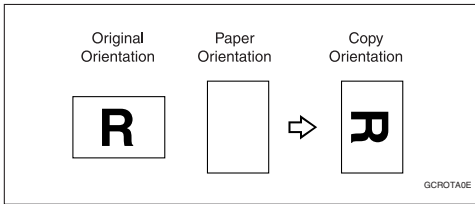

## Rotated copy

If the orientation of the original ( or ) is different to that of the paper you are copying onto, this function rotates the original image by 90°, fitting it onto the copy paper. This function works when [Auto Paper Select] or [Auto Reduce/Enlarge] is selected. See p.35 “Auto Paper Select”, p.40 “Auto Reduce/Enlarge”.



### Note


- The default setting for Auto Tray Switching is [With Image Rotation]. You cannot use the Rotated Copy function if this setting is changed to [Without Image Rotation] or [Off]. See p.113 “Auto Tray Switching”.
- You cannot use the Rotated Copy function when enlarging onto A3, B4 JIS or 11" × 17", 8<sup>1</sup>/<sub>2</sub>" × 14" size paper. To do this, place the original in the  orientation.

	Original size and orientation		Copy paper size and orientation
You cannot rotate:	8 <sup>1</sup> / <sub>2</sub> " × 11" or 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> " 	 GCROTAGE	When enlarging to → 8 <sup>1</sup> / <sub>2</sub> " × 14" or 11" × 17"  GCROTAGE
However, you can use:	8 <sup>1</sup> / <sub>2</sub> " × 11" or 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> " 	 GCROTAGE	When enlarging to → 8 <sup>1</sup> / <sub>2</sub> " × 14" or 11" × 17"  GCROTAGE

- When using the 2 tray finisher, you cannot use the Rotated Copy function when [Left 2], [Top 2] or [Punch] is selected for stapling. See p.47 “Staple”, p.51 “Punch”.
- When using the booklet finisher, you cannot use the Rotated Copy function when [Left 2], [Top 2] or [Saddle Stitch] is selected for stapling.


## Preset Reduce/Enlarge

You can select a preset ratio for copying.

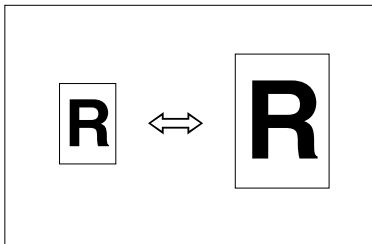

### ◆ Base Point

The base point of Reduce/Enlarge differs depending on how the original was scanned. When the original is placed on the exposure glass, the upper left corner is the base point. When placed in the ADF, the bottom left corner is the base point.

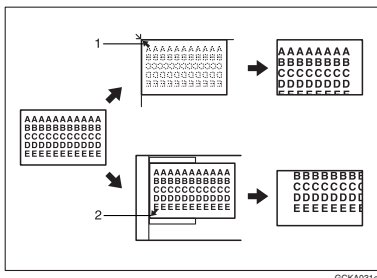


**1.** Base point when placed on the exposure glass.

**2.** Base point when placed in the ADF.

### 🔍 Reference

- Related default settings:
- p.116 "Shortcut R/E"
- p.117 "R/E Priority"

### 1 Press [Reduce/Enlarge].

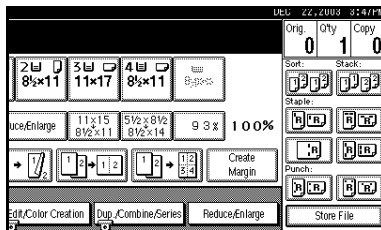

### 📌 Note

- ☐ To select a preset ratio on the initial display, press the shortcut reduce/enlarge key, and then proceed to step 4.

### 2 Press [Enlarge] or [Reduce].

### 3 Select a ratio, and then press [OK].

### 4 Place originals, and then press the [Start] key.


### 💡 Create margin function

Use Create Margin to reduce the image to 93% of original size using the center as reference. You can assign this function to a shortcut key on the initial display. By combining it with the Reduce/Enlarge function, you can also provide the Reduce/Enlarge copy with a margin.

### 🔍 Reference

- Related default settings:
- p.114 "Copy Function Key: F1-F5"
- p.117 "Ratio for Create Margin"


- 1 Press **[Create Margin]** on the initial display.

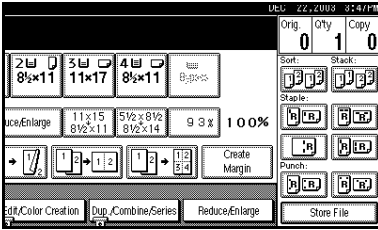

- 2 If you do not want to combine it with the Reduce/Enlarge function, place originals, and then press the **[Start]** key.

## Zoom


You can change the reproduction ratio in increments of 1%.

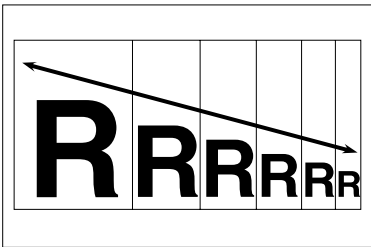

### Note

- You can select a preset ratio close to the ratio using **[Reduce]** or **[Enlarge]**, and then adjust it further, using **[+]** or **[-]**.

- 1 Press **[Reduce/Enlarge]**.

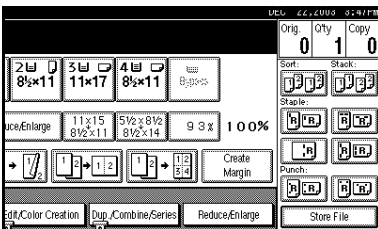

- 2 Enter the ratio.

To select the ratio using **[+]** and **[-]**

- 1 Select a preset ratio close to the ratio using **[Reduce]** or **[Enlarge]**.
- 2 Adjust the ratio further, using **[+]** or **[-]**.

### Note

- Pressing **[+]** or **[-]** changes the ratio in increments of 1%. Pressing and holding down **[+]** or **[-]** changes it in increments of 10%.
- If you have incorrectly entered the ratio, readjust it using **[+]** or **[-]**.


To enter the ratio using the number keys

- 1 Press **[Mag. Ratio]**.
  - 2 Enter the ratio using the number keys.
  - 3 Press **[#]**.
  - 4 Press **[OK]**.
- 3 Place the originals, and then press the **[Start]** key.

2

## Auto Reduce/Enlarge

The machine can choose an appropriate reproduction ratio based on the paper and original sizes you select.

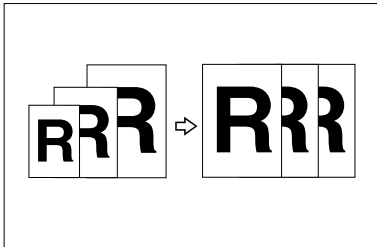

### Note

- You cannot use the bypass tray with this function.
- When using Auto Reduce/Enlarge, see the following table for original sizes and orientations you can use:

#### ◆ Metric version

Where original is placed	Original size and orientation
Exposure glass	A3 <input type="checkbox"/> , B4 JIS <input type="checkbox"/> , A4 <input type="checkbox"/> <input type="checkbox"/> , B5 JIS <input type="checkbox"/> <input type="checkbox"/>
ADF	A3 <input type="checkbox"/> , B4 JIS <input type="checkbox"/> , A4 <input type="checkbox"/> <input type="checkbox"/> , B5 JIS <input type="checkbox"/> <input type="checkbox"/> , A5 <input type="checkbox"/> <input type="checkbox"/> , B6 JIS <input type="checkbox"/> <input type="checkbox"/> , 11"×17" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> "×11" <input type="checkbox"/> <input type="checkbox"/>

#### ◆ Inch version

Where original is placed	Original size and orientation
Exposure glass	11"×17" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> "×14" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> "×11" <input type="checkbox"/> <input type="checkbox"/>
ADF	A3 <input type="checkbox"/> , A4 <input type="checkbox"/> <input type="checkbox"/> , 11" ×17" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> "×14" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> "×11" <input type="checkbox"/> <input type="checkbox"/> , 5 <sup>1</sup> / <sub>2</sub> "×8 <sup>1</sup> / <sub>2</sub> " <input type="checkbox"/> <input type="checkbox"/> , 10"×14" <input type="checkbox"/> , 7 <sup>1</sup> / <sub>4</sub> "× 10 <sup>1</sup> / <sub>2</sub> " <input type="checkbox"/> <input type="checkbox"/>


- You cannot use the Rotated Copy function when enlarging to B4 JIS, A3 or 8<sup>1</sup>/<sub>2</sub>"×14", 11"×17". When enlarging to B4 JIS, A3 or 8<sup>1</sup>/<sub>2</sub>"×14", 11"×17" size copy paper, place the original in the  orientation.

### Reference

p.12 "Sizes difficult to detect"

You can place originals of different sizes in the ADF at the same time. See p.17 "Placing originals of mixed sizes".

- 1** Press [Auto Reduce/Enlarge].

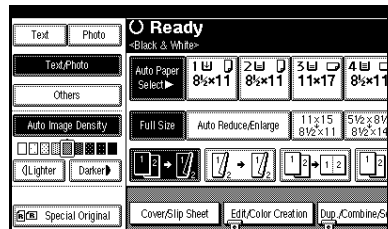


- 2** Select the paper tray.

- 3** Place the originals, and then press the [Start] key.

## Size Magnification


You can calculate an enlargement or reduction ratio based on the lengths of the original and copy.

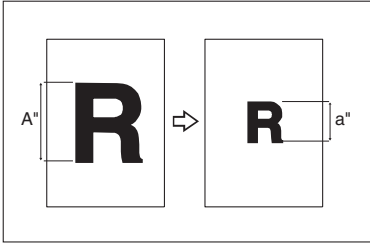

### Note

- Measure and specify the lengths of the original and copy by comparing "A" with "a".

**1** Press **[Reduce/Enlarge]**.

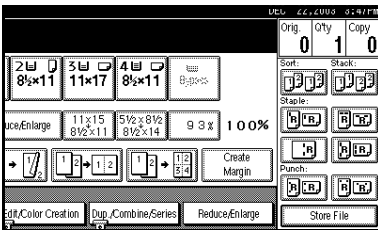

**2** Press **[Specifd. Ratio]**.

**3** Make sure **[Size Magnificatn]** is highlighted.

**4** Enter the length of the original using the number keys, and then press **[#]**.

### Note

- You can enter sizes within the following ranges:

Metric version	1–999 mm (increments of 1 mm)
Inch version	0.1"–99.9" (increments of 0.1")

**5** Enter the length of the copy using the number keys, and then press **[#]**.

### Note


- To change the length after pressing **[#]**, select **[Original]** or **[Copy]**, and then enter the length.

**6** Press **[OK]** twice.

**7** Place the originals, and then press the **[Start]** key.

## Directional Magnification (%)

Copies can be reduced or enlarged at different reproduction ratios, horizontally and vertically.

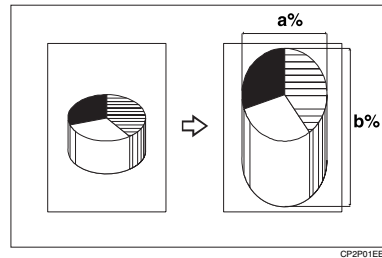


a: Horizontal ratio

b: Vertical ratio

### Note

- You can also select a preset ratio close to the ratio using **[Reduce]** or **[Enlarge]**, and then adjust it further, using **[+]** or **[-]**.

**1** Press **[Reduce/Enlarge]**.

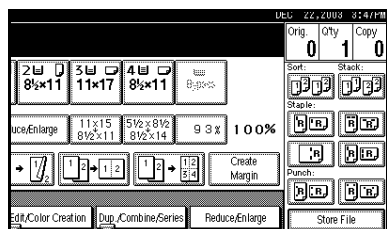

**2** Press [Specifd. Ratio].

**3** Press [Direct. Mag.%].

To enter the ratio using the number keys

- 1** Press [Horizontal].
- 2** Enter the ratio using the number keys, and then press [#].
- 3** Press [Vertical].
- 4** Enter the ratio using the number keys, and then press [#].
- 5** Press [OK].

To specify a ratio using [+ ] and [- ]

- 1** Press [With +-].
- 2** Press [Horizontal].
- 3** Adjust the ratio using [+ ] or [- ].

 **Note**

- Pressing [+ ] or [- ] changes the ratio in increments of 1%. Pressing and holding down [+ ] or [- ] changes it in increments of 10%.
- If you have incorrectly entered the ratio, readjust it using [+ ] or [- ].


- 4** Press [Vertical].
- 5** Adjust the ratio using [+ ] or [- ].
- 6** Press [OK].

**4** Press [OK].

**5** Place the originals, and then press the [Start] key.

## Directional Size Magnification (Inch)

A suitable reproduction ratio is automatically selected when you enter the horizontal and vertical lengths of the original and copy image you require.

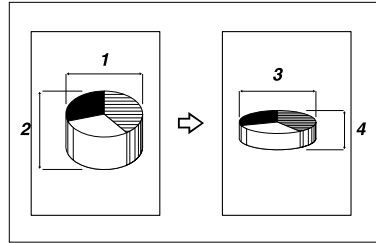

CP2M01EE

- 1.** Horizontal original size
- 2.** Vertical original size
- 3.** Horizontal copy size
- 4.** Vertical copy size

 **Preparation**

Specify the vertical and horizontal size of the original and that of the copy, as shown.


 **Note**

- You can enter sizes within the following ranges:

Metric version	Vertical: 1-999 mm (increments of 1 mm) Horizontal: 1-999 mm (increments of 1 mm)
Inch version	0.1"-99.9" (increments of 0.1")



## 1 Press [Reduce/Enlarge].

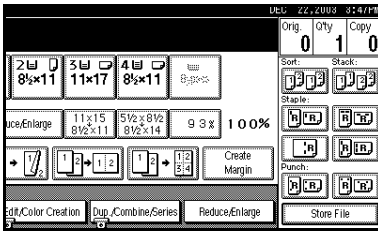

## 2 Press [Specifd. Ratio].

## 3 Press [Dirc. Size Mag In].

## 4 Enter the horizontal size of the original using the number keys, and then press [#].

## 5 Enter the horizontal size of the copy using the number keys, and then press [#].

## 6 Enter the vertical size of the original using the number keys, and then press [#].

## 7 Enter the vertical size of the copy using the number keys, and then press [#].

### Note

- To change the length, press the key you want to change, and then enter the new value.

## 8 Press [OK] twice.

## 9 Place the originals, and then press the [Start] key.

## Sort

The machine can scan originals into memory and automatically sort copies.

### Reference

Related default settings:

p.124 "Select Stack Function"


p.124 "Memory Full Auto Scan Restart"

p.124 "Rotate Sort: Auto Paper Continue"

p.113 "Auto Tray Switching"


### Sort

Copies are assembled as sequentially-ordered sets.

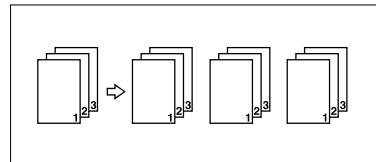

### Rotate Sort

Every other copy set is rotated by 90° and delivered to the copy tray.

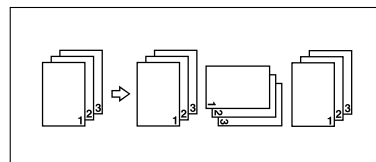


### Note

- To use the Rotate Sort function, two paper trays with paper of the same size and type, but different orientation (90°), are required. See "Paper Type: Tray1-4", *General Settings Guide*.
- You cannot use the bypass tray with this function.

◆ **Shift Sort**

- When a finisher is installed:  
Each time the copies of one set or a job are delivered, the next copy is shifted to separate each set or job.

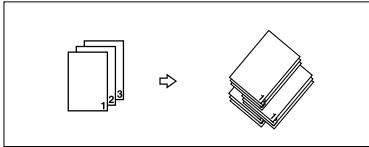


**Note**


- You cannot use the bypass tray with this function.

**1** Press **[Sort]** or **[Rotate Sort]**.


◆ **When a finisher is not installed**

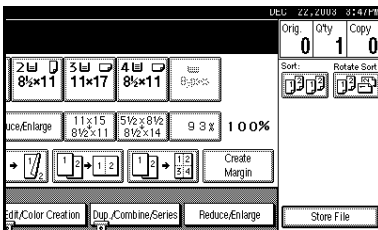

◆ **When the 2 tray finisher is installed**

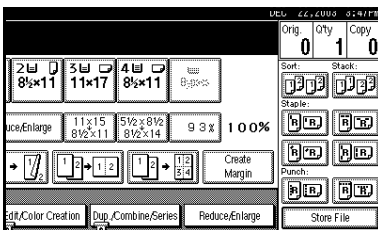

◆ **When the booklet finisher is installed**

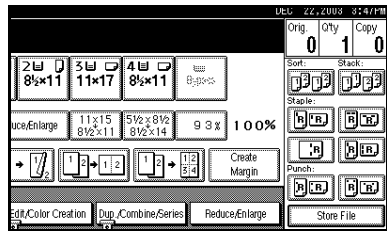

**Note**

- When the optional finisher is installed, use the User Tools to display **[Rotate Sort]**. See p.124 “Select Stack Function”.

**2** Enter the number of copy sets using the number keys.

**Limitation**

- The maximum number of sets is 999.

**Note**

- To confirm the type of finishing, press the **[Sample Copy]** key. See p.45 “Sample copy”.

**3** Place the originals.

**Note**

- When placing originals on the exposure glass, start with the first page to be copied. When placing originals in the ADF, set the first page on top.
- When placing originals on the exposure glass or in the ADF using the Batch function, press the **[#]** key after all the originals have been scanned.

**4** Press the **[Start]** key.

## Sample copy


You can use this function to check copy settings before making a long copy run.

### Note

- ❑ This function can be used only when the Sort function is turned on.

**1** Select Sort and any other necessary functions, and then place the originals.

**2** Press the **[Sample Copy]** key.

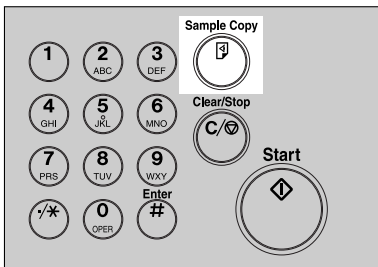

ZGH5030N

One copy set is delivered as a sample.

**3** If the sample is acceptable, press **[Print]**.

The specified number of copies is made, minus one for the proof copy.

### Note

- ❑ If you press **[Suspend]** after checking the results, return to step **1** to adjust the copy settings as necessary. You can change the settings for Staple, Duplex, Copy Orientation, Stamp, Margin Adjust, and Cover/Slip Sheet. However, depending on the combination of functions, you may not be able to change certain settings.

## Changing the number of sets


You can change the number of copy sets during copying.

### Note

- ❑ This function can only be used when the Sort function is turned on.

**1** While "Copying" is displayed, press the **[Clear/Stop]** key.

**2** Press **[Change Quantity]**.

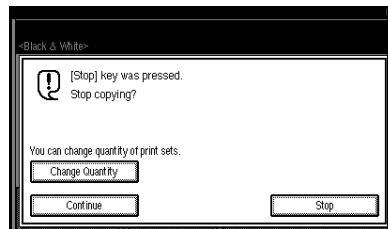

**3** Enter the number of copy sets using the number keys, and then press the **[#]** key.

### Note

- ❑ The number of sets you can enter differs depending on when the **[Clear/Stop]** key is pressed.

**4** Press **[Continue]**.


Copying starts again.

## Stack

Copies can be assembled with each page shifted.

### ❖ When a finisher is installed


This function groups together copies of each page in a multi-page original. Every other page stack is shifted for ease of separation.

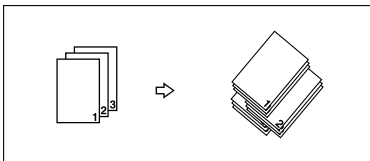

### Note

- You cannot use the bypass tray with this function.

## 1 Press [Stack].

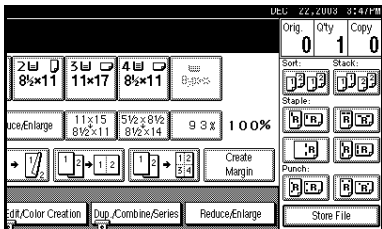

## 2 Enter the number of copies using the number keys.


## 3 Place the originals, and then press the [Start] key.

### Note

- When placing originals on the exposure glass, start with the first page to be copied. When placing originals in the ADF, set the first page on top.
- When placing originals on the exposure glass or in the ADF using the Batch function, press the [#] key after all the originals have been scanned.

## Staple

Individual copy sets can be stapled.

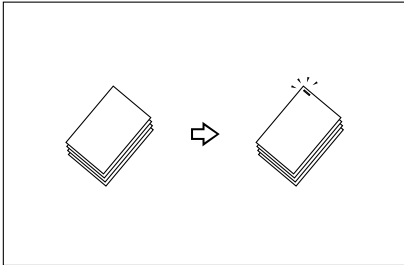

**Note**

- You cannot use the bypass tray with this function.

**Reference**

p.125 "Select Stapling Position"






















### Stapling position and original setting

Place all the originals in an orientation in which they can be read. They will be automatically rotated for copying. When copy paper is identical in size and orientation to the original, staple positions are as follows:










































◆ 2 tray finisher

		Original location			Stapling position *1
			Exposure glass	ADF	
	Top				
	Top Slant				

2

		Original location		Stapling position *1
		Exposure glass	ADF	
	Bottom			
				
	Left 2			*2 
				
	Top 2			
				*2 

◆ Booklet finisher


		Original location			Stapling position <sup>*1</sup>
			Exposure glass	ADF	
	Top				
					
	Bottom				
					
	Left 2				
					
	Top 2				
					
	Saddle Stitch				

<sup>\*1</sup> This table shows the stapling positions, not the orientation of delivery.


<sup>\*2</sup> Not available for A3, B4 JIS or 11" × 17", 8<sup>1</sup>/<sub>2</sub>" × 14" size paper.

**1** Select one of the stapling positions.

◆ 2 tray finisher

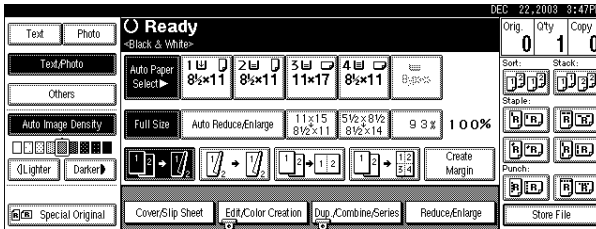

◆ Booklet finisher

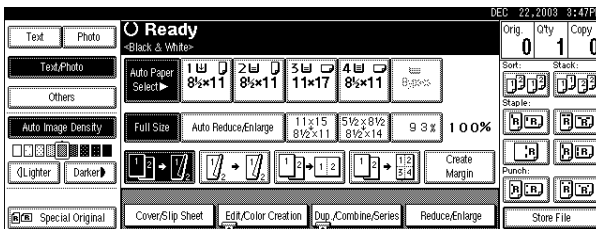

**Note**

- When you select the stapling position, the Sort function is automatically selected.

**Reference**

- p.47 “Stapling position and original setting”
- p.132 “Staple”

**2** Enter the number of copy sets using the number keys.

**3** Place the originals, and then press the **[Start]** key.

**Note**


- When placing originals on the exposure glass, start with the first page to be copied. When placing originals in the ADF, set the first page on top.
- When placing originals on the exposure glass or in the ADF using the Batch function, press the **[#]** key after all the originals have been scanned.



## Punch


You can make punch holes in copies.

### ◆ 2 holes

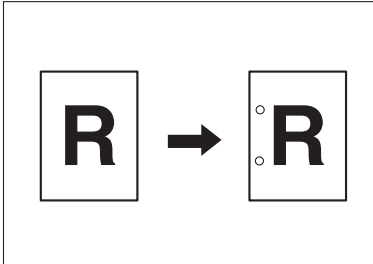


GCPNCH1E

### ◆ 3 holes

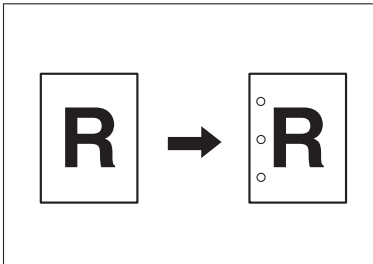

GCPNCH3E

### ◆ 4 holes

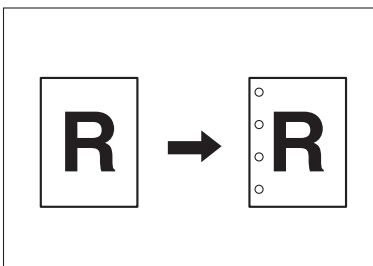

GCPNCH4E

### 📌 Note

- 3 holes is only available with the 2 tray finisher.
- You cannot use the bypass tray with this function.
- The relationship between the orientation in which you place the original and the punch hole positions is as follows:

**Punch hole positions**

❖ **2 tray finisher**

	Original location			Punch hole positions
		Exposure glass	ADF	*1
Standard	2 holes			
	3 holes			
	4 holes			


	Original location			Punch hole positions *1	
		Exposure glass	ADF		
90° Turn	2 holes				
	3 holes				
	4 holes				

◆ Booklet finisher

		Original location		Punch hole positions *1
		Exposure glass	ADF	
Standard	2 holes			
	4 holes			
90° Turn	2 holes			
	4 holes			

\*1 This table shows the punch hole positions, not the orientation of delivery.

**1** Select one of the punch hole positions.

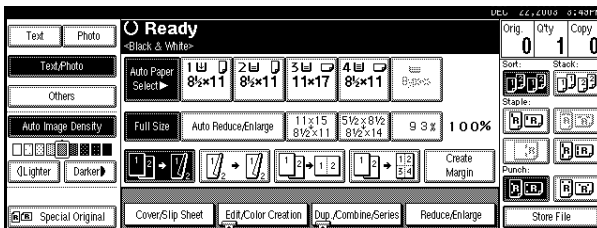

**2** Enter the number of copy sets with the number keys.


**3** Place the originals, and then press the **[Start]** key.

## Duplex

There are three types of duplex copies:


### ◆ 1 Sided→2 Sided

Copies 2 one-sided pages onto a two-sided page.

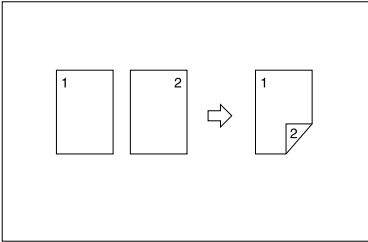


### ◆ 2 Sided→2 Sided

Copies 1 two-sided page onto a two-sided page.

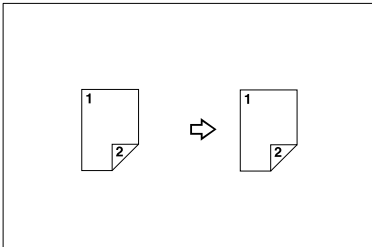











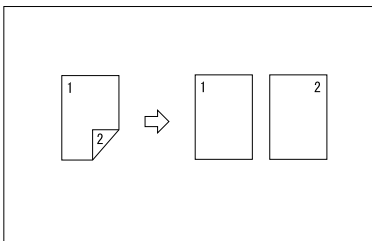

### ◆ 2 Sided→1 Sided

Copies each side of a two-sided original onto two separate pages.



## Original orientation and completed copies

Copy images differ according to the orientation in which you place originals (vertical  or horizontal ).

Original	How to place originals	Copy *1
Vertical 	Standard 	Top to Top 
	90° turn 	Top to Bottom 
Horizontal 	Standard 	Top to Top 
	90° turn 	Top to Bottom 

GCRY01E

\*1 This table shows the orientation of images on the front and back of copies, not the orientation of delivered copies.


### Note

- You cannot use the bypass tray with this function.
- The maximum paper weight that can be used with duplex copying is 60–105 g/m<sup>2</sup>, 16–28 lb.

### Reference

- p.69 "Margin Adjustment"
- Related default settings:
- p.117 "Front Margin: Left/Right"
- p.117 "Back Margin: Left/Right"
- p.117 "Front Margin: Top/Bottom"
- p.117 "Back Margin: Top/Bottom"


**1** Press **[Dup./Combine/Series]**.

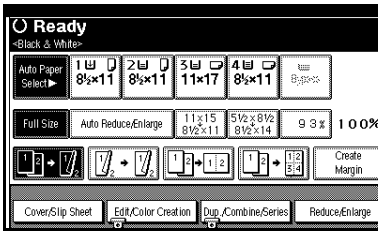

**Note**

- You can also select "1 Sided" or "2 Sided" or "2 Sided to 2 Sided" directly, by pressing the Copy Function Key. If you do this, proceed to step 4.

**2** Select **[1 Sided]** or **[2 Sided]** for **Original**, and then select **[1 Sided]** or **[2 Sided]** for **Copy**.

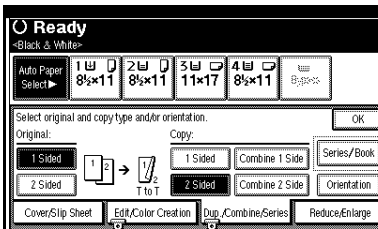

**Note**

- To change the copy orientation, press **[Orientation]**. See p.56 "Originals and copy orientation".

**3** Press **[OK]**.

**4** Place the originals, and then press the **[Start]** key.

**Note**


- When placing originals on the exposure glass, start with the first page to be copied. When placing originals in the ADF, set the first page on top.

- When placing originals on the exposure glass or in the ADF using the Batch function, press the **[#]** key after all the originals have been scanned.

**Originals and copy orientation**


You can select the orientation.

- Top to Top



Duplex1

- Top to Bottom




Duplex2

**Note**

- You can change the default orientation with User Tools. See p.113 "Copy Orientation in Duplex Mode" and p.113 "Original Orientation in Duplex Mode".

**1** Press **[Dup./Combine/Series]**.

**2** Press **[Orientation]**, select the orientation (**Original/Copy**), and then press **[OK]**.

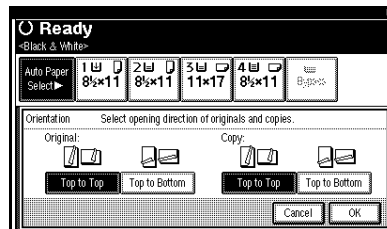


**3** Press **[OK]**.

**4** Place originals, and then press the **[Start]** key.

## 1 Sided Combine

Combine several pages onto one side of a sheet.

- ❖ **1 Sided 2 Pages → Combine 1 Side**  
Copies 2 one-sided originals onto one side of a sheet.

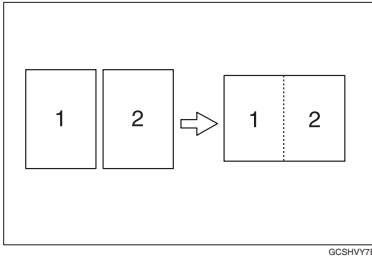

- ❖ **1 Sided 4 Pages → Combine 1 Side**  
Copies 4 one-sided originals onto one side of a sheet.

- ❖ **1 Sided 8 Pages → Combine 1 Side**  
Copies 8 one-sided originals onto one side of a sheet.

- ❖ **2 Sided 1 Page → Combine 1 Side**  
Copies 1 two-sided original onto one side of a sheet.


- ❖ **2 Sided 2 Pages → Combine 1 Side**  
Copies 2 two-sided originals onto one side of a sheet.

- ❖ **2 Sided 4 Pages → Combine 1 Side**  
Copies 4 two-sided originals onto one side of a sheet.


- ❖ **2 Sided 8 Pages → Combine 1 Side**  
Copies 8 two-sided originals onto one side of a sheet.

- ❖ **Orientation of the original and combine image position**

- Open to left originals

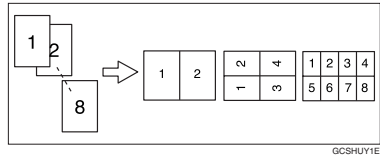

- Open to top originals

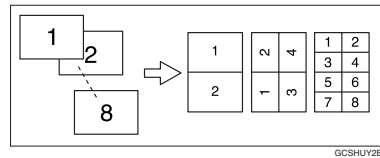


- ❖ **Placing originals (originals placed in the ADF)**

- Originals read from left to right



- Originals read from top to bottom




**Note**

- ❑ You cannot use the bypass tray with this function.

**Reference**

- Related default settings:
- p.118 "Erase Original Shadow in Combine"
- p.119 "Copy Order in Combine"
- p.120 "Separation Line in Combine"


**1** Press [Dup./Combine/Series].

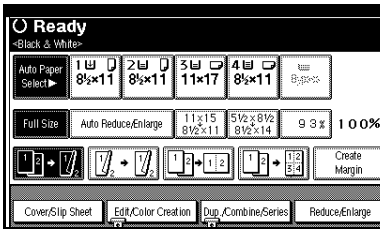

**Note**

- You can select "1 Sided 2 Pages → Combine 1 Side" or "1 Sided 4 Pages → Combine 1 Side" by using Copy Function key. In this case, proceed to step 6.

**2** Press [1 Sided] or [2 Sided] for Original, and then press [Combine 1 Side] for Copy.

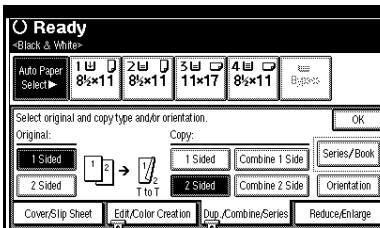

**Reference**

- p.56 "Originals and copy orientation"

**3** Select the number of originals to combine, and then press [OK].

**4** Select the paper size.

**5** Press [OK].


**6** Place the originals, and then press the [Start] key.

**2 Sided Combine**

Combines various pages of originals onto a two-sided sheet.

**1 Sided 4 Pages → Combine 2 Side**


Copies 4 one-sided originals onto a sheet, two pages per side.

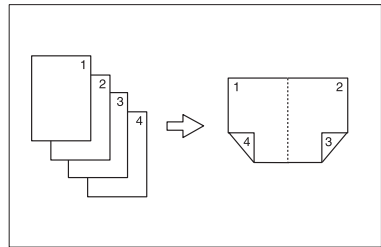

GCSHYVE

**1 Sided 8 Pages → Combine 2 Side**

Copies 8 one-sided originals onto a sheet, four pages per side.

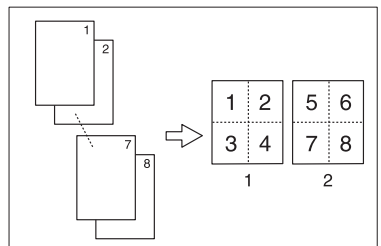


GCSHYVE

1. Front

2. Back




- ◆ **1 Sided 16 Pages → Combine 2 Side**  
Copies 16 one-sided originals onto a sheet, eight pages per side.

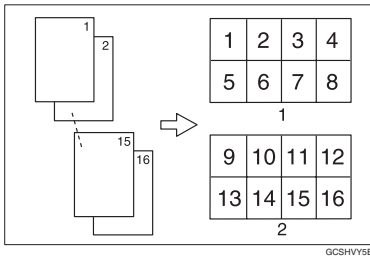


1. Front

2. Back


- ◆ **2 Sided 4 Pages → Combine 2 Side**  
Copies 2 two-sided originals onto a sheet, two pages per side.

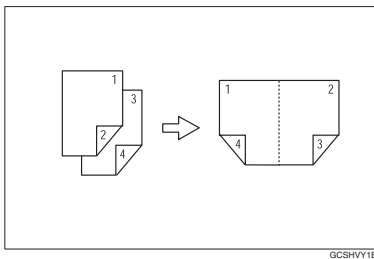

- ◆ **2 Sided 8 Pages → Combine 2 Side**  
Copies 4 two-sided originals onto a sheet, four pages per side.

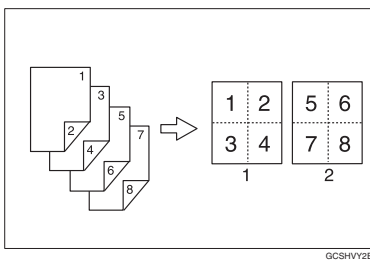

- ◆ **2 Sided 16 Pages → Combine 2 Side**  
Copies 8 two-sided originals onto a sheet, eight pages per side.

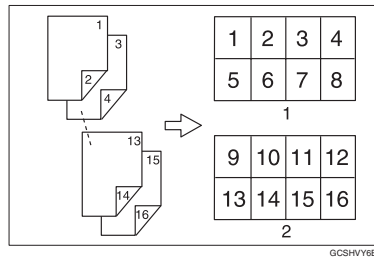

**Note**

- ☐ You cannot use the bypass tray with this function.

**Reference**

Related default settings:


p.57 "Orientation of the original and combine image position"

p.118 "Erase Original Shadow in Combine"


p.119 "Copy Order in Combine"

p.120 "Separation Line in Combine"

- 1 Press [Dup./Combine/Series].

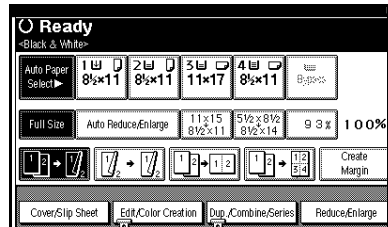

- Press [1 Sided] or [2 Sided] for Original, and then press [Combine 2 Side] for Copy.

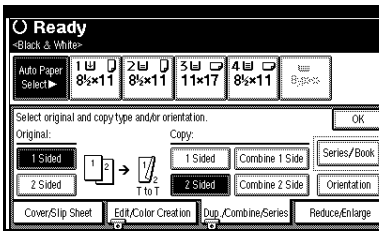

**Reference**

p.56 "Originals and copy orientation"

- Select the number of originals to combine, and then press [OK].
- Select the paper size.
- Press [OK].
- Place the originals, and then press the [Start] key.

## Series Copies


This function copies the front and back of a two-sided original separately, or two facing pages of a bound original, onto two sheets.

**Limitation**

- You cannot use the Series Copies function with the ADF.


**Book→1 Sided**

Copies a two-page spread original onto two separate pages.

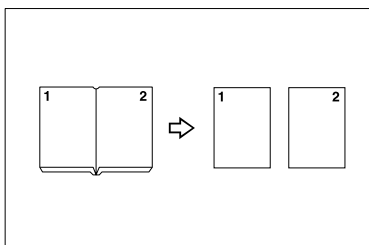


**Book→2 Sided**

Copies a two-page spread original onto a sheet, one page per side.

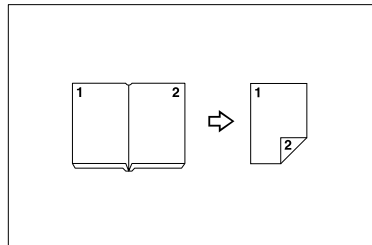

**Front&Back→2 Sided**

Copies both sides of a two-page spread original onto both sides of a sheet.

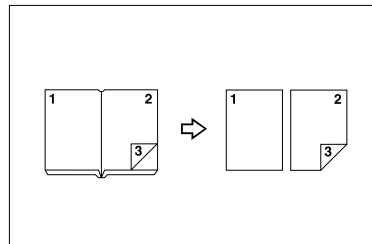

**Note**

- See the following table for original and copy paper sizes when using a 100% ratio.

**Metric version**


Original	Paper for one-sided copy	Paper for two-sided copy
A3	A4 × 2 sheets	A4 × 1 sheet (two-sided)
B4 JIS	B5 JIS × 2 sheets	B5 JIS × 1 sheet (two-sided)
A4	A5 × 2 sheets	A5 × 1 sheet (two-sided)

◆ Inch version

Original	Paper for one-sided copy	Paper for two-side copy
8 1/2" × 11"	5 1/2" × 8 1/2"  × 2 sheets	5 1/2" × 11"  × 1 sheet (two-sided)

- You cannot use the bypass tray with Book→2 Sided or Front&Back→2 Sided.

**1** Press [Dup./Combine/Series].

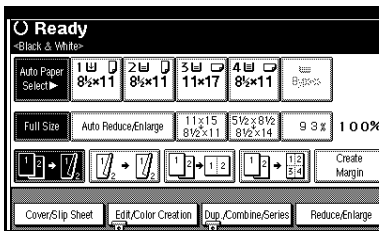

**2** Press [Series/Book].

**3** Press [Series].

**4** Select [Book→1 Sided], [Book→2 Sided], or [Front&Back→2 Sided], and then press [OK].

**5** Press [OK].

**6** Make sure [Auto Paper Select] is selected.

**7** Place the original on the exposure glass, and then press the [Start] key.

**Note**

- Press the [#] key after all originals have been scanned.


## Copying Book Originals

Copies two or more originals in page order.

◆ **1 Sided→Magazine**


Copies two or more originals into magazine page order copies (when folded and stacked).

◆ **Open to left**

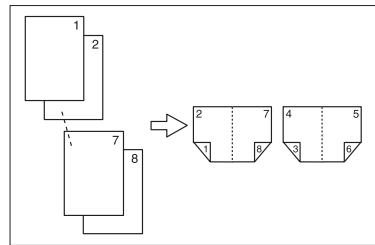

GCB00K3E

◆ **Open to right**

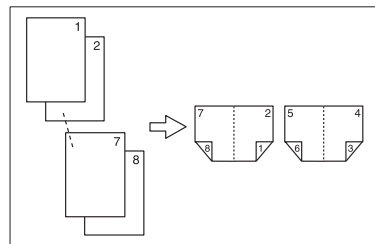


GCB00K4E

❖ **2 Sided→Magazine**


Copies two or more two-sided originals into magazine page order copies (when folded and stacked).

❖ **Open to left**

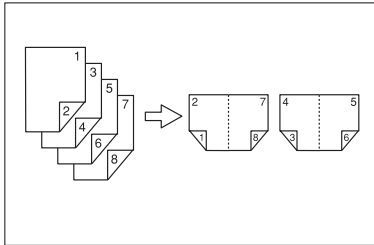

GCAH030E


❖ **Open to right**

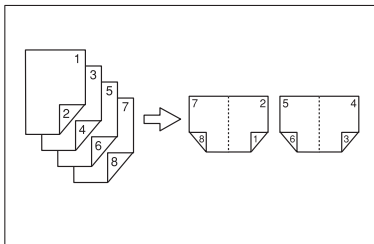

GCAH040E


**How to fold and unfold copies to make a magazine**

❖ **Open to left**

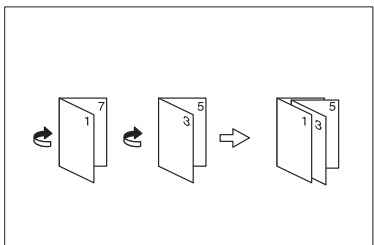

GCBOOK5E

❖ **Open to right**

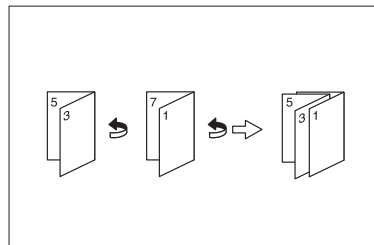

GCBOOK8E

 **Note**

- You cannot use the bypass tray with this function.
- The machine sets the reproduction ratio automatically to fit the paper size.

 **Reference**

Related default settings:

p.118 “Erase Original Shadow in Combine”

- 1** Select **[Open to Left]** or **[Open to Right]** with **User Tools**.

 **Reference**

p.120 “Orientation: Magazine”

- 2** Press **[Dup./Combine/Series]**.

- 3** Press **[Series/Book]**.

- 4** Press **[Book]**.

- 5** Select **[1 Sided→Magazine]**, or **[2 Sided→Magazine]**, and then press **[OK]**.

- 6** Press **[OK]**.

- 7** Select the paper.


- 8** Place the originals, and then press the **[Start]** key.

 **Note**

- When placing originals on the exposure glass or in the ADF using the Batch function, press the **[#]** key after all the originals have been scanned.

## Image Repeat

The original image is copied repeatedly.

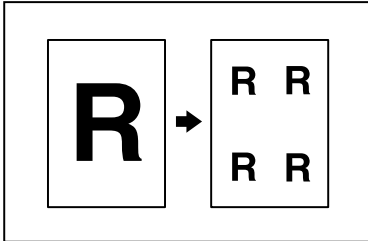

There are two types of designation methods for Image Repeat.

### ◆ Whole Area Repeat

Repeatedly copies the entire image.

### ◆ Specified Area Repeat

Repeatedly copies a specified portion of the image. Decide the base point of the area, specify the length and the width, and then specify the location of the area.

### 🔍 Reference

Related Initial Settings

See p.119 "Image Repeat Separation Line"

## Whole Area Repeat

### 📝 Note

- The number of repeated images depends on the original size, copy paper size, and reproduction ratio. See the following table.

- ◆ Original: 5 1/2" × 8 1/2" / Copy paper: 8 1/2" × 11" or Original: 5 1/2" × 8 1/2" / Copy paper 8 1/2" × 11"


4 repeats (65%)	16 repeats (32%)

- ◆ Original: 5 1/2" × 8 1/2" / Copy paper: 8 1/2" × 11" or Original: 5 1/2" × 8 1/2" / Copy paper 8 1/2" × 11"

2 repeats (100%)	8 repeats (50%)	32 repeats (25%)

**1** Select the size of the copy paper and the reproduction ratio.

**2** Press [Edit/Color Creation].

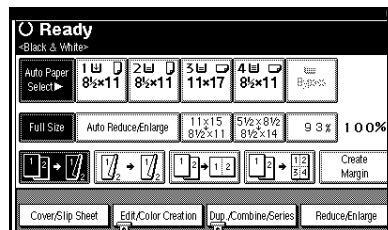

**3** Press [Edit Image].

**4** Press [Image Repeat].

**5** Make sure that [Whole Area] is selected, then press [OK].

**6** Press [OK] twice.

**7** Place the original, and then press the [Start] key.

## Specified Area Repeat


You can use this function only when you are making a copy from the Exposure Glass.

### Note

- The base point X1, Y1, and the length set by point X2, Y2 determines the area of an image repeatedly copied.

### Limitation

- You cannot use the specified area repeat from ADF.

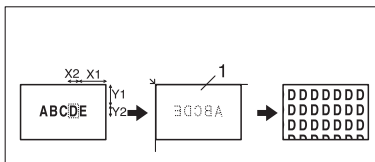

GCRE032E

### 1. Set on the exposure glass

- Specify the location of the area's base point (X1, Y1), and its length and width (X2, Y2).

### Note

- You can set any value in the range of X1: 0~412mm (0"~16.2"), X2: 20~432mm (0.8"~17.0"), Y1: 0~277mm (0"~10.8"), and Y2: 20~297mm (0.8"~11.6").

- Select the size of the copy paper and the reproduction ratio.

- Press [Edit/Color Creation].

- Press [Edit Image].

- Press [Image Repeat].

- Press [Specified Area].

- Enter the length of [X1] with the number keys, then press [#].

- Enter the length of [Y1] with the number keys, then press [#].

- Enter the length of [X2] with the number keys, then press [#].


- Enter the length of the [Y2] by number keys, then press [#].

- Press [OK] three times.

- Place the original on the exposure glass, and then press the [Start] key.

## Double Copies

One original image is copied twice onto one sheet, as shown.

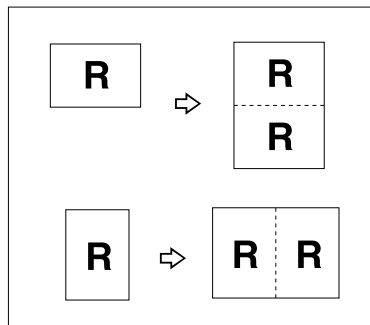

### Note

- You cannot use the bypass tray with this function.

- See the following table for original and copy paper sizes and orientations when using a 100% ratio:

◆ **Metric version**

Original size and orientation	Copy paper size and orientation
A5	A4
B6 JIS	B5 JIS
A4	A3
A5	A4
B5 JIS	B4 JIS
B6 JIS	B5 JIS

◆ **Inch version**


Original size and orientation	Copy paper size and orientation
5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "	8 <sup>1</sup> / <sub>2</sub> " × 11"
5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "	8 <sup>1</sup> / <sub>2</sub> " × 11"
8 <sup>1</sup> / <sub>2</sub> " × 11"	11" × 17"

- ❑ Originals with a size of A5, B6 JIS, 5<sup>1</sup>/<sub>2</sub>" × 8<sup>1</sup>/<sub>2</sub>" cannot be detected properly on the exposure glass. Be sure to select the copy paper manually or place the originals in the ADF.

🔍 **Reference**

Related default settings:  
p.119 "Double Copies Separation Line"

**1** Press [Edit/Color Creation].

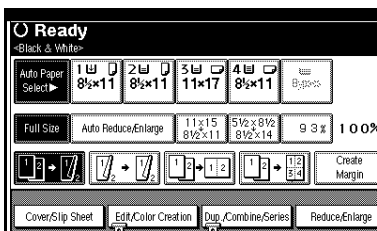

**2** Press [Edit Image].

**3** Press [Double copies].


**4** Press [OK] twice.

**5** Select the paper.

**6** Place the originals, and then press the [Start] key.

**Centering**

You can make copies with the image moved to the center.

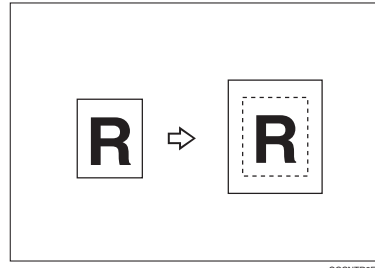

📌 **Note**

- ❑ You cannot use the bypass tray with this function.
- ❑ Original sizes and orientations for centering are listed below.


◆ **Metric version**

Original placed on:	Original size and orientation
Exposure glass	A3, B4 JIS, A4, B5 JIS
ADF	A3, B4 JIS, A4, B5 JIS, A5, B6 JIS, 11" × 17", 8 <sup>1</sup> / <sub>2</sub> " × 11"

◆ **Inch version**

Original placed on:	Original size and orientation
Exposure glass	11" × 17", 8 <sup>1</sup> / <sub>2</sub> " × 14", 8 <sup>1</sup> / <sub>2</sub> " × 11"
ADF	A3, A4, 11" × 17", 8 <sup>1</sup> / <sub>2</sub> " × 14", 8 <sup>1</sup> / <sub>2</sub> " × 11", 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> ", 10" × 14"


- 1 Select the paper.
- 2 Press [Edit/Color Creation].

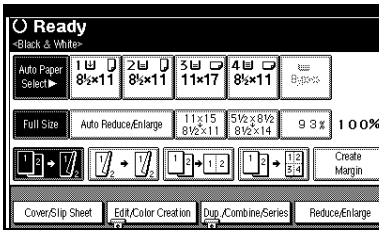

- 3 Press [Edit Image].
- 4 Press [Centering].
- 5 Press [OK] twice.
- 6 Place the originals, and then press the [Start] key.

## Positive/Negative

If your original is black and white, copy images are inverted.

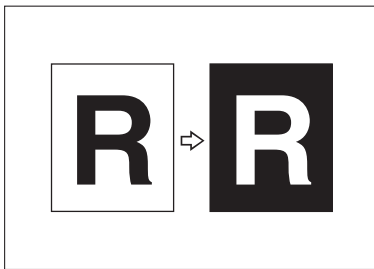


GCHATNIE

- Note**
- If your original is black and white, copy images are inverted. If your original is color, the density, darkness and brightness of each color will be reversed and inverted to complimentary colors.
  - If the [Single Color] key is selected, copy images are copied in white and specified colors.

- If [Two-color] (normal) is selected, the white part of the original becomes black and the black part becomes white, and the colored part is copied with the specified color.
- If [Red & Black] is selected, the white part of the original becomes black, and the black part becomes white, but the red part is copied as red color.

- 1 Press [Edit/Color Creation].

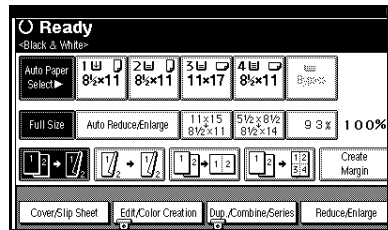

- 2 Press [Edit Image].
- 3 Press [Positive/Negative].
- 4 Press [OK] twice.
- 5 Select the paper.
- 6 Place the originals, and then press the [Start] key.

## Mirror

Copies by reversing the image from left to right, as reflected in a mirror.

- 1 Press [Edit/Color Creation].
- 2 Press [Edit Image].
- 3 Press [Mirror Image].
- 4 Press [OK] twice.
- 5 Place the originals, then press the [Start] key.




## Erase

You can erase the center and/or all four sides of the original image.

This function has three modes:

### ◆ Border


Erases the original's edge margin from the copy.

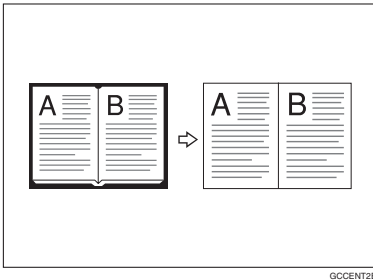

GCCENT2E

### ◆ Center


Erases the original's center margin from the copy.

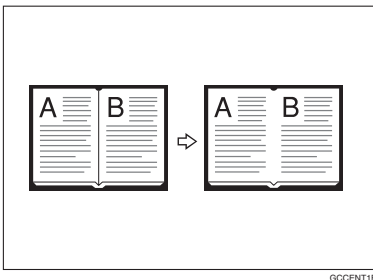

GCCENT1E

### ◆ Center/Border

Erases both the original's center and edge margins from the copy.

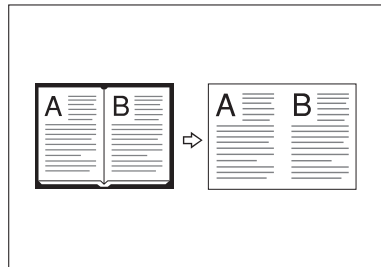

GCCENT3E

### 🔍 Reference


The erase width is set to 10 mm (0.4") as default. You can change this setting with User Tools.

p.118 "Erase Center Width"

p.118 "Erase Border Width"

### 📎 Note

- ❑ The relationship between the original orientation and erased area is as follows:

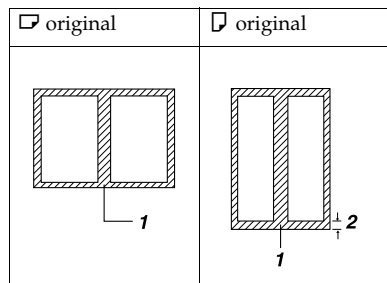


1: Erased part

2: 2-99 mm (0.1"-3.9")

## Border Erase


- 1 Press [Edit/Color Creation].

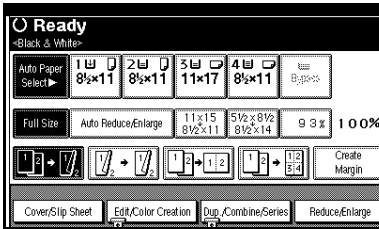

- 2 Press [Erase/Margin Adj].
- 3 Press [Erase].
- 4 Set the erase border width.

### Selecting [Same Width]

- 1 Press [Same Width].
- 2 Set the erase border width using [+ ] and [- ].

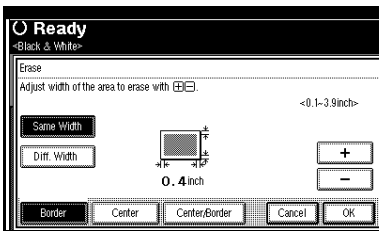


### Note

- To change the value entered, press [+ ] and [- ] to set the new value.

- 3 Press [OK].

### Selecting [Diff. Width]


- 1 Press [Diff. Width].
- 2 Press the key for the border you want to change, and then set the erase border width using [+ ] and [- ].

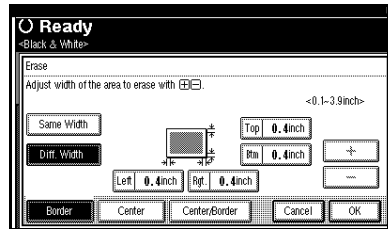

- 3 Press [OK].
- 5 Press [OK] twice.
- 6 Place the originals, and then press the [Start] key.

### Center erase


- 1 Press [Edit/Color Creation].

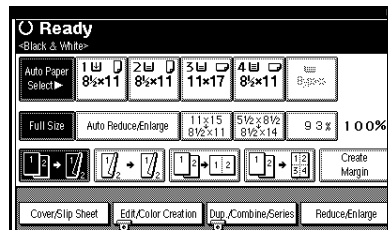

- 2 Press [Erase/Margin Adj].
- 3 Press [Erase].
- 4 Press [Center].
- 5 Set the erase center width using [+ ] and [- ], and then press [OK].
- 6 Press [OK] twice.
- 7 Place the originals, and then press the [Start] key.

## Center/border erase


- 1 Press [Edit/Color Creation].

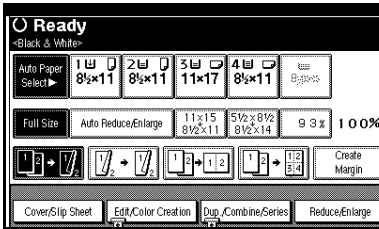

- 2 Press [Erase/Margin Adj].
- 3 Press [Erase].
- 4 Press [Center/Border].
- 5 Set the center and border to be erased.

### Selecting [Same Width]


- 1 Press [Same Width].
- 2 Press [Center], and then set the erase center width using [+ ] and [- ].

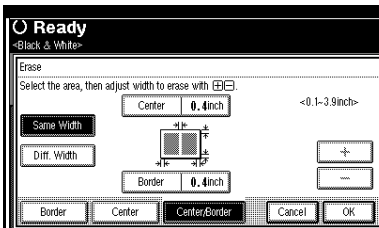

- 3 Press [Border], and then set the erase border width using [+ ] and [- ].
- 4 Press [OK].

### Selecting [Diff. Width]


- 1 Press [Diff. Width].
- 2 Press the key for the part you want to change, and then set the erase margin width using [+ ] and [- ].

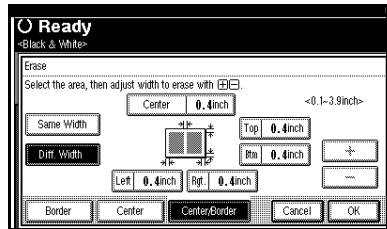

- 3 Press [OK].
- 6 Press [OK] twice.
- 7 Place the originals, and then press the [Start] key.

## Margin Adjustment

You can make a binding margin.

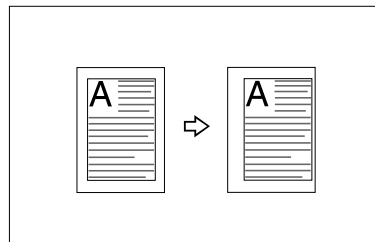

### Reference

Related default settings:


- p.117 "Front Margin: Left/Right"
- p.117 "Back Margin: Left/Right"
- p.117 "Front Margin: Top/Bottom"
- p.117 "Back Margin: Top/Bottom"
- p.118 "1 Sided→2 Sided Auto Margin: TtoT"

**Note**

- You can change the width of the binding margin as follows:

Metric version	0–30 mm (increments of 1 mm)
Inch version	0"–1.2" (increments of 0.1")

**1** Press [Edit/Color Creation].

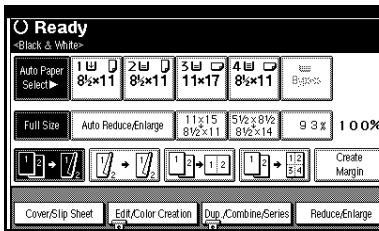

**2** Press [Erase/Margin Adj].

**3** Press [Margin Adjustment].

**4** Set a binding margin for the front pages. Press [←] and [→] when setting the left and right margins, and [↓] and [↑] when setting the top and bottom margins.

**Note**

- To change the value entered, press [←], [→], [↓], [↑] to set it.
- If you do not need to specify margins for back side pages, proceed to step **5**.

**5** Set a binding margin for back side pages. Press [←] and [→] when setting the left and right margins, and [↓] and [↑] when setting the top and bottom margins.

**Note**


- Margins on the back side of the page are possible only when [2 Sided] or [Combine 2 Side] is selected.

**6** Press [OK] 3 times.

**7** Place the originals, and then press the [Start] key.

**Preset Stamp**


Frequently used messages can be stored in memory and stamped on copies.

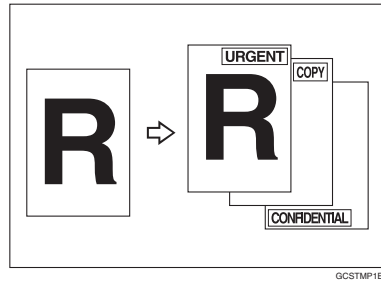

One of the following eight messages can be stamped on copies with a frame around it:

- "COPY", "URGENT", "PRIORITY", "For Your Info.", "PRELIMINARY", "For Internal Use Only", "CONFIDENTIAL", "DRAFT".

## Stamp position and original orientation

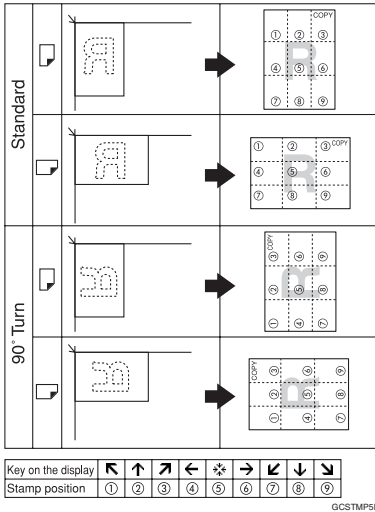


### Note

- You cannot use the bypass tray with this function.
- Only one message can be stamped at a time.
- The default stamp color is black.

### Reference

- p.121 "Stamp Priority"
- p.121 "Stamp Language"
- p.121 "Stamp Position"
- p.121 "Stamp Format"
- p.121 "Stamp Color"

## 1 Press [Edit/Color Creation].

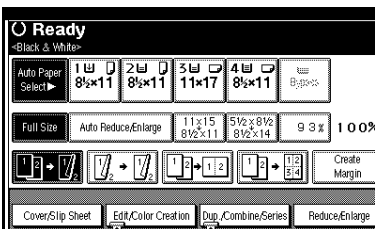

## 2 Press [Stamp].

## 3 Press [Preset Stamp].

## 4 Select the message.

## 5 Press [All Pages] or [1st Page only] to select the print page.

### Note

- You can change the color, position, size, and density of the stamp. See p.71 "Changing the stamp color". See p.71 "To change stamp position, size, and density".

## 6 After you have specified all necessary settings, press [OK].

## 7 Press [OK] twice.

## 8 Place the originals, and then press the [Start] key.

## Changing the stamp color


## 1 Press [Stamp Color].

## 2 Select the stamp color, then press [OK].

## To change stamp position, size, and density


## 1 Press [Change].

## 2 Select the position for print, size, and density, and then press [OK].

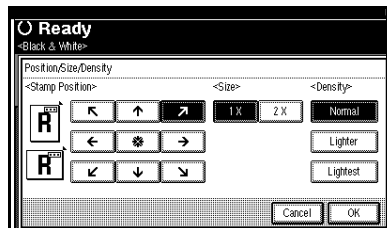

## User Stamp

Prints a registered stamp onto copies.


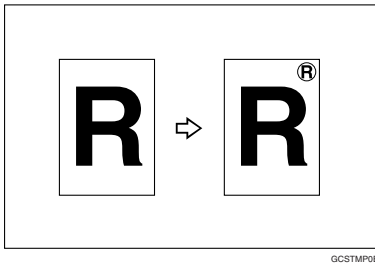


GCSTMP0E

### Preparation

You have to register a user stamp before using this function. See p.73 "To program the user stamp".

### Stamp position and original orientation

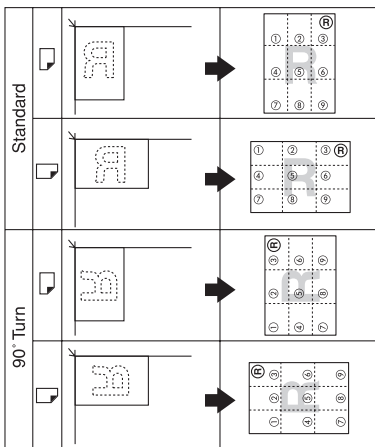

GCSTMP0E


### Note

- You cannot use the bypass tray with this function.
- Only one message can be stamped at a time.
- The default stamp color is black.

### Reference

- Related default settings:
- p.122 "Stamp Position 1 - 4"
- p.122 "Stamp Format 1 - 4"
- p.122 "Stamp Color: 1 - 4"

### 1 Press [Edit/Color Creation].

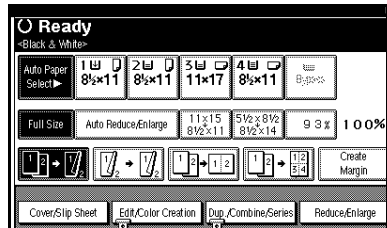


### 2 Press [Stamp].

### 3 Press [User Stamp].

### 4 Select the stamp number.

### 5 Press [All Pages] or [1st Page only] to select the print page.

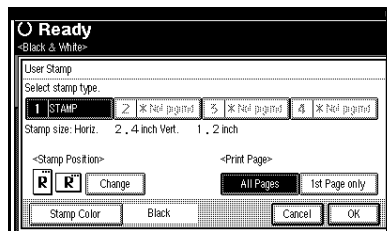

### Note

- You can change the stamp color and position. See p.73 "Changing the stamp color". See p.73 "To change the stamp position".

### 6 After all settings are complete, press [OK].

### 7 Press [OK] twice.


### 8 Place the originals, and then press the [Start] key.

## Changing the stamp color

- 1 Press [Stamp Color].
- 2 Select the stamp color, then press [OK].

## To change the stamp position

- 1 Press [Change].
- 2 Select the position, and then press [OK].

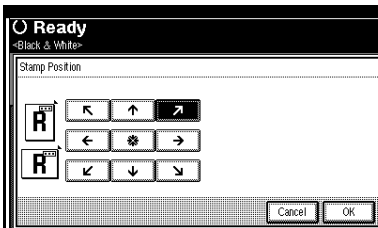


## To program the user stamp


### Note

- The range of stamp images for readability is 10–297 mm high (0.4"–11.7") and 10–432 mm wide (0.4"–17.0"). However, if the value exceeds the maximum area (5,000 mm<sup>2</sup>, 7.75 inch<sup>2</sup>), it is automatically adjusted to range.
- Up to four frequently used images can be stored in memory.

- 1 Make sure the machine's copier function is selected.
- 2 Press the [User Tools/Counter] key.



- 3 Press [Copier/Document Server Features].

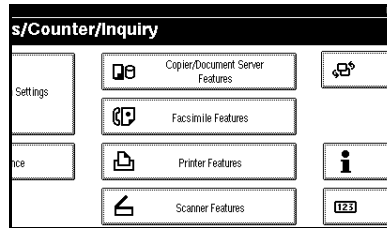

- 4 Press [Stamp].
- 5 Press [User Stamp].
- 6 Press [Program/Delete Stamp].
- 7 Press [Program], and then press the stamp number (1–4) you want to program.

### Note

- Stamp numbers displayed with a right-pointing arrow next to them already have settings.
- If the stamp number is already in use, the machine will ask you if you want to overwrite it. Press [Yes] or [No].

- 8 Enter the user stamp name using the letter keys on the display panel. You can register up to 10 characters.

- 9 Press [OK].

### Reference

"Entering Text", *General Settings Guide*

- 10 Enter the horizontal size of the stamp using the number keys, and then press [#].

**11** Press [Vertical], and then enter the vertical size of the stamp using the number keys, and then press [#].

**12** Place the original for user stamp on the exposure glass, and then press [Start Scanning].

The original is scanned, and the stamp is registered.

**Note**

- Originals cannot be scanned from the ADF when programming the user stamp.

**13** Press [Exit].

**14** Press [Exit].

The Copier/Document Server Features main menu is displayed.

**15** Press [Exit].

Exits settings and gets ready to copy.

---

**To delete the user stamp**


---

**Important**


- You cannot restore a deleted stamp.

**1** Make sure the machine's copier function is selected.

**2** Press the [User Tools/Counter] key.



**3** Press [Copier/Document Server Features].

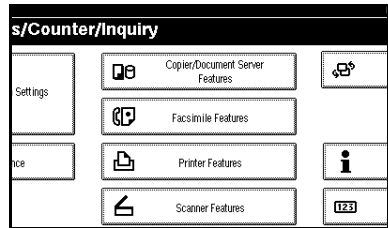

**4** Press [Stamp].

**5** Press [User Stamp].

**6** Press [Program/Delete Stamp].

**7** Press [Delete], and then press the stamp number you want to delete.

**8** Select [Delete], and then press [Exit].

**9** Press [Exit].

The Copier/Document Server Features main menu is displayed.


**10** Press [Exit].

Exits settings and gets ready to copy.



## Date Stamp

You can use this function to print dates onto copies.

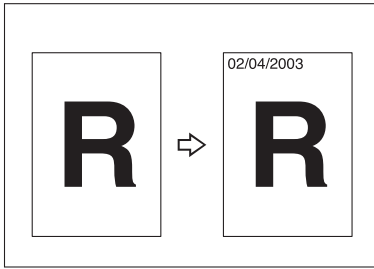


GCSTMP7E

You can select from the following date formats:

- MM/DD/YYYY
- MM.DD.YYYY
- DD/MM/YYYY
- DD.MM.YYYY
- YYYY.MM.DD

## Stamp position and original orientation

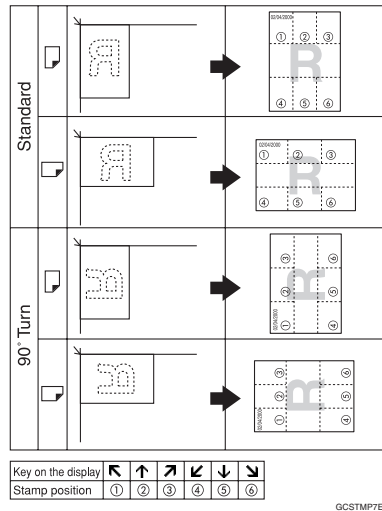

GCSTMP7E

### Note

- You cannot use the bypass tray with this function.
- The default stamp color is black.

### Reference

Related default settings:

p.122 "Format"

p.122 "Font"

p.122 "Stamp Position"

p.123 "Stamp Setting"


p.123 "Size"

p.123 "Superimpose"

p.123 "Stamp Color"

"Timer Settings", *General Settings Guide*


**1** Press [Edit/Color Creation].

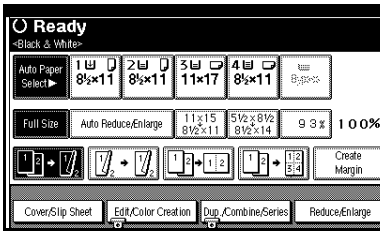

**2** Press [Stamp].

**3** Press [Date Stamp].

**4** Press [All Pages] or [1st Page only] to select the print page.

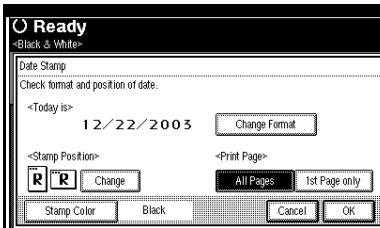

**Note**

- You can change the color, format and position of the date stamp. See p.76 "Changing the stamp color", p.76 "To change the date format".

**5** After all settings are complete, press [OK].

**6** Press [OK] twice.

**7** Place the originals, and then press the [Start] key.


**Changing the stamp color**

**1** Press [Stamp Color].

**2** Select the stamp color, then press [OK].

**To change the date format**

**1** Press [Change Format].

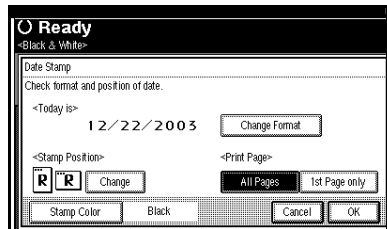


**2** Select the date format, and then press [OK].

**To change the stamp position**


**1** Press [Change].

**2** Select the date stamp position, and then press [OK].

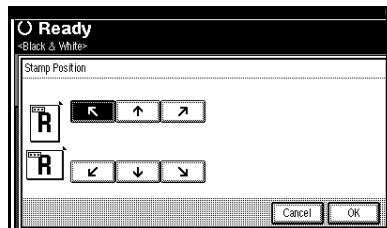

## Page Numbering

You can use this function to print page numbers onto copies.

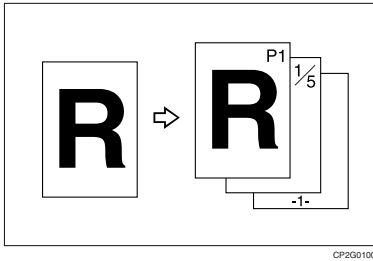


CP260100

There are six types of Page Numbering (“n” is the total number of pages in original):

- P1, P2,...Pn
- 1/n, 2/n,...n/n
- -1-, -2-,...-n-
- P.1, P.2,...P.n
- 1, 2...n
- 1-1, 1-2,..1-n

## Stamp position and orientation of originals

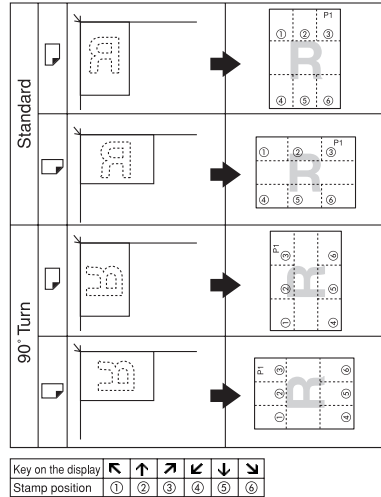

GCSTMP8E

### Note

- You cannot use the bypass tray with this function.
- The default stamp color is black.

### Reference

Related default settings:

p.123 “Stamp Format”

p.123 “Font”

p.123 “Size”

p.123 “Duplex Back Page Stamping Position”


p.123 “Page Numbering in Combine”

p.123 “Stamp Position”

p.123 “Superimpose”

p.123 “Stamp Color”


**1** Press [Edit/Color Creation].

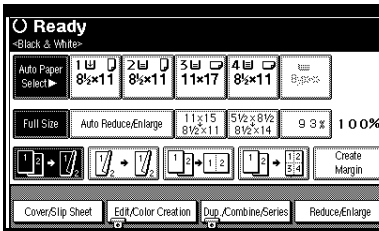

**2** Press [Stamp].

**3** Press [Page Numbering].

**4** Select the format.

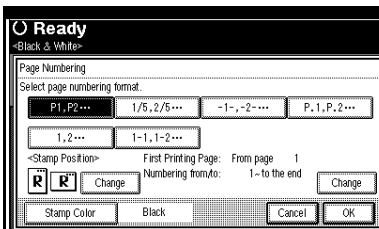

**Note**

You can specify the Stamp Color, position, pages to be stamped, and numbering. See “Changing the stamp color”, “To change the stamp position”, “Specifying the first printing page and start number”.

**5** After all settings are complete, press [OK].

**6** Press [OK] twice.

**7** Place the originals, and then press the [Start] key.

**Changing the stamp color**


**1** Press [Stamp Color].

**2** Select the stamp color, then press [OK].

**To change the stamp position**

**1** Press [Change].

**2** Select the position, and then press [OK].

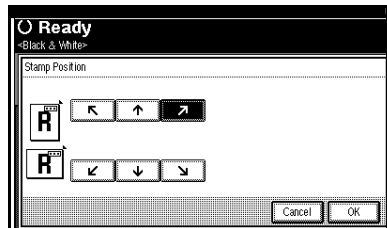

**Specifying the first printing page and start number**


If you selected (P1, P2..., -1-, -2-..., P. 1, P. 2..., 1, 2..., )

**Note**

The following explanation uses P1, P2... as an example. The steps are the same for other selections.

**1** Press [Change] on the right side.

- Press **[First Printing Page]**, then enter the original page number from which to start printing using the number keys, and then press the **[#]** key.

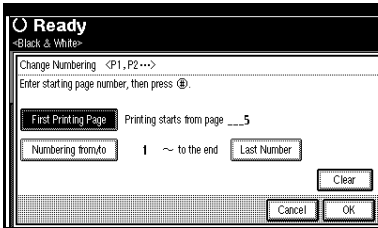


**Note**

- To change the number entered, press **[Clear]** or the **[Clear/Stop]** key, and then enter a new number.

- Press **[Numbering from/to]**, enter the number of the page from which to start numbering using the number keys, and then press the **[#]** key.


**Note**

- The example below shows the first printing page as "2" and the start number as "3".

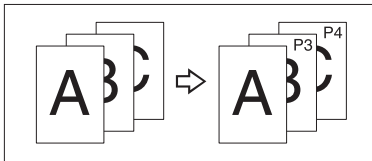

GCANPE2J

- Press **[Last Number]**, enter the number of the page to stop numbering using the number keys, and then press the **[#]** key.

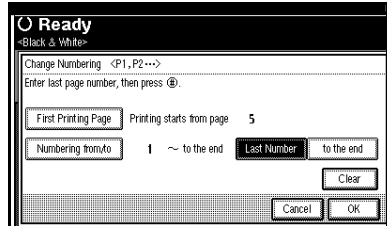

**Note**

- If you want to number all pages to the end, press **[to the end]**.


- When page designation is complete, press **[OK]**.

- Press **[OK]** 3 times.

If you selected (1/5, 2/5...)

- Press **[Change]** on the right hand side of the display.

- Press **[First Printing Page]**, then enter the original page number from which to start printing using the number keys, and then press the **[#]** key.

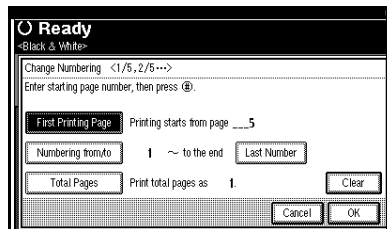

2

**Note**

- You can enter between 1 and 9999 for the original page number from which to start printing.
- To change the number entered, press **[Clear]** or the **[Clear/Stop]** key, and then enter a new number.

**3** Press **[Numbering from/to]**, then enter the number of page from which to start numbering using the number keys, and then press the **[#]** key.

**4** Press **[Last Number]**, then enter the number of page at which to stop numbering using the number keys, and then press the **[#]** key.

Proceed to step **5** when not changing.

**Note**

- To print on the last page, press **[to the end]**.
- The last number is the last page number printed. For example, if **[Total Pages]** is ten, if you want to print seven pages up to page 7, enter **[7]** as the **[Last Number]**.
- Normally, you do not need to enter this number.

**5** Press **[Total Pages]**, enter the total number of original pages using the number keys, and then press the **[#]** key.

**6** When page designation is complete, press **[OK]**.

**Note**

- To change the settings after pressing **[OK]**, press **[Change]**, and then enter the numbers again.

**7** Press **[OK]** 3 times.


---

If you selected (1-1, 1-2,...)

---

**1** Press **[Change]** on the right hand side.

**2** Press **[First Printing Page]**, and then enter the original page number from which to start printing using number keys, and then press the **[#]** key.

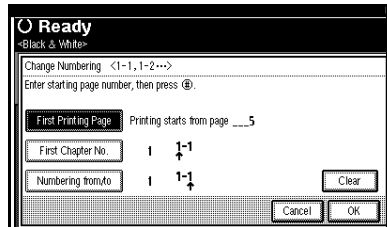

**Note**

- To change the number entered, press **[Clear]** or the **[Clear/Stop]** key, and then enter a new number.

**3** Press **[First Chapter No.]**, enter the chapter number from which to start numbering using the number keys, and then press the **[#]** key.

**Note**

- You can enter between 1 and 9999 for the chapter number from which to start numbering.

**4** Press **[Numbering from/to]**, and then enter the page number from which to start numbering using the number keys, and then press the **[#]** key.

**5** When page designation is complete, press **[OK]**.

**6** Press **[OK]** 3 times.

## Covers

You can use this function to create cover sheets by adding additional pages of different paper, or copying existing pages onto different paper.

### Preparation

Before selecting this function, set the tray for front cover sheets. See "Cover Sheet Tray" in "Tray Paper Settings", *General Settings Guide*.


### Note

- The cover sheet should be the same size and orientation as the copy paper.
- You cannot use the bypass tray with this function.
- When selecting Copy, select whether the front and back covers are copied one-sided or two-sided.


### Front cover

The first page of originals is copied onto a specified cover sheet paper, or a cover sheet is inserted before the first copy page.

- Copy

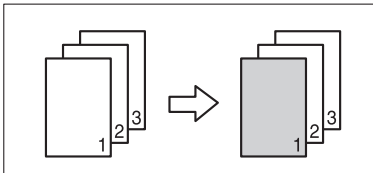


- Blank

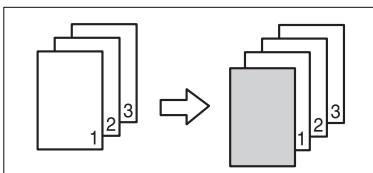


### Front/Back covers

The first and last page of original is copied onto a specified cover sheet paper.

- Copy

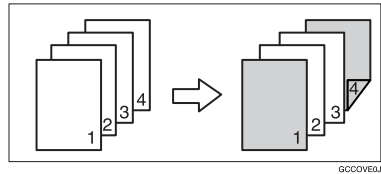


- Blank

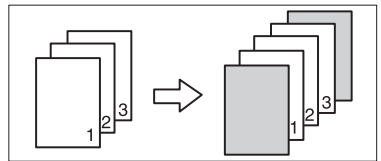

### Reference

p.118 "Front Cover Copy in Combine"

### 1 Press [Cover/Slip Sheet].

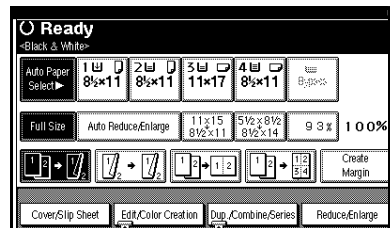

### 2 Press [Front Cover] or [Front/Back Cover].


### 3 Select [Copy] or [Blank] for the cover sheet.

### 4 Select the paper tray containing the paper to copy the originals onto, and then press [OK].

### 5 Place the originals in the ADF, and then press the [Start] key.

## Slip Sheets

Every time the originals' page changes, a slip sheet is inserted. This function can be used to automatically insert a slip sheet between OHP transparencies, or as a stacking function. You can also copy onto slip sheets.

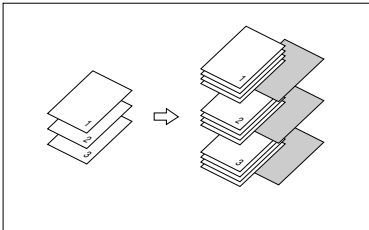

### Preparation


Before selecting this function, set the tray for slip sheets. See "Slip Sheet Tray" in "Tray Paper Settings", *General Settings Guide*.

### Note


- Load slip sheets in the same size and orientation as copy paper or OHP transparencies.

### When using OHP transparencies from the bypass tray

- Copy

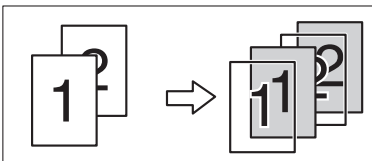


- Blank

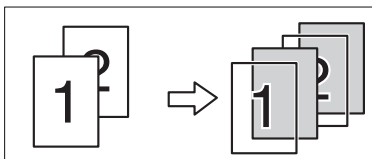

### Note

- Press the **[#]** key and select **[OHP Sheet]** in Special paper. See p.24 "When copying onto OHP Transparencies or Thick Paper".
- Paper will be delivered to the external tray when copying onto OHP transparencies or thick paper from the bypass tray, even if you have specified not to use the external tray as the output tray.

### 1 Press [Cover/Slip Sheet].

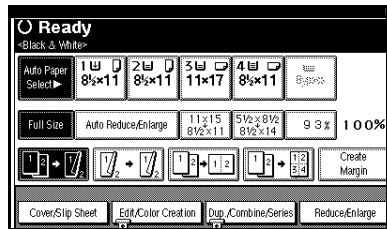

### 2 Press [Slip Sheet].

### 3 Select [Copy] or [Blank], and then press [OK].

### 4 Select the paper tray containing the sheet paper to copy the originals.

When using OHP transparencies, open the bypass tray.

### 5 Place the originals, and then press the [Start] key.



# Storing Data in the Document Server

The Document Server enables you to store documents in memory and print them as you want.


## Important

- ❑ Machine failure can result in data loss. Important data stored on the hard disk should be backed up. The manufacturer shall not be responsible for any damage that might result from loss of data.


## Note

- ❑ Data stored in the Document Server is deleted after three days by setting default. You can specify a period after which stored data is automatically deleted. For more information about settings, see “Auto Delete File” in “Key Operator Tools”, *General Settings Guide*.

## 1 Press [Store File].

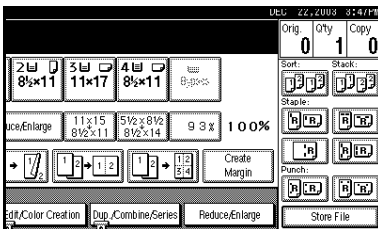

## 2 Enter a user name, file name, and password if necessary.

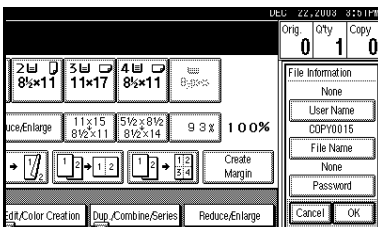

## Reference

For details about how to register the user name, file name, or password, see “To register or change a user name”, and “To set or change a password”, *General Settings Guide*.


## 3 Press [OK].

## 4 Place the originals.

## Reference

For more information about the types of originals that can be placed and how to place them, see p.13 “Placing Originals”.

## 5 Make the scanning settings for the originals.

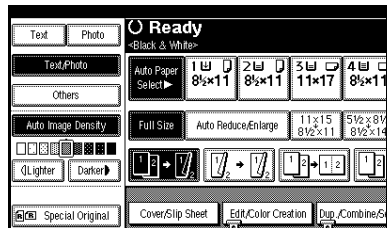

## 6 Press the [Start] key.

Originals are scanned and stored in memory.

## Note

- ❑ To stop scanning, press the **[Clear/Stop]** key. To resume a paused scanning job, press **[Continue]** in the confirmation display. To delete saved images and cancel the job, press **[Stop]**.
- ❑ When placing an original on the exposure glass, press the **[#]** key after all the originals have been scanned.

- ❑ To check that the document has been stored, press the **【Document Server】** key to display the document selection screen.
- ❑ When the machine is printing a document stored using the copier function, wait until printing has finished before you store another copy document.
- ❑ To print stored documents, see “Printing Stored Documents”, *General Settings Guide*.

# Programs

You can store frequently used copy job settings in machine memory and recall them for future use.


 **Note**

- You can store up to 10 programs.
- You can select the standard mode or program No. 10 as the default mode to be set when modes are cleared or reset, or immediately after the operation switch is turned on. See p.113 “Change Initial Mode”.
- Paper settings are stored based on paper size. However, if you have more than one paper tray containing same size paper, the tray prioritized with User Tools (System Settings) is selected first. See “Paper Tray Priority” in “Tray Paper Settings”, *General Settings Guide*.
- Programs are not deleted by turning the power off or pressing the **[Clear Modes]** key. They are canceled only when you delete or overwrite them with another program.


## Storing a Program

**1** Edit the copy settings so all functions you want to store in this program are selected.

**2** Press the **[Program]** key.




**3** Press **[Register]**.

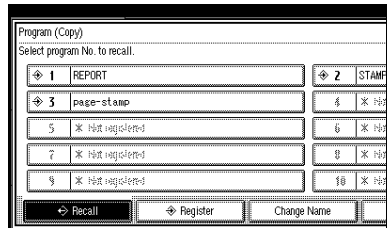

**4** Press the program number you want to store.

 **Note**


- Program numbers displayed with  next to them already have settings.

 **Reference**

p.86 “Changing a stored program”

**5** Enter the program name using the letter keys on the display panel.

You can enter up to 40 characters.

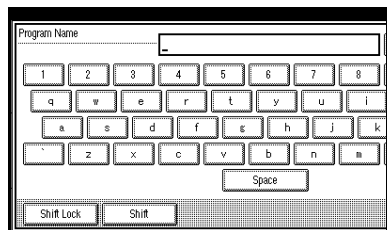

 **Reference**

For details about entering characters, see “Entering Text”, *General Settings Guide*.

 **Note**

- If you do not want to enter a program name, proceed to step **6**.

**6** Press [OK].

When the settings are successfully stored, the program name is displayed on the right side of the registered program number. The display returns to the initial copy display for a while.

## Changing a stored program

**1** Check the program settings.

**Note**

- To check the contents of a program, recall it. See p.86 "Recalling a Program".

**2** Repeat steps **1** to **4** of "Storing a Program".

**3** Press [Register].

Repeat steps **5** and **6** of "Storing a Program".


**Note**

- When overwritten, the previous program is deleted.

## Deleting a Program

**1** Press the [Program] key.

**2** Press [Delete].

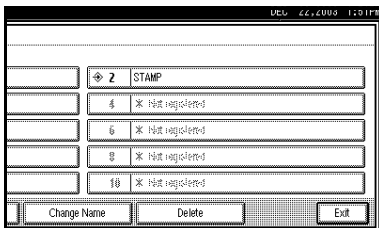

**3** Press the number of the program you want to delete.


**4** Press [Yes].

The program is deleted, and the display returns to the initial copy display.

## Recalling a Program

**1** Press the [Program] key.

**2** Press [Recall].

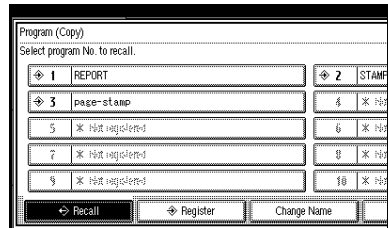

**3** Press the number of the program you want to recall.

The stored settings are displayed.

**Note**

- Program numbers displayed with next to them already have settings.

**4** Place the originals, and then press the [Start] key.

# 3. Color Adjustment/Program

## Color Adjustment

This function lets you alter up to three single colors by mixing them with adjacent colors in the color circle.


### Reference

For types and examples of image adjustment functions, see p.iii “What You Can Do with This Machine <Color Functions/Color Adjustments>”.

### Note

- You can adjust up to 3 colors from yellow, red, magenta, blue, cyan, or green at the same time.
- This function is only available in Full Color mode.

### **1** Press the **[Adjust/Program Color]** key.




### **2** Press **[Adjust Color]**.

The color circle is displayed.

### **3** Select the colors you want to adjust.

You can select up to 3 colors.

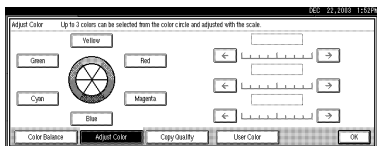

### **4** Adjust the color using **[←]** or **[→]**.

#### Note

- Refer to the color circle on the control panel.

### **5** Press **[OK]**.

#### Note

- The indicator of the **[Adjust/Program Color]** key will light up when adjusting the color.
- The adjusted settings will be deleted and the initial values will be reset, when Auto Clear has been performed, when the **[Clear Modes]** key has been pressed or when the power has been turned off.


# Color Balance

You can adjust the overall color tone when the overall copy is reddish or bluish.

## Reference

For types and examples of the image adjustment functions, see p.iii “What You Can Do with This Machine <Color Functions/Color Adjustments>”.

- 1 Press the **[Adjust/Program Color]** key.



- 2 Make sure that **[Color Balance]** is selected.

- 3 Adjust by pressing **[Lighter]** or **[Darker]**.

## Note

- You can also register the adjusted settings. See p.88 “Color Balance Program”.

- 4 Press **[OK]**.

## Note

- The indicator of the **[Adjust/Program Color]** key will light up when adjusting the color balance.
- The adjusted settings will be deleted and the initial values will be reset when either Auto Clear has been performed, when the **[Clear Modes]** key has been pressed or when the power has been turned off.

## Color Balance Program

You can also store the color balance setting in memory and recall it when you want to use it.

## Note

- You can store up to 3 programs.
- To change the registered settings, register them again. Previously registered settings will be overwritten.

## Storing the adjusted color balance

- 1 Press the **[Adjust/Program Color]** Key.

## Reference

See p.88 “Color Balance”.


- 2 Press **[Program Color Balance]**.

- 3 Press **[Program]**.

- 4 Select a number (1–3) for this setting.

The color balance setting will be registered in the selected number.

## Note

- If you select the program number key where the  is displayed, the previously registered settings will be overwritten. See p.89 “Changing the registered settings”.


- 5 Press **[OK]**.

---

## Changing the registered settings

---

- 1** Press the **[Adjust/Program Color]** key.
- 2** Make sure that **[Color Balance]** is selected, and then press **[Program Color Balance]**.

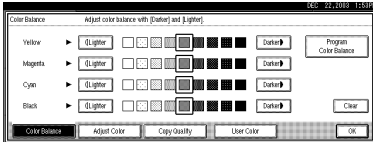

- 3** Select the program number (1–3) whose settings you want to change.

The registered color balance is displayed.

- 4** Change the registered settings.
- 5** After the registered settings are changed, press **[Program Color Balance]**.
- 6** Press **[Program]**, and then select the program number to be overwritten.
- 7** Press **[Register]**.

The settings are changed.

- 8** Press **[OK]**.

---

## Copying with the registered settings

---

- 1** Press the **[Adjust/Program Color]** key.
- 2** Make sure that **[Color Balance]** is selected, and then press **[Program Color Balance]**.
- 3** Make sure that **[Recall]** has been selected, and then select the program that you want to use.
- 4** Press **[OK]**.
- 5** Place the originals, and then press the **[Start]** key.

### Note

- The adjusted settings will be deleted and the initial values will be reset when either Auto Clear has been performed, when the **[Clear Modes]** key has been pressed or when the power has been turned off.

---

## Deleting the registered settings

---

- 1** Press the **[Adjust/Program Color]** key.
- 2** Make sure that **[Color Balance]** has been selected, and then press **[Program Color Balance]**.
- 3** Press **[Delete]**, and then select the program that you want to delete.
- 4** Press **[Yes]**.
- 5** Press **[OK]**.

# Image Adjustment

## Reference

For types and examples of the image adjustment functions, see p.iii "What You Can Do with This Machine <Color Functions/Color Adjustments>".

You can make the following types of image adjustments.

### ◆ Sharp / Soft

Adjusts the outline of an image.

### ◆ Contrast

Adjusts the shades of an image.

### ◆ Background Density

Adjusts the background density of an image.

### ◆ Adjust U.C.R.

Adjusts the amount of black toner used in order to vividly express the black areas in an image.

### ◆ Text/Photo Sensitivity


Adjusts the standard level in judging the image in the text and the photo part, when using "Text/Photo".

### 📖 Note

- ❑ "Sharp / Soft", "Contrast", "Background Density" can each be adjusted. However, their adjustments can affect the level of other adjustment functions.
- ❑ When adjusting the image quality, the indicator of the **[Adjust/Program Color]** key will light up.

- ❑ The adjusted settings will be deleted and the initial values will be reset when either Auto Clear has been performed, when the **[Clear Modes]** key has been pressed or when the power has been turned off.


- 1** Press the **[Adjust/Program Color]** key.



- 2** Press **[Copy Quality]**.
- 3** Adjust the settings.

## Adjusting the sharpness/softness


- 1** Adjust by pressing **[Soft]** or **[Sharp]**.

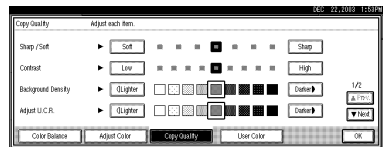

- 2** Press **[OK]**.

## Adjusting the contrast

- 1** Adjust by pressing **[Low]** or **[High]**.

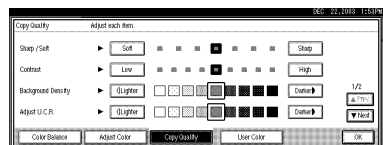


- 2** Press **[OK]**.



## Adjusting the background density

- 1 Adjust by pressing [Lighter] or [Darker].

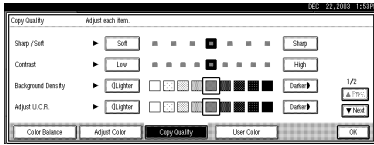


### Note

- Adjust to a lighter density when copying dark textured originals, such as newspaper or recycled paper.
- Adjust to a darker density when darkening the color of markers or highlighters. However, highlighter pen colors are difficult to reproduce. Depending on the color used, they may not come out on copies, or may come out as a different color.

- 2 Press [OK].

## Adjusting the U.C.R.


- 1 Adjust by pressing [Lighter] or [Darker].

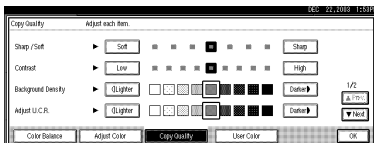

- 2 Press [OK].

## Adjusting the text/photo sensitivity

- 1 Press [▼Next].
- 2 Adjust by pressing [Text] or [Photo].

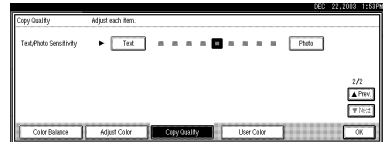

### Note

- Adjust toward "Text" if parts of the texts are faded or are not clear. Adjust toward "Photo" if the outline of photos becomes dark.

- 3 Press [OK].

# User Color

You can register colors created by adjusting the density of yellow, magenta, cyan, and black. You can also name the colors that you register, and print out registered colors.

## Reference

For types and examples of the image adjustment functions, see p.iii “What You Can Do with This Machine <Color Functions/Color Adjustments>”.

The following show you how to create colors:

- Adjust the density of each color using the density of a chosen basic color.
- Directly specify the density of each color using the number keys.


## Note

- Adjust the colors to be registered such that the total density of yellow, magenta, cyan, and black is under 255%.
- When the total density of a registered color is over 256%, it will be corrected to 255%.
- When copying with user colors, the finer shades may vary depending on the condition of the machine.
- In order to correctly reproduce originals, the values entered are corrected by the machine, and copies are made using the optimum values. Therefore, there may be slight color differences when copying using “Text” and when using “Photo”.


- Up to 15 colors can be registered.
- Sample prints of user colors can also be made on an A4  $\square$ ,  $8\frac{1}{2}$ "  $\square$   $\times$  11"  $\square$  size page or on an A3  $\square$ , 11"  $\times$  17"  $\square$  size page.
- Printing out a user color sample will be counted under the full color counter.

## Adjusting Colors Based on the Selected Color

- 1 Press the **[Adjust/Program Color]** key.



- 2 Press **[User Color]**.

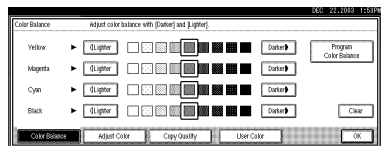


- 3 Select the number (1–15) you want to store the user color in.

## Note

- The settings of the user color will change when selecting the number already displayed by the color name.

- 4** Select the color to be used as a base from **[Basic Color]**.

The density of each color for the selected color is displayed.

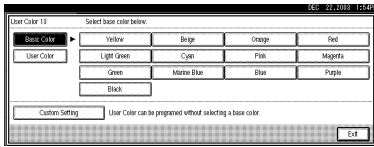

#### Note

- Press **[Custom Setting]** to directly specify the density of each color with the number keys. See p.94 “Mixing Colors Manually with the Number Keys”


### Selecting from user colors

- 1** Press **[User Color]**.
- 2** Select from the registered colors.

- 5** Specify the color density.

### Using **[+]** **[-]**


- 1** Specify the density in percentages (%) using **[+]** or **[-]**.

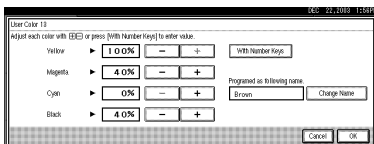

### Using **[With Number keys]**

- 1** Press **[With Number keys]**.
- 2** Select the color that you want to adjust.

- 3** Enter the density in percentages (%) using the number keys, and then press **[#]**.

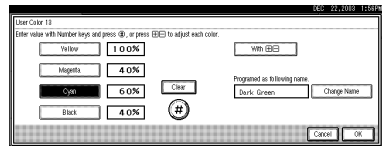

#### Note

- If you want to use **[+]** or **[-]**, press **[With + -]**.
- If you enter the wrong density, press **[Clear]** or the **[Clear/Stop]** key, and then re-enter the correct density.
- Repeat steps **2** and **3** to specify the density of multiple colors.

### When renaming a color

- 1** Press **[Change Name]**.
- 2** Enter the name of the color (up to 16 characters), and then press **[OK]**.

#### Reference

“Entering Text” *General Settings Guide*.

- 6** Check the density and name of the color, and then press **[OK]**.
- 7** Press **[Exit]**.

## Mixing Colors Manually with the Number Keys

- 1** Press the **[Adjust/Program Color]** key.
- 2** Press **[User Color]**.
- 3** Select the number (1–15) that you want to store the user color in.

### Note

- The settings of the user color will change when selecting the number already displayed by the color name.

- 4** Press **[Custom Setting]**.
- 5** Select the color that you want to adjust.
- 6** Enter the density in percentages (%) with the number keys, and then press **[#]**.

### When renaming a color

- 1** Press **[Change Name]**.
- 2** Enter the name of the color (up to 16 characters can be used), and then press **[OK]**.

### Reference

“Entering Text” *General Settings Guide*.

- 7** Check the names of each color, and then press **[OK]**.

### Note

- Repeat steps **5** to **7** if you want to specify the density of multiple colors.

- 8** Press **[Exit]**.

## Deleting User Colors

### Note

- You cannot delete colors registered in the program or registered colors currently in use.





- 1** Press the **[Adjust/Program Color]** key.
- 2** Press **[User Color]**.
- 3** Press **[Delete]**.
- 4** Select the number of the user color you want to delete.
- 5** Press **[Delete]**.
- 6** Press **[Exit]**.

## Sampling the User Colors

- 1** Press the **[Adjust/Program Color]** key.
- 2** Press **[User Color]**.
- 3** Make sure that the paper is of the correct size, and then press **[Print Sample of User Color]**.

The sample of user colors is output to the standard tray.

### Note

- The user colors will be copied on a A4 , 8<sup>1</sup>/<sub>2</sub>" × 11"  sheet or a A3 , 11" × 17"  sheet.

# 4. Troubleshooting











## If Your Machine Does Not Operate As You Want

### When a Message Is Displayed

The following chart contains explanations of common messages. If other messages are displayed, then follow the instructions as displayed.



#### Note

For messages not listed here, see "Troubleshooting" *General Settings Guide*.

Message	Causes	Solutions
Cannot detect original size.	An irregular original is placed. See p.12 "Sizes difficult to detect".	Place custom size originals on the exposure glass. See p.14 "Placing Originals on the Exposure Glass".
		Enter the horizontal and vertical size of the custom size original. See p.14 "Placing Originals on the Exposure Glass".
		Select paper manually, not with the Auto Paper Select function.
		Do not use the Auto Reduce/Enlarge function.
Original is not placed.	Place originals.	
Check original orientation.	There is no copy paper in the same orientation as the originals.	Place the original in the same orientation as the copy paper.
Check paper size.	An irregular paper size is set.	Press the <b>[Start]</b> key and copying will start on the selected paper.
Rotate Sort is not available with this image size.	A paper size for which Rotate Sort is not available is selected.	Select a proper paper size. See p.130 "Sort, Rotate Sort, Stack".
Cannot punch paper of this size.	The Punch function cannot be used with paper size selected.	The following paper sizes are available for Punch mode: A3  , B4 JIS  , A4   , B5 JIS  , A5  , 11"×17"  , 8 <sup>1</sup> / <sub>2</sub> "×14"  , 8 <sup>1</sup> / <sub>2</sub> "×11"   . Select one of these sizes.
It is over stapling capacity.	The number of sheets per set is over the staple capacity.	Check the stapler capacity. See p.132 "Staple".

Message	Causes	Solutions
Cannot staple paper of this size.	The Staple function cannot be used with the paper size selected.	Select a paper size that can be used with the Staple function. See p.132 "Staple".
Duplex is not available with this paper size.	A paper size not available when using the Duplex function has been selected.	Select a proper paper size. See p.135 "Duplex".
Maximum number of sets is *.	The number of copies exceeds maximum copy quantity.	You can change the maximum copy quantity. See p.113 "Max. Copy Quantity".
Cannot copy. Original is being scanned by other functions.	The Document Server function is in use.	To cancel a job being processed, press <b>[Exit]</b> , and then press the <b>[Document Server]</b> key. Next, press the <b>[Clear/Stop]</b> key. When the message "[Stop] key was pressed. Stop storing?" is displayed, press <b>[Stop]</b> .


# If You Cannot Make Clear Copies

Problem	Causes	Solutions
Copies appear dirty.	The image density is too dark.	Adjust the image density. See p.33 "Adjusting Copy Image Density".
	Auto Image Density is not selected.	Select Auto Image Density. See p.33 "Adjusting Copy Image Density".
The reverse side of an original image is copied.	The image density is too dark.	Adjust the image density. See p.33 "Adjusting Copy Image Density".
	Auto Image Density is not selected.	Select Auto Image Density. See p.33 "Adjusting Copy Image Density".
A shadow appears on copies if you use pasted originals.	The image density is too dark.	Adjust the image density. See p.33 "Adjusting Copy Image Density". Change the orientation of the original. Put tape over pasted parts.
The same copy area is dirty whenever making copies.	The exposure glass or ADF is dirty.	Clean them. See "Maintaining Your Machine" <i>General Settings Guide</i> .
Copies are too light.	The image density is too light.	Adjust the image density. See p.33 "Adjusting Copy Image Density".
	The paper size is not suitable.	Use a recommended paper size.  <b>Note</b> <input type="checkbox"/> A light copy may result when you use damp or rough grain paper.
	The toner cartridge is almost empty.	Add toner. See "Adding Toner" <i>General Settings Guide</i> .
Parts of the image are not copied.	The original is not set correctly.	Place originals correctly. See p.13 "Placing Originals".
	An irregular paper size is selected.	Select a proper paper size.
Copies are blank.	The original is not placed correctly.	When using the exposure glass, place originals face down. When using the ADF, place them face up. See p.13 "Placing Originals".
A moiré pattern is produced on copies. 	Original has a dot pattern image, or too many lines.	Position the original on the exposure glass at a slight angle.

# If You Cannot Make Copies As You Want

This section explains causes of, and remedies for, unexpected copy results.

◆ **Basic**

Problem	Causes	Solutions
Copies are not stapled.	There are jammed staples in the stapler.	Remove jammed staples. See “Removing Jammed Staples” <i>General Settings Guide</i> .   <b>Note</b> <input type="checkbox"/> After removing jammed staples, staples might not eject the first few times you try to use the stapler.
	The number of copies exceeds stapler capacity.	Check the stapler capacity. See p.132 “Staple”.
	Copy paper is curled.	Turn the copy paper over in the tray.
Staples are wrongly positioned.	Originals are not placed correctly.	Check originals are placed in the correct position. See p.47 “Staple”.
You cannot combine several functions.	Selected functions cannot be used together.	Check the combination of functions and make the settings again. See p.127 “Combination Chart”.
When sorting, the pages are divided into two blocks.	The memory became full in the middle of sorting and the pages were delivered in two blocks.	You can interrupt copying when memory becomes full. See p.124 “Memory Full Auto Scan Restart”.
Paper does not output during printing with stapling.	If you stop printing while using the staple function, sheets not stapled during printing may be left in the staple unit.	Press the <b>[Clear Modes]</b> key and cancel copy settings, including stapling.
Colors changed even though they were not selected.	If color range is set to “Wider” and if red is selected, colors such as magenta and orange may change.	Adjust the color range by setting the color width. See p.125 “Adjust Color Image”.
Colors not selected will be erased when using Erase mode.	If color range is set to “Wider” and if red is selected, colors such as magenta and orange may change.	Adjust the color range by setting the color width. See p.125 “Adjust Color Image”.



### ◆ Edit

Problem	Causes	Solutions
When using the Double Copies function, parts of the original image are not copied.	The original and copy paper combination is not correct.	Select A3 <input type="checkbox"/> for A4 <input type="checkbox"/> originals and A4 for A5 originals. See p.64 "Double Copies".
When using the Border, Center, or Center/Border function, parts of the original image are not copied.	You set a wide erased margin.	Make the margin width narrower. You can adjust it between 2-99 mm. See "Erase Border Width" and "Erase Center Width" in p.117 "Edit 1/2". Place originals correctly.
	Originals are not scanned correctly.	Place originals correctly.
When using the Margin Adjustment function, parts of the original image are not copied.	You set a wide erased margin.	Set a narrower margin with User Tools. You can set the width between 0-30 mm (0"-1.2"). See p.117 "Front Margin: Left/Right", p.117 "Front Margin: Top/Bottom", p.117 "Back Margin: Left/Right", and p.117 "Back Margin: Top/Bottom".
	There is a lack of margin space on the opposite side of the binding position.	
When using the Image Repeat function, the original image is not copied repeatedly.	You selected copy paper of the same size as the originals, or you did not select a proper reproduction ratio.	Select copy paper of a larger size than the originals.
		Select a proper reproduction ratio.

### ◆ Stamp

Problem	Causes	Solutions
The stamp position is wrong.	The paper orientation is wrong.	Check the paper orientation and stamp position.

❖ **Combine**

Problem	Causes	Solutions
You cannot fold copies into a book using the Magazine function.	Combine Original Magazine Format is not set correctly.	Change the setting. See p.120 "Orientation: Magazine"
When using the Combine function, parts of the image are not copied.	You specified a reproduction ratio that does not match the sizes of originals and copy paper.	When you specify a reproduction ratio using the Manual Paper Select function, make sure the ratio matches originals and the copy paper.  <b>Note</b> <input type="checkbox"/> Select the correct reproduction ratio before using the Combine function.
Copies are not in correct order.	You placed the originals in incorrect order.	When placing a stack of originals in the ADF, the last page should be on the bottom.
		If you place an original on the exposure glass, start with the first page to be copied.


❖ **Duplex**

Problem	Causes	Solutions
When using Duplex, copy is made Top/Bottom even though Left/Right is selected.	You placed the originals in the wrong orientation.	Place the originals in the correct orientation. See p.13 "Original Orientation".
Copies are not in correct order.	You placed the originals in incorrect order.	When placing a stack of originals in the ADF, the first page should be on top.
		If you place an original on the exposure glass, start with the first page to be copied.

## When Memory Is Full

### Note

- If you set **[Memory Full Auto Scan Restart]** in User Tools (see p.124 “Memory Full Auto Scan Restart”) to **[Yes]**, even if memory becomes full, the memory overflow message will not be displayed. The machine will make copies of scanned originals first, then automatically scan and copy remaining originals. When this happens, the resulting sorted pages will not be sequential.

Message	Causes	Solutions
<p>Memory is full.* originals have been scanned.</p> <p>Press <b>[Print]</b> to copy scanned originals. Do not remove remaining originals.</p> <p> <b>Note</b></p> <p><input type="checkbox"/> Copying will stop and this message will be displayed when the memory is full.</p>	<p>The scanned original exceeds the number of pages that can be stored in memory.</p>	<p>Press <b>[Print]</b> to print out already scanned originals and then delete scan data.</p> <p>Or, press <b>[Clear]</b> to simply delete scan data.</p>
<p>Press <b>[Resume]</b> to scan and copy remaining originals.</p> <p><b>[Stop] [Resume]</b></p>	<p>The machine checks if the remaining originals should be copied, after the scanned original is printed.</p>	<p>To continue copying, remove all copies, and then press <b>[Resume]</b>. To stop copying, press <b>[Stop]</b>.</p>



# 5. User Tools (Copier/Document Server Features)

## User Tools Menu (Copier/Document Server Features)

User Tools Item Names	Default Settings
General Features 1/5 See p.112 "General Features <sup>1</sup> / <sub>5</sub> ".	
Auto Paper Select Priority	ON
Paper Display	Display
Original Type Display	Display
Original Type Priority	Full Color/Two-color: Text/Photo
	B & W/Single Color: Text/Photo
Original Photo Type Priority	•Text/Photo: Printed Photo
	•Photo: Printed Photo
Auto Tray Switching	With image rotation
General Features 2/5 See p.113 "General Features <sup>2</sup> / <sub>5</sub> ".	
Duplex Mode Priority	1 Sided→1 Sided (metric) 1 Sided→2 Sided (inch)
Copy Orientation in Duplex Mode	Top to Top
Original Orientation in Duplex Mode	Top to Top
Change Initial Mode	Standard
Max. Copy Quantity	999 Sheets
Tone: Original remains	ON
Job End Call	ON
General Features 3/5 See p.114 "General Features <sup>3</sup> / <sub>5</sub> ".	
Copy Function Key: F1~F5	<ul style="list-style-type: none"> <li>• F1: 1 Sided→2 Sided: T to T</li> <li>• F2: 2 Sided: T to T→2 Sided: T to T</li> <li>• F3: 1 Sided→1 Sided Combine</li> <li>• F4: 1 Sided→1 Sided Combine: 4 originals</li> <li>• F5: Create Margin</li> </ul>

User Tools Item Names	Default Settings
General Features 4/5 See p.115 "General Features <sup>4</sup> / <sub>5</sub> ".	
Document Server Storage Key:F1~F5	<ul style="list-style-type: none"> <li>• F1: 2 Sided Original Top to top</li> <li>• F2: 1 Sided→1 Sided Combine</li> <li>• F3: 1 Sided→1 Sided Combine: 4 originals</li> <li>• F4: 1 Sided→1 Sided Combine: 8 originals</li> <li>• F5: Create Margin</li> </ul>
General Features 5/5 See p.115 "General Features <sup>5</sup> / <sub>5</sub> ".	
Clear Bypass Mode	Clear
Color Mode Priority	Black & White
Two-color Mode Priority	Red & Black
Auto Image Density Priority	Full Color / Two-color: OFF
	B & W / Single Color: ON
Reproduction Ratio 1/2 See p.116 "Reproduction Ratio <sup>1</sup> / <sub>2</sub> ".	
Shortcut R/E	Metric version <ul style="list-style-type: none"> <li>•Shortcut R/E 1: 71%</li> <li>•Shortcut R/E 2: 141%</li> <li>•Shortcut R/E 3: 93%</li> </ul> Inch version <ul style="list-style-type: none"> <li>•Shortcut R/E 1: 73%</li> <li>•Shortcut R/E 2: 155%</li> <li>•Shortcut R/E 3: 93%</li> </ul>
Enlarge 1~5	Metric version <ul style="list-style-type: none"> <li>•Enlarge 1: 115%</li> <li>•Enlarge 2: 122%</li> <li>•Enlarge 3: 141%</li> <li>•Enlarge 4: 200%</li> <li>•Enlarge 5: 400%</li> </ul> Inch version <ul style="list-style-type: none"> <li>•Enlarge 1: 121%</li> <li>•Enlarge 2: 129%</li> <li>•Enlarge 3: 155%</li> <li>•Enlarge 4: 200%</li> <li>•Enlarge 5: 400%</li> </ul>
Priority Setting: Enlarge	Metric version 141% Inch version 155%

User Tools Item Names	Default Settings
Reproduction Ratio 2/2 See p.116 "Reproduction Ratio $2/2$ ".	
Reduce 1~6	Metric version <ul style="list-style-type: none"> <li>•Reduce 1: 25%</li> <li>•Reduce 2: 50%</li> <li>•Reduce 3: 65%</li> <li>•Reduce 4: 71%</li> <li>•Reduce 5: 75%</li> <li>•Reduce 6: 82%</li> </ul> Inch version <ul style="list-style-type: none"> <li>•Reduce 1: 25%</li> <li>•Reduce 2: 50%</li> <li>•Reduce 3: 65%</li> <li>•Reduce 4: 73%</li> <li>•Reduce 5: 78%</li> <li>•Reduce 6: 85%</li> </ul>
Priority Setting: Reduce	Metric version: 71% Inch version: 73%
Ratio for Create Margin	93%
R/E Priority	Reduce
Edit 1/2 See p.117 "Edit $1/2$ ".	
Front Margin: Left/Right	Metric version: Left 5mm Inch version: Left 0.2"
Back Margin: Left/Right	Metric version: Right 5mm Inch version: Right 0.2"
Front Margin: Top/Bottom	Metric version: T/B 0mm Inch version: T/B 0"
Back Margin: Top/Bottom	Metric version: T/B 0mm Inch version: T/B 0"
1 Sided→2 Sided Auto Margin: TtoT	Metric version: Right 5mm Inch version: Right 0.2"
1 Sided→2 Sided Auto Margin: TtoB	Metric version: T/B 0mm Inch version: T/B 0"
Erase Border Width	Metric version: 10mm Inch version: 0.4"
Erase Original Shadow in Combine	Yes
Erase Center Width	Metric version: 10mm Inch version: 0.4"

User Tools Item Names		Default Settings
Edit 2/2 See p.118 "Edit 2/2".		
Front Cover Copy in Combine		Combine
Copy Order in Combine		From left to right
Image Repeat Separation Line		None
Double Copies Separation Line		None
Separation Line in Combine		None
Orientation: Magazine		Open to left
Stamp See p.121 "Stamp".		
Preset Stamp	Stamp Priority	Copy
	Stamp Language	English
	Stamp Position	Metric version
		<ul style="list-style-type: none"> <li>• Position: Top right</li> <li>• Top Margin: 24mm</li> <li>• Right Margin: 24mm</li> </ul> Inch version <ul style="list-style-type: none"> <li>• Position: Top right</li> <li>• Top Margin: 1.0"</li> <li>• Right Margin: 1.0"</li> </ul>
	Stamp Format:	Size: 1 X
		Density: Normal
		Page to Stamp: All pages
Stamp Color:	Black	
User Stamp	Program/Delete Stamp	
	Stamp Position: 1~4	Metric version
		<ul style="list-style-type: none"> <li>• Position: Top right</li> <li>• Top Margin: 24mm</li> <li>• Right Margin: 24mm</li> </ul> Inch version <ul style="list-style-type: none"> <li>• Position: Top right</li> <li>• Top Margin: 1.0"</li> <li>• Right Margin: 1.0"</li> </ul>
	Stamp Format: 1~4	All pages
Stamp Color: 1~4	Black	

5



User Tools Item Names	Default Settings	
Date Stamp	Format	Metric version: DD/MM/YYYY Inch version: MM/DD/YYYY
	Font	Font 1
	Stamp Position	Metric version <ul style="list-style-type: none"> <li>• Position: Top left</li> <li>• Top Margin: 8mm</li> <li>• Right Margin: 32mm</li> </ul> Inch version <ul style="list-style-type: none"> <li>• Position: Top left</li> <li>• Top Margin: 0.3"</li> <li>• Right Margin: 0.8"</li> </ul>
	Stamp Setting	All pages
	Size	Auto
	Superimpose	No
	Stamp Color	Black

User Tools Item Names		Default Settings
Page Numbering	Stamp Format	P1, P2...
	Font	Font 1
	Size	Auto
	Duplex Back Page Stamping Position	Opposite position
	Page Numbering in Combine	Per original
	Stamp Position:	Metric version <ul style="list-style-type: none"> <li>• Position P1, 1/5, P.1, 1: Top right -1-, 1-1: Bottom center</li> <li>• Top/Bottom Margin P1, 1/5, P.1, 1: 12mm -1-, 1-1: 8mm</li> <li>• Left/Right Margin P1, 1/5, P.1, 1: 12mm -1-, 1-1: 0mm</li> </ul> Inch version <ul style="list-style-type: none"> <li>• Position P1, 1/5, P.1, 1: Top right -1-, 1-1: Bottom center</li> <li>• Top/Bottom Margin P1, 1/5, P.1, 1: 0.5" -1-, 1-1: 0.3"</li> <li>• Left/Right Margin P1, 1/5, P.1, 1: 0.5" -1-, 1-1: 0.0"</li> </ul>
	Superimpose	No
Stamp Color	Black	
Input/Output See p.124 "Input/Output".		
Switch to Batch	Batch	
SADF Auto Reset	5 seconds	
Rotate Sort: Auto Paper Continue	No	
Auto Sort	No	
Memory Full Auto Scan Restart	No	
Select Stack Function	Stack	
Select Stapling position	Top 2	
Letterhead Setting	No	

User Tools Item Names	Default Settings
Adjust Color Image See p.125 "Adjust Color Image".	
Background Density of ADS (Full Color / Two-color)	Center of the 5 level adjustment
Color Sensitivity	Center of the 5 level adjustment
A.C.S. Sensitivity	Center of the 5 level adjustment
A.C.S. Priority	Full Color

## Accessing User Tools (Copier/Document Server Features)

This section is for key operators in charge of this machine. With User Tools can change the machine's default settings.

### Note

- ❑ Be sure to exit User Tools and return to the initial copy display after all settings are finished. This section describes system settings you can set for the copier function.
- ❑ The selected key is highlighted.
- ❑ Any changes you make with User Tools remain in effect even if the main power switch or operation switch is turned off, or the **[Clear Modes]** key is pressed.


### Reference

For details, see “Changing Default Settings” in “User Tools (System Settings)”, *General Settings Guide*.

## Changing Default Settings

- 1** Press the **[User Tools/Counter]** key.

The User Tools main menu appears.



### Note

- ❑ When the key operator code is set, the key operator code input display appears when changing the default settings. Enter the registered key operator code beforehand. For key operator codes, see “Key Operator Tools”, *General Settings Guide*.

- 2** Press **[Copier/Document Server Features]**.

The Copier/Document Server Features menu is displayed.

- 3** Select the menu you want to set.

The setting display for each menu is displayed.

### Reference

See p.103 “User Tools Menu (Copier/Document Server Features)”.

- 4** Change settings by following the instructions on the display panel, and then press **[OK]**.


---

## Exiting User Tools

---

- 1 After changing default settings, press **[Exit]** on the User Tools main menu.

Changes to User Tools are complete, and the machine is ready to copy.

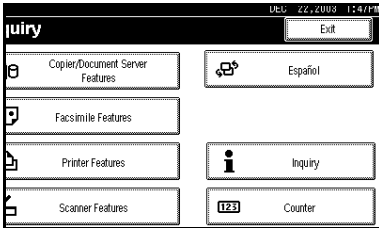

 **Note**

- You can also exit User Tools by pressing the **[User Tools/Counter]** key.

# Settings You Can Change with User Tools

## General Features <sup>1</sup>/<sub>5</sub>

### ❖ Auto Paper Select Priority

Auto Paper Select is the default setting. You can cancel this setting. See p.35 “Selecting Copy Paper”.

#### Note


- Default: ON

### ❖ Paper Display

You can choose to have the available paper trays and sizes shown on the initial display.

#### Note

- Default: *Display*
- If you select [**Hide**], the display is shown as below. Press [**Auto Paper Select**] to display paper sizes.

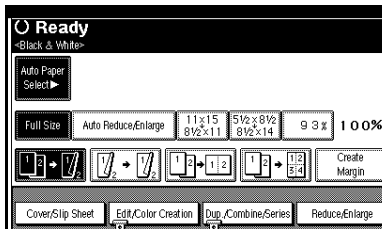


### ❖ Original Type Display

You can have the original types shown on the initial display.

#### Note

- Default: *Display*
- If you select [**Hide**], the display is as below.

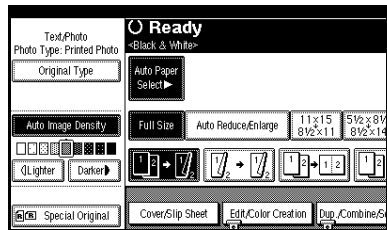

### ❖ Original Type Priority

You can select the original type effective when the power is turned on, or modes cleared. See p.34 “Selecting the Original Type”.

#### Note

- Default: Full Color/Two-Color: *Text/Photo*, B&W/Single Color: *Text/Photo*

### ❖ Original Photo Type Priority

When you select “Text/Photo” or “Photo” in “Original Type Priority”, you can change the settings of the selected original type.

#### Note

- Default: Text/Photo: *Printed Photo*, Photo: *Printed Photo*

### ❖ Auto Tray Switching

If you load paper of the same size in two or more trays, the machine automatically shifts to the other when the first tray runs out of paper (when Auto Paper Select is selected.) This function is called "Auto Tray Switching". This setting specifies whether to use Auto Tray Switching or not.

#### Note

- Default: *With Image Rotation*
- [With Image Rotation]** Use to copy when using the Auto Tray Switching function.
- [Without Image Rotation]** Only copies with Auto Tray Switching if you load paper of the same size and in the same orientation in two or more trays. If the paper is not the same size or in the same orientation, copying is interrupted and the message "Load paper." is displayed.
- [Off]** When a paper tray runs out of paper, copying is interrupted and the message "Load paper." is displayed.

## General Features <sup>2</sup>/<sub>5</sub>

### ❖ Duplex Mode Priority

You can select the type of the Duplex function effective when the power is turned on, or modes are cleared.

#### Note

- Default:
  - Metric version: *1 Sided*→*1 Sided*
  - Inch version: *1 Sided*→*2 Sided*

### ❖ Copy Orientation in Duplex Mode

You can set the copy orientation when making two-sided copies.

#### Note

- Default: *Top to Top*

### ❖ Original Orientation in Duplex Mode

You can set the original orientation when making two-sided copies.

#### Note

- Default: *Top to Top*

### ❖ Change Initial Mode

You can select standard mode or Program No.10 as the mode effective when power is turned on, or modes are cleared.

#### Note

- Default: *Standard*

### ❖ Max. Copy Quantity

The maximum copy quantity can be set between 1 and 999.

#### Note

- Default: *999 Sheets.*

### ❖ Tone: Original remains

The beeper (key tone) sounds if you forget to remove originals after copying.

#### Note

- Default: ON
- If Panel Tone in User Tools (System Settings) is **[OFF]**, the beeper does not sound, whatever the Tone: Original remains setting. See "Panel Tone" in "General Features", *General Settings Guide*.

### ❖ Job End Call

You can choose to have the beeper sound when copying is complete.


#### Note

- Default: ON
- If Panel Tone of User Tools (System Settings) settings is **[ON]**, the machine beeps to notify you that it did not complete a job for reasons such as: the paper tray ran out of paper, or a paper jam occurred.

## General Features <sup>3</sup>/<sub>5</sub>

### ❖ Copy Function Key: F1-F5

You can assign frequently used functions to function keys F1 to F5.

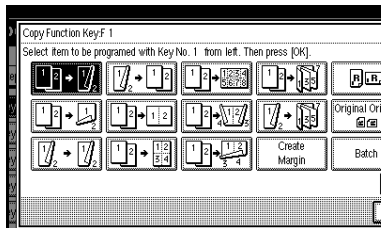

#### Note


- Default:
  - Copy Function Key: F1:  
1 Sided → 2 Sided: T to T
  - Copy Function Key: F2:  
2 Sided: T to T → 2 Sided: T to T
  - Copy Function Key: F3:  
1 Sided → 1 Sided Combine
  - Copy Function Key: F4:  
1 Sided → 1 Sided Combine:  
4 originals
  - Copy Function Key: F5:  
Create Margin



## General Features <sup>4</sup>/<sub>5</sub>

### ❖ Document Server Storage Key: F1–F5

You can assign frequently used functions to function keys F1 to F5. You can also change assigned functions.

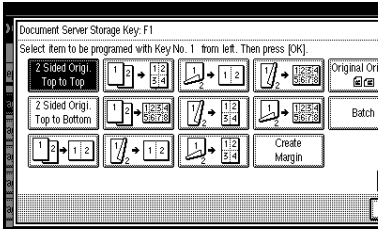

#### Note

##### Default:

- Document Server Storage Key: F1: *2 Sided Original Top to top*
- Document Server Storage Key: F2: *1 Sided → 1 Sided Combine*
- Document Server Storage Key: F3: *1 Sided → 1 Sided Combine: 4 originals*
- Document Server Storage Key: F4: *1 Sided → 1 Sided Combine: 8 originals*
- Document Server Storage Key: F5: *Create Margin*

## General Features <sup>5</sup>/<sub>5</sub>

### ❖ Clear Bypass Mode

You can set whether to “Clear” or “Do not Clear” bypass tray settings when the machine is turned on, reset, or modes are cleared.

#### Note

- Default: *Clear*

### ❖ Color Mode Priority

You can select to prioritize “Auto Color Select”, “Full Color”, or “Black & White” when the machine is turned on, reset, or modes are cleared.

#### Note

- Default: *Black & White*

### ❖ Two-color Mode Priority

You can set whether to prioritize “Red & Black” or “Two-color” in Two-color mode.

#### Note

- Default: *Red & Black*

### ❖ Auto Image Density Priority

You can set whether Auto Image Density is “ON” or “OFF” when the machine is turned on, reset, or modes are cleared.

#### Note

- Default: Full Color/Two-color: *OFF*, B&W/Single Color: *ON*
- When using the Auto Color Select function, the settings of Full Color/Two-color will be effective.

## Reproduction Ratio 1/2

### ❖ Shortcut R/E

You can register up to three frequently used Reduce/Enlarge ratios other than the fixed Reduce/Enlarge ratio and have them shown on the initial display. You can also change registered Reduce/Enlarge ratios.

If no Reduce/Enlarge ratio has been set when selecting [Shortcut R/E 1], [Shortcut R/E 2], or [Shortcut R/E 3], enter the ratio using the number keys.

### ❖ Enlarge 1-5

You can customize available enlargement ratios by pressing [Reduce/Enlarge], followed by [Enlarge].

121% 8 1/2 x 14 11 x 17	129% 8 1/2 x 11 11 x 17	155% 5 1/2 x 8 1/2 8 1/2 x 14	200% 5 1/2 x 8 1/2 11 x 17	400%
Enlarge1	Enlarge2	Enlarge3	Enlarge4	Enlarge5

### Note

Default:

- Metric version:
  - Enlarge 1: 115%
  - Enlarge 2: 122%
  - Enlarge 3: 141%
  - Enlarge 4: 200%
  - Enlarge 5: 400%
- Inch version:
  - Enlarge 1: 121%
  - Enlarge 2: 129%
  - Enlarge 3: 155%
  - Enlarge 4: 200%
  - Enlarge 5: 400%

When selecting [User Enlrg. Ratio], enter a ratio using the number keys (in the range of 101 to 400%).

### ❖ Priority Setting: Enlarge

You can set the ratio with priority when [Reduce/Enlarge] is pressed, followed by [Enlarge].

### Note

Default:

- Metric version: 141%
- Inch version: 155%

## Reproduction Ratio 2/2

### ❖ Reduce 1-6

You can customize available reduction ratios by pressing [Reduce/Enlarge], followed by [Reduce].

25% 11 x 17 5 1/2 x 8 1/2	50% 11 x 17 8 1/2 x 11	65% 11 x 17 8 1/2 x 11	75% 11 x 15 8 1/2 x 11	78% 8 1/2 x 14 8 1/2 x 11	85% F 8 1/2 x 11
Reduce1	Reduce2	Reduce3	Reduce4	Reduce5	Reduce6

### Note

Default:

- Metric version:
  - Reduce 1: 25%
  - Reduce 2: 50%
  - Reduce 3: 65%
  - Reduce 4: 71%
  - Reduce 5: 75%
  - Reduce 6: 82%
- Inch version:
  - Reduce 1: 25%
  - Reduce 2: 50%
  - Reduce 3: 65%
  - Reduce 4: 73%
  - Reduce 5: 78%
  - Reduce 6: 85%

When selecting [User Redc.Ratio], enter a ratio using the number keys (in the range of 25 to 99%).

### ❖ Priority Setting: Reduce

You can set the ratio with priority when **[Reduce/Enlarge]** is pressed, followed by **[Reduce]**.

#### Note

- Default:
  - Metric version: 71%
  - Inch version: 73%

### ❖ Ratio for Create Margin

You can set a Reduce/Enlarge ratio when registering Create Margin in a shortcut key.

#### Note

- Default: 93%

### ❖ R/E Priority

Specifies which tab has priority on the display panel when **[Reduce/Enlarge]** is pressed.

#### Note

- Default: *Reduce*

---

## Edit 1/2

---

#### Note

- Enter the width of the binding margin using the number keys, as follows:
  - Metric version: 0–30 mm (1 mm increments)
  - Inch version: 0"–1.2" (0.1 in increments)
- Enter the width of the erased margin using the number keys as follows:
  - Metric version: 2–99 mm (1 mm increments)
  - Inch version: 0.1"–3.9" (0.1 in increments)

### ❖ Front Margin: Left/Right

You can specify left and right margins on the front side of copies using the Margin Adjustment function.

#### Note

- Default:
  - Metric version: *Left 5 mm*
  - Inch version: *Left 0.2"*

### ❖ Back Margin: Left/Right

You can specify left and right margins on the back side of copies using the Margin Adjustment function.

#### Note

- Default:
  - Metric version: *Right 5 mm*
  - Inch version: *Right 0.2"*

### ❖ Front Margin: Top/Bottom

You can specify top and bottom margins on the front side of copies using the Margin Adjustment function.

#### Note

- Default:
  - Metric version: *T/B 0 mm*
  - Inch version: *T/B 0.0"*

### ❖ Back Margin: Top/Bottom

You can specify top and bottom margins on the back side of copies using the Margin Adjustment function.

#### Note

- Default:
  - Metric version: *T/B 0 mm*
  - Inch version: *T/B 0.0"*

❖ **1 Sided→2 Sided Auto Margin: TtoT**

When using the 1 sided → 2 sided Duplex function, you can specify margins on the back side.

The margin is set to the same value as “**Back Margin: Left/Right**”.

 **Note**

- Default:
  - Metric version: *Right 5 mm*
  - Inch version: *Right 0.2”*

❖ **1 Sided→2 Sided Auto Margin: TtoB**

When using the 1 sided → 2 sided Duplex function, you can specify margins on the back side. The margin is set to the same value as “**Back Margin: Top/Bottom**”.

 **Note**

- Default:
  - Metric version: *T/B 0 mm*
  - Inch version: *T/B 0.0”*

❖ **Erase Border Width**

You can specify the width of erased border margins using this function.

 **Note**

- Default:
  - Metric version: *10 mm*
  - Inch version: *0.4”*

❖ **Erase Original Shadow in Combine**

In Combine Copy or Magazine Copy mode, you can specify whether to erase a 3mm, 0.1” bounding margin around all four edges of each original.

 **Note**

- Default: *Yes*

❖ **Erase Center Width**

You can specify the width of the erased center margins using this function.

 **Note**

- Default:
  - Metric version: *10 mm*
  - Inch version: *0.4”*

---

## Edit 2/2

---

 **Note**

- An image of approximately 1.5 mm (0.06”) will not be displayed as the width of the separation line, when specifying solid or broken lines.

❖ **Front Cover Copy in Combine**

You can make a combined copy on the front cover sheet when you select the Front Cover function.

Combine				Not Combined				
1	2	5	6	1	2	3	6	7
3	4	7	8		4	5	8	

GCST019E

 **Note**

- Default: *Combine*

### ❖ Copy Order in Combine

You can set the copy order when using the Combine function to Left to Right or Top to Bottom.

From Left to Right	From Top to Bottom

GCAH090E

### Note

- Default: *From left to right*

### ❖ Image Repeat Separation Line

You can select a separation line and color using the Image Repeat function from: None, Solid, Broken A, Broken B, or Crop Marks.

- None



- Solid



- Broken A



- Broken B



- Crop Marks



### Note

- Default: *None*
- Line color (Full Color): Yellow, Red, Cyan, Magenta, Green, Blue, Black
- Separation lines cannot be specified when using **[None]**.
- In “Black and White”, printing will be done in black; in “Single Color”, printing will be done in the specified color; in “Two-Color” (standard), printing will be done in the specified color of the black area; and in “Two-Color” (Red and Black), printing will be done in black.
- An image of approximately 1.5mm will not be displayed as the width of the separation line, when specifying solid or broken lines.

### ❖ Double Copies Separation Line

You can select a separation line using the Double Copies function from: None, Solid, Broken A, Broken B, or Crop Marks.

- None



- Solid



- Broken A



- Broken B



- Crop Marks



 **Note**

- Default: *None*
- Line color (Full Color): Yellow, Red, Cyan, Magenta, Green, Blue, Black
- Separation lines cannot be specified when using **[None]**.
- In “Black and White”, printing will be done in black; in “Single Color”, printing will be done in the specified color; in “Two-Color” (standard), printing will be done in the specified color of the black area; and in “Two-Color” (Red and Black), printing will be done in black.
- Images of approximately 1.5mm will not be displayed as the width of the separation line when solid or broken lines have been specified.

◆ **Separation Line in Combine**

You can select a separation line using the Combine function from: None, Solid, Broken A, Broken B, or Crop Marks. See p.57 “1 Sided Combine” and p.58 “2 Sided Combine”.

- None



- Solid



- Broken A



- Broken B



- Crop Marks



 **Note**

- Default: *None*
- Line color (Full Color): Yellow, Red, Cyan, Magenta, Green, Blue, Black
- Separation lines cannot be specified when using **[None]**.
- In “Black and White”, printing will be done in black; in “Single Color”, printing will be done in the specified color; in “Two-Color” (standard), printing will be done in the specified color of the black area; and in “Two-Color” (Red and Black), printing will be done in black.
- Images of approximately 1.5mm will not be displayed as the width of the separation line when solid or broken lines have been specified.

◆ **Orientation: Magazine**

You can select the orientation of copies to open when using Magazine function.

 **Note**

- Default: *Open to left*

 **Reference**

p.62 “How to fold and unfold copies to make a magazine”

## Stamp

### Preset Stamp $\frac{1}{4}$ - $\frac{4}{4}$

#### ❖ Stamp Priority

You can select the stamp type given priority when [**Preset Stamp**] is pressed. See p.70 "Preset Stamp".

##### **Note**

Default: *COPY*

#### ❖ Stamp Language

You can select the language of the stamp.

##### **Note**

Default: *English*

#### ❖ Stamp Position

You can set the position where the stamp is printed. Press the arrow keys to adjust the position.

##### **Note**

Default:

- Metric Version:
  - Position: *Top right*
  - Top Margin: *24 mm*
  - Right Margin: *24 mm*
- Inch Version:
  - Position: *Top right*
  - Top Margin: *1.0"*
  - Right Margin: *1.0"*

#### ❖ Stamp Format

You can adjust the stamp's size, density, and print page.

##### • Size

You can set the size of the stamp.

##### **Note**

Default: *1X*

##### • Density

You can set the pattern used to print the stamp.

##### **Note**

Default: *Normal*

Normal: The stamp is printed on the image. You cannot check which parts will overlap.

Lighter: The image can be seen through the stamp.

Lightest: The image appears even clearer than in the Lighter setting.

##### • Page to Stamp

You can have the stamp printed on the first page or all pages.

##### **Note**

Default: *All Pages*

#### ❖ Stamp Color

Sets the stamp print color.

##### **Note**

Default: *Black*

---

## User Stamp <sup>1/2-2/2</sup>

---

### ❖ Program/Delete Stamp

You can register, change, or delete these user stamp designs.

#### Note

- You can register up to four custom stamps with your favorite designs. See p.73 “To program the user stamp”.

#### Reference

For how to delete the user stamp, see p.74 “To delete the user stamp”.

### ❖ Stamp Position 1 - 4

You can set the position where the stamp is printed. Press the arrow keys to adjust the position.

#### Note

- Default:
  - Metric version:
    - Position: *Top right*
    - Top Margin: *24 mm*
    - Right Margin: *24 mm*
  - Inch version:
    - Position: *Top right*
    - Top Margin: *1.0"*
    - Right Margin: *1.0"*

### ❖ Stamp Format 1 - 4

You can adjust the print page for User Stamps 1 to 4 already registered.

- Page to Stamp  
Sets whether to print the stamp on all pages or only the first page.

#### Note

- Default: *All Pages*

### ❖ Stamp Color: 1 - 4

Sets the color registered in User Stamp color (1 to 4).

#### Note

- Default: *Black*

---

## Date Stamp

---

### ❖ Format

You can select the date format for the Date Stamp function.

#### Note

- Default:
  - Metric version: *DD/MM/YYYY*
  - Inch version: *MM/DD/YYYY*

### ❖ Font

You can select the Date Stamp font.

#### Note

- Default: *Font 1*
- This setting is linked to the Page Numbering function.

### ❖ Stamp Position

You can set the position where the stamp is printed. Press the arrow keys to adjust the position.

#### Note

- Default:
  - Metric version:
    - Position: *Top left*
    - Top Margin: *8 mm*
    - Left Margin: *32 mm*
  - Inch version:
    - Position: *Top left*
    - Top Margin: *0.3"*
    - Left Margin: *0.8"*



### ❖ Stamp Setting

You can have the date printed on the first page or all pages.

#### Note

Default: *All Pages*

### ❖ Size

You can set the Date Stamp size.

#### Note

Default: *Auto*

### ❖ Superimpose

You can have the Date Stamp printed in white where it overlaps black parts of the image.

#### Note

Default: *No*

### ❖ Stamp Color

You can set the selected priority color when printing the date.

#### Note

Default: *Black*

---

## Page Numbering $1/3-2/3$

---

### ❖ Stamp Format

You can select the page number format given priority when [Page Numbering] is pressed.

#### Note

Default: *P1, P2*

### ❖ Font

You can select the page number font.

#### Note

Default: *Font 1*

### ❖ Size

You can set the size of the page number.

#### Note

Default: *Auto*

### ❖ Duplex Back Page Stamping Position

You can set the position of the duplex back page number printed using the Duplex function.

#### Note

Default: *Opposite Position*

### ❖ Page Numbering in Combine

You can set page numbering when using the Combine and Page Numbering function together.

#### Note

Default: *Per original*

### ❖ Stamp Position

P1, P2... Stamp Position: 1/5, 2/5...

Stamp Position: -1-, -2-... Stamp

Position: P.1, P.2. Stamp Position: 1, 2... Stamp Position: 1-1, 1-2...

You can set the position where the stamp is printed.

Press the arrow keys to adjust the position.

### ❖ Superimpose

You can have page numbers printed in white where they overlap black parts of the image.

#### Note

Default: *No*

### ❖ Stamp Color

You can set the selected priority color when printing the date.

#### Note

Default: *Black*

## Input/Output

### ❖ Switch to Batch (SADF)

You can select to have the Batch or SADF function displayed when you press **[Special Original]**. See p.15 "Batch".

#### Note

Default: *Batch*

### ❖ SADF Auto Reset

In SADF mode, an original must be set within a specified time after the previous original has been fed. You can adjust this time from 3 seconds to 99 in 1 second increments.

#### Note

Default: *5 seconds*

### ❖ Rotate Sort: Auto Paper Continue

You can continue copying when paper of the required orientation has run out during rotate-sorting. See p.43 "Rotate Sort".

#### Note

If you select **[No]** :

- When paper of the required orientation runs out, the machine stops copying and prompts you to supply copy paper. When you load paper, the machine will continue copying.

If you select **[Yes]** :

- Copying continues using copy paper of a different orientation. The copy job will finish even if the machine is left unattended.

Default: *No*

### ❖ Auto Sort

You can specify whether the Sort function is to be selected when the machine is turned on, or when the functions are cleared.

#### Note

Default: *No*

### ❖ Memory Full Auto Scan Restart

If memory becomes full while scanning originals, the machine will copy the scanned originals first, and then automatically proceed scanning remaining originals. You can enable or disable this function.

#### Note

If you select **[No]** :

- When memory becomes full, the machine stops operation, allowing you to remove the copies on the output tray.

If you select **[Yes]** :

- You can leave the machine unattended to make copies, but sorted pages will not be sequential.

Default: *No*

### ❖ Select Stack Function

Specify whether Stack or Rotate Sort has priority on the initial display.

#### Note

Default: *Stack*

An 2 tray finisher or booklet finisher is required to use this function.

### ❖ Select Stapling Position

Specify which Top 2 staples or Bottom shown on the initial display with priority.

#### Note

- Default: *Top 2*
- The 2 tray finisher or booklet finisher is required to use this function.

### ❖ Letterhead Setting

If you select [**Yes**] for this function, the machine rotates images correctly.

#### Note

- Default: *No*
- Orientation-fixed (top to bottom) or two-sided paper might not print correctly depending on how the originals and paper are placed.

#### Reference

When using letterhead paper, pay attention to the paper orientation. See "Orientation-Fixed Paper or Two-Sided Paper" in "Loading Paper", *General Settings Guide*.

## Adjust Color Image

### ❖ Background Density of ADS(Full Color / Two-color)

The background density is adjusted to skip the texture and copy. You can adjust the background density up to 5 levels when in Full Color or Two-color.

#### Note

- Default: *Center of the 5 level adjustment*

### ❖ Color Sensitivity

You can adjust the tone of red in "Two color (Red & Black)", the color specified to convert in "Color Convert" and the color specified for "Erase Color", in 5 levels.

#### Note

- Default: *Center of the 5 level adjustment*
- When the color width has been set to "Wider", and the color to be deleted, for example is red, all the colors that are close to magenta and orange are deleted. If it's set to "Narrower" the color red will be deleted.

### ❖ A.C.S. Sensitivity

This 5-step setting determines the level of the standard used for discriminating between black & white originals and full color originals when "Auto Color Select" is selected.

#### Note

- Default: *Center of the 5 level adjustment*

◆ **A.C.S. Priority**

This setting determines the copy priority between “Black & White” and “Full Color” when “Auto Color Select” is selected.

 **Note**

Default: *Full Color*



# Supplementary Specifications

## ❖ Mixed Size mode

- Since small originals may not be correctly aligned with the original guide, the copy image may be slanted.
- Copying speed and scanning speed will be reduced.
- You can place originals of two different sizes at a time.

## ❖ Bypass Tray Copy

- The following paper sizes can be selected as the standard sizes: A3, A4, A5, A6, B4 JIS, B5 JIS, B6 JIS, Postcard, 11"×17", 8<sup>1</sup>/<sub>2</sub>"×14", 8<sup>1</sup>/<sub>2</sub>"×11", 5<sup>1</sup>/<sub>2</sub>"×8<sup>1</sup>/<sub>2</sub>", 7<sup>1</sup>/<sub>4</sub>"×10<sup>1</sup>/<sub>2</sub>", 8"×13", 8<sup>1</sup>/<sub>2</sub>"×13", 8<sup>1</sup>/<sub>4</sub>"×13", 12"×18"
- When the beeper is turned off, it will not sound when you insert paper into the bypass tray. See "Panel Tone" *General Settings Guide*.

## ❖ Preset Enlarge/Reduce

- You can select one of 12 preset ratios (5 enlargement ratios, 7 reduction ratios).
- You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or margins will be displayed on copies.
- Copies can be reduced or enlarged as follows:

### ❖ Metric version

Ratio (%)	Original → Copy paper size
400 (enlarge area by 16)	--
200 (enlarge area by 4)	A5→A3
141 (enlarge area by 2)	A4→A3, A5→A4
122	F→A3, A4→B4 JIS
115	B4 JIS→A3
93	--
82	F→A4, B4 JIS→A4
75	B4 JIS→F4, B4 JIS→F
71 (reduce area by 1/2)	A3→A4, A4→A5
65	A3→F
50 (reduce area by 1/4)	A3→A5, F→A5
25	--

### ◆ Inch version

Ratio (%)	Original → Copy paper size
400 (enlarge area by 16)	--
200 (enlarge area by 4)	$5\frac{1}{2}'' \times 8\frac{1}{2}'' \rightarrow 11'' \times 17''$
155 (enlarge area by 2)	$5\frac{1}{2}'' \times 8\frac{1}{2}'' \rightarrow 8\frac{1}{2}'' \times 14''$
129	$8\frac{1}{2}'' \times 11'' \rightarrow 11'' \times 17''$
121	$8\frac{1}{2}'' \times 14'' \rightarrow 11'' \times 17''$
93	--
85	F → $8\frac{1}{2}'' \times 11''$
78	$8\frac{1}{2}'' \times 14'' \rightarrow 8\frac{1}{2}'' \times 11''$
73	$11'' \times 15'' \rightarrow 8\frac{1}{2}'' \times 11''$
65	$11'' \times 17'' \rightarrow 8\frac{1}{2}'' \times 11''$
50 (reduce area by $\frac{1}{4}$ )	$11'' \times 17'' \rightarrow 5\frac{1}{2}'' \times 8\frac{1}{2}''$
25	--

### ◆ Zoom

- The reproduction ratios you can specify are 25–400%.
- You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or margins will be displayed on copies.

### ◆ Size Magnification

- If the calculated ratio is over the maximum or under the minimum ratio, it is automatically adjusted to within available range. However, with some ratios, parts of the image might not be copied or margins will be displayed on copies.
- The reproduction ratios you can specify are 25–400%.

### ◆ Directional Size Magnification

- The reproduction ratio you can specify are 25–400%.
- When entering a percentage ratio, you can specify any value in the permitted range, regardless of original or copy paper size. However, depending on settings and other conditions, part of the image may not be copied, or margins will be displayed on copies.
- When entering a size in millimeters or inches, and the calculated ratio is over the maximum or under the minimum ratio, it will be automatically adjusted to within available range. However, with some ratios, parts of the image might not be copied or margins will be displayed on copies.

◆ **Sort, Rotate Sort, Stack**









































- Paper sizes and orientations that can be used in the Shift Sort and Stack functions are as follows:

	2 tray finisher	Booklet finisher
Paper size and orientation	A3, B4 JIS, A4, B5 JIS, A5, 11" × 17", 8 1/2" × 14", 8 1/2" × 11"	A3, B4 JIS, A4, B5 JIS, 11" × 17", 8 1/2" × 14", 8 1/2" × 11"


- Paper sizes and orientations that can be used in the Rotate Sort function are A4, B5 JIS, 8 1/2" × 11" and 5 1/2" × 8 1/2".
- The number of copies that can be placed on the tray is as follows. When the number of copies exceeds capacity, remove copies from the tray.

	Paper size and orientation	Paper capacity and weight
Standard tray	<ul style="list-style-type: none"> <li>• A4 or smaller</li> <li>• 8 1/2" × 11" or smaller</li> </ul>	500 sheets (80 g/m <sup>2</sup> ) (20 lb.)
	<ul style="list-style-type: none"> <li>• B4 JIS or larger</li> <li>• 8 1/2" × 14" or larger</li> </ul>	250 sheets (80 g/m <sup>2</sup> ) (20 lb.)
External tray	A3, B4 JIS, A4, B5 JIS, A5, 11" × 17", 8 1/2" × 14", 8 1/2" × 11", 5 1/2" × 8 1/2"	100 sheets
Left tray	Left tray 1	
	A3, B4 JIS, A4, B5 JIS, A5, 11" × 17", 8 1/2" × 14", 8 1/2" × 11", 5 1/2" × 8 1/2"	100 sheets
	Left tray 2	
	A3, B4 JIS, A4, B5 JIS, A5, 11" × 17", 8 1/2" × 14", 8 1/2" × 11", 5 1/2" × 8 1/2"	250 sheets



	Paper size and orientation	Paper capacity and weight
2 tray finisher	Finisher shift tray 1	
	A4  , B5 JIS  , A5  , 8 <sup>1</sup> / <sub>2</sub> " × 11" 	500 sheets (80 g/m <sup>2</sup> ) (20 lb.)
	A3  , B4 JIS  , 11" × 17"  , 8 <sup>1</sup> / <sub>2</sub> " × 14" 	250 sheets (80 g/m <sup>2</sup> ) (20 lb.)
	Finisher shift tray 2 (No staple)	
	A4  , 8 <sup>1</sup> / <sub>2</sub> " × 11" 	2000 sheets (80 g/m <sup>2</sup> ) (20 lb.)
	A3  , B4 JIS  , A4  , B5 JIS  , 11" × 17"  , 8 <sup>1</sup> / <sub>2</sub> " × 14"  , 8 <sup>1</sup> / <sub>2</sub> " × 11" 	750 sheets (80 g/m <sup>2</sup> ) (20 lb.)
	A5 	500 sheets (80 g/m <sup>2</sup> ) (20 lb.)
	Finisher shift tray 2 (staple)	
	A4  , 8 <sup>1</sup> / <sub>2</sub> " × 11" 	1500 sheets (80 g/m <sup>2</sup> ) (20 lb.)
A3  , B4 JIS  , A4  , B5 JIS  , 11" × 17"  , 8 <sup>1</sup> / <sub>2</sub> " × 14"  , 8 <sup>1</sup> / <sub>2</sub> " × 11" 	750 sheets (80 g/m <sup>2</sup> ) (20 lb.)	
Booklet finisher	Finisher shift tray	
	A4  , B5 JIS  , 8 <sup>1</sup> / <sub>2</sub> " × 11" 	1000 sheets (80 g/m <sup>2</sup> ) (20 lb.)
	A3  , B4 JIS  , 11" × 17"  , 8 <sup>1</sup> / <sub>2</sub> " × 14" 	500 sheets (80 g/m <sup>2</sup> ) (20 lb.)
	Finisher booklet tray	
A3  , B4 JIS  , A4  , 11" × 17"  , 8 <sup>1</sup> / <sub>2</sub> " × 14"  , 8 <sup>1</sup> / <sub>2</sub> " × 11" 	(80 g/m <sup>2</sup> ) (20 lb.) <ul style="list-style-type: none"> <li>• 2–5 sheets: 20 sets</li> <li>• 6–10 sheets: 10 sets</li> </ul>	

 **Note**

-  When using the Rotate Sort or Staple functions, the capacity may be reduced.

❖ **Staple**

- The following types of paper cannot be stapled:
  - Translucent paper
  - OHP transparencies
  - Label paper (adhesive labels)
  - Thick paper
  - Curled paper
  - Paper of low stiffness
  - Paper of mixed sizes
- In the following cases, copies will be delivered to the shift tray without stapling:
  - When the number of sheets for one set is over stapler capacity
  - When memory reaches 0% during copying
- When using Double Copies, or [1 Sided→1 Sided], [1 Sided→2 Sided], [2 Sided→1 Sided], or [2 Sided→2 Sided] in Combine mode, select  paper for  original and  paper for  original.
- When using Double Copies, or [1 Sided 2 Pages→ 1 Sided Combine] and [1 Sided 4 Pages→ 2 Sided Combine] in Combine mode, select  paper for  original and  paper for  original.
- When using [Left 2] or [Top 2] with Double Copies, or [1 Sided→1 Sided], [1 Sided→2 Sided], [2 Sided→1 Sided], or [2 Sided→2 Sided] in Combine mode, select  paper for  original and  paper for  original.
- When the finisher is installed, even if you place different size originals in the ADF, appropriate size of copy paper can be automatically selected and stapled using the Mixed Size mode and Auto Paper Select function. Load the paper you want to use in the paper trays beforehand. Paper sizes that can be stapled when using the Mixed Size mode are as follows:
  - A3 and A4
  - B4 JIS and B5 JIS
  - 11" × 17" and 8<sup>1</sup>/<sub>2</sub>" × 11"
- Paper sizes and orientation that can be used in the Staple function and the stapler capacity are as follows:

	Paper size	Stapler capacity
2 tray finisher	A4 <input type="checkbox"/> , B5 JIS <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> " × 11" <input type="checkbox"/>	2–50 sheets
	A3 <input type="checkbox"/> , B4 JIS <input type="checkbox"/> , 11" × 17" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> " × 14" <input type="checkbox"/>	2–30 sheets
Booklet finisher	A4 <input type="checkbox"/> , B5 JIS <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> " × 11" <input type="checkbox"/>	2–50 sheets
	A3 <input type="checkbox"/> , B4 JIS <input type="checkbox"/> , 11" × 17" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> " × 14" <input type="checkbox"/>	2–25 sheets
	When Saddle Stitch function is selected: A3 <input type="checkbox"/> , B4 JIS <input type="checkbox"/> , A4 <input type="checkbox"/> , 11" × 17" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> " × 11" <input type="checkbox"/> , 8 <sup>1</sup> / <sub>2</sub> " × 14" <input type="checkbox"/>	2–10 sheets
	mixed size	2–25 sheets

 **Note**

- ❑ When stapling B4, A3,  $8\frac{1}{2}'' \times 14''$ ,  $11'' \times 17''$ , pull out the extender of the finisher tray.
- ❑ When the number of copies exceeds tray capacity, copying stops. If this happens, remove the copies from the shift tray, and then resume copying.
- The tray capacity for the stapled sheets is as follows: (paper weight: 80 g/m<sup>2</sup>, 20 lb.)

	Paper size and orientation	Tray capacity
2 tray finisher	Finisher shift tray 1	
	A4, B5 JIS, $8\frac{1}{2}'' \times 11''$	<ul style="list-style-type: none"> <li>• 10–50 sheets: 50–10 sets</li> <li>• 2–9 sheets: 50 sets</li> </ul>
	A3, B4 JIS, $11'' \times 17''$ , $8\frac{1}{2}'' \times 14''$	<ul style="list-style-type: none"> <li>• 10–30 sheets: 25–8 sets</li> <li>• 2–9 sheets: 25 sets</li> </ul>
	mixed size	• 2–30 sheets: 8 sets
	Finisher shift tray 2	
	A4, $8\frac{1}{2}'' \times 11''$	<ul style="list-style-type: none"> <li>• 15–50 sheets: 100–30 sets</li> <li>• 2–14 sheets: 100 sets</li> </ul>
	A4, B5 JIS, $8\frac{1}{2}'' \times 11''$	<ul style="list-style-type: none"> <li>• 15–50 sheets: 50–15 sets</li> <li>• 2–14 sheets: 50 sets</li> </ul>
	A3, B4 JIS, $11'' \times 17''$ , $8\frac{1}{2}'' \times 14''$	<ul style="list-style-type: none"> <li>• 15–30 sheets: 50–25 sets</li> <li>• 2–14 sheets: 50 sets</li> </ul>
	mixed size	• 2–30 sheets: 25 sets
	Booklet finisher	Finisher tray
A4, B5 JIS, $8\frac{1}{2}'' \times 11''$		1000 sheets or 30 sets
A3, B4 JIS, $11'' \times 17''$ , $8\frac{1}{2}'' \times 14''$		500 sheets or 30 sets
Finisher booklet tray		
A3, B4 JIS, A4, $11'' \times 17''$ , $8\frac{1}{2}'' \times 11''$ , $8\frac{1}{2}'' \times 14''$		<ul style="list-style-type: none"> <li>• 2–5 sheets: 20 sets</li> <li>• 6–10 sheets: 10 sets</li> </ul>











- You cannot change stapling positions during copying.
- When the original image is rotated, the staple orientation changes by 90°.
- The maximum original image size that can be rotated is as follows:





Metric version	A4
Inch version	$8\frac{1}{2}'' \times 11''$

- When using **[Top Slant]**, **[Left 2]** or **[Top 2]** with Combine, Double copies or Auto Reduce/Enlarge function, “Blank part will appear. Check orientation.” message may appear depending on the orientation of originals and paper you placed. In this case, change the paper orientation.
- When **[Left 2]** or **[Top 2]** is selected, the following settings are useful to rotate images appropriately:
  - Auto Reduce/Enlarge or Auto Paper Select
  - With image rotation in Auto Tray Switching of User Tools
- If you select Saddle Stitch function with the booklet finisher, the machine staples and folds the paper in the center, then delivers the paper folded.
- If you select Saddle Stitch function in Magazine mode, the machine staples the paper, and folds it like a book, then delivers the paper folded.

❖ **Punch**














- When using Punch and Combine, Double Copies, or Auto Reduce/Enlarge, the message “Blank part will appear. Check orientation.” may appear because of the orientation of the original and the copy paper. If this occurs, change the orientation of the copy paper.
- Since punch holes are made in each copy, the punch hole positions vary slightly.
- Punchable paper sizes are as follows:

<b>2 tray finisher</b>			
Punch kit type			
2 & 4 holes type	2 holes		A3-B5 JIS, 11" × 17"
			A4-A5, 8 <sup>1</sup> / <sub>2</sub> " × 11"
	4 holes		A3, B4 JIS, 11" × 17"
			A4, B5 JIS, 8 <sup>1</sup> / <sub>2</sub> " × 11"
4 holes type	4 holes		A3-B5 JIS, 11" × 17"
			A4-A5, 8 <sup>1</sup> / <sub>2</sub> " × 11"
2 & 3 holes type	2 holes		A3-B5 JIS, 11" × 17"
			A4-A5, 8 <sup>1</sup> / <sub>2</sub> " × 11"
	3 holes		A3, B4 JIS, 11" × 17"
			A4, B5 JIS, 8 <sup>1</sup> / <sub>2</sub> " × 11"

<b>Booklet finisher</b>			
Punch kit type			
2 holes type	2 holes		A3, A4, B5 JIS, 11" × 17", 8 <sup>1</sup> / <sub>2</sub> " × 14", 8 <sup>1</sup> / <sub>2</sub> " × 11"
			A4, 8 <sup>1</sup> / <sub>2</sub> " × 11"
4 holes type	4 holes		A3, A4, B4 JIS, B5 JIS, 11" × 17", 8 <sup>1</sup> / <sub>2</sub> " × 14", 8 <sup>1</sup> / <sub>2</sub> " × 11"
			A4, B5 JIS, 8 <sup>1</sup> / <sub>2</sub> " × 11"


- The punch hole positions change according to the orientation of the paper selected.

### ◆ Duplex

- You cannot use the following copy paper with this function:
  - Paper smaller than A5,  $5\frac{1}{2}'' \times 8\frac{1}{2}''$  (possible on A5 ,  $5\frac{1}{2}'' \times 8\frac{1}{2}''$  )
  - Paper thicker than  $105 \text{ g/m}^2$ , 28 lb.
  - Paper thinner than  $60 \text{ g/m}^2$ , 17 lb.
  - Translucent paper
  - OHP transparencies
  - Label paper (adhesive labels)
  - Postcards
- When an odd number of originals is placed in the ADF, the back of the last page of copied paper is blank.
- During copying, the image is shifted to allow for the binding margin.
- The following paper sizes can be duplexed: A3 , B4 JIS , A4  , B5 JIS  , A5 ,  $11'' \times 17''$  ,  $8\frac{1}{2}'' \times 14''$  ,  $8\frac{1}{2}'' \times 11''$   

### ◆ Combine

- In this mode, the machine selects the reproduction ratio automatically. This reproduction ratio depends on copy paper sizes and the number of originals.
- The reproduction ratios you can specify are 25–400%.
- If the calculated ratio is under the minimum ratio, it will be automatically adjusted to within acceptable range. However, with some ratios, parts of the image might not be copied.
- You cannot use custom size paper.
- If the orientation of originals is different from that of the copy paper, the machine will automatically rotate the image by  $90^\circ$  to make copies properly.
- If the number of originals placed is less than the number specified for combining, the last page segment will be left blank as shown.

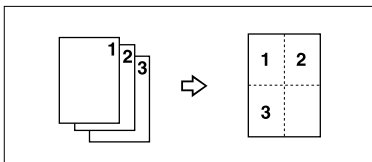

### ❖ **Series Copies**

- The machine sets the reproduction ratio automatically to meet the paper size and copies the originals together onto the paper.
- The reproduction ratios you can specify are 25–400%.
- If the calculated ratio is under the minimum ratio, it is automatically adjusted to within acceptable range. However, with some ratios, parts of the image might not be copied.
- If the orientation of originals is different from that of the copy paper, the machine will automatically rotate the image by 90° to make copies properly.
- You cannot copy with originals different in size and orientation.
- If the number of originals scanned is less than a multiple of 4, the last page is copied blank.
- In Magazine mode, the copying may take some time after scanning originals.
- When the booklet finisher is installed, if you select Saddle Stitch function in Magazine mode, the machine staples and folds the paper in the center, then delivers the paper folded.

6

### ❖ **Image Repeat**

Depending on the paper size, ratio, and orientation, parts of repeated images may not be copied.

### ❖ **Centering**

Though the original is set to a different orientation from the paper loaded, the machine will not rotate the image by 90° (Rotate copy).

### ◆ Erase

The width of the erased margin varies depending on the reproduction ratio. If the size of the original is different from sizes listed in the following chart, the erased margin might be shifted:

- Metric version

Where original is placed	Paper size and orientation
Exposure glass	A3☐, B4 JIS☐, A4☐☐, B5 JIS☐☐
ADF	A3☐, B4 JIS☐, A4☐☐, B5 JIS☐☐, A5☐☐

- Inch version

Where original is placed	Paper size and orientation
Exposure glass	11" × 17"☐, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8 <sup>1</sup> / <sub>2</sub> " × 11"☐☐
ADF	11" × 17"☐, 8 <sup>1</sup> / <sub>2</sub> " × 14"☐, 8 <sup>1</sup> / <sub>2</sub> " × 11"☐☐, 10" × 14"☐, 5 <sup>1</sup> / <sub>2</sub> " × 8 <sup>1</sup> / <sub>2</sub> "☐

### ◆ Margin Adjustment


- If you set a binding margin that is too wide, part of the image may not be copied.
- When making copies in Combine mode, the binding margin is added to the copies after the combination is finished.

### ◆ Preset Stamp

- You can change the size and density of the stamp with User Tools. Depending on the setting, density may change.
- Depending on paper size, if you change the stamp size, parts of the stamp might not be printed.

### ◆ Date Stamp


When using Combine mode, the date stamp is printed as follows:

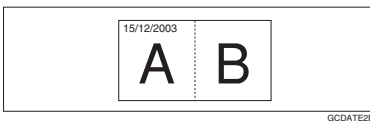

❖ **Page Numbering**


When page numbering is used with Combine mode, page numbers are printed as follows:

- Page Numbering per original:  
Combined with 1 Sided / 2 Sided in the Combine function

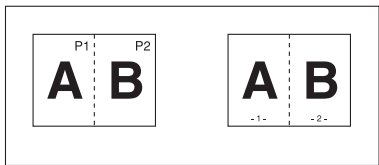


GCANPEE

- Page Numbering per copy:  
Combined with 1 Sided / 2 Sided in the Combine function

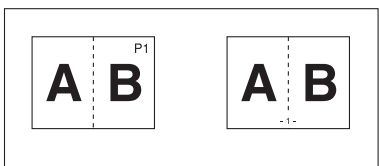

GCANPEZE

If you combine this function with the Duplex (Top to Top) function and select [P1, P2] or [1/n, 2/n], page numbers on the back are printed as follows:

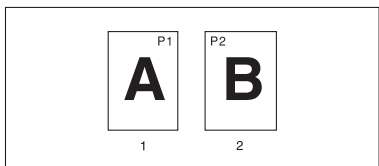

GCSTMPE

**1. Front**

**2. Back**

❖ **Front Cover, Front/Back Cover**

- If Blank mode is selected, the cover will not be counted as a copy.
- Front and back covers are two-sided copied depending on the settings made in Display Time in Cover Sheet Tray of User Tools (System Settings).
  - If Display Time is selected to the At Mode Selected, settings made in Cover Sheet Tray will take priority.
  - If Display Time is selected to Full Time, settings made in Paper Type will take priority.
- See "Paper Type" and "Cover Sheet Tray" in "Tray Paper Settings", *General Settings Guide*.

❖ **Slip Sheets**

If you do not copy onto slip sheets, they are excluded from the number of copies counted.



# INDEX

- 1 sided → 2 sided, 55
- 2 sided → 1 sided, 55
- 2 sided → 2 sided, 55
- 90° turn, 14

## A

---

- Accessing user tools
  - copier/document server features*, 110
- A.C.S.
  - priority*, 126
  - sensitivity*, 125
- Adjust Color Image, 125
- Adjusting
  - background density*, 91
  - colors based on selected color*, 92
  - contrast*, 90
  - copy image density*, 33
  - sharpness/softness*, 90
  - text/photo sensitivity*, 91
  - U.C.R.*, 91
- Adjust/Program Color key, 5
- Auto
  - color selection*, 29
  - image density*, 33
  - image density priority*, 104
  - paper select*, 35
  - paper select priority*, 103
  - reduce/enlarge*, 40
  - tray switching*, 113
- Auto paper select, 36

## B

---

- Background density of ADS
  - (Full Color/Two-color), 125
- Basic procedure, 19
- Batch, 15
- Black/white copy, 29
- Border erase, 68

## C

---

- Center/border erase, 69
- Center erase, 68
- Change
  - date format*, 76
  - stamp position*, 73, 76
- Changing
  - number of sets*, 45
  - registered settings*, 89
  - stamp position*, 78
  - stamp position, size and density*, 71
  - stored program*, 86
- Check Modes key, 5
- Clear Modes key, 5
- Clear/Stop key, 6
- Color
  - adjustment*, 87
  - adjustment/program*, 87
  - background*, 32
  - balance*, 88
  - balance program*, 88
  - circle*, 5
  - functions*, 29
  - mode priority*, 115
  - selection key*, 6
- Color Adjustment, 87
- Color functions
  - convert colors*, 31
  - erase color*, 32
  - selecting a color mode*, 29
- Color image setting
  - color sensitivity*, 125
- Colors
  - mixing manually with number keys*, 94
- Combination chart, 127
- Combined auto and manual image density, 33
- Control panel, 5
- Copier/Document Server features, 103

- Copier functions, 33
  - 1 sided combine, 57
  - 2 sided combine, 58
  - adjusting copy image density, 33
  - auto reduce/enlarge, 40
  - book originals, 61
  - centering, 65
  - covers, 81
  - date stamp, 75
  - directional magnification (%), 41
  - directional size magnification (Inch), 42
  - double copies, 64
  - duplex, 55
  - margin adjustment, 69
  - page numbering, 77
  - preset reduce/enlarge, 38
  - preset stamp, 70
  - selecting copy paper, 35
  - selecting the original type, 34
  - series copies, 60
  - size magnification, 41
  - slip sheets, 82
  - sort, 43
  - stack, 46
  - staple, 47
  - user stamp, 72
  - zoom, 39
- Copy functions
  - image repeat, 63
  - mirror, 66
  - positive/negative, 66
  - specified area repeat, 64
- Copying, 19
  - back Side of the Paper, 25
  - interrupt copy, 20
  - job preset, 21
  - left original beeper, 21
  - OHP Transparencies or Thick Paper, 24
  - onto envelopes, 26
  - with registered settings, 89
- Copying from bypass tray
  - onto custom size paper, 23
  - onto standard size paper, 23
- Covers
  - Front, 81
  - front/back, 81
- Create margin function, 38

## D

---

- Date stamp, 75, 122
  - Change color, 76
  - change format, 76
  - change position, 76
  - font, 122
  - format, 122
  - position, 122
  - position and original orientation, 75
  - size, 123
  - stamp color, 123
  - stamp setting, 123
  - superimpose, 123
- Deleting
  - program, 86
  - registered settings, 89
  - user colors, 94
  - user stamp, 74
- Display panel, 5
- Document server, 83

## E

---

- Edit, 105, 117
  - 1 sided→2 sided auto margin – T to B, 118
  - 1 sided→2 sided auto margin – T to T, 118
  - back margin – left/right, 117
  - back margin – top/bottom, 117
  - copy order in combine, 119
  - double copies separation line, 119
  - erase border width, 118
  - erase center width, 118
  - erase original shadow in combine, 118
  - front cover copy in combine, 118
  - front margin – left/right, 117
  - front margin – top/bottom, 117
  - image repeat separation line, 119
  - Orientation: Magazine, 120
  - separation line in combine, 120
- Energy Saver key, 6
- Erase, 67
  - border, 67
  - border width, 118
  - center, 67
  - center/border, 67
  - center width, 118
  - color, 32
  - original shadow in combine, 118
- Exiting user tools, 111

## F

---

- Font, 122
- Format, 122
- Full color copy, 29
- Function status indicators, 6

## G

---

- General features, 103, 104, 112, 113, 114, 115
  - auto image density priority*, 115
  - auto paper select priority*, 112
  - auto tray switching*, 113
  - change initial mode*, 113
  - clear bypass mode*, 115
  - color mode priority*, 115
  - copy function key*, 114
  - copy orientation in duplex mode*, 113
  - document server storage key*, 115
  - duplex mode priority*, 113
  - job end call*, 114
  - max. copy quantity*, 113
  - original orientation in duplex mode*, 113
  - original photo type priority*, 112
  - original type display*, 112
  - original type priority*, 112
  - paper display*, 112
  - tone – original remains*, 114
  - two-color mode priority*, 115
- Generation copy, 34

## I

---

- Image adjustment, 90
  - background density*, 90, 91
  - contrast*, 90
  - sharpness/softness*, 90
  - text/photo sensitivity*, 90, 91
  - U.C.R.*, 90, 91
- Image repeat
  - specified area repeat*, 64
  - whole area repeat*, 63
- Indicators, 5
- Input/Output, 108, 124
  - auto sort*, 124
  - letterhead setting*, 125
  - memory full auto scan restart*, 124
  - rotate sort – auto paper continue*, 124
  - SADF auto reset*, 124
  - select stack function*, 124
  - select stapling position*, 125
  - switch to batch (SADF)*, 124
- Interrupt key, 6

## K

---

- Key
  - adjust/program color*, 5
  - check modes*, 5
  - clear modes*, 5
  - clear/stop*, 6
  - energy saver*, 6
  - interrupt*, 6
  - program*, 5
  - sample copy*, 6
  - # (sharp)*, 6
  - start*, 6
  - user tools/counter*, 5

## L

---

- Left original
  - beeper*, 21

## M

---

- Main power indicator, 6
- Manual image density, 33
- Manual paper select, 36
- Map, 34
- Messages, 95
- Missing image area, 12
- Mixed size, 17

## N

---

- Number keys, 6

## O

---

- OHP transparencies, 82
- one-sided combine
  - 1 sided 2 pages → combine 1 side, 57
  - 1 sided 4 pages → combine 1 side, 57
  - 1 sided 8 pages → combine 1 side, 57
  - 2 sided 1 page → combine 1 side, 57
  - 2 sided 2 pages → combine 1 side, 57
  - 2 sided 4 pages → combine 1 side, 57
  - 2 sided 8 pages → combine 1 side, 57
- Operation switch, 6
- Original
  - combine, 57
  - copy orientation, 56
  - orientation, 13
  - orientation and completed copies, 55
  - orientation in duplex mode, 113
  - photo type priority, 112
  - type display, 112
  - type priority, 112
- Originals, 9
- Originals not recommended for
  - Auto Document Feeder (ADF), 10

## P

---

- Page Numbering, 77, 123
- Page numbering
  - color, 78
  - duplex back page stamping position, 123
  - first printing page, 78
  - font, 123
  - page numbering in combine, 123
  - position, 78
  - position and orientation of originals, 77
  - size, 123
  - stamp color, 123
  - stamp format, 123
  - stamp position, 123
  - start number, 78
  - superimpose, 123
- Pale, 34
- Photo, 34
- Placing
  - custom size originals, 17
  - originals, 9, 13, 14, 15, 17
  - originals in auto document feeder, 15
  - originals on exposure glass, 14

- Preset stamp, 121
  - changing color, 71
  - changing density, 71
  - changing position, 71
  - changing size, 71
  - color, 121
  - format, 121
  - language, 121
  - position, 121
  - position and original orientation, 71
  - priority, 121
- Program key, 5
- Programs, 85
- Punch, 51

## R

---

- Recalling a program, 86
- Renaming a color, 93, 94
- Reproduction ratio, 104, 105, 116
  - enlarge, 116
  - priority setting – enlarge, 116
  - priority setting – reduce, 117
  - ratio for create margin, 117
  - reduce, 116
  - R/E priority, 117
  - shortcut R/E, 116
- Rotated copy, 37

## S

---

- SADF, 16
- Sample copy, 45
- Sample copy key, 6
- Sampling user colors, 94
- Screen contrast knob, 5
- Selecting
  - color mode, 29
  - copy paper, 35
  - original type, 34
- Series copies, 60, 136
  - book → 1 sided, 60
  - book → 2 sided, 60
  - front & back → 2 sided, 60
- # (sharp) key, 6
- Single color copy, 29
- Sizes
  - detectable by auto paper select, 11
  - difficult to detect, 12
  - of recommended originals, 9

Sort, 43  
    *rotate sort*, 43  
    *shift sort*, 44  
Specifications, 127  
Stack, 46  
Stamp, 121  
    *color*, 121, 122, 123  
    *date stamp*, 75  
    *format*, 121, 122, 123  
    *language*, 121  
    *page numbering*, 77  
    *position*, 121, 122, 123  
    *position and original orientation*, 72, 75  
    *preset stamp*, 70  
    *priority*, 121  
    *setting*, 123  
    *user stamp*, 72  
Standard orientation, 14  
Stapling position and original setting, 47  
Start key, 6  
Storing  
    *adjusted color balance*, 88  
    *data*, 83  
    *program*, 85  
Superimpose, 123  
Supplementary informations  
    *bypass tray copy*, 128  
    *centering*, 136  
    *combine*, 135  
    *date stamp*, 137  
    *directional size magnification*, 129  
    *duplex*, 135  
    *erase*, 137  
    *front/back cover*, 138  
    *front cover*, 138  
    *image repeat*, 136  
    *margin adjustment*, 137  
    *mixed size mode*, 128  
    *page numbering*, 138  
    *preset enlarge/reduce*, 128  
    *preset stamp*, 137  
    *punch*, 134  
    *rotate sort*, 130  
    *series copies*, 136  
    *size magnification*, 129  
    *slip sheets*, 138  
    *sort*, 130  
    *stack*, 130  
    *staple*, 132  
    *zoom*, 129  
Supplementary specifications, 128

## T

---

Text, 34  
Text/Photo, 34  
Tone – original remains, 114  
Troubleshooting, 95  
    *memory is full*, 101  
    *problems operating the machine*, 95  
    *you cannot make clear copies*, 97  
    *you cannot make copies as you want*, 98  
Two color copy, 29  
two-sided combine  
    *1 sided 16 pages → combine 2 side*, 59  
    *1 sided 4 Pages → combine 2 side*, 58  
    *1 sided 8 pages → combine 2 side*, 58  
    *2 sided 16 pages → combine 2 side*, 59  
    *2 sided 4 pages → combine 2 side*, 59  
    *2 sided 8 pages → combine 2 side*, 59  
Types of duplex copies, vi

## U

---

User color, 92  
User stamp, 72, 122  
    *changing color*, 73  
    *changing position*, 73  
    *colors*, 122  
    *delete*, 74  
    *format*, 122  
    *position*, 122  
    *position and original orientation*, 72  
    *program*, 73  
    *program/delete*, 122  
User tools, 103  
User Tools/Counter key, 5

## W

---

Weights of recommended originals, 9  
What you can do with this machine, iii, vi

MEMO

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

**I** means **POWER ON**.

**O** means **POWER OFF**.

**⏻** means **STAND BY**.

#### **Trademark**

Acrobat® is a registered trademark of Adobe Systems Incorporated.

Type for C3224/DSc332/LD232c/Aficio 2232C

Type for C3828/DSc338/LD238c/Aficio 2238C

Printed in Japan

EN (USA) B149-7509



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>