



FireWire 800 PCI-32T

Quick Installation Guide

Introducing the *FireWire 800 PCI-32T*

The *FireWire 800 PCI-32T* is designed to support Pentium or equivalent PC computers. It provides 2 independent hot-pluggable Firewire 800 (1394b) ports and 1 1394a port with data transfer rates up to 800Mbps.

Features and Benefits

- Provides 2 FireWire 800 (1394b) ports and 1 1394a (6-pin) port for multiple 1394b/1394a device connections
- Supports IEEE 1394b and backwards compatible with 1394a-2000 and 1394-1995 standards
- Supports data transfer rates of 100, 200, 400, and 800Mbps
- Built-in 4-pin power connector provides extra power when connected to the system's power supply (Recommended)
- Supports hot-swapping and Plug-n-Play connection of peripheral devices
- Includes one spare low profile bracket for systems with low profile chassis
- Works with various types of FireWire 800 (1394b) and 1394a devices including portable hard disk, DV camcorder, digital camera, CD-RW/DVD-ROM drive and other audio/video devices

System Requirements

- Pentium or equivalent PC with an available 32-bit or 64-bit PCI slot
- Windows 98SE/ME/2000/XP

Package Contents

- (1) *FireWire 800 PCI-32T* host adapter
- (1) Spare Low Profile bracket (to use with Low Profile chassis)
- (1) Driver software
- This quick installation guide

Board Layout

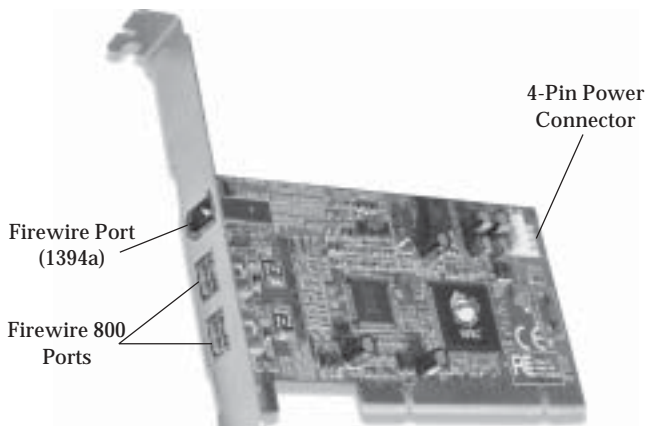


Figure 1. Board Layout

Hardware Installation

Note: For Low Profile systems, replace the currently mounted bracket with with the included Low Profile bracket.

General instructions for installing the card are provided below, since the design of computer cases and motherboards vary. Refer to your computer's reference manual for further information, if needed. Static Electricity Discharge may permanently damage your system. Discharge any static electricity build up in your body by touching your computer's case for a few seconds. Avoid any contact with internal parts and handle cards only by their external edges.

- Turn OFF the power to your computer and any other connected peripheral devices. Unplug the computer's power cord.
- Remove your computer's cover and install the card in an available PCI slot.
- Push the board down firmly, but gently, until it is well seated.
- Connect an available 4-pin power connector from the system power supply to the 4-pin power connector on the *FireWire 800 PCI-32T* (See figure 1). This connection is recommended for reliable power output.
- Secure the card and replace the cover.

Software Installation

This section provides information on how to install the *FireWire 800 PCI-32T* drivers. Please follow the directions below for your operating system.

Windows Driver Installation

For Windows 98SE

1. At the **Add New Hardware Wizard**, click **Next**.
2. Select **Search for the best driver for your device (Recommended)**, then click **Next**.
3. Insert the driver CD, check **CD-ROM drive**, uncheck the other boxes, then click **Next**.
4. Click **Next**, then **Next** again.
5. If prompted for the *Windows 98SE* CD, insert it, then click **OK**.
6. Click **Finish** and restart Windows to complete the installation.

For Windows ME

1. At the **Add New Hardware Wizard**, insert the driver CD, select **Automatic Search for a better driver**, then click **Next**.
2. Click **Finish**.
3. Click **Yes** to restart Windows and complete the installation.

For Windows 2000

Windows 2000 automatically installs its built-in 1394a driver for the *FireWire 800 PCI-32T*. To get the full potential out of the *FireWire 800 PCI-32T*, install the Firewire 800 driver using the directions below.

1. Right click **My Computer**, click **Manage**, then click **Device Manager**.
2. Double click **IEEE 1394 Bus host controller**, then double click **Texas Instruments OHCI Compliant IEEE 1394 Host Controller**.
3. Click the **Driver** tab, then **Update driver** button.
4. At the **Upgrade Device Driver Wizard** window, click **Next**.
5. Select **Search for a suitable driver for my device**, then click **Next**.

6. Insert the driver CD, check **CD-ROM drives**, then click **Next**.
7. Click **Next**.
8. Click **Finish**. Restart Windows to complete the installation.

For Windows XP

Windows XP automatically installs its built-in 1394a driver for the *FireWire 800 PCI-32T*. To get the full potential out of the *FireWire 800 PCI-32T*, install the Firewire 800 driver using the directions below.

1. Right click **My Computer**, click **Manage**, then click **Device Manager**.
2. Double click **IEEE 1394 Bus host controller**, then double click **Texas Instruments OHCI Compliant IEEE 1394 Host Controller**.
3. Click the **Driver** tab, then **Update Driver** button.
4. Select **Install from a list or specific location**, then click **Next**.
5. Select **Don't search. I will choose the driver to install**, then click **Next**.
6. Insert the driver CD, click **Have disk**.
7. Type in **D:**, then click **OK**. (Change **D:** to match your CD-ROM drive letter)
8. Select **OHCI IEEE 1394b Host Controller**, then click **Next**.
9. Click **Continue Anyway**. *Our driver has been thoroughly tested in Windows for stability. This message appears because Microsoft has not tested this product through WHQL certification.*
10. Click **Finish**. Restart Windows to complete the installation.

Verify Proper Installation in Windows

1. Check **Device Manager** to verify successful installation.
Windows 98SE/ME: From the main desktop, right click **My Computer**, then click **Properties**. Click **Device Manager** tab.
Windows 2000/XP: Right click **My Computer**, then click **Manage**. Click **Device Manager**.
2. Double click **1394 Bus Controller** or **IEEE 1394 Bus host controllers**.
 - **OHCI IEEE 1394b Host Controller** should be displayed.

Technical Support

QUESTIONS? SIIG's **Online Support** has the answers! Simply visit our web site at www.siig.com and click **SUPPORT**. Our online support database is updated daily with new drivers and solutions. The answers to your problems could be just a few clicks away.

Return Merchandise Authorization (RMA)

SIIG warrants to the original buyer of the product that the hardware is free of defects in materials and workmanship for a period of one, two or five years from the date of purchase. If your product fails to be in good working order during the warranty period, you may return it to SIIG for repair or replacement at SIIG's option.

To return the product, you need to follow these steps.

Step 1: Contact SIIG's RMA Department

To obtain an RMA number, SIIG's RMA Department can be reached by phone at (510)413-5333 or fax at (510)657-5962 or email at service@siig.com. In order to issue an RMA number, the product serial number is required. This number can be found on the side of the box and on the back of the product.

Step 2: Complete the RMA form

- Fill out your Return Merchandise Authorization (RMA) form, and include it in the package with the product.
- Properly pack the product for shipping. All software, cable(s) and other accessories that came with the original package **must be included**.
- Clearly write your RMA number on the top of the returned package and on the accompanying RMA form.

SIIG will refuse to accept any shipping package, and will not be responsible for a product returned without an RMA number posted on the outside of the shipping carton.

Step 3: Ship the Product

You are responsible for the cost of shipping back to SIIG at the following address:

SIIG, Inc. RMA# _____
6078 Stewart Ave.
Fremont, CA 94538

SIIG will ship the repaired or replaced product via UPS Ground or US Mail at no cost to you.

UK Warranty & Support Information

The 5 year warranty supplied with this product is offered by SIIG, Inc. If you should happen to encounter any problems with this product, please follow the procedures below.

1. If it is within the first year of purchase, please return product to the outlet you purchased from.
2. If your product is between 2 and 5 years old from date of purchase, please contact SIIG using the contact details below.

For UK Technical Support

Telephone: +44 (0) 1255 687503
Fax: +44 (0) 1255 687501
Email: support@siig.uk.com
Website: <http://www.siig.uk.com>

PRODUCT NAME	MODEL NUMBER
FireWire 800 PCI-32T	NN2655

FCC RULES: TESTED TO COMPLY WITH FCC PART 15, CLASS B
OPERATING ENVIRONMENT: FOR HOME OR OFFICE USE

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE PARTY RESPONSIBLE FOR PRODUCT COMPLIANCE

SIIG, Inc.
6078 Stewart Ave.
Fremont, CA 94538-3152

FireWire 800 PCI-32T is a trademark of SIIG, Inc.

SIIG and SIIG logo are registered trademarks of SIIG, Inc. Microsoft and Windows are registered trademarks of Microsoft Corporation. Pentium is a registered trademark of Intel Corporation. Other names used in publication are for identification only and may be trademarks of their respective companies.

July, 2003

Copyright ©2003 by SIIG, Inc. All rights reserved.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>