

# Bluetooth<sup>™</sup> PDA and PC Adapter Combo Card

Enable your PDA or notebook computer with Bluetooth wireless technology



User Manual F8T006-PC

## TABLE OF CONTENTS

Introduction
Overview
Product Features
System Requirements
Handheld Requirements
Package Contents
Specifications
Supported Profiles
Software Setup
Hardware Setup
Initial Configuration Wizard 15
Uninstalling the Software
Installing the Adapter Card and Software 19
Uninstall Bluetooth Manager
Glossary
Information

#### INTRODUCTION

Congratulations and thank you for purchasing the *Bluetooth* PDA and PC Adapter Combo Card from Belkin. By inserting the PDA Adapter Card\* (Belkin part number F8T020) into the PC Adapter Card sleeve (Belkin part number F8T007), you create a PDA and PC Adapter Combo Card (Belkin part number F8T006-PC) that installs easily, to enable your notebook computer with *Bluetooth* technology. This User Manual provides information on the PDA and PC Adapter Combo Card's (the Card) functions.

Before you install and start using your new Card, please take a few minutes to review some of the terms that you will be seeing throughout the User Manual. You will find a brief Glossary on page 19.

\*To enable your PDA with *Bluetooth* wireless technology, see the software support materials on the included CD-ROM.



## Product Features

This Card is compliant with *Bluetooth* Standard Version 1.1 and provides:

- Compliancy with *Bluetooth* specification v1.1 devices
- Support for Microsoft<sup>®</sup> Windows<sup>®</sup> 98 SE, Me, 2000, XP, Pocket PC 2002, and 2003
- Operating distance of up to 10 meters
- Point-to-multipoint connections
- Support for data rates up to 721Kbps
- Built-in security: up to 128-bit encryption and authentication

## System Requirements

- PC-compatible computer, CPU speed of 200MHz or above
- Memory: 64MB or above, 128MB recommended
- One available PCMCIA Type II slot
- Windows 98 SE, Me, 2000, or XP

#### Handheld Requirements

- Genuine Intel® processor
- One available CompactFlash® Type 1 slot
- Microsoft Pocket PC 2002 or 2003

## Package Contents

- Bluetooth PDA Adapter Card
- Bluetooth PC Adapter Card sleeve
- *Bluetooth* PDA and PC Adapter Combo Card CD-ROM for installation software and documentation
- Bluetooth PDA and PC Adapter Combo Card User Manual
- Bluetooth PDA and PC Adapter Combo Card Quick Installation Guide
- Registration Card

#### Specifications

*Bluetooth* Compliance: Physical Interface: Operating Frequency: **Output Power:** Sensitivity: Data Rate: **Operating Range:** Network Topology: Packet Support: Operation: Frequency Stability: **LED** Indicator: Antenna Type: **Dimensions:** 

Weight:

Version 1.1 PCMCIA Type II, CF Type I 2.4 to 2.4835GHz 0 dBm, Class 2 <0.1% BER @ -80 dBm 723/57.6Kbps 10-meter radius indoors Point-to-Multipoint 1/3/5 Slots Packet Master/Slave +/- 10PPM Power On/Data Traffic Internal, Extended Back 101 (L) x 54 (W) x 4mm (H) 1.2oz. (34q)

Operating Temp: Storage Temp:

Humidity:

Supply Voltage:

0 to 70 degrees Celsius -30 to 85 degrees Celsius 10-90% (noncondensing) 3.3V

Specifications are subject to change without notice.

#### **Supported Profiles**

The services supported by your Card are defined as "Profiles". Available Profiles include:

- Generic Access
- Service Discovery
- Serial Port
- LAN Access
- Dial-Up Networking
- Object Exchange

- File Transfer
- Synchronization
- Fax
- Personal Area Network
- Hardcopy Cable Replacement
- HID

#### **Supported Profiles**

Your Card gives you the ability to do the following—without cables:

- Transfer files
- Access dial-up networks
- Connect to local area networks
- Perform an ActiveSync® session

- Connect to serial ports
- Exchange PIM data
- Print
- Send or exchange business cards

The basic functions of the *Bluetooth* Neighborhood include:

- Device Discovery
- Service Discovery
- Establishing links with remote devices


#### Software Setup for Windows 98 SE, Me, 2000, and XP

To install the software for the Card, follow the instructions below:

Note: The installation process for Windows XP may look slightly different from Windows 98 SE, Me, and 2000.

#### Note: Do not insert the Card into the PCMCIA Type II slot prior to installation.

- 1. Insert the software installation CD-ROM for the *Bluetooth* PC Adapter Card into the PC's CD-ROM drive.
- 2. The "Software InstallShield Wizard" window appears. Click on "Next" to begin the installation process.

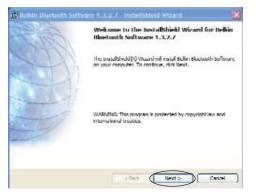

- **3.** Choose "I accept the terms in the license agreement" to accept the license agreement. Click on "Next" to continue.
- 4. Specify the location where the software files will be installed on your hard drive. It is recommended that you install the software in the default directory "C:\Program Files\belkin\Bluetooth\Software\". Click on "Next" to continue.

🖓 Uelkin Diuetooth Software 1.J.2.7 InstallShield Wizard 🛛 🔀	ië Veisin Vluetosth software 1.J.2./ Instalishield Wizard 🛛 🙀
License Agreement Please read the following license agreement carefully.	Bestimation Falder Clinchaost to install in this tokin, or risk Change in install in a different tokin.
MIDCOME, INC. ("WIDCOME") IS WILLING TO LICENSE THE WIDCOME SOFTWARE ACCOMPANYING THIS LICENSE ACREEMENT (THE "SOFTWARE") TO YOU ONLY ON THE CONDITION THAT YOU ACCEPT ALL OF THE TERMS CAREFULLY. BY CLICKING ON THE "I ACCEPT THE TERMS OF THIS LICENSE ACREEMENT" BUTTON YOU ACKNOMILECE THAT YOU HAVE READ THES ACREEMENT, UNDERSTAND IT AND ACREE TO BE	andulfbelantskustaalt Soflavard 1.3.1.7 for Crifting am Hiszisciantskulantskustaalt Soflavard) Change
Charapt the terms in the linesse agreement     Of do not accept the terms in the linesse agreement	
Cannel	Canel Next: Canel

- 5. Confirm that the device software is ready to be installed and click on "Install".
- 6. The InstallShield Wizard will begin to install the *Bluetooth* software. This may take several minutes.

🖉 Veikin Vluetooth Software 1.J.2.7 InstallShield Wizard 🛛 🔯	🕅 Retkin Rhietouth Software 1.3.7.7 - InstallShield Wizard 🛛 💽 🗖 🔀
Resety to Trestall the Program The plant is reacily to begin localization.	Installing Scient Stoctooth Software The program Sectores you adocted are being installed.
Clink horbeil in begin the Installation. If your want to reavon or change-any of your mobilision scripny, club Back, click Cancel to end the winner.	Mouse wat while the traditional ward installated in the tool of to flow re. This may take execution into the . Statue
tarteciente d'Baris (fretis) Casori	a stable bi

7. During the installation process, you may be prompted to insert your Card. If your Card is not plugged into your computer at this time, you may insert it into an available PCMCIA Type II-compliant slot on your notebook, then click "OK" to continue. Click on "Cancel" to continue installation without the Card inserted. Refer to the "Hardware Setup" section of this User Manual for instructions for installing the hardware.

Note: If at any time during the installation process you receive a "Driver Signature Notice", click "OK" to continue the installation process.

8. Confirm the completion of the software installation; click "Finish" and restart the system if prompted to do so.





#### HARDWARE SETUP


#### Hardware Setup for Windows 98 SE, Me, 2000, and XP

Follow these instructions to install your Card on your PC:

Note: Your Card is sensitive to static electricity, which can damage its delicate electrical components. To protect your device, always touch the metal chassis of your computer before handling the Card. This will ground any potential electrostatic discharge. Avoid touching the metal connector when handling the Card. Dry weather


conditions or walking across carpeted floors may cause you to acquire an electrostatic charge.

- Insert the Card directly in an available PCMCIA Type II slot on your notebook computer. Your system should register a new device found.
- 2. Choose "Install from a list or specific location"; then click "Next".

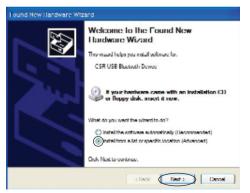


#### HARDWARE SETUP

- 3. Browse for the location of the device driver "C:\Program Files\Belkin\ Bluetooth\Software\bin\" then click "Next".
- 4. If you receive the following "Hardware Installation Notice", click on "Continue Anyway" to continue with the installation process.

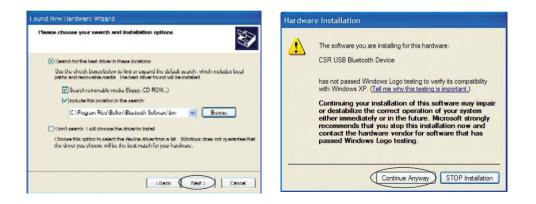

#### HARDWARE SETUP

5. A window will appear that confirms the completion of the hardware installation; click on "Finish" to complete the installation process.

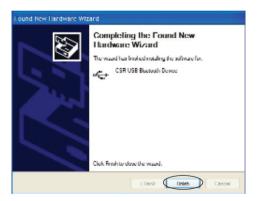

#### INITIAL CONFIGURATION WIZARD

#### Configuring your Computer for Windows 98 SE, Me, 2000, and XP

- Once the installation process is complete, you will be prompted by the "Initial *Bluetooth* Configuration Wizard". This Wizard will guide you through the initial setup of your Card. Please follow the Wizard as prompted.
- 2. Name your computer with a name you are likely to remember. This name will me made available when your computer is discovered by other *Bluetooth* devices.



#### INITIAL CONFIGURATION WIZARD

- **3**. Choose the type of computer you have installed the Card into from the drop-down menu and click "Next".
- 4. Continue the Wizard to configure the *Bluetooth* services that this computer will make available of other *Bluetooth* devices to use. Click "Next".

ži General 🛛 💽 🔀	🖏 Initial Directooth Configuration Wizard 🛛 🕅 🔀
Denice Name and Type. You must select a roma for this computer and indicate what type of computer it is	Initial Bluctooth Configuration Wizard
Boller Blackoolt Selfware 1.3.2.7	To configure the Blocksoft servers that this computer will mote available for other III and oth devices to use, citize Not.
Membry         Inter a unique come for this computer. This name will be displayed to other           Min         Blackadi domecrif this computer sconfigured to allow said to be deconciled.           Stated a computer type from the disp-down menu. This selection determines the scon fluct representative computer on scatter domecrit.           Computer type:         My leptip.           Computer type:         Taylor.	Figue do not in act to change the configuration for the configuration face, and Super Strategy and Super Strategy in the configuration face, adult Super Super Stategy Super Strategy S
(Rack Not) Cancel	C Thesis Need : Conceal

#### INITIAL CONFIGURATION WIZARD

- 5. Choose the *Bluetooth* services your computer will offer and click "Next". The most common service for your computer type will be checked by default.
- 6. If you have another *Bluetooth* device and you want to configure the way this computer will use its services, click "Next". Otherwise click "Skip".

🕏 Rhadooth Service Selection 📀 🔯	🕏 Initial Directooth Configuration Wizard	×
Choose the services that this computer will offer. Is eachies enviro, pieces clock in the terms to the service name To deplay the projector panel for a service, clock Configure.	Initial Bluctooth Configuration Wizard	
PDM them Transfer     Most resolve fluctoring to science and     Most resolve fluctoring data formular fluctoring     PDM them can be reserved here, rotative, rober and     mozaged formulae blackadd function.     Configure	If you have another Blackooth dense and you want to antity in the way this complete will use for earliese, click Nod. Otherway click. Stop.	
M 🔐 PM Syndhoneuton		
M 11 He handes	12 11	
P S Notwark Auctas		
🕅 🐜 Dial up Networking		
M S skatadh Sand Part	(St.p.)	
< Back Not > Cancel	Clinck Net Center	1

#### UNINSTALLING THE SOFTWARE

Uninstalling the Software for Windows 98 SE, Me, 2000, and XP Follow these instructions to uninstall your Card on your PC:

- 1. Insert the *Bluetooth* PC Adapter Card CD-ROM included with your Card.
- 2. This "InstallShield Wizard" should automatically load. If it does not load, explore the CD and run the "Setup.exe" file.
- **3**. The "InstallShield" window should now appear. Click "Next" to continue with the uninstall process.

To install the *Bluetooth* software required to use your Adapter Card on a Pocket PC, follow the instructions below.

- 1. Remove any accessories from your Pocket PC.
- 2. Place the Pocket PC in its cradle and create an ActiveSync connection to your desktop or notebook computer, as you would normally do.


Microsoft ActiveSync	_ 🗆 🗙
File View Tools Help	
Sync     Stop     Explore     Options	
Guest	
Connected	
Information Type Status	

- **3**. Insert the Adapter Card installation CD-ROM into the CD-ROM drive of your desktop or notebook computer.
- 4. Insert the Adapter Card into your Pocket PC's CompactFlash Type I slot.



5. From the Windows "Start" menu on your base computer, select "Run", and then type in "x:\PPC\Setup.exe" (where x equals the letter of the CD-ROM drive), then click "OK".

6. Click "Next" to continue.

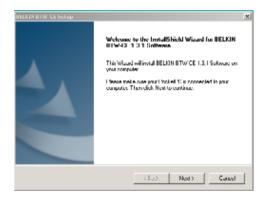

## 7. Click on "Yes" to accept the license agreement.

Press the PAGE DOWN key to see the	e rest of the agreement.	
SOFTWARE ACCOMPANYING THIS YOU ONLY ON THE CONDITION TH AGREEMENT. PLEASE READ THE "YES" BUTTON YOU ACKNOWLED UNDERSTAND IT AND AGREE TO YOU DO NOT AGRÉE TO THESE TI	VILLING TO LICENSE THE WIDCOM LICENSE AGREEMENT (THE "SOFT AT YOU ACCEPT ALL OF THE TERM SCAREFULLY, BY CLICKING GE THAT YOU HAVE READ THIS AG DE BOLIND BY ITS TERMS AND COD ERMS, WIDCOMM IS UNIVILLING TC U SHOULD CLICK ON THE "NO" BU" I PROCESS.	WARE") TO 4S IN THIS IN THE IREEMENT, IDITIONS. IF LICENSE

- 8. Select the setup type labeled "Typical" and click on "Next" to begin installing the software onto your Pocket PC device.
- **9**. Click on "Yes" to install the software application into the default directory.

BELKIN BTW-CE Setup	x Installing Applications
Setup Type Select the Setup Type to install.	Install "BELKIN BTW-CE" using the default application install directory?
Click the type of Setup you prefer, then click Next.	Yes No Cancel
<ul> <li>Typical Program will be installed with the most common options. Recommended for most users.</li> </ul>	
C Compact Program will be installed with minimum required options.	Installing Applications
	Installing BELKIN BTW-CE
C Lustom You may choose the options you want to install. Recommended for advanced users.	
InstaliShield	Cancel
Kack Next> Cancel	

**10**. Check your mobile device screen to see if additional steps are necessary to complete the installation. Then click "OK".

Application Downloading Complete		×
Please check your mobile device screen to s	ee if additional steps are necessary to comple	ete this installation.

**11.** Click "Finish" to complete the installation process.



Note: Ensure that your desktop or notebook computer and your mobile device have completed all operations before exiting the setup.

After installing the software, remove the Pocket PC from its cradle and conduct a "soft" reset. Refer to your Pocket PC user guide for more information about resetting the Pocket PC.

NOTE: Your Pocket PC must be connected to your desktop (via ActiveSync) during the installation. This is required for the installation process to properly update the Pocket PC. Should you re-install Bluetooth Manager 1.3.0, you must execute the full installation procedure (i.e. run Setup.exe) instead of reinstalling Bluetooth Manager from ActiveSync (via the Add/Remove Programs option).

#### On the Pocket PC:

A Welcome screen will be shown with basic instructions to use the *Bluetooth* Manager. Select "Add a shortcut in the Start menu" in order to have access to the *Bluetooth* Manager from the Start menu (otherwise, the Bluetooth Manager will be accessible from "Start > Programs").

NOTE: A soft reset leaves installed applications and stored data intact, and simply restarts the device. A hard reset deletes ALL downloaded applications on the handheld. See the Pocket PC's documentation for additional information.

#### 🋐 Installing WIDCOMM B 1:51p 💽

WIDCOMM BTW-CE The installation was successful!

In order to complete the installation, please reset your device.

#### How to use Bluetooth (after reset):

 Connections are established by using the Bluetooth Manager, available from: Start > Programs > Bluetooth Manager

Add a shortcut in the Start menu.

- The Bluetooth icon at the bottom of the screen allows you to configure Bluetooth and adjust various settings.
- Within Bluetooth applications, help is available via Start > Help

.....

#### UNINSTALL BLUETOOTH MANAGER

If you have a version of *Bluetooth* Manager prior to version 1.2.0, it must be uninstalled before installing version 1.2.0 or later. For versions 1.2.0 and later, this step is not necessary.

To uninstall *Bluetooth* Manager on the Pocket PC:

- 1. Connect the handheld computer, via its cradle and ActiveSync, to the desktop computer.
- 2. On the desktop computer, in the system tray, double-click the ActiveSync icon.
- 3. From the ActiveSync Tools menu, click "Add/Remove Programs..."
- 4. In the list of applications installed on the handheld computer, clear "BELKIN BTW CE". Verify that Belkin *Bluetooth* Manager is still highlighted.
- 5. Click the "Remove" button (DO NOT click the "OK" button).

#### UNINSTALL BLUETOOTH MANAGER

6. Click "OK" to acknowledge the Remove Application notification.

Any prior version of *Bluetooth* Manager will be uninstalled on both the handheld and desktop computers (follow any additional on-screen instructions that may appear on the desktop computer to complete the uninstall process).

#### Add/Remove Programs X Select a program's check box if you want to install it on your mobile device, or clear the check box if you want to remove the program from your device. Note: If a program that you installed is not listed, the program was not designed to be used on your mobile device. Soft Agency Auction Tracker 71.1 K . Soft Agency WAP Navigator 296.5 K 0.0 K Clear (uncheck) this box 363.3 K WIDCOMM BTW-CE 2.401.7 K Program description Leave name highlighted WIDCOMM BTWCE Space required for selected programs: D.O.K 4 578 8 K Space available on device: Install program into the default installation folder Click here to uninstal Remove from both locations To remove the selected program from both Remove. your device and this computer, click Remove. Cancel Help

## GLOSSARY

Authentication	Security feature that requires users to verify a numeric password before exchanging data.
Authorization	Security feature that requires user approval before another user is allowed to share data.
Bluetooth Neighborhood	A collection of <i>Bluetooth</i> devices.
Bonded Device	Recognized by your device so as not to require authentication or authorization.
Device	Device enabled with Bluetooth technology.
Device Address	Unique electronic address of a <i>Bluetooth</i> device.
Device Discovery	The location and recognition of one <i>Bluetooth</i> device by another.
Device Group	Compilation of several <i>Bluetooth</i> devices into a group, normally to conduct related tasks.

### GLOSSARY

Device Name	Name that a <i>Bluetooth</i> device provides when discovered by another device.
Service Discovery	Determines which applications other devices have in common with yours.

#### DECLARATION OF CONFORMITY WITH FCC RULES FOR ELECTROMAGNETIC COMPATIBILITY

We, Belkin Corporation, of 501 West Walnut Street, Compton, CA 90220, declare under our sole responsibility that the product,

#### F8T020

to which this declaration relates, complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Caution: Exposure to Radio Frequency Radiation.

The radiated output power of this device is far below the FCC radio frequency exposure limits. Nevertheless, the device shall be used in such manner that the potential for human contact normal operation is minimized.

When connecting an external antenna to the device, the antenna shall be placed in such a manner to minimize the potential for human contact during normal operation. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

#### Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### Modifications

The FCC requires the user to be notified that any changes or modifications to this device that are not expressly approved by Belkin Corporation may void the users authority to operate the equipment.

#### Canada-Industry Canada (IC)

The wireless radio of this device complies with RSS 139 & RSS 210 Industry Canada. This Class B digital complies with Canadian ICES-003.

Cet appareil numérique de la classe B conforme á la norme NMB-003 du Canada.

#### Europe-European Union Notice

Radio products with the CE alert marking comply with the R&TTE Directive (1995/5/EC) issued by the Commission of the European Community.



Compliance with this directive implies conformity to the following European Norms (in brackets are the equivalent international standards).

- EN 60950 (IEC60950) Product Safety
- EN 300 328 Technical requirement for radio equipment
- ETS 300 826 General EMC requirements for radio equipment.

To determine the type of transmitter, check the identification label on your Belkin product.

Products with the CE marking comply with the EMC Directive (89/336/EEC) and the Low Voltage Directive (72/23/EEC) issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European Norms (in brackets are the equivalent international standards).

- EN 55022 (CISPR 22) Electromagnetic Interference
- EN 55024 (IEC61000-4-2,3,4,5,6,8,11)- Electromagnetic Immunity
- EN 61000-3-2 (IEC610000-3-2) Power Line Harmonics
- EN 61000-3-3 (IEC610000) Power Line Flicker
- EN 60950 (IEC60950) Product Safety

Products that contain the radio transmitter are labeled with the CE alert marking and may also carry the CE logo.



## CE

#### Belkin Corporation Limited Two-Year Product Warranty

Belkin Corporation warrants this product against defects in materials and workmanship for its warranty period. If a defect is discovered, Belkin will, at its option, repair or replace the product at no charge provided it is returned during the warranty period, with transportation charges prepaid, to the authorized Belkin dealer from whom you purchased the product. Proof of purchase may be required.

This warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; if the product has been modified without the written permission of Belkin; or if any Belkin serial number has been removed or defaced.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE IN LIEU OF ALL OTHERS, WHETHER ORAL OR WRITTEN, EXPRESSED OR IMPLIED. BELKIN SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

No Belkin dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

BELKIN IS NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN, OR USED WITH, BELKIN PRODUCTS.

Some states do not allow the exclusion or limitation of incidental or consequential damages or exclusions of implied warranties, so the above limitations of exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.



#### belkin.com

#### **Belkin Corporation**

501 West Walnut Street Compton • CA • 90220 • USA Tel: 310.898.1100 Fax: 310.898.1111

#### Belkin Components, Ltd.

Express Business Park • Shipton Way Rushden • NN10 6GL • United Kingdom Tel: +44 (0) 1933 35 2000 Fax: +44 (0) 1933 31 2000

#### Belkin, Ltd.

7 Bowen Crescent • West Gosford NSW 2250 • Australia Tel: +61 (0) 2 4372 8600 Fax: +61 (0) 2 4372 8603

#### Belkin Tech Support US: 310.898.1100 ext. 2263

800.223.5546 ext. 2263 Europe: 00 800 223 55 460 Australia: 1800 666 040

#### P74315

© 2003 Belkin Corporation. All rights reserved. All trade names are registered trademarks of respective manufacturers listed. The *Bluetooth* name and the *Bluetooth* trademarks are owned by *Bluetooth* SIG, Inc., and are used by Belkin Corporation under license. Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com