



# NBX® Basic Telephone Guide

NBX Networked Telephony Solutions  
System Release 6.0

Part Number 900-0336-01  
Published July 2006

<http://www.3com.com/>



**3Com Corporation**  
**350 Campus Drive**  
**Marlborough, MA**  
**01752-3064**

Copyright © 1998–2006, 3Com Corporation. All Rights Reserved. No part of this documentation may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without written permission from 3Com Corporation.

3Com Corporation reserves the right to revise this documentation and to make changes in content from time to time without obligation on the part of 3Com Corporation to provide notification of such revision or change.

3Com Corporation provides this documentation without warranty, term, or condition of any kind, either implied or expressed, including, but not limited to, the implied warranties, terms, or conditions of merchantability, satisfactory quality, and fitness for a particular purpose. 3Com may make improvements or changes in the product(s) and/or the program(s) described in this documentation at any time.

If there is any software on removable media described in this documentation, it is furnished under a license agreement included with the product as a separate document, in the hardcopy documentation, or on the removable media in a directory file named LICENSE.TXT or !LICENSE.TXT. If you are unable to locate a copy, please contact 3Com and a copy will be provided to you.

**UNITED STATES GOVERNMENT LEGENDS:**

If you are a United States government agency, then this documentation and the software described herein are provided to you subject to the following:

**United States Government Legend:** All technical data and computer software is commercial in nature and developed solely at private expense. Software is delivered as Commercial Computer Software as defined in DFARS 252.227-7014 (June 1995) or as a commercial item as defined in FAR 2.101(a) and as such is provided with only such rights as are provided in 3Com's standard commercial license for the Software. Technical data is provided with limited rights only as provided in DFAR 252.227-7015 (Nov 1995) or FAR 52.227-14 (June 1987), whichever is applicable. You agree not to remove or deface any portion of any legend provided on any licensed program or documentation contained in, or delivered to you in conjunction with guide.

Unless otherwise indicated, 3Com registered trademarks are registered in the United States and may or may not be registered in other countries.

3Com, the 3Com logo, and NBX are registered trademarks of 3Com Corporation. NBX NetSet and pcXset are trademarks of 3Com Corporation.

Other brand and product names may be registered trademarks or trademarks of their respective holders.

# CONTENTS

---

## ABOUT THIS GUIDE

- How to Use This Guide 10
- Conventions 10
- Documentation 11
  - Comments on the Documentation 11

---

## 1 GETTING STARTED

- Setting Up Your Password and Voice Mail for the First Time 13
- NBX NetSet Utility 15
  - Starting the NBX NetSet Utility 16
  - Navigating the NBX NetSet Utility 17
  - Setting Your Accessibility Options 17
- Quick Reference Guide 17

---

## 2 3COM 3101 AND 3101SP BASIC TELEPHONES

- Telephone Buttons and Controls 19
- Programmable Access Buttons 22
- Status Lights for System Appearance Buttons 23

---

## 3 3COM 2101 BASIC TELEPHONE

- Telephone Buttons and Controls 25
- Programmable Access Buttons 27
- Status Icons 28

---

## 4 NBX MESSAGING

- NBX Messaging Components 29
  - Important Considerations 29
- Changing Your Password 30
  - Security Tips 31
- Changing Your Name Announcement and Personal Greetings 31

Listening to NBX Messages	32
Message Indicators	32
Listening from Your Computer	33
Listening from Your 3Com Telephone	33
Listening from Any Internal 3Com Telephone	33
Listening from an External Location	33
Managing Your Messages	34
Information About Your Messages	34
Replying to a Message	35
Forwarding a Message	35
Creating and Sending a Message	36
Using Voice Mail Group Lists	37
Viewing System Groups	37
Creating Personal Groups	37
Modifying or Deleting Personal Groups	39
Marking a Message as Private or Urgent	40
Other Ways to Manage Your Voice Mail Messages	41
Other Kinds of Mailboxes	41
Greeting-Only Mailbox	41
Phantom Mailbox	42
Group Mailbox	42

---

## 5 STANDARD FEATURES

Answering a Call	45
Caller ID	46
Answering a Second Call	46
Using the 3Com Telephone Display Panel	47
Tips on Using the Lists	48
Dialing a Call	49
An Internal Call	49
An External Call	49
Redialing a Call	50
Forwarding Incoming Calls	50
Call Coverage Points	50
Condition to Forward Calls	50
Setting Call Forward from the Telephone	51
Setting Call Forward from the NBX NetSet Utility	53

Call Forward Precedence	55
Putting a Call on Hold	56
Dialing Another Call	57
More Than One Call	57
Transferring a Call	58
Announced (Screened) Transfer	59
Blind Transfer	59
Direct Mail Transfer	60
Establishing a Conference Call	60
Disconnecting the Last Person That You Called	61
More About Conference Calls	62
Using Camp On	62
Initiating Camp On With Call Transfer	63
Initiating Direct Camp On	64
More About Camp On	64
Using Automatic Callback	66
Initiating Automatic Callback	66
More About Automatic Callback	67
Setting the Volume	68

---

## **6 PERSONALIZING YOUR TELEPHONE**

Guidelines About Features on NBX Telephones	69
Ringer Tones	70
User Button Mapping	70
Button Mapping Notes	75
Speed Dials	76
Personal Speed Dials	76
System-wide Speed Dials	78
Special Case: One-Touch Speed Dials	78
Printing Speed Dial Lists	79
Printing Labels	79
Off-Site Notification	80
Managing Off-site Notification Using the Telephone	84
Do Not Disturb	85
Preventing Unauthorized Use of Your Telephone	86
Telephone Locking	86

Call Permissions	87
Class of Service Override	87
Using a Headset	88
General Headset Instructions	88
Returning to the Headset After a Long Delay	89

---

## **7 GETTING MORE FROM YOUR TELEPHONE SYSTEM**

Listening to Your Messages in Your E-mail	92
Account (Billing) Codes	92
Caller ID	93
Internal and External Caller ID	93
Calling Line Identity Restriction (CLIR)	93
Call Pickup	95
Directed Call Pickup on a Specific Telephone	95
Group Call Pickup	95
Automatic Call Distribution Groups, Hunt Groups, and Calling Groups	95
Automatic Call Distribution	96
Hunt Groups	99
Calling Groups	101
Group Membership	102
Supervisory Monitoring	102
Agent Role for 3Com Entry and Analog Telephones	102
Supervisory Monitoring Terminology	102
Monitor	103
Whisper	104
Barge-In	104
Change Agent	105
Call Privacy	105
More About Supervisory Monitoring	106
WhisperPage	107
Starting a WhisperPage Session	108
More About WhisperPage	109
Call Park	109
Paging	110
Paging the System	111
Paging Zones	111
Configurable Operators	112

How Configurable Operators Work	112
Configuring the Operators	113
Using Message Waiting Indicator to Telephone	114
Sending an MWI Message	114
Retrieving an MWI Message	114
Deleting MWI Messages	115
Cancelling an MWI Message	115
Dialing a Call to a Remote Office	116
Using Unique Extensions	116
Using Site Codes	117
Bridged Extensions	118
Delayed Ringing	119
Using Pulse Dialing	119
Additional Applications	121

---

## **8 FEATURE CODES**

NBX Tones	123
Feature Codes with 3Com Telephones	124
3Com Basic Telephone	125
Using Feature Codes	125

---

## **9 3COM 3105 AND 1105 ATTENDANT CONSOLES**

3Com Attendant Console	130
Access Buttons	130
Feature Buttons	130
Attendant Console Labels	133
Opening the 3105 Attendant Console Label Cover	133
Complement Attendant Software	134
Managing Calls	136

---

## **A TELEPHONE INSTALLATION AND MAINTENANCE**

Connecting the Telephone	137
Attaching and Adjusting the Articulating Support Bracket	139
Attaching and Adjusting the Fixed Support Bracket	141
Low-Profile and High-Profile Positions	141
Wall-Mount Position	142

Security Wall-Mount Bracket	143
Moving Your Telephone	143
Swapping Telephones	143
Cleaning Your Telephone	143
Troubleshooting Problems	143

---

## INDEX



# ABOUT THIS GUIDE

This guide is intended for anyone using:

- 3Com® Basic Telephones
- 3Com Attendant Consoles
- NBX Complement Attendant Software.

It includes information about using the NBX Voice Mail system and the NBX NetSet™ administration utility for personal telephone settings.

Devices documented in this guide include:

- Telephones
  - 3Com 3101 Basic Telephone
  - 3Com 3101SP Basic Telephone
  - 3Com 2101 Basic Telephone
- Attendant Consoles
  - 3Com 3105 Attendant Console
  - 3Com 1105 Attendant Console
  - NBX Complement Attendant Software



*If the information in the release notes (readme.pdf) on the NBX Resource Pack CD differs from the information in this guide, follow the instructions in the release notes.*



*Analog telephones connected through the Analog Terminal Card or the Analog Terminal Adapter can use most of the features described in this book. See the NBX Feature Codes Guide for Analog Telephones in the NBX NetSet Utility.*

## How to Use This Guide

[Table 1](#) shows where to look for specific information in this guide.

**Table 1** Where to Find Information

	<b>Turn to</b>
How to get started with your new telephone	<a href="#">Chapter 1</a>
The 3Com 3101 and 3101SP Basic Telephones	<a href="#">Chapter 2</a>
The 3Com 2101 Basic Telephone	<a href="#">Chapter 3</a>
NBX Voice Messaging features	<a href="#">Chapter 4</a>
Using standard telephone features	<a href="#">Chapter 5</a>
Personalizing your telephone	<a href="#">Chapter 6</a>
Enhanced system features	<a href="#">Chapter 7</a>
Feature codes	<a href="#">Chapter 8</a>
The Attendant Console and Complement Attendant Software	<a href="#">Chapter 9</a>
Telephone maintenance and troubleshooting information	<a href="#">Appendix A</a>
References to all topics in this book	<a href="#">Index</a>

## Conventions




[Table 2](#) defines some commonly used words and phrases in this guide.

**Table 2** Common Terms

<b>Term</b>	<b>Definition</b>
Auto Attendant	The set of voice prompts that answers incoming calls and describes actions that a caller or user can take to access individual services.
Administrator	The person who is responsible for maintaining your 3Com Networked Telephony Solution.
Receptionist	The person who answers the majority of incoming telephone calls. In some business environments, this person may be a switchboard operator.
User	A person who has a single 3Com Telephone or an analog telephone connected to the NBX system through an ATC card or the single-port ATA device.

[Table 3](#) lists conventions that are used throughout this guide.

**Table 3** Icons

Icon	Type	Description
		Information that describes important features or instructions.
		Information that alerts you to potential loss of data or potential damage to an application, system, device, or network.
		Information that alerts you to potential personal injury.

## Documentation

The documentation set for 3Com NBX Networked Telephony Solutions is designed to help NBX telephone users, installers, and administrators maximize the full potential of the system.

The *NBX Resource Pack CD* contains many guides to the NBX products and their related 3Com applications.

When you log in to the NBX NetSet utility as a user, you can go to the **Resources** menu and view the PDF versions of the *NBX Quick Reference Guide*, *NBX Telephone Guide* and *NBX Feature Codes Guide* by clicking the link on its associated tab page.

The NBX NetSet utility also includes a searchable Help system with Help buttons on each page.

An administrator who logs in can also see the *NBX Installation Guide* and the *NBX Administrator's Guide*.

## Comments on the Documentation

Your suggestions are important to us. They help us to make the NBX documentation more useful to you.

Please send your e-mail comments about this guide or any of the 3Com NBX documentation and Help systems to:

**Voice\_TechComm\_Comments@3com.com**

Include the following information with your comments:

- Document title
- Document part number (found on the front or back page)

- Page number



*As always, please address all questions regarding the NBX hardware and software to your 3Com NBX Voice-Authorized Partner.*

# 1

## GETTING STARTED

As soon as you are given a telephone and extension number, you need to set up a password and record your name announcement and personal greeting.

This chapter covers these topics:

- [Setting Up Your Password and Voice Mail for the First Time](#)
- [NBX NetSet Utility](#)
- [Quick Reference Guide](#)



*For how to access NBX® features from an analog telephone, set your password as described next and then see the NBX Feature Codes Guide in the NBX NetSet™ utility.*



*For how to set your NBX NetSet utility password and access NBX features from a third-party, SIP-based, IP telephone, see the NBX Feature Codes Guide for SIP Telephones.*

---

### Setting Up Your Password and Voice Mail for the First Time

The procedure by which you set up your password and voice mailbox for the first time depends on:

- The kind of telephone that you have
- The kind of voice messaging system on your NBX system. Ask your administrator what kind of voice messaging is active on your system.

[Table 4](#) describes how to set up your first password.



*For details on tones and feature codes, see [Chapter 8](#). For details on tones and feature codes on analog telephones, see the NBX Feature Codes Guide in the NBX NetSet utility.*

**Table 4** Setting Your NBX NetSet Utility and NBX Messaging Password

Feature	3Com Phones	Analog Phones
<b>Password — Set Initially</b>		
<p><b>If your system uses NBX Messaging</b>, follow the NBX voice prompts to set your NBX password (which is the same for the NBX NetSet utility and voice messaging) OR use the NBX NetSet utility, described next.</p>	<p>Message button and follow the voice prompts</p>	<p>500 ** and follow the voice prompts</p>
<p><b>If your system uses a voice messaging application other than NBX Messaging<sup>1</sup></b>, use this code sequence to set your password for the NBX NetSet utility. 3Com recommends that you use the same password for the NBX NetSet utility and your messaging application.</p>	<p>OR, for systems that do not use NBX Messaging:</p>	<p>OR, for systems that do not use NBX Messaging:</p>
<p><b>For all voice messaging systems:</b></p>	<p><b>Feature</b> + 434 + new password + # + repeat your new password + #</p>	<p># (Feature Entry Tone) + 434 (Feature Entry Tone) + new password + # (Feature Entry Tone) + repeat your new password + # (Confirmation Tone)</p>
<ul style="list-style-type: none"> <li>■ Use only 4- to 10-digit numbers</li> <li>■ Do not use letters, *, or # as part of your password.</li> </ul>		
<b>Password — Change</b>		
<p><b>If your system uses NBX Messaging</b>, follow the NBX voice prompts to change your NBX password (which changes your NBX NetSet utility password, because they are the same) OR use the NBX NetSet utility, described next.</p>	<p>Message button + old password + # + 9 + 2 + follow the prompts</p>	<p>500 ** + extension number + old password + # + 9 + 2 + follow the prompts</p>
<p><b>If your system uses a voice messaging application other than NBX Messaging<sup>1</sup></b>, use this code sequence to change your password for the NBX NetSet utility.</p>	<p>OR, for systems that do not use NBX Messaging:</p>	<p>OR, for systems that do not use NBX Messaging:</p>
<p>3Com recommends that you use the same password for the NBX NetSet utility and your voice messaging application.</p>	<p><b>Feature</b> + 434 + old password + # + new password + # + repeat your new password</p>	<p># (Feature Entry Tone) + 434 (Feature Entry Tone) + old password + # (Feature Entry Tone) + new password + # (Feature Entry Tone) + repeat your new password + # (Confirmation Tone)</p>
<p><b>For all voice messaging systems:</b></p>		
<p>If you forget your password, the administrator can reset it to your extension. Then use this code (for applications other than NBX Messaging) or the NBX voice prompts to change it.</p>		

**Table 4** Setting Your NBX NetSet Utility and NBX Messaging Password (continued)

Feature	3Com Phones	Analog Phones
<b>Password — Set Initially</b>		
<b>If your system uses NBX Messaging</b> , follow the NBX voice prompts to set your NBX password (which is the same for the NBX NetSet utility and voice messaging) OR use the NBX NetSet utility, described next.	Message button and follow the voice prompts	500 ** and follow the voice prompts
<b>If your system uses a voice messaging application other than NBX Messaging<sup>1</sup></b> , use this code sequence to set your password for the NBX NetSet utility. 3Com recommends that you use the same password for the NBX NetSet utility and your messaging application.	OR, for systems that do not use NBX Messaging:	OR, for systems that do not use NBX Messaging:
<b>For all voice messaging systems:</b>	<b>Feature</b>	<b>#</b>
<ul style="list-style-type: none"> <li>■ Use only 4- to 10-digit numbers</li> <li>■ Do not use letters, *, or # as part of your password.</li> </ul>	+ 434	(Feature Entry Tone)
	+ new password	+ 434
	+ #	(Feature Entry Tone)
	+ repeat your new password	+ new password
	+ #	+ #
	+ #	(Feature Entry Tone)
		+ repeat your new password
		+ #
		(Confirmation Tone)

<sup>1</sup> Exception: If you are using a third-party, SIP-based, IP telephone on the NBX system, refer to the *NBX® Feature Codes Guide for SIP Telephones* for how to set and change the NBX NetSet utility password.

After you have set your initial NBX password, continue to follow the voice prompts to record your name announcement. Your name announcement tells callers that they have reached your voice mailbox.

Then follow the voice prompts to record your personal greeting. Your personal greeting lets callers know important information about you, for instance, that you are on vacation, available at another number, or unavailable for a specified amount of time.

At any time you can change these greetings or record more than one personal greeting and choose which one is active. See [“Changing Your Name Announcement and Personal Greetings”](#) in [Chapter 4](#).

## NBX NetSet Utility

The NBX NetSet utility has two interfaces:

- **Administrator** — Your administrator logs in with a special password and uses the NBX NetSet utility to manage and configure system-wide telephone settings and many of the settings for your telephone.

- **User** — As a telephone user, you log in to the NBX NetSet utility with your own system ID (your extension) and password to:
  - View and change your telephone's personal settings, such as speed dials, ringer tone, accessibility options, and specify where you want your calls to go when you cannot answer them (*your call coverage points*).
  - Listen to and delete your voice messages from your computer as an alternative to managing calls on your telephone.
  - View your call permissions, certain current feature settings, and the internal user directory to call other users on your system.
  - Log in to and out of one or all ACD groups, hunt groups, and calling groups of which your telephone is a member.

See [Chapter 5](#), [Chapter 6](#), and [Chapter 7](#) for discussions about the standard and enhanced features that you can monitor and change in the NBX NetSet utility. See [Chapter 4](#) for voice messaging features.



*If your NBX system uses a messaging application other than NBX Messaging, off-site notification and other voice messaging features are available through your messaging application. See the application's documentation rather than using this Guide.*

### Starting the NBX NetSet Utility

To use the NBX NetSet utility, you need a computer that is connected to your local area network (LAN) and that has a web browser. (You do not need Internet access.) To start the NBX NetSet utility:

- 1 Ask your administrator for the IP address (or DNS host name) for your NBX system. In the web browser on your computer (Microsoft Internet Explorer version 5.5 or later is optimal), enter the IP address (or DNS host name) in the **Address** field, and then press Enter. The NBX NetSet utility login screen appears.



*You cannot log in to the NBX NetSet utility until you establish your password through your telephone using NBX voice prompts or the Feature Code sequence. See [Table 4](#) earlier in this chapter.*

- 2 Click **User** to log in as a user. The password dialog box appears.
- 3 Type your NBX NetSet utility user identification (always your 3-digit or 4-digit telephone extension) and your NBX NetSet utility password, and then click **OK**.



### **Navigating the NBX NetSet Utility**

Once you log in to the NBX NetSet utility, you can easily locate the information you need to use your NBX telephone features. Start by clicking the category you want in the left-hand column. Tabs indicating the specific topics for this category appear at the top of the NBX NetSet window. To display a particular topic, click its associated tab.

You can also quickly access any of the frequently used topics from the Favorites menu. Simply select an item from the drop-down list to go to the selected topic. (If your browser does not support JavaScript, click the Go button after selecting an item.)

### **Setting Your Accessibility Options**

To change your NBX telephone's settings for accessibility and to choose the format for your NBX NetSet utility online Help, log in to the NBX NetSet utility and go to **Accessibility > Accessibility Options**. After selecting your preferences, click Apply to save your changes.

---

### **Quick Reference Guide**

To open and print a copy of the *Quick Reference Guide* for the most frequently used features on your telephone:

- 1 Log in to the NBX NetSet utility. See ["Starting the NBX NetSet Utility"](#) earlier in this chapter.
- 2 Go to **Resources > Telephone Quick Reference** and click the **Telephone Quick Reference** link. The quick reference guide that pertains to your telephone appears. Adobe Acrobat Reader 5.0 or higher is required to view the file. Adobe Acrobat Reader is available free from the Adobe Web site:  
[www.adobe.com](http://www.adobe.com)



# 2

## 3Com 3101 AND 3101SP BASIC TELEPHONES

This chapter describes the buttons, controls, and features on the 3Com® 3101 and 3101SP Basic Telephones.

The chapter covers these topics:

- [Telephone Buttons and Controls](#)
- [Programmable Access Buttons](#)
- [Status Lights for System Appearance Buttons](#)




*For how these features work on an analog telephone that is connected to the NBX® system, see the NBX Feature Codes Guide for Analog Telephones, which you can access by going to **Resources > Features Codes Guide** in the NBX NetSet™ utility.*

The 3Com 3101 Basic Telephone (3C10401A) does not include a microphone, which means it does not support speaker phone operation. The 3Com 3101SP Basic Telephone (3C10410SPKRA) has a microphone and supports speaker phone operation. All other features operate the same on the two telephones.



---

### Telephone Buttons and Controls

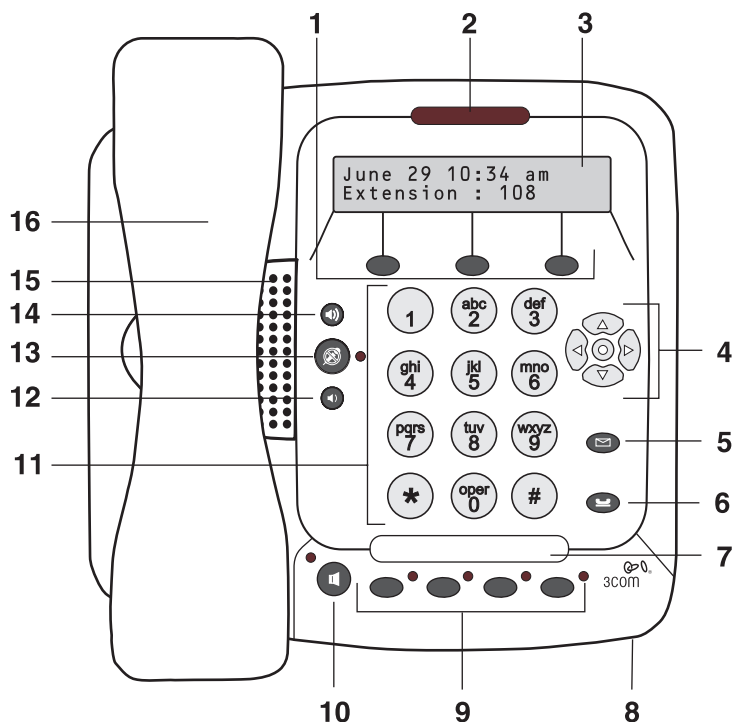
[Figure 1](#) shows the buttons and controls on the 3Com 3101SP Basic Telephone. The 3Com 3101 Basic Telephone does not include a microphone, **8**, or a speaker button and its indicator light, **10**. All other controls are identical on the two telephones.



**Figure 1** 3Com 3101SP Basic Telephone

- 1 Soft buttons** — Allow you to select items that are displayed in the telephone display panel. See [“Using the 3Com Telephone Display Panel”](#) in [Chapter 5](#). The buttons, from left to right, are:
  - **Slct** (Select)
  - **Back** (returns you to the next higher level in the menu)
  - **Exit** (leaves the display panel menus)
- 2 Message Waiting Indicator (MWI)** — When lit, indicates that you have one or more new voice mail messages in your voice mailbox. Also, this indicator flashes when your telephone rings.
- 3 Display panel** — Displays telephone status messages, Caller ID information (if enabled), and the number of messages that you have in your voice mail mailbox. You can also use it to view these items:
  - Logs of your recent missed, answered, and dialed calls
  - A directory of people’s names in your organization
  - Personal speed dial numbers

- System-wide speed dial numbers
  - Call forward setting for all calls
- 4 **Scroll buttons (Up, Down, Left, Right, Center)** — Allow you to scroll through the items in the telephone display panel. See [“Using the 3Com Telephone Display Panel”](#) in [Chapter 5](#). The left, right, and center buttons are reserved for future use.
  - 5 **Message button** — Accesses your voice mail messages through the NBX Messaging system. See [“Listening to NBX Messages”](#) in [Chapter 4](#).
  - 6 **Hold button** — Places a caller on hold. See [“Putting a Call on Hold”](#) in [Chapter 5](#).
  - 7 **Label area for Access buttons** — You can use the NBX NetSet utility to create a new label if you change any button mappings.
  - 8 **Microphone (3101SP only)** — Activated when the telephone is in speaker phone mode, that is, after you press the  (speaker) button. For best results, keep the area around the microphone free of obstructions. To minimize the effects of background noise, the microphone is directional; it performs best when you are directly in front of the telephone.
  - 9 **Programmable Access buttons** — Allow you and your administrator to assign features to specific buttons. See [“Programmable Access Buttons”](#) and [“Status Lights for System Appearance Buttons”](#) later in this chapter.
  - 10 **Speaker button (3101SP only)** — Enables you to use the speaker phone feature. Press the  button before you dial the call, when your telephone is ringing, or while a call is in progress. To turn the speaker off and resume the conversation, pick up the handset.



*The 3Com 3101SP Basic Telephone includes a microphone and supports speaker phone operation. The 3Com 3101 Basic Telephone does not support speaker phone operation and it does not have a  button.*

- 11 **Telephone key pad**
- 12 **Volume down** — Lowers the volume of the ringer, the speaker, or the handset. See [“Setting the Volume”](#) in [Chapter 5](#).
- 13 **Mute button** — Enables you to prevent callers from hearing what you are saying during a telephone call, although you can still hear them. Press the  button to turn off the telephone’s mouthpiece when you are using the handset or the microphone (3101SP only) when your telephone is in speaker phone mode. To turn off the Mute feature, press the  button again. The indicator lamp is lit when the Mute feature is enabled.


- 14 **Volume up** — Raises the volume of the ringer, the speaker, or the handset. See [“Setting the Volume”](#) in [Chapter 5](#)
- 15 **Speaker**
- 16 **Handset**

## Programmable Access Buttons

[Figure 2](#) displays the Access buttons on the 3Com 3101 and 3101SP Basic Telephones. By default, the functions assigned to these buttons are set by your administrator. If your administrator has assigned you to a group that allows you to change your button mappings, log in to the NetSet utility and go to **Telephone Programming > Button Mapping** to view or change the current features on your telephone's buttons. See [“User Button Mapping”](#) in [Chapter 6](#).

You can also set buttons to one-touch speed dials. To view or change the current speed dials on your telephone's buttons (button mappings), go to **Directory > One-Touch Speed Dial** in the NBX NetSet utility. See [“Special Case: One-Touch Speed Dials”](#) in [Chapter 6](#).

**Figure 2** Access Buttons

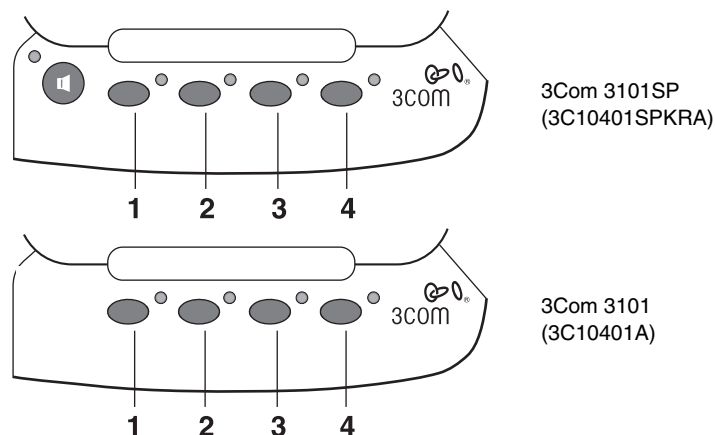

Access buttons have these default settings:

- 1 **System Appearance button.**
- 2 **System Appearance button.**
- 3 **Feature button** — Allows you to access features that are not directly assigned to an Access button on your telephone. See [“Using Feature](#)

[Codes](#)” in [Chapter 8](#) for a list of features and codes and how to use them.

- 4 Transfer button** — Sends the currently active call to another telephone.



*The telephone LabelMaker, which is available through the NBX NetSet utility, enables you to define and print a new label for your Access buttons.*

### Status Lights for System Appearance Buttons

An Access button that is set up for incoming and outgoing calls is called a System Appearance button. The light beside each System Appearance button indicates the status. See [Table 5](#).

**Table 5** Status Indicator Lights for System Appearance Buttons

	The line is
Off	Available for use
Steady	In use
Blinking quickly	Ringing
Blinking slowly	On hold





# 3

## 3Com 2101 BASIC TELEPHONE

This chapter describes the buttons, controls, and features that are specific to the 3Com® 2101 Basic Telephone. It covers these topics:

- [Telephone Buttons and Controls](#)
- [Programmable Access Buttons](#)
- [Status Icons](#)




*For how these features work on an analog telephone that is connected to the NBX® system, click the NBX Feature Codes Guide icon below any screen in the NBX NetSet™ Utility.*

---

### Telephone Buttons and Controls

[Figure 3](#) shows the buttons and controls on the 3Com 2101 Basic Telephone.

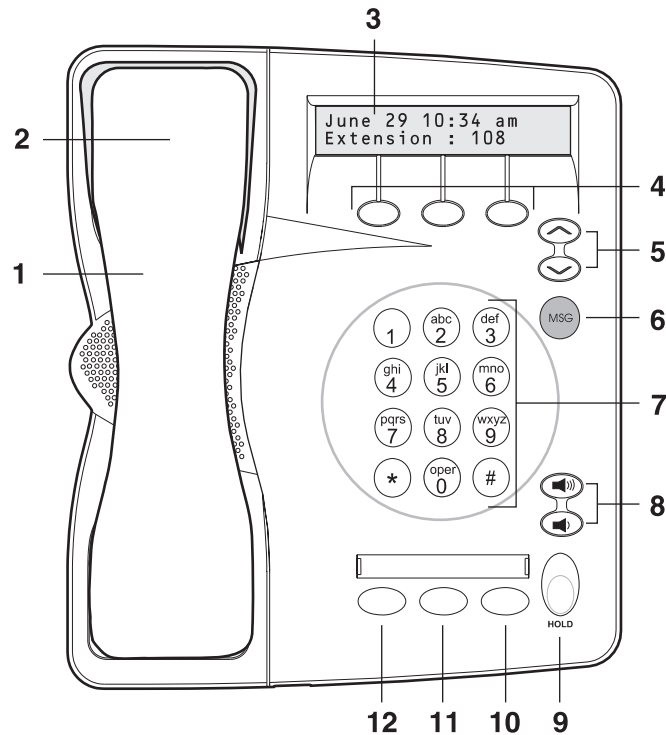**Figure 3** 3Com 2101 Basic Telephone

The 3Com 2101 Basic Telephone has these features:

**1 Handset**

**2 Hook switch (under the handset)** — Pressing and releasing the hook switch gives you a dial tone. This feature is used with Call Park. See [“Call Park”](#) in [Chapter 7](#).

**3 Display panel** — Displays telephone status messages (see [Table 6](#)), Caller ID, Locked Telephone, and other feature information (if enabled), and the number of messages in your voice mail mailbox. You can also use it to view these items:

- Logs of your recent missed, answered, and dialed calls
- A directory of people’s names in your organization
- Personal speed dial numbers
- System-wide speed dial numbers
- Call forward setting for all calls

- 4 **Soft buttons** — Allow you to select items that are displayed in the telephone display panel. See [“Dialing a Call”](#) in [Chapter 5](#). The buttons, from left to right, are:
  - **Slct** (Select)
  - **Back** (returns you to the next higher level in the menu)
  - **Exit** (leaves the display panel menus)
- 5 **Scroll buttons** — Allow you to scroll through the items in the telephone display panel. See [“Using the 3Com Telephone Display Panel”](#) in [Chapter 5](#).
- 6 **MSG (Message) button** — Accesses your voice mail messages through the NBX Messaging system. See [“Listening to NBX Messages”](#) in [Chapter 4](#).
- 7 **Telephone key pad**
- 8 **Volume control buttons** — Raise or lower the volume of the ringer, the handset, or the headset. See [“Setting the Volume”](#) in [Chapter 5](#).
- 9 **Hold button** — Places a caller on hold. See [“Putting a Call on Hold”](#) in [Chapter 5](#).
- 10 **Transfer button** — (factory default setting) Sends the currently active call to another telephone. See [“Programmable Access Buttons”](#) later in this chapter.
- 11 **Call Toggle button** — (factory default setting) Similar to a Hold button, enables you to switch between two calls. See [“Programmable Access Buttons”](#) later in this chapter.
- 12 **Feature button** — (factory default setting) See [“Programmable Access Buttons”](#) later in this chapter.

---

## Programmable Access Buttons

The 3Com 2101 Basic Telephone has three programmable Access buttons. The factory-default settings for these buttons are (from left to right):

- **Feature** — Allows you to access features that are not directly assigned to an Access button on your telephone. See [“Using Feature Codes”](#) in [Chapter 8](#) for a list of features and codes and how to use them.
- **Call Toggle** — Available only on the 3Com 2101 Basic Telephone. Use this button to manage two telephone calls at the same time. See [“Answering a Call”](#) in [Chapter 5](#).

- **Transfer** — Sends the currently active call to another telephone. See [“Transferring a Call”](#) in [Chapter 5](#).



*If your administrator has assigned you to a group that allows you to change your button mappings, log in to the NetSet utility and go to **Telephone Programming > Button Mapping** to view or change the current features on your telephone’s buttons. See [“User Button Mapping”](#) in [Chapter 6](#). However, changing the settings for the Feature or Call Toggle buttons greatly reduces your ability to use some of the NBX system features.*

---

## Status Icons

Your 3Com 2101 Basic Telephone allows you to use two telephone lines at the same time.

On the display panel, the behavior of the telephone icon next to the number **1** (for Line 1) on the first row, or **2** (for Line 2) on the second row, indicates the status of the lines. See [Table 6](#).

**Table 6** Status Indicator Behavior for the Telephone Icons in the Display Panel

<b>If the telephone icon is</b>	<b>The line is</b>
Not displayed	Available for use
Steady	In use
Blinking quickly	Ringing
Blinking slowly	On hold

# 4

## NBX MESSAGING

This chapter describes the NBX® Networked Telephony Solutions voice messaging features. It covers these topics:

- [NBX Messaging Components](#)
- [Changing Your Password](#)
- [Changing Your Name Announcement and Personal Greetings](#)
- [Listening to NBX Messages](#)
- [Replying to a Message](#)
- [Forwarding a Message](#)
- [Creating and Sending a Message](#)
- [Using Voice Mail Group Lists](#)
- [Marking a Message as Private or Urgent](#)
- [Other Ways to Manage Your Voice Mail Messages](#)
- [Other Kinds of Mailboxes](#)

---

### NBX Messaging Components

A key component of the NBX Networked Telephony Solutions is the NBX Messaging system, which includes voice mail, off-site notification, and several administrative features. Voice mail allows callers to leave voice messages in your voice mailbox when you are not able to answer your telephone. You can listen to, save, and forward those messages from any touch-tone telephone.



*If your system uses a messaging application other than NBX Messaging, use the documentation for your messaging application instead of the instructions in this chapter.*

### Important Considerations

- The steps are the same for initially setting up the name announcement, personal greetings, and passwords for personal,

greeting-only, and phantom mailboxes. See [“Setting Up Your Password and Voice Mail for the First Time”](#) in [Chapter 1](#) for details. (Your administrator creates group mailboxes and their passwords.)

- For changes to passwords and greetings, see [“Changing Your Password”](#) and [“Changing Your Name Announcement and Personal Greetings”](#) later in this chapter.
- The default setting for the maximum length of each voice mail message on the system is 5 minutes. Your administrator can configure your organization’s NBX Messaging system to receive and store voice mail messages that are up to 10 minutes long.
- Use the *Off-Site Notification* feature if you want the NBX system to notify you when callers leave voice mail messages in your voice mailbox. See [“Off-Site Notification”](#) in [Chapter 6](#).
- With a touch-tone telephone, you are able to bypass system messages using option buttons if you are configuring passwords and greetings. However, you cannot bypass voice mail messages in this manner.

---

## Changing Your Password

You use the same 4-digit to 10-digit password to log in to the NBX NetSet™ utility and to access your NBX voice mail. You can change this password with your telephone (using the NBX voice prompts or a feature code) or through the NBX NetSet utility.

To set up your password for the first time, see [Table 4](#) and [“NBX NetSet Utility”](#) in [Chapter 1](#). [Table 4](#) also describes how to change your password.

If you forget your password, the administrator can set it to be your extension number. Then follow the instructions in [Table 4](#) in [Chapter 1](#) to change it to a more secure password. Also see [“Security Tips”](#) next.



*If your NBX system uses a messaging system other than NBX Messaging:*

- Use the feature code method described in [Table 4](#) in [Chapter 1](#) to set and change the NBX NetSet utility password.
- 3Com recommends that you use the same password for your voice messaging system and for the NBX NetSet utility.

**Security Tips**

- Change your password often.
- Do not use passwords that can easily identify you, such as your phone extension or birth date.
- Avoid simple passwords such as 1234 or 0000.
- Use numbers only; do not use letters, \*, or # as part of your password.
- Longer passwords are more secure. You can use up to 10-digits for your password.
- Never tell your password to anyone.

---

**Changing Your Name Announcement and Personal Greetings**

You set name announcement and personal greeting when you first set your voice mail. See ["Setting Up Your Password and Voice Mail for the First Time"](#) in [Chapter 1](#). Change your personal greeting often, to ensure that callers hear up-to-date information.

You can record up to five personal greetings and choose which to use from the telephone. You can also review, delete, or choose which to make active with the NBX NetSet utility.

If appropriate, you may also want to change the greeting for an extension that is a "greeting-only mailbox," so that callers do not attempt to leave messages. See ["Greeting-Only Mailbox"](#) later in this chapter.

To change your name announcement or personal greetings:

- 1** Log in to your mailbox at your telephone or remotely.
- 2** Press **9** for **Mailbox Options** and then press **1**.
- 3** To review or change your name announcement, press **1** and follow the prompts.
- 4** To review or change your personal greetings, press **2** and follow the prompts.

Using the NBX NetSet utility, you can review or delete a personal greeting or choose which of your recorded greetings to make active.

To hear or delete your personal greetings or choose your active personal greeting from the NBX NetSet utility:

- 1** Log in to the NBX NetSet utility with your extension and password.
- 2** Go to **NBX Voice Mail Settings > Personal Greeting**.

- 3 Select a greeting.
  - a Click **Select** to choose the greeting as the active greeting.
  - b Click on the greeting identifier in the **Number** column to hear the greeting.
  - c Click **Delete** to delete the greeting. You cannot delete greeting number 1; you can re-record it through the phone.
  - d Click **Apply** to apply your changes or **Reset** to deselect the active greeting.



*If you forget your password, the administrator can set it to be your extension number. Then follow the instructions in [Table 4](#) in [Chapter 1](#) to change it to a more secure password. Also see [“Security Tips”](#) earlier in this chapter.*

---

## Listening to NBX Messages

You can listen to your NBX voice mail messages from your 3Com® telephone, from any touch-tone telephone, or by logging in to the NBX NetSet utility. After you listen to messages, you can save or delete them to clear them from the New Messages queue. For how to set up your NBX NetSet utility password the first time, see [Table 4](#) and [“NBX NetSet Utility”](#) in [Chapter 1](#).



*If your system uses a messaging application other than NBX Messaging, use the documentation for your messaging application instead of these instructions.*

## Message Indicators

Here is how you can tell if you have messages in your mailbox:

- **On a 3Com 3101 or 3101SP Basic Telephone** — The indicator bar above the display panel is lit, and the display panel shows the number of messages. **Example: 3 Msgs 2 New.**
- **On a 3Com 2101 Basic Telephone** — The display panel shows the number of messages. **Example: 3 Msgs 2 New.**
- **On an analog telephone** — Pick up the handset. If you hear the New Messages Tone (rapid stutter tone), you have new messages or messages that you have listened to but have not yet saved or deleted. For information on accessing NBX features from an analog telephone, see the *NBX Feature Codes Guide* in the NBX NetSet utility.
- **In the NBX NetSet utility** — Log in as a user. The list of your messages appears on the **My Messages > Voice Mailbox** page. A



new message has a \* next to it. A forwarded messages has -->**Fw:** next to it.

### Listening from Your Computer

To listen to your messages from your computer, you must have a way of playing audio files:

- A USB audio device such as a USB headset and an operating system that supports USB

#### OR

- A sound card, an application such as Windows Media Player, and either headphones or speakers

- 1 Log in to the NBX NetSet utility with your extension and password.
- 2 Go to **My Messages > Voice Mailbox** and select a message.
- 3 Click **Listen**.
- 4 The third-party application downloads the voice message and plays it.
- 5 To delete the message, select the message and then click **Delete**.

### Listening from Your 3Com Telephone

To listen to your messages from your own 3Com Telephone:

- 1 Pick up the handset and press the **Message** button to access the mailbox.
- 2 At the prompt, dial your password and press #.
- 3 See ["Managing Your Messages"](#) for the buttons that you use to manage your messages.

### Listening from Any Internal 3Com Telephone

To listen to your messages from any 3Com Telephone other than your own within your NBX system:

- 1 Pick up the handset and press the **Message** button.
- 2 Press \* and dial your extension. You hear your name announcement.
- 3 Dial your password and press #.
- 4 See ["Managing Your Messages"](#) for the buttons that you use to manage your messages.

### Listening from an External Location

To listen to your messages from an external telephone:

- **If you can dial your telephone extension directly** — Press **\*** during your personal greeting. At the prompts, enter your extension and password, and press **#**.
- **If you call the main telephone number of your organization and:**
  - **The Automated Attendant answers** — Press **\*\*** during your personal greeting. At the prompts, enter your extension and password, and press **\***.
  - **The receptionist answers** — Ask to be transferred to your voice mail. Press **\*** during your personal greeting. At the prompts, enter your extension and password, and press **#**.

### Managing Your Messages

Use these buttons to manage your messages:

Press **1** to play or repeat the message.

Press **2** to save the message.

Press **3** to delete the message from your mailbox. *You cannot retrieve a message after you delete it.*

Press **4** to reply to the message. See [“Replying to a Message”](#) later in this chapter.

Press **5** to forward the message. See [“Forwarding a Message”](#) later in this chapter.

Press **6** to listen to date, time, and sender information about the message. See [“Information About Your Messages”](#) next.

Press **7** to back up 3–5 seconds in the current message.

Press **8** to pause the current message for up to 20 seconds.

Press **9** to move ahead 3–5 seconds in the current message.

Press **#** to move to the next message.

Press **\*** to return to the main menu.

### Information About Your Messages

To listen to date, time, and sender information about a message in your mailbox, press **6** during or after the message, and then press one of these buttons:

Press **1** for date and time information.

Press **2** for sender information.

Press **4** to listen to the previous message.

## Replying to a Message

You can send a reply to a voice mail message, provided that the NBX system has received the necessary caller ID information.



*If you receive a message that is marked Private, you can reply to the originator, but you cannot forward the message to others.*

To reply to a message after you listen to it:

- 1 Press **4**.

If the message has been sent to more than one person, press **1** to reply only to the sender or press **2** to reply to all of the recipients.

- 2 After the tone, record your reply.
- 3 Hang up, or press **#** for more options.
- 4 If you press **#**, press one of these buttons:

Press **1** to send your reply.

Press **2** to re-record your reply.

Press **3** to listen to your reply.

Press **9** to Mark the message Private or Urgent. See [“Marking a Message as Private or Urgent”](#) later in this chapter.

Press **\*** to cancel your message.

## Forwarding a Message

You can forward most messages, with or without comments.



*If you receive a message that is marked Private, you cannot forward it.*

To forward a message:


- 1 Log in to your voice mailbox at your telephone or remotely.
- 2 Listen to a message that you want to forward, and press **5**.
- 3 After the tone, record an introductory message and then press **#** OR if you choose not to record a comment, press **#** when you hear the tone.
- 4 Optionally, press one of these buttons, OR proceed to step 5.

Press **2** to re-record your introductory comment.

Press **3** to listen to your introductory comment.

Press **9** to mark the message **Private** or **Urgent**. See [“Marking a Message as Private or Urgent”](#) later in this chapter.

Press **\*** to cancel your message.

- 5 When you are ready to forward the message, press **1**.
  - 6 Dial one of these destination numbers plus **#**:
    - The internal extension or mailbox number of the recipient
    - A speed dial number. See [“Speed Dials”](#) in [Chapter 6](#).
    - A voice mail group list number. (See [“Using Voice Mail Group Lists”](#) later in this chapter.)
    - A site code plus extension (to send to a user on another NBX system in your organization). **Example:** *neee* or *neeee* (where *n* = one or more site code digits and *e* = the extension digits on the other system).
-  *For valid site codes in your organization, see your administrator.*
- 7 To forward the message to several recipients, dial each destination number followed by **#**.
  - 8 After the last destination number and its **#**, press **#** again to send your message.
  - 9 Follow the prompts to delete or save the message you just forwarded.

---

## Creating and Sending a Message

To create and send a message directly without actually making a call, follow these steps:

- 1 Log in to your mailbox at your telephone or remotely.
- 2 Dial **2** to select **Create and Send a Message**.
- 3 At the tone, record a message that is at least 2 seconds long, and press **#** to end the recording.
- 4 Optionally, press one of these buttons, OR proceed to step 5.
  - Press **2** to re-record the message.
  - Press **3** to review the message.
  - Press **9** to mark the message **Private** or **Urgent**. See [“Marking a Message as Private or Urgent”](#) later in this chapter.
  - Press **\*** to cancel your message.
- 5 When you are ready to send the message, press **1**.
- 6 Dial one of these destination numbers plus **#**:
  - The internal extension or mailbox number of the recipient

- A speed dial number. See [“Speed Dials”](#) in [Chapter 6](#).
- A voice mail group list number. (See [“Using Voice Mail Group Lists”](#) later in this chapter.)
- A site code plus extension (to send to a user on another NBX system in your organization). **Example:** *neee* or *neeee* (where *n* = one or more site code digits and *e* = the extension digits on the other system)



*For valid site codes in your organization, see your administrator.*

- 7 To send the message to several recipients, dial each destination number followed by #.
- 8 After the last destination number and its #, press # again to send your message.

---

## Using Voice Mail Group Lists

A Voice Mail Group, also called a mail group or mail list, is a collection of extensions with a special “group number.” Use it to send a message to everyone on the list at the same time.



*A Voice Mail Group is not the same as an ACD Group, Hunt Group, or Calling Group. See [“Automatic Call Distribution Groups, Hunt Groups, and Calling Groups”](#) in [Chapter 7](#).*

## Viewing System Groups

System Voice Mail Groups can be set up by your administrator. You can send a message to everyone in a System Voice Mail Group by using \* plus the two-digit group number.

You can see a list of System Voice Mail Groups and the membership of each group through the NBX NetSet utility.


To view System Voice Mail Groups:

- 1 Log in to the NBX Netset utility and go to **NBX Voice Mail Settings > System Group List**. A list of System Group IDs and Names displays.
- 2 To view the membership of any group, click the Group ID. A list of the system group members displays.

## Creating Personal Groups

You can create your own Personal Voice Mail Group either through the telephone or through the NBX NetSet utility.

To create a personal voice mail list through the telephone:

- 1 Log in to your mailbox at your telephone or remotely.
  - 2 Dial **9** for **Mailbox Options**.
  - 3 Dial **3** for **Group Lists**, and then **2** for **Create Group**.
  - 4 Dial a 2-digit number, 01–99, which becomes the Group Number.
  - 5 After the tone, speak a name for the group, and press **#**.
  - 6 Dial one of these numbers:
    - **1** to save the group name and proceed to step **7**
    - **2** to change the group name and return to step **5**
    - **\*** to exit without saving
  - 7 Dial one of these destination numbers plus **#**:
    - The internal extension or mailbox number of the recipient
    - A speed dial number. See [“Speed Dials”](#) in [Chapter 6](#)
    - Another personal or system group list number
    - A Voice Profile for Internet Mail (VPIM) extension
    - A site code plus extension (to send to a user on another NBX system in your organization). **Example:** *neee* or *neeee* (where *n* = one or more site code digits and *e* = the extension digits on the other system)
-  *For valid site codes in your organization, see your administrator.*
- 8 When you have added all of the destination numbers, press:
    - **1** to save the group list
    - **2** to cancel creating the group
    - **\*\*** to return to the previous menu**OR** hang up.

To create a Personal Voice Mail List through the NBX NetSet utility:

- 1 Log in to the NBX NetSet utility and go to **NBX Voice Mail Settings > Personal Group List**. You see a list of your current personal voice mail groups with Group IDs and Group Names.
- 2 Click **Add**.
- 3 Enter a Group ID, a number from 01–99 that is not used for a current group.

- 4 Enter a Name for the new group.
- 5 Enter any VPIM extensions in the VPIMs box.
- 6 Select members from the Non-Members list and move them to the Members list by clicking the left arrow.
- 7 Click **Apply** and **OK** to complete the list.

### **Modifying or Deleting Personal Groups**

You can review your Personal Voice Mail Groups, add members, or delete a group from the telephone or from the NBX NetSet utility.

To review or modify a Personal Voice Mail Group from the telephone:

- 1 Log in to your mailbox at your telephone or remotely.
- 2 Dial **9** for **Mailbox Options**.
- 3 Dial **3** for **Group Lists**.
- 4 Press **1, 3, or 4**:
  - Press **1** to review your list of groups.
  - Press **3** to delete a group.
  - Press **4** to add or delete group members. See step 5.
  - Press **\*** to return to the main menu.
- 5 To add members to a group or delete members from one, press **4**.
  - a To add one or more members to the group, dial one of these destination numbers plus #:
    - The internal extension or mailbox number of the recipient
    - A speed dial number. See [“Speed Dials”](#) in [Chapter 6](#).
    - Another personal or system group list number
    - A VPIM extension
    - A site code plus extension (to send to a user on another NBX system). **Example:** *neee* or *neeee* (where *n* = one or more site code digits and *e* = the extension digits on the other system). For valid site codes for your organization, see your administrator.
  - b To delete one or more members from the group, dial the destination number that you want to delete and then press **1**.

- 6 When you have added or deleted all of the destination numbers, press:
  - **1** to save the modified group list
  - **2** to cancel this modification to the group
  - **\*\*** to return to the previous menu

**OR** hang up.

To review or modify a Personal Voice Mail Group from the NBX NetSet utility:

- 1 Log in the NBX NetSet utility and go to **NBX Voice Mail Settings > Personal Group List**. You see a list of your current personal voice mail groups.
- 2 Select the group to review or modify.
- 3 Click **Modify**.
- 4 You can change the Name for the group.
- 5 You can enter any VPIM extensions in the VPIMs box.
- 6 You can select members from the Non-Members list and move them to the Members list by clicking the left arrow. OR select members from the Members list and move them to the Non-Members list by clicking the right arrow.
- 7 Click **Apply** and **OK** to complete your changes.

To delete a Personal Voice Mail Group from the NBX NetSet utility:

- 1 Log in to the NBX NetSet utility and go to **NBX Voice Mail Settings > Personal Group List**. You see a list of your current personal voice mail groups.
- 2 Select the group to delete.
- 3 Click **Remove**.
- 4 Click **Yes** to confirm.

---

### Marking a Message as Private or Urgent

When you compose a voice message, you can select *Private* or *Urgent* from the delivery options. If you do not select a delivery option, your message is sent as a Normal message.

- **Private Messages** — The recipient cannot forward the message to others.



- **Urgent Messages** — Places the message at the beginning of the recipient's message queue. Urgent messages are heard first.
- 1 Follow the steps in [“Replying to a Message”](#), [“Forwarding a Message”](#), or [“Creating and Sending a Message”](#) earlier in this chapter.
  - 2 In step **4** of those instructions, press **9**.
  - 3 To mark the message **Urgent**, press **1**. To mark the message **Private**, press **2**.
  - 4 To send the marked message, press **1**, or listen to the prompts for other choices.

---

### Other Ways to Manage Your Voice Mail Messages

You can listen to and, in some configurations, delete your voice messages from within an e-mail application or a messaging application using your Internet browser. For details, see [“Listening to Your Messages in Your E-mail”](#) in [Chapter 7](#).

---

### Other Kinds of Mailboxes

The NBX system allows *you* (for the greeting-only mailbox) or the *administrator* (for phantom or group mailboxes) to set up mailboxes for special situations, as described in this section.

#### Greeting-Only Mailbox

When you designate your mailbox as a *greeting-only mailbox*, callers hear your personal greeting but they cannot leave a voice mail message.

To change your voice mailbox to a greeting-only mailbox, log in to the NBX NetSet utility and go to **NBX Voice Mail Settings > Personal Greeting**. Select the **Greeting Only Mailbox**.

#### Examples:

- When you take an extended leave of absence, you can create a personal greeting with your scheduled date of return and whom to call during your absence. Callers can be transferred but are unable to leave voice messages for you. When you return, clear the Greeting Only Mailbox check box so that callers can leave messages again.
- If you are a teacher, you can create a new personal greeting on the school's NBX system every day to explain homework assignments. Students call in to the greeting-only mailbox to get the homework information but cannot leave a message for you on this mailbox.

- If you are the administrator, you can create a greeting-only mailbox and use the personal greeting to post information for employees, such as a notice that the offices are closed because of bad weather.



*When you create the personal greeting, remember to tell callers that they cannot leave messages in this voice mailbox. For instructions on changing the personal greeting, see [“Changing Your Name Announcement and Personal Greetings”](#) earlier in this chapter.*

In addition to preventing a caller from leaving a message, a greeting-only mailbox does not allow anyone to forward or create and send a message to it or reply to a message that was sent from its extension



*Avoid adding a greeting-only mailbox to a personal voice mail group list.*

### **Phantom Mailbox**

*A phantom mailbox does not have an actual telephone associated with it. The administrator sets up a phantom mailbox.*

#### **Examples:**

- If you are a sales representative who travels constantly for your organization and never comes into the office, you still need a way to receive telephone messages. Using your phantom mailbox, you can retrieve, forward, and save messages in the same way that any other employee can but without a physical telephone connected to your NBX system.
- If you are an employee who lives a long distance from your office and works from home, customers and others can leave messages in the your phantom mailbox and you can call in to the NBX system to retrieve them, or you can listen to them from the NBX NetSet utility.

You retrieve messages from a phantom mailbox in the same way that you retrieve messages from a personal mailbox. See [“Listening to NBX Messages”](#) earlier in this chapter.

### **Group Mailbox**

*A group mailbox is a voice mailbox from which a group of users can retrieve messages. Your administrator creates group mailboxes and can explain how to retrieve messages that are left in the group mailbox.*

#### **Example:**

- During nonbusiness hours, the system can send incoming telephone calls for your sales department to a group mailbox. Your administrator

assigns to the appropriate sales people the ability to listen to, forward, or otherwise handle all messages that are directed to the group mailbox.



# 5

## STANDARD FEATURES

This chapter describes standard features of the NBX® Telephones. It covers these topics:

- [Answering a Call](#)
- [Using the 3Com Telephone Display Panel](#)
- [Dialing a Call](#)
- [Forwarding Incoming Calls](#)
- [Putting a Call on Hold](#)
- [Transferring a Call](#)
- [Direct Mail Transfer](#)
- [Establishing a Conference Call](#)
- [Using Camp On](#)
- [Using Automatic Callback](#)
- [Setting the Volume](#)




*For help on accessing NBX features from an analog telephone or a third-party, SIP-based IP Telephone, see the applicable NBX Feature Codes Guide in the NBX NetSet™ utility.*



*If your system uses a messaging application other than NBX Messaging, use the documentation for your messaging application instead of the instructions in this chapter.*

---

### Answering a Call


To answer an incoming call, pick up the handset If you are using a 3Com® 3101SP Basic Telephone, you can press  (Speaker).

An unanswered call on any telephone on the NBX system is forwarded to the call coverage point that you specify in the NBX NetSet utility **Call Forward > Call Forward** or **Call Forward Override** page. To specify the

number of times that your telephone rings before the call is forwarded or to specify where you want the call to go, see [“Forwarding Incoming Calls”](#) later in this chapter.

**Caller ID** The display panel on your 3Com telephone shows the name and extension of an internal caller. For an external caller, if your organization purchases Caller ID service from your telephone company and if the external caller allows Caller ID information to be broadcast, the display panel shows the external caller’s name and telephone number.

**Answering a Second Call** On 3Com 3101 and 3101SP Basic Telephones, when a new call arrives while you are on a call:

- 1 Press  to put the current call on hold.
- 2 Press the Access button for the line on which the new call is arriving.
- 3 To return to the earlier call, hang up the new call, or put it on hold, or transfer it, and then press the Access button for the original call.

On the 3Com 2101 Basic Telephone, use [Table 7](#) to manage the two lines.

**Table 7** Managing Multiple Calls on the 3Com 2101 Basic Telephone

Line A	Line B	How to Manage New Calls
Active call	Ringing	To answer the incoming call, press Call Toggle. (If you do not answer, the system sends the second call to your call coverage point.)
Active call	On hold	To toggle to the call that is on hold, press Call Toggle. To return to the first call, press Call Toggle.
On hold	Ringing	If you have placed one call on hold: <ul style="list-style-type: none"> <li>■ And you <i>do not</i> hang up the handset, and the other line rings, press Call Toggle to return to the call on hold. Then press Call Toggle to answer the incoming call.</li> <li>■ And you <i>do</i> hang up the handset and the other line rings, pick up the handset to connect to the incoming call. Press Call Toggle to switch calls.</li> </ul>

**Table 7** Managing Multiple Calls on the 3Com 2101 Basic Telephone

Line A	Line B	How to Manage New Calls
On hold	On hold	<p>If you have placed two calls on hold:</p> <ul style="list-style-type: none"> <li>■ And you <i>do not</i> hang up the handset, press Call Toggle to return to the call you most recently placed on hold. Then press Call Toggle again to return to the line you first placed on hold.</li> <li>■ And you <i>do</i> hang up the handset, pick up the handset to return to the call you most recently placed on hold. Then press Call Toggle to be connected to the line you first placed on hold.</li> </ul>
Active or on hold	On hold	<p>If a third call comes in while you have one active call and one on hold, or two calls on hold, the system forwards the third caller directly to your call coverage point. See <a href="#">“Forwarding Incoming Calls”</a> in <a href="#">Chapter 5</a> for call forwarding details.</p>


See also [“Status Icons”](#) in [Chapter 3](#) for the indicators in the 3Com 2101 Basic Telephone’s display panel during these calls.

## Using the 3Com Telephone Display Panel

Use the telephone display panel of your 3Com telephone to dial a number:


- **Call Logs** — The logs of the most recent calls to and from your telephone (Missed Calls, Answered Calls, Dialed Calls).
- **Directory** — A list of the users on your system and their extensions.
- **Personal Speed Dials** — A list of personal speed dial numbers that you have set in the NBX NetSet utility **Directory > Personal Speed Dial** page.
- **System-wide Speed Dials** — A list of the system-wide speed dial numbers set by your administrator. You can view and print these numbers in NBX NetSet utility **Directory > System-Wide Speed Dial** page.

To access the display panel lists:


- 1 Pick up the handset. Press the up or down scroll key to the right of the display.
-  *On 3Com 3101 and 3101SP Basic Telephones, you can press a scroll key, select a number, and dial without picking up the handset. The 3101 Basic Telephone does not support speaker phone operation. With the 3101, you must use the handset to speak to the person on the call.*
- 2 Use the scroll buttons to move through the lists. When you see the list that you want to use, press the button under **Slct** (Select).
  - 3 Use the scroll keys to move to the name or number that you want to call. Verify that the cursor is at the entry you want, and press the button under **Slct**.
  - 4 To move back to the previous menu, press the button under **Back**.
  - 5 To leave the lists entirely, press the **Exit** soft button. OR press an Access button that is programmed for **Release**. OR hang up.

### Tips on Using the Lists

After you press the up or down scroll key (3102 and 3102B Business Telephone scroll keys shown), if you do not select an item immediately, the display alternates between the list:

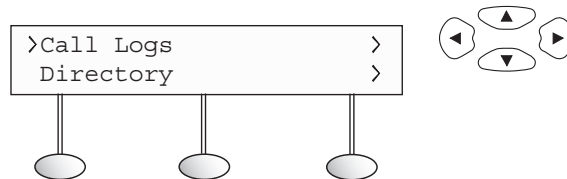


and the menu choices:

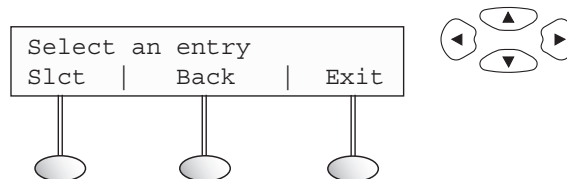



In the user directory, names appear in alphabetical order, by last name. The system updates the directory when the administrator adds or removes users.

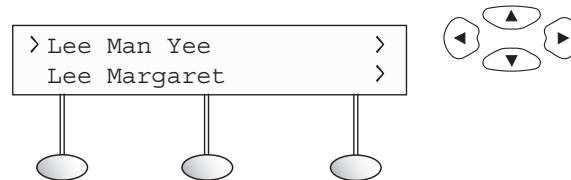

In the user directory, to move quickly to the first name that begins with a particular letter, you can use the key pad. **Example:** Press **3** to show the first name that begins with D; press **3** twice to move to the first name that begins with E; press **3** three times to move to the first name that begins with F. Then scroll up or down to the name that you want.



---

## Dialing a Call

This section describes standard dialing features. For information on dialing from an analog telephone, see the *NBX Feature Codes Guide* in the NBX NetSet utility.

### An Internal Call


To dial an internal call:

- 1 Pick up the handset. On 3101SP Basic Telephones, you can press the  button. You hear the dial tone. If necessary, select an internal line.
- 2 Dial the person's 3-digit or 4-digit extension. Or use the display panel to find and dial the name of the person whom you want to call in the user directory, call logs, or a speed dial list.
- 3 When you are finished, hang up the handset. If you pressed the  button, press it again to end the call.


For details about placing calls to remote or branch offices, see [“Dialing a Call to a Remote Office”](#) in [Chapter 7](#).

### An External Call

To dial an external call:

- 1 Pick up the handset. On 3101SP Basic Telephones, you can press the  button. You hear the dial tone. If necessary, dial **9, 8** or whatever to

access an external line. If one of the Access buttons is configured to access an external line directly, you can press that button.

- 2 Dial the number. Or use the display panel on a 3Com Telephone to scroll to a missed, answered, or dialed number, or a personal or system-wide speed dial number.
- 3 When you finish speaking, hang up the handset. If you pressed the  button, press it again to end the call.

### Redialing a Call

On a 3Com Basic Telephone:

- Pick up the handset and then press **Feature + 401** to dial the most recent number that you dialed.

#### OR

- Use the Call Logs on the display panel to redial a recently missed, answered, or dialed call.

## Forwarding Incoming Calls

You can choose when and where to forward unanswered incoming calls. Unanswered calls that come in directly to your extension go to a call coverage point. You can set different call coverage points for different conditions: default, no answer, busy, and all calls.

Unanswered calls that come to your telephone through ACD groups, hunt groups, and calling groups follow the call coverage path that your administrator sets up for the group. See [“Automatic Call Distribution Groups, Hunt Groups, and Calling Groups”](#) in [Chapter 7](#).

When you specify call forwarding, you specify the call coverage point and the condition under which to forward calls.

### Call Coverage Points

Your call coverage points are the destinations you forward your calls to when you do not answer. They can be telephone extensions or external telephone numbers, your voice mail box, or an automated attendant.

### Condition to Forward Calls

You can choose when to forward calls:

- **Default** — Forwards unanswered incoming calls to your default call coverage point after a specified number of rings if you have not specified another condition.

- **Call Forward No Answer** — Forwards unanswered incoming calls to a call coverage point when your phone rings for a specified number of rings.
- **Call Forward Busy** — Forwards incoming calls to a call coverage point when your phone is busy.  
If you have multiple lines, all lines must be in use in order for Call Forward Busy to engage.
- **Call Forward All** — Forwards all incoming calls without ringing to a call coverage point regardless of the state of your phone.  
Use this feature when, for example, you plan to be away from your phone for an extended period of time.

### Setting Call Forward from the Telephone

You can set call forwarding from your telephone. You choose the condition for call forwarding (default, no answer, busy, or all) and the destination. When you specify an external telephone number as the destination, start by entering a **9** or **8** or whatever is required to access an outside line. **Example: 912815551212** dials (281) 555-1212. You can enter a **\*** if a pause is required between an access code and a destination number.



*The number that you choose may be limited by your call permissions. To view your permissions, log in to NBX NetSet utility and go to **My Calling Privileges > Call Permissions**.*

From the telephone, you can set call forwarding using feature codes. Use the NBX NetSet utility to see your call forwarding settings. You or your administrator can also set programmable access buttons for call forwarding. (See [“User Button Mapping”](#) in [Chapter 6](#).)

### Forward to Mail

From the telephone, you can set your 3Com Telephone so that all incoming calls go directly to your default call coverage point, usually your voice mailbox. You can change the destination to the Auto Attendant or receptionist or a different telephone number. This feature is referred to as FWD MAIL, Forward to Mail, Forward All Calls to Voice Mail, and Forward All Calls to VM. When Forward to Mail is in effect, your telephone rings once before forwarding the call to your default call coverage point.

On a 3Com Basic Telephone:

- 1 Pick up the handset.
- 2 Press **Feature + 440**.
- 3 To turn off **FWD MAIL**, pick up the handset and press **Feature + 440** again.

To set your default call forwarding destination, use the NBX NetSet utility. See [“Default”](#) later in this section.

To prevent the telephone from ringing even once, use the Do Not Disturb feature (see [“Do Not Disturb”](#) in [Chapter 6](#)) or use the Call Forward All feature (see [“Call Forward All”](#) later in this section).

Call Forward No Answer, Call Forward Busy, and Call Forward All override this Forward to Mail setting if they are in effect. If you turn off Forward to Mail and no other call forward options are in effect, unanswered calls still go to your default call coverage point but after the number of rings specified in the NBX NetSet utility **Call Forward > Call Forward** page.

To view your current Forward to Mail setting, log in to NBX NetSet utility and go to **My Calling Privileges > Feature Settings** and see the status for **Forward All Calls to VM**.

### Call Forward No Answer

To set Call Forward No Answer:

- 1 Pick up the handset, and press **Feature + 466**.
- 2 Dial the number that you want to forward calls to and press #. If the display shows the destination number you want, just press # to accept it.
- 3 To turn off Call Forward No Answer, pick up the handset and press **Feature + 466** again.

You can specify the number of rings before the call is forwarded by logging in to the NBX NetSet utility and selecting the **Call Forward > Call Forward Override** page. You specify the number of rings under the Call Forward No Answer selection.

### Call Forward Busy

To set Call Forward Busy:

- 1 Pick up the handset, and press **Feature + 467**.
- 2 Dial the number that you want to forward calls to and press **#**. If the display shows the destination number you want, just press **#** to accept it.
- 3 To turn off Call Forward Busy, pick up the handset and press **Feature + 467** again.

### Call Forward All

To set Call Forward All:

- 1 Pick up the handset, and press **Feature + 465**.
- 2 Dial the number that you want to forward calls to and press **#**. If the display shows the destination extension you want, just press **#** to accept it.
- 3 To turn off Call Forward All, pick up the handset and press **Feature + 465** again.

To set Call Forward All from the display panel:

- 1 Scroll to **CFWD ALL** on the display panel.
- 2 Press the **Set** soft button to select **CFWD ALL**.
- 3 Press the **Set** soft button again.
- 4 If the telephone number you want was entered previously and displays, press **#** to accept it. Otherwise, enter the telephone number to forward calls to and press **#**.

To cancel Call Forward All from the display panel:

- 1 Scroll to **CFWD ALL** on the display panel.
- 2 Press the **Set** soft button to select **CFWD ALL**.
- 3 Press the **Set** soft button again to select **Cancel CFWD ALL**.

### Setting Call Forward from the NBX NetSet Utility

From the NBX NetSet utility, you can set default call forwarding or choose to override the default with a condition for call forwarding (No Answer, Busy, or All) and a destination. For telephone numbers, do not use parentheses, hyphens, or spaces. When you specify an external telephone number, start by entering a **9** or **8** or whatever is required to access an outside line. **Example: 912815551212** dials (281) 555-1212. You can

enter a \* if a pause is required between an access code and a destination number.

### Default

The **Call Forward** page defines basic call forwarding. You choose from four destinations: voicemail box, a phone number, the automated attendant, or disconnection. You can override these settings on the **Call Forward Override** page or by making changes on the telephone.

To set the default call forwarding:

- 1 Log in to the NBX NetSet utility and go to **Call Forward > Call Forward**.
- 2 Select the number of rings you want the caller to wait before the call coverage point is activated.
- 3 Select the call coverage point:
  - If you select **Forward to voicemail box**, the caller can leave a message.
  - If you select **Forward to phone number**, enter that extension or external phone number in the box.



*The number that you choose may be limited by your call permissions. To view your permissions, go to **My Calling Privileges > Call Permissions**.*

The selection for **Forward to phone number** specifies where you want to forward calls that are not answered at your internal extension.

If you check the box below the **Forward to phone number**, calls that are unanswered at the number you forward them to are passed on to your choice of:

- **User Voicemail** — Your voicemail box
- **Default Menu** — The default automated attendant, usually extension 500
- **VoiceMail AA** — The default system voicemail, usually extension 501

If you leave the box unchecked, calls that are unanswered at the number you forward them to are passed on to the destination specified for that number. This setting can result in having your calls forwarded to another person's voicemail or to a loop of forwarding where the call is never answered.

- If you select **Automated Attendant**, you can choose to forward calls to your choice of:
    - **Default Menu** — The default automated attendant, usually extension 500
    - **VoiceMail AA** — The default system voicemail, usually extension 501
  - If you select **Disconnect (no coverage)**, the system disconnects an incoming call if it is not answered after the specified number of rings.
- 4 Click **Apply** to enter your changes.

### Override

To set the call forward override:

- 1 Log in to the NBX NetSet utility and go to **Call Forward > Call Forward Override**.
- 2 Select your call forward conditions:
  - If you select **Call Forward All**, calls will not ring at all on your extension and will be immediately forwarded to the extension or external phone number you specify in the box.
  - If you select the next button, you can select either or both of the following conditions:
 

If you select **Call Forward Busy**, calls will not ring at all when all of your lines are busy and will be immediately forwarded to the extension or external phone number you specify in the box.

If you select **Call Forward No Answer**, calls ring the number of times you specify in the rings box. If they are not answered then, they will be forwarded to the extension or external phone number you specify in the box.
  - If you select **No action**, call forwarding follows the specifications of the **Call Forward** page.
- 3 Click **Apply** to enter your changes.

### Call Forward Precedence

Five features can interact to affect call forwarding: Forward to Mail, Call Forward No Answer, Call Forward Busy, Call Forward All, and Do Not Disturb. If they are enabled at the same time, the NBX system determines precedence, which call forwarding path is in effect, according to the following rules:


- If Call Forward All is enabled, all calls are immediately forwarded to the Call Forward All destination. All other feature settings are ignored.
- If Do Not Disturb is enabled and Call Forward All is not enabled, all calls are immediately forwarded to the Call Forward Default destination. All other feature settings are ignored.
- If Call Forward Busy is enabled and Call Forward All and Do Not Disturb are not enabled, all calls received when this extension is busy are immediately forwarded to the Call Forward Busy destination. All other feature settings are ignored.
- If Call Forward No Answer is enabled and Call Forward All and Do Not Disturb are not enabled, all calls received when this extension is not busy are forwarded to the Call Forward No Answer destination after the specified number of rings. All other feature settings are ignored.
- If Forward to Mail is enabled and Call Forward All, Do Not Disturb, Call Forward No Answer, and Call Forward Busy are not enabled, all calls received when this extension is not busy are forwarded to the Call Forward Default destination after one ring.
- If no call forwarding settings are enabled, all calls received when this extension is busy are immediately forwarded to the Call Forward Default destination. If this extension is not busy, all calls are forwarded to the Call Forward Default destination after the number of rings specified in the Call Forward Default page of the NBX NetSet utility.

---

## Putting a Call on Hold

You can put a call on hold for any reason.

On 3Com 3101 and 3101SP Basic Telephones:

- 1 Press the  button.
- 2 To return to the call, press the appropriate Access button.


On a 3Com 2101 Basic Telephone:

- 1 Press the **Hold** button.
- 2 To return to the call, press the **Call Toggle** button.



**Dialing Another Call** You can place a call on hold to dial a new call,

On 3Com 3101 and 3101SP Basic Telephones:



- 1 Press the  button.
- 2 Press one of the Access buttons that is currently not being used.
- 3 When you hear dial tone, dial the second call.

On a 3Com 2101 Basic Telephone:

- 1 Press the **Hold** button.
- 2 To obtain dial tone to make the second call:
  - If you *did not* hang up the handset, press and release the hook switch.
  - If you *did* hang up the handset, pick it up again.
- 3 When you hear dial tone, dial the second call.

**More Than One Call** The number of simultaneous calls that you can have on your 3Com Telephone is limited by the number of Access buttons that are defined for your extension. The default is the first two Access buttons on the left of 3101 and 3101SP Basic Telephones. Your administrator can verify the number and location on your telephone.

To place more than one call on hold on a 3Com 3101 or 3101SP Basic Telephone:

- 1 To place the current call on hold, press the  button.
  - To make a call, press one of the Access buttons that is currently not being used. When you hear dial tone, dial the call.
  - To receive a call, locate the flashing status light that indicates the incoming call and press the associated Access button.
- 2 To place the new call on hold, press .
- 3 To return to either call, press the appropriate Access button.
- 4 To place or receive another new call, repeat the previous steps.

To place more than one call on hold on a 3Com 2101 Basic Telephone:

- 1 Press the **Hold** button.
- 2 Make or receive a new call:
  - To obtain dial tone and make a second call:
    - If you *did not* hang up the handset, press and release the hook switch.
    - If you *did* hang up the handset, pick it up again.  
When you hear dial tone, dial the second call.
  - To answer a call:
    - If you *did not* hang up the handset, press the **Call Toggle** button.
    - If you *did* hang up the handset, pick it up again.
- 3 To place the second call on hold, press the **Hold** button.



*On a 3Com 2101 Basic Telephone, you can place at most two calls on hold.*

On the 3Com 2101 Basic Telephone, if you have placed two calls on hold:

- And you *did not* hang up the handset, press **Call Toggle** to return to the call that you most recently put on hold. Then press **Call Toggle** again to put that call on hold and return to the second call.
- And you *did* hang up the handset, pick up the handset to return to the call that you most recently put on hold. Then press **Call Toggle** to put the call on hold and return to the second call.

---

## Transferring a Call

When you answer an incoming telephone call, the Transfer feature allows you to send that call from your telephone to any other internal line or, if your call permissions allow, to an outside line. To view your permissions, log in to the NBX NetSet utility and go to **My Calling Privileges > Call Permissions**. Your administrator can change your call permissions.

**Announced  
(Screened) Transfer**

Before you complete a transfer, you can announce to the recipient that you are transferring a call. The recipient can then decide whether to take the call. To announce a transfer:

- 1 While on a call, press the **Transfer** button. The system places the caller on hold and selects a new line.
- 2 Dial the number to which you want to transfer the call.
- 3 When the recipient answers, announce the call.
  - If the recipient wants to take the call, press **Transfer** again to complete the transfer. Hang up the handset.
  - If you are on a 3Com 3101 or 3101SP Basic Telephone and the recipient does *not* want to take the call, retrieve it by pressing the Access button on which the call originated.
  - If you are on a 3Com 2101 Basic Telephone and the recipient does not want to take the call, press and release the hook switch to disconnect the attempted transfer, and then retrieve the original call by pressing **Call Toggle**.



*Your administrator can disable Announced Transfers (by enabling the One Button Transfer feature) for the entire NBX system. When that setting is enabled, every time that you transfer a call, the call is transferred as soon as you dial the extension and hang up — without waiting for you to announce the call.*

**Blind Transfer**

In a blind transfer, you transfer the call without notifying the recipient:

- 1 While on a call, press the **Transfer** button. The system places the caller on hold and selects a new line.
- 2 Dial the number to which you want to transfer the call.
- 3 As soon as you hear a full ring, press the **Transfer** button and hang up. (If you press the **Transfer** button too soon after you dial the number, the transfer may not occur.)

---

## Direct Mail Transfer

You can transfer a call directly into another user's voice mailbox. The call does not ring on that user's telephone.



*Calls transferred to a user's mailbox by means of Direct Mail Transfer are always directed into that user's voice mailbox, even if the recipient has specified a different call coverage point.*

On a 3Com Basic Telephone:

- 1 While you are on a call, press **Feature + 441**.
- 2 Dial the voice mail extension of the person to whose voice mailbox you want to transfer the call.
- 3 Hang up the handset.

---

## Establishing a Conference Call

Depending on the type of telephone you have, you can establish a Conference Call with up to four parties, including yourself. You must be using a telephone on the NBX system to establish the call. The other one to three parties can be any combination of internal and external parties.



*If the NBX has SIP (Session Initiation Protocol) enabled, you are limited to three-party Conference calls, including yourself, unless your NBX system is configured with a 3Com SIP Conference Server. For more information on making Conference calls with SIP enabled, see your NBX administrator.*



*On 3Com Basic Telephones, you must use the Feature Code.*

From a 3Com Basic Telephone, follow these steps:



- 1 Dial a call, or receive a call from someone else. Two parties are now on the call.
- 2 While on the call, press **Feature + 430**. The system selects a new line and places the first party on hold.
- 3 Dial a call to an internal or external third party.
  - For an **announced** conference, wait for the third party to answer the call, and then press **Feature + 430** again.
    - Until you press **Feature + 430** the second time, the second party remains on hold, and you may converse with the third party privately.

- For a **blind** conference, press **Feature + 430** immediately after you dial the number. You return to the conference, and you and the second party hear the called party's telephone ringing.

If the third party answers, three parties are now in the conference call.



*If the third party is internal and does not answer, the attempt to conference that party is cancelled. You cannot establish a conference call with an NBX user's voice mailbox.*

- 4 Repeat steps 2 and 3 to conference in a fourth party.
  - On a 3101SP Basic Telephone, you can press the  button to activate speaker phone operation.
  - You can turn off the microphone or the mouthpiece on the handset by pressing the  button (3101, 3101SP). The other parties cannot hear you, but you can hear them.
  - For details about the Speaker and Mute features, see ["Telephone Buttons and Controls"](#) in [Chapter 2](#) for the 3101 and 3101SP Basic Telephones.

### Disconnecting the Last Person That You Called

Use the Conference Drop feature to disconnect the last person that you add to a conference call. This feature is helpful if, when you add a party, your call is answered by someone else.




- *Only the person who added the last caller to the conference call can drop that caller.*
- *Your administrator can configure any Access button on the Attendant Console to be a **Conference Drop** button.*

On a 3Com 2101 Basic Telephone or a telephone that does not have a button programmed for Conference Drop:

- 1 Press **Feature + 431**.
- 2 The system returns you to the others who are in the conference call.

### More About Conference Calls

- To place your part of a conference call on hold, press the **Hold** or  button. The other parties can talk among themselves, but they cannot hear you. Music on Hold does not play when a conference call is on hold.
- To transfer a conference call to another telephone, press the **Transfer** button. Dial the number to which you want to transfer the call, announce to the recipient (optionally) that you are transferring a conference call, and then press the **Transfer** button again.
  - All of the conferenced parties are transferred except yourself.
  - Your ability to drop the last person that you added to the conference is transferred to the person who accepts the transfer.

---

### Using Camp On

Camp On allows you to queue a transferred call on to an NBX destination extension that is already in use. When the destination extension becomes available, the system automatically rings that extension.

While a call is camped on, the caller hears either Music On Transfer (MOT) or silence if no music is provided. The destination extension becomes available when the user ends the current call or puts the current call on Hold.

You initiate a Camp On call through Feature code 468 or a programmed system access button depending on the type of NBX telephone you have and how it is configured.

Examples 1 and 2 show two different ways for a user to initiate Camp On.

#### Example 1: Camp On With Call Transfer

The user at extension 1001 calls the user at extension 1002, who then transfers the call to extension 1003. But the user at extension 1003 is on another call. (The display panel of the extension 1002 telephone shows "On Another Call.") So the user at extension 1002 initiates the Camp On call, and then hangs up. The user at extension 1001 remains on hold while the user at extension 1003 hears a tone that indicates a caller is camped on. As soon as extension 1003 is available, extension 1003 rings with a call from extension 1001.

In this example, the user at extension 1002 initiates Camp On after initiating a screened call transfer.

In contrast, Example 2 shows how a user can initiate Camp On to directly queue a transferred call on to a destination extension that is in use or busy without using the call transfer feature.

### Example 2: Direct Camp On

The user at extension 1001 calls the user at extension 1004, who determines that extension 1005 is busy and cannot take the call (meaning all of its system access lines are in use). So instead of transferring and dropping the call to the call coverage for extension 1005, extension 1004 initiates the Camp On call and then hangs up. The user at extension 1001 remains on hold while the user at extension 1005 hears a tone that indicates a caller is camped on. As soon as extension 1005 is available, extension 1005 rings with a call from extension 1001.

In this example, the user at extension 1004 simply initiates Camp On after receiving the call from extension 1001.

### Initiating Camp On With Call Transfer

If you have a 3Com Basic, Business, or Manager Telephone, or Attendant Console, you can initiate Camp On with Call Transfer to queue a call to an **in use** destination extension.

- 1 While on a call, initiate a (screened) call transfer as described in [“Announced \(Screened\) Transfer”](#) earlier in this chapter.
- 2 When you see “On Another Call” on your display panel for the destination extension, press **Feature + 468** (or press the **Camp On** Access button if one is programmed on your telephone).
  - If the Camp On attempt is successful, the call originator remains **on hold** while the destination extension receives a Call Waiting tone.
 

When the party on the destination extension becomes available, the camped on call rings on the destination extension. Or, if the destination party remains unavailable and the Camp On Return Interval expires, the call is returned to you. See [“More About Camp On”](#) later in this chapter.
  - If the Camp On attempt is not permitted, the call originator remains on hold while the message “Not Allowed” or “Camp On In Use” appears on your display panel. See [“More About Camp On”](#) later in this chapter.

**Initiating Direct Camp On** You can initiate Camp On to directly queue a call on to a destination extension that is **in use** or **busy**.

On a 3Com Basic or Business Telephone or Attendant Console:

- 1 While on a call, press **Feature + 468** (or press the **Camp On** Access button if one is programmed on your telephone).

You are prompted to enter the Camp On destination extension.

- 2 Enter the three-digit or four-digit extension that you want to Camp On.

- If the Camp On attempt is successful, the call originator remains **on hold** while the destination extension receives a Call Waiting tone.

When the party on the destination extension becomes available, the camped on call rings on the destination extension. Or, if the destination party remains unavailable and the Camp On Return Interval expires, the call is returned to you. See [“More About Camp On”](#) in this chapter.

- If the Camp On attempt is not permitted, the message “Not Allowed” or “Camp On In Use” appears on your display panel. See [“More About Camp On”](#) in this chapter.

### **More About Camp On**

These usage tips and limitations apply to Camp On:

- A system-wide Camp On Return Interval determines how long a caller can stay camped on to an extension. The default Camp On Return Interval is 180 seconds (**three minutes**). The NBX administrator can configure it to be anything from 30 seconds to 10 minutes. If the Camp On Return Interval expires, the camped call is returned to the originator of the Camp On. For example, extension 1001 calls extension 1002, and the call is then camped onto extension 1003 and extension 1002 hangs up. Extension 1003 stays busy. When the Camp On Return Interval expires, extension 1002 starts ringing. If the user at extension 1002 does not answer the call, the call goes to the call coverage for extension 1002.
- You can initiate a Camp On call **only** to an internal NBX extension. However, the originating call can originate from either an external or internal number.
- An extension can only have **one** Camped On call in its queue. If another Camp On attempt is made to this extension, the message “Camp On In Use” is displayed at the telephone attempting to initiate the Camp On.



- You cannot initiate a Camp On call to:
  - An ACD extension
  - A Hunt Group extension
  - A TAPI RoutePoint extension
  - A Call Park extension
  - A Phantom extension
- You cannot initiate a Camp On call to a device connected to an Auto Attendant or Voicemail.
- You can use either System-wide Speed dials (SSDs) or Personal Speed Dials (PSDs) that are mapped to a valid extension as an alternative to manually dialing the Camp On destination extension.
- If **Call Forward All** or **Do Not Disturb** is enabled on the Camp On destination extension, the message “Not Allowed” is displayed at the telephone attempting to initiate the Camp On.
- The condition of the destination extension at the time you initiate Camp On determines the following:
  - **If the Destination Extension is In Use** — One or more (but not all) of its system appearance lines are presently being used. In this condition, you can use either Camp On with Call Transfer or Direct Camp On to queue a call on to the destination extension.
  - **If the Destination Extension is Busy** — All of its system appearance lines are presently being used. In this condition, you can use only Direct Camp On to queue a call on to the destination extension.
  - **If the Destination Extension is Available** — Instead of queuing the call, both Camp On with Call Transfer and Direct Camp On act as a blind transfer (See [“Blind Transfer”](#) earlier in this chapter.)
- If you have an NBX Entry telephone or an analog telephone you can use only Direct Camp On to queue a call on to the destination extension.
- If you are using Camp On with Call Transfer and the destination extension has its Call Coverage set to Disconnect, after the transfer times out, you receive a busy tone. You can now initiate Camp On to the destination extension.



*For additional tips and considerations on using Camp On, see your NBX system administrator.*

---

## Using Automatic Callback

Automatic Callback allows you to request a call back ring from a destination extension that is in use or unanswered. The NBX system attempts to connect you when the called party at that extension becomes available.

On an NBX telephone, the Automatic Callback feature is helpful when:

- The person you are calling is on another call and you want the system to generate a call back ring as soon as this person is available.
- The person you are calling does not answer the call and you want the system to generate a call back when this person is available.

You initiate an Automatic Callback through Feature code 469 or a programmed system access button depending on the type of NBX telephone you have and how it is configured.

## Initiating Automatic Callback

You can initiate Automatic Callback while making a direct call to an extension that is in use or unanswered.

On a 3Com Basic or Business Telephone or Attendant Console:

- 1 While on a call to an extension that is in use or unanswered, press **Feature + 469** (or press the **Automatic Callback** Access button if one is programmed on your telephone).
- 2 Disconnect from the call.
  - If the Automatic Callback attempt is successful, the message "Callback Extension XXX" appears on your display panel.

When the party on the destination extension becomes available, you receive a call back ring. When you answer this call back, the destination extension rings and your call then can be connected.
  - If the Automatic Callback attempt is not permitted, the message "Not Allowed" appears on your display panel. See ["More About Automatic Callback"](#) in this chapter.



*If the party on the Automatic Callback destination extension does not return your call within the time set by the Automatic Callback Return Interval, the system cancels the Automatic Callback request. For more information, see the ["More About Automatic Callback"](#) section.*

## More About Automatic Callback

These usage tips and limitations apply to Automatic Callback:

- An Automatic Callback Return Interval, set by the NBX NetSet administrator, determines the maximum amount of time you can wait for a call back. The range for this timer is 1 minute to 24 hours with the default being **12 hours**. If the Callback is not received within this time, the system cancels the Callback.
- An extension can have up to five Automatic Callback requests assigned to it. Return call backs are generated in the order that they were received (FIFO).
- Events that generate a call back from the destination extension include:
  - Entering a feature code followed by an on-hook event
  - Invoking Directory followed by an on-hook event
  - Going off-hook then on-hook
  - Using Feature + 111 to terminate a session
- You cannot initiate an Automatic Callback to:
  - An external number
  - An ACD extension
  - A Hunt Group extension
  - A TAPI RoutePoint extension
  - A Call Park extension
  - An extension receiving a transferred call
  - A Phantom extension
- You cannot initiate Automatic Callback to a device connected to an Auto Attendant or Voicemail.
- If **Call Forward All** or **Do Not Disturb** is enabled on the Automatic Callback destination extension, the message "Not Allowed" is displayed at the telephone attempting to initiate the Automatic Callback.



*For additional tips and considerations on using Automatic Callback, see your NBX system administrator.*

---

## Setting the Volume

On any 3Com Telephone, use the **Volume Control** buttons to raise or lower one of these volumes:

- **Ring Volume** — To raise or lower the volume of the ring, press the up or down **Volume Control** button repeatedly *while your telephone is ringing*, until the volume is at the level that you prefer. To read how ringer volume is different from ringer tone, see [“Ringer Tones”](#) in [Chapter 6](#).
- **Handset Volume** — To raise or lower the volume of the dial tone or the sound that you hear when you are using the handset, pick up the handset and then press the up or down **Volume Control** button repeatedly until the volume is at the level that you prefer. You can change the handset volume during a conversation or by listening to the dial tone.
- **Speaker Volume (3Com 3101SP Basic Telephone)** — To raise or lower the volume of the sound that you hear when you are using the speaker phone for a conversation or just listening to the dial tone, press the **Speaker** button and then press the up or down **Volume Control** button repeatedly until the volume is at the level that you prefer.
- **Headset Volume** — To raise or lower the volume of the dial tone or the sound that you hear on the headset, put on the headset and activate it as specified for your headset. When you hear the dial tone or during a conversation, press the up or down **Volume Control** button repeatedly until the volume is at the level that you prefer. See [“Using a Headset”](#) in [Chapter 6](#).

# 6

## PERSONALIZING YOUR TELEPHONE

Your Networked Telephony System has many features that can make your telephone easier to use. This chapter describes:

- [Guidelines About Features on NBX Telephones](#)
- [Ringer Tones](#)
- [User Button Mapping](#)
- [Speed Dials](#)
- [Off-Site Notification](#)
- [Do Not Disturb](#)
- [Preventing Unauthorized Use of Your Telephone](#)
- [Class of Service Override](#)
- [Using a Headset](#)



*For help on accessing NBX features from an analog telephone, see the NBX Feature Codes Guide for Analog Telephones in the NBX NetSet™ utility. For how to set up your NBX NetSet utility password for the first time, see [Chapter 1](#).*



*If your system uses a messaging application other than NBX Messaging, use the documentation for your messaging application instead of these instructions.*

---

### Guidelines About Features on NBX Telephones

- If your telephone does not have a button programmed for **Feature**, ask your administrator to program one.
- Because your administrator determines whether some of the features that are described in this chapter are available for your telephone or for the entire system, some of these features may not be available to you.

- The settings on your telephone, including your extension, personal settings, and system settings, remain the same even when you move your telephone from one Ethernet jack to another, as long as both Ethernet connections are part of the same LAN.
- Because your extension and personal settings are associated with your telephone, you cannot switch your telephone with another user's telephone without first having your administrator reassociate your profile with the other telephone.

---

## Ringer Tones

To help you to distinguish the ring tone of your 3Com telephone from the sound of other phones, use the NBX NetSet utility to select one of nine ringing tones. You can also choose Silent Ring to disable audible ringing.

To change the ringer tone:

- 1 Verify that your computer has a sound device (a USB headset or a sound card with either headphones or speakers).
- 2 Log in to the NBX NetSet utility and go to **Telephone Programming > Ringer Tones**.
- 3 Click each of the nine **Ringer Tone Settings** to hear the choices.
- 4 Select the number of the tone that you want.
- 5 Click **Apply**.



*When you choose Silent Ring, the status light or display panel icon flashes when a call arrives, but the telephone never rings. A headset attached to the headset connector of a 3102 or 3102B Business Telephone also plays a tone audible only through the headset.*

---

## User Button Mapping

You can map the buttons of your own 3Com Basic, Manager, or Business Telephone if your NBX administrator enables this feature for your user group. You can also modify the button mappings for a telephone to override group button mappings unless your administrator has locked a particular feature or features. (A lock icon in the NetSet display indicates whether the button can be remapped.) Call forwarding can occur when locking is enabled.

To check if button mapping is available for your telephone, log in to the NBX NetSet utility and go to **My Calling Privileges > Call Permissions**. Button mapping is available if this feature is enabled.

To set the button mappings for an individual telephone:

- 1 Go to **Telephone Programming > Button Mapping**
- 2 Click on the pull-down list next to the appropriate button in order to select a feature from the list to associate with this particular button.

[Table 8](#) describes all the function types that a user can map to the available buttons on an NBX Telephone. See [“Button Mapping Notes”](#) later in this chapter for tips and special considerations.

**Table 8** User Button Mappings

Function	Button Description	For more information, see
Account Code	Before or during a call, press this button, enter the account code you want, and press the # key.	<a href="#">“Account (Billing) Codes”</a> in <a href="#">Chapter 7</a>
Automatic Callback	While on a call to an extension that is in use or unanswered, press this button and disconnect from the call to have the system generate a call back ring when the user at that extension becomes available.	<a href="#">“Using Automatic Callback”</a> in <a href="#">Chapter 5</a>
Camp On	While on an active call, press this button and when prompted, enter the Camp On destination extension of an in use or busy extension to camp the call.	<a href="#">“Using Camp On”</a> in <a href="#">Chapter 5</a>
CFWD All	Press this button to enter a Call Forward All extension and to toggle on and off the Call Forward All feature.	<a href="#">“Call Forward All”</a> in <a href="#">Chapter 5</a>
CFWD Busy	Press this button to enter a Call Forward Busy extension and to toggle on and off the Call Forward Busy feature.	<a href="#">“Call Forward Busy”</a> in <a href="#">Chapter 5</a>
CFWD No Answer	Press this button to enter a Call Forward No Answer extension and to toggle on and off the Call Forward No Answer feature.	<a href="#">“Call Forward No Answer”</a> in <a href="#">Chapter 5</a>
CLIR-All	Press this button to toggle on and off the Caller ID All (all external calls) feature.	<a href="#">“CLIR for All External Calls”</a> in <a href="#">Chapter 7</a>
CLIR-Next	Press this button to toggle on and off the Caller ID Next (next external call only) feature.	<a href="#">“CLIR for Next External Call Only”</a> in <a href="#">Chapter 7</a>
Call Toggle	For telephones other than the NBX Basic Telephone, which has a dedicated Call Toggle button, press this button to toggle between two calls.	
Conference	For telephones that do not have a dedicated Conference button, such as NBX Basic Telephones, press this button to add parties to a conference call.	<a href="#">“Establishing a Conference Call”</a> in <a href="#">Chapter 5</a>
Conference Drop	Press this button to drop the last person who joined the conference call.	<a href="#">“Disconnecting the Last Person That You Called”</a> in <a href="#">Chapter 5</a>
Default	Indicates that this button has no mapping.	

**Table 8** User Button Mappings (continued)

Function	Button Description	For more information, see
Directory	Press this button to access the Name Directory, a list of telephone users, displayed in the LCD window of your telephone. The user can select a name from the list to dial it automatically.	<a href="#">“Using the 3Com Telephone Display Panel”</a> in <a href="#">Chapter 5</a>
Do Not Disturb	Press this button to toggle on and off the Do Not Disturb feature.	<a href="#">“Do Not Disturb”</a> in <a href="#">Chapter 6</a>
Extend Wrap-Up Time	Press this button to extend the ACD Wrap-Up Time session duration. Wrap-Up Time must be enabled by the ACD administrator. You can use this feature only once per call.	<a href="#">“Extend Wrap-Up Time”</a> in <a href="#">Chapter 7</a>
Feature	Use this button to access any system feature by pressing it and then dialing the Feature Code.  For example, if a telephone does not have a button programmed for Call Park, you can press the Feature button, and then dial the Call Park Feature Code (444) to access the Call Park feature.	<a href="#">“Using Feature Codes”</a> in <a href="#">Chapter 8</a>
Flash	If your NBX system is connected to a Central Office (CO) by one or more Analog Line Card ports, and if the CO provides a feature such as Call Waiting that requires a flash signal, press this button to signal the CO to put the existing call on hold and toggle to the call that is waiting.  To return to the first call, press this button again.	
Fwd Vmail	Press this button to direct all incoming calls to your voice mail (or to wherever you have specified in the NBX NetSet utility <b>Call Forward &gt; Call Forward</b> ).	<a href="#">“Forwarding Incoming Calls”</a> in <a href="#">Chapter 5</a>
Headset	Press this button to toggle between headset and handset usage.  The Headset button mapping type is available only on telephones that have a dedicated headphone jack, such as the 3Com 3102 Business Telephone.	<a href="#">“Using a Headset”</a> in this chapter
grp login/out 0–99 (0–29 on NBX 100)	Press this button and enter the appropriate password to log in to or out of an associated Automatic Call Distribution, Hunt, or Calling group.  Maps one of the group login/logout Feature Codes (login numbers to this button. (Ask your administrator for what login number to use.) Each login number logs you in or out of the associated group.	<a href="#">“Automatic Call Distribution Groups, Hunt Groups, and Calling Groups”</a> in <a href="#">Chapter 7</a>



**Table 8** User Button Mappings (continued)

Function	Button Description	For more information, see
Line/Extension	<p>Use this button to map to the extension of another telephone (to create a Busy Lamp/Speed Dial) or Analog Terminal Adapter (ATA). (Only your administrator can map this button to an external or call park extension.)</p> <p><i>Number</i> — Enter the extension (with no spaces or special characters) associated with the telephone or ATA port.</p> <p><i>Priority</i> — Enter a number to identify which button has precedence. The button with the lowest value becomes active when you lift the receiver or press speaker.</p>	
MWI For VM	<p>Assigns the Message Waiting Indicator to this button. The LED next to the button lights when you have a message in your mailbox.</p> <p><i>Number</i> — Enter the voice mailbox number (telephone extension) when prompted.</p>	<a href="#">“Listening to NBX Messages”</a> in <a href="#">Chapter 4</a>
MWI To Ph Send	<p>Press this button to send an MWI message to any other phone in the system that has a mapped MWI Retrieve button with an associated LED.</p>	<a href="#">“Using Message Waiting Indicator to Telephone”</a> in <a href="#">Chapter 7</a>
MWI Cancel	<p>Press this button to cancel and remove the most recent MWI message that was sent to a particular extension from this phone. (The same phone that sent the message must be used to cancel the message.)</p>	<a href="#">“Using Message Waiting Indicator to Telephone”</a> in <a href="#">Chapter 7</a>
MWI Retrieve	<p>Press this button to retrieve MWI messages through the LCD and the up or down arrow (scroll) buttons. The MWI Retrieve mapped button has an associated LED, which illuminates when a new MWI message has been received.</p>	<a href="#">“Using Message Waiting Indicator to Telephone”</a> in <a href="#">Chapter 7</a>
Other	<p>Lets you assign any feature code to this button.</p> <p><i>Number</i> — Enter the feature code number in this field.</p> <p>Example: On the NBX 100, use <i>Other</i> to map the personal speed dials from 11–99. In the <i>Number</i> field, enter an extension from the personal speed dial extension range. Personal speed dial 11 corresponds to extension 610.</p> <p>You can also use Other to map Class of Service Override, feature code 433, or Telephone Lock, feature code 432 to a telephone button.</p>	<a href="#">Class of Service Override</a> and <a href="#">Preventing Unauthorized Use of Your Telephone</a>
Park	<p>Press this button and dial a valid Call Park extension to park the current call.</p> <p>To retrieve a parked call from a Call Park extension, press the Park button and then dial the extension on which the call was parked.</p>	<a href="#">“Call Park”</a> in <a href="#">Chapter 7</a>

**Table 8** User Button Mappings (continued)

Function	Button Description	For more information, see
PG 482–531 (PG 500–531 on NBX 100)	<p>Press this button to pick up a call on any extension in the selected Pickup Group without dialing the Pickup Group extension. Your telephone and the ringing telephone must be part of the same Pickup Group unless the “Allow Non-Member Pickup” check box is enabled for the group.</p> <p>To do this you must first identify a specific Pickup Group extension and assign it to this button. If you are unsure what extension to use, ask your administrator.</p>	<a href="#">“Call Pickup”</a> in <a href="#">Chapter 7</a>
Pickup Group	Press this button and dial the Pickup Group extension to pick up a call on any extension in the associated Pickup Group. Your telephone and the ringing telephone must be part of the same Pickup Group unless the “Allow Non-Member Pickup” check box is enabled for the group.	<a href="#">“Call Pickup”</a> in <a href="#">Chapter 7</a>
PSD 1–99 (PSD 1-10 on NBX 100)	<p>Assigns a Personal Speed Dial (PSD) number to the button. The NBX system includes 100 Personal Speed Dials (PSDs). For the NBX 100, you can map the first 10 personal speed dials using the Button Mappings window. To map the remaining 90 personal speed dials, use the <i>Other</i> button mapping, described earlier in this table.</p> <p>You define the telephone numbers for each PSD in <b>Directory &gt; Personal Speed Dial</b> in the NBX NetSet utility.</p>	<a href="#">“Speed Dials”</a> later in this chapter
Redial	On a 3Com Basic or Entry Telephone, press this button to place a new call to the same number as the most recent call made from this telephone.	<a href="#">“Dialing a Call”</a> in <a href="#">Chapter 5</a>
Release	Press this button to disconnect the current call and leave the telephone idle (on hook). This feature is useful if you use a headset when you make calls.	<a href="#">“Using a Headset”</a> later in this chapter
SSD 0–99 (SSD 1–10 on NBX 100)	<p>Assigns a System Speed Dial (SSD) number to the button. Both the SuperStack 3 NBX and the NBX 100 system includes 100 System Speed Dials (SSDs), which can be programmed by the administrator (NBX NetSet System Configuration - Speed Dials).</p> <p>For the NBX 100, you can map the first 10 system speed dials using the Button Mappings window. To map the remaining 90 system speed dials, use the <i>Other</i> button mapping, described earlier in this table.</p>	<a href="#">“Speed Dials”</a> later in this chapter
Switch to DTMF	Press this button to switch this Analog Line Card port from pulse dialing to tone dialing (DTMF). You cannot switch from tone dialing back to pulse dialing during a call.	<a href="#">“Using Pulse Dialing”</a> in <a href="#">Chapter 7</a>

**Table 8** User Button Mappings (continued)

Function	Button Description	For more information, see
Transfer	Press this button to transfer a caller to an internal extension or an external telephone number.	<a href="#">“Transferring a Call”</a> in <a href="#">Chapter 5</a>
WhisperPage	Press this button and when prompted, enter the extension to initiate a WhisperPage session.	<a href="#">“WhisperPage”</a> in <a href="#">Chapter 7</a>
Wrap-Up Time	Press this button to activate the ACD Wrap-Up Time session if this feature has been enabled by the ACD administrator. You can extend the Wrap-Up Time session duration by using the Extend Wrap-up Time feature.	<a href="#">“Wrap-Up Time”</a> in <a href="#">Chapter 7</a>
Xfer Vmail	Press this button to transfer a caller directly to another person’s mailbox.	<a href="#">“Direct Mail Transfer”</a> in <a href="#">Chapter 5</a>

### Button Mapping Notes

The following notes apply to user button mapping.

- **Button Type Functions** — Not all button type functions are available on all models of telephones.
- **Priority and Number Fields** — The use of *Priority* and *Number* fields for button mapping depend on the selected button type function. These fields are applicable where noted in [Table 8](#).
- **Ring Field** — The *Ring* field used for button mapping allows you to enable and disable ringing for a lone appearance button and to set delayed ringing patterns. (See “Delayed Ringing” below.)
- **Busy Lamp/Speed Dial** — A Busy Lamp/Speed Dial button is an Access button where the *Type* field is set to Line/Extension and the button is mapped so that it can function as a Speed Dial. When you press the Busy Lamp/Speed Dial button, you dial the mapped extension. When the other extension is in use, the lamp lights on your telephone. For how to configure a Busy Lamp/Speed Dial button, see “Line/Extension” in [Table 8](#).
- **Button Labels** — You can use the NBX LabelMaker utility available through the NBX NetSet utility to create and print labels for the buttons on your telephone.
- **Delayed Ringing** — The administrator can define a “ringing progression” for a line mapped to multiple telephones. For example a call could ring immediately at telephone 1, begin ringing at telephone 2 after 4 rings, and then begin ringing at telephone 3 after 8 rings. Any of the telephones can pick up the call at any time, even if it has not yet started ringing at a particular telephone.

Delayed Ringing works only when your administrator maps telephone company lines directly to buttons on two or more telephones or defines bridged station appearances. After that is done, you can alter the delayed ringing pattern by changing the delay before ringing occurs on the mapped line on your phone.

To edit a Delayed Ringing Pattern, go to **Telephone Programming > Button Mapping**. The button mapped to the telephone line or designated as a bridged extension will have the Type set to Line/Extension

For the shared line appearance button, set the Ring box to the behavior that you want. To have the telephone begin ringing after one ring, select 1, after two rings, select 2. Select No to disable ringing entirely. (The lamp still functions to indicate ringing/call status.) Do not change the settings in the *Type*, *Number*, and *Priority* fields.

---

## Speed Dials

This section describes the types of speed dials:

- Personal
- System-wide
- One-Touch

It also describes how you can print a list of speed dials. You can also print a set of labels for your telephone, showing which of your buttons are mapped to features and speed dial numbers.



*Although 3101 and 3101SP Basic Telephones each have two Access buttons that can be made available by your administrator for One-Touch speed dial numbers, these buttons are mapped by default as a Feature button and a Transfer button. Changing the settings for the Feature or Transfer button greatly reduces your ability to use some of the NBX features.*

## Personal Speed Dials

You can create a list of up to 99 personal speed dials (using ID numbers 601 through 699) for your telephone. These speed dials are available only from the telephone for which they were created.

You create, view, and print your personal speed dial list using the NBX NetSet utility. You can view and dial a personal speed dial number using the telephone display panel of a 3Com Telephone.

If your administrator has assigned you to a group that allows you to change your button mappings, log in to the NetSet utility and go to **Telephone Programming > Button Mapping** to view or change the current personal speed dial assignments for your telephone's buttons. See "[User Button Mapping](#)" earlier in this chapter.

You can also map a personal speed dial ID number to one of the available Access buttons on your telephone from the **Directory > One-Touch Speed Dial page**. See "[Special Case: One-Touch Speed Dials](#)" later in this chapter.


To assign or change a personal speed dial number:

- 1 Log in to the NBX NetSet utility and go to **Directory > Personal Speed Dial**.
- 2 In the **Personal Speed Dial** page, select an unassigned speed dial ID number, or select the speed dial ID number for which you want to change the speed dial number.
- 3 In the **Speed Dial Number** text box, type the telephone number that you want the system to dial when you use that ID number.

Include all of the prefix numbers that you would normally dial, such as a **9** or **8** or **1** to access an outside line, and, if necessary, the country code or area code. Do not use spaces, hyphens, commas, or other nonnumeric characters.

- 4 In the **Account Code** box, type an account code if it is required or useful for calls to this destination.
- 5 In the **Comment** text box, type a brief description, usually a name, that corresponds to the number.
- 6 After you have made all of your changes to the personal speed dials, click **Apply** to complete your changes.

To use a personal speed dial:

- 1 Pick up the handset. If you are using a 3Com 3101SP Basic Telephone, you can press  (**Speaker**).
- 2 Press the **Feature** button plus the 3-digit personal speed dial code for the number that you want to call. Or scroll to Personal Speed Dials on the display panel, press **Slct**, scroll to the number that you want to dial, and press **Slct** again.



*If you dial a speed dial code that has no number assigned to it, the display panel on your telephone shows the message "**No number stored.**"*


### System-wide Speed Dials

Your administrator can set up to 100 system-wide speed dials (using ID numbers 700 through 799) for numbers that are dialed frequently by many internal users. You can view the system-wide speed dial list through the NBX NetSet utility. Or you can view and dial from it using the telephone display panel.

If your administrator has assigned you to a group that allows you to change your button mappings, log in to the NetSet utility and go to **Telephone Programming > Button Mapping** to view or change the current system-wide speed dial assignments for your telephone's buttons. See "[User Button Mapping](#)" earlier in this chapter.

You can also map a system-wide speed dial ID number to one of the available Access buttons on your telephone from the **Directory > One-Touch Speed Dial** page. See "[Special Case: One-Touch Speed Dials](#)" next.

To use a system-wide speed dial:

- 1 Pick up the handset. If you are using a 3Com 3101SP Basic Telephone, you can press  (**Speaker**).
- 2 Press the **Feature** button plus the 3-digit system-wide speed dial ID code for the number that you want to call. Or scroll to System Speed Dials on the display panel, press **Slct**, scroll to the number that you want to dial, and press **Slct** again.



*If you dial a speed dial code that has no number assigned to it, the display panel on your telephone shows the message "**No number stored.**"*

### Special Case: One-Touch Speed Dials

One-Touch speed dials use Access buttons.

Use either the One-Touch or the Personal speed dial page to assign or change the One-Touch speed dial numbers on your telephone. If you make a change in one page, it appears in the other page. See "[Personal Speed Dials](#)" or follow these steps for the One-Touch screen.



*Although 3101 and 3101SP Basic Telephones each have two Access buttons that can be made available by your administrator for One-Touch speed dial numbers, these buttons are mapped by default as a Feature button and a Transfer button.*

To add or change a One-Touch speed dial on an available Access button:

- 1 Log in to the NBX NetSet utility and go to **Directory > One-Touch Speed Dial**.
- 2 Any box that has an asterisk in the margin is available for a personal or system-wide speed dial. In any of the asterisked text boxes under **Number**, type the telephone number to which you want to assign a speed dial button. Or change the telephone number in a box that already has a speed dial number.

Include all of the prefix numbers that you would normally dial, such as a **9** or **8** or **1** to access an outside line, and, if necessary, the country code or area code.


To include an account code, include the feature code, account code, and # before the telephone number **Example:** [888]1234#9785551212. Do not use spaces, hyphens, commas, or nonnumeric characters other than # and brackets.

- 3 In the **Description** text box, type a brief description, usually a name that corresponds to the number.
- 4 After you have made all of your changes to the One-Touch speed dials, click **Apply** to complete your changes.

If you make a change in this page, the change also appears in the Personal Speed Dial page. See [“Personal Speed Dials”](#) earlier in this chapter.

### Printing Speed Dial Lists

You may find it useful to have a paper list of personal or system speed dials. To print a list of speed dials:

- 1 Log in to the NBX NetSet utility and go to **Directory > Personal Speed Dial** or **System-wide Speed Dial**.
- 2 Click 
- 3 A list appears with all of the personal or system-wide speed dial numbers that are allocated to your telephone.
- 4 Click **Print** to print the list.

### Printing Labels

You can print labels that identify the numbers and features that are assigned to Access buttons on your telephone or attendant console using the LabelMaker in the NBX NetSet utility or on the *NBX Resource Pack CD*.

To print labels for your telephone or attendant console:

- 1 Log in to the NBX NetSet utility and go to **Resources > Telephone Button Labels**.
- 2 Click the link for **Telephone Button Labels**. Save the file to your choice of location on your PC, and then open the file to start the LabelMaker program.
- 3 Find the page in the LabelMaker that has labels for your telephone.
- 4 Edit the label template by clicking any of the label text boxes to highlight the existing text, and then typing new text.
- 5 Press **Tab** to move to the next text field in the label.
- 6 Click the **Print** button at the top of the LabelMaker screen to open the Print dialog. Be sure to specify which page you want to print. Typically, the default is to print all pages.
- 7 Click **Print**.
- 8 Cut out the labels and put them in the label holders of your 3Com Telephone or your Attendant Console.
- 9 To save the edited LabelMaker, click the **Save** button at the top of the LabelMaker screen. Or you can click **File > Save As** to save the LabelMaker to a new location.



*To reuse your saved LabelMaker, you must run the file that you saved to your computer. If you download the LabelMaker from the NBX NetSet utility again, you get the default version, and the download might overwrite your saved LabelMaker. To create a Windows Desktop shortcut to your saved LabelMaker, right-click the saved file and then click **Send To > Desktop (create shortcut)**.*

---

## Off-Site Notification

When you enable off-site notification, the NBX Messaging system notifies you by e-mail, pager, or telephone that you have received voice mail. You can then retrieve your messages. Off-site notification consists of one cycle of up to five attempts to reach you, one attempt for each Attempt row that you configure in the Off-Site Notification screen.



*If your system uses a messaging application other than NBX Messaging, use the documentation for your messaging application instead of these instructions.*



To configure off-site notification for your NBX voice mailbox:

- 1 Log in to the NBX NetSet utility and go to **My Calling Privileges > Call Permissions**. Look to see if your system administrator has enabled off-site notification for the NBX system and for the Class of Service group to which your telephone belongs. If not enabled, ask to have these features enabled.
- 2 Go to **NBX Voice Mail Settings > Offsite Notification**.
- 3 Select whether you want off-site notification for all messages or for urgent messages only.

Next, you will need to configure the Off-Site Notification Attempts for up to five attempts at off-site notification.

- 4 In the first attempt row, in the **Notification Method** drop-down list, select **Pager, VoiceMail, or EMail**



*The cycle of notice behaviors differs depending on the method that you specify for the **first** attempt. See ["Notice Behaviors"](#) later in this chapter.*

- 5 In the **Number/Address** field:
  - If you selected **Pager** for **Method** in step 4:
    - Enter a pager number. Do not use parentheses, hyphens, or spaces. Ask your administrator if you need to include the area code and any other digits that your system needs to dial an outside number, such as 9, 8, 1, or 0. After you receive the pager message, you call in to your voice mailbox to listen to your messages.
    - In the **Numeric Page Number** field, indicate what you want the pager to display. Enter a series of digits, such as your telephone extension number.
  - If you selected **VoiceMail** for **Method** in step 4:
    - Enter the telephone number at which you want to be notified. Do not use parentheses, hyphens, or spaces. Ask your administrator if you need to include the area code and all other digits that your system needs to dial an outside number, such as 9, 8, 1, or 0.

When you choose to be notified by voice mail, the NBX system calls the number that you enter in this field. When you answer the call, the system announces the new voice message and allows you to follow the prompts to access your voice mailbox and listen to and delete any of your messages.
  - If you selected **EMail** for **Method** in step 4:

- Enter the e-mail address at which you want to be notified. You can use different e-mail addresses for different Attempts.

When you choose to be notified by e-mail message, the NBX system sends you an e-mail message for each voice mail message that you receive. The voice message may be attached to the e-mail message as a WAV file. See the tables in [“Notice Behaviors”](#) later in this section.

You can listen to the messages using your PC sound device (a USB headset or a sound card with either speakers or headphones).



*If you delete the e-mail notice with its attached WAV file after you listen to the message, you delete only the copy. The original voice mail message remains in your NBX voice mailbox. You must log in to the NBX voice mail system by telephone or through the NBX NetSet utility to delete your messages.*

- 6 From the **Interval** drop-down list box, select the number of minutes that you want the system to wait after each attempt before it moves to the next attempt.



*The “best” time interval depends on the Attempt method that you choose. For instance, allow sufficient time after a Pager notification for the usual delay at your pager supplier.*

- 7 Click **Apply**.
- 8 Repeat steps 4 through 7 to set up additional attempts if you want.



*The cycle of notice behaviors differs depending on the method that you select for the **first** attempt. See [“Notice Behaviors”](#) at the end of this section.*

- 9 You do not need to configure every Attempt row. When you have configured all of the Attempt rows that you want, click **Apply** to complete your changes.
- 10 Test your off-site notification settings by leaving yourself a voice mail message.

### **Additional Notes**

- You can use the same notification method for all five attempts, or any combination of methods.
- If your voice mailbox is full and someone tries to leave you a voice mail message, the NBX system does not send you an e-mail notification.

- When you activate the **Telephone Locking** feature on your telephone, the NBX system sends you off-site notification messages only if the notification number (for example, your pager number) is a toll-free telephone number. See [“Telephone Locking”](#) later in this chapter.

**Notice Behaviors**

These tables explain how the cycle of notice behaviors depends on the method that you select for the **first** attempt. See the definitions as well as [“Resetting the Off-Site Notification Cycle”](#).

■ **If you specify EMail for the first attempt:**

	Method	Notice Behavior
1	E-mail	<ul style="list-style-type: none"> <li>■ You receive an e-mail notice <b>for each voice message</b>.</li> <li>■ Each e-mail notice contains information about the voice message (like time of receipt and the number that called), and the voice message is attached as a WAV file.</li> </ul>

**and then you configure attempt:**

2 through 5 as	E-mail	<ul style="list-style-type: none"> <li>■ You receive an additional e-mail notice <b>for each voice message</b>.</li> <li>■ The second e-mail notice contains no information about the voice message (like time of receipt and the number that called) and no WAV file attachment.</li> </ul>
2 through 5 as	Pager	<ul style="list-style-type: none"> <li>■ You receive a pager call <b>for each voice message</b>.</li> </ul>
2 through 5 as	VoiceMail	<ul style="list-style-type: none"> <li>■ You receive a telephone call <b>for each voice message</b>. Follow the prompts to log in and listen to messages, or log in to the NBX NetSet utility.</li> </ul>

■ **If you specify Pager or VoiceMail for the first attempt:**

Attempt	Method	Effect
1	Pager or Voice Mail	<ul style="list-style-type: none"> <li>■ You receive a telephone call or pager call <b>for only the first new voice message.*</b></li> </ul>

**and then you configure attempt:**

Attempt	Method	Effect
2 through 5 as	<b>E-mail</b>	<ul style="list-style-type: none"> <li>You receive an e-mail notice <b>for only the first new voice mail message.*</b> The e-mail notice contains no information about the voice message (like time of receipt and number that called) and no WAV file attachment.</li> </ul>
2 through 5 as	<b>Pager</b>	<ul style="list-style-type: none"> <li>You receive a pager call for <b>only the first new voice message.*</b></li> </ul>
2 through 5 as	<b>Voice Mail</b>	<ul style="list-style-type: none"> <li>You receive a telephone call for <b>only the first new voice message.*</b></li> </ul>

\***First new message** means the first voice mail message that arrived at your mailbox since the last time that you logged in to your voice mailbox through a telephone OR through the NBX NetSet utility. Logging in restarts the cycle.

### Resetting the Off-Site Notification Cycle

When you log in to your voice mailbox and hang up or log out (regardless of whether you listen to or delete messages), you start the off-site notification cycle again. You will be notified about the next message that comes into your voice mailbox.

### Managing Off-site Notification Using the Telephone

To manage your off-site notification settings directly through the telephone:

- 1 Log in to your voice mailbox at your telephone or remotely.
- 2 Press **9**.
- 3 Press **4**, select one of these options, and follow the prompts:

	Description
<b>1</b>	Enable off-site notification.
<b>2</b>	Disable off-site notification.
<b>3</b>	Change off-site notification settings.
<b>4</b>	Review current off-site notification settings.
<b>*</b>	

---

## Do Not Disturb

When the Do Not Disturb feature is in effect, calls coming in to your telephone immediately go to your default call coverage point without ringing. You set the default call coverage point from the NBX NetSet utility by going to **Call Forward > Call Forward**. See [“Forwarding Incoming Calls”](#) in [Chapter 5](#).



*If Call Forward All is in effect, it overrides Do Not Disturb. Calls go to the call coverage point defined for Call Forward All in the **Call Forward > Call Forward Override** page.*

You may be able to map the Do Not Disturb feature to an available Access button on your 3Com Telephone (see the [“User Button Mapping”](#) section, or you can use the Feature Code to enable and disable the feature.

When Do Not Disturb is in effect:

- It overrides Call Forward No Answer, Call Forward Busy, and FWD MAIL.
- Your telephone does not ring when it receives an incoming call.



*If you use a 3Com Attendant Console, the associated status light does flash when a call arrives.*

- You can use the telephone to dial outgoing calls.
- You can use the telephone to dial internal and external pages.
- If your telephone is part of a call pickup group, no other telephone in the pickup group can retrieve a call that comes directly in to your telephone. The incoming call goes immediately to the call coverage point (voice mail, auto attendant, or other extension).
- If your telephone is part of an ACD group, a hunt group, or a calling group, incoming calls to the group ring on your telephone. Calls coming in directly to your telephone (not directed to the group) do not ring on your telephone. To prevent every call from ringing, you must enable Do Not Disturb and *also* log out of the group.

To enable and disable Do Not Disturb using the feature code:

- 1 Pick up the handset and press **Feature + 446**.
- 2 Hang up. Your telephone is now in Do Not Disturb mode. The display panel on a 3Com Telephone shows **DO NOT DISTURB**.

- 3 To disable Do Not Disturb mode, repeat steps **1** and **2**. The **DO NOT DISTURB** message disappears from the display panel.



*To view your current Do Not Disturb setting even if you do not have a 3Com Telephone or if you are away from your desk, log in to the NBX NetSet utility and go to **My Calling Privileges > Feature Settings**.*

## Preventing Unauthorized Use of Your Telephone

To prevent others from dialing long-distance or other unauthorized calls from your telephone permanently, ask your administrator to adjust the call permissions schedule for your extension, or you can adjust it temporarily with the **Telephone Locking** feature.

### Telephone Locking

To enable and disable the Locking feature using the feature code:

- 1 Pick up the handset and press **Feature + 432**. The display panel on a 3Com Telephone prompts you to enter your password.
- 2 Enter your password + # and hang up.

Your telephone is now locked. The display panel shows the **Lock** icon. It displays only the directory and system-wide speed dials.

- 3 To turn off this feature, repeat steps **1** and **2**. The **Lock** icon disappears. Your call logs and personal speed dials are again available.

### Additional Notes

- When Telephone Locking is activated, a person using your telephone can dial only toll-free calls, calls to emergency services (such as 911 in the United States), or calls to telephone numbers that have been programmed in your system as “*internal*” calls.
- Even when Telephone Locking is active on your telephone, your off-site notification choices remain in effect. That is, notification of voice mail messages is sent to the outside telephone numbers or paging numbers that you have specified in the NBX NetSet utility **NBX Voice Mail Settings > Offsite Notification** page, even if these numbers are not toll-free.
- You can view your current Telephone Lock setting from the NBX NetSet utility by going to the **My Calling Privileges > Feature Settings**.

**Call Permissions** Your administrator establishes Call Permissions to control the types of calls that can be dialed from your telephone. The administrator can configure these permissions to change depending on the time of day. For example, your administrator can prevent long-distance calls from being dialed from your telephone outside of business hours.

To view your current call permissions, from the NBX NetSet utility, go to **My Calling Privileges > Call Permissions**.

---

## Class of Service Override

The **Class of Service Override** feature allows you to apply the features of your own 3Com Telephone temporarily to another 3Com Telephone on the same local network.

### Example:

- The telephone in your organization's conference room is configured so that long-distance telephone calls cannot be dialed from it. You may, however, need to place a long-distance call during a meeting. Using the Class of Service Override feature, you can apply the features of your own telephone to the conference room telephone **for one call only** and dial the call, assuming that your Call Permissions allow you to make long-distance calls from your own telephone.



*If your system uses a messaging application other than NBX Messaging, use the documentation for your messaging application instead of these instructions.*

To activate the one-call-only Class of Service Override from a 3Com Telephone:

- 1 Pick up the handset.
- 2 Press **Feature + 433**.
- 3 Dial your telephone extension and press #.
- 4 Dial your voice mailbox password and press #.
- 5 When you hear the dial tone, you can dial the call in the same way that you do from your own 3Com Telephone.



*When you use Class of Service (CoS) Override, any reports that are generated on the NBX system indicate that the CoS features of your own 3Com Telephone were applied temporarily to the telephone on which you made the call.*

---

## Using a Headset

You can use a headset that has a microphone with any telephone on an NBX system.

- For information on how to use a typical headset and amplifier with 3Com Telephones other than the 3Com Manager's Telephone or 3102 or 3102B Business Telephone, see "[General Headset Instructions](#)" later in this section.

## General Headset Instructions

For 3Com Telephones other than the 3Com Manager's Telephone or 3102 and 3102B Business Telephones, follow these instructions.



*You may need to modify some of these instructions for some headsets or amplifiers. See the instructions that come with your equipment.*

To prepare a headset for all calls:

- 1 Insert the cord for the headset amplifier into the handset cord receptacle on the underside of the telephone.
- 2 Insert the cord for the telephone handset into the headset amplifier.
- 3 Put on the headset.
- 4 Pick up the telephone handset and set it on your desk.

To prepare a headset so that you can choose either the handset or the headset for each call:

- 1 Insert the cord for the headset amplifier into the handset cord receptacle on the underside of the telephone.
- 2 Insert both the headset cord *and* the handset cord into the headset amplifier.
- 3 **For headset calls:** Lift the handset off the telephone and leave it off. Use the headset microphone and earphones.

Even when the headset is plugged into the amplifier, you must remove the handset from the cradle to use the headset.

- 4 **For handset calls:** Press the button on the headset amplifier that turns the headset off, pick up the handset, and speak into it.

To manage calls when you are using the headset:

- 1 Put the headset on. When a call comes in:
  - If the handset is on hook, pick it up, set it on your desk, and begin to speak.



- If the handset is off hook, press the System Appearance button beside the flashing light.
- 2 To end a call when you are using a headset:
    - On a 3Com Basic Telephone or an analog telephone, hang up the handset or press **Feature +111**.

### Returning to the Headset After a Long Delay

Certain brands of headsets enter a power-saving mode that prevents the telephone from ringing for one or more calls when *both* of these circumstances are true:

- The headset amplifier buttons for **Mute** and **On** are both set to **On**.
- The handset is off the phone for a long time (for instance, overnight).

It may take a few minutes for your headset to return from the power-saving mode to the active mode when calls first come in, so your telephone may not ring until the headset has returned to active mode, and you may miss a call.

If you plan to not use the headset for a long time (for instance, overnight), 3Com recommends that you set the mute and headset buttons on the amplifier to **Off** and hang up the handset on your telephone. When you are ready to receive calls again, set up the headset for receiving calls:

- 1 Pick up the handset on your telephone and set it on your desk.
- 2 Put on the headset. On the amplifier, set the headset button to **On**.



# 7

## GETTING MORE FROM YOUR TELEPHONE SYSTEM

This chapter covers these topics:

- [Listening to Your Messages in Your E-mail](#)
- [Account \(Billing\) Codes](#)
- [Caller ID](#)
- [Call Pickup](#)
- [Automatic Call Distribution Groups, Hunt Groups, and Calling Groups](#)
- [Supervisory Monitoring](#)
- [WhisperPage](#)
- [Call Park](#)
- [Paging](#)
- [Configurable Operators](#)
- [Using Message Waiting Indicator to Telephone](#)
- [Dialing a Call to a Remote Office](#)
- [Bridged Extensions](#)
- [Delayed Ringing](#)
- [Using Pulse Dialing](#)
- [Additional Applications](#)



*If your system uses a messaging application other than NBX® Messaging, use the documentation for your messaging application instead of the instructions in this chapter.*



*For help on accessing NBX features from an analog telephone or a third-party, SIP-based IP telephone, see the applicable NBX Feature Codes Guide in the NBX NetSet™ utility. For help on how to set up your NBX NetSet utility password the first time, see [Chapter 1](#).*

## Listening to Your Messages in Your E-mail

You can listen to your voice mail from any computer that allows you to access your e-mail. Your e-mail software application must be IMAP-4 compliant, such as Microsoft Outlook. See your administrator for assistance with this feature.

If you configure your first off-site notification method to send you an e-mail message when you have voice messages, the NBX system sends each voice mail message as a sound-file attachment to an e-mail message. To listen to your messages using your computer, it must have a sound device such as a USB headset or a sound card with either speakers or headphones.

When you delete the e-mail message that contains the attached voice message, you are not deleting the voice message on the NBX system. To delete voice messages from the NBX system, you must access your voice mailbox through the telephone or the NBX NetSet utility.

See [“Off-Site Notification”](#) in [Chapter 6](#) for a discussion of off-site notification behavior.

---

## Account (Billing) Codes

Account Codes allow your administrator to track calls that are associated with an individual client or account. When you dial a call or when you answer your telephone, you dial a numeric account code that allows the NBX system to track time spent on the telephone with a client, perhaps to be associated with a billable account.

You may be forced to enter an account code for outgoing external calls. To see if you are forced to enter an account code, log in to the NBX NetSet Utility and go to **My Calling Privileges > Call Permissions**. For a list of public account codes, go to **Directory > Account Codes**.

To enter a forced account code for an outgoing external call:

- 1 Dial the phone number.

For a 3Com Entry Telephone or analog telephone, you hear the feature tone as the system waits for the required account code.

The display panel prompts you for the required account code.

- 2 Dial the account code that has been assigned by your administrator, and then press the # key.

The NBX system records the account code and completes the call:

- The account name, if known, displays. If the account code is incorrect, you are prompted to enter it again.
- On a 3Com Entry Telephone or analog telephone, if the account code is incorrect you may have to dial the phone number, dial the correct account code, and press # again.

To enter an account code at any time before or during an incoming or outgoing call:

- 1 Press **Feature + 888**.
- 2 Dial the account code that has been assigned by your administrator, and then press the # key.

The NBX system records the account code and applies it to:

- The next call, if you activate the Account Codes feature before a call arrives at your telephone
- The current call, if you activate the Account Codes feature during a call

## Caller ID

Your administrator can set up your NBX system to allow for Internal and External Caller ID or can configure the system so that you can block your identity (telephone number) from anyone you call.

### Internal and External Caller ID

By default, the NBX system shows the extension and name of any *internal* caller on the display panel of your 3Com Telephone.

External Caller ID provides the same information for *external* incoming calls if your organization subscribes to the service from your local telephone company and if the caller has not blocked the information from being sent to the NBX system.

Availability and service charges for External Caller ID vary by location.

### Calling Line Identity Restriction (CLIR)

On certain NBX systems, if your organization subscribes to Caller ID service from your local telephone company, you can choose to prevent the NBX system from transmitting your Caller ID information to outside parties when you dial a call. Your administrator must enable this feature, called Calling Line Identity Restriction (CLIR), on the NBX system. If this feature is enabled system-wide, you can choose to restrict calls:

- For *all* external (outbound) calls that you dial

**OR**

- For only the *next* single external (outbound) call that you dial



*Your administrator can configure your system so that CLIR is always active, in which case you cannot change the CLIR settings on your telephone to override this option.*

**CLIR for All External Calls**

To enable CLIR-All for all calls from your telephone:

- 1 Pick up the handset, and press **Feature + 889**. The display panel on your 3Com Telephone shows **CLIR-ALL on**.
- 2 Dial the number that you want to call.

The NBX system does not send caller ID information on this call or any future calls until you disable this feature.

To disable CLIR-All:

- 1 Pick up the handset.
- 2 Press **Feature + 889** again. **CLIR-ALL off** appears briefly in the display panel and then disappears when you hang up the handset.

To view your current CLIR-All setting, log in to the NBX NetSet Utility and go to **My Calling Privileges > Feature Settings**.

**CLIR for Next External Call Only**

To enable CLIR for only the next call from your telephone:

- 1 Pick up the handset.
- 2 Press **Feature + 890**. The telephone display panel shows **CLIR-NEXT on**.
- 3 Dial the number that you want to call.
- 4 When you disconnect the call, the CLIR feature is no longer in effect. **CLIR-NEXT on** disappears from the display panel.

If you hang up the handset without making a call, the CLIR-NEXT feature remains active and will apply to the next external call that you make. If you are unsure about whether CLIR-NEXT is active, pick up the handset, press **Feature + 890**, and read the status message in the display panel of your telephone.

---

## Call Pickup

Use the Call Pickup feature to answer a call that is ringing on another telephone. This feature is best arranged in advance when you and another user know that it would be convenient or necessary to answer calls ringing on that user's telephone.

You can answer a call that is ringing on another telephone only if you and that user both are members of the same Call Pickup group or if that user is a member of a Call Pickup group that allows "nonmember pickup." Your administrator configures call pickup groups and can tell you which group you belong to.

To view the list of Call Pickup groups of which you are a member:

- 1 Log in to the NBX NetSet Utility and go to **System Group Settings > Call Pickup**.
- 2 Click the group name that you want to view from the Call Pickup Group list to view the members of that group.

### Directed Call Pickup on a Specific Telephone

You can answer a call that is ringing on a specific user's telephone.

#### Using the feature code:

- 1 Pick up the handset.
- 2 Press **Feature + 455** and the user's extension. The call is directed to your telephone.

### Group Call Pickup

You can answer a call that is ringing on a group member's telephone.

#### Using the feature code:

- 1 Pick up the handset.
- 2 Press **Feature + 456** and the group number. The call is directed to your telephone.

---

## Automatic Call Distribution Groups, Hunt Groups, and Calling Groups

Your administrator can establish formal and informal call centers so that incoming calls can be directed to several telephones that have been associated into automatic call distribution groups, hunt groups, or calling groups.

A *call center* is a general term that refers to any system that accepts incoming calls to a site and ensures that those calls are sent to the proper

destination within the site. The call center can be used, for example, as a help desk, a reservations counter, an information hotline, or a customer service center.

If you do not answer, calls that come in to your telephone:

- Through your extension go to the call coverage point that you have set up.
- Through an automatic call distribution group, hunt group, or calling group follow the call coverage path set up by the administrator for that group.

### Automatic Call Distribution

Automatic Call Distribution (ACD) distributes calls to agents and queues the calls that have not been answered before a predetermined time expires. The ACD also manages prerecorded announcements to callers, manages individual ACD agents and groups of agents, and provides database reports on both calls and agents.

Calls coming into ACD are distributed according to rules configured by the administrator. An agent becomes available to receive ACD calls by logging in to the ACD group.

To log in to an ACD group using your 3Com Telephone:

- 1 Pick up the handset.
- 2 Press **Feature +** the feature code for the ACD group. Your administrator can tell you which feature code to use.
- 3 Dial the ACD group password. Your administrator can tell you which password to use.
- 4 Press # and hang up.

To log out of an ACD group using your 3Com Telephone:

- 1 Pick up the handset.
- 2 Press **Feature +** the feature code for the ACD group.
- 3 Dial the ACD group password.
- 4 Press # and hang up.



*You or your administrator can configure an ACD group to an Access button. To log in to or to log out of the ACD group, press the specified Access button. The indicator next to the button lights to show that you*



are logged in. Your administrator can configure whether you are allowed to log out or not.



On the 3Com 2101 Basic Telephone, the display panel shows the message **logged in**.

To log in to an ACD group using the NBX NetSet utility:

- 1 Go to **Group Membership > ACD Groups**.
- 2 Select the ACD group to log in to.
- 3 Click **Login**.



If you log in to an ACD group and do not answer a call when it rings on your telephone, the system may log you out of the group depending on how the administrator has configured the group.

To log out of an ACD group using the NBX NetSet utility:

- 1 Go to **Group Membership > ACD Groups**.
- 2 Select the ACD group to log out of.
- 3 Click **Logout**.

### Viewing ACD User Status

Using the NBX NetSet Utility, go to **Group Membership > ACD Groups** to see each ACD group that you are a member of. Click each column heading to arrange the information in ascending or descending order.

- **Extension** — Shows the extension number of the ACD group. Click the extension number to view details about the ACD group members.
- **Name** — Shows the name of the ACD group.
- **Queue** — Shows the number of calls to this ACD group currently in the queue.
- **Answered** — Shows the number of calls that have been answered by this ACD group since NBX system startup.
- **Status** — Shows whether you are currently logged in to or out of the ACD group.
- **State** — Shows whether your extension has been locked in to the ACD group. If your extension has been locked into the ACD group, only the administrator can log you out. If your extension is not locked into the ACD group, you can log yourself out.

You can also perform the following actions:

- **Select All** — Select for an action all ACD groups of which you are a member.
- **Deselect All** — Remove from an action all ACD groups of which you are a member.
- **Invert Section** — Select for an action all ACD groups currently unselected and remove from an action all ACD groups currently selected.
- **Login** — Log in to the selected ACD group (or groups).
- **Logout** — Log out from the selected ACD group (or groups).

### Viewing ACD Group Status Details

Using the NBX NetSet Utility, go to **Group Membership > ACD Groups** and click the extension number to view detailed information about the agents of this ACD group. Click each column heading to arrange the information in ascending or descending order.

- **Extension** — Shows the extension number of each agent in the group
- **First Name** — Shows the first name of each agent
- **Last Name** — Shows the last name of each agent
- **Rank** — Shows the order in which calls are routed to agents in the group
- **Status** — Shows whether each agent is currently logged in or out of the ACD group
- **State** — Shows which agents' extensions have been locked in to the ACD group

### Wrap-Up Time

Wrap-Up Time is a feature that allows time for an agent to complete follow-up actions after a call. If this feature is enabled by the ACD administrator, you can activate Wrap-Up Time once per call for a duration specified by the administrator.

You can activate/deactivate Wrap-Up Time using Feature code 972 or by mapping an access button to this feature (see [“User Button Mapping”](#)). During Wrap-Up Time, the LED for the mapped button is lit, and the system routes no calls to this extension except personal calls or Call

Group calls. If you need more time than what is allotted by default, you can use the Extend Wrap-Up Time feature.

### Extend Wrap-Up Time


If the Wrap-Up Time feature is enabled by the ACD administrator, the Extend Wrap-Up Time feature is enabled by default and allows an agent to extend the Wrap-Up Time period for the same time duration as the Wrap-Up Time.

This feature is valid only if you are already in the wrap-up mode. You can activate the Extend Wrap-Up Time once per call using Feature code 973 or by mapping an access button to this feature (see [“User Button Mapping”](#)).

### Hunt Groups

Incoming calls ring to one member of the hunt group. If that member's telephone is in use, or if that member does not answer the call, the system "hunts" for another member of the group until the call is answered or is forwarded to the group call coverage point. For example, if there are no available members of the hunt group, the call might be forwarded to a group mailbox or to the receptionist. [Figure 4](#) shows the path of a call coming into a hunt group.

**Figure 4** Sample Hunt Group Configuration

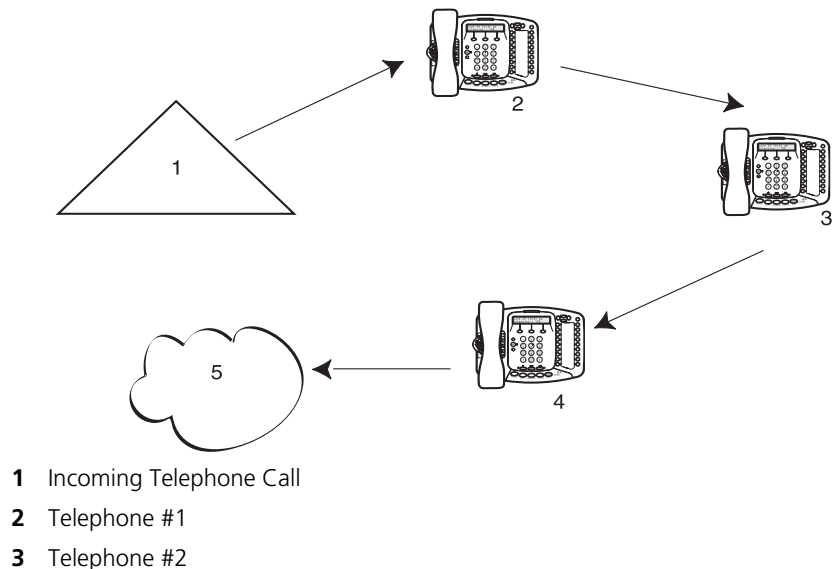

- 4 Telephone #3
- 5 Group Voice Mailbox

Hunt groups can be static or dynamic:

- If you are in a *static* hunt group, you are always part of that group along with the other group members.
- If you are in a *dynamic* hunt group, you must log in to the group to be part of it.

To log in to a dynamic hunt group using your 3Com Telephone:

- 1 Pick up the handset.
- 2 Press **Feature +** the feature code for the hunt group. Your administrator can tell you which feature code to use.
- 3 Dial the hunt group password and press **#**. Your administrator can tell you which password to use.

To log out of a dynamic hunt group using your 3Com Telephone:

- 1 Pick up the handset.
- 2 Press **Feature +** the feature code for the hunt group.
- 3 Dial the hunt group password.
- 4 Hang up the telephone.



*You or your administrator can configure a hunt group to an Access button. To log in to or to log out of the hunt group, press the specified Access button. The indicator next to the button lights to show that you are logged in.*



On the 3Com 2101 Basic Telephone, the display panel shows the message **IN**.

To log in to a dynamic hunt group using the NBX NetSet utility:

- 1 Go to **Group Memberships > Hunt Groups**.
- 2 Select the hunt group to which you want to log in.
- 3 Click **Login**.



*If you log in to a dynamic hunt group and do not answer a call when it rings on your telephone, the system may log you out of the group depending on how the administrator has configured the group.*

To log out of a dynamic hunt group using the NBX NetSet utility:

- 1 Go to **Group Memberships > Hunt Groups**.
- 2 Select the hunt group from which you want to log out.
- 3 Click **Logout**.

To log in to all hunt groups of which you are a member:

- 1 Go to **Group Memberships > Hunt Groups**.
- 2 Click the **Login all** button.

To log out of all hunt groups of which you are a member:


- 1 Go to **Group Memberships > Hunt Groups**.
- 2 Click the **Logout all** button.

## Calling Groups

One type of hunt group is the **Calling Group**. Calling groups allow an incoming call to ring simultaneously on all telephones in a group, for example, a customer service group. To log in to or out of a calling group, follow the steps in ["Hunt Groups"](#) earlier in this chapter.

[Figure 5](#) shows the path of a call coming in to a calling group.

**Figure 5** Sample Calling Group Configuration

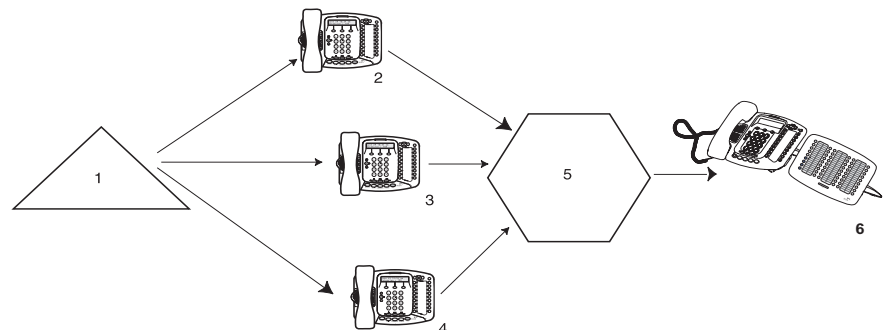

- 1 Incoming Telephone Call
- 2 Telephone #1
- 3 Telephone #2
- 4 Telephone #3
- 5 After a specified number of rings with no answer
- 6 Receptionist

**Group Membership** To view the list of users that belong to a calling group:

- 1 Go to **Group Membership > Hunt Groups**.
- 2 Click the group to display the list of users that belong to that group.

## Supervisory Monitoring

Supervisory monitoring is a feature that is typically used in call centers to allow supervisors to join a conversation between an agent and a customer to ensure proper customer support. The supervisor's presence may or may not be announced to the agent or customer by a tone.

Supervisory monitoring enables monitoring of incoming calls to Automatic Call Distribution Groups and Hunt Groups. Other calls to and from the agent's telephone are also available for monitoring, including:

- When an agent calls a customer back (outbound call)
- When an agent receives a call from a customer on their Direct Inward Dial (DID)
- 3-party Conference calls (The monitoring party counts as one of the parties in an NBX conference, which supports up to four parties.)

The supervisor must provide a password to access the agent's extension during these calls.



*Your organization may be legally required to add an announcement to tell callers that their call may be monitored.*

## Agent Role for 3Com Entry and Analog Telephones

3Com telephones that do not have a display panel and appropriate soft buttons such as, the 3Com Entry Telephone or an analog telephone, can operate only as endpoint devices for Supervisory Monitoring. This means that although a supervisor may be able to monitor agents who are using a 3Com Entry telephone or an analog telephone, a supervisor cannot use either or these telephones to monitor agents.

## Supervisory Monitoring Terminology

The following definitions help to explain how Supervisory Monitoring works in the NBX system:

**Supervisory Monitoring Domains** — are created by the NBX System Administrator and specify the following information:

- The supervisory monitoring domain's unique name and password

- The types of calls that can be monitored (Incoming Group (ACD, HG, or RP) Only calls or All calls)
- The calling groups (ACD, HG, or RP) that can be monitored
- The agents (users) who can be monitored
- Announcement tones for Monitor, Whisper, and Barge-In modes

A special system domain called the **Privacy List** specifies users who cannot be monitored. In addition, any users who have the Call Privacy privilege enabled for their Class of Service (CoS) group can prevent individual calls from being monitored. For more information on privacy, see [“Call Privacy”](#) later in this chapter.

**Agents** — must be defined as members of a supervisory monitoring domain. This includes people who take a transferred call or answer one with call pickup.

**Supervisors** — are people using the domain password to monitor the agent’s call. The supervisor must provide the password of the supervisory monitoring domain that has the agent (user) listed. The supervisor must use a 3Com Telephone with a display panel and appropriate soft buttons; not a 3Com Entry Telephone, 3Com Cordless Telephone, or an analog telephone.

**Customers** — are people who make an incoming call to an agent (supervisory monitoring domain member). A customer can be an internal or external caller.

**Monitor** — allows the supervisor to listen to a call.

**Whisper** — allows the monitoring supervisor to speak to the agent without the customer hearing.

**Barge-In** — allows the supervisor to speak to both the agent and the customer.

**Monitor** Monitor (also called **Silent Monitor**) allows an authorized supervisor to listen to calls that are received or initiated by an agent who does not have privacy enabled and is a member of the supervisor’s monitoring domain. The administrator configures the NBX system to specify whether a tone audible to the agent plays when the supervisor joins to monitor the call.

To monitor an agent's call:

- 1 Pick up the handset.
- 2 Press **Feature + 425**. Or press the Access Button if one is configured for **Monitor**.

The display panel prompts you for the domain password.

- 3 Enter the password and press the OK soft button or press #.

The system validates the password. If valid, you receive a confirmation tone and are prompted to enter the agent's extension.

- 4 Enter the agent's extension.
  - If the agent is valid and available, you join the call, either silently or with a tone announcing the call to the agent depending on system configuration.
  - Your display panel now shows options to **Whisper**, **Change Agent**, or **Barge-In**. The display panel on a 3Com 3103 Manager telephone also shows a Whisper icon.
  - Only the supervisor's display panel indicates that supervisory monitoring is in use.

**Whisper** Whisper (also called **Coaching**) allows a supervisor to speak to the agent during a monitored call without the customer hearing this advice. The administrator configures the NBX system to specify if a tone audible to the agent is played when the supervisor enables Whisper.



*To use Whisper or Barge-In, a supervisor must first be monitoring the call.*

To whisper to an agent:

- 1 Monitor the agent's call.
- 2 Press the soft button to select **Whisper** from the display panel.
  - Whisper is enabled for you, either silently or with a tone announcing the change, depending on system configuration.
  - Your display panel now provides options to **Monitor**, **Change Agent**, or **Barge-In**. The display panel on a 3Com 3103 Manager telephone also shows a Whisper icon.

**Barge-In** Barge-In allows a supervisor to speak to both the agent and customer during a monitored call. The administrator configures the NBX system to



specify whether a tone audible to the agent and customer is played when the supervisor enables Barge-In.



*To use Whisper or Barge-In, a supervisor must first be monitoring the call.*

To barge in to a call:

- 1 Monitor the agent's call.
- 2 Press the soft button to select **Barge-In** from the display panel.
  - Barge-In is enabled for you, either silently or with a tone announcing the change, depending on system configuration.
  - Your display panel now provides options to **Monitor, Change Agent,** or **Whisper.**

### Change Agent

While supervisory monitoring is enabled on a call, a supervisor can change the agent being monitored.

To monitor a different agent in the same supervisory monitoring domain:

- 1 Monitor the current agent's call.
- 2 Press the soft button to select **Change Agent.**  
The display panel prompts you for the extension number of the agent.
- 3 Enter the extension number of the agent.
  - You begin to monitor the call, either silently or with a tone announcing the call to the agent depending on system configuration.
  - Your display panel now provides options to **Whisper, Change Agent,** or **Barge-In.**

### Call Privacy

Call Privacy allows a user to prevent a call from being monitored. NBX telephone users can toggle Call Privacy on and off to block or accept supervisory monitoring on a call-by-call basis. (In contrast, membership in the Privacy List domain set by the administrator ensures that **all** calls associated with this user cannot be monitored.)



*The NBX administrator can enable or disable Call Privacy for each Class of Service (CoS) user group.*

If your administrator assigned you to a CoS group that allows Call Privacy, you can use Feature code 428 to prevent your current call from being monitored. To see if you can activate Call Privacy, log in to the NBX NetSet

utility and go to **My Calling Privileges > Call Permissions**. You are allowed to activate Call Privacy if the Call Privacy feature is enabled.

You can activate Call Privacy before a call (for example, by going off-hook and dialing Feature code 428 and then dialing an internal or external call), or during a call (for example, dialing Feature code 428 after answering an incoming call). The administrator may also map Feature code 428 to one of your telephone system access buttons.

To activate (toggle on) Call Privacy:

Press **Feature + 428**. Or press the **Call Privacy** Access button if one is programmed on your telephone.

- The message "CALL PRIVACY ON" appears on the display panel to indicate that Call Privacy is enabled.



*In the case of an incoming call, Call Privacy cannot be activated while the session is alerting. In this case, you must answer the incoming call before activating Call Privacy.*

To deactivate (toggle off) Call Privacy:

While Call Privacy is on, press **Feature + 428** again. Or press the **Call Privacy** Access button if one is programmed on your telephone.

- The message "CALL PRIVACY OFF" appears on the display panel to indicate that Call Privacy is disabled.



*When any active Call Privacy session ends, (for example: you activate Call Privacy, initiate a call, and then exit the call) the Call Privacy settings are no longer applicable and the next call is open to monitoring.*

### **More About Supervisory Monitoring**

These usage tips and limitations apply to Supervisory Monitoring:

- A supervisor can only monitor an agent who is a member of the domain associated with the domain password.



*You can log in to the NBX NetSet utility and go to **System Group Settings > Supervisory Monitoring** to view the status on whether or not you can be monitored. Also, if you are a user and have the domain password, you can log in and view domain membership information.*

- A supervisor cannot monitor an agent who is a member of the Privacy List domain. Likewise, a supervisor cannot monitor an agent who is on a call with a party who is a member of the Privacy List domain.
- A supervisor cannot monitor an agent who has activated Call Privacy (Feature code 428).
- A supervisor can monitor a call, put it on hold, and monitor a second call. A supervisor can invoke supervisory monitoring on only two calls (one active and one on hold) at a time.
- A supervisor cannot monitor a call where WhisperPage is being used. For more information on using WhisperPage, see [“WhisperPage”](#) later in this chapter.
- If a customer or agent conferences in an additional caller, or transfers, parks, or sends a call to voice mail, a supervisor monitoring the call is dropped from the call.
- If a customer or agent puts a call on hold before a supervisor attempts to monitor it, the supervisor will not be able to monitor the call. If a customer or agent puts a call on hold after a supervisor is monitoring it, the supervisor will not be dropped from the call.



*For additional tips and considerations on using Supervisory Monitoring, see your system administrator.*

---

## WhisperPage

The WhisperPage feature allows you to dial an NBX extension that is involved in an active conversation with another person and speak to that person without the other party on the call being able to hear you.

WhisperPage is typically used in the workplace by an assistant and manager. While a manager is on a call, an assistant can start a WhisperPage session to alert the manager of an important meeting or call. During the WhisperPage session, the assistant cannot hear the manager or the third party and the third party cannot hear the comments of the assistant.

If the manager is not on an active call when the assistant starts a WhisperPage session, the call is placed just as if the assistant dialed the manager's extension.

Both the manager and the assistant in a WhisperPage session must be assigned to an NBX WhisperPage domain and have appropriate WhisperPage access privileges.

To view your WhisperPage access privileges, log in to the NBX NetSet Utility and go to **System Group Settings > WhisperPage**. This page reports the following information:

- Whether or not the WhisperPage alert tone is enabled.
- The period of time in seconds (called decline time) before an initiated WhisperPage session becomes active.
- Users (listeners) with whom you can initiate a WhisperPage session
- Users (speakers) who can initiate a WhisperPage session with you



*The NBX NetSet administrator can enable or disable the alert tone and specify the Decline Time, which ranges from 0 to 9.9 seconds. For additional tips and considerations on using WhisperPage, see [“More About WhisperPage”](#) later in this chapter.*

### Starting a WhisperPage Session

To start a WhisperPage session:

- 1 Pick up the handset.
- 2 Press **Feature + 426**. Or press the Access Button if one is configured for **WhisperPage**.

The display panel prompts you for the WhisperPage extension.

- 3 Enter the extension you want to whisper to.

If the listener's telephone has a display panel, it shows the WhisperPage attempt and your extension. Additionally, an optional tone may be played to alert the listener.

At this point, the listener can either accept the WhisperPage request by doing nothing, or refuse the request by activating Do Not Disturb.

If the listener accepts the WhisperPage request, after a brief delay, you will hear a tone that tells you to begin the WhisperPage session. Additionally, your telephone's display panel shows “Whispering” and the listener's extension.

- 4 Begin speaking. When you have finished, go off-hook to end the WhisperPage session.

## More About WhisperPage

These usage tips and limitations apply to WhisperPage:

- The WhisperPage listener can refuse or end a WhisperPage session at any time by activating Do Not Disturb.
- You cannot initiate a WhisperPage session to:
  - A Supervisory Monitoring call
  - A call that is on hold
- While using WhisperPage, if either the listener or the other party on the call invokes Transfer, Park, Conference, or Forward to VM, the WhisperPage session ends.
- You can start up to two simultaneous WhisperPage sessions, one or both on hold, providing you have a line available for each session.



*For additional tips and considerations on using WhisperPage, see your system administrator.*

---

## Call Park

Use Call Park to place a call in a “holding pattern” and make it available for another person to pick up from any telephone on the system. Use the internal paging feature, the external paging feature, or both, to announce the call. The recipient can retrieve the call from any 3Com telephone or analog telephone by dialing the Call Park extension that you give during your announcement.

This feature is useful in any of these circumstances:

- The recipient is elsewhere in the building.
- You want to continue a call on another telephone, for instance, in a conference room for privacy, and transferring the call does not give you enough time to retrieve it.

When you park a call, you assign it a Call Park extension, which anyone can use to retrieve it. [Table 9](#) lists the default Call Park extension numbers. Ask your administrator to verify the Call Park extensions for your location.

**Table 9** Default Call Park Extension Numbers

System	Default Extension Numbers
4-digit dial plan	6000 – 6099
3-digit dial plan	601 – 609

If the call is not answered within 5 minutes (default) after it is parked, it rings again at the original telephone. Your administrator can modify the length of this waiting period.

To park a call:

- 1 While you are on a call, press **Feature + 444**. Or press the Access button assigned to **Call Park**.
- 2 Dial a Call Park extension from the list shown in [Table 9](#) or the list of extensions at your location.

If you select a Call Park extension that is already in use, **Park Cancelled** appears on the display panel on your 3Com Telephone, and the call rings back to your telephone. Try another Call Park extension.

To notify another user about the parked call:

- From 3Com 3101 and 3101SP Basic Telephones, select an Access button that is assigned for placing telephone calls, and dial the user's extension, or use the paging feature. See ["Paging"](#) next for details.
- From a 3Com 2101 Basic Telephone, press and release the hook switch. When you hear the dial tone, dial the user's extension, or use the paging feature. See ["Paging"](#) next for details.

To retrieve a parked call:

- 1 Pick up the handset of any telephone on the system.
- 2 Dial the Call Park extension that was assigned to the call.

---

## Paging

*Paging* is the general term used to describe the act of broadcasting a voice message through audio speakers.

You can:

- Page all extensions with speakers on the system  
This method uses default codes in [Table 10](#).
- Page a subset of all extensions on the system, called a *zone*.  
This method uses extensions that the administrator configures for this purpose.

Each method allows you to broadcast a message to different destinations, depending on your location and equipment.



Do not press the **Feature** button before you dial the Paging code.

## Paging the System

When you page the system, you broadcast a message to *all* internal extensions with speakers, to a Public Address (PA) system, or to both simultaneously. Paging codes, as described in [Table 10](#), have default values for each destination.

**Table 10** Paging Codes

Feature	3-digit dial plan (default codes)	4-digit dial plan (default codes)
<b>External Paging</b> Broadcast an announcement over a public address system that has a paging amplifier and speaker system that is connected to your NBX system	620	6200
<b>Internal Paging</b> Broadcast an announcement through the speakers on all NBX Telephones with speakers on your system except those that have been set to Do Not Disturb.	621	6201
<b>Simultaneous Paging</b> Broadcast an announcement externally and internally at the same time.	622	6202

To page, perform the following steps using your 3Com Telephone:

- 1 Pick up the handset.
- 2 Dial the appropriate paging code on your system.
- 3 Speak the broadcast message into your handset and hang up.

## Paging Zones

A page zone is a subset of internal extensions to which you can direct a broadcast using a configured extension. You can page a zone, a P.A. system, or both the zone and the P.A. system simultaneously. Zone extensions are configured by the administrator.

To discover the page zone extensions on your system:

- 1 Log in to the NBX NetSet Utility and go to **System Group Settings > Page Zones**.

The NBX NetSet utility lists the existing page zones and their extension numbers.

- 2 Click the page zone extension to list the members of that zone.



*You can view zone memberships only if the administrator authorizes you to do so.*

To page a zone, a P.A. system, or both, perform the following steps using your 3Com Telephone:

- 1 Pick up the handset.
- 2 Dial the appropriate extension to page the zone.
- 3 Speak the broadcast message into your handset.
- 4 Hang up.



*3Com Cordless Telephones, 3Com Entry Telephones, and analog telephones can initiate but cannot receive a zone page.*

## Configurable Operators

The Configurable Operators feature gives a caller who is directed to voice mail the option of going to another destination.

You can configure your own operators for those who call your extension (if the administrator allows it), and you can also use this feature as a caller to another device.

### How Configurable Operators Work

Following is a brief description of how the system directs a caller from your voice mail to operators that you designate:

- 1 If you do not answer a call, the system invokes your voice mail.
- 2 The caller listens to your prerecorded voice mail message, which includes the instruction to press an access digit (**0** or **9**) in order to reach the appropriate operator.



*When you employ a configurable operator, you must re-record your personal voice mail greeting to tell callers that an operator is available to them if they press the appropriate access digit during the voice mail greeting.*



3 The caller presses **0** or **9**.

4 The call is redirected to the operator that you designated.

The caller can leave a message, and then press **0** or **9** to transfer to a configured operator.

## Configuring the Operators

You can view the operators' settings, and modify those settings if your administrator allows it.

The operator's call-handling rules (such as call coverage) may apply to the voice mail caller. Also, you must have external-to-external permissions in order for transfers to external phone numbers to complete successfully.



*If you or the administrator do not configure operator destinations, the system directs an operator-bound caller to extension 501.*

### Viewing Your Operator Permissions

To find out if you have permission to configure operators:

1 Log in to the NBX NetSet Utility and go to **My Calling Privileges > Call Permissions**.

Your current permissions to configure the System Operator and the Personal Operator are listed.

### Configuring the Operator Destinations

To configure your own destinations for System and Personal Operator:

1 Log in to the NBX NetSet Utility and go to **NBX Voice Mail Settings > Personal Operator**.

The current System Operator and Personal Operator extensions and access digits appear. If the administrator has given you the appropriate configuration permissions, the extensions appear in editable text boxes.

2 Edit the destinations to include the appropriate extensions.

The operator destination text string cannot exceed 16 characters.

3 Click **Apply** to complete your changes.



*If you clear an operator destination (using the **Clear** check box), calls directed to that operator are directed instead to the default system operator (extension 501).*

## Using Message Waiting Indicator to Telephone

The Message Waiting Indicator (MWI) to Telephone allows a user to light a status button next to a programmable access button and leave a call back number on another telephone. This feature is distinct from voice mail in that the telephone does not ring and there is no voice mail message. The light appears next to the Access button, not the message waiting light used for voice mail. **Example:** A principal can use this feature to notify a teacher, without interrupting the class, to call the office as soon as possible.

### Sending an MWI Message

You can send an MWI message to any telephone on your NBX system that has an MWI Retrieve button enabled. Sending an MWI message turns on the light on the target telephone if it is not already lit, and leaves your telephone number as a callback number.

You cannot send an MWI message to:

- Telephones that do not have an MWI Retrieve button enabled or that have reached their MWI message limit (30)
- Remote NBX systems over external line
- Calling Groups, Hunt Groups, or ACD Groups

To send an MWI message:

- 1 Pick up the handset, and press **Feature + 412**. Or press the MWI to Ph Send access button. The display panel on your 3Com Telephone shows **Send MWI To:**
- 2 Dial the extension that you want to call and press #.
- 3 The display panel on your 3Com Telephone shows **Success**.

### Retrieving an MWI Message

To receive and retrieve an MWI message, you must have a 3Com Telephone with a display panel and a programmable access button with status light configured for MWI Retrieve. You or your administrator can also configure additional buttons for **MWI To Ph Send** and **MWI Cancel**.



*A 3Com 2101 Basic Telephone cannot receive an MWI message. An analog telephone cannot receive an MWI message.*

When the light is lit on your telephone, you can press the MWI Retrieve button, scroll through your display panel to see the caller ID, and return the call. When you press the MWI Retrieve button, you turn off the MWI light. You may still have one or more calls in a list to return.

To retrieve an MWI number:

- 1 Pick up the handset and press the MWI Retrieve access button. The display panel shows the total number of MWI messages and the number of new MWI messages on your list.
- 2 Scroll down the display panel to see the extension for the most recent MWI sender. The most recent call is at the top of the list.
- 3 Press the **Call** soft button to call the sender.

You can also retrieve an MWI message with **Feature + 414**.

### **Deleting MWI Messages**

Press the MWI Retrieve button to turn off the MWI light until you receive another MWI message. It does not delete the MWI message. Messages remain in your list until you explicitly delete them or until the NBX system is rebooted. Your telephone can store a maximum of 30 MWI messages. When it is full, it will reject new messages, so be sure to delete unneeded messages.

To delete all MWI messages:

- 1 Press the MWI Retrieve access button. The display panel shows the number of MWI messages on your list and the options to **Delete All** or **Exit**.
- 2 Press the **Delete All** soft button.
- 3 The display panel asks you to confirm the delete of the whole MWI list. Press the **Yes** soft button.

To delete a single MWI message:

- 1 Press the MWI Retrieve access button. The display panel shows how many MWI messages are on your list.
- 2 Scroll down the display panel to see the MWI message you want to delete.
- 3 Press the **Delete** soft button.
- 4 The display panel asks you to confirm the delete of the entry. Press the **Yes** soft button.

### **Cancelling an MWI Message**

After you have sent an MWI message, you can cancel it and remove it from the list on the target telephone. If it is the only unattended MWI message on the target telephone, cancelling it turns off the MWI light.

You can cancel an MWI message only from the same extension from which you sent the MWI message.

To cancel an MWI message:

- 1 Pick up the handset and press **Feature + 413**. Or press the MWI Cancel access button. The display panel on your 3Com Telephone shows **Cancel MWI To:.**
- 2 Dial the extension to which you sent the MWI message that you want to cancel and press #.
- 3 The display panel on your 3Com Telephone shows **Cancel Sent.**

---


## Dialing a Call to a Remote Office

You can dial calls between sites in your organization that are separated geographically but that are linked by a Wide Area Network (WAN) connection. Each site must have an NBX system. Typical configurations are described in the next sections.

### Using Unique Extensions

In the sample network shown in [Figure 6](#), everyone in the entire organization has a *unique* telephone extension. Whenever you make a call to an extension that is not located at your own site, your NBX system sets up a connection to the NBX system at the other extension's site.

In this example, to call a user in Dallas, a user in Chicago dials a Dallas extension (3000 through 3999). The dial plan on the Chicago NBX system sets up the necessary connection to the Dallas NBX system and then to the extension at that site.

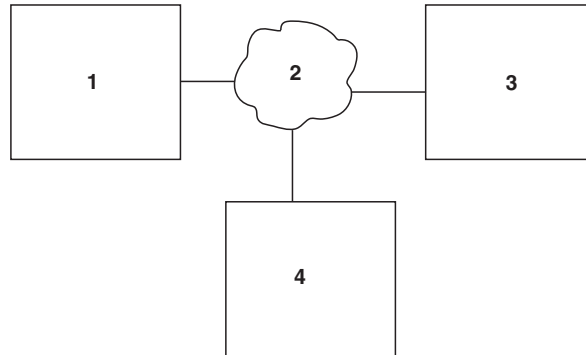**Figure 6** Using Unique Extensions to Dial Remote Offices


- 1 NBX System in Chicago  
**Extensions:** 1000–1999
- 2 Wide Area Network (WAN)
- 3 NBX System in Atlanta  
**Extensions:** 2000–2999
- 4 NBX System in Dallas  
**Extensions:** 3000–3999

**Using Site Codes**

If some users have *overlapping* telephone extensions, your administrator can configure your telephone system to use *site codes* for you to dial people at remote offices. Your administrator chooses the site codes for your system. In this example, you dial a site code first, followed by the extension at the site.

For example, as shown in [Figure 7](#), to call someone in Atlanta, a user in Chicago dials the site code 62 and then the appropriate extension (1000 through 3999). To reach a user in Dallas, a user in Chicago dials 63 and then the appropriate extension (1000 through 3999). The site code prevents conflicts between the remote extension number and a duplicated extension number at the local site (Chicago).

**Figure 7** Using Site Codes to Dial Remote Offices

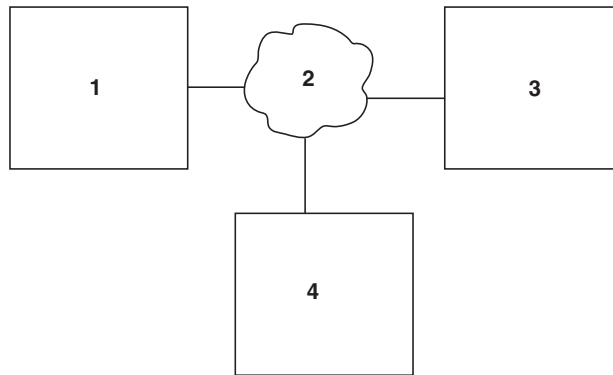

- 1 NBX System in Chicago  
**Extensions:** 1000–3999  
**Site Code:** 61
- 2 Wide Area Network (WAN)
- 3 NBX System in Atlanta  
**Extensions:** 1000–3999  
**Site Code:** 62
- 4 NBX System in Dallas  
**Extensions:** 1000–3999  
**Site Code:** 63

## Bridged Extensions

With a bridged extension, buttons and status lights on one telephone are associated with buttons and status lights on another telephone. On the primary telephone, you can perform all operations (such as dialing telephone calls, placing calls on hold, forwarding calls, and so on). On the secondary telephone, you can answer calls that are made to the primary telephone’s extension but you cannot make calls using the buttons that are associated with the primary telephone.

The administrator can create bridged extensions on:

- Any 3Com Manager’s Telephone
- Any 3Com Business Telephone
- Any 3Com 3101 or 3101SP Basic Telephone

- A 3Com 2101 Basic Telephone if a 3Com Attendant Console is associated with it. The administrator creates the bridged extension on the Attendant Console.

### Example:

If an assistant's job is to answer a manager's telephone calls, the administrator can map the manager's extension on the assistant's telephone. The manager's telephone is the primary telephone, and the assistant's telephone is the secondary telephone.



*Your administrator can map a primary telephone's extension to one or more secondary telephones.*

## Delayed Ringing

**(3Com Business Telephone, 3Com Manager's Telephone, and Attendant Console only)** The Delayed Ringing feature prevents a call on a shared line from ringing on a specific telephone until the incoming call rings on another telephone for a specified number of times.



*A shared line can be a bridged extension or an incoming analog telephone line that is mapped to more than one telephone.*

### Example:

The administrator programs (maps) a telephone extension to appear on both a manager's telephone and the assistant's telephone; that is, it is a bridged extension. The administrator has also enabled the Delayed Ringing feature on the manager's telephone and has specified 4 rings (a typical setting).

When a call comes in to the manager on that extension, the assistant's telephone rings 4 times before the call audibly rings on the manager's telephone. Even during the first silent rings, the line's status light on the manager's telephone flashes, allowing the manager to answer the call if required.

## Using Pulse Dialing

In some locations, analog telephone users must dial telephone calls using *pulse* dialing instead of *tone* dialing (also called *Dual Tone Multi Frequency*, or *DTMF*, dialing).



*Your administrator must configure the Analog Line Card ports for pulse dialing.*

**Examples:**

- Some of your telephone lines are provided by a telephone company that supports only pulse dialing while other lines are provided by a different telephone company that supports DTMF dialing.
- Your organization's telephone service provider offers low-cost, pulse-dialing-only service.
- In some situations, you must switch to DTMF dialing during a call. For example, if your call is answered by an automated attendant that requires that you enter information from your telephone keypad, you must typically enter the information using DTMF dialing.

To change from pulse dialing to DTMF during a call:

- 1 Press **Feature + 891**.
- 2 Your connection is switched from pulse to tone (DTMF) for the remainder of the call. When you hang up, the port you were using on the Analog Line Card reverts to pulse dialing mode.

You or your administrator can map a button on your telephone so that you can press the button to change from pulse dialing to DTMF during a call. When you hang up, the port that you were using on the Analog Line Card reverts to pulse dialing mode.

You can configure a personal speed dial in the NBX NetSet utility to dial a number in pulse dial mode and then to switch to DTMF. Use the left angle-bracket character (<) in the NBX NetSet utility as the command to switch to DTMF mode. You can also include the digits that you want the system to dial after it switches to DTMF. The system dials any digits after the < using DTMF tones. When you hang up, the port that you were using on the Analog Line Card reverts to pulse dialing mode.

For additional information about programming speed dials, see [“Personal Speed Dials”](#) in [Chapter 6](#).



---

## Additional Applications

These software applications are available on the *NBX Resource Pack CD*:

- NBX Call Reports \*
- NBX TAPI Service Provider (NBXTSP)
- NBX Desktop Call Assistant \*
- Complement Attendant Software \*
- pcXset™ Soft Telephone \*
- NBX Media Driver



*\* Applications with a \* have been tested with Windows XP Home Edition and Windows XP Professional Edition.*



# 8

## FEATURE CODES

This chapter describes how to use feature codes with the 3Com® Telephones. It covers these topics:

- [NBX Tones](#)
- [Feature Codes with 3Com Telephones](#)
- [Using Feature Codes](#)



*For help on accessing NBX® features from an analog or a third-party, SIP-based IP telephone, see the applicable NBX Feature Codes Guide in the NBX NetSet™ utility.*

---

### NBX Tones

As you use your 3Com Telephone to receive voice mail and use the feature codes on the NBX system, you hear these tones:

- **Dial Tone** — When you lift the receiver to place a call or begin using one of the features, you hear the normal Dial Tone (except for the circumstance described in the next bulleted item).
- **New Messages Dial Tone** — When your voice mailbox has either new or unsaved messages and you pick up your handset, you hear the New Messages Dial Tone (a repeated short tone, also called the “stutter” tone) until you delete or save every message. Your administrator can turn the New Messages Dial Tone on or off.
- **Feature Entry Tone** — When you lift the handset and press the **Feature** button to begin using one of the features, you hear the Feature Entry Tone, which is a steady sound at a lower pitch than the normal dial tone. You must enter data, for instance a feature code number, your password, or an extension, as specified in [Table 11](#).
- **Confirmation Tone** — After certain steps, as when you add a party to a conference call, you hear a short Confirmation Tone or “beep,” which confirms that you have completed the action.

- **Error Tone** — You hear the “fast busy” tone, also called the “congestion” tone, when no circuits are available. In addition, you hear the Error Tone if you make an error such as trying to enter an unsupported feature code, an invalid extension, or an invalid password. Hang up and start the feature code sequence again.
- **Feature Active Tone** — **Example:** You activate one of the “persistent” features, for instance, you lock your telephone, and then hang up. The next time that you pick up the handset on your analog telephone, you hear the Feature Active Tone. This pair of tones, a sound followed by a higher sound, is repeated to remind you that you have enabled one of these features:
  - Caller ID Restriction — All
  - Do Not Disturb
  - Forward All Calls to Voice Mail (that is, to your call coverage point)
  - Lock or Unlock Your Telephone
  - Call Forward All
  - Call Forward Busy
  - Call Forward No Answer

These features are “persistent,” that is, each one remains active until you turn it off, as described in [Table 11](#).

If you forget which of the persistent features you have activated on your telephone, log in to the NBX NetSet Utility and go to **My Calling Privileges > Feature Settings**. See “[NBX NetSet Utility](#)” in [Chapter 1](#) for information on how to log in to the NBX NetSet utility.



*Exception: If you have activated one or more persistent features **and** your mailbox has messages, you hear the New Messages Dial Tone whenever you pick up the handset until you have deleted all messages.*

---

### Feature Codes with 3Com Telephones

A large number of telephone features are available by pressing the **Feature** button on a 3Com telephone and entering a three-digit feature code. These feature codes are listed in [Table 11](#).

- If your telephone does not have a button programmed for Feature, ask your administrator to program one.
- Because your administrator determines whether some of the features that are described in this chapter are available for your telephone or

for the entire system, some of these features may not be available to you.

### 3Com Basic Telephone

Some of the features that are listed in [Table 11](#) are already available in single-purpose buttons on 3Com Basic Telephones like **Hold**, **Volume Control**, **Message**, and the **Scroll** buttons that you use to search the directories.

The 3Com 2101 Basic Telephone has three programmable buttons that are set (from left to right) at the factory to **Feature**, **Call Toggle**, and **Transfer**. On the 3Com 3101 and 3101SP Basic Telephones, the first two (from left to right) programmable buttons are line appearance buttons and the next two buttons are set to **Feature** and **Transfer**. Your administrator can change the programming on these buttons, although changing them might limit which NBX features you can use on your telephone.

For all other NBX features, use the preprogrammed **Feature** button and the feature codes listed in [Table 11](#).

---

## Using Feature Codes

Follow these steps to use NBX feature codes:

- 1 Pick up the handset.
- 2 Press the **Feature** button.
- 3 Dial the feature code and any additional values as specified in [Table 11](#).
- 4 Hang up when your call is complete or you have activated the features that you want.

**Table 11** NBX Feature Codes

Feature	Feature Code	See
<b>Account Codes</b>	F + 888 + account code + # + telephone number	<a href="#">"Account (Billing) Codes"</a> in <a href="#">Chapter 7</a>
<b>ACD, Hunt, and Calling Groups</b>	F + feature code for the group + group password + #	<a href="#">"Automatic Call Distribution Groups, Hunt Groups, and Calling Groups"</a> in <a href="#">Chapter 7</a>
<b>Automatic Callback</b>	F + 469 + hang up	<a href="#">"Using Automatic Callback"</a> in <a href="#">Chapter 5</a>
<b>Call Forward All</b>	F + 465	<a href="#">"Forwarding Incoming Calls"</a> in <a href="#">Chapter 5</a>

**Table 11** NBX Feature Codes (continued)

Feature	Feature Code	See
<b>Call Forward Busy</b>	F + 467	<a href="#">“Forwarding Incoming Calls”</a> in <a href="#">Chapter 5</a>
<b>Call Forward No Answer</b>	F + 466	<a href="#">“Forwarding Incoming Calls”</a> in <a href="#">Chapter 5</a>
<b>Call Park — Park a Call</b>	F + 444 + one of the Call Park extensions for your NBX system	<a href="#">“Call Park”</a> in <a href="#">Chapter 7</a>
<b>Call Pickup — Directed</b>	F + 455 + the extension of the ringing telephone	<a href="#">“Call Pickup”</a> in <a href="#">Chapter 7</a>
<b>Call Pickup — Group</b>	F + 456 + call pickup group number	<a href="#">“Call Pickup”</a> in <a href="#">Chapter 7</a>
<b>Call Privacy — On/Off</b>	F + 428	<a href="#">“Call Privacy”</a> in <a href="#">Chapter 7</a>
<b>Call Toggle</b>	F + 409	Toggles between two calls. To return to the first call, press the button for the line where the first call came in, press <b>Call Toggle</b> (2101), or repeat F + 409.
<b>Caller ID Restriction (CLIR — All) — On/Off</b>	F + 889	<a href="#">“Caller ID”</a> in <a href="#">Chapter 7</a>
<b>Caller ID Restriction — for Next External Call Only</b>	F + 890	<a href="#">“Caller ID”</a> in <a href="#">Chapter 7</a>
<b>Camp On — Direct</b>	F + 468 + destination extension	<a href="#">“Initiating Direct Camp On”</a> in <a href="#">Chapter 5</a>
<b>Camp On — With Call Transfer</b>	F + 420 + destination extension + F + 468	<a href="#">“Initiating Camp On With Call Transfer”</a> in <a href="#">Chapter 5</a>
<b>Class of Service Override</b>	F + 433 + your own extension + # + your password + # + the outside party’s number	<a href="#">“Class of Service Override”</a> in <a href="#">Chapter 6</a>
<b>Conference Call — Add</b>	F + 430 + telephone number + F + 430	<a href="#">“Establishing a Conference Call”</a> in <a href="#">Chapter 5</a>
<b>Conference Call — Drop</b>	F + 431	<a href="#">“Establishing a Conference Call”</a> in <a href="#">Chapter 5</a>
<b>Direct Mail Transfer</b>	F + 441 + other person’s extension + hang up	<a href="#">“Direct Mail Transfer”</a> in <a href="#">Chapter 5</a>
<b>Do Not Disturb — On/Off</b>	F + 446	<a href="#">“Do Not Disturb”</a> in <a href="#">Chapter 6</a>
<b>Extend Wrap-Up Time</b>	F + 973	<a href="#">“Extend Wrap-Up Time”</a> in <a href="#">Chapter 7</a>

**Table 11** NBX Feature Codes (continued)

Feature	Feature Code	See
<b>Flash</b>	<b>F + 260</b>	If your NBX system is connected to a Central Office by one or more Analog Line Card ports, and if the CO provides your organization with a feature such as Call Waiting that requires a flash signal, use this sequence to signal the CO to put the existing call on hold and toggle to the call that is waiting.  To return to the first call, repeat <b>F + 260</b> .
<b>Forward All Calls to Voice Mail — On/Off</b>	<b>F + 440</b>	<a href="#">“Other Ways to Manage Your Voice Mail Messages”</a> in <a href="#">Chapter 4</a>
<b>Hold</b>	<b>F + 402</b>	<a href="#">“Putting a Call on Hold”</a> in <a href="#">Chapter 5</a> .
<b>Lock Your Telephone — On/Off</b>	<b>F + 432 + password + #</b>	<a href="#">“Preventing Unauthorized Use of Your Telephone”</a> in <a href="#">Chapter 6</a>
<b>Message Waiting Indicator to Phone — Send</b>	<b>F + 412</b>	<a href="#">“Using Message Waiting Indicator to Telephone”</a> in <a href="#">Chapter 7</a>
<b>Message Waiting Indicator to Phone — Cancel</b>	<b>F + 413</b>	<a href="#">“Using Message Waiting Indicator to Telephone”</a> in <a href="#">Chapter 7</a>
<b>Message Waiting Indicator to Phone — Retrieve</b>	<b>F + 414</b>	<a href="#">“Using Message Waiting Indicator to Telephone”</a> in <a href="#">Chapter 7</a>
<b>Monitor, Whisper, Barge-In</b>	<b>F + 425</b>	<a href="#">“Supervisory Monitoring”</a> in <a href="#">Chapter 7</a>
<b>Password — Set Initially</b>	<b>F + 434 + new password + # + repeat your new password + #</b>	<a href="#">“Setting Up Your Password and Voice Mail for the First Time”</a> in <a href="#">Chapter 1</a>
<b>Password — Change</b>	<b>F + 434 + current password + # + new password + # + repeat your new password + #</b>	<a href="#">“Setting Up Your Password and Voice Mail for the First Time”</a> in <a href="#">Chapter 1</a>
<b>Pulse to Tone</b>	Make or receive a call + <b>F + 891</b>	<a href="#">“Bridged Extensions”</a> in <a href="#">Chapter 7</a>
<b>Redial</b>	<b>F + 401</b>	<a href="#">“Using the 3Com Telephone Display Panel”</a> in <a href="#">Chapter 5</a>
<b>Release</b>	<b>F + 111</b>	<a href="#">“Using a Headset”</a> in <a href="#">Chapter 6</a>
<b>Show Lists</b>	<b>F + 460</b>	Displays lists for you to scroll through and select.
<b>Speaker — On/Off</b>	<b>F + 104</b>	Speak (except 2101 and 3101) and listen without picking up the handset.
<b>Speed Dial — Personal List</b>	<b>F + personal speed dial number</b>	<a href="#">“Personal Speed Dials”</a> in <a href="#">Chapter 6</a>
<b>Speed Dial — System-Wide List</b>	<b>F + system-wide speed dial number</b>	<a href="#">“Personal Speed Dials”</a> in <a href="#">Chapter 6</a>
<b>Transfer</b>	<b>F + 420 + telephone number + F + 420</b>	<a href="#">“Transferring a Call”</a> in <a href="#">Chapter 5</a>

**Table 11** NBX Feature Codes (continued)

<b>Feature</b>	<b>Feature Code</b>	<b>See</b>
<b>Version</b>	<b>F + 827</b>	Displays the NBX software version.
<b>Volume Up or Down</b>	<b>F + 102</b> to raise the sound or <b>F + 103</b> to lower the sound	<a href="#">“Setting the Volume”</a> in <a href="#">Chapter 5</a>
<b>WhisperPage</b>	<b>F + 426</b> + destination extension + brief delay (0 - 9.9 sec.) then begin whispering	<a href="#">“WhisperPage”</a> in <a href="#">Chapter 7</a>
<b>Wrap-Up Time</b>	<b>F + 972</b>	<a href="#">“Wrap-Up Time”</a> in <a href="#">Chapter 7</a>



# 9

## 3COM 3105 AND 1105 ATTENDANT CONSOLES

3Com Attendant Consoles and the NBX Complement Attendant Software (CAS) application enable a receptionist to handle high call volumes efficiently. Although receptionists are the primary users of the Attendant Console and CAS, the two can also be used by busy sales representatives and others who receive a high volume of telephone calls or who make frequent calls to the same telephone numbers.

This chapter covers these features:

- [3Com Attendant Console](#) — A device that works along with 3Com Telephones to increase call handling capability. In many offices, the Attendant Console is used by a receptionist or switchboard operator, who is referred to in this guide as “the receptionist.”
- [Complement Attendant Software](#) (CAS) — A software application that allows a receptionist to answer and route calls using a personal computer. Your administrator installs the Complement Attendant Software on your computer from the *NBX Resource Pack CD*.

The Attendant Console and Complement Attendant Software can be used at the same time. However:

- When incoming calls appear on the Attendant Console, you must handle them using the buttons of the console.
- When calls appear on the CAS computer screen, you must handle them using the mouse and the CAS software features.

---

## 3Com Attendant Console

The 3Com 3105 and 1105 Attendant Consoles each have 50 Access buttons and 4 preprogrammed Feature buttons. Although the design of the two Attendant Consoles is different, the buttons work the same way. In effect, the Attendant Console is an extension of the 3Com Telephone to which it is associated.

See [Figure 8](#) for [3Com 3105 Attendant Console](#) buttons and controls and [Figure 9](#) for [3Com 1105 Attendant Console](#) buttons and controls.

### Access Buttons

The 50 Access buttons on a 3Com Attendant Console can each have two sets of assignments: 1 through 50, and 51 through 100. To toggle between the two sets of assignments, you press the **Shift** button.


Your administrator can assign features to each Access button. Possible features include:

- Status of internal telephone extensions (busy, available)
- Status of external telephone lines
- Speed dials for:
  - User extensions
  - Pager numbers
  - Cellular telephone numbers
- Message Waiting Indicators (MWI) for:
  - Group mailboxes
  - Phantom or personal mailboxes
- Time of Day Service Modes (See your administrator for details.)
- Status of ACD, Hunt, and Calling Group lines

### Feature Buttons

The four Feature buttons are preprogrammed for the most common features needed by a receptionist: Transfer, Transfer to Voicemail, Park, and Hold. The **Shift** button does not affect the operation of the Feature buttons. Your administrator can change the features assigned to each button using the NBX NetSet utility.

[Figure 8](#) and the text that follows it describe the features on the 3Com 3105 Attendant Console. [Figure 9](#) and the text that follows it describe the 3Com 1105 Attendant Console.

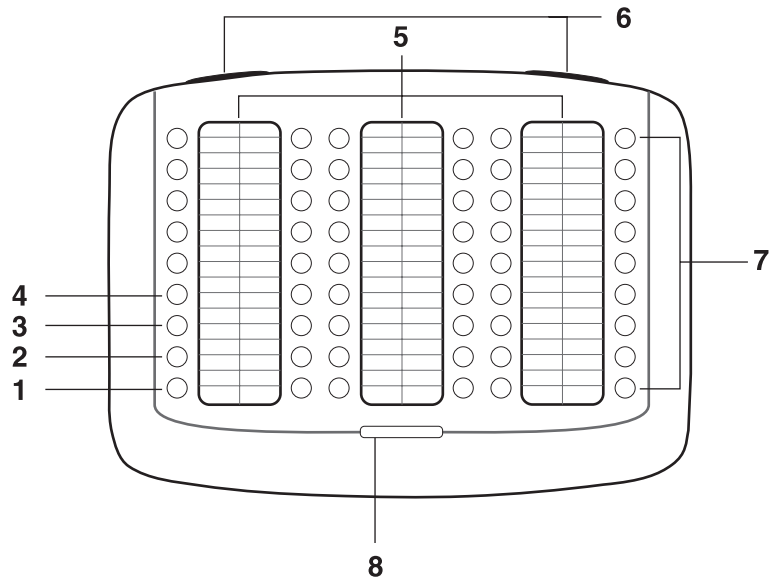**Figure 8** 3Com 3105 Attendant Console


- 1 Hold button** — Places a caller on hold.
- 2 Transfer button** — Enables you to send a call to another telephone.
- 3 Direct Mail Transfer button** — Allows you to send a caller directly to another user's voice mailbox or phantom mailbox.
- 4 Call Park button** — Places a call in a "holding pattern" so that it can be retrieved from any other telephone on the system.
- 5 Labels** — You can print labels for your Attendant Console using the LabelMaker utility in the NBX NetSet utility or on the *NBX Resource Pack CD*.
- 6 Label cover tabs** — Allow you to unsnap the plastic cover to insert labels.
- 7 Access buttons** — A light next to each button indicates whether the line is available or in use, or whether assigned features are enabled:

	The line is
Off	Available for use
Steady	In use
Blinking quickly	Ringing
Blinking slowly	On hold

- 8 Shift button** — Enables you to toggle between the two sets of Access button assignments on the Console. Press the **Shift** button to switch between assignments 1 through 50 and assignments 51 through 100. The **Shift** button LED is lighted when you have buttons 51 through 100 selected.

[Figure 9](#) and the text that follows it describe the features on the 3Com 3105 Attendant Console.

**Figure 9** 3Com 1105 Attendant Console

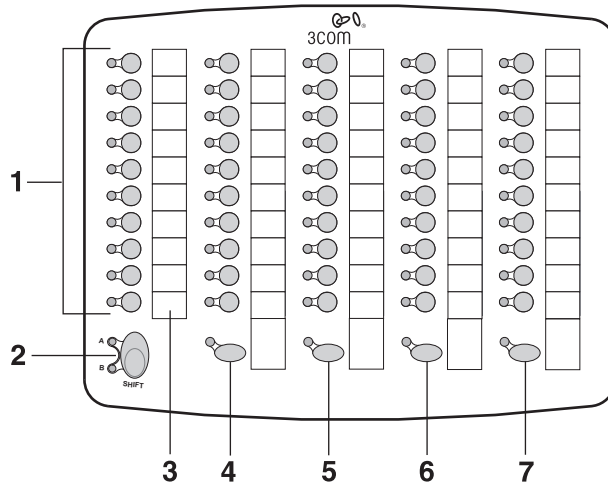

- 1 Access buttons** — A light next to each button indicates whether the line is available or in use, or whether assigned features are enabled. Status indicator lights show the following:

The line is	
Off	Available for use
Steady	In use
Blinking quickly	Ringling
Blinking slowly	On hold

- 2 Shift button** — Enables you to toggle between the two sets of button assignments on the Console. Press the **Shift** button for assignments 1 through 50. Press **Shift** again for assignments 51 through 100. The **Shift** button LED is lighted when you have buttons 51 through 100 selected.

- 3 **Labels** — You can print labels for your Attendant Console using the LabelMaker forms in the NBX NetSet utility or on the *NBX Resource Pack CD*. See [“Printing Labels”](#) in [Chapter 6](#).
- 4 **Transfer button** — Enables you to send a call to another telephone. See [“Transferring a Call”](#) in [Chapter 5](#).
- 5 **Direct Mail Transfer button** — Allows you to send a caller directly to another user’s voice mailbox or phantom mailbox. See [“Direct Mail Transfer”](#) in [Chapter 5](#).
- 6 **Call Park button** — Places a call in a “holding pattern” so that it can be retrieved from any other telephone on the system. See [“Call Park”](#) in [Chapter 7](#).
- 7 **Hold button** — Places a caller on hold. See [“Putting a Call on Hold”](#) in [Chapter 5](#).


#### Attendant Console Labels

To create, print, and save labels for your Attendant Console, see [“Printing Labels”](#) in [Chapter 6](#).

#### Opening the 3105 Attendant Console Label Cover

After you print the labels and then cut them out, remove the plastic cover from the Attendant Console by pulling up on the two tabs at the top of the Attendant Console until the top of the cover pops off.

**Figure 10** 3105 Attendant Console Label Cover Tabs

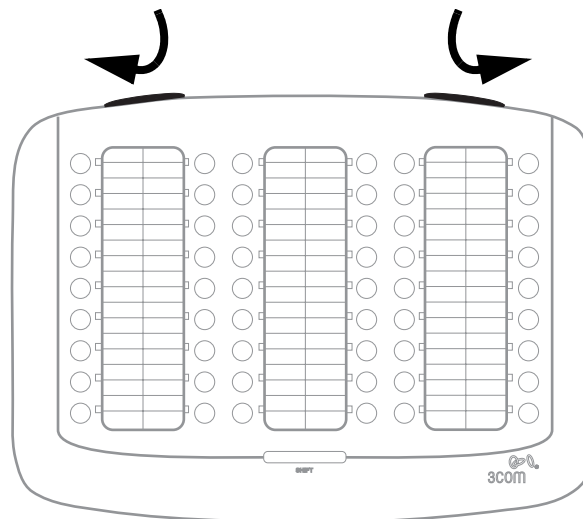

**Complement  
Attendant  
Software**

The Complement Attendant Software is an optional component, which requires a license. On your personal computer, the Complement Attendant Software displays your telephone directory in a series of tabs. Each tab sorts the directory by a different type of information, for example, by last name, by department, or by extension.

When you answer a call using the Complement Attendant Software, you can select a user from the directory and transfer the call to that user.

[Table 12](#) describes the main elements of the Complement Attendant Software screens.

**Table 12** Elements of the Complement Attendant Screens

	<b>Purpose</b>
Command Buttons	The buttons on the main screen provide a quick and easy way to perform the various system functions. There are several function buttons that are displayed above the Call List on the main screen. The behavior of these buttons is context sensitive. This means that depending on the state of the calls that are being controlled by the CAS software, certain buttons may be enabled or disabled and the operation that a button performs may also change. For example, the Answer button is only enabled if there is an incoming call. If there is a call active the Answer button will appear as a Release button and pressing it will terminate the call.
Call List	The Call List is located at the top of the main window directly below the main menu. The Call List provides caller ID information (name and number), call status, and call duration for all of the calls that are currently present on your phone. There can be more than one call shown in the call list. The number of calls in the list corresponds to the number of calls that currently exist on your phone. The maximum number of calls that can be displayed in the call list is dependent on the number of access lines that are assigned to your phone. By default the number of lines is three.
Directory List	<p>The tabs on the Directory List provide a quick and easy way to organize the names in the directory. There are three different tabs that can be used to create different views of the directory.</p> <p>Main Directory tab Lists all of the directory entries except for those that have been added to the hidden list.</p> <p>Quick List tab Lists the directory entries that have been added to the Quick List. The Quick List gives you the ability to put frequently called users into a separate, easily searchable list.</p> <p>Hidden List tab Lists the directory entries that have been added to the Hidden List.</p>
Search Field	The Search field provides the extension number and name of the person selected in the directory.
Dial Button	Click to dial a selected number to place an outgoing call.

[Table 13](#) describes Complement Attendant Software Command buttons.

**Table 13** Attendant Software Command Buttons

	<b>Purpose</b>
Answer/Release	Answers an incoming call or releases an active call.
Hold/Unhold	Places a caller on hold and removes a caller from being on hold and returns to the call.
Park	Places a call in a "holding pattern" so that it can be retrieved from another telephone on the system.
Transfer	Forwards a call to another telephone.
Cancel	Cancels a transfer or a conference.
Conference	Establishes a single call with up to three additional internal or external parties.
Monitor	Invokes Supervisory Monitoring functionality.
Camp On	Invokes the Camp On feature.
Callback	Invokes the Automatic Callback feature.
WhisperPage	Invokes the Whisperpage feature
Account	Allows you to apply an account code to the call.

**Managing Calls** To manage incoming calls using the Complement Attendant Software:

- 1 From the Call List, select the incoming call.  
If there is only one call in the Call List, then this call is automatically selected, and you can skip Step 1.
- 2 Click the Answer button or press Ctrl+A on your keyboard.
- 3 Click the button for the way that you want to handle the call. For example, to transfer a call, click **Transfer**. To park a call, click **Park**.

For additional information on using the Complement Attendant Software, see the Help system in the software.



# A

## TELEPHONE INSTALLATION AND MAINTENANCE

This chapter covers these topics:

- [Connecting the Telephone](#)
- [Attaching and Adjusting the Articulating Support Bracket](#)
- [Attaching and Adjusting the Fixed Support Bracket](#)
- [Moving Your Telephone](#)
- [Swapping Telephones](#)
- [Cleaning Your Telephone](#)
- [Troubleshooting Problems](#)

---


### Connecting the Telephone

Although the connector layout varies between telephones, all 3Com telephones and attendant consoles use these symbols to identify the connectors:



[Figure 11](#) shows underside of the 3Com 3102 Business Telephone. Connection details for each type of 3Com device are listed on the packing sheet that is shipped with the device.

**Figure 11** Underside of the 3Com 3102 Business Telephone

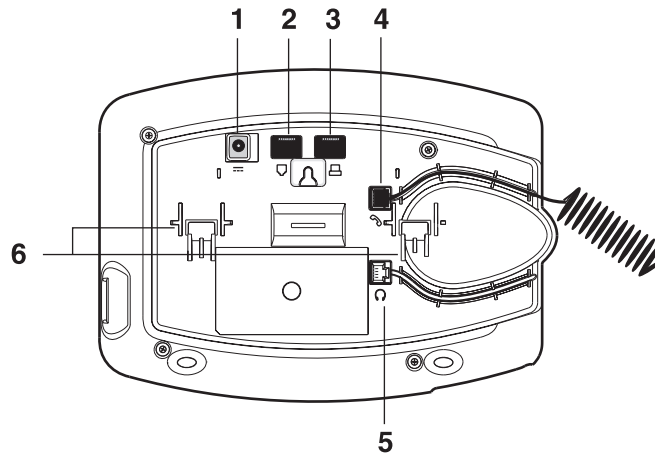

**CAUTION:** The NBX system operates over the LAN, not through traditional telephone wiring. Your telephone connects to the NBX system through an RJ-45 LAN connector instead of an RJ-11 telephone connector. Your telephone will not work unless it is connected properly. Ask your administrator if you have questions about your telephone connection.

The underside of a 3Com Telephone or attendant console includes:

- 1 AC power adapter connection.
- 2 Ethernet connector for connection to the LAN.
- 3 Ethernet connector for an optional connection to your desktop computer. Not on 3100.
- 4 Handset connector
- 5 Headset connector (3102, 3102B, and 3103 only)
- 6 Tabs for the support bracket



- For information about the underside of each 3Com Telephone, and for information about how to connect any 3Com Telephone or Attendant Console to a Power over Ethernet source, see the packing sheet that comes with the device.

- The following device support brackets have built-in strain relief clamps: 3101, 3102, 3102B, 3103, 3105, and 3100.

---


## Attaching and Adjusting the Articulating Support Bracket

The articulating support bracket is common to the following devices:

- 3Com 3105 Attendant Console
- 3Com 3101 and 3101SP Basic Telephones

[Figure 12](#), [Figure 13](#), and [Figure 14](#) show the 3Com 3102 Business Telephone. The instructions apply to all of these devices.


**Figure 12** Attaching the Support Bracket

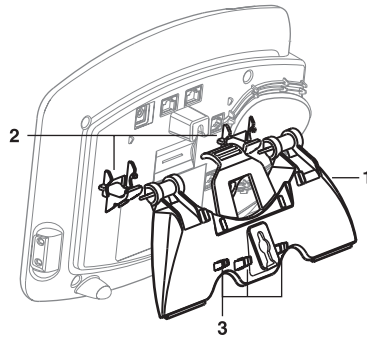

- 1 Bracket
- 2 Mounting supports
- 3 Cable management clamps

To attach the support bracket, snap the bracket into the mounting supports on the bottom of the telephone. After you connect the cables to the phone, press the cables into the cable management clamps on the stand.


**Figure 13** Adjusting the Support Bracket

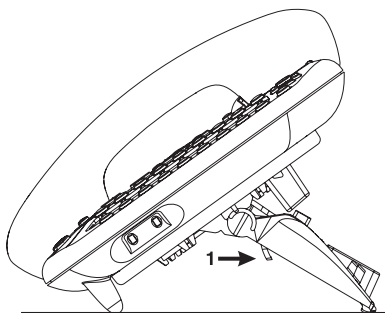

**1** Lock tab

To adjust the support bracket, press to release the lock tab, rotate the bracket to the position that you want, and then release the lock tab.

**Figure 14** Wall Mounting

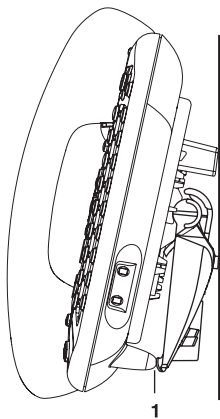

**1** Bottom supports

When you mount a device on a wall, attach the support bracket and adjust it so that the bottom of the support bracket rests against the bottom supports on the device.

Safe wall mounting requires 3/4-inch drywall and 1.5-inch drywall screws.

---

## Attaching and Adjusting the Fixed Support Bracket

The fixed support bracket is common to the following devices:


- 3Com1105 Attendant Console
- 3Com 2101 Basic Telephone

The fixed support bracket can be attached in low profile, high profile, or wall mount positions. Tabs on the underside of the telephone slip into slots on the bracket, and the opposite mounting points snap into place.

### Low-Profile and High-Profile Positions


In [Figure 15](#), the support bracket is outlined to show you how to install the device in the low-profile and high-profile desktop positions.

**Figure 15** Low-Profile and High-Profile Desktop Positions

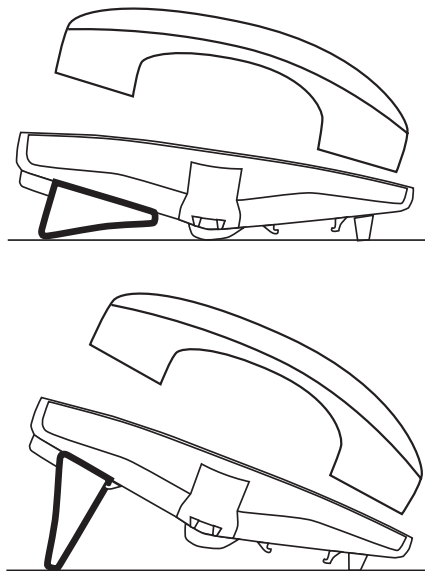


**Wall-Mount Position** To mount a device on a wall, put the bracket on the opposite end of the telephone in the low-profile position. Pull and twist the knob on the underside of the phone 90 degrees ([Figure 16](#)) so that the spring-loaded peg projects out on the top of the phone (Item 1 in [Figure 17](#)).

**Figure 16** Knob for the Handset Support Peg

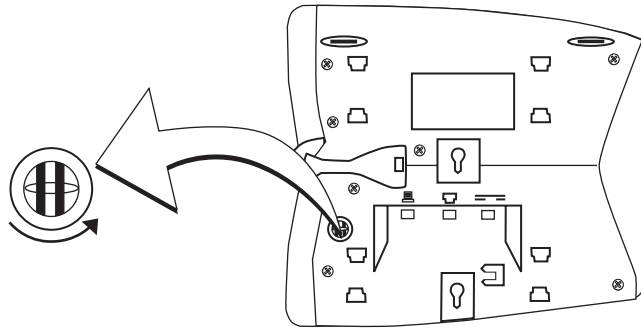

[Figure 17](#) shows an 3Com 2102 Telephone in the wall-mount position. Safe wall mounting requires 3/4-inch drywall and 1.5-inch drywall screws.

**Figure 17** Wall-Mount Position

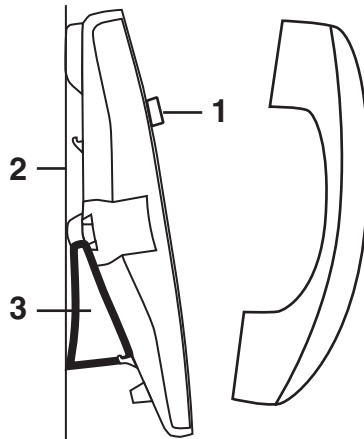

- 1 Handset support peg
- 2 Wall with a solid backing
- 3 Support bracket in the low-profile position on opposite end of telephone

### Security Wall-Mount Bracket

An optional security wall-mount bracket that ensures that the device cannot be removed by unauthorized persons is available for the following devices:

- 3Com 2101Basic Telephones

For how to order this bracket, consult your 3Com NBX Voice-Authorized Partner. Read and follow the instructions that come with the bracket.

### Moving Your Telephone

All 3Com telephones have the Automatic Telephone Relocation feature. Each telephone has a unique "address." You can move your telephone to another location, connect it to any Ethernet jack on the LAN, and still maintain all of your personalized features, speed dials, and extension number.

### Swapping Telephones

Because your extension number and personal settings are associated with your physical telephone, only your administrator can move phone extension settings from one telephone to another.

### Cleaning Your Telephone

Always unplug your telephone from the power source and from the network before you clean it. Use a soft cloth dampened with mild detergent.



**WARNING:** Failure to unplug the telephone before you clean it could result in electrical shock.

### Troubleshooting Problems

[Table 14](#) lists possible problems that you may encounter and the most likely solutions. Where possible, each solution refers to the section in this guide where you can find detailed information.

**Table 14** Possible Problems

Possible Problem	Suggested Solutions
My telephone has no dial tone. The display panel is blank.	<ul style="list-style-type: none"> <li>■ Verify that the power cord is fully inserted in the correct connector on the underside of the telephone. Use the strain relief tab to prevent the cord from becoming unplugged.</li> <li>■ Verify that each Ethernet cable is connected and that each cable is in the proper connection.</li> <li>■ Remove and add power to the telephone by unplugging the power cord at the electric outlet and plugging it back in.</li> <li>■ If the telephone is powered through a powered Ethernet cable, make sure that power is applied to the cable at its source.</li> </ul>
My telephone has "locked up."	<ul style="list-style-type: none"> <li>■ Your telephone has lost the connection to the system. Remove the Ethernet cord from the jack, and then re-insert it into the jack.</li> <li>■ Wait a few seconds. If the telephone still appears to be locked, disconnect the electrical power for your telephone, and then plug it back in.</li> </ul>
Callers cannot leave messages on my voice mail.	<ul style="list-style-type: none"> <li>■ Your mailbox may be full. Log in to your voice mailbox and delete some messages.</li> <li>■ Your telephone may be set up for Greeting Only Mailbox. Log in to the NBX NetSet utility and go to <b>NBX Voice Mail Settings &gt; Personal Greeting</b> and clear the <b>Greeting Only Mailbox</b> checkbox.</li> </ul>
When I park a call, the display panel shows "Park xtn in use," and the call returns to my telephone.	You have selected a Call Park extension that is already in use. Try another Call Park extension. Your administrator can add additional Call Park Extensions. For details, see " <a href="#">Call Park</a> " in <a href="#">Chapter 7</a> .
When I dial 9 or 8 to access an outside line, the display panel shows "All Ports Busy."	No outside lines are available. Try again in a few minutes.
After I call another user in my organization, I hear a tone but no ringing.	The other user may have the <b>Hands Free Active on Intercom</b> feature enabled. Begin speaking after you hear the tone.
On my 3Com Business Telephone or 3Com Manager's Telephone, all incoming internal calls come over my speaker phone.	You have the <b>Hands Free Active on Intercom</b> feature enabled.



**Table 14** Possible Problems (continued)

Possible Problem	Suggested Solutions
When I try to access the NBX NetSet utility, I do not get a response after I type the NBX system's IP address and press <b>Enter</b> .	Ask your administrator to verify the IP address that you typed into your web browser.
I am unable to log in to the NBX NetSet utility.	You must set up your voice mail before you can use the NBX NetSet utility. Press the <b>Message</b> button. The prompts guide you through the setup. Then use your voice mail password to access the NBX NetSet utility. If you are on an analog telephone, see <a href="#">"Setting Up Your Password and Voice Mail for the First Time"</a> in <a href="#">Chapter 1</a> .
My telephone is not forwarding my incoming calls to my voice mailbox.	Log in to the NBX NetSet utility and go to <b>Call Forward &gt; Call Forward</b> and verify that you have selected <b>Forward to Voice Mail</b> as your call coverage point. For details, see <a href="#">"Forwarding Incoming Calls"</a> in <a href="#">Chapter 5</a> .
I added a One-Touch speed dial, but the telephone does not dial that number.	Use only numeric characters in your Speed Dial setup. For details, see <a href="#">"Special Case: One-Touch Speed Dials"</a> in <a href="#">Chapter 6</a> .
I try to pick up a call ringing on another telephone using Directed Call Pickup, but it fails.	The telephone that you are using to pick up the call may not be in the same group as the telephone that is ringing and the telephone group to which the ringing telephone belongs does not allow nonmember pickup. See <a href="#">"Call Pickup"</a> in <a href="#">Chapter 7</a> .
My telephone keeps ringing after I pick up the handset.	<ul style="list-style-type: none"> <li>■ Your telephone may have lost connection to the system immediately after a call came in. Remove the Ethernet cord from the jack, then re-insert it into the wall jack.</li> <li>■ Wait a few seconds. If the telephone continues to ring, disconnect the electrical power for your telephone, and then plug it back in.</li> </ul>
The display panel shows "Wait for NCP."	Your telephone may be disconnected from the system. Hang up your telephone and wait a few seconds. Then pick up the handset. If the message still appears on your telephone display panel, contact your administrator.
I dial an external call but nothing happens.	You may be required to enter an account code to complete the call. See <a href="#">"Account (Billing) Codes"</a> in <a href="#">Chapter 7</a> .



# INDEX

---

## A

Access buttons  
    1105 Attendant Console 132  
    2101 Basic Telephone 27  
    3101 and 3101SP Basic Telephones 21  
    3105 Attendant Console 131

accessibility options 17

account codes (feature code) 125

account codes and billing codes 92

ACD 95  
    and the Do Not Disturb feature 85

ACD, hunt, calling groups (feature code) 125

administrator, definition 10

agent (supervisory monitoring) 103  
    change 105

all calls, forwarding 51

All Ports Busy message 144

analog telephones on an NBX system 13

announcements, broadcasting 110, 111

answering calls 45

applying your call permissions to another telephone 87  
    mapping a button 73

Attendant Console  
    1105 Access buttons 132  
    3105 Access buttons 131  
    creating labels 79  
    overview 130

Auto Attendant, definition 10

automatic call distribution (ACD) 95

automatic callback  
    (feature code) 125  
    button mapping 71  
    initiating 66  
    introduction 66

automatic telephone relocation 70

---

## B

barge-in 104

billing and account codes 92

blocking  
    internal and external ID 93

    unauthorized outbound calls 86

bracket  
    2101, security wall-mount 143  
    2101, telephone support 141  
    3101 and 3101SP, telephone support 139

branch offices, calling 116

bridged extensions 118, 119

broadcasting announcements 110, 111

busy line (call forwarding) 51

button mapping  
    introduction 70  
    notes 75  
    table of 71

buttons  
    1105 Attendant Console 132  
    2101 Basic Telephone 25  
    3101, 3101SP Basic Telephones 19  
    3105 Attendant Console 131

---

## C

call centers 95

call coverage point 50

call forward  
    all (feature code) 125  
    all calls 51  
    busy (feature code) 126  
    busy line 51  
    button mapping 71  
    call coverage point 50  
    default 51, 54  
    no answer (feature code) 126  
    override 55  
    precedence 55  
    problems with 145  
    ring no answer 51

call logs, on telephone display panel 47

call park  
    default extensions 109  
    introduction 109  
    park a call (feature code) 126  
    retrieving a parked call 110

Call Park button  
    1105 Attendant Console 133

- 3105 Attendant Console 131
  - call permissions
    - applying yours to another telephone 87
    - introduction 87
    - mapping a button 73
  - call pickup
    - directed 95
    - directed (feature code) 126
    - group 95
    - group (feature code) 126
    - introduction 95
    - problem 145
  - call privacy 105
    - enabling/disabling by the NBX administrator 105
    - on/off (feature code) 126
    - toggle on/off 106
  - call toggle (feature code) 126
  - Call Toggle button
    - 2101 Basic Telephone 27
    - managing incoming calls 46
  - caller ID
    - identity restriction 93
    - restricting on outbound calls 93
    - restriction (CLIR-ALL) (feature code) 126
  - calling groups
    - and the Do Not Disturb feature 85
    - overview 95
    - sample configuration 101
  - Calling Line Identity Restriction (CLIR) 93
  - camp on
    - button mapping 71
    - direct 64
    - direct (feature code) 126
    - example of direct 63
    - example of with call transfer 62
    - initiating with call transfer 63
    - introduction 62
    - with call transfer (feature code) 126
  - CAS 134
  - change agent (supervisory monitoring) 105
  - Class of Service (CoS) override 87
  - Class of Service Override
    - mapping a button 73
  - cleaning telephones 143
  - CLIR 93
  - CLIR-All
    - button mapping 71
  - CLIR-Next
    - button mapping 71
  - coaching 104
  - codes
    - account and billing 92
    - feature codes 123
    - NBX Feature Codes Guide 9
  - Complement Attendant Software (CAS)
    - computer screens and tabs 135
    - features 134
    - introduction 129
    - keyboard shortcuts 136
  - conference calls
    - add (feature code) 126
    - adding parties 60
    - drop (feature code) 126
    - dropping last party 61
    - introduction 60
  - configurable operators 112
  - confirmation tone 123
  - connecting a headset
    - general 88
  - connecting telephones 70, 143
    - caution, RJ-45 versus RJ-11 jacks 138
    - electrical power 137
  - conventions, documentation 10
  - CoS override (feature code) 126
  - creating voice mail messages 36
  - customer (supervisory monitoring) 103
- 
- D**
- delayed ringing 119
  - dial tone 123
    - troubleshooting a 3Com Telephone 144
  - dialing calls
    - other methods 49
    - redial 50
    - release with headset 88
    - switching from pulse to tone 119
  - direct camp on 63, 64
  - direct mail transfer
    - feature code 126
    - overview 60
  - Direct Mail Transfer button
    - 1105 Attendant Console 133
    - 3105 Attendant Console 131
  - directed call pickup 95
  - display panel
    - 2101 Basic Telephone 26
    - 3101 and 3101SP Basic Telephones 20
    - call logs, user directory, and speed dial lists 47
    - icons, 2101 Basic Telephone 28
  - Do Not Disturb
    - feature code 126
  - Do Not Disturb Feature
    - and call forwarding 55
  - Do Not Disturb feature 85
  - dual tone multi-frequency (DTMF) dialing 119

dynamic hunt groups 100

---

## E

electrical shock, avoiding 143

e-mail

- getting voice mail messages in 41
- notification of voice mail messages 80

error tone 124

extend wrap-up time 99

- user button mapping 72

External Paging

- dial code 111

external telephone calls, dialing 49

---

## F

Favorites menu 17

feature active tone 124

Feature button

- 2101 Basic Telephone 27
- 3101 and 3101SP Basic Telephones 22
- button mapping 72

feature code

- account code 125
- ACD, hunt, calling group 125
- automatic callback 125
- call forward all 125
- call forward busy 126
- call forward no answer 126
- call park-park a call 126
- call pickup-directed 126
- call pickup-group 126
- call privacy on/off 126
- call toggle 126
- caller ID restriction (CLIR-ALL) 126
- camp on with call transfer 126
- conference call-add 126
- conference call-drop 126
- CoS override 126
- direct camp on 126
- direct mail transfer 126
- do not disturb 126
- extend wrap-up time 126
- flash 127
- forward all calls to voice mail 127
- hold 127
- lock telephone 127
- message waiting indicator-cancel 127
- message waiting indicator-retrieve 127
- message waiting indicator-send 127
- monitor, whisper, barge-in 127
- password-change 127

password-set initially 127

pulse to tone 127

show lists 127

speaker ON/OFF 127

speed dial system-wide lists 127

speed dial-personal lists 127

whisperpage 128

wrap-up time 128

feature codes 123

Feature Codes Guide in NBX NetSet utility 13

feature entry tone 123

feature settings

- Call Forward All 51
- Call Forward Busy 51
- Call Forward No Answer 51
- CLIR-All 94
- Do Not Disturb 86
- Forward Calls to Mail 52

Flash

button mapping 72

flash (feature code) 127

forgot my password 30, 32

Forward to Voice Mail 51

forwarding calls

- all calls 51
- all, to voice mail (feature code) 127
- directly to another user's mailbox 60
- no answer 51
- to your call coverage point 50
- to your voice mailbox 50
- to your voice mailbox from a Basic Telephone 52
- unanswered calls 50

forwarding voice mail messages 35

FWD MAIL 51

---

## G

Greeting-Only mailboxes 41

group call pickup 95

group lists, personal voice mail

creating 37

modifying 39

group voice mailbox 42

---

## H

handset volume 68

headset

using 88

volume 68

hold

2101 Basic Telephone 56

- 3101 and 3101SP Basic Telephones 56
- by parking calls on a 2101 Basic Telephone 109
- feature code 127
- introduction 56
- more than one call 57
- Hold button
  - 1105 Attendant Console 133
  - 2101 Basic Telephone 27
  - 3101 and 3101SP Basic Telephones 21
  - 3105 Attendant Console 131
- hunt groups
  - and the Do Not Disturb feature 85
  - calling groups 101
  - dynamic 100
  - introduction 99
  - logging in to or out of 101
  - sample configuration 99
  - static 100

**I**

- icons, display panel
  - locked telephone 86
  - status on 2101 Basic Telephone 28
- incoming calls
  - ACD groups 96
  - answering 45
  - calling groups 99
  - forwarding directly to another user's mailbox 60
  - hunt groups 99
  - on a 2101 Basic Telephone 46
  - transferring 58
- indicators of voice mail messages
  - off-site notification 80
  - on your phone 32
- installing telephones 137
- intercom
  - internal paging 110, 111
- internal caller ID 93
- internal calls, dialing 49
- Internal Paging
  - dial code 111

**J**

- jack, Ethernet 70

**L**

- Label cover tabs
  - 3105 Attendant Console 131
- LabelMakers
  - for attendant consoles 80

- for telephones 80
- Windows Desktop shortcut 80
- labels
  - Attendant Console, creating 79
  - printing 79
- length of voice messages 30
- lights, status
  - 3101 and 3101SP Basic Telephones 23
- listening to messages 32
  - from remote telephones 33
- lists
  - modifying personal voice mail group lists 39
  - personal voice mail group lists 37
  - printing speed dials 79
- locking your telephone
  - blocking unauthorized calls 86
  - button mapping 73
  - feature code 127
  - off-site notification restriction 83
- logs on NBX telephone display panel
  - answered calls 47
  - dialed calls 47
  - missed calls 47
- long-distance calls, preventing 86

**M**

- mail group lists
  - personal 37
  - system 37
- mailboxes
  - greeting-only 41
  - group 42
  - phantom 42
  - setting up personal 13
- maintenance, telephone 137
- message
  - waiting indicator-cancel (feature code) 127
  - waiting indicator-retrieve (feature code) 127
  - waiting indicator-send (feature code) 127
- Message button
  - 2101 Basic Telephone 27
  - 3101 and 3101SP Basic Telephones 21
- message waiting indicator for voice mail
  - 2101 Basic Telephone 32
  - 3101 and 3101SP Basic Telephones 20, 32
  - analog telephones 32
- message waiting indicator to telephone 114
  - cancelling 115
  - deleting 115
  - retrieving 114
  - sending 114
- messages

- creating and sending 36
- forwarding 35
- listening, from a remote location 33
- listening, from telephone 33
- listening, NBX NetSet utility 32
- maximum length 30
- private 40
- replying to 35
- sending 36
- urgent 41
- Messaging, NBX 29
- microphone
  - 3101SP Basic Telephone 21
- monitor 103
- monitor, whisper, barge-in (feature code) 127
- monitoring, supervisory 102
- moving telephones 70, 143
- MSG button
  - 2101 Basic Telephone 27
- Mute button
  - 3101 and 3101SP Basic Telephones 21
- MWI
  - See message waiting indicators

---

## N

- name announcement
  - changing 31
  - setting the first time 14
- NBX Basic Telephone
  - 2101 25
  - 3101 and 3101SP 19
- NBX Messaging 29
- NBX NetSet password
  - changing 14
  - forgotten 14
  - initial 14, 16
  - overview 30
- NBX NetSet utility
  - getting started 16
  - listening to messages 32
  - overview 15
  - problems with 145
- new messages dial tone 123
- notification, off-site 80

---

## O

- off-site notification 80
  - managing using the telephone 84
- operators
  - configuring 112
  - viewing 113

- other function (for mapping feature codes) 73
- outbound calls
  - dialing 49
  - speed dials 76

---

## P

- page zones
  - extensions 111
- pager, off-site notification 80
- paging 110
  - required equipment 110, 111
  - to announce a parked call 109
  - zones 112
- Park button
  - 3105 Attendant Console 131
- parking a call
  - overview 109
  - retrieving a parked call 110
- password
  - change (feature code) 127
  - set initially (feature code) 127
- passwords
  - changing in the NBX NetSet utility 16
  - changing on the telephone 30
  - forgotten 30, 32
  - security tips 31
- permissions
  - allowed calls 87
  - viewing your call permissions 87
- persistent features 124
- personal greeting
  - changing 31
  - selecting 31
  - setting the first time 14
- personal speed dial
  - button mapping 74
- personal speed dial numbers 76
- personal voice mail group lists
  - creating 37
  - modifying 39
- phantom mailboxes 42
- picking up calls 95
- position, wall-mount bracket 142
- printing labels 79
- printing speed dial lists 79
- privacy list domain (supervisory monitoring) 103
- private messages 40
- problems, solving 137
- programmable Access buttons
  - 1105 Attendant Console 132
  - 2101 Basic Telephone 27
  - 3101 and 3101SP Basic Telephones 21, 22

3105 Attendant Console 131  
 public address system 110, 111  
 pulse dialing 119  
 pulse to tone (feature code) 127

---

**Q**

Quick Reference sheets 17

---

**R**

receptionist  
 and the Attendant Console 130  
 and the Complement Attendant Software (CAS) 134  
 definition 10  
 Redial button  
 button mapping 74  
 redialing calls 50  
 feature code 127  
 Release button  
 button mapping 74  
 release, feature code 127  
 releasing calls with headset 88  
 relocating telephones 143  
 remote notification 80  
 remote offices, calling 116  
 replying to voice mail messages 35  
 ring no answer (call forwarding) 51  
 ringer  
 tone, choosing 70  
 volume 68  
 ringing  
 delayed 119  
 Do Not Disturb 85  
 RJ-11 jack caution, avoiding use with 3Com Telephones 138  
 RJ-45 jack caution, using instead of RJ11 138

---

**S**

scroll buttons  
 2101 Basic Telephone 27  
 3101 and 3101SP Basic Telephones 21  
 security  
 passwords 30, 31  
 preventing unauthorized outbound calls 86  
 wall-mount bracket, 2101 143  
 sending messages 36  
 shared telephone lines  
 bridged extensions 118  
 delayed ringing 119  
 hunt groups 95

Shift button  
 1105 Attendant Console 132  
 3105 Attendant Console 132  
 show lists (feature code) 127  
 silent monitor 103  
 silent ring 70  
 Simultaneous Paging  
 dial code 111  
 SIP (Session Initiation Protocol) 60  
 site codes 117  
 soft buttons  
 2101 Basic Telephone 27  
 3101 and 3101SP Basic Telephones 20  
 software, Complement Attendant (CAS) 134  
 sound volume  
 2101 Basic Telephone 27  
 3101 and 3101SP Basic Telephones 21  
 Speaker button  
 3101SP Basic Telephone 21  
 speaker ON/OFF (feature code) 127  
 speaker phone  
 3101SP Basic Telephone 21  
 problems with 144  
 using 50  
 volume 68  
 speed dial  
 personal lists (feature code) 127  
 system-wide lists (feature code) 127  
 speed dials  
 One-Touch 78  
 personal speed dial numbers 76  
 printing lists of 79  
 problems with 145  
 system-wide speed dial numbers 78  
 status icons, 2101 Basic Telephone display panel 28  
 supervisory monitoring 102  
 monitoring status 106  
 supervisor 103  
 view domain membership information 106  
 support brackets  
 1105, attaching 141  
 2101, attaching 141  
 2101, security wall-mount 143  
 3101 and 3101SP, attaching 139  
 3105, attaching 139  
 system speed dial  
 button mapping 74  
 system voice mail groups 37

---

**T**

telephone icons, 2101 Basic Telephone display panel 46



- telephone maintenance 137
- telephone number, for off-site notification 81
- telephone support brackets
  - 1105 141
  - 2101 141
  - 3101 and 3101SP 139
  - 3105 139
- telephones
  - cleaning 143
  - connecting 137
  - mounting 1105 141
  - mounting 2101 141
  - mounting 3101 and 3101SP 139
  - mounting 3105 139
  - moving and swapping 143
- time-of-day calling restrictions 86
- toll calls, preventing others from dialing 87
- tone dialing 119
- tones, 3Com Telephones 123
- tones, ringer selection 70
- Transfer button
  - 1105 Attendant Console 133
  - 2101 Basic Telephone 27
  - 3101 and 3101SP Basic Telephones 23
  - 3105 Attendant Console 131
- transferring calls 58
  - feature code 127
- troubleshooting
  - introduction 137
  - list of possible problems 143

---

## U

- unauthorized use of telephone, preventing 86
- urgent messages 41
- user button mapping 70
- user, definition 10

---

## V

- version, feature code 128
- voice mail
  - accessing through e-mail 41
  - changing your password 30
  - components 29
  - creating messages 36
  - forwarding 35
  - greeting-only mailbox 41
  - group mailboxes 42
  - groups 37
  - indicators 32
  - initializing 13
  - listening remotely 33

- listening to messages 32
- maximum message length 30
- password security tips 31
- personal group lists, creating and modifying 39
- private messages 40
- problems with 144
- replying to 35
- retrieving from a remote location 33
- sending 36
- setting up 13
- urgent messages 41
- volume control buttons
  - 2101 Basic Telephone 27
  - 3101 and 3101SP Basic Telephones 21
- volume settings 68
  - feature codes 128

---

## W

- Wait for NCP message 145
- wall-mount bracket 142
- whisper 104
- whisperpage 107
  - (feature code) 128
  - access privileges 108
  - button mapping 75
- Windows Desktop shortcut, for LabelMaker 80
- wrap-up time 98
  - user button mapping 75

---

## Z

- zone paging 110



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>