


Canon

LE-5W

MULTIMEDIA PROJECTOR

User's Manual

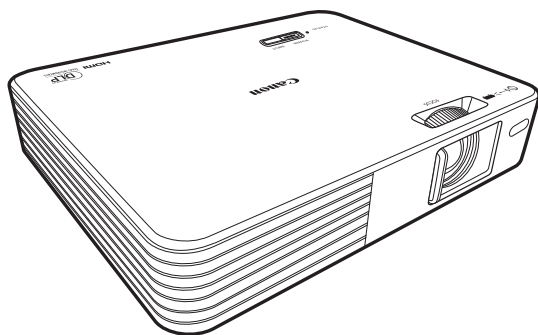

HDMI

PICTURE BY
DLP
TEXAS INSTRUMENTS

Thank you very much for purchasing this Canon product.

The Power Projector LE-5W (from here on "this product" or "projector"), provides a high performance LED optics engine and a variety of features for increased usability.

Features and design

The projector provides the following main features.

- Long-life LED light source
LEDs provide a far longer service life when compared to standard lamps.
- Optical engine using DLP technology
Allows you to display bright images at WXGA resolutions.
- Easy to carry
The compact, light-weight design allows you to easily take the projector on business trips, for leisure, and so on.
You can view documents, videos, or photos without having to worry about picking a location.
- Variety of image input
Built-in input terminals (P19) such as PC, video, HDMI, USB, and SD card, allow you to connect a wide variety of devices.
- Built-in stereo speaker
The 2.5 watt stereo speaker allows you to enjoy audio with a true sense of realism.
There is also an audio out terminal.
- Easy-to-use On-screen Display (OSD) menu.
- Wide variety of functions
The projector supports document viewers (P51), internal memory (P48), SD cards (P48), USB storage devices (P48), and USB Display (P54).

Explanation of the symbols used in this manual

The following describes the meaning of symbols used in this manual

- ◆ Indicates operational instructions and limitations.

Table of contents

Features and design	2
Safety instructions	5

Introduction.....17

Contents of package	18
Projector part names	19
Control panel and indicators	20
Remote control.....	21
Third party software.....	23

Projecting.....25

Basic operations	26
Connecting the power cord	26
Turning on the projector	27
Adjusting the focus	27
Setting the language.....	28
Switching the input signal.....	28
Adjusting volume.....	29
Hiding the image.....	30
Turning off the projector.....	30
Storing the projector in the carrying bag.....	31
Positioning the projector	32
Adjusting the size of the image.....	32
Adjusting the image height.....	33
Connecting to a computer	34
Connecting using the PC input jack.....	34
Adjusting the image automatically.....	35
Connecting using the HDMI input jack.....	36
Connecting using the mini-B USB jack.....	36
Connecting to video devices	38
Connecting HDMI devices	38
Connecting to a component video device.....	39
Connecting to a Video device.....	40
Connecting an external speaker	41
Connecting an external memory .	42
Inserting an SD card	42

Connecting to a USB storage device.....	43
---	----

Menu function

settings.....44

About the menus.....	45
Home screen	46
Projecting files on Internal Memory, USB Drive, and SD Card	48
Projecting photos	50
Playing music	50
Playing videos	51
Projecting documents	51
Using USB Streaming.....	54
USB Display.....	54
USB File Transfer	56
Using the Setup menu	58
Using the Setup menu.....	58
Setup menu configuration	58
Basic menu	59
Advanced menu.....	62
Videos Settings menu.....	65
Photos Settings menu	67
Music Settings menu	69
Information menu	70
Language menu	73
Key Lock.....	74
Using the On-Screen Display (OSD).....	75
Image Adjustment	76
Aspect.....	79
Screen Color	80
Phase.....	80
H.Size	81
3D Invert.....	81
Keystone.....	82
LED Mode.....	82
HDMI level range.....	83
Setup.....	83
Information.....	84
Watching 3D content	85

Appendix87

LED Indicators.....	88
Troubleshooting	89
The projector does not turn on.....	89
No image.....	90
No sound.....	91
Blurred image	91
The image does not display properly.....	92
Power shuts down	92
Remote control does not work.....	93
Care and Cleaning	94
Cleaning the lens.....	94
Cleaning the projector.....	94
Timing chart	95
Projector specifications	98
Copyright information.....	100
Notes on copyrights	100
Trademarks	100
On-screen menu tree.....	101
Setup menu configuration	102





Safety instructions

Before installing and operating the projector, read this manual thoroughly.

This projector provides many convenient features and functions. Operating the projector properly enables you to manage those features and maintain it in good condition for many years to come.

Improper operation may result in not only shortening the product life, but also malfunctions, fire hazards, or other accidents.

If your projector does not seem to be operating properly, read this manual again, check operations and cable connections, and try the solutions in the “Troubleshooting” section in the user’s manual. If the problem still persists, contact the Canon Customer Support Center.

	<p style="text-align: center;">CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	
<p style="text-align: center;">CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		
	<p>THIS SYMBOL INDICATES THAT DANGEROUS VOLTAGE CONSTITUTING A RISK OF ELECTRIC SHOCK IS PRESENT WITHIN THIS UNIT.</p>	
	<p>THIS SYMBOL INDICATES THAT THERE ARE IMPORTANT OPERATING AND MAINTENANCE INSTRUCTIONS FOR THIS UNIT IN THE OWNER’S MANUAL.</p>	


<p>CAUTION</p> <p>Not for use in a computer room as defined in the Standard for the Protection of Electronic Computer / Data Processing Equipment, ANSI / NFPA 75.</p>



Safety Precautions

WARNING:

- **THIS APPARATUS MUST BE GROUNDED.**
- **TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**
- This projector produces intense light from the projection lens. Do not stare directly into the lens, otherwise eye damage could result. Be especially careful that children do not stare directly into the beam.
- Install the projector in a proper position. Otherwise it may result in a fire hazard.
- Allowing the proper amount of space on the top, sides, and rear of the projector cabinet is critical for proper air circulation and cooling of the unit. The diagram shown here indicates the minimum space required. If the projector is to be built into a compartment or similarly enclosed, these minimum distances must be maintained.

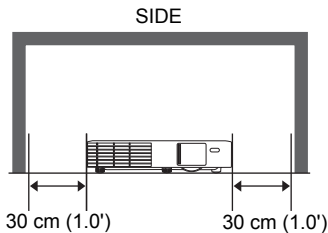

- Do not cover the ventilation slots on the projector. Heat build-up can reduce the service life of your projector, and can also be dangerous.
- If the projector is unused for an extended time, unplug the projector from the power outlet.



CAUTION ON HANGING FROM THE CEILING

When hanging the projector from the ceiling, clean the air intake vents and top of the projector periodically with a vacuum cleaner. If you leave the projector unclean for a long time, the cooling fans can be clogged with dust, and it may cause a breakdown or a disaster.

DO NOT SET THE PROJECTOR IN GREASY, WET, OR SMOKY CONDITIONS SUCH AS IN A KITCHEN TO PREVENT A BREAKDOWN OR A DISASTER. IF THE PROJECTOR COMES IN CONTACT WITH OIL OR CHEMICALS, IT MAY BECOME DETERIORATED.

■ READ AND KEEP THIS MANUAL FOR LATER USE.

All the safety and operating instructions should be read before beginning to operate the product.

Read all of the instructions given here and retain them for later use. Unplug this projector from the AC power supply before cleaning. Do not use liquid or aerosol cleaners on the projector. Use a damp cloth for cleaning.

Follow all warnings and instructions marked on the projector.

For added protection of the projector during a lightning storm, or when it is left unattended or unused for long periods of time, unplug it from the wall outlet. This will prevent damage due to lightning and power surges.

Do not expose this unit to rain or use near water. For example, in a wet basement, near a swimming pool..., etc.

Do not use attachments not recommended by the manufacturer as they may result in hazards.

Do not place this projector on an unstable cart, stand, or table. The projector may fall, causing serious injury to a child or adult, and serious damage to the projector. Use only with a cart or stand recommended by the manufacturer, or sold with the projector. For wall or shelf mounting, use a tool such as a mounting kit to secure the projector.

An appliance and cart combination should be moved with care. Sudden stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



Slots and openings in the rear and front of the cabinet are provided for ventilation, to insure reliable operation of the equipment and to protect it from overheating.

The openings should never be covered with cloth or other materials, and the bottom opening should not be blocked by placing the projector on a bed, sofa, rug, or other similar surface. This projector should never be placed near or over a radiator or heat register.

This projector should not be placed in a built-in installation such as a book case unless proper ventilation is provided.

Never push objects of any kind into this projector through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind onto the projector.

Do not install the projector near the ventilation duct of air-conditioning equipment.

This projector should be operated using only the type of power source indicated on the marking label. If you are not sure of the type of power supplied, contact the Canon Customer Support Center or local power company.

Do not overload wall outlets and extension cords as this can result in fire or electric shock. Do not allow anything to rest on the power cord. Do not locate this projector where the cord may be damaged by people walking on it.

Do not attempt to service this projector yourself as opening or removing covers may expose you to dangerous voltages or other hazards. Refer all servicing to qualified service personnel.

Unplug this projector from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a When the power cord or plug is damaged or frayed.
- b If liquid has been spilled into the projector.
- c If the projector has been exposed to rain or water.
- d If the projector does not operate normally after following the operating instructions. Adjust only those controls that are covered in the operating instructions as improper

adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the projector to normal operating condition.

- e If the projector has been dropped or the cabinet has been damaged.
- f When the projector exhibits a distinct change in performance-this indicates a need for servicing.

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or injury.

Upon completion of any service or repairs to this projector, ask the service technician to perform routine safety checks to determine that the projector is in safe operating condition.


AC Power Cord Requirement

The AC Power Cord supplied with this projector meets the requirements for use in the country you purchased it.

AC Power Cord for the United States and Canada:

The AC Power Cord used in the United States and Canada is listed by the Underwriters Laboratories (UL) and certified by the Canadian Standard Association (CSA).

The AC Power Cord has a grounding-type AC line plug. This is a safety feature to ensure the plug fits into the power outlet. Do not try to tamper with this safety feature. Should you be unable to insert the plug into the outlet, contact your electrician.

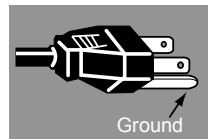

THE SOCKET-OUTLET SHOULD BE INSTALLED NEAR THE EQUIPMENT AND EASILY ACCESSIBLE.



Only for European Union and EEA (Norway, Iceland and Liechtenstein)

These symbols indicate that this product is not to be disposed of with your household waste, according to the WEEE Directive (2012/19/EU), the Battery Directive (2006/66/EC) and/or national legislation implementing those Directives.



If a chemical symbol is printed beneath the symbol shown above, in accordance with the Battery Directive, this indicates that a heavy metal (Hg = Mercury, Cd = Cadmium, Pb = Lead) is present in this battery or accumulator at a concentration above an applicable threshold specified in the Battery Directive.



This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE) and batteries and accumulators. Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources.

For more information about the recycling of this product, please contact your local city office, waste authority, approved scheme or your household waste disposal service or visit www.canon-europe.com/weee, or www.canon-europe.com/battery.

For CA, USA only

Included lithium battery contains Perchlorate Material - special handling may apply.

See www.dtsc.ca.gov/hazardouswaste/perchlorate/ for details.

Federal Communication Commission Notice

Multimedia Projector, Model: LE-5W

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

The cable with a ferrite core provided with the projector must be used with this equipment in order to comply with Class B limits in Subpart B of Part 15 of the FCC Rules.

Use of a shielded cable is required to comply with class B limits in Subpart B of Part 15 of FCC Rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the instructions. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A. Inc.

One Canon Park, Melville, New York 11747, U.S.A.

Tel No. 1-800-OK-CANON (1-800-652-2666)

Precautions for Use

As this section contains important safety-related information, be sure to read the following carefully beforehand in order to use your projector correctly and safely.



Warning

If the following situations occur, turn the power off, remove the power plug from the power outlet and contact the Canon Customer Support Center. Failure to do so could cause a fire or result in an electric shock.

- If smoke is emitted
- If an unusual smell or noise is emitted
- If a loud noise is heard and the light source turns off
- If water or other liquid has entered the projector
- If metal or any other foreign material has entered the projector
- If the projector is knocked over or dropped and the cabinet is damaged



Warning

Pay attention to the following points for handling the power cord. Failure to pay attention to these points could cause a fire, electric shock or personal injury.

- Do not place any objects on the power cord and do not allow it to become trapped under the projector. The power cord may be damaged.
- Do not cover the power cord with a carpet.
- Do not excessively bend, twist, pull or make modifications to the power cord.
- Keep the power cord away from heaters and other sources of heat.
- Do not use the power cord when it is bent finely, coiled or bundled.
- Do not use a damaged power cord. If your power cord is damaged, contact the Canon Customer Support Center.
- Do not use any power cord other than the type that is included with this projector.
- Be sure to connect the ground wire of the power cord to ground. Failure to do so could result in an electric shock.
- Be sure to connect the ground wire before connecting the power plug to the outlet. Also when you disconnect the ground wire, be sure to unplug the power plug from the outlet beforehand.



Warning

Pay attention to the following point to prevent the small parts from being accidentally swallowed by children.

- Small parts such as the remote control battery, battery holder and adjustable feet that were detached may be accidentally swallowed by small children, which may result in choking. Parents/Guardians should keep them out of reach of children. If swallowed, consult a doctor immediately.



Warning

Pay attention to the following points regarding the power source, power plug and handling of the connector. Failure to do so could result in a fire, electric shock or personal injury.

- Do not use any power source with a voltage other than the voltage indicated (AC 100 – 240 V).
- Do not pull the power cord and be sure to hold the power plug or connector when removing. The cord could be damaged as a result.
- Do not insert any metal objects into the contact parts of the power plug or connector.
- Remove the power plug from the outlet before performing cleaning or maintenance of the projector.
- Do not remove the power plug or connector with wet hands.
- Insert the power plug and connector securely up to the base. Additionally, do not use a damaged power plug or an outlet that is loose.
- If using an extension cord attached to the outlet, make sure that the total electric power consumption of connected devices does not exceed the rated capacity.
- Periodically inspect the power plug and outlet and remove any dust or dirt from between the plug and the outlet.

Precautions for Installation



Warning

Pay attention to the following points regarding installation and handling of the projector. Failure to do so may cause a fire, electric shock or personal injury.

- Do not use the projector in a bathroom or shower room.
- Do not use the projector in rain or snow, by the sea, or in close proximity to a body of water.
- Do not place containers containing a liquid on top of the projector.
- Do not place the projector in any location where it will be exposed to oily smoke or steam, such as a kitchen work surface or table etc.
- Do not touch the projector itself, the power cord, or the cable if lightning strikes.



Warning

Pay attention to the following points regarding installation and handling of the projector. Failure to do so may cause a fire, electric shock or personal injury.

- Do not move the projector until you have switched off the power, removed the power plug from the power outlet and unplugged any other cables.
- Do not remove the cabinet from the projector or disassemble it. The interior of the projector contains high-voltage components as well as parts that are hot. These could cause an electric shock or burn. If inspection, maintenance or repair is required, contact the Canon Customer Support Center.
- Do not disassemble or modify the projector (including consumable parts) or the remote control.
- Do not insert any object into vents in the projector, such as the air intake vent or exhaust vents.
- Do not place a pressurized can in front of the exhaust vents. The pressure of the contents of the can may increase due to heat from the exhaust vents and this could result in an explosion.
- As strong light beams are emitted while the projector is in use, do not look directly into the projector lens. Doing so could cause an eye injury. Pay particular attention in preventing young children to do so.
- When giving a presentation in front of the projector while it is projecting an image, conduct your presentation from a position where your shadow will not be cast on the screen and where you do not feel blinded by light from the projector.



Caution

Pay attention to the following points regarding installation and handling of the projector.

- If the projector will not be used for a long period of time, be sure to remove the power plug from the power outlet to ensure safety. Failure to do so could cause a fire.
- The temperature of the cabinet around and above the exhaust vents can become hot during projector operation. Touching these areas during operation could cause burns to the hands. Do not touch these areas. Doing so may cause burns. Pay particular attention in preventing young children from touching these parts. Additionally, do not place any metal objects on these areas. Due to the heat from the projector, doing so could cause an accident or personal injury.



Caution

Pay attention to the following points regarding installation and handling of the projector.

- Do not place any heavy objects on top of the projector or sit/stand on it. Pay particular attention to prevent small children from doing so. The projector may be knocked over and this could result in damage or a personal injury.
- Do not place the projector on an unstable or slanted surface. Doing so may cause the projector to fall or be knocked over and could result in a personal injury.
- Do not place any objects in front of the lens while the projector is operating. Doing so could cause a fire.
- When cleaning off dust or dirt from the projector lens etc., do not use any kind of spray that is flammable.
- If the projector is used for a long period of time, dust could accumulate inside the projector. This could cause a fire or malfunction. It is recommended that periodic maintenance of the projector be performed. For details of maintenance costs, contact the Canon Customer Support Center.

Precautions for the remote control batteries

Warning

Pay attention to the following points regarding handling of batteries. Failure to do so could result in a fire or injury.

- Do not place the batteries in a fire or apply heat to, short circuit or disassemble the batteries.
- Do not attempt to recharge the batteries.
- Insert the batteries in the correct + / - positions.
- If any liquid leaks from the batteries and comes into contact with skin, wash off thoroughly with water.

Caution for viewing 3D content

Caution

Pay attention to the following points when viewing 3D content.

- Photosensitive patients, patients with heart disease, pregnant women, elderly people, and people with serious illness and/or with a history of epilepsy should not view 3D content.
- We advise that you should refrain from viewing 3D content if you are in bad physical condition, need sleep or have been drinking alcohol.
- Stop watching 3D content if you experience the following symptoms. If you experience such symptom, immediately stop viewing 3D content and take a break until the symptom has subsided.
 - You see doubly-blurred images or you cannot view the image stereoscopically.
 - You feel fatigue or discomfort.
- Take breaks when viewing 3D content for an extended period of time. As this may cause eye fatigue. Viewing 3D content for an extended period of time or viewing them from an oblique angle can cause eye strain.
- Parents should accompany and monitor their children as children cannot properly express discomfort with 3D content viewing. Children who are six year of age or younger should not view 3D content.
- The optimum 3D viewing distance from the screen is about 3 times of the vertical screen size or more and your eyes should be level with the screen.

For Safe Use

Pay attention to the following points when carrying or transporting the projector.

- This projector is a precision instrument. Do not knock it over or subject it to impacts. Doing so may cause a malfunction.

Pay attention to the following points when installing or using the projector.

- Be sure to install the projector in a location where the air intake and exhaust vents are separated from the wall by more than 30 cm (1.0'). Failure to do so could cause a malfunction.
- Do not install the projector in a location that is damp, or where there is a lot of dust, oily smoke or tobacco smoke. Doing so could cause contamination of optical components such as the lens and the mirror and may result in deterioration of image quality.
- Do not touch the lens with bare hands. Doing so may result in deterioration of image quality.
- If the projector is suddenly moved from a location where the temperature is low to a location where the temperature is high, or if the temperature in the location where the projector is installed increases suddenly, moisture in the air could cause condensation to form on the projector lens or mirror. This may cause a blurred image. Wait until the condensation has evaporated for the image projected to return to normal.
- Do not install the projector in a location where the temperature is high or low. Doing so may cause a malfunction.

Operating temperature: 0°C to 40°C

Humidity level: 10% to 90%


Storage temperature: -30°C to 60°C

- Do not install the projector near high-voltage electrical power lines or an electrical power source.
- Do not use the projector on a soft surface such as carpet or sponge mat, etc. Doing so could cause heat to build up inside the projector and this could result in a malfunction.
- Do not block the air intake or exhaust vents of the cooling fan. Doing so could cause heat to build up inside the projector and may cause a malfunction.
- Do not place any objects on top of the projector that may change shape or color due to heat.
- When using the projector at altitudes greater than 1500 m, please turn on the High Altitude Mode.
- Please do not brush or rub the surface of the top plate of the projector. The surface may be damaged.


Introduction

Contents of package


Carefully unpack and verify that you have all of the items shown below. If any of these items are missing, contact your place of purchase.

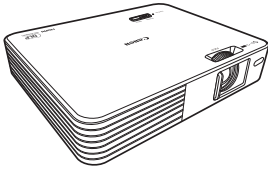


Projector

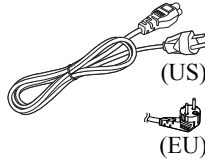


Power cord (1.8 m)

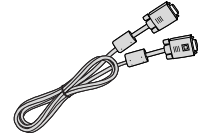

Computer cable (1.8 m)
(5K.1VC09.501)

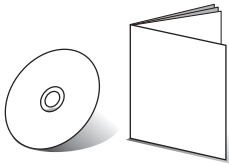


User's Manual (CD-ROM)
and Quick Start Guide

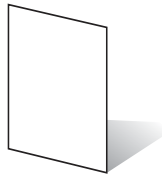

Warranty card




Carrying bag

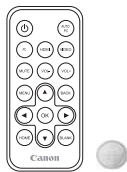

Remote control
(Model number: LE-RC01)
Battery (CR2025)


Projector part names

Front/upper side

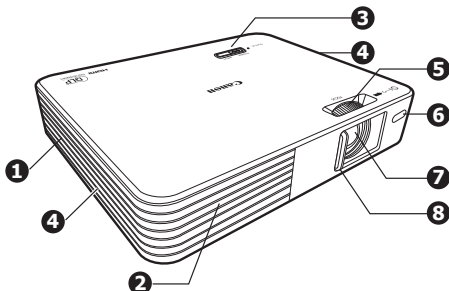


1. Air intake vent (P20)
2. Air exhaust vent (P20)
3. Control panel and indicators (P20)
4. Internal speakers
5. Focus ring (P27)
6. Front IR remote sensor (P22)
7. Projection lens
8. Lens shutter (P27, P31)

Rear/lower side

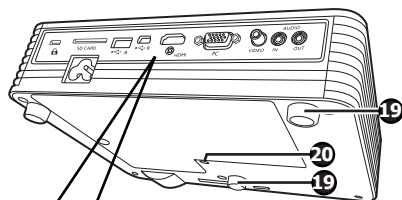


9. AC power jack (P26)
10. Anti-theft lock slot
11. SD card slot (P42)
12. Type A USB jack (P43)
13. Mini-B USB jack (P36)
14. HDMI input jack (P36)
15. PC input jack (P34, P39)
16. Video input jack (P40)
17. Audio input jack
18. Audio output jack
19. Adjuster feet (P33)
20. Tripod socket (P33)

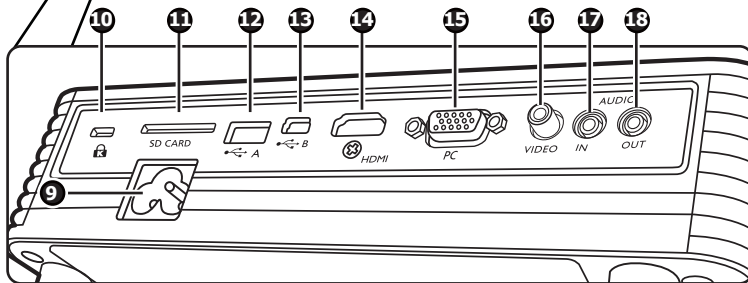




Caution

- **Do not block the vents.** Blocking the vents can cause your projector to overheat and may cause a malfunction.
- **Do not brush or rub the top surface of the projector.** The surface may be damaged.

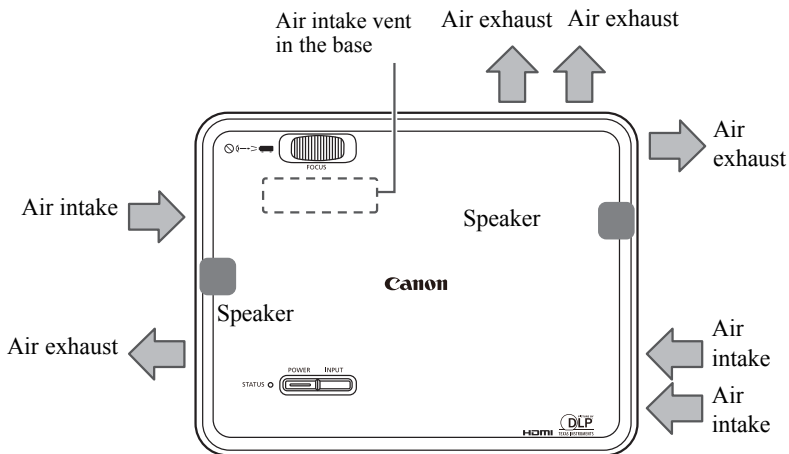

Control panel and indicators

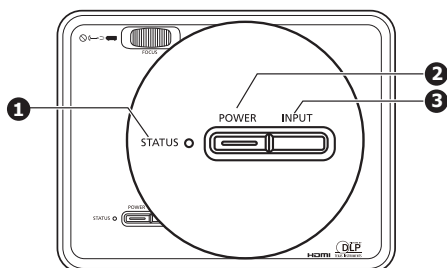

1. STATUS LED indicator

The LEDs indicate the projector's status. (P88)

2. POWER button/POWER LED indicator


Lights up or flashes when the projector is operating. Turns the projector on or off.

3. INPUT button

Toggles through the input signals in order. (P28)

Press and hold for 3 seconds to enable or disable the key lock. (P74)

Remote control

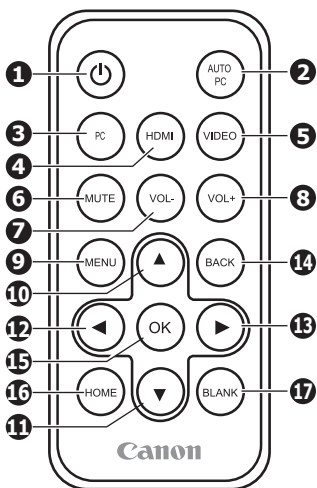


1. **POWER button**
Turns the projector on or off. (P27, P30)
2. **AUTO PC button**
Automatically adjusts the projector to the optimum status depending on the computer signal when an analog PC signal is being input. (P35)
Press and hold for 3 seconds to enable or disable the key lock. (P74)
3. **PC button**
Switches to PC/Component input. (P28)
4. **HDMI button**
Switches to HDMI input. (P28)
5. **VIDEO button**
Switches to Video input. (P28)
6. **MUTE button**
Temporarily mutes the audio. (P29)
7. **VOL- button**
Reduces the volume. (P29)
8. **VOL+ button**
Increases the volume. (P29)
9. **MENU button**
Displays the On-Screen Display (OSD) menu. (P75)
- 10 ~ 13 **▲ / ▼ / ◀ / ▶**
Directional buttons (Up, Down, Left, Right)
Allows you to perform operations in menus, document viewer, etc.
14. **BACK button**
Returns to the upper level of the OSD.
Closes the pop-up setting menu of the OSD.
15. **OK button**
Confirms the selected menu item.
Allows you to perform operations in document viewer, etc.
16. **HOME button**
Displays the home screen. (P46)
17. **BLANK button**
Temporarily hides the image. (P30)

Remote control effective range

The Infra-Red (IR) remote control sensor is on the front of the projector, so make sure you point the remote control at the front.


The remote control must be held at an angle within ± 15 degrees vertically and ± 30 degrees horizontally to the projector's IR remote control sensor, and within a distance of approximately 8 meters.

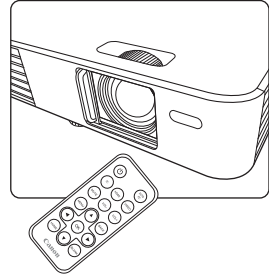

- ◆ You may not be able to perform operations if there are any obstacles between the remote control and the projector.
- You may not be able to operate the remote control if direct sunlight or strong light is shining onto the remote IR receiver.

Installing the batteries

1. Press the knob on the battery holder to the right and slide it out.
2. Remove the old battery.
3. Make sure the positive side (+) of the new battery (CR2025) is facing up when you place it into the battery holder.
4. Slide the holder in until you hear it click into place.

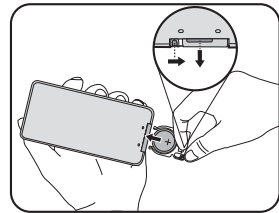

Warning

Note the following points when handling batteries. Failure to do so could result in a fire or injury.

- **Do not place the battery in a fire, apply heat, short circuit, or disassemble the battery.**
- **Do not attempt to recharge the battery.**
- **Remove the battery when it is drained, or if it will not be used for a long period of time.**
- **Insert the battery in the correct + or - position.**
- **If any liquid leaks from the battery and comes into contact with skin, wash it off thoroughly with water.**
- **The remote control battery and battery holders can be a choking hazard if swallowed accidentally by small children. Make sure these are placed out of the reach of children. If they are swallowed accidentally, contact a physician immediately.**

Third party software

This product includes third party software modules.

For more details, see the "ThirdPartySoftware.pdf" (third party software licenses) in the `thirdparty_software` folder on the setup CD-ROM supplied.

You can also view the licensing conditions for each module in the `thirdparty_software/LICENSE` folder.

■ GPL and LGPL software licenses

This product uses software modules licensed under GPL and LGPL.

The source code is included in the `thirdparty_software/GPL(LGPL)` folder on the setup CD-ROM supplied.

■ Software programs based on the GNU General Public License Version 2

The software programs ("these programs") included in this media are freeware. You can redistribute and make changes under the conditions defined in the GNU General Public License Version 2.

Each program is distributed in the hope that it will be useful, however they are provided without warranty of any kind, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. See the following "Warranty disclaimer" and "Third party software support". For more details see the GNU General Public License Version 2.

Warranty disclaimer

BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE

PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Third party software support


Canon Inc., Canon's affiliated companies, as well as sales companies do not offer any support services for these programs. We are unable to respond to questions or inquiries from you or any other parties regarding these programs.

Projecting


Basic operations

Connecting the power cord

1. Connect the power cord supplied to the AC power jack on the projector.
2. Connect the plug to a wall outlet. When the power is on, the **POWER button/POWER LED indicator** lights red.

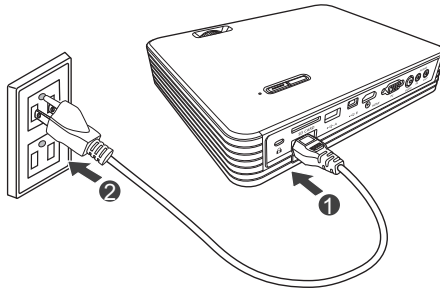




Turning on the projector

1. Connect the plug to a wall outlet. (P26)
The **POWER button/POWER LED indicator** lights red.
2. Open the lens shutter.
3. Make sure other cables are securely connected. (P34)
4. Turn on all devices connected to the projector.
5. Press the **POWER** button on the projector or the  **POWER** button on the remote control to turn on the projector. When the projector turns on, the power indicator LED lights blue. The start up procedure takes several seconds, and the startup logo will be projected.
6. If the image is not clear, adjust the focus with the focus ring.
7. If the projector is turned on for the first time, select the display language (P28).

⚠ If the frequency/resolution of the input signal exceeds the projector's supported range, the message "Out of Range" is displayed. Change to an input signal that is supported by the projector (P95).

Adjusting the focus

Rotate the focus ring to adjust the focus.

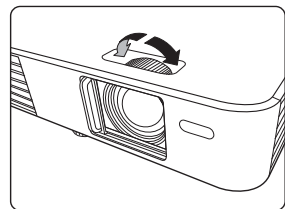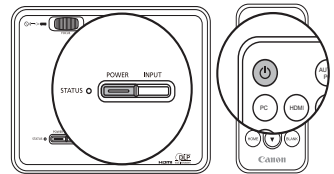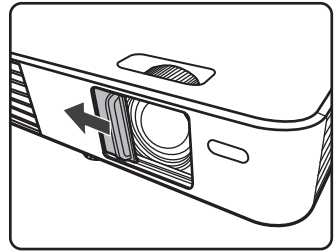

Setting the language

If the projector is turned on for the first time, select the language for the On-Screen Display (OSD).

1. Press the **HOME** button on the remote control to open the home screen.
2. Press the **▶** button on the remote control, select Setup, and then press the **OK** button. The Setup menu opens.
3. Press the **▼** button on the remote control, select Language from the menu, and then press the **OK** button.
4. Press the **▲**, **▼**, **◀**, and **▶** buttons on the remote control to select your language, and then press the **OK** button.

* You can select from 19 languages. See page 52 for details.





Switching the input signal

Perform one of the following operations to switch the input signal.

- Press one of the input signal buttons (PC, HDMI, or VIDEO) on the remote control.
- * There are no other input signals buttons aside from PC, HDMI, and VIDEO. Press the PC button to display images from component video devices.
- Press the **INPUT** button on the projector's control panel. Each time you press the button, the input signal changes in the order: PC/Component, HDMI, VIDEO.
- Select the input signal icon on the home screen, and then press the **OK** button.
- * You then need to perform further menu operations for Internal Memory (P48), USB Drive (P48), SD Card (P48), and USB Streaming (P54). Refer to each corresponding section in this manual.

- ❗ The default aspect ratio for the projector is **16:10**. Depending on the input signal, the aspect ratio may not be displayed correctly. If this occurs, you need to change the aspect ratio. See "Aspect" on page 79 for details.
- ❗ When PC/Component, HDMI, or VIDEO is selected, the last used input signal is automatically selected the next time the projector starts up.

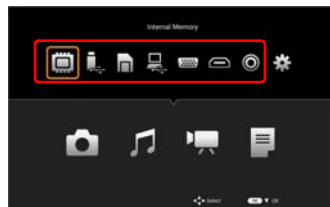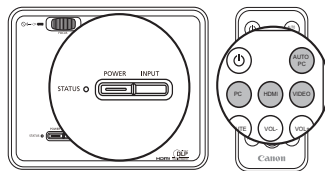


Adjusting volume

Follow the steps below to adjust the volume of the projector's internal speaker or the volume being output from the audio output jack.

Audio volume


Press the **VOL-/VOL+** buttons on the remote control to adjust the volume.

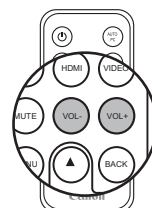

Muting

Press the **MUTE** button on the remote control to temporarily mute the audio.

Press the **MUTE** button again to restore the audio.

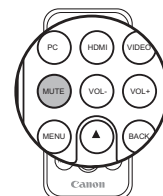

- ❗ Audio is not output when no input signal is being projected. However, when playing an audio file, audio can be output even when no image is being projected. In this situation, you can adjust the volume.
 - * If no audio is output for the image being projected, check that the audio input is connected to the projector correctly.
 - * When an external speaker is connected, audio is not output from the internal speaker.

Hiding the image



Press the **BLANK** button on the remote control to hide the image.

Press the **BLANK** button again on the remote control or the projector to restore the image.





Caution

Do not place any objects in front of the lens while the projector is operating. Doing so could cause a fire.

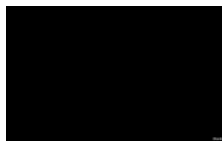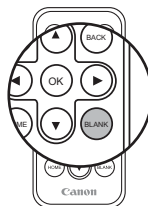


Turning off the projector

1. When you press the **POWER** button, a confirmation message is displayed. If no operation is performed within a few seconds, the message disappears.
2. Press the **POWER** button again.
3. The lamp turns off and the fans stop.
4. Disconnect the power cord from the wall outlet.

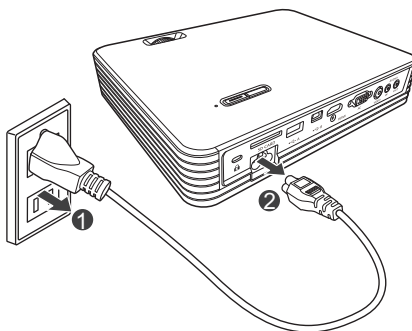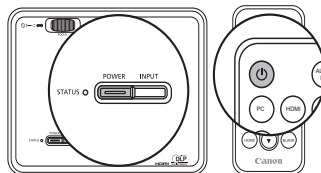

Storing the projector in the carrying bag

After turning off the projector, store the projector and accessories as shown in the following illustration.

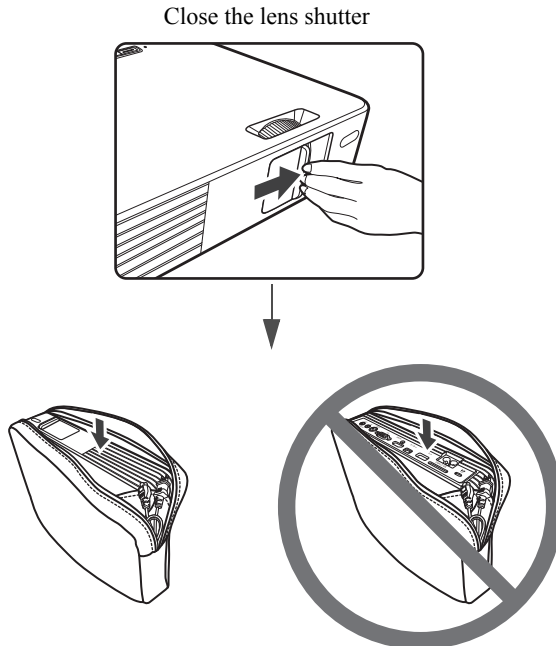

Retract the adjuster feet, and then place the projector in the carrying bag with the lens facing up.

Put the cables and remote control in the pocket inside the carrying bag, or under the rear of the projector.


Notes when storing in the carrying bag

- If the lens shutter is open when the projector is stored, the lens could be cracked.
- If the adjuster feet are extended when the projector is stored, the feet could break.
- If the cables are placed on the top surface of the projector, the surface could be damaged.
- When carrying the projector in the carrying bag, do not subject it to any shocks, do not drop it, or place anything heavy on top of it. Failure to do so could damage the projector.
- As dust accumulates easily in the carrying bag, clean the dust out of the bag before storing the projector.

Positioning the projector

As the projector does not have a zoom function, adjust the size of the projected image by changing the projection distance.

The projector should be placed horizontally on top of a desk, etc. so that the projector is perpendicular to the center of the screen.

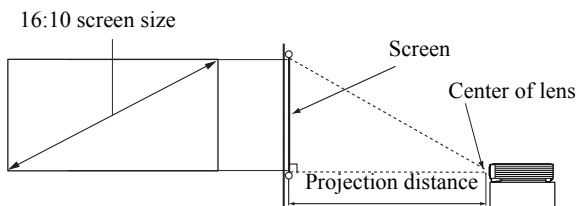

This projector is designed to project at a slightly upward angle above the horizontal plane of the projector. This is so that they can be readily placed on a table and will project forward and upwards onto a screen positioned so that the bottom edge of the screen is above the level of the table.

Adjusting the size of the image


The size of the image is determined by the projection distance.

The below information shows the relationship between the screen size and the projection distance.

Image size			Projection distance (m)
Screen size (inches)	Width (mm)	Height (mm)	
20	431	269	0.50
30	646	404	0.75
40	862	538	1.00
50	1077	673	1.25
60	1292	808	1.50
70	1508	942	1.75
80	1723	1077	2.00
90	1939	1212	2.25
100	2154	1346	2.50
120	2585	1615	3.00
150	3231	2019	3.75
200	4308	2692	5.00
240	5169	3231	6.00

Adjusting the image height

The projector is equipped with 2 adjuster feet. Use the front adjuster foot to adjust the height, and the rear adjuster foot to adjust the inclination of the image.



If the projector is not placed on a horizontal surface or the screen and the projector are not perpendicular to each other, the projected image becomes trapezoidal. To correct this distortion, see "Keystone" on page 82 for details.



Warning

- **Do not look into the lens while the light source is on. Strong light from the light source may damage your eyes. Be especially careful that children do not stare directly into the lens.**
- **Be careful when adjusting the feet as they are close to the exhausts that vent hot air. The cabinet etc. gets very hot which could cause a burn.**
- **The adjuster feet can be a choking hazard if swallowed accidentally by small children. Make sure these are placed out of the reach of children. If they are swallowed accidentally, contact a physician immediately.**






Caution

When attaching a camera tripod

- **When adjusting the height using a tripod, be careful that the projector does not fall. If it falls a malfunction could occur.**
- **See the documentation provided with the tripod for more information on handling and operating the tripod.**
- **When using an elevating tripod, do not extend the elevator. This could cause the projector to fall.**

Connecting to a computer

You can use the HDMI input jack, PC input jack, or the Mini-B USB jack to connect the projector to a computer.


Jack name	Jack shape	Notes
HDMI input jack		Transmits high resolution digital images and audio with a single cable
PC input jack		Transmits high resolution analog signals
Mini-B USB jack		PC screen display Transmits files from the PC to the internal memory of the projector

❗ If the selected input is not projected even when the projector is on (P27), check that the computer is on and that the steps have been followed correctly. Also check the cable connections.

Connecting using the PC input jack

You can project analog PC images by connecting a computer cable to the projector's PC input jack.

- Use the computer cable supplied (P18).
1. Connect the computer cable supplied to the computer's monitor output jack.
 2. Connect the other end of the computer cable to the projector's PC input jack.
 3. To use the projector's internal speaker, connect a commercially available audio cable to the computer's audio output jack, and the other end to the projector's audio input jack.
 4. Set the projector's input signal to PC (P28).

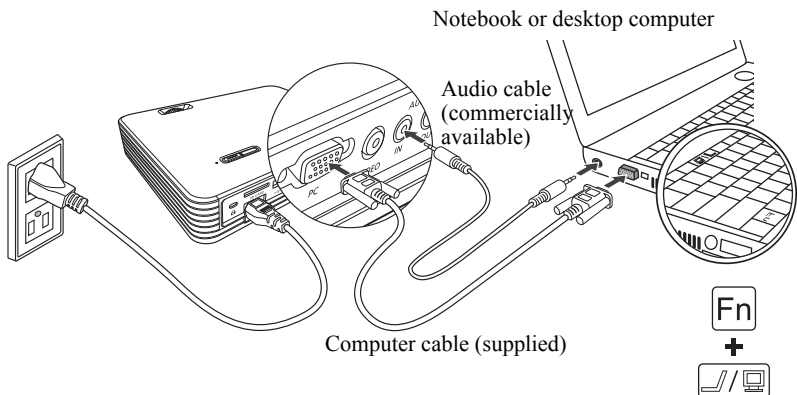

- ⚠ When using a notebook computer, you need to change the output screen from the computer. You can change the computer's output screen by using the computer's keyboard. Usually a key combination such as [FN] + a function key ([F1] to [F12]) turns the external display on/off. Locate a function key labeled with a monitor symbol or text, and then press the FN key and the monitor key at the same time. This is not necessary for desktop computers.

The function keys and switching operations differ depending on the computer model. See the documentation provided with your notebook for more information.


Adjusting the image automatically

If the projected computer screen does not fit into the correct area or if the projected image flickers when projecting an analog PC input signal, execute the AUTO PC function to automatically adjust to the optimum status.

Press the **AUTO PC** button on the remote control.

While executing the AUTO PC function, information about the input signal is displayed at the corner of the image for about three seconds.


This function is only available when a computer is connected (P34) to the projector's PC input jack.

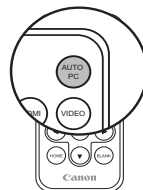

Connecting using the HDMI input jack

By connecting an HDMI cable to the projector's HDMI input jack, you can display higher quality images than analog PC images. You can also output the computer's audio from the projector.


1. Connect an HDMI cable to the computer's HDMI output jack.
2. Connect the other end of the cable to the projector's HDMI input jack. (P19)
3. Set the projector's input signal to HDMI. (P28)

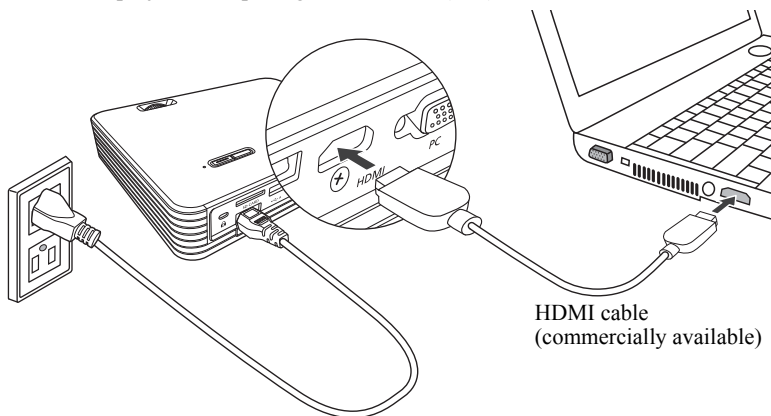

Connecting using the mini-B USB jack

By connecting a computer to the projector with a USB cable and projecting the computer's screen (USB Display), you can transfer files from the computer to the projector's internal memory (USB File Transfer).

1. Connect a USB cable (type A) to the computer's USB jack.
2. Connect the mini-B end of the USB cable to the projector's mini-B USB jack. (P19)

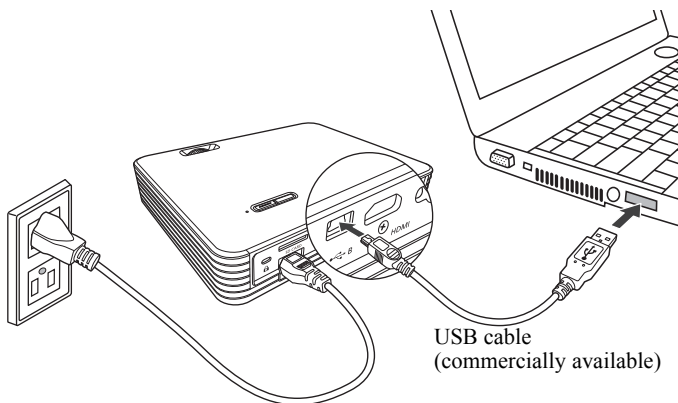

3. See page 54 for more information about USB Display, and page 56 for more information about USB File Transfer.

Follow the steps below to disconnect the USB cable from the computer.

For Windows 7: (Other versions of Windows operate similarly. Follow the correct procedure for removing a USB device from your computer safely for your version of Windows.)

- Click the Safely remove hardware icon on the Windows taskbar, and when the message "This device can now be safely removed from the computer." is displayed, disconnect the USB cable.



For Mac:




On your desktop, drag and drop the icon for the projector you want to disconnect to the trash. Check that the eject sign is displayed on the trash, and then disconnect the USB cable.



- ◆ • **USB Display is not available for Mac.**
- **Do not disconnect the USB cable while the files are being copied, as this could result in loss of data or damage to the projector.**
- **The connection does not end if files on the internal memory are open on the computer.**
- **Follow the correct procedure to remove a USB device from your computer safely.**

Connecting to video devices

You can use the HDMI input jack, the Component video input jack, and the Video input jack to connect to video devices. However each provides a different level of video quality.

Jack name	Jack shape	Notes
HDMI input jack		Transmits high resolution digital images and audio with a single cable
Component video input jack		Transmits high resolution analog signals
Video input jack		Transmits analog images


⚠ If the selected video input is not projected even when the projector is on (P27), check that the video device is on and that the steps have been followed correctly. Also check the cable connections.

Connecting HDMI devices

The projector provides an HDMI input jack that allows you to connect it to an HDMI devices such as a Blu-Ray player.

HDMI (High-Definition Multimedia Interface) supports uncompressed video data transmission between compatible devices like Blu-Ray players over a single cable. HDMI provides a pure, high quality digital viewing and listening experience.

1. Connect an HDMI cable to the HDMI output jack of the HDMI device.
2. Connect the other end of the cable to the projector's HDMI input jack.

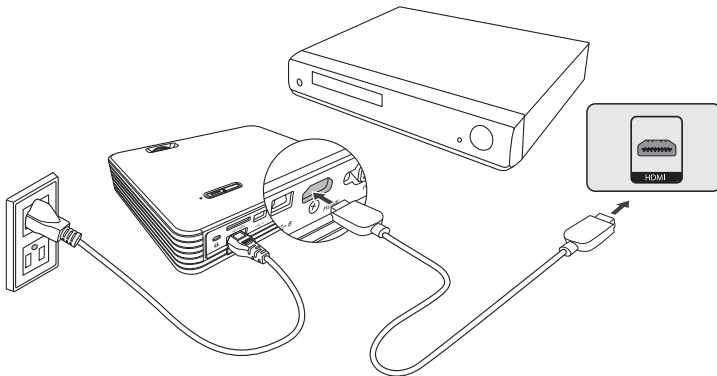


HDMI cable (commercially available)

Connecting to a component video device

You can project component video images by connecting a component cable (RCA-mini D-sub 15 pin) (commercially available) to the projector's PC jack.

1. Connect the end of the component cable with three RCA type connectors to the Component Video output jacks of the Video device. Match the color of the plugs to the color of the jacks; green to green, blue to blue, and red to red.
2. Connect the cable's mini D-sub 15 pin jack to the projector's PC input jack.
3. To use the projector's speaker, connect a commercially available audio cable to the audio output jacks of the Video device. Connect the audio cable's stereo mini plug to the projector's audio input jack.

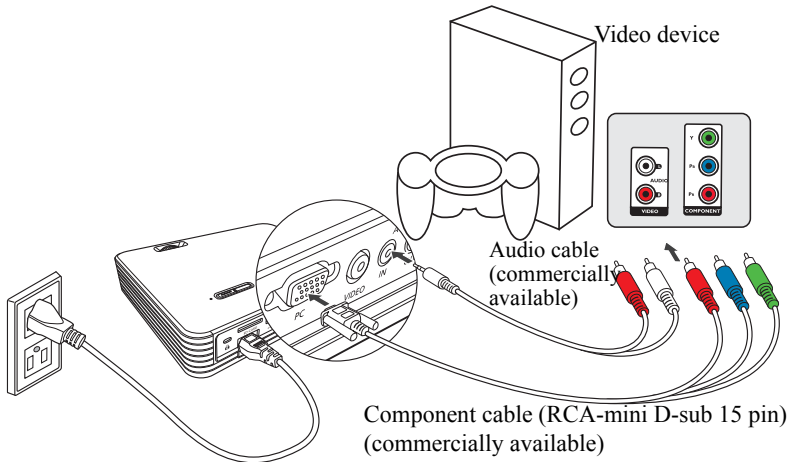


⚠ No sound (audio signal) will be output from the speaker or audio output jack if video signals are not being input from the video device.

Connecting to a Video device

You can project images from a video device by connecting to the projector's Video jack.

1. Connect a commercially available video cable to the video device's video output jack.
2. Connect the other end of the video cable to the projector's Video input jack.
3. To use the projector's speaker, connect a commercially available audio cable to the audio output sockets of the Video device. Connect the audio cable's stereo mini plug to the projector's audio input jack.

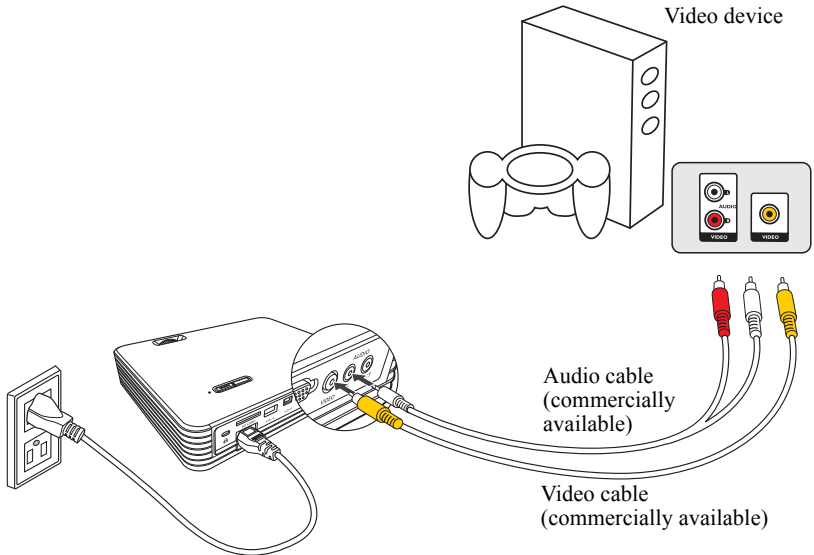


- ⚠ No sound (audio signal) will be output from the speaker or audio output jack if video signals are not being input from the video device.

Connecting an external speaker

You can connect an external speaker or headphones to the projector's Audio output jack.

Connect a commercially available audio cable to the projector's Audio output jack ($\phi 3.5$ stereo mini-plug) and the speakers or headphones.

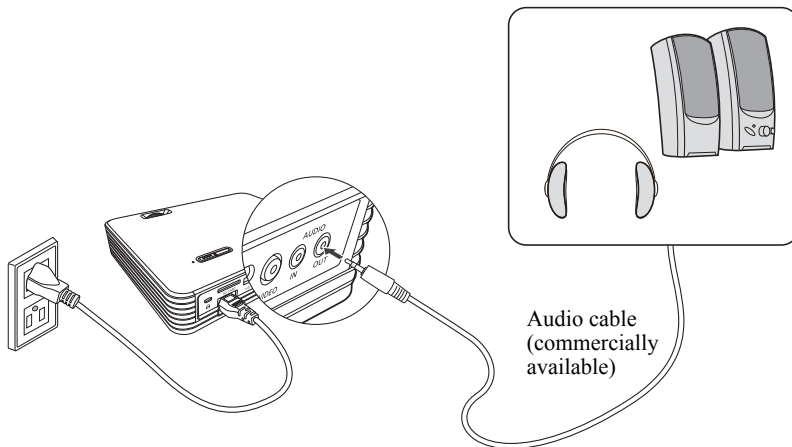


- ❗ • When you connect an audio cable to the Audio output jack, no sound comes from the projector's built-in speaker.
- Audio is not output when no video signal is being input.
- Use an audio cable without internal impedance. If the cable has internal impedance, the audio volume will be low.
- Turn down the projector's volume before connecting headphones to the Audio output jack. You should also adjust the volume on the device connected to the Audio input jack before connecting the audio cable.

Connecting an external memory

Inserting an SD card


Insert an SD card into the SD card slot on the projector. You can display the files on the SD card. (P48)

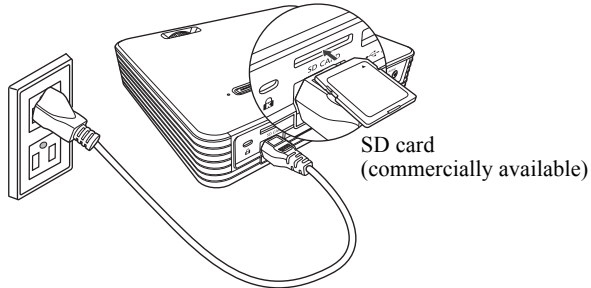

- The projector supports class 10 or older SD/SDHC cards.
- The maximum memory capacity supported for an SD/SDHC card is 32 GB.
- SDXC cards are not supported.
- SD/SDHC cards must be formatted in FAT16/FAT32/NTFS file format.
- The projector may not be compatible with some SD/SDHC cards.
- As the data in the SD card can be damaged, be sure to back up important data to avoid loss. The user is responsible for data management. This company shall not be held liable for any data loss.
- If the folder tree in the SD card is large, accessing the data may take some time. The maximum number of folder tree layers is nine.

Connecting to a USB storage device

Connect the USB storage device to the Type A USB jack. You can display the files on the USB storage device. (P48)

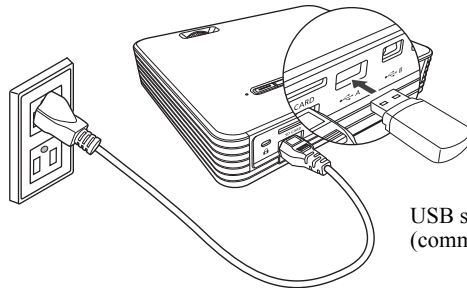

- ◆ • USB storage devices must be formatted in FAT16/FAT32/NTFS file format.
- Some USB storage devices may take over 10 seconds to be recognized.
- The projector provides a current supply of up to 500 mA. Do not use storage devices that require more current.
- Not all commercially available USB storage devices are guaranteed to work.
- The projector supports USB 2.0 storage devices.
- Do not connect other USB devices. Only connect USB storage devices.
- Card readers and USB hubs are not supported.
- As the data in the USB storage device can be damaged, be sure to back up important data to avoid loss. The user is responsible for data management. This company shall not be held liable for any data loss.
- Do not disconnect the USB storage device while projecting data on the device.
- USB storage devices that requires a designated driver are not supported.
- USB storage devices that have been encrypted cannot be accessed.
- If the folder tree in the USB storage device is large, accessing the data may take some time. The maximum number of folder tree layers is nine.

Menu function settings

About the menus

From the projector's home screen you can perform a variety of settings such as selecting an input signal, projecting files from a variety of storage devices, and performing projector setup.

Also, when projecting images, the On-Screen Display menu (OSD) allows you to make adjustments and change settings for the image. (P75)

Home screen



On-Screen Display menu

MENU	
Image Adjustment	Presentation
Aspect	Auto
Screen Color	Normal
Phase	<input type="range"/> 15
H.Size	<input type="range"/> 0
3D Invert	Off
Keystone	<input type="range"/> 0
LED mode	Normal
HDMI level range	Auto
Setup	
Information	PC/Component
	1024x768,60Hz


Home screen

Press the HOME button on the remote control to open the home screen.



The home screen is comprised of the following menus.

4. USB Streaming (P54)
3. SD Card (P48)
2. USB Drive (P48)
1. Internal Memory (P48)
5. PC/Component (P28)
6. HDMI (P28)
7. Video (P28)
8. Setup (P58)

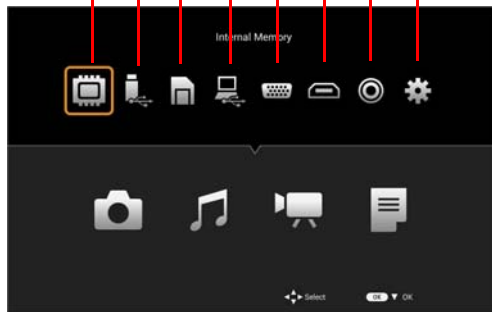

Icon explanations

1. Internal Memory: Displays files on the internal memory.
2. USB Drive: Displays files on the USB storage device connected to the type A USB jack.
3. SD Card: Displays files on the SD card in the SD card slot.
4. USB Streaming: When a computer is connected to the projector's mini-B USB jack with a USB cable, you can project the computer's screen or transfer files to the projector's internal memory.
5. PC/Component: Projects images from a computer or component video device connected to the PC input jack.
6. HDMI: Projects images from the device connected to the HDMI jack.

7. Video: Projects images from the device connected to the Video jack.
8. Setup: Performs projector setup.

Basic home screen operations


Use the ◀/▶ buttons on the remote control to select the function that you want to use from the icons on the home screen, and then press the **OK** button.

To project PC/Component, HDMI, or Video input images, select the icon for the input signal you want to project, and then press the **OK** button (The projector automatically detects the analog PC signal/component video signal.).

Additional menu operations are required for other functions. See the following pages for detailed explanations of each function.


- Internal Memory, USB Drive, and SD Card ([P48](#))
- USB Streaming ([P54](#))
- Setup ([P58](#))

Projecting files on Internal Memory, USB Drive, and SD Card

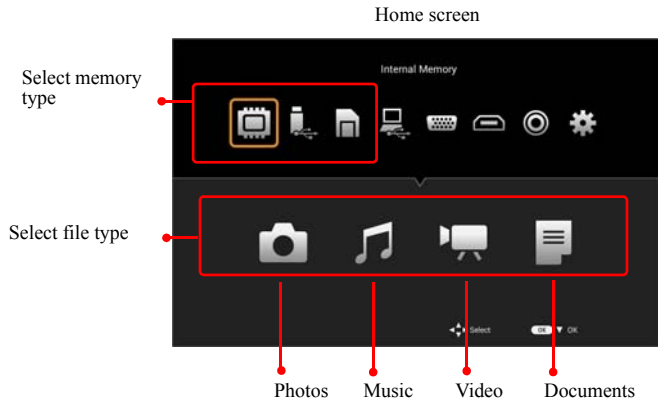


1. Press the ◀/▶ buttons to select the memory type, and then press the **OK** button or the ▼ button.
 2. Press the ◀/▶ buttons to select the type of file you want to project (Photos, Music, Videos, or Documents), and then press the **OK** button.
Photos: Projects photos (P50)
Music: Plays audio files (P50)
Video: Plays videos (P51)
Documents: Projects Microsoft Office files (Word, Excel, PowerPoint), Adobe PDF files, and text files. (P51)
- * Use the USB File Transfer function to store files in internal memory. (P56)
 - * A warning message is displayed if the projector cannot detect a USB storage device or SD card.

- The file type you selected is automatically detected, and the file browser opens.

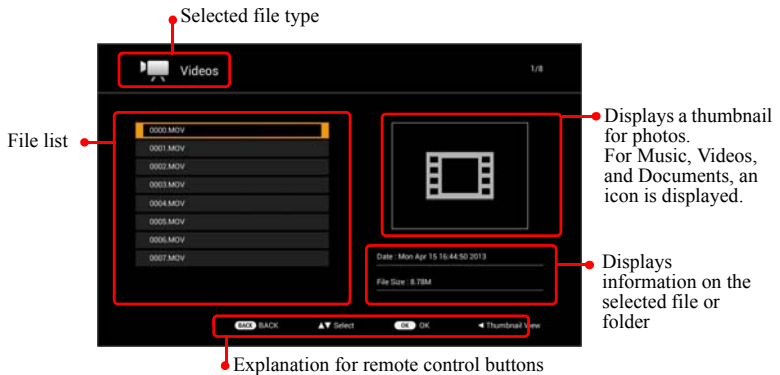

- Files that match the selected file type and the folders that contain these files are displayed.
- Press the **▲**/**▼** buttons to select the file you want to project/play, and then press the **OK** button.
If you select a folder and press the **OK** button, the folder opens and the files in the folder are displayed as a list.
Press the **BACK** button to return to the previous folder level.
 - If you press the **◀** button while the file browser is displayed, the files are displayed in thumbnail view.

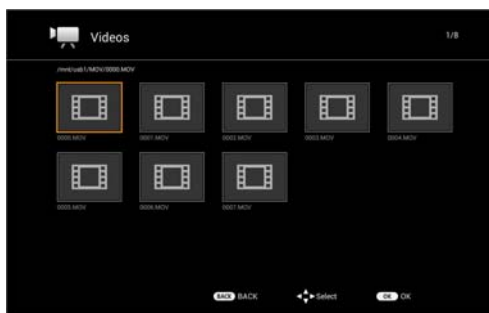

- On the thumbnail view screen, press the **▲**/**▼**/**◀**/**▶** buttons to select the file you want to project/play, and then press the **OK** button.
- Select a folder and then press the **OK** button to display the folder's content.
- Press the **BACK** button to return to the previous folder level.
- If you press the **BACK** button at the root level, the thumbnail view closes and you will return to the file browser display.

⚠ As the data in the internal memory, USB storage device, or SD card can be damaged, be sure to back up important data to avoid loss. The user is responsible for data management. This company shall not be held liable for any data loss.

- Loading time may be longer for large files.
- Unsupported files or damaged files are not projected/played correctly.
- This projector does not support encrypted files (DRM).
- When the **Image Mode** is set to other modes than the **Presentation** mode, the color changes momentarily when switching to file browser display or file projection/playback.

Projecting photos

The following file formats are supported.

File extension: JPG, JPEG, BMP

Supports progressive JPEGs with a width of up to 10,240 pixels and a height of up to 6,400 pixels.

* The projector may not be able to display all supported image files.

Operations while projecting photos

- Press the **BACK** button to return to the file browser/thumbnail view.
- Select "**One Photo Click**" or "**All Photos in Folder**" from **Home screen** > **Setup** > **Photos Settings** > **Slideshow Mode**.

[When **One Photo Click** is selected in **Slideshow Mode**]

The selected image is displayed in full screen.

- Press the ► button to project the next image.
- Press the ◀ button to project the previous image.

[When **All Photos in Folder** is selected in **Slideshow Mode**]

The selected image is displayed in full screen, and the next image is automatically displayed.

- Press the **OK** button to pause/resume.
- The ◀/► buttons are disabled while displaying the slideshow.
- Press the **BACK** button to return to the file list/thumbnail view.

Playing music

The following file formats are supported.

File extension: OGG, AAC, WAV

WAV files: PCM and AD-PCM supported

* The projector may not be able to play all supported audio files.

Operations while playing music

The selected music will be played.

- Press the ► button to play the next music file.
- Press and hold the ► button for 2 seconds to fast forward.
Press the **OK** button to stop fast forwarding.
- Press the ◀ button to play the previous music file.
- Press and hold the ◀ button for 2 seconds to rewind.
Press the **OK** button to stop rewinding.
- Press the **OK** button to play or pause.
- Press the **BACK** button to return to the file list/thumbnail view.

Playing videos

The following file formats are supported.

File extension: AVI, MKV, TS, DAT, VOB, MPG, MPEG, MOV, MP4

* The projector may not be able to play all supported video files.

If the peak bit rate of a video file is higher than 10 MBps, lag may occur during video playback.

Operations while playing videos

The selected video is played.

- Press the ► button to play the next video file.
- Press and hold the ► button for 2 seconds to fast forward.
Press the **OK** button to stop fast forwarding.
- Press the ◀ button to play the previous video file.
- Press and hold the ◀ button for 2 seconds to rewind.
Press the **OK** button to stop rewinding.
- Press the **OK** button to play or pause.
- Press the **BACK** button to return to the file list/thumbnail view.

Projecting documents

The projector comes with a document viewer function that allows you to project Microsoft Office files, Adobe PDF files, and text files. The following file types and formats are supported.

Type	Format
PDF	1.0 to 1.4 (pdf)
Microsoft PowerPoint	97/2000/XP/2003/2007/2010 (ppt, pptx)
Microsoft Excel	95/97/2000/XP/2003/2007/2010 (xls,xlsx)
Microsoft Word	95/97/2000/XP/2003/2007/2010 (doc, docx)
Text	Text data (txt)

⚠ Limitations when projecting documents

The projector's document viewer allows you to project the content of a file with limited functions. Some files may look different from what you see on your computer. When giving a presentation using the projector's document viewer, make sure you check that the content of each page is projected satisfactorily beforehand. Projection may not be possible depending on the file.


- The projector only has 1 built-in font and this is used to display text in document viewer. Because text is projected using a different font to the computer, text may extend beyond the lines, or line breaks may appear at unexpected positions. Also, some text may not be displayed correctly.
- Some functions supported by the computer may not be supported by the projector. For example, animations, 3D effects, SmartArt, hyperlinks, transparency, gradation displays, WordArt, and graphs may not be displayed correctly.
- Compared to the computer, it may take some time to project or skip pages in the file.
- Large files may close unexpectedly during projection.
- Fonts for the following languages can be projected.

English	Norwegian
German	Turkish
French	Polish
Italian	Hungarian
Spanish	Czech
Portuguese	Danish
Swedish	Chinese (Simplified)
Russian	Chinese (Traditional)
Dutch	Japanese
Finnish	

Operations while projecting documents

The selected document will be projected.

- Press the **OK** button to change the display magnification.
- * To return to normal display from a magnified display, press the **OK** button until the image returns to its normal size.

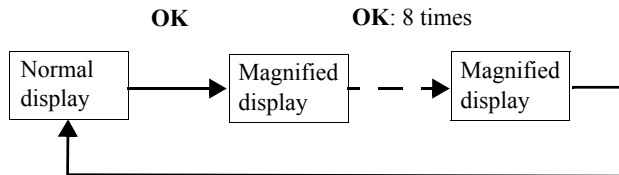

Operations while projecting normally

- Press the ▼ or ► button to project the next page.
- Press the ▲ or ◀ button to project the previous page.
- Press the **OK** button to magnify the display.

Operations while projecting a magnified display

- Press the ◀/► buttons to move the projected area to the left or right.
- Press the ▲/▼ buttons to move the projected area up or down. Press ▲ when the top of the page is displayed to move to the previous page. Press ▼ when the bottom of the page is displayed to move to the next page.
- Press the **OK** button to magnify the display. However, if you press the **OK** button when the image is at maximum magnification, it returns to a normal display.

Using USB Streaming

By connecting the projector to a computer with a USB cable and using USB streaming, you can project the computer's screen (USB Display) and transfer files from the computer to the projector's internal memory (USB File Transfer).

USB Display

USB Display is only available for Windows.

Check the system requirements (P55).

By using a USB cable you can project the computer's screen.

1. Connect the USB cable to the projector's mini-B USB jack and the computer (P36).
2. From the home screen, select "USB Streaming > USB Display", and then press the **OK** button. The default screen is displayed, and after a few moments the computer recognizes the projector.
3. When using USB Display for the first time on the computer, you need to install the application "EZ USB".



* If you have already installed the application, go to [Starting EZ USB](#).

4. Installing EZ USB

If the autorun function of your computer is enabled, click "Run EZ_USB_Detect.exe" from the menu displayed on your computer.

If the autorun function of your computer is disabled, click Computer > CD Drive (EZ USB), and then run EZ_USB_Detect.exe.

Follow the on-screen instructions to install the application.

When installation is complete, reboot your computer.

5. Starting EZ USB

Double-click the EZ USB icon on the desktop to start EZ USB and project the computer's screen. (At this point, the computer monitor's resolution may change.)

The EZ USB operation screen is displayed. On the operation screen you can select "Mirror" which projects the same screen as the computer's screen, or "Extension" which expands and projects the computer's screen area. Click the function you want to use. The default is "Mirror".

To close USB Display, click the "Exit" button in EZ USB, or press the **BACK** button on the remote control.

System requirements

Windows	CPU	Intel/AMD Dual Core 2 GHz or faster
	Graphics card	Intel 64 MB VRAM or higher, nVIDIA, AMD graphics card
	Operating system	Windows XP (Professional) SP3 32/64bit, Windows Vista (Home premium or higher) SP2 32/64bit, Windows 7 (Home premium or higher) SP1 32/64bit
	Memory	1 GB or higher

USB File Transfer

You can transfer files from the computer to the projector's internal memory. You can then display the transferred file in the projector's file browser (P48).

1. Connect the projector to a computer using a USB cable.
2. Press the **HOME** button to display the home screen. From the home screen, select USB Streaming > USB File Transfer, and then press the **OK** button. The USB File Transfer screen is displayed, and after a few moments the computer recognizes the projector.



3. Transferring files

For Windows:

From the start menu, open Computer (My Computer for Windows XP).

Open the projector's drive icon, and then copy and paste or drag and drop your files.

For Mac:

Open the projector's drive icon on the desktop, and then copy and paste or drag and drop your files.

4. Disconnecting

When you have finished transferring files, follow the steps below to disconnect the computer from the projector.

For Windows:


Click the Safely remove hardware icon on the Windows taskbar, and check that the message "This device can now be safely removed from the computer." is displayed.



Press the **BACK** or **HOME** button on the remote control to leave the USB File Transfer screen.

For Mac:

Drag and drop the projector's icon to the trash.

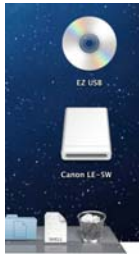

Press the **BACK** or **HOME** button on the remote control to leave the USB File Transfer screen.


- ❗ Check that the connection has been disconnected. Do not disconnect the USB cable while the files are being copied, as this could result in loss of data or damage to the projector. The connection does not end if files on the projector are open on the computer. Close all files on the projector, and then disconnect.

Using the Setup menu

The Setup menu allows you to make a variety of settings for the projector's operation.

Using the Setup menu

1. Select the Setup menu icon on the home screen, and then press the **OK** button.
2. The Setup menu opens.

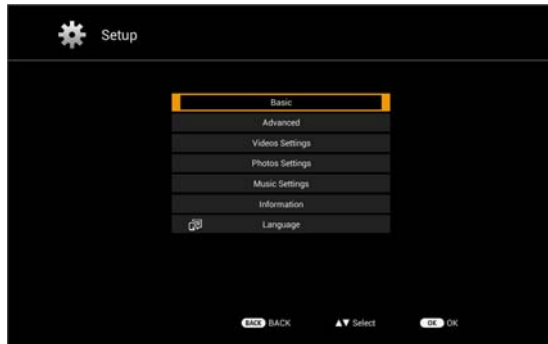

See [P102](#) for a list of items that can be adjusted from the Setup menu.

3. Press the **▲/▼** buttons to select the item you want to adjust.
After selecting the desired main menu item, press **OK** button to enter the feature settings submenu.
Press the **◀/▶** buttons to adjust the selected item.
4. Press the **BACK** button to return to the top level menu.
5. To close the Setup menu, press the **BACK** button on the remote control repeatedly, or press the **HOME** button.

Setup menu configuration

The Setup menu is comprised of the following 7 items.

- **Basic** menu
- **Advanced** menu
- **Videos Settings** menu
- **Photos Settings** menu
- **Music Settings** menu
- **Information** menu
- **Language** menu

Basic menu

Locking control buttons during standby

Home screen > Setup > Basic > Key Lock

This function locks the control panel and remote control buttons during standby to prevent the projector from being turned on accidentally.

Off	Start the projector as normal.
On	If you do not release the key lock, you cannot turn on the projector. See the note below for more details.



- To turn on the projector when Key Lock is on, press and hold the **INPUT** button on the control panel or the **AUTO PC** button on the remote control until the STATUS LED lights up briefly. You can then turn on the projector by pressing the **POWER** button on the control panel or the remote control.
- If you press any buttons other than the **INPUT** button on the control panel or the **AUTO PC** button on the remote control while the keys are locked, the STATUS LED lights up (P88).

Adjusting keystone distortion automatically

Home screen > Setup > Basic > Auto Keystone

This function automatically detects the projector's angle of tilt and adjusts keystone distortion to project the optimum image.

Off	Auto Keystone is not performed.
On	Auto Keystone is performed.



- Keystone can be adjusted within ± 40 degrees. (When projecting an input signal with 3D timing, the keystone can only be adjusted within ± 4 degrees.)
- Because digital processing is performed when adjusting the image, the image after adjustment may differ from the original image. Also, the screen's aspect ratio may change.
- If you perform manual keystone adjustment from the OSD, the auto keystone function is disabled until the next time the projector is started. However, you can enable auto keystone again by setting **Auto Keystone** to **Off**, and then setting it back to **On**.

Basic menu

Skipping the **POWER** button

Home screen > Setup > Basic >
Direct Power On

This function turns on the projector automatically by simply connecting the power cord without having to press the **POWER** button.

Off	You need to press the POWER button to turn on the projector.
On	Connect the power cord to turn on the projector.



- When **Key Lock** is set to On, **Direct Power On** is automatically set to **Off**.

Turning the power off automatically when no signals are received and no operations are performed

Home screen > Setup > Basic >
Auto Power Off

This function automatically turns off the projector to save power when no signals are received and no operations are performed for a specified length of time.

Disable	Auto Power Off is not performed.
5 min	The power turns off automatically after the selected time has passed and no signals have been received and no operations have been performed.
10 min	
15 min	
20 min	
25 min	
30 min	



- About 30 seconds before the projector turns off, a message is displayed warning you that the projector will turn off shortly. While the message is displayed, press the **POWER** button once to turn off the projector. Pressing any other button removes the message.

Basic menu

Selecting the screen color when no signal is received

Home screen > Setup > Basic > Background Color

This function allows you to select the color of the screen displayed when PC/Component, HDMI, or Video is selected but no input signal is detected.

Black	Displays a black screen when no signal is being received.
Blue	Displays a blue screen when no signal is being received.

Selecting the screen color when the blank is set

Home screen > Setup > Basic > Blank Color

This function allows you to select the color of the screen displayed when you press the **BLANK** button on the remote control to hide the image.

Black	Displays a black screen when Blank is set.
Blue	Displays a blue screen when Blank is set.

Basic menu

Selecting the screen displayed when the projector is turned on

Home screen > Setup > Basic > Splash Screen

This function allows you to select the splash screen displayed when the projector is turned on.

Logo	Displays the Canon logo.
Black	Displays a black screen.
Blue	Displays a blue screen.

Advanced menu

Using the projector at high altitudes

Home screen > Setup > Advanced > High Altitude Mode

Set this function to **On** to maintain optimum system performance when using the projector at an altitude of 1500 m to 3000 m within a temperature range of 0°C to 30°C.

Off	When using at an altitude of 0 m to 1499 m within a temperature range of 0°C to 40°C.
On	When using at an altitude of 1500 m to 3000 m within a temperature range of 0°C to 30°C.



- Set **High Altitude Mode** to **Off** when using the projector at an altitude of 0 m to 1499 m within a temperature range of 0°C to 40°C.
- If **High Altitude Mode** is set to **On**, the cooling fan speeds up which increases the operating noise, and the amount of power consumed also increases.

Advanced menu

Inverting the projected image

Home screen > Setup > Advanced > Projector Position

This function allows you to invert the projected image so that the image looks correct when the projector is suspended from a ceiling or when projecting from behind the screen.

Front Table	Normal projection.
Rear Table	Select when projecting from behind the screen. Reverses the image from left to right.
Rear Ceiling	Select when the projector is suspended upside down from the ceiling behind the screen. Reverses the image from top to bottom.
Front Ceiling	Select when the projector is suspended upside down from the ceiling in front of the screen. Reverses the image from left to right and top to bottom.

Setting the menu display time

Home screen > Setup > Advanced > Menu Display Time

If you do not perform any operations on the OSD, the menu disappears automatically.

This function allows you to set the time before the OSD disappears.

5 sec	If no menu operations are performed for the set time, the menu disappears.
10 sec	
15 sec	
20 sec	
25 sec	
30 sec	
3 min	

Advanced menu

Enabling closed captions

Home screen > Setup > Advanced > Closed Caption Enable

This function allows you to display closed captions when they are available with the input signal.

* Closed captioning displays TV program or movie conversations, narrations, sound effects, etc. as text on the screen. (When available for TV programs, "CC" is usually displayed on the screen.)

Off	Do not used closed captioning.
On	When closed captioning is available, text is displayed on the screen.

Selecting the closed caption channel

Home screen > Setup > Advanced > Closed Caption Channel

This function allows you to select the closed caption channel.


CC1	Channel 1 * Channel 1 is the first language for the area.
CC2	Channel 2
CC3	Channel 3
CC4	Channel 4

Advanced menu

Returning settings to their defaults

Home screen > Setup > Advanced > Factory Defaults

This function allows you to return the Setup menu/OSD settings to their defaults (the settings at the time of purchase).

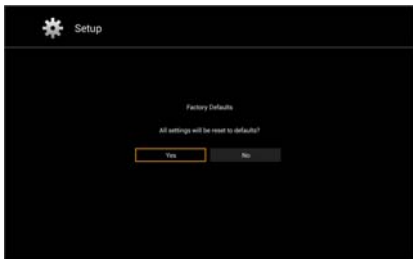

Yes	Returns the settings to their defaults.
No	Does not return the settings to their defaults.



- The **LED Time, Language, Projector Position, High Altitude Mode** settings are not returned to their defaults.
- See [P101](#) for the default settings.

Videos Settings menu

Setting the video file playback range

Home screen > Setup > Videos Settings > Play Mode

This function allows you to set the range of video files to play.

One Video	Plays only the selected video file.
All Videos in Folder	Plays all of the video files in the folder containing the selected video file.

Videos Settings menu

Shuffling the video file play order

Home screen > Setup > Videos Settings > Play Order

This function allows you to select whether video files are played in order of their file names, or played in random order.

Normal	Plays the video files in order of their file names.
Shuffle	Shuffles the video file play order.

Repeating video files

Home screen > Setup > Videos Settings > Repeat

This function allows you to set whether or not video files are repeated.

Off	Does not repeat the video file.
On	Repeats the video file.



- When set to **On**, the video files in the range selected in **Play Mode** are played repeatedly.

Photos Settings menu

Setting the slideshow speed

Home screen > Setup > Photos Settings > Slideshow Speed

This function allows you to set the speed at which images are changed when **Slideshow Mode** is set to **All Photos in Folder**.

Fast	Changes images quickly.
Normal	Changes images at normal speed.
Slow	Changes images slowly.

Changing images automatically

Home screen > Setup > Photos Settings > Slideshow Mode

This function allows you to change images manually using the remote control, or change images automatically.

One Photo Click	Press the ◀/▶ buttons to change the image.
All Photos in Folder	Changes images automatically.

Photos Settings menu

Displaying the images randomly

Home screen > Setup > Photos Settings > Slideshow Order

This function allows you to select whether image files are displayed in order of their file names, or displayed in random order.

Normal	Displays the image files in order of their file names.
Shuffle	Displays the image files in random order.

Displaying image files repeatedly

Home screen > Setup > Photos Settings > Repeat

This function allows you to set whether or not image files are repeated.

Off	Does not repeat the image file.
On	Repeats the image file.

Music Settings menu

Setting the music file playback range

Home screen > Setup > Music Settings > Play Mode

This function allows you to set the range of music files to play.

One music	Plays only the selected music file.
All Music in Folder	Plays all of the music files in the folder containing the selected music file.

Shuffling the music file play order

Home screen > Setup > Music Settings > Play Order

This function allows you to select whether music files are played in order of their file names, or played in random order.

Normal	Plays the music files in order of their file names.
Shuffle	Shuffles the music file play order.

Music Settings menu

Repeating music files

Home screen > Setup > Music Settings > Repeat

This function allows you to set whether or not music files are repeated.

Off	Does not repeat the music file.
On	Repeats the music file.



- When set to **On**, the music files in the range selected in **Play Mode** are played repeatedly.

Information menu

Checking the free space in the internal memory

Home screen > Setup > Information > Memory/Internal Memory

This function allows you to project the information about the amount of used and free space in the internal memory.

Information menu

Checking the amount of used and free space in the SD card

Home screen > Setup > Information > Memory/SD Card

This functions allows you to project the information about the amount of used and free space in the SD card.



- If no SD card is inserted, this is blank.

Checking the amount of used and free space in the USB storage device

Home screen > Setup > Information > Memory/USB Drive

This functions allows you to project the information about the amount of used and free space in the USB storage device.



- If no USB storage device is connected, this is blank.

Information menu

Checking the LED lit time

Home screen > Setup > Information > LED Time

This functions displays the information about the total amount of time the projector's light source LED has been lit.

Checking the firmware version number

Home screen > Setup > Information > Firmware Version

This function allows you to display the projector's firmware version number.

Language menu

Selecting the menu display language

Home screen > Setup > Language

This function allows you to select the display language for the home screen, Setup menu, and the OSD.

English	English
German	Deutsch
French	Français
Italian	Italiano
Spanish	Español
Portuguese	Português
Swedish	Svenska
Russian	Русский
Dutch	Nederlands
Finnish	Suomi
Norwegian	Norsk
Turkish	Türkçe
Polish	Polski
Hungarian	Magyar
Czech	Čeština
Danish	Dansk
Chinese (Simplified)	中文(简)
Chinese (Traditional)	中文(繁)
Japanese	日本語

Key Lock

Key lock during standby

- This function locks the control panel and remote control buttons during standby to prevent the projector from being turned on accidentally.
- You can turn the key lock function on or off from the Setup menu.
- To turn on the projector when Key Lock is on, press and hold the **INPUT** button on the control panel or the **AUTO PC** button on the remote control until the **STATUS LED** lights up briefly and the key lock is released. (*1)

You can then turn on the projector by pressing the **POWER** button on the control panel or the remote control.

- * 1: Although the key lock is released, the key lock setting in the menu (On/Off) is not changed. If you switch the projector off in this status, you need to release the key lock again the next time the projector starts.

Key lock during projection


- You can lock the projector's control panel and remote control button operations to prevent settings from being changed accidentally during projection.
- You can enable or disable the key lock function by pressing and holding the **INPUT** button on the control panel or the **AUTO PC** button on the remote control for at least 3 seconds.

Using the On-Screen Display (OSD)

From the On-Screen Display menu (OSD) you can adjust the image quality and color settings for the projected image.

Menu operations

1. To open the OSD, project an input signal or file, and then press the **MENU** button on the remote control.
If an input signal or file is not being projected, the OSD is not displayed even if you press the **MENU** button.
2. When the OSD is displayed, you can make various settings using the **▲/▼/◀/▶** and **OK** buttons.
3. To close the OSD, press the **MENU** or **BACK** button.

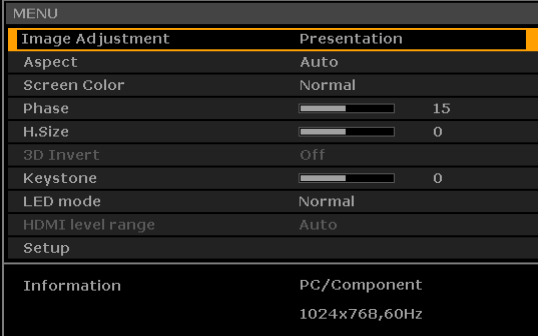

MENU	
Image Adjustment	Presentation
Aspect	Auto
Screen Color	Normal
Phase	<input type="range"/> 15
H.Size	<input type="range"/> 0
3D Invert	Off
Keystone	<input type="range"/> 0
LED mode	Normal
HDMI level range	Auto
Setup	
Information	PC/Component 1024x768,60Hz

Image Adjustment

Selecting the image mode

MENU > Image Adjustment > Image Mode

This function allows you to select the image quality to suit the image being projected.

Presentation	Suitable for projecting images with a lot of text.
Standard	Suitable for projecting computer screens or colorful images (movies), etc.
sRGB	Suitable for projecting photos from a digital camera that supports sRGB. Compatible with the sRGB standard.
Movie	Suitable for projecting colorful images (movies).
User	You can save image quality settings that you have made as a custom setting. You can then select the saved settings as an image mode.

Press the **OK** button to confirm your selection, and then press the **MENU** or **BACK** button.



- The default is **Standard**.
- The image quality settings like brightness, contrast, etc. can only be adjusted in **User**.

Making your own image quality adjustments


MENU > Image Adjustment > Image Mode > User

When you select **User** as the image mode, you can adjust the image quality.

You can save your adjustments as a custom setting.

Select **User** from **Image Mode**.

Select the image mode you want to use as the base from **Reference Mode**.

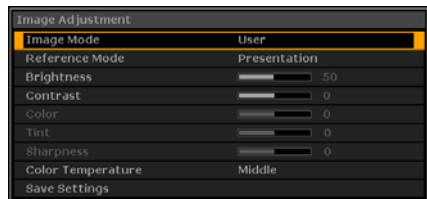

Press the ◀/▶ buttons to adjust the **Brightness**, **Contrast**, **Color**, **Tint**, **Sharpness** and **Color Temperature**. (P77 ~ P78)

Select **Save Settings**, and then select **OK** to save your settings.



- Make sure you perform **Save Settings** after making your adjustments. If you do not perform **Save Settings**, your adjustments are reset when you select another mode.

Image Adjustment

Adjusting the brightness

MENU > Image Adjustment > Brightness

This function allows you to adjust the brightness of the image.

▶	The image gets brighter.
◀	The image gets darker.



After adjusting all of the image qualities, perform **Save Settings**.
If you do not perform **Save Settings**, your adjustments are reset when you select another mode.

Adjusting the contrast

MENU > Image Adjustment > Contrast

This function allows you to adjust the contrast of the image.

▶	Increases the contrast. The difference between dark and light areas becomes clearer.
◀	Reduces the contrast. The image gets lighter.



- After adjusting all of the image qualities, perform **Save Settings**.
If you do not perform **Save Settings**, your adjustments are reset when you select another mode.

Adjusting the color

MENU > Image Adjustment > Color

This function allows you to adjust the color strength.

▶	The color gets stronger.
◀	The color gets weaker.



- You can adjust this when a **Video** signal is being input.
- After adjusting all of the image qualities, perform **Save Settings**.
If you do not perform **Save Settings**, your adjustments are reset when you select another mode.

Adjusting the tint

MENU > Image Adjustment > Tint

This function allows you to adjust purple and green tints in the image.

▶	Adjusts green tints.
◀	Adjusts purple tints.



- You can adjust this when a **Video** signal is being input.
- After adjusting all of the image qualities, perform **Save Settings**.
If you do not perform **Save Settings**, your adjustments are reset when you select another mode.

Image Adjustment

Adjusting the sharpness

MENU > Image Adjustment > Sharpness

This function allows you to adjust the sharpness of the image.

▶	The image becomes clearer.
◀	The image becomes blurred.



- You can adjust this when a **Video** signal is being input.
- After adjusting all of the image qualities, perform **Save Settings**.
If you do not perform **Save Settings**, your adjustments are reset when you select another mode.

Adjusting the color temperature

MENU > Image Adjustment > Color Temperature

This function allows you to adjust the color temperature.

High	The image becomes tinted with blue. (cold colors)
Middle	The image uses standard colors.
Low	The image becomes tinted with red. (warm colors)



- After adjusting all of the image qualities, perform **Save Settings**.
If you do not perform **Save Settings**, your adjustments are reset when you select another mode.

Saving your image quality adjustments

MENU > Image Adjustment > Save Settings

In the **User** under Image Mode, you can adjust and save settings for **Brightness, Contrast, Color, Tint, Sharpness, and Color Temperature**.

You can then select the saved settings as an image mode.



- If you perform **Factory Defaults**, saved settings are returned to their default values.
- After adjusting all of the image qualities, perform **Save Settings**.
If you do not perform **Save Settings**, your adjustments are reset when you select another mode.

Aspect

Selecting the aspect ratio for an image

MENU > Aspect

This function allows you to adjust the aspect ratio to suit the aspect of the image.

Auto	Projects using the aspect ratio of the input image. Select this mode for general projections.
Full Screen	Projects at the full size of the projection area regardless of the input signal's aspect ratio.
4:3	Projects at an aspect ratio of 4:3. Select this when 4:3 images are not projected correctly when using Auto.
16:9	Projects at an aspect ratio of 16:9. Select this when 16:9 images are not projected correctly when using Auto .
16:10	Projects at an aspect ratio of 16:10. Select this when the projecting a computer screen with an aspect ratio of 16:10.
True Size	When the resolution for the input signal is less than 1280 x 800, a smaller image is projected in proportion to the resolution. Select when you want to project using almost the same resolution as the computer screen.

Select the **Aspect** with the **OK** button, press the **▲/▼** buttons to select an option, and then press the **OK** button to confirm your selection.

Press the **MENU** button or the **BACK** button.



- The default is **Auto**.
- **Aspect** can only be adjusted when **PC/Component, HDMI, or Video** is being input.

Screen Color

Projecting onto a colored wall

MENU > Screen Color

This function allows you to adjust the color of the projected image according to the color of the screen or wall being projected on.

Normal	Select when using a standard screen. Projects using a color close to natural light.
Light Yellow	Select when projecting onto a light yellow wall.
Pink	Select when projecting onto a pink wall.
Light Green	Select when projecting onto a light green wall.
Blue	Select when projecting onto a blue wall.
Greenboard	Select when projecting onto a greenboard (dark green). Make image colors look closer to Normal when projected on a greenboard.

Select the **Screen Color** with the **OK** button, press the **▲/▼** buttons to select the content, and then press the **OK** button to confirm your selection.

Press the **MENU** button or the **BACK** button.



- The default is **Normal**.
- This can be adjusted when connected to a computer.

Phase

Adjusting the synchronization of the input signal

(Analog PC)

MENU > Phase

This function allows you to fine tune the timing of the image signal.

Adjust when the screen shifts or flickers.

Press the **◀/▶** buttons to adjust the values.

When you have finished making adjustments, press the **MENU** button or the **BACK** button.



- This is only available when an analog PC image is being input.
- Use this if the image is not projected correctly even after using executing the **AUTO PC** function. (P21)

H.Size

Adjusting the projection width of the input signal (Analog PC)

MENU > H.Size

This function allows you to adjust the horizontal width of the screen, making it wider or narrower.

Press the ◀/▶ buttons to adjust the values.

When you have finished making adjustments, press the **MENU** button or the **BACK** button.



- This is only available when an analog PC image is being input.
- Use this if the image is not projected correctly even after executing the AUTO PC function. (P21)

3D Invert

Adjusting 3D images

MENU > 3D Invert

This function allows you to adjust 3D content when the images are hard to view. Changes the display sequence of the image on the left and right.

On	Changes the display sequence of the image on the left and right.
Off	Does not change the display sequence of the image on the left and right.

Select the **3D Invert** with the **OK** button, press the ▲/▼ buttons to select the option, and then press the **OK** button to confirm your selection.

Press the **MENU** button or the **BACK** button.



- This is only available when 3D image signals are being projected.
- See "[Watching 3D content](#)" on page 85 for details.

Keystone

Adjusting keystone distortions

MENU > Keystone

This function allows you to correct keystone distortions.

Use this if you cannot correct the distortion using Auto Keystone.

Press the ◀/▶ buttons to adjust the values.

When you have finished making adjustments, press the **MENU** button or the **BACK** button.



- Keystone can be adjusted within ± 40 degrees.*1
- If you perform manual keystone adjustment, the auto keystone function is disabled until the next time the projector is started. However, you can enable auto keystone again by setting **Auto Keystone** to **Off**, and then setting it back to **On**.

* 1 When projecting an input signal with 3D timing, the keystone can only be adjusted within ± 4 degrees.

LED Mode

Adjusting the LED light intensity

MENU > LED Mode

This function allows you to adjust the brightness of the LED light source.

By changing the LED mode, you can reduce the amount of electricity consumed and the noise.

Normal	Projects at standard brightness.
Eco	Reduces the brightness of the LED, and therefore the amount of electricity consumed as well as the fan noise.

Select the **LED Mode** with the **OK** button, press the ▲/▼ buttons to select the content, and then press the **OK** button to confirm your selection.

Press the **MENU** button or the **BACK** button.



- The default is **Normal**.
- The setting is saved even if you turn off the projector.

HDMI level range

MENU > HDMI level range

Select if necessary when projecting movie titles via HDMI input.

Auto	Automatically selects the signal level. This may not be supported depending on the video device.
Full	Select when the HDMI output for the video device is set to "Extended". The name for "Extended" varies depending on the video device.
Limit	Select when the HDMI output for the video device is set to "Limit". The name for "Limit" varies depending on the video device.

Select the **HDMI level range** with the **OK** button, press the **▲/▼** buttons to select the option, and then press the **OK** button to confirm your selection.

Press the **MENU** button or the **BACK** button.

Setup

MENU > Setup

This function allows you to move to the home screen's **Setup** screen from the OSD.

Press the **OK** button to display the home screen's **Setup** screen.



- You cannot return to the selected input signal with the **BACK** button.

Information

MENU > Information

This function displays the current information such as the input, resolution, and so on.

Watching 3D content

This projector supports 3D content display using the DLP Link system.

This projector only supports 3D image signals in frame sequential format. Other formats such as the Frame Packing format or the Side-by-Side format are not supported.

You need the following items to project and watch 3D content.

- 3D content capable device
- * For example, a computer with graphics board and software capable of outputting 3D images at 120 Hz frame sequential.
- 3D content
- DLP-Link active electronic shutter 3D glasses
- * Not all 3D glasses are guaranteed to work correctly.

Supported 3D signal (120 Hz)

SVGA (800 x 600), XGA (1024 x 768, Reduce Blanking),
WXGA (1280 x 800, Reduce Blanking)

To watch 3D content:

1. Connect the projector to a computer with a computer cable or an HDMI cable.
 - * When connecting the projector to a computer, make sure you switch the computer's output signal so that it is only outputting to the projector (do not use dual mode).
2. Output a 120 Hz frame sequential signal from the computer connected to the projector.
3. Turn on the DLP-Link system 3D glasses, and wear them to enjoy the content.
4. If you cannot see 3D objects, change the "**3D Invert**" setting from the OSD.



- It may be difficult to view 3D images if the room is too bright. Also, if there are fluorescent lights (50 Hz) in the room, the light may flicker when using 3D glasses. If this happens, turn down or turn off the fluorescent light.
- You cannot change the image mode when viewing 3D content. Keystone can only be adjusted within ± 4 degrees.
- 3D content may not be displayed depending on the computer performance such as graphics board, memory, or CPU.



Cautions when viewing 3D content

- **3D content should not be viewed by people with a history of photosensitive epilepsy, people with heart conditions, pregnant women, the elderly, people with serious illnesses, or people with a history of epileptic seizures. Viewing 3D content could aggravate their pre-existing conditions.**
- **Do not view 3D content if you are feeling unwell or are tired. In addition, do not view 3D content if you are sleep deprived or inebriated.**
- **If you notice any of the following symptoms, stop viewing the 3D content immediately and wait until the symptoms subside.**
 - **If the image appears to be doubled or if the 3D effect is not clear.**
 - **Stop viewing if you feel your physical condition change, such as if you feel fatigued or unwell.**
 - **When enjoying 3D content that rotates, rolls, or shakes you may feel as if you are were moving, which can trigger a form of "sea sickness".**
- **Viewing 3D content for too long may cause eyestrain. To avoid this, be sure to take regular breaks. Viewing 3D content for too long or viewing them from an angle may cause eyestrain and so on.**
- **Children viewing 3D content should always be accompanied by an adult. Children may not tell you if they are feeling unwell when viewing 3D content, so always be sure to check with the child. The minimum recommended age for viewing 3D content is six years old.**
- **Make sure you are at an appropriate distance from the front of the screen when viewing 3D content. Make sure you are at least three times the height of the screen away from the screen when viewing 3D content, and that your eyes are level with the screen.**
- **The image source may be reversed. Check that the settings are correct and that the 3D effect is being correctly applied. If the image is inverted and the left and right eye images are swapped, the 3D effect does not work, which could cause eye strain or cause you to feel unwell.**

Appendix

LED Indicators

The LED indicators display the operating status of the projector.

Operating status	LED Indicator	
	STATUS	POWER
Standby	Off	Red solid on
Warm up	Off	Blue blinking
Projecting	Off	Blue solid on
Button pressed when Key Lock is on (Except buttons operations in order to release Key Lock .)	Red lamp lights for 3 seconds	Standby: Red solid on Projecting: Blue solid on
Key Lock switched between on and off	Lights up red for 0.5 second	Standby: Red solid on Projecting: Blue solid on
Temperature abnormality	Flashes red 1 times	Off
Fan abnormality	Flashes red 4 times	Off

Troubleshooting

The projector does not turn on

Cause	Remedy
The power cord is not properly connected.	Make sure that the power cord is properly connected. (P26)
The power cord has just been connected.	Wait for a few seconds. Power cannot be turned on until the POWER button lights red. (P26)
An internal abnormality has occurred.	Is the STATUS LED blinking? If it is blinking, a temperature or fan abnormality has occurred. (P88) In the event of a temperature abnormality, make sure that the exhaust vents aren't blocked and check that the projector is not being used in a high temperature environment. In the event of a fan abnormality, contact the Canon Customer Support Center.
Key lock is ON.	When you press the POWER button does the STATUS LED light up? If lit, key lock is ON. Press and hold the INPUT button on the operation panel or the AUTO PC button on the remote control. Clear the key lock and then turn the power on. (P20, P21 , P74)

No image

Cause	Remedy
The cables are not properly connected.	Check that the computer and video device are properly connected to the projector.
The image is not being output from the video device.	Make sure that the video device that is connected is playing back the image.
The input signal to be projected is not selected.	Select the input signal to be projected by pressing the INPUT button or the input selection button on the remote control. (P20, P21)
The format of the image signal is incorrect.	Make sure that the output on the source device side will support the signals of the projector. (P95 ~ P97)
BLANK is on.	Press the BLANK button on the remote control. (P21)
The output to the external monitor on the notebook computer side is not setup properly.	Set the output to the external monitor for the notebook computer to ON. To turn the output to the external monitor ON, press [LCD] or [VGA] while pressing and holding [Fn] on the computer keyboard, or press the function key that has the screen icon on it. (P35) In addition, key operation will differ depending on the notebook type. For more information, check your notebook manual.
Lens shutter is not open.	Open the lens shutter. (P27)

No sound

Cause	Remedy
The audio cable is not properly connected.	Check the connection for the audio cable.
MUTE is on.	Press the MUTE button on the remote control. (P21)
The audio volume is low.	Adjust the volume by pressing the VOL+ button on the remote control. (P21)
An audio cable equipped with too much resistance is used.	Use a resistance-free audio cable.
No image.	When using PC/Component, HDMI or video input, if the input signal is not projected, the audio cannot be output.

Blurred image

Cause	Remedy
The lens is not correctly focused.	Focus the image using the focus ring. (P27)
The distance to the screen is too close.	Check whether the distance to the screen is appropriate. If the screen is not about 0.5 m or more away, the image will not focus. (P32)
The projector and the screen are not properly aligned.	Check whether or not the image is projecting from too steep an angle relative to the screen.
The projector was moved to an area where the temperature differs significantly.	If the projector is moved from a cold area to a hot one, the lens may cloud. After a little while the lens will clear and the image will be able to be properly projected.
Dirty lens.	Clean the lens. (P94)

The image does not display properly

Cause	Remedy
The image shifts left or right with analog PC inputs. Also, the image flickers.	Execute the AUTO PC function.
The image is top/bottom reversed or left/right reversed.	There is a problem with the ceiling mounting/rear projection feature setup. Check the setting details for Setup > Advanced > Projector Position. (P63)
Using a computer cable in which some of the pins do not connect.	Use the connector cable included with the projector. For commercially available parts, use a computer cable in which all of the pins connect.

Power shuts down

Cause	Remedy
The air intake vents or exhaust vents are blocked.	If the air intake vents or exhaust vents are blocked, the temperature inside the projector will rise and the projector will automatically shut down for protection. (P20) After the temperature of the projector drops, and the air intake vents and exhaust vents are unblocked, turn it on again.
Improper operating environment.	Check that the operating environment is 0°C to 40°C. (P16) When using the projector in a high altitude location between 1500 m to 3000 m, set it to the high altitude mode. (P62)
When the causes for the above cannot be found.	Technical problems may occur so unplug the power cord. Contact your Canon Customer Support Center as soon as possible. (Back cover of this manual)

Remote control does not work

Cause	Remedy
Batteries aren't inserted properly/ Batteries are drained.	Check that the batteries are inserted correctly. If batteries are in the remote control, replace them with new ones. (P22)
The remote control is being operated from a place outside its range.	Check that the remote control is operating within range of the remote control receiver on the projector. (P22)
There is something between the remote control and projector.	Remove any obstructions between the remote control receiver on the projector and the remote control. Operate the remote control from a position free of obstructions.
The operating environment of the remote control is not appropriate.	Make sure that direct sunlight and strongly lit lamps are not shining on the remote control receiver of the projector. (P22)
Remote control operation has stopped because of the key lock.	When you press the POWER button, does the STATUS LED light up? If lit, key lock is ON. Press and hold INPUT on the operation panel or the AUTO PC button on the remote control to release the key lock. (P74)

Care and Cleaning

Cleaning the lens

Please clean the lens if dust and dirt can be seen on the lens surface.

- To clean the lens, use an a commercially available blower brush for cameras or a lens cleaning cloth.
- Before cleaning the lens, disconnect the power cable and completely cool down the projector.
- Do not use waxes, alcohol, benzene, thinner or other chemical detergents.

Cleaning the projector

Before cleaning, turn off the projector in the order described on "[Turning off the projector](#)" on page 30, and unplug the power cord.

- **Remove dirt and dust from the projector by wiping it with a soft, lint-free cloth.**
- **To remove stubborn dirt or stains, moisten a cloth with a mild detergent diluted with water and wipe the case.**
- **Do not use waxes, alcohol, benzene, thinner or other chemical detergents. Using these agents may damage the projector outer casing.**
- **Do not rub or brush the surface of the top of the projector. Doing so may damage the surface.**



Caution

Timing chart

Analog PC input

Resolution	Mode	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 x 480	VGA	31.469	59.940
	VGA	37.861	72.809
	VGA	37.500	75.000
	VGA	43.269	85.008
720 x 400	-	31.469	70.087
800 x 600	SVGA	37.879	60.317
	SVGA	48.077	72.188
	SVGA	46.875	75.000
	SVGA	53.674	85.061
	SVGA*	77.425	119.854
1024 x 768	XGA	48.363	60.004
	XGA	56.476	70.069
	XGA	60.023	75.029
	XGA	68.667	84.997
	XGA*	97.551	119.989
1152 x 864	-	67.500	75.00
1024 x 576	-	35.820	60.00
1024 x 600	-	41.467	64.995
1280 x 720	-	45.000	60
1280 x 768	WXGA	47.776	59.870
1280 x 800	WXGA	49.702	59.810
	WXGA	62.795	74.934
	WXGA	71.554	84.880
	WXGA*	101.563	119.909
1280 x 1024	SXGA	63.981	60.020
	SXGA	79.976	75.025
1280 x 960	-	60.000	60.000
	-	85.938	85.002
1366 x 768	-	47.712	59.790
1440 x 900	WXGA+	55.935	59.887
1400 x 1050	SXGA+	65.317	59.978
1680 x 1050	WSXGA+	65.290	59.954
640 x 480@67Hz	MAC13	35.000	66.667
832 x 624@75Hz	MAC16	49.722	74.546
1024 x 768@75Hz	MAC19	60.241	75.020
1152 x 870@75Hz	MAC21	68.68	75.06



* Supported timing for 3D signal in frame sequential format

HDMI input (digital PC)

Resolution	Mode	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 x 480	VGA	31.469	59.940
	VGA	37.861	72.809
	VGA	37.500	75.000
	VGA	43.269	85.008
720 x 400	-	31.469	70.087
800 x 600	SVGA	37.879	60.317
	SVGA	48.077	72.188
	SVGA	46.875	75.000
	SVGA	53.674	85.061
	SVGA*	77.425	119.854
1024 x 768	XGA	48.363	60.004
	XGA	56.476	70.069
	XGA	60.023	75.029
	XGA	68.667	84.997
	XGA*	97.551	119.989
1152 x 864	-	67.500	75.00
1024 x 576	-	35.820	60.00
1024 x 600	-	41.467	64.995
1280 x 720	-	45.000	60
1280 x 768	WXGA	47.776	59.870
1280 x 800	WXGA	49.702	59.810
	WXGA	62.795	74.934
	WXGA	71.554	84.880
	WXGA*	101.563	119.909
1280 x 1024	SXGA	63.981	60.020
	SXGA	79.976	75.025
1280 x 960	-	60.000	60.000
	-	85.938	85.002
1366 x 768	-	47.712	59.790
1440 x 900	WXGA+	55.935	59.887
1400 x 1050	SXGA+	65.317	59.978
1680 x 1050	WSXGA+	65.290	59.954
640 x 480	MAC13	35.000	66.667
832 x 624	MAC16	49.722	74.546
1024 x 768	MAC19	60.241	75.020
1152 x 870	MAC21	68.68	75.06



* Supported timing for 3D signal in frame sequential format

HDMI input (digital video)

Signal format	Horizontal frequency (kHz)	Vertical frequency (Hz)
480i	15.73	59.94
480p	31.47	59.94
576i	15.63	50
576p	31.25	50
720/50p	37.5	50
720/60p	45.00	60
1080/50i	28.13	50
1080/60i	33.75	60
1080/50P	56.25	50
1080/60P	67.5	60

Component video input

Signal format	Horizontal frequency (kHz)	Vertical frequency (Hz)
480i	15.73	59.94
480p	31.47	59.94
576i	15.63	50
576p	31.25	50
720/50p	37.5	50
720/60p	45.00	60
1080/50i	28.13	50
1080/60i	33.75	60
1080/50P	56.25	50
1080/60P	67.5	60

Video input

Signal format	Horizontal frequency (kHz)	Vertical frequency (Hz)
NTSC	15.73	60
PAL	15.63	50
SECAM	15.63	50
PAL-M	15.73	60
PAL-N	15.63	50
PAL-60	15.73	60
NTSC4.43	15.73	60

Projector specifications

◆ All specifications are subject to change without notice.

Model name		LE-5W
System		1-Chip DLP system
Display device	Type	DMD x 1
	Size/Aspect ratio	0.45 type/16:10
	Resolution	WXGA equivalent
Projection lens	Zoom	Fixed
	Focal length/F-value	11.7 mm/F1.65
Light source		LED (R, G, B)
Screen size		20" (0.5 m) - 240" (6.1 m)
No. of colors reproduced		Approx. 1 billion 73.74 million colors
Brightness		500 Lumens (presentation)
Contrast ratio		3000:1 (All white: all black, presentation time)
Brightness uniformity		85% (presentation)
Speaker		2.5 Watt x 2
Maximum input resolution		1920 x 1080
Video signal	Digital video	1080p / 1080i / 720p / 576p / 480p / 576i / 480i
	Digital PC	WSXGA+ / WXGA+ / SXGA+ / WXGA / SXGA / XGA / VGA / MAC
	Analog PC	WSXGA+ / WXGA+ / SXGA+ / WXGA / SXGA / XGA / VGA / MAC
	Component video	1080p / 1080i / 720p / 576p / 480p / 576i / 480i
	Video	NTSC/ NTSC4.43/ PAL/ PAL-M/ PAL-N/SECAM/PAL60
Input terminals	PC	Analog PC/Component
	HDMI	Digital PC/Digital video
	VIDEO	Video
	AUDIO IN	(ϕ 3.5 mm) Audio input
	USB type A	Supports videos/photos/music/documents
	USB type B	USB display and USB file transfer
	SD card slot	Videos/photos/music/documents
Audio output terminal	AUDIO OUT	(ϕ 3.5 mm) Audio output
Internal memory		1.5GB
Dimensions	248 mm (W) x 54.9 mm (H) x 193 mm (D) (including protrusion)	
	248 mm (W) x 49.4 mm (H) x 193 mm (D) (excluding protrusion)	

Weight	1.6 kg (3.5 lb)
Power supply	AC100-240V, 50-60 Hz
Power consumption/Standby power	130 W/0.5 W
Operating temperature range	0°C to 40°C 0°C ~ to 30°C (Above sea level: 1500 to 3000 m)
Operating relative humidity	10% - 90% (without condensation)

Remote control

Dimensions	86.3 mm x 40.2 mm x 6.2 mm
Weight	16.4 g
Battery type	CR2025




* Compliance with ISO/IEC 21118:2012.

* Note that using the projector continuously for a long period of time may make the optical components deteriorate faster.

Dimensions

- 248 mm (W) x 54.9 mm (H) x 193 mm (D) (including protrusion)
- 248 mm (W) x 49.4 mm (H) x 193 mm (D) (excluding protrusion)

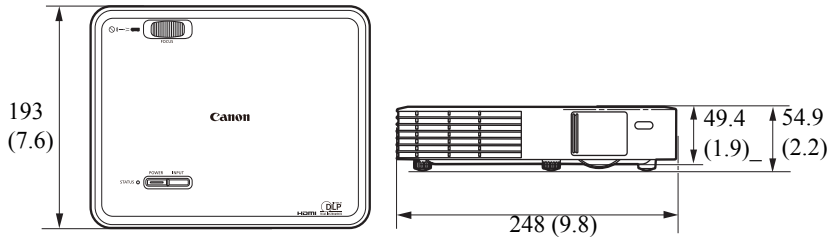

Units: mm (inch)

Copyright information

Notes on copyrights

Please be aware that if this projector is used for commercial purposes, or is used for public viewing in coffee shops or hotels, and that if the screen size switching function is used, screen compression or elongation can result, and there may be some infringement on copyrights as defined under copyright laws.


Trademarks

- DLP, Digital Micromirror Device, and DMD are trademarks of Texas Instruments.
- Microsoft, Windows, Windows XP, Windows Vista, and Windows 7 are registered trademarks, or trademarks and product names of Microsoft Corporation in the United States and/or other countries.
- Mac, Mac OS and Macintosh are trademarks of Apple Inc. registered in the United States and/or other countries.
- HDMI, HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks HDMI Licensing, LLC.
- Other company names and product names are trademarks or registered trademarks of their respective companies.

Optional accessory

- Remote control Part number: LE-RC01

On-screen menu tree

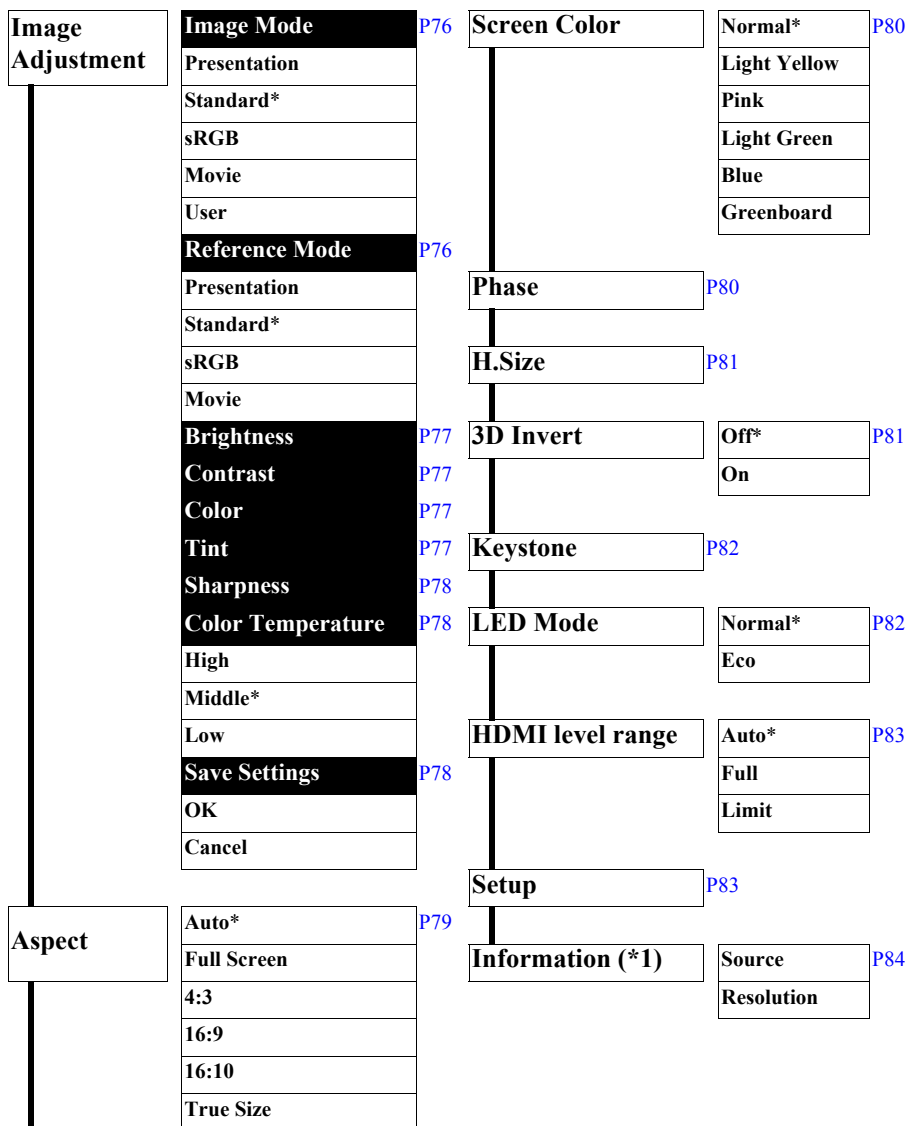

* Indicates an item that is factory-set (after reset).

*1 is only for display and cannot be selected.

Setup menu configuration

Basic		Advanced		
	Key Lock	P59	High Altitude Mode	P62
	Off*		Off*	
	On		On	
	Auto Keystone	P59	Projector Position	P63
	Off		Front Table*	
	On*		Rear Table	
	Direct Power On	P60	Rear Ceiling	
	Off*		Front Ceiling	
	On		Menu Display Time	P63
	Auto Power Off	P60	5 sec	
	Disable		10 sec	
	5 min		15 sec	
	10 min		20 sec	
	15 min*		25 sec	
	20 min		30 sec*	
	25 min		3 min	
	30 min		Closed Caption Enable	P64
	Background Color	P61	Off*	
	Black*		On	
	Blue		Closed Caption Channel	P64
	Blank Color	P61	CC1*	
	Black*		CC2	
	Blue		CC3	
	Splash Screen	P62	CC4	
	Logo*		Firmware Upgrade	
	Black		Yes	
	Blue		No	
			Factory Defaults	P65
			Yes	
			No	

Videos Settings

Play Mode	P65
All Videos in Folder*	
One Video	
Play Order	P66
Normal*	
Shuffle	
Repeat	P66
Off*	
On	

Music Settings

Play Mode	P69
All Music in Folder*	
One music	
Play Order	P69
Normal*	
Shuffle	
Repeat	P70
Off*	
On	

Photos Settings

Slideshow Speed	P67
Fast	
Normal*	
Slow	
Slideshow Mode	P67
All Photos in Folder	
One Photo Click*	
Slideshow Order	P68
Normal*	
Shuffle	
Repeat	P68
Off*	
On	

Information (*1)

Memory/Internal Memory	P70
Memory/SD Card	P71
Memory/USB Drive	P71
LED Time	P72
Firmware Version	P72

Language P73

English*	Norwegian
German	Turkish
French	Polish
Italian	Hungarian
Spanish	Czech
Portuguese	Danish
Swedish	Chinese (Simplified)
Russian	Chinese (Traditional)
Dutch	Japanese
Finnish	

* Indicates an item that is factory-set (after reset).

*1 is only for display and cannot be selected.

**CANON INC.**

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

U.S.A.**CANON U.S.A. INC.**

One Canon Park, Melville, NY 11747, U.S.A.
For all inquiries concerning this product, call toll free in the U.S. 1-800-OK-CANON

CANADA**CANON CANADA INC. HEADQUARTERS**

6390 Dixie Road, Mississauga, Ontario L5T 1P7, Canada

CANON CANADA INC. MONTREAL BRANCH

5990, Côte-de-Liesse, Montréal Québec H4T 1V7, Canada

CANON CANADA INC. CALGARY OFFICE

2828, 16th Street, N.E. Calgary, Alberta T2E 7K7, Canada

For all inquiries concerning this product, call toll free in Canada

1-800-OK-CANON

EUROPE, AFRICA & MIDDLE EAST**CANON EUROPE LTD.**

3 The Square Stockley Park, Uxbridge, Middlesex, UB11 1ET United Kingdom

CANON EUROPA N.V.

Bovenkerkerweg 59, 1185 XB Amstelveen, The Netherlands

CANON FRANCE S.A.S

17, quai du President Paul Doumer, 92414 Courbevoie Cedex, France

CANON UK LTD.

Woodhatch Reigate Surrey RH2 8BF, United Kingdom

CANON DEUTSCHLAND GmbH

Europark Fichtenhain A10, 47807 Krefeld, Germany

CANON ITALIA S.p.A.

Via Milano 8 I-20097 San Donato Milanese, Milano, Italy

CANON Schweiz AG

Geschäftsbereich Wiederverkauf, Industriestrasse 12, CH-8305 Dietlikon,

Switzerland

CANON GMBH

Zetschegasse 11, A-1230 Wien, Austria

CANON España, S.A.

Av. De Europa, 6 Alcobendas 28108 Madrid, Spain

CANON PORTUGAL S.A.

Rua Alfredo da Silva, 14 Alfragide 2610-016 Amadora, Portugal

CANON Belgium N.V. / S.A.

Berkenlaan 3, 1831 Diegem (Mechelen), Belgium

CANON Netherland NV

Neptunusstraat 1, 2132 JA Hoofddorp, The Netherlands

CANON LUXEMBOURG S.A.

Rue des Joncs 21, L-1818 Howald, Luxembourg

CANON DANMARK A / S

Knud Hoejgaards Vej 1 DK-2860 Soeborg, Danmark

CANON OY

Huopalahdentie 24 PL 1 00351 Helsinki, Finland

CANON SVENSKA AB

Gustav III:s Boulevard 26 169 88 Solna, Sweden

CANON NORGE as

Hallagerbakken 110, Postboks 33, Holmlia, 1201 Oslo, Norway

CENTRAL & SOUTH AMERICA**CANON LATIN AMERICA, INC.**

703 Waterford Way, Ste. 400 Miami, FL 33126, U.S.A.

ASIA**CANON (China) Co., Ltd.**

15F Jinbao Building No.89 Jinbao Street, Dongcheng District, Beijing 100005, China

CANON HONGKONG CO., LTD.

19 / F., The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon, Hong Kong

CANON SINGAPORE PTE. LTD.

1 HarbourFront Avenue, #04-01 Keppel Bay Tower, Singapore 098632

CANON KOREA CONSUMER IMAGING INC.

Canon BS Tower 5F, #168-12 Samseong-dong, Gangnam-gu, Seoul, Korea

OCEANIA**CANON AUSTRALIA PTY. LTD.**

1 Thomas Holt Drive, North Ryde, N.S.W. 2113, Australia

CANON NEW ZEALAND LTD.

Akoranga Business Park, Akoranga Drive, Northcote, Auckland, New Zealand

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>