
fx-82MS fx-83MS fx-85MS fx-270MS fx-300MS fx-350MS User's Guide





load from Www.Somanuals.com. All Manuals Search And Dowl

Removing and Replacing the Calculator's Cover


Before starting

Holding the cover as shown in the illustration, slide the unit out of the cover.

After you are finished2

Holding the cover as shown in the illustration, slide the unit out of the cover.

 Always slide the keyboard end of the unit into the cover first. Never slide the display end of the unit into the cover.

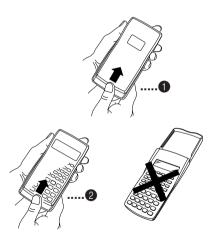

Safety Precautions

Be sure to read the following safety precautions before using this calculator. Keep this manual handy for later reference.



Caution

This symbol is used to indicate information that can result in personal injury or material damage if ignored.

Batteries

- After removing the battery from the calculator, put it in a safe place where it will not get into the hands of small children and accidentally swallowed.
- Keep batteries out of the reach of small children. If accidentally swallowed, consult with a physician immediately.
- Never charge batteries, try to take batteries apart, or allow batteries to become shorted. Never expose batteries to direct heat or dispose of them by incineration.
- Misuse of batteries can cause them to leak and damage nearby items, and can create the risk of fire and personal injury.
 - Always make sure that the battery's positive ⊕ and negative ⊖ ends are facing correctly when you load it into the calculator.
 - Remove the battery if you do not plan to use the calculator for a long time (fx-82MS/fx-83MS/fx-270MS/fx-350MS).
 - Use only the type of battery specified for this calculator in this manual.

Disposing of the Calculator

- Never dispose of the calculator by burning it. Doing so can cause certain components to suddenly burst, creating the risk of fire and personal injury.
- The displays and illustrations (such as key markings) shown in this User's Guide are for illustrative purposes only, and may differ somewhat from the actual items they represent.

load from Www.Somanuals.com? All Manuals Search And Dowl

- The contents of this manual are subject to change without notice.
- In no event shall CASIO Computer Co., Ltd. be liable to anyone for special, collateral, incidental, or consequential damages in connection with or arising out of the purchase or use of these materials. Moreover, CASIO Computer Co., Ltd. shall not be liable for any claim of any kind whatsoever against the use of these materials by any other party.

Handling Precautions

- Even if the calculator is operating normally, replace the battery at least once every three years for the fx-83MS/fx-85MS/fx-270MS/fx-300MS/fx-350MS, or at least once every two years for the fx-82MS.

A dead battery can leak, causing damage to and malfunction of the calculator. Never leave a dead battery in the calculator.

- The battery that comes with this unit discharges slightly during shipment and storage. Because of this, it may require replacement sooner than the normal expected battery life.
- Low battery power can cause memory contents to become corrupted or lost completely. Always keep written records of all important data.
- Avoid use and storage in areas subjected to temperature extremes.

Very low temperatures can cause slow display response, total failure of the display, and shortening of battery life. Also avoid leaving the calculator in direct sunlight, near a window, near a heater or anywhere else it might be exposed to very high temperatures. Heat can cause discoloration or deformation of the calculator's case, and damage to internal circuitry.

 Avoid use and storage in areas subjected to large amounts of humidity and dust.

Take care never to leave the calculator where it might be splashed by water or exposed to large amounts of humidity or dust. Such conditions can damage internal circuitry.

- Never drop the calculator or otherwise subject it to strong impact.
- Never twist or bend the calculator.
 Avoid carrying the calculator in the pocket of your trousers or other tight-fitting clothing where it might be subjected to twisting or bending.
- Never try to take the calculator apart.

the case

- Never press the keys of the calculator with a ball-point pen or other pointed object.
 Use a soft, dry cloth to clean the exterior of the cal-
 - Use a soft, dry cloth to clean the exterior of the calculator.
 If the calculator becomes very dirty, wipe it off with a cloth moistened in a weak solution of water and a mild neutral household detergent. Wring out all excess moisture before wiping the calculator. Never use thinner, benzene or other volatile agents to clean the calculator. Doing so can remove printed markings and can damage

Contents

Safety Precautions
Two-line Display 7
Before getting started
■ Modes 7 ■ Input Capacity 8 ■ Making Corrections During Input 8 ■ Replay Function 9 ■ Error Locator 9
■ Multi-statements 9 ■ Exponential Display Formats 10 ■ Decimal Point and Separator Symbols 10 ■ Initializing the Calculator 11
Basic Calculations11
■ Arithmetic Calculations
Memory Calculations 16
■ Answer Memory 16 ■ Consecutive Calculations 16 ■ Independent Memory 16 ■ Variables 17
Scientific Function Calculations 17 Trigonometric/Inverse Trigonometric Functions 18

load from Www.Somanuals.com. All Manuals Search And Dowl

■ Hyperbolic/Inverse Hyperbolic Functions 18

■ Common and Natural Logarithms/ Antilogarithms
■ Engineering Notation Calculations
Statistical Calculations 21
Standard Deviation
Technical Information 28
■ When you have a problem. 28 ■ Error Messages 28 ■ Order of Operations 30 ■ Stacks 31 ■ Input Ranges 32
Power Supply 34

Specifications 37

Two-line Display



The two-line display makes it possible to view both the calculation formula and its result at the same time.

- The upper line shows the calculation formula.
- · The lower line shows the result.

A separator symbol is displayed every three digits when the integer part of the mantissa has more than three digits.

Before getting started...

■ Modes

Before starting a calculation, you must first enter the correct mode as indicated in the table below.

To perform this type of calculation:	Perform this key operation:	To enter this mode:
Basic arithmetic calculations	MODE 1	COMP
Standard deviation	MODE 2	SD
Regression calculations	MODE 3	REG

- Pressing the week key more than once displays additional setup screens. Setup screens are described in the sections of this manual where they are actually used to change the calculator setup.
- In this manual, the name of the mode you need to enter in order to perform the calculations being described is indicated in the main title of each section.

Example:

Statistical SD REG

Note!

• To return the calculation mode and setup to the initial defaults shown below, press [CLR 2 (Mode)]

Calculation Mode: COMP
Angle Unit: Deg
Exponential Display Format: Norm 1
Fraction Display Format: ab/c
Decimal Point Character: Dot

- Mode indicators appear in the upper part of the display.
- Be sure to check the current calculation mode (SD, REG, COMP) and angle unit setting (Deg, Rad, Gra) before beginning a calculation.

■ Input Capacity

- The memory area used for calculation input can hold 79 "steps." One step is taken up each time you press a number key or arithmetic operator key (♣, ♠, ♣, ♣). A or key operation does not take up a step, so inputting ♂, for example, takes up only one step.
- You can input up to 79 steps for a single calculation. Whenever you input the 73rd step of any calculation, the cursor changes from "_" to "■" to let you know memory is running low. If you need to input more than 79 steps, you should divide your calculation into two or more parts
- Pressing the Ann key recalls the last result obtained, which
 you can use in a subsequent calculation. See "Answer
 Memory" for more information about using the Ann key.

■ Making Corrections During Input

- Press I to delete the number or function at the current cursor position.
- Press (MS) to change to an insert cursor [2]. Inputting something while the insert cursor is on the display inserts the input at the insert cursor position.
- Pressing [IIIS], or returns to the normal cursor from the insert cursor.

■ Replay Function

- Pressing the or key while a replay memory calculation is on the display changes to the editing screen.
- Pressing the or key immediately after you finish a calculation displays the editing screen for that calculation
- Pressing AG does not clear replay memory, so you can recall the last calculation even after you press AG.
- Replay memory capacity is 128 bytes for storage of both expressions and results.
- Replay memory is cleared by any of the following actions.

When you press the ON key

When you initialize modes and settings by pressing $\blacksquare\blacksquare$ (LR 2 (or 3) \blacksquare

When you change from one calculation mode to another When you turn off the calculator.


■ Error Locator

 Pressing or after an error occurs displays the calculation with the cursor positioned at the location where the error occurred.

■ Multi-statements

A multi-statement is an expression that is made up of two or more smaller expressions, which are joined using a colon (:).

• Example: To add 2 + 3 and then multiply the result by 4



■ Exponential Display Formats

This calculator can display up to 10 digits. Larger values are automatically displayed using exponential notation. In the case of decimal values, you can select between two formats that determine at what point exponential notation is used.

To change the exponential display format, press the weekey a number of times until you reach the exponential display format setup screen shown below.

• Press 3. On the format selection screen that appears, press 1 to select Norm 1 or 2 for Norm 2.

Norm 1

With Norm 1, exponential notation is automatically used for integer values with more than 10 digits and decimal values with more than two decimal places.

• Norm 2

With Norm 2, exponential notation is automatically used for integer values with more than 10 digits and decimal values with more than nine decimal places.

All of the examples in this manual show calculation results using the Norm 1 format.

■ Decimal Point and Separator Symbols

You can use the display setup (Disp) screen to specify the symbols you want for the decimal point and 3-digit separator

 To change the decimal point and separator symbol setting, press the week key a number of times until you reach the setup screen shown below.



· Display the selection screen.

1 **|**

SHIF CLR 3 (AII)
Basic Calculations COMP
■ Arithmetic Calculations
Use the [600] key to enter the COMP Mode when you want to perform basic calculations.
COMP
 Negative values inside of calculations must be enclosed within parentheses. For details, see "Order of Operations." It is not necessary to enclose a negative exponent within parentheses.
$\sin 2.34 \times 10^{-5} \rightarrow \text{ sin } 2.34 \text{ EXP } \bigcirc 5$
• Example 1: $3 \times (5 \times 10^{-9}) = 1.5 \times 10^{-8}$
3 X 5 EXP (-) 9 =
• Example 2: $5 \times (9+7) = 80$ 5 🗶 (9 🛨 7)
 You can skip all operations before .
■ Fraction Operations
• Fraction Calculations
 Values are displayed in decimal format automatically whenever the total number of digits of a fractional value (integer + numerator + denominator + separator marks) exceeds 10.
load from Www.Somanuals.c 5त1 . ¹ All Manuals Search And Dow

• Press the number key (1 or 2) that corresponds to

1 (Dot): Period decimal point, comma separator 2 (Comma): Comma decimal point, period separator

 Perform the following key operation when you want to initialize the calculation mode and setup, and clear re-

the setting you want to use.

play memory and variables.

■ Initializing the Calculator

• Example 1:
$$\frac{2}{3} + \frac{1}{5} = \frac{13}{15}$$

2 @\hbar{8} 3 \ldot 1 @\hbar{8} 5 \ldot \ldot 13_15.

• Example 2:
$$3\frac{1}{4} + 1\frac{2}{3} = 4\frac{11}{12}$$
 $3\frac{a}{8} = 4\frac{11}{12}$

1
$$a$$
½ 2 a ½ 3 ■ 4_11_12.
• Example 3: $\frac{2}{4} = \frac{1}{2}$ 2 a ½ 4 ■

• Example 4:
$$\frac{1}{2} + 1.6 = 2.1$$
 1 @\(2 \) 1.6

· Results of calculations that mix fraction and decimal values are always decimal.

• Decimal ← Fraction Conversion

- Use the operation shown below to convert calculation results between decimal values and fraction values.
- · Note that conversion can take as long as two seconds to perform.

• Example 1: 2.75 =
$$2\frac{3}{4}$$
 (Decimal \rightarrow Fraction)
2.75 2.75 2.75 2.75 2.75

$$= \frac{11}{4} \quad \text{surf die} \quad \frac{2 \cdot 3 \cdot 4}{11 \cdot 4}.$$
Frample 2: $\frac{1}{4} \leftrightarrow 0.5 \text{ (Fraction } \leftrightarrow \text{Decimal)}$

• Example 2:	2	
	1 🐠 2 🖪	1∟2.
	<u>a</u> %	0.5
	<u>a</u> %	1∟2.

• Example: $1\frac{2}{3} \leftrightarrow \frac{5}{3}$

1 a 2 a 3 = 1 2 3.

SHIP de 5 3.

- You can use the display setup (Disp) screen to specify the display format when a fraction calculation result is greater than one.
- To change the fraction display format, press the week ey a number of times until you reach the setup screen shown below.



- Display the selection screen.
- Press the number key (1 or 2) that corresponds to the setting you want to use.
 - 1 (ab%): Mixed fraction 2 (d/c): Improper fraction
- An error occurs if you try to input a mixed fraction while the d/c display format is selected.

■ Percentage Calculations

• Example 1: To calculate 12% of 1500 (180)

1500 X 12 SHIFT %

• Example 2: To calculate what percentage of 880 is 660 (75%)

660 **3** 880 SHIFT %

• Example 3: To add 15% onto 2500 (2875)

2500 X 15 SHIFT % +

• Example 4: To discount 3500 by 25% (2625)

3500 🔀 25 SHIFT % 🗖

load from Www.Somanuals.c5n1.3All Manuals Search And Dowl

• Example 5: To discount the sum of 168, 98, and 734 by 20% (800)
168 + 98 + 734 = Ans SHIFT STO A
APRA A × 20 SHIFT % -
* As shown here, if you want to use the current Answer Memory value in a mark up or discount calculation, you need to assign the Answer Memory value into a variable and then use the variable in the mark up/discount calculation. This is because the calculation performed when si pressed stores a result to Answer Memory before the key is pressed.
• Fxample 6: If 300 grams are added to a test sample

originally weighing 500 grams, what is the percentage increase in weight? (160%)300 **5**00 SHIFT %

• Example 7: What is the percentage change when a value is increased from 40 to 46? How about to 48? (15%, 20%)

> 46 **4**0 SHIFT %

■ Degrees, Minutes, Seconds Calculations

- You can perform sexagesimal calculations using degrees (hours), minutes, and seconds, and convert between sexagesimal and decimal values.
- Example 1: To convert the decimal value 2.258 to a sexagesimal value and then back to a decimal value

2.258 2.258 2°15°28.8

• Example 2: To perform the following calculation:

 $12^{\circ}34'56" \times 3.45$

12 \cdots 34 👓 56 👓 🔀 3.45 🗖 43°24°31.2

■ FIX, SCI, RND

 To change the settings for the number of decimal places, the number of significant digits, or the exponential display format, press the well key a number of times until you reach the setup screen shown below.

Fix	Sci	Norm
1	2	3

- Press the number key (1,2, or 3) that corresponds to the setup item you want to change.
 - 1 (Fix): Number of decimal places
 - (Sci): Number of significant digits (Norm): Exponential display format
- Example 1: 200 ÷ 7 × 14 =

200	÷ 7 🗴 14 🖃	400.
(Specifies three decimal places.)	1 (Fix) 3	400.000
(Internal calculation continues using 12 digits.)	200 🖨 7 🖃	28.571
	X 14 🖪	400.000

The following performs the same calculation using the specified number of decimal places.

specified number of	decimal places.	
	200 🖶 7 🖃	28.571
(Internal rounding)	SHIFT Rnd	28.571
	X 14 🖃	399.994

- Press [100] (Norm) 1 to clear the Fix specification.
- • Example 2: 1 \div 3, displaying result with two significant digits (Sci 2)

MODE 2 (Sci) 2 1 € 3 🖃	3.3 ⁻⁰¹

• Press (Norm) 1 to clear the Sci specification.

load from Www.Somanuals.c5n1.5All Manuals Search And Dowl

Memory Calculations COMP

Use the key to enter the COMP Mode when you
want to perform a calculation using memory.
COMP

■ Answer Memory

- Whenever you press after inputting values or an expression, the calculated result automatically updates Answer Memory contents by storing the result.
- In addition to ☐, Answer Memory contents are also updated with result whenever you press ☐ %, M+, Imp., or Imp., or
- You can recall Answer Memory contents by pressing Ans.
- Answer Memory can store up to 12 digits for the mantissa and two digits for the exponent.
- Answer Memory contents are not updated if the operation performed by any of the above key operations results in an error.

■ Consecutive Calculations

- You can use the calculation result that is currently on the display (and also stored in Answer Memory) as the first value of your next calculation. Note that pressing an operator key while a result is displayed causes the displayed value to change to Ans, indicating it is the value that is currently stored in Answer Memory.
- The result of a calculation can also be used with a subsequent Type A function (x², x³, x⁻¹, x!, DRG►), +, -, ^(x³), ^x√, ×, ÷, nPr and nCr.

■ Independent Memory

- Values can be input directly into memory, added to memory, or subtracted from memory. Independent memory is convenient for calculating cumulative totals.
- Independent memory uses the same memory area as variable M.
- To clear independent memory (M), input 0 smr ST0 M (M+).

• Example:

■ Variables

- There are nine variables (A through F, M, X and Y), which can be used to store data, constants, results, and other values.
- Use the following operation to delete data assigned to a particular variable: ① [STO] A. This operation deletes the data assigned to variable A.
- Perform the following key operation when you want to clear the values assigned to all of the variables.

• Example: $\underline{193.2} \div 23 = 8.4$

$$\underline{193.2} \div 28 = \textbf{6.9}$$

Scientific Function Calculations

COMP

Use the em key to enter the COMP Mode when you want to perform scientific function calculations.

COMP MODE 1

- Certain types of calculations may take a long time to complete.
- Wait for the result to appear on the display before starting the next calculation.
- $\pi = 3.14159265359$

load from Www.Somanuals.c&n1.7All Manuals Search And Dowl

■ Trigonometric/Inverse Trigonometric Functions

• To change the default angle unit (degrees, radians, grads), press the week key a number of times until you reach the angle unit setup screen shown below.

 Press the number key (1, 2, or 3) that corresponds to the angle unit you want to use.

$$(90^{\circ} = \frac{\pi}{2} \text{ radians} = 100 \text{ grads})$$

• Example 1: sin 63°52′41″ = 0.897859012

• Example 2: $\cos\left(\frac{\pi}{3} \operatorname{rad}\right) = 0.5$

• Example 3: $\cos^{-1} \frac{\sqrt{2}}{2} = 0.25 \pi \, (rad) \left(= \frac{\pi}{4} \, (rad) \right)$

SHIFT COST (V 2 + 2) = Ans + SHIFT
$$\pi$$

• Example 4: tan-1 0.741 = 36.53844577°

SHIFT (an 1 0.741 ■

■ Hyperbolic/Inverse Hyperbolic Functions

• Example 1: sinh 3.6 = 18.28545536 hyp sin 3.6

• Example 2: sinh⁻¹ 30 = 4.094622224

hyp SHIFT sin 30

■ Common and Natural Logarithms/ **Antilogarithms**

• Example 1: log 1.23 = 0.089905111

log 1 23 **■**

• Example 2: In 90 (= log 90) = 4.49980967

In 90 🖪

 $\ln e = 1$

In ALPHA e =

• Example 3: $e^{10} = 22026.46579$

• Example 4: 10^{1.5} = 31.6227766

SHIFT e^x 10

SHIFT 10^x 1.5 2 \Lambda 🗀 3 🖪

• Example 5: $2^{-3} = 0.125$ • Example 6: $(-2)^4 = 16$

((i) 2 () \(\lambda \) 4 \(\operatorname{1} \)

 Negative values inside of calculations must be enclosed. within parentheses. For details, see "Order of Operations."

■ Square Roots, Cube Roots, Roots, Squares, Cubes, Reciprocals, Factorials, Random Numbers, π , and Permutation/Combination

• Example 1: $\sqrt{2} + \sqrt{3} \times \sqrt{5} = 5.287196909$

▼ 2 + ▼ 3 × ▼ 5 =

• Example 2: $\sqrt[3]{5} + \sqrt[3]{-27} = -1.290024053$

SHIFT \$\subseteq 5 \in \text{SHIFT} \subseteq \(\subseteq \) \(\begin{array}{c} (\cdot (-)) 27 \end{array} \)

• Example 3: $\sqrt[7]{123}$ (= $123^{\frac{1}{7}}$) = 1.988647795

7 SHIFT ♥ 123 🖪

• Example 4: $123 + 30^2 = 1023$

123 **1** 30 x^2

• Example 5: 123 = 1728

12 🗷 🗖

• Example 6: $\frac{1}{\frac{1}{3} - \frac{1}{4}} = 12$

 $(3x^{-1}) = 4x^{-1} (x^{-1}) = 1$

• Example 7: 8! = 40320

8 SHIFT x!

 Example 10: To determine how many different 4-digit values can be produced using the numbers 1 through 7 Numbers cannot be duplicated within the same 4-digit value (1234 is allowed, but 1123 is not). (840)
• Example 11: To determine how many different 4-member groups can be organized in a group of 10 individuals (210) 10 4
■ Angle Unit Conversion
Press SHIFT DOGS to display the following menu.
D R G 1 2 3
 Pressing 1, 2, or 3 converts the displayed value to the corresponding angle unit.
• Example: To convert 4.25 radians to degrees
wood 1 (Deg) 4.25 ₪ 22(R) ■ 4.25 243.5070629
■ Coordinate Conversion (Pol (x, y) , Rec (r, θ))
 Calculation results are automatically assigned to variables E and F.
• Example 1: To convert polar coordinates $(r=2, \theta=60^{\circ})$ to rectangular coordinates (x, y) (Deg)
x = 1 SHIFT Rect 2 • 60)
y = 1.732050808
 Press REL E to display the value of x, or REL F to display the value of y.
ad from Www.Somanuals.c 5र्तर . ⁰ All Manuals Search And Dow

• Example 8: To generate a random number between

SHIFT Ran#

(The above value is a sample only. Results differ each time.)

0.664

3 SHIFT π 🖃

0.000 and 0.999

• Example 9: $3\pi = 9.424777961$

• Example 2: To convert rectan to polar coordinates (r, θ) (Rad	
r = 2	Pol(1 • 3)
$\theta = 1.047197551$	RCL F
• Press \blacksquare \blacksquare to display the vaplay the value of θ .	lue of r , or $\mathbb{R}^{\mathbb{R}}$ \mathbb{F} to dis-
■ Engineering Notation	n Calculations
• Example 1: To convert 56,088	meters to kilometers
→ 56.088 ×103	56088 E ENG

• Example 2: To convert 0.08125 grams to milligrams

$$\rightarrow$$
 81.25 \times 10⁻³ (ma)

0.08125 **E**NG

Statistical Calculations

(km)



Standard Deviation SD

Use the well key to enter the SD Mode when you want to perform statistical calculations using standard deviation.


- In the SD Mode and REG Mode, the M+ key operates as the DT key.
- Always start data input with sur CLR 1 (ScI) to clear statistical memory.
- Input data using the key sequence shown below. < x-data > \$\overline{\text{DT}}\$
- Input data is used to calculate values for n, Σx, Σx², x̄, σn and σn-1, which you can recall using the key operations noted nearby.

load from Www.Somanuals.c5ī²1All Manuals Search And Dowl

To recall this type of value:	Perform this key operation:
Σx^2	SHIFT S-SUM 1
Σx	SHIFT S-SUM 2
n	SHIFT S-SUM 3
\bar{X}	SHIFT S-VAR 1
σ_n	SHIFT S-VAR 2
σ <i>n</i> −1	SHIFT S-VAR 3

• Example: To calculate σ_{n-1} , σ_n , \bar{x} , n, Σx , and Σx^2 for the following data : 55, 54, 51, 55, 53, 53, 54, 52

In the SD Mode:

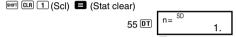

Each time you press To register your input, the number of data input up to that point is indicated on the display (n value).

54 DT 51 DT 55 DT 53 DT DT 54 DT 52 DT

Sample Standard Deviation $(\mathfrak{G}n-1)=1.407885953$ Population Standard Deviation $(\mathfrak{G}n)=1.316956719$ Arithmetic Mean $(\bar{x})=53.375$ Number of Data (n)=8Sum of Values $(\Sigma x)=427$ Sum of Squares of Values $(\Sigma x^2)=22805$

SHIFT S-SUM 1

SHIFT S-VAR 3

Data Input Precautions

- DT DT inputs the same data twice.
- You can also input multiple entries of the same data using [To input the data 110 ten times, for example, press 110 [To I DT].
- You can perform the above key operations in any order, and not necessarily that shown above.
- While inputting data or after inputting data is complete, you can use the A and V keys to scroll through data you have input. If you input multiple entries of the same data using J to specify the data frequency (number of data items) as described above, scrolling through data shows both the data item and a separate screen for the data frequency (Freq).

You can then edit the displayed data, if you want. Input
the new value and then press the key to replace the
old value with the new one. This also means that if you
want to perform some other operation (calculation, recall
of statistical calculation results, etc.), you should always
press the key first to exit data display.

 Pressing the D key instead of after changing a value on the display registers the value you input as a new data item, and leaves the old value as it is.

- You can delete a data value displayed using ▲ and ▼ by pressing ℂ. Deleting a data value causes all values following it to be shifted up.
 Data values vou register are normally stored in calculations.
- □ Data values you register are normally stored in calculation memory. The message "Data Full" appears and you will not be able to input any more data if there is no memory left for data storage. If this happens, press the key to display the screen shown below.

Press 2 to exit data input without registering the value you just input.

Press 1 if you want to register the value you just input, without saving it in memory. If you do this, however, you will not be able to display or edit any of the data you have input.

- To delete data you have just input, press shift CL.
- After inputting statistical data in the SD Mode or REG Mode, you will be unable to display or edit individual data items any longer after perform either the following operations.


Changing to another mode Changing the regression type (Lin, Log, Exp, Pwr, Inv, Quad)

Regression Calculations



Use the most key to enter the REG Mode when you want to perform statistical calculations using regression.

- In the SD Mode and REG Mode, the M+ key operates as the DT kev.
- Entering the REG Mode displays screens like the ones shown below



- Press the number key (1,2, or3) that corresponds to the type of regression you want to use.

 - 1 (Lin): Linear regression 2 (Log): Logarithmic regression
 - 3 (Exp): Exponential regression
 - Power regression
 - ▶ 2 (Inv): Inverse regression
 - ▶ 3 (Quad): Quadratic regression
- Always start data input with SHIFT CLR 1 (ScI) = to clear statistical memory.
- · Input data using the key sequence shown below. <x-data> () <y-data> (DT)
- The values produced by a regression calculation depend on the values input, and results can be recalled using the key operations shown in the table below.

To recall this type of value:	Perform this key operation:
Σx^2	SHIFT S-SUM 1
$\sum x$	SHIFT S-SUM 2
n	SHIFT S-SUM 3
Σy^2	SHIFT S-SUM 1
Σy	SHIFT S-SUM 2
Σxy	SHIFT S-SUM 3
\bar{X}	SHIFT S-VAR 1
$x\sigma_n$	SHIFT S-VAR 2
$x\sigma_{n-1}$	SHIFT S-VAR 3
\bar{y}	SHIFT S-VAR 1
$y\sigma_n$	SHIFT S-VAR 2
y σ _{n-1}	SHIFT S-VAR 3
Regression coefficient A	SHIFT S-VAR 1
Regression coefficient B	SHIFT S-VAR 2
Regression calculation other	r than quadratic regression
Correlation coefficient r	SHIFT S-VAR 3
â	SHIFT S-VAR 1
ŷ	SHIFT S-VAR 2

 The following table shows the key operations you should use to recall results in the case of quadratic regression.

To recall this type of value:	Perform this key operation:
Σx^3	SHIFT S-SUM 1
$\sum x^2y$	SHIFT S-SUM 2
Σx^4	SHIFT S-SUM 🕨 🕽
Regression coefficient C	SHIFT S-VAR 🕨 🕽
<i>x</i> ̂1	SHIFT S-VAR
$\hat{\chi}_2$	SHIFT S-VAR 2
ŷ	SHIFT S-VAR

 The values in the above tables can be used inside of expressions the same way you use variables.

Linear Regression

• The regression formula for linear regression is: y = A + Bx.

• Example: Atmospheric Pressure vs. Temperature

-		
Temperature	Atmospheric Pressure	Perform linear regression to determine the regression formula
10°C	1003 hPa	terms and correlation coefficient
15°C	1005 hPa	for the data nearby. Next, use
20°C	1010 hPa	the regression formula to esti-
25°C	1011 hPa	mate atmospheric pressure at
30°C	1014 hPa	-5°C and temperature at 1000
		hPa. Finally, calculate the coeffi-

hPa. Finally, calculate the coefficient of determination (r^2) and sample covariance

$$\left(\frac{\sum xy - n \cdot \bar{x} \cdot \bar{y}}{n-1}\right)$$
.

In the REG Mode:

1 (Lin)
SHIFT CLR 1 (ScI) (Stat clear)

10 1003 DT n= REG 1.

Each time you press To register your input, the number of data input up to that point is indicated on the display (n value).

15 • 1005 • 15 • III

20 1010 DT 25 1011 DT 30 1014 DT

Regression Coefficient A = 997.4

Regression Coefficient B = 0.56

Correlation Coefficient r = 0.982607368Atmospheric Pressure at -5° C = 994.6

tt -5° C = 994.6

((-) 5) SHIFT (S-VAR) \blacktriangleright \blacktriangleright 2 \blacksquare

Temperature at 1000 hPa = 4.642857143

Coefficient of Determination = 0.965517241

Sample Covariance = 35

(SHIFT S-SUM 3 SHIFT S-VAR 1 X

SHIFT S-VAR 1) ÷

(SHIFT S-SUM 3 - 1) =

load from Www.Somanuals.c5ī²⁶All Manuals Search And Dowl

Logarithmic, Exponential, Power, and Inverse Regression

- Use the same key operations as linear regression to recall results for these types of regression.
- The following shows the regression formulas for each type of regression.


Logarithmic Regression	$y = A + B \cdot \ln x$
Exponential Regression	$y = A \cdot e^{B \cdot x} (\ln y = \ln A + Bx)$
Power Regression	$y = A \cdot x^B (\ln y = \ln A + B \ln x)$
Inverse Regression	$y = A + B \cdot 1/x$

Quadratic Regression

The regression formula for quadratic regression is:
 y = A + Bx + Cx².

• Example:

LXaiiip	ne.	
x_i	y _i	Perform quadratic regression to de-
29	1.6	termine the regression formula terms for the data nearby. Next, use the
50	23.5	regression formula to estimate the
74	38.0	values for \hat{y} (estimated value of y) for $xi = 16$ and \hat{x} (estimated value of $xi = 16$).
103	46.4	
118	48.0	for $y_i = 20$.

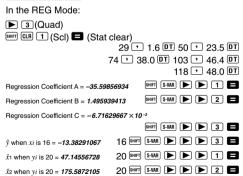

Data Input Precautions

- DT DT inputs the same data twice.
- You can also input multiple entries of the same data using [3]. To input the data "20 and 30" five times, for example, press 20 30 [3]; 5 [3].
- The above results can be obtained in any order, and not necessarily that shown above.
- Precautions when editing data input for standard deviation also apply for regression calculations.
- Do not use variables A through F, X, or Y to store data when performing statistical calculations. These variables are used for statistical calculation temporary memory, so any data you may have assigned to them may be replaced by other values during statistical calculations.
- Entering the REG Mode and selecting a regression type (Lin, Log, Exp, Pwr, Inv, Quad) clear variables A through F, X, and Y. Changing from one regression type to another inside the REG Mode also clears these variables.

Technical Information

■ When you have a problem.....

If calculation results are not what you expect or if an error occurs, perform the following steps.

- Press [CLR 2 (Mode)] to initialize all modes and settings.
- Check the formula you are working with to confirm it is correct.
- 3. Enter the correct mode and try performing the calculation again.

If the above steps do not correct the problem, press the wey. The calculator performs a self-check operation and deletes all data stored in memory if any abnormality is detected. Make sure you always keep written copies of all important data.

■ Error Messages

The calculator is locked up while an error message is on the display. Press to to clear the error, or press to to display the calculation and correct the problem. See "Error Locator" for details.

load from Www.Somanuals.c57⁸All Manuals Search And Dowl

Math ERROR

Causes

- Calculation result is outside the allowable calculation range.
- An attempt to perform a function calculation using a value that exceeds the allowable input range.
- An attempt to perform an illogical operation (division by zero, etc.)

Action

 Check your input values and make sure they are all within the allowable ranges. Pay special attention to values in any memory areas you are using.

Stack FRROR

Cause

 The capacity of the numeric stack or operator stack is exceeded

Action

- Simplify the calculation. The numeric stack has 10 levels and the operator stack has 24 levels.
- Divide your calculation into two or more separate parts.

Syntax ERROR

Cause

An attempt to perform an illegal mathematical operation.

Action

Press
 or
 to display the calculation with the cursor located at the location of the error and make required corrections.

Arg ERROR

Cause

• Improper use of an argument

Action

 Press
 or
 to display the location of the cause of the error and make required corrections.

load from Www.Somanuals.c57⁹All Manuals Search And Dowl

■ Order of Operations

Calculations are performed in the following order of precedence.

- ① Coordinate transformation: Pol (x, y), Rec (r, θ)
- 2 Type A functions:

With these functions, the value is entered and then the function key is pressed.

$$x^3, x^2, x^{-1}, x!, \circ$$

Angle unit conversions (DRG►)

- ③ Powers and roots: $^{\land}(x^{y})$, $^{x}\sqrt{}$
- $(4) a^b/c$
- \bigcirc Abbreviated multiplication format in front of π , e (natural logarithm base), memory name, or variable name: 2π , 3e, 5A, πA , etc.
- 6 Type B functions:

With these functions, the function key is pressed and then the value is entered.

- $\sqrt{\ }$, $\sqrt[3]{\ }$, \log , \ln , e^x , 10^x , \sin , \cos , \tan , \sin^{-1} , \cos^{-1} , \tan^{-1} , \sinh , \cosh , \tanh , \sinh^{-1} , \cosh^{-1} , \tanh^{-1} , (-)
- Abbreviated multiplication format in front of Type B functions: 2√3, Alog2, etc.
- (8) Permutation and combination: nPr, nCr
- 9×, ÷
- (10) + . -
- Operations of the same precedence are performed from right to left. $e^x \ln \sqrt{-120} \rightarrow e^x \{\ln(\sqrt{-120})\}$
- · Other operations are performed from left to right.
- Operations enclosed in parentheses are performed first.
- When a calculation contains an argument that is a negative number, the negative number must be enclosed within parentheses. The negative sign (–) is treated as a Type B function, so particular care is required when the calculation includes a high-priority Type A function, or power or root operations.


Example:
$$(-2)^4 = 16$$

 $-2^4 = -16$

■ Stacks

This calculator uses memory areas, called "stacks," to temporarily store values (numeric stack) and commands (command stack) according to their precedence during calculations. The numeric stack has 10 levels and the command stack has 24 levels. A stack error (Stack ERROR) occurs whenever you try to perform a calculation that is so complex that the capacity of a stack is exceeded.

Example:



Numeric Stack Command Stack

umeri	c Sta
1	2
2	3
3	4
4	5
(5)	4
1	

1	×
2	(
3	(
4	+
5	×
6	(
7	+
:	

 Calculations are performed in sequence according to "Order of Operations." Commands and values are deleted from the stack as the calculation is performed.

■ Input Ranges

Internal digits: 12

Accuracy*: As a rule, accuracy is ±1 at the 10th digit.

Functions	Input Range		
sinx	DEG $0 \le x \le 4.499999999 \times 10^{10}$		
	RAD	0≦ x ≦785398163.3	
	GRA	$0 \le x \le 4.999999999 \times 10^{10}$	
cosx	DEG $0 \le x \le 4.500000008 \times 10^{10}$		
	RAD	0≦ <i>x</i> ≦785398164.9	
	GRA	$0 \le x \le 5.000000009 \times 10^{10}$	
tanx	DEG	Same as $\sin x$, except when $ x = (2n-1) \times 90$.	
	RAD	Same as $\sin x$, except when $ x = (2n-1) \times \pi/2$.	
	GRA	Same as $\sin x$, except when $ x = (2n-1) \times 100$.	
sin ⁻¹ x	0≦ <i>x</i>	: ≦1	
cos ⁻¹ x		, —	
tan-1x	0≦ <i>x</i>	: ≦9.999999999×10 ⁹⁹	
sinhx	0≤ <i>x</i> ≤230.2585092		
coshx			
sinh ⁻¹ x	$0 \le x \le 4.999999999 \times 10^{99}$		
cosh ⁻¹ x	$1 \le x \le 4.999999999 \times 10^{99}$		
tanhx	$0 \le x \le 9.999999999 \times 10^{99}$		
tanh-1x	$0 \le x \le 9.99999999 \times 10^{-1}$		
logx/lnx	0< <i>x</i> ≤9.99999999×10 ⁹⁹		
10 ^x	$-9.999999999 \times 10^{99} \le x \le 99.99999999$		
e^{x}	$-9.999999999 \times 10^{99} \le x \le 230.2585092$		
\sqrt{x}	$0 \le x < 1 \times 10^{100}$		
X ²	$ x < 1 \times 10^{50}$		
1/ <i>x</i>	$ x < 1 \times 10^{100}; x \neq 0$		
³ √ <i>x</i>	$ x < 1 \times 10^{100}$		
x!		\leq 69 (x is an integer)	
nPr	$0 \le n < 1 \times 10^{10}, 0 \le r \le n \ (n, r \text{ are integers})$ $1 \le \{n!/(n-r)!\} < 1 \times 10^{100}$		

load from Www.Somanuals.c5ਜੌ3²All Manuals Search And Dowl

Functions	Input Range		
nCr	$0 \le n < 1 \times 10^{10}, 0 \le r \le n \ (n, r \text{ are integers})$ $1 \le [n!/\{r!(n-r)!\}] < 1 \times 10^{100}$		
Pol(x, y)	$ x , y \le 9.999999999 \times 10^{49}$ $(x^2 + y^2) \le 9.999999999 \times 10^{99}$		
$Rec(r, \theta)$	0≦ <i>r</i> ≦9.99999999×10 ⁹⁹ θ: Same as sin <i>x</i>		
0, ,,	$ a , b, c < 1 \times 10^{100}$ $0 \le b, c$		
÷ ; "	x <1×10 ¹⁰⁰ Decimal \leftrightarrow Sexagesimal Conversions 0°0°0°≤ $ x $ ≤999999°59°		
^(x ^y)	$x>0: -1 \times 10^{100} < y \log x < 100$ x=0: y>0 $x<0: y=n, \frac{1}{2n+1}$ (<i>n</i> is an integer) However: $-1 \times 10^{100} < y \log x < 100$		
$x\sqrt{y}$	$y>0: x \neq 0$ $-1 \times 10^{100} < 1/x \log y < 100$ y=0: x>0 $y<0: x=2n+1, \frac{1}{n} (n \neq 0; n \text{ is an integer})$ However: $-1 \times 10^{100} < 1/x \log y < 100$		
a ^b /c	Total of integer, numerator, and denominator must be 10 digits or less (including division marks).		
SD (REG)	$\begin{array}{ll} x < 1 \times 10^{50} & x\sigma n, y\sigma n, \bar{x}, \bar{y}: n \neq 0 \\ y < 1 \times 10^{50} & x\sigma n-1, y\sigma n-1, A, B, r: \\ n < 1 \times 10^{100} & n \neq 0, 1 \end{array}$		
, ,	$ n < 1 \times 10^{100}$ $n = 0, 1$ single calculation, calculation error is ± 1 at the		

Innut Dongo

Functions

For a single calculation, calculation error is ± 1 at the 10th digit. (In the case of exponential display, calculation error is ± 1 at the last significant digit.) Errors are cumulative in the case of consecutive calculations, which can also cause them to become large. (This is also true of internal consecutive calculations that are performed in the case of $^{\wedge}(x^y)$, $^{x}\sqrt{y}$, $^{x}\sqrt{y}$, $^{x}\sqrt{y}$, n , n Pr, n Cr, etc.) In the vicinity of a function's singular point and point of inflection, errors are cumulative and may become large.

load from Www.Somanuals.c<mark>5</mark>n^{3.3}All Manuals Search And Dowl

Power Supply

The type of battery you should use depends on the model number of your calculator.

fx-85MS/fx-300MS

The TWO WAY POWER system actually has two power supplies: a solar cell and a G13 Type (LR44) button battery. Normally, calculators equipped with a solar cell alone can operate only when relatively bright light is present. The TWO WAY POWER system, however, lets you continue to use the calculator as long as there is enough light to read the display.


Replacing the Battery

Either of the following symptoms indicates battery power is low, and that the battery should be replaced.

- Display figures are dim and difficult to read in areas where there is little light available.
- \bullet Nothing appears on the display when you press the $\boxed{\texttt{0N}}$ key.

To replace the battery

- ① Remove the six screws that hold the back cover in place and then remove the back cover.
- ② Remove the old battery.
- ③ Wipe off the sides of new battery with a dry, soft cloth. Load it into the unit with the positive ⊕ side facing up (so you can see it).
- ④ Replace the back cover and secure it in place with the six screws
- ⑤ Press M to turn power on. Be sure not to skip this step.



fx-83MS/fx-270MS/fx-350MS

This calculator is powered by single G13 Type (LR44) button battery.

Replacing the Battery

Dim figures on the display of the calculator indicate that battery power is low. Continued use of the calculator when the battery is low can result in improper operation. Replace the battery as soon as possible when display figures become dim.

To replace the battery

- 1 Press SHIFT OFF to turn off power.
- ② Remove the screw that holds the battery cover in place and then remove the battery cover.
- ③ Remove the old battery.
- Wipe off the sides of new battery with a dry, soft cloth. Load it into the unit with the positive side facing up (so you can see it).
- ⑤ Replace the battery cover and secure it in place with the screw.
- 6 Press to turn power on.



fx-82MS


This calculator is powered by a single AA-size battery.

. Replacing the Battery

Dim figures on the display of the calculator indicate that battery power is low. Continued use of the calculator when the battery is low can result in improper operation. Replace the battery as soon as possible when display figures become dim.

To replace the battery

- 1) Press SHIFT OFF to turn power off. Screw
- ② Remove the six screws that hold the back cover in place and then remove the back cover.
- ③ Remove the old battery.
- ④ Load a new battery into the unit with its positive ⊕ and negative ⊖ ends facing correctly.
- S Replace the back cover and secure it in place with the six screws.
- 6 Press to turn power on.



Auto Power Off

Calculator power automatically turns off if you do not perform any operation for about six minutes. When this happens, press $\overline{\tt ON}$ to turn power back on.

Specifications

Power Supply:

fx-82MS: Single AA-size battery (R6P (SUM-3))

fx-83MS/fx-270MS/fx-350MS:

Single G13 Type button battery (LR44)

fx-85MS/fx-300MS:

Solar cell and a single G13 Type button battery (LR44)

Battery Life:

fx-82MS: Approximately 17,000 hours continuous

display of flashing cursor.

Approximately 2 years when left with power turned off.

fx-83MS/fx-270MS/fx-350MS:

Approximately 9,000 hours continuous

display of flashing cursor.

Approximately 3 years when left with power turned off.

fx-85MS/fx-300MS:

Approximately 3 years (1 hour use per day).

Dimensions: fx-82MS:

18.6 (H) \times 85 (W) \times 156 (D) mm

 $^{3/4''}$ (H) \times $3^{3/8''}$ (W) \times $6^{1/8''}$ (D)

fx-83MS/fx-85MS/fx-270MS/fx-300MS/fx-350MS:

12.2 (H) \times 85 (W) \times 155 (D) mm $^{1/2''}$ (H) \times 3 $^{3/8''}$ (W) \times 6 $^{1/8''}$ (D)

Weight:

fx-82MS: 125 g (4.4 oz) including battery

fx-83MS/fx-85MS/fx-270MS/fx-300MS/fx-350MS:

100 g (3.5 oz) including battery

Power Consumption: 0.0002 W

Operating Temperature: 0°C to 40°C (32°F to 104°F)

CASIO_®

CASIO COMPUTER CO., LTD.

6-2, Hon-machi 1-chome Shibuya-ku, Tokyo 151-8543, Japan Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com