# **130CR** Electronic Cash Register






## **User's Manual**

## START-UP is QUICK and EASY! Simple to use!

4 departments and 100 PLUs Automatic Tax Calculations Calculator function



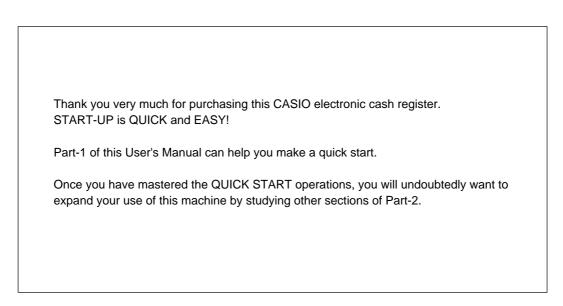

## **Original Carton/Package**

If for any reason, this product is to be returned to the store where purchased, it must be packed in the original carton/ package.

## Location

Locate the Cash register on a flat, stable surface, away from heaters or areas exposed to direct sunlight, humidity or dust.

### **Power Supply**

Your cash register is designed to operate on standard household current (120V, 220V, 230V or 240V; 50/60Hz). Do not overload the outlet by plugging in too many appliances.

## Cleaning

Clean the cash register exterior with a soft cloth which has been moistened with a solution of a mild neutral detergent and water, and wrung out.

Be sure that the cloth is thoroughly wrung out to avoid damage to the printer.

Never use paint thinner, benzene, or other volatile solvents.

## Safety precautions

- To use this product safely and correctly, read this manual thoroughly and operate as instructed. After reading this guide, keep it close at hand for easy reference.
   Please keep all informations for future reference.
- Always observe the warnings and cautions indicated on the product.

### About the icons

In this guide various icons are used to highlight safe operation of this product and to prevent injury to the operator and other personnel and also to prevent damage to property and this product. The icons and definitions are given below.



Indicates that there is a risk of severe injury or death if used incorrectly.

Indicates that injury or damage may result if used incorrectly.

## **Icon examples**

To bring attention to risks and possible damage, the following types of icons are used.




The  $\triangle$  symbol indicates that it includes some symbol for attracting attention (including warning). In this triangle the actual type of precautions to be taken (electric shock, in this case) is indicated.



The  $\odot$  symbol indicates a prohibited action. In this symbol the actual type of prohibited actions (disassembly, in this case) will be indicated.



The symbol indicates a restriction. In this symbol the type of actual restriction (removal of the power plug from an outlet, in this case) is indicated.

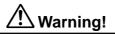

### Handling the register



Should the register malfunction, start to emit smoke or a strange odor, or otherwise behave abnormally, immediately shut down the power and unplug the AC plug from the power outlet. Continued use creates the danger of fire and electric shock. • Contact CASIO service representative.



Do not place containers of liquids near the register and do not allow any foreign matter to get into it. Should water or other foreign matter get into the register, immediately shut down the power and unplug the AC plug from the power outlet. Continued use creates the danger of short circuit, fire and electric shock.

Contact CASIO service representative.



Should you drop the register and damage it, immediately shut down the power and unplug the AC plug from the power outlet. Continued use creates the danger of short circuit, fire and electric shock.

• Attempting to repair the register yourself is extremely dangerous. Contact CASIO service representative.

## \Lambda Warning!



Never try to take the register apart or modify it in any way. High-voltage components inside the register create the danger of fire and electric shock.

Contact CASIO service representative for all repair and maintenance.

#### Power plug and AC outlet

Use only a proper AC electric outlet. Use of an outlet with a different voltage from the rating creates the danger of malfunction, fire, and electric shock. Overloading an electric outlet creates the danger of overheating and fire.



Make sure the power plug is inserted as far as it will go. Loose plugs create the danger of electric shock, overheating, and fire.

• Do not use the register if the plug is damaged. Never connect to a power outlet that is loose.

Use a dry cloth to periodically wipe off any dust built up on the prongs of the plug. Humidity can cause poor insulation and create the danger of electric shock and fire if dust stays on the prongs.



Do not allow the power cord or plug to become damaged, and never try to modify them in any way. Continued use of a damaged power cord can cause deterioration of the insulation, exposure of internal wiring, and short circuit, which creates the danger of electric shock and fire.

• Contact CASIO service representative whenever the power cord or plug requires repair or maintenance.

Caution!



Do not place the register on an unstable or uneven surface. Doing so can cause the register — especially when the drawer is open — to fall, creating the danger of malfunction, fire, and electric shock.



Do not place the register in the following areas.

- Areas where the register will be subject to large amounts of humidity or dust, or directly exposed to hot or cold air.
- Areas exposed to direct sunlight, in a close motor vehicle, or any other area subject to very high temperatures.

The above conditions can cause malfunction, which creates the danger of fire.

Do not overlay bend the power cord, do not allow it to be caught between desks or other furniture, and never place heavy objects on top of the power cord. Doing so can cause short circuit or breaking of the power cord, creating the danger of fire and electric shock.

Be sure to grasp the plug when unplugging the power cord from the wall outlet. Pulling on the cord can damage it, break the wiring, or cause short, creating the danger of fire and electric shock.




Never touch the plug while your hands are wet. Doing so creates the danger of electric shock. Pulling on the cord can damage it, break the wiring, or cause short, creating the danger of fire and electric shock.

Δ


## Contents

	-	ow your cash register w	6 8
Pa	rt-1	QUICK START OPERATION	9
		(You can operate this ECR on a basic level by reading the following sections)	
1.		ation	9
2.		ect the Date Format and Monetary Mode	9
3.		g Paper	10
4.		Programming for QUICK START – TIME/DATE	11
5.		Operation after Basic Programming	13
6.	Daily M	anagement Report	17
Pa	rt-2	CONVENIENT OPERATION	19
		(Please keep these sections to expand your use.)	
1.	Various	Programming	19
2.		Operations	30
Pa	rt-3	CALCULATOR FUNCTION	36
1.	Calcula	tor Mode	36
Pa	rt-4	USEFUL INFORMATION	38
1.	Trouble	shooting	38
2.		cations	38

## Before you start

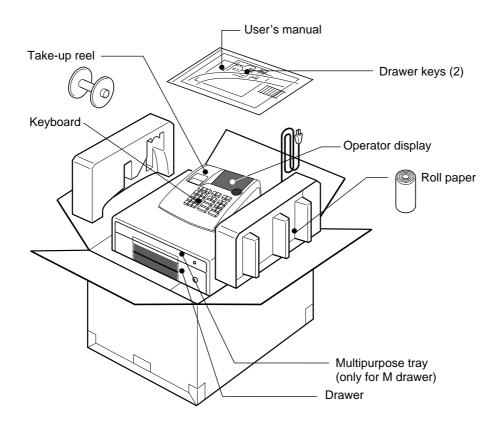

## Getting to know your cash register

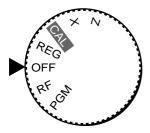

The position of the Mode Switch controls the type of operations you can perform on the cash register.



### OFF

In this position, the power of the cash register is off.

#### **REG (Register)**

This is the position used for registration of normal transactions.

#### **RF (Refund)**

This is the position used for registration of refunds.

### CAL (Calculator)

This is the position used for calculator mode.

#### **PGM (Programming)**

This is the position used to program the cash register to suit the needs of your store.


#### X (Read)

This is the position used to produce reports of daily sales totals without clearing the totals.

#### Z (Reset)

This is the position used to produce reports of daily sales totals. This setting clears the totals.

## Display

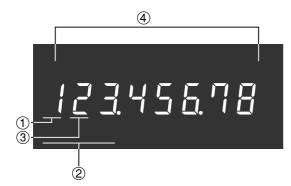

#### **(1)** Department Number Display

Anytime you press a department key to register a unit price, the corresponding department number appears here.

### **2 PLU Number Display**

Anytime you perform a PLU registration, the corresponding PLU number appears here.

#### **③** Number of Repeat Display

Anytime you perform "repeat registration" (page 13), the number of repeats appears here.

Note that only one digit is displayed for the number of repeats.


#### 4 Numeric Display

Entered values (unit prices or quantities) and calculated values (subtotals, totals or change amount due) are displayed here. The capacity of the display is 8 digits.

This part of the display can be used to show the current time or date between registrations (page 32).

## Note: An error is generated (E01 displayed) whenever the position of the Mode Switch is changed during registration.

## Keyboard

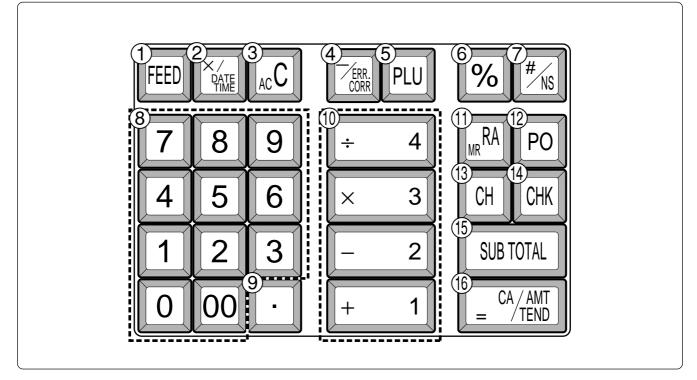


Certain keys have two functions; one for register mode and one for calculator mode. In this manual, we will refer to specific keys as noted below to make the operations as easy to understand as possible:

## Register Mode

1	FEED	Feed Key	(14)	Снк	Check Key
2		Multiplication/Date Time Key	(15)	SUB TOTAL	Subtotal Key
3	AC C	Clear Key	(16)		Cash Amount Tendered Key
4		Minus/Error Correction Key	Calculato	r Mode	
(5)	PLU	PLU (Price Look Up) key	3	AC c	AC Key
6	%	Percent Key	6	<b>%</b>	Percent Key
$\overline{\mathcal{O}}$	#/NS	Reference Number/No Sale Key	8	0 1	~ 9,00
		Drawer Open key			Numeric Keys and 2-zero key
8	0 1	~ 9,00	9	•	Decimal key
		Numeric Keys and 2-zero key	10	<b>(+</b> )	2 × 3 ÷ 4
9	•	Decimal key			Arithmetic Operation Keys
(10)	+ 1 -	<b>2</b> × <b>3</b> ÷ <b>4</b>	(1)		Memory Recall key
		Department Keys	(16)		
(1)		Received On Account Key	Ŭ		) _ 4 ,
(12)	PO	Paid Out Key			
(13)	СН	Charge Key			

## **Daily Job Flow**

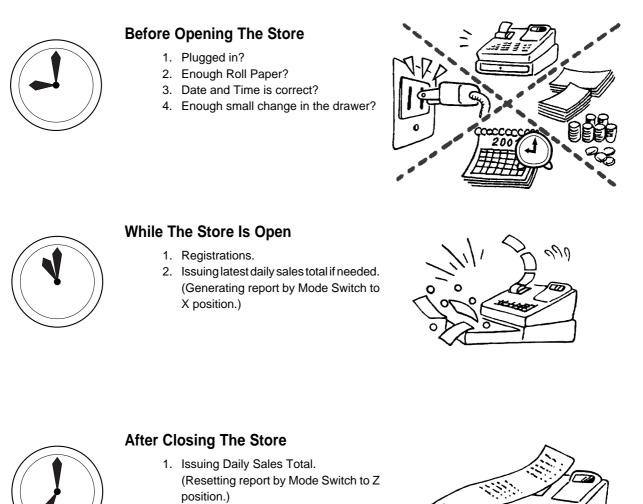

- 2. Picking up money in the drawer.
- 3. Turn the Mode Switch to OFF.



8



## 1. Initialization / Loading Memory Protection Battery

## Important

Part-1

You must initialize

### the Cash register.

## To initialize the cash register

- 1. Set the Mode Switch to OFF.
- 2. Plug the power cord of the cash register into an AC outlet.
- 3. Load the memory protection batteries.
- 4. Set the Mode Switch to REG.

**Note:** To prevent to lose all of your settings and sales data, we reccomend you to install the memory protection batteries.

## To load the memory protection batteries

- 1. Remove the printer cover.
- 2. Open the battery compartment cover.
- Load 3 new UM-3, R6P (SUM-3) or LR6 (AM-3) type batteries into the compartment. Be sure that the plus (+) and minus (-) ends of each battery are facing in the directions indicated by the illustrations inside the battery compartment (Figure 1).
- 4. Slide the memory protection battery compartment cover back into place.
- 5. Replace the printer paper and printer cover.



(Figure 1)

REPLACE MEMORY PROTECTION BATTERIES AT LEAST ONCE EVERY YEAR.

## 2. To Select the Date Format and Monetary Mode

You can select the date format and Monetary mode after initialization depending on the requirements in your area. Default date format is Day/Month/Year.


Default Monetary Mode is Add 2.

### Example:

Change the date format to Month/ P3 appears in mode SUB TOTA Day/Year, and change Monetary mode display to Add 0. SUB 0 1 2 Program set code number Select numbers from lists A and B 1. Set the Mode Switch to PGM. SUB TOTA (To end the setting) 2. Press the following keys. Date Format Selections 0 Year/Month/Day Α 1 Month/Day/Year 2 Day/Month/Year **Monetary Mode Selections** 0 Add 0 (0. ) 1 В Add 1 (0.0 ) 2 Add 2 (0.00)

E

## 3. Loading Paper Roll And Replacing The Printer's Ink Roll

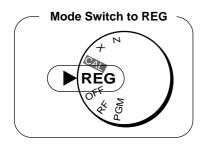

## 1. To load journal paper

(1) Remove the printer cover by lifting up the back.



- ② Put a roll of journal paper into the holder.
- ③ Cut the leading end of the roll paper with scissors and insert the paper into the inlet.



- ④ Press the FEED key until 20 or 30 cm of paper is fed from the printer.
- (5) Roll the paper onto the take-up reel a few turns.



(6) Set the left plate of the take-up reel and place the reel into the register.



- Press the FEED key to take up any slack in the paper.
- (8) Replace the printer cover by placing the cover's front tab into the register's groove.



### 2. To remove journal paper

- ① Remove the printer cover following the instructions above.
- ② Press the FEED key until approximately 20cm of the paper is fed from the printer.
- ③ Cut off the roll paper.



- ④ Remove the take-up reel from the printer and take off the left plate of the reel.
- (5) Remove the journal paper from the take-up reel.



6 Cut off the paper left in the printer and press the FEED key until the remaining paper is fed out from the printer.



Options: Roll paper – P-5860 Ink Roll – IR-40

 $\bigcirc$  Remove the core of the paper.




(8) Load new paper following the instructions above, and replace the printer cover.

Default printer setting is for Journal.

To print receipts, please refer to 1-7-3 on page 24 to switch the printer for Receipt or Journal.

### > To load receipt paper

- To use the printer to print receipts, follow steps 1 through 4 of "To load journal paper".
- 2 Pass the leading end of the receipt paper through the printer cover's paper outlet and replace the printer cover.
- ③ Tear off any excess paper.

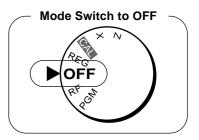

### To replace the ink roll

- ① Remove the printer cover.
- ② Lift up the tab on the ink roll marked "PULL UP".



- ③ Install a new Ink Roll and press it down firmly but gently until it snaps into place.
- ④ Replace the printer cover onto the cash register.
- (5) Press the  $\#_{NS}$  key to check for correct operation.

Mode Switch

Part-1

OFF REG

PGM

RA

## 4. Basic Programming for QUICK START


Procedure	Purpose
1. Turn the mode switch to PGM position.	Programming
<ul> <li>2. Press the following keys to set the current time. Example: 13:18 PM = 1318</li> <li>1 SUB TOTAL</li> <li>P appears in mode display</li> <li>1 3 1 8 Minutes</li> <li>Ac C (to end the time setting)</li> <li>Enter 4 digits</li> <li>24-hour time format</li> </ul>	Setting the current time
<ul> <li>3. Press the following keys to set the current date. Example: January 8, 2005 = 050108</li> <li> 1 SUB TOTAL P appears in mode display </li> <li> 0 5 0 1 0 8 Year Year Month Day Ac C (to end the date setting) </li> <li> • Enter 6 digits • Enter last 2 digits for year set. (2006 → 06)</li></ul>	Setting the current date
<ul> <li>4. You can set only one tax calculation system – either an add-on or an add-in depending on the laws in your area. Press the following keys to set the tax rate. Example: Set tax rate 1 as 5.25% and tax rate 2 as 10%.</li> <li>3 SUB TOTAL P3 appears in mode display</li> <li>0 1 2 5 SUB P1 appears of tax rate 1</li> <li>5 0 0 3 = C^{A/AMT} 5.25% tax rate</li> <li>5 0 0 3 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> <li>0 2 2 5 SUB TOTAL 10% tax rate</li> <li>1 0 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> <li>5 0 0 3 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> <li>5 0 0 3 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> <li>5 0 0 3 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> <li>5 0 0 3 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> <li>5 0 0 3 = C^{A/AMT} 10% tax rate</li> <li>5 0 0 3 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> <li>5 0 0 3 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> <li>5 0 0 3 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> <li>5 0 0 3 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> <li>5 0 0 3 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> <li>5 0 0 0 3 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> <li>5 0 0 0 3 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> <li>6 0 0 0 3 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> <li>6 0 0 0 3 = C^{A/AMT} 50 for Round off and 03 for VAT (Value Added Tax) - Add In</li> </ul>	
<ul> <li>5. Press the following keys to preset tax status of departments. Tax status for the Departments are fixed as Non-taxable. Example: Set Departments 1 and 2 as taxable status 1.</li> <li>I SUB TOTAL P appears in mode display</li> <li>P appears in mode display</li> <li>• See page 19 to change the fixed tax status.</li> </ul>	Setting the status of Departments

## Part-1 QUICK START OPERATION

Procedure	Purpose
<ul> <li>6. For the Euro only</li> <li>6-1. Press the following keys to define the main currency/print out currency of the subtotal.</li> <li>3 SUB P3 appears in mode display</li> </ul>	
$\begin{array}{c c} \textbf{S} & \textbf{TOTAL} \\ \textbf{C} & \textbf{TOTAL} \\ \textbf{C} & \textbf{SUB} \\ \textbf{TOTAL} \\ \textbf{L} & \textbf{C} & \textbf{C} \\ \textbf{SUB} \\ \textbf{TOTAL} \\ \textbf{L} & \textbf{C} & \textbf{C} \\ \textbf{SUB} \\ \textbf{TOTAL} \\ \textbf{L} & \textbf{C} & \textbf{C} \\ \textbf{SUB} \\ \textbf{TOTAL} \\ \textbf{L} & \textbf{C} & \textbf{C} \\ \textbf{SUB} \\ \textbf{TOTAL} \\ \textbf{L} & \textbf{C} & \textbf{C} \\ \textbf{SUB} \\ \textbf{TOTAL} \\ \textbf{L} & \textbf{C} & \textbf{C} \\ \textbf{SUB} \\ \textbf{TOTAL} \\ \textbf{L} & \textbf{C} & \textbf{C} \\ \textbf{SUB} \\ \textbf{TOTAL} \\ \textbf{L} & \textbf{C} & \textbf{C} \\ \textbf{SUB} \\ \textbf{TOTAL} \\ \textbf{L} & \textbf{C} & \textbf{C} \\ \textbf{SUB} \\ \textbf{TOTAL} \\ \textbf{L} & \textbf{C} & \textbf{C} \\ \textbf{SUB} \\ \textbf{SUB} \\ \textbf{TOTAL} \\ \textbf{L} & \textbf{C} & \textbf{C} \\ \textbf{SUB} \\ SU$	
SUB TOTAL         (to end the setting)	
Euro status	
(1) Main currency = Local, Print out subtotal = Local: 0	
(2) Main currency = Euro, Print out subtotal = Euro : 1	
(3) Main currency = Local, Print out subtotal = Both: 2	
(4) Main currency = Euro, Print out subtotal = Both : 3	Setting the Euro
6-2. Press the following keys to set the currency exchange rate against the Euro.	
3 SUB TOTAL P3 appears in mode display	
$1977, 3 = \frac{c_{AMT}}{T}$	
Exchange rate Decimal position	
(up to 6 digits)	
SUB TOTAL (to end the setting)	
Example: (Exchange rate and decimal position)	
Currency exchange rate = 1 Euro in local currency	
1 Euro = 1.95583 DM : 1 9 5 5 8 3 5	

Procedure	Purpose
<ul> <li>For Australia only.</li> <li>You can set some programmable options to suit the Australian GST by the following procedure.</li> <li>1. Turn the mode switch to Z position.</li> <li>2. Press the following keys to program.</li> <li>0 1 0 1 2 0 0 1 <u>sub</u> <u>= CA/AMT</u></li> <li>If you want to cancel this operation, press <u>SUB</u> instead of <u>= CA/AMT</u>.</li> </ul>	Setting the Australian GST


Procedure	Purpose
For the Euro only. You can restrict the registable currency to the Euro only by the following procedure. 1. Turn the mode switch to Z position. 2. Issue all reset report including periodic data. 3. Press the following keys to set. <b>0 1 0 7 2 0 0 2</b> SUB TOTAL = CA/ANT If you want to cancel this operation, press SUB TOTAL instead of = CA/ANT instead of = CA/ANT instead of = CA/ANT	Restricting the currency (Euro)

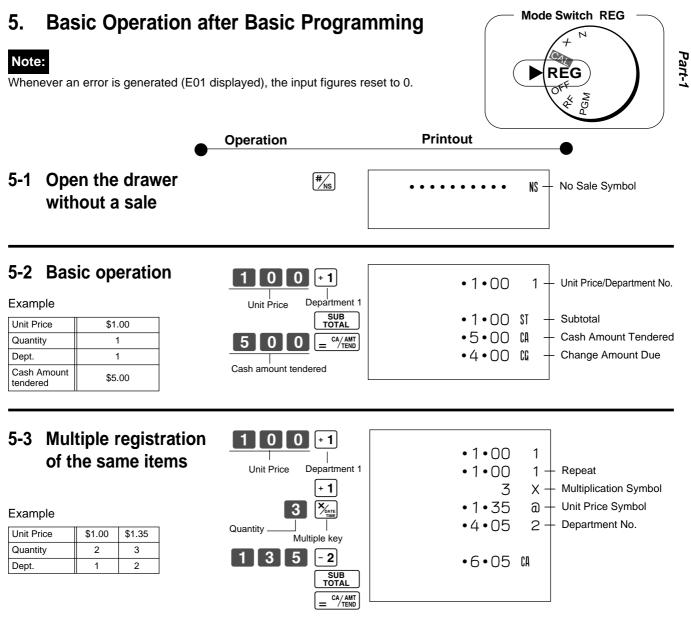


Note that repeat registration can be used with unit prices up to 6 digits long.


## 5-4 Charge sales

Unit Price	\$1.00	\$2.00	\$3.00
Quantity	1	1	1
Dept.	1	2	1

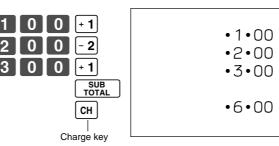

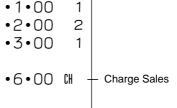

You cannot perform the amount tendered operation using the CH key.

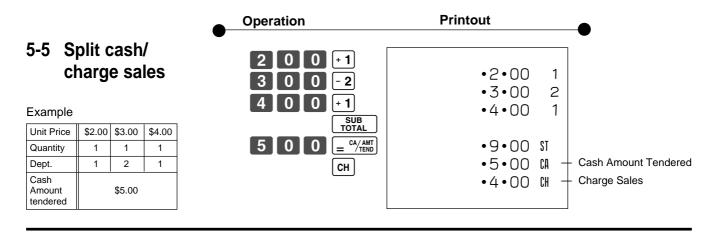

[ACC] key clears the last item entered.

## **5-6 Corrections**

Corrections can be made while you are registering the item (before you press a department key), or after it has already been registered into the memory (by pressing a department key).


## 5-6-1 Before you press a department key

Example

2. Entered unit price first instead of quantity and then pressed  $\mathbb{X}_{\text{TME}}$ .

3. Entered 150 for unit

a appartment key	Operation	Printout
Example		•
. Entered 400 for unit price by mistake instead of 100.	4 0 0 ac C Wrong entry Clears the last item entered. 1 0 0 + 1	•1•00 1
	Correct entry Registered Department 1	
Entered unit price first instead of quantity and then pressed then pressed	200 Unit price Multiplication	5 X •2•00 a
	Lears the last item entered.	• 10•00 2
	Guantity Multiplication	
	200 Unit price Registered Department 2	
<ul> <li>Entered 150 for unit price by mistake instead of 105.</li> </ul>	Quantity Multiplication	10 X •1•05 a
	Urong entry Clears the last item entered.	•10•50 3
	Correct entry Registered Department 3	

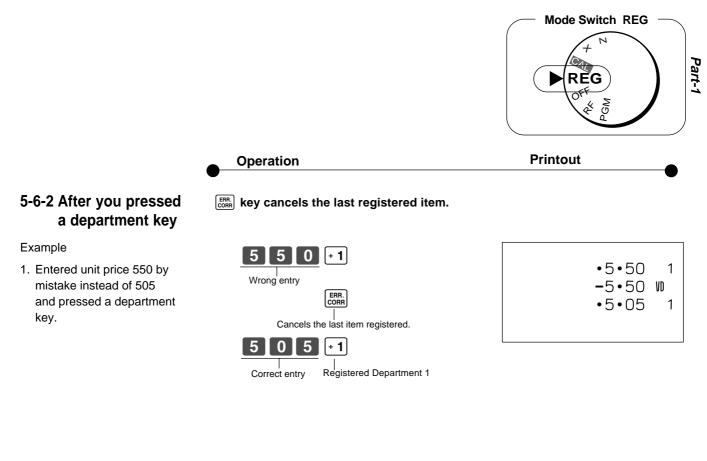

2. Entered unit price 220 by mistake instead of 230 and pressed a department key.

3   Quantity 2 2 0	Multiplication
Wrong entry	
·····g ·····)	ERR. CORR
Cancels th	le last item registered.
3	DATE
230	<b>2</b>
Correct entry	Registered Department 2

•6•90 2	3 •2•20 •6•60 -6•60 3 •2•30 •6•90	S ® X
---------	---	-------

## Part-1 QUICK START OPERATION

## Mode Switch REG N 4 04/ REG ğ Display Operation 3 2 0 0 PO SUB TOTAI 12<u>00</u>E Pressing Po before subtotal converts the subtotal amount into the Euro. 1 5 00 PO 15<u>00</u>E Pressing Po after amount tendered converts the amount into the Euro. \*1 CA/AMT TEND 1<u>5</u>0 Press $= \frac{CA/AMT}{TEND}$ to finalize the transaction. The change amount in the main currency is shown on the display. \*2 3.00E You can switch the currency of change amount repeatedly by pressing the $= \frac{C_{1/\text{MWT}}}{E_{1/\text{DWD}}}$ key.

- \*1 If the payment is the same as the subtotal amount, you can omit this operation. Press = <sup>c4/4tt</sup> key directly after the subtotal.
- \*2 If the payment is less than the subtotal amount, the cash register specifies it as a partial payment and shows the balance in the main currency on the display.

Printout	
3 •2•00 •6•00	X a 1
€12•00	SI - Subtotal in the main currency a - Subtotal after conversion CI - Payment in the Euro a
•7•50 •1•50 €3•00	

5-7-1 Registering with currency exchange

Example


Unit Price	2.00
Quantity	3
Dept.	1
Cash Amount Tendered	Euro 15.00
Rate	1Euro = 0.5 Fr
Main currency	Local (Fr)
Printout of ST	Both currencies


## 6. Daily Management Report

This section tells you the procedures to use to produce reports of the transaction data stored in the cash register's memory.

### Important


Remember that when you issue a reset (Z) report, the data that is reported is cleared from the applicable totalizers. To view data without clearing totalizers, issue a read (X) report.

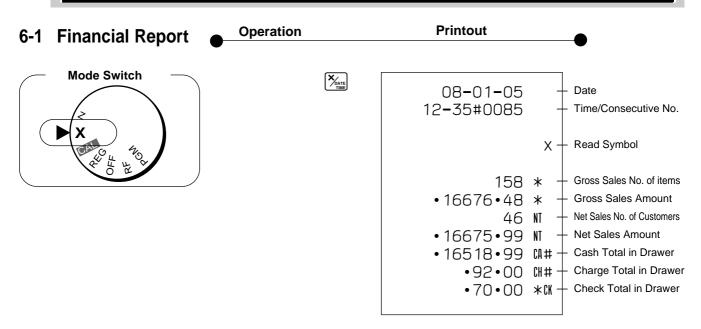

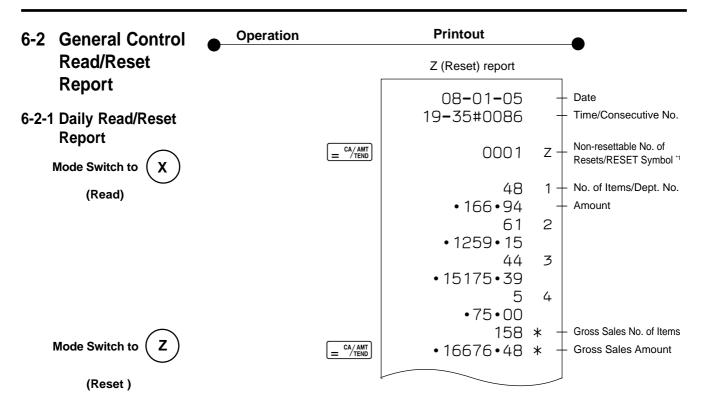

• 1182•64 •62•07 • 167•45 • 16•75	- Reduction Amount %+ Premium/Discount Amount TA Taxable Amount for Tax Rate 1 TX Tax Amount for Tax Rate 1 *TA Taxable Amount for Tax Rate 2 TX 2 Tax Amount for Tax Rate 2 NI Net Sales No. of Customers NI Net Sales Amount
	CACash Sales CountCACash Sales AmountCHCharge Sales CountCHCharge Sales AmountCKCheck Sales CountCKCheck Sales Amount
4 1 •3•00 16 1 •16518•99	RA       Received On Account Amount         P0       Paid Out Amount         VD       Error Correction Count         RF       Refnd Mode Count         RF       Refnd Mode Amount         CA X       No. of = */****         NS       No sale Count         CA#       Cash in Drawer         CH#       Charge in Drawer         * CK       Check in Drawer         Non-resettable Grand Sales total (Printed only on RESET report) '2

X (Read) report is the same except  $^{\text{\tiny +1}}$  and  $^{\text{\tiny +2}}$ .

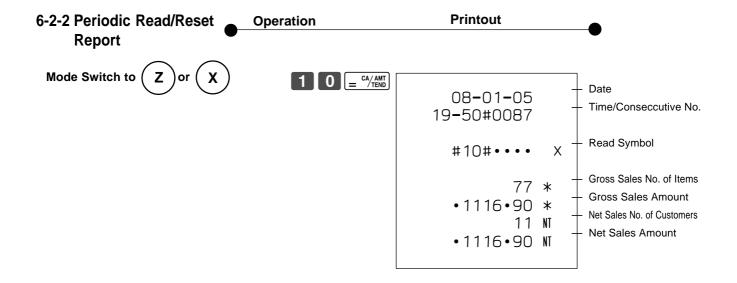





## **CONVENIENT OPERATION**

1. Various Programming

## 1-1 Unit price for Departments

Example					
Unit Price	\$1.00	\$2.20	\$11.00		
Dept.	1	2	3		

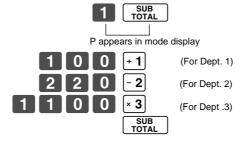

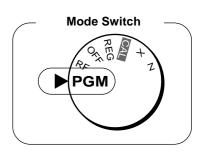

Part-2

• Unit prices within the range of 0.01~9999.99.

## 1-2 Rate for percent key

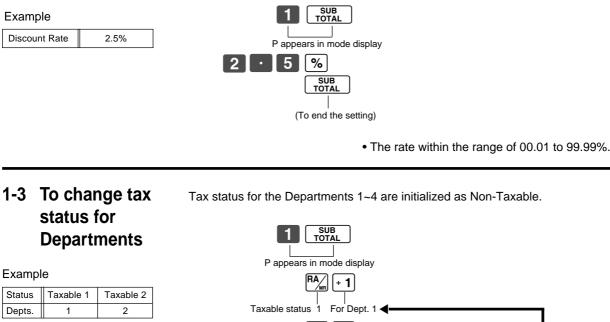


 Image: RA\_ME
 + 1

 Taxable status 1
 For Dept. 1

 PO
 - 2

 Taxable status 2
 For Dept. 2

 SUB
 Image: Comparison of the setting

 Image: Comparison of the setting
 Image: Comparison of the setting

 Selections
 Image: Comparison of the setting

 Taxable status 1
 Image: Comparison of the setting

 Taxable status 2
 PO

 Taxable status 1
 Image: Comparison of the setting

 Taxable status 1
 Image: Comparison of the setting


 Non-taxable status
 Image: Comparison of the setting

Normal

Normal

## 1-4 Status for Department

	Example				
Depts.		S	elections		
	Dopto.	A	В	С	
	1	0	4	1	
	2	0	5	1	

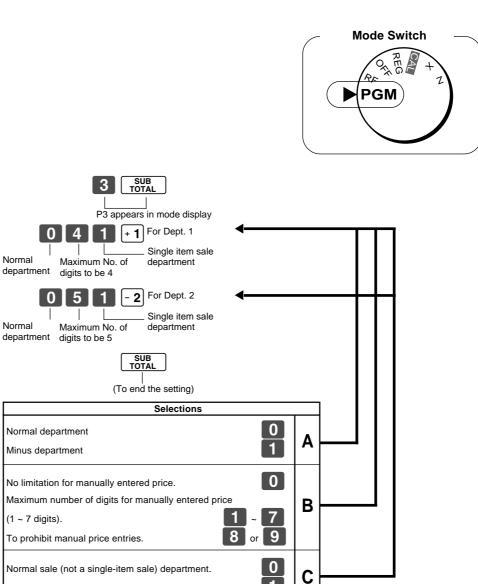

1

1-5 Status for percent key

## 1-5-1 To change taxable status for the percent key


Change Percent key registra-

tion as a Taxable status 1.

Example

The percent key is initialized as Non-taxable.


Set as a single-item sale department.

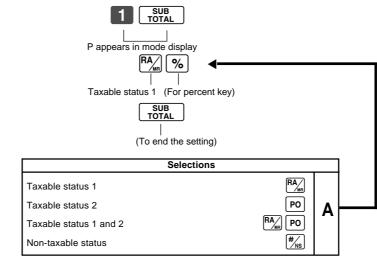

Part-2 CONVENIENT OPERATION

## 1-5-2 Status for percent key

Example		
Round	Up	
Percent	%+	

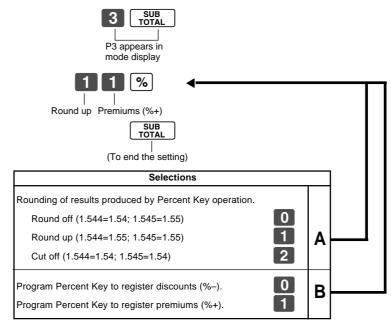



## 1-6 Taxable Status for minus key


#### Example :

Change minus key registrations Taxable status 1.

The minus key is initialized as Non-taxable.

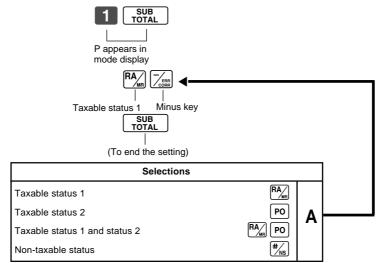


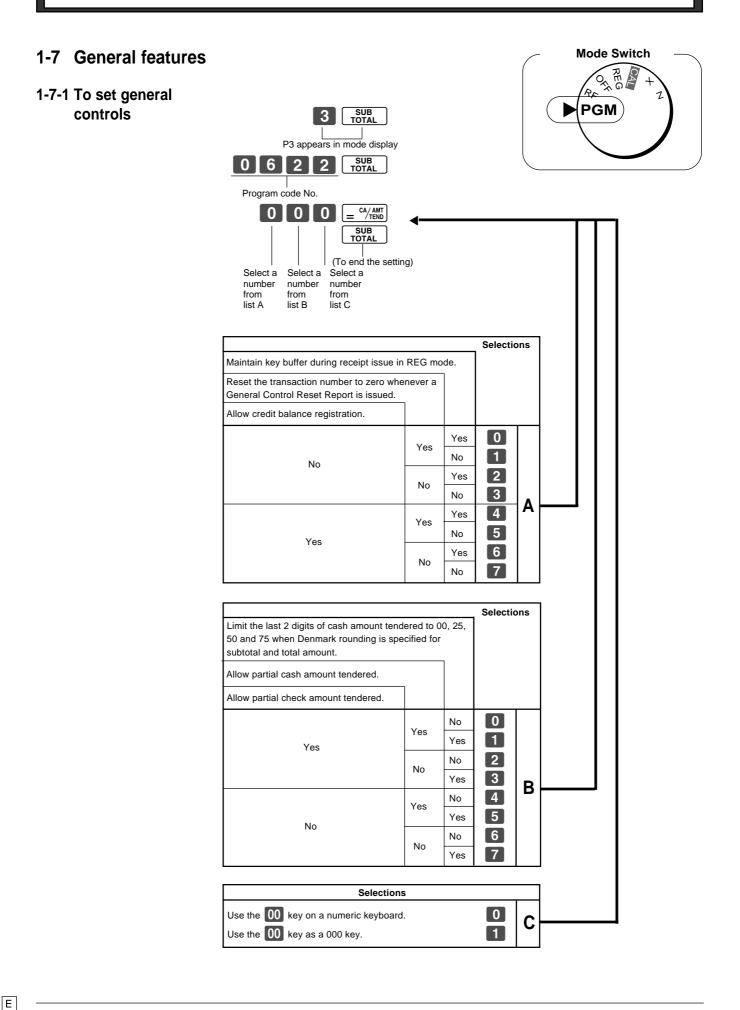


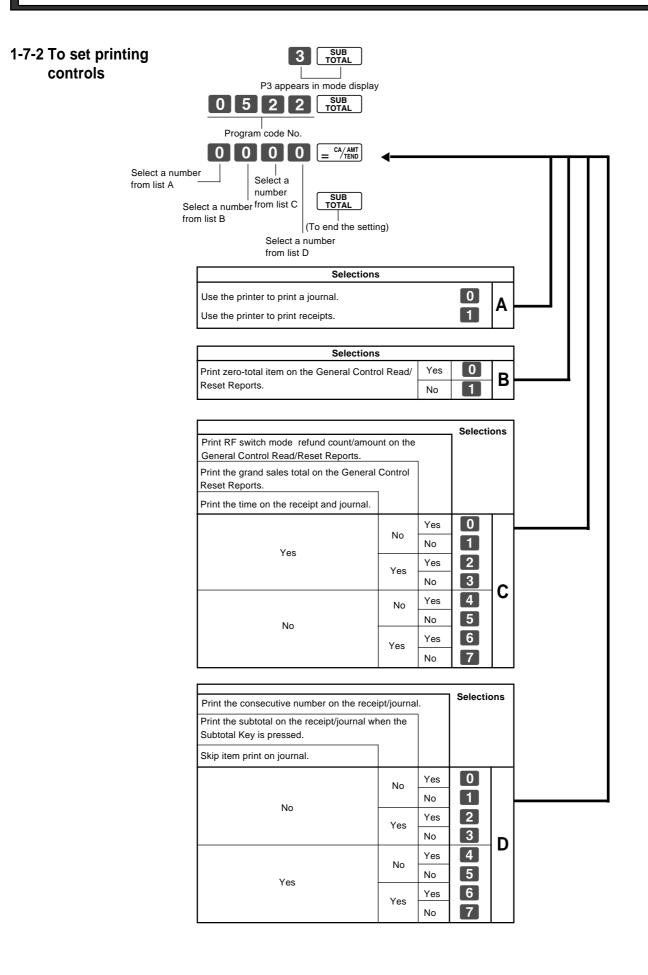

## 1-7-3 Printer switch for Receipt or Journal

The printer is initialized as journal.

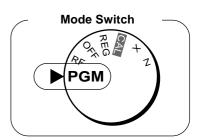

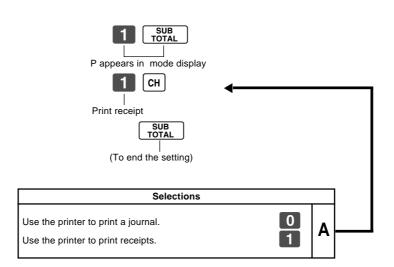

• Printer selection to print a journal or receipts can also be set on procedures 1-7-2 "To set printing controls".


Receip Example

To print a receipt

## 1-8 PLU setting

## 1-8-1 Linkage with Departments


Example				
PLU No.	1	100		
Link Dept. No.	1	4		

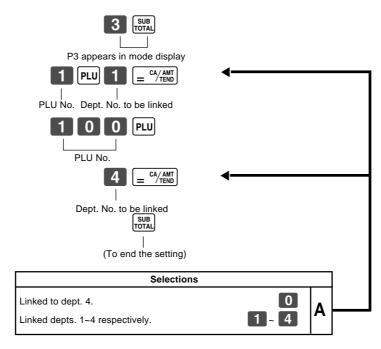


- 100 PLUs can be set.
- When the linked department is not specified, the PLU is linked to department 4.
- Status for a single-item sale and tax status are followed the specified linked department.


## 1-8-2 Unit Prices for PLUs

Example				
PLU No.	1	2		
Unit Price	\$1.00	\$3.00		

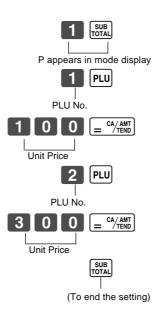

- Unit prices within the range of \$0.01~999.99.
- Download from Www.Somanuals.com. All Manuals Search And Download.

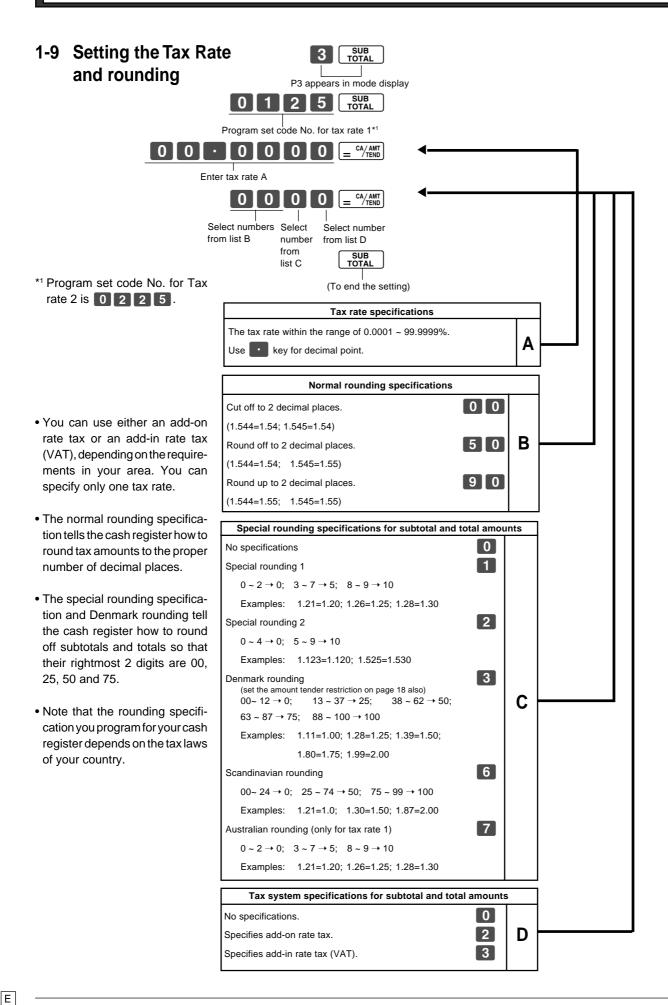

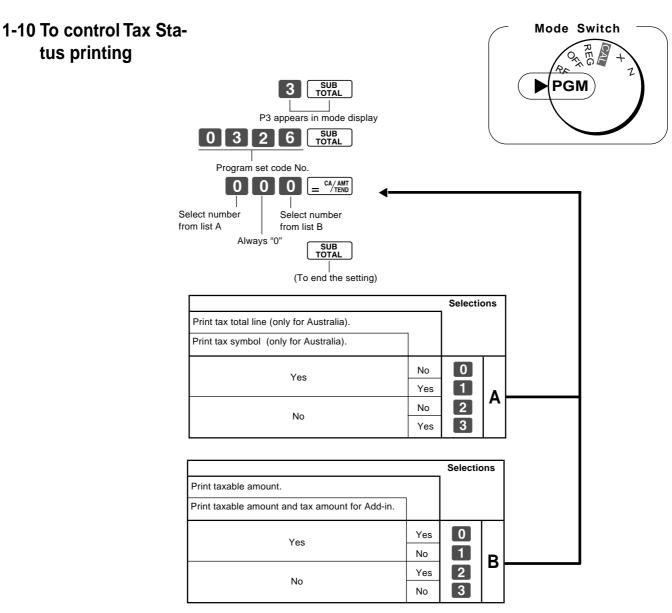


## 1-11 Printing to read All Preset Data

• Printing preset data.

- **Printout** Operation 1-11-1 Printing preset data except PLU settings 08-01-05 Date CA/AMT TEND 08-06#0038 Time/Consecutive No. X-Read Symbol 1 • • • • 1 • 00 Dept No./Unit Price/Tax Status 1-#041 Normal Dept/Digit Limit/Single Item 2••••2•20 2 #051 3 ••• • 11 • 00 # #000 1- Minus/Tax Status . . 2•5 % -Percent Rate/%+ or %-1 Percent Key Control/Tax Status #11 €1•23242 #⊣ Euro Exchange Rate 0122 • • • #22 Date/Monetary Mode Control 0522 • #1062 Print Control General Control 0622•#0000 1022 • • • • #3 **Calculation Control** 0326 • • #002 Tax Control 2422 • • • #0 Euro Status 0125 • • • • 5.2500 % -Tax Rate1 Rounding specification/ Tax System specification 5003 0000 0255 • • • • •
  - 10•0000 % Tax Rate 2


0000 08-01-05

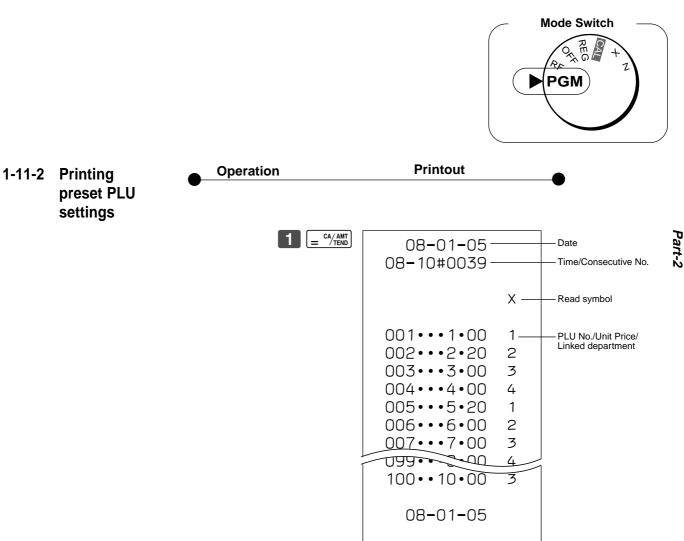

## 2. Various Operations

2-1 Registration using preset price for Departments.

(Programming: See page 19)

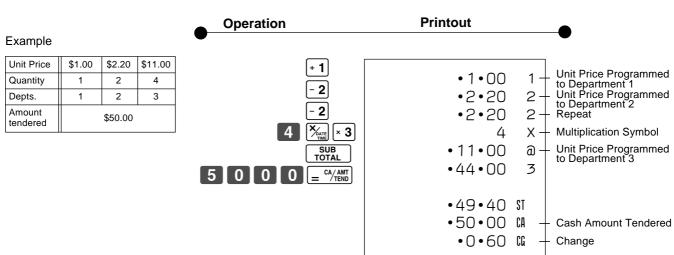

5 0

## 2-2 Single-Item Sales

(Programming: See page 20)

Single item sale

\$0.50

1

1

### Example 1:

Example 2: Status

Unit Price

Quantity

Dept.

Status	Single item sale
Unit Price	\$0.50
Quantity	1
Dept.	1

Normal

\$1.00

1

2

+ 1	•0•50 1
	•0•50 [A - Cash Sales

For this example, Dept. 1 is programmed for a single-item-sale. (Programming: See page 16.)

**Mode Switch** 

REG

್

+ N

$ \begin{array}{cccccccccccccccccccccccccccccccccccc$
---

Single-item sale cannot be finalized if an item is registered previously.

Printout

#### Example: 5 0 0 ÷ 4 •35•00 4 Unit Price \$35.00 ÷ 4 •35•00 4 Quantity 2 SUB TOTAL Dept. 4 •70•00 CK L Check Sales снк 2-4 Split cash/ check sales Example: - 2 0 0 3 0 •30•00 2 Unit Price \$30.00 \$25.00 × 3 Λ Ω 3 •25•00 Quantity 1 1 SUB TOTAL Depts. 2 3 = CA/AMT 0 0 0 Cash amount •55•00 ST \$20.00 tendered снк •20•00 CA Check \$35.00 •35•00 CK **Mode Switch** N.C. OFF RF <u>70</u>

Operation

2-3 Check sales

2-5 Refund Printout Operation 0 0 2 Example 13-55#0074 RF **Refund Mode Indicator** Unit Price \$1.00 \$2.00 0 0 × 3 Quantity 1 1 SUB TOTAL •1•00 2 Dept. 2 3 •2•00 3 • 3 • 0 0 CA

After you finish RF mode operation, be sure to return the Mode Switch to the REG (register) setting.

Download from Www.Somanuals.com. All Manuals Search And Download.


Е


Part-2


#### 2-6 PLU operation **Mode Switch** N CA. RĔG <u>ملم ا</u> **Printout** 2-6-1 PLU registration Operation (Programming: See page 25) 1 PLU PLU No. PLU 001 ••• 1•00 Example Repeat 001 ••• 1•00 4 X PLU No. 1 2 Multiplication Symbol 4 X Unit Price \$1.00 \$2.00 PLU 2 •2•00 Preset Unit Price Quantity 2 4 a -Link Dept. No. 1 1 = CA/AMT 002 • • • 8 • 00 Cash Amount \$10.00 tendered • 10 • 00 CA -- Cash Amount Tendered

	Single-Item	Operation	Printout	
<b>Sale</b> (Programming: See page 25)		25) <b>1</b> PLU	001•••1•00	
Example			• 1 • 00 CA	
PLU No.	1	• For this exa	mple, linked department 1 is progra	ammed for a single-item-
Status	Single item sale		<ul> <li>sale. (Programming: See page 23)</li> <li>Single-item sale cannot be finalized if an item is registered previously</li> </ul>	
Unit Price	\$1.00			
Quantity	1	<ul> <li>Single-item</li> </ul>	sale cannot be finalized if an item	is registered previously.

## 2-6-3 PLU report

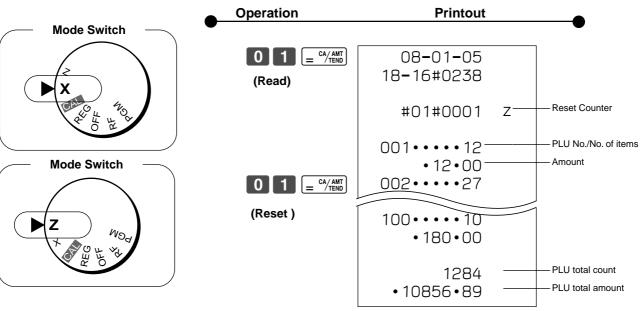

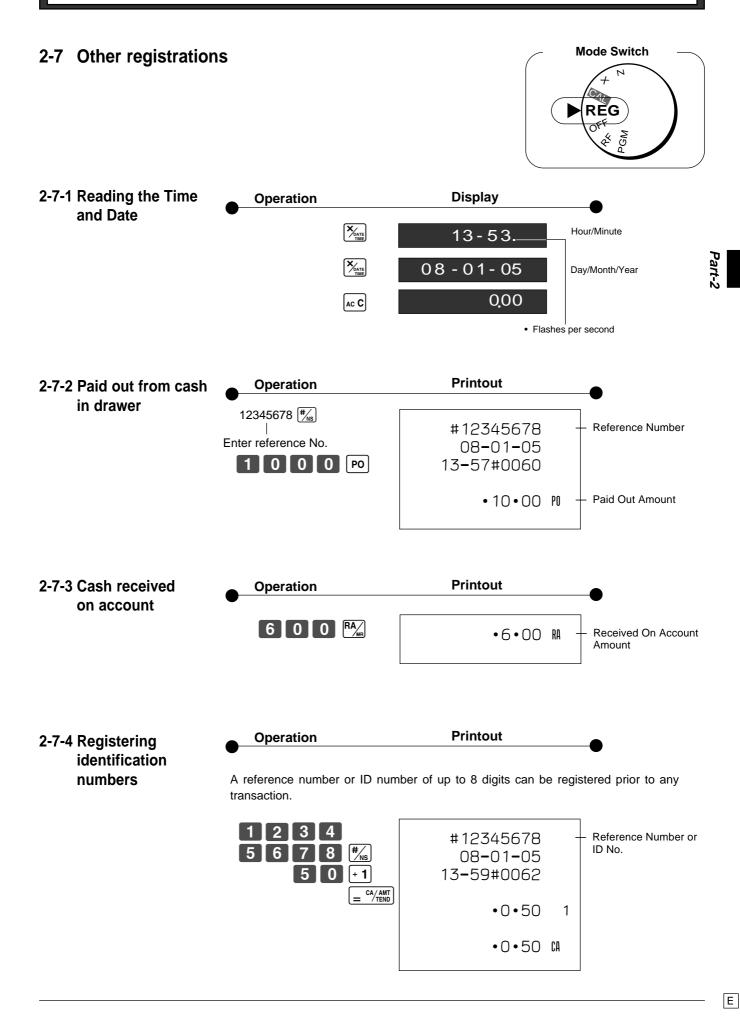

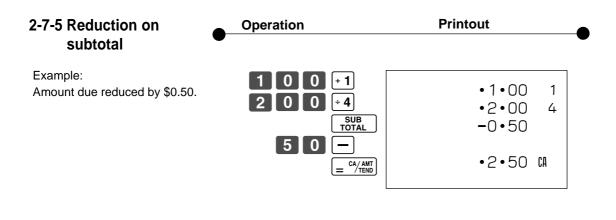


## 2-7-6 Premium/ Discount


- 2.5% premium/discount (programmed to % key) applied to first item.
- 7% premium/discount applied to transaction total.
- For programming the % key as percent minus or percent plus, see page 21.
- For programming percent rate, see page 20.


Printout Operation Premium Discount 0 0 + 1 • 1•00 1 Premium/Discount Rate •1•00 1 % 2.5 % Premium/Discount Amount 2•5 %-•0•03 - 2 -0.03  $0 \mid 0$ •2•00 2 •2•00 2 0 0 1 •3•00 1 •3•00 1 SUB TOTAL •6•03 ST Subtotal •5•97 ST 7 % 7 % Premium/Discount Rate 7 %-•0•42 Premium/Discount Amount -0.42 •6•45 CA •5•55 CA

## 2-8 About the daylight saving time

It is possible to set the internal clock forward/backward by 1~9 hour(s) for the daylight saving time.

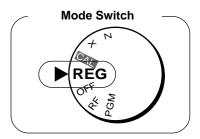


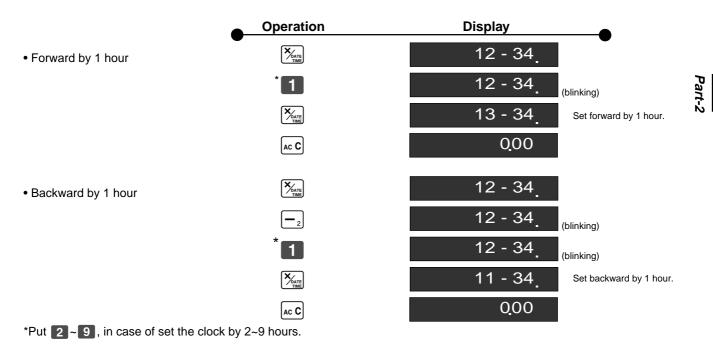


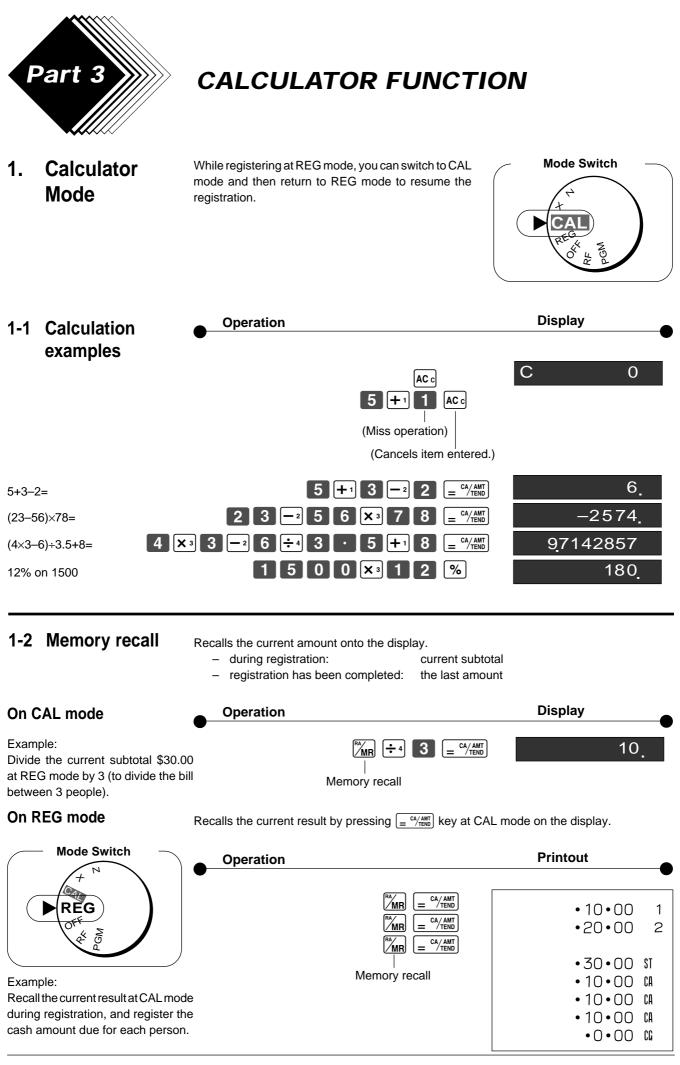

**Mode Switch** 

PGM

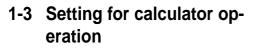

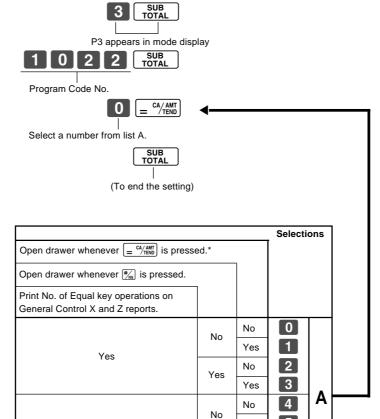

\* Drawer does not open during registration procedures even if you press  $= \frac{c}{m}$  by turning the mode switch to CAL position.

No

5

6

7

Yes

No

Yes

Yes



## **USEFUL INFORMATION**

#### Troubleshooting 1.

	Symptom/Problem	Most common causes	Solutions
1	E01 appears on the display.	Changing modes without completing transaction.	Return mode switch to where it stops buzzing and press $= \frac{6/100}{100}$ .
2	E94 appears on the display.	Printer paper is jammed.	Remove jammed paper. Turn Mode switch to OFF then turn to ON, or Turn power OFF and then turn power ON.
3	No date or time on receipt. Paper is not advancing enough.	Printer is programmed as a journal.	Program printer to print receipts.
4	Drawer opens up after ringing up only one time.	Department is programmed as a single item dept.	Program the dept. as a normal dept.
5	Not clearing totals at end of day after taking report.	Using X mode to take out reports.	Use Z mode to take out reports.
6	Programming is lost whenever register is unplugged or there is a power outage.	Bad or no batteries.	Put in new batteries.
7	Register is inoperative. Can't get money out of drawer.	No power.	Pull lever underneath register at rear.

#### **Specifications** 2.

## **INPUT METHOD**

Entry:	10-key system; Buffer memory 8 keys (2-key roll over)
Display (LED):	Amount 8 digits (zero suppression); Department/PLU No.; No. of repeats

### PRINTER

Receipt:	12 digits (Amount 10 digits, Symbol 2 digits)
(or journal)	Automatic paper roll winding (journal)
Paper roll:	58 mm $\times$ 80 mm $\varnothing$ (Max.)

### CALCULATIONS

Entry 8 digits; Registration 7 digits; Total 8 digits

## **CALCULATOR FUNCTION**

8 digits; Arithmetic calculations; Percent calculations

Memory protection batteries:

The effective service life of the memory protection batteries (3 UM-3, R6P (SUM-3) or LR6 (AM-3) type batteries) is approximately one year from installation into the machine.

Power source/Power consumption: See the	rating plate.
---	---------------

Operating temperature:	0°C to 40°C (32°F to 104°F)
Humidity:	10 to 90%
Dimensions/Weight:	203 mm(H) $\times$ 330 mm(W) $\times$ 360 mm(D) with S drawer
	4.1 kg with S drawer
	250 mm(H)× 410 mm(W)× 450 mm(D) with M drawer
	9 kg with M drawer


### Specifications and design are subject to change without notice.

38

(

## When the cash drawer does not open!

In case of power failure or the machine is in malfunction, the cash drawer does not open automatically. Even in these cases, you can open the cash drawer by pulling drawer release lever (see below).

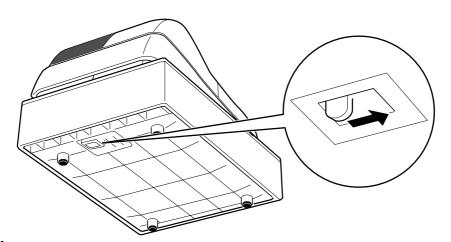


### Important!

The drawer will not open, if it is locked with a drawer lock key.

### To lock/unlock the multipurpose tray

(only for M size drawer)

- A. Turn the lever (1) clockwise to lock the tray (the indicator becomes red).
- B. Turn the lever (1) counterclockwise to unlock the tray (the indicator becomes green).

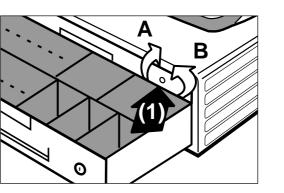

The main plug on this equipment must be used to disconnect mains power. Please ensure that the socket outlet is installed near the equipment and shall be easily accessible.



Please keep all information for future reference.

Part-4

# CASIO.

**CASIO COMPUTER CO., LTD.** 6-2, Hon-machi 1-chome Shibuya-ku, Tokyo 151-8543, Japan

MO0411-A

130CR\*E Printed in Indonesia Printed on recycled paper.

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com