



ecom
instruments

■■■■■■■■■■ mobile experts

Ex-Handy 05



Bedienungsanleitung

Operating Instructions

Notice d'utilisation

Gebruiksaanwijzing

Istruzioni per l'uso

Instrucciones de uso

Manual de instruções

Bruksanvisning





Deutsch	Seite	1
English	Page	38
Français	Page	71
Nederlands	Pagina	105
Italiano	Page	140
Español	Página	175
Português	Página	209
Svenska	Sida	243

Table of Contents

1. Application	39
2. Safety information	39
3. Faults and damage	39
4. Safety regulations	39
5. Ex-Data	40
6. Specifications	40
7. Functional description / Operating instructions	40
8. Battery	64
9. Repair	67
10. Cleaning, maintenance and storage	67
11. Disposal	67
12. Warranty and liability	68
13. EC Declaration of Conformity	68
14. EC-Type Examination Certificate	69

Note:

The current operating manual, the EC Declaration of Conformity and the EU prototype testing certificate can be downloaded from the relevant product page at www.ecom-ex.com, or alternatively they can be requested directly from the manufacturer.

1. Application

The Ex-Handy 05 is an intrinsically safe, splash water-, dust- and impact-resistant mobile phone for industrial application in areas with an increased risk of explosion in zones 1 and 2, in accordance with directive 1999/92/EC (ATEX 137).

2. Safety information

This operating manual contains information and safety regulations which are to be observed without fail for safe operation in the described conditions. Non-observance of this information and these instructions can have serious consequences or may violate regulations. Please read these operating instructions carefully before starting to use the phone!

In case of any doubt (in the form of translation or printing errors) the German language operating instructions shall apply.

3. Faults and damage

If there is any reason to suspect that the safety of the unit has been impaired, it must be withdrawn from use and removed immediately from the Ex-area.

Measures must be undertaken to prevent it from being restarted accidentally.

The safety of the unit may be compromised, if, for example:

- there is visible damage to the housing.
- the unit has been subjected to excessive loads.
- the unit has been improperly stored.
- the unit has been damaged in transit.
- unit markings or inscriptions are illegible.
- malfunctions occur.
- permitted limit values have been exceeded.

4. Safety regulations

Use of the explosion-proof mobile phone Ex-Handy 05 assumes that the operator complies with conventional safety regulations and has read the certificate in order to eliminate faulty operation of the unit.

The following points are to be observed:

- The device may not be opened inside the Ex-area.
- Only the original battery module Ex-AMH 05 (Li-ion 3.7V/850 mAh) may be used!
- The battery module may not be changed inside the Ex-area!
- The battery module may only be charged outside the Ex-area and only then using the following appropriate chargers: charger LGH 05, car charger ALH 05, Car-Kit CKH 05 or USB data cable PCH 05.
- When changing the battery the battery compartment and the circulating seal are to be examined for any contamination and cleaned, if necessary, with a brush or by using blasts of compressed air.

- The covers for the SIM card and charging socket must be closed in the Ex-area.
- When replacing the battery cover it must be ensured that the cover locks in place properly and that the rear is secured using the six screws.
- It must be ensured that the phone is not taken into zone 0 or 20, 21 or 22!
- Only accessories approved by ecom instruments GmbH may be used.
- The mobile phone is not waterproof, therefore keep it dry!
- Observe the corresponding laws that are in force in the respective country regarding the use of mobile phones while operating a vehicle!
- Use of the mobile phone in an airplane is not permitted!
- Switch off the mobile phone when in close proximity to medical instruments and if you are requested to do so by corresponding regulations!
- Manufacturers of cardiac pacemakers recommend a minimum distance of 15 cm is maintained between a mobile phone and a pacemaker.
- Do not switch on the mobile phone when the use of such devices is prohibited, as it may cause interference or result in danger.


5. Ex-Data

EC-Type Examination Certificate No.: ZELM 07 ATEX 0337

Ex-Designation:  II 2 G Ex ib IIC T4

Approved for zone 1, device group II, explosion group IIC (explosive gases, vapours or mist), temperature class T4.

6. Specifications

Networks:	Triband GSM 900 / 1800 / 1900 MHz
Data transfer:	GPRS class 10 (up to 62.4 kbps)
Display:	Passive matrix display with 65,536 colours (resolution 128 x 128 pixels)
Power supply:	Li-ion rechargeable battery with 850 mAh capacity
Talk time / standby:	max. 4h / max. 350h
Charging time:	approx. 3h
Dimensions:	117 x 52 x 24 mm
Weight:	approx. 150g
CE-Designation	 0102
Ambient temperature Ta:	-10°C ... +50°C
Storage temperature:	0°C ... +40°C
Protection rating:	IP54


7. Functional description / Operating instructions

Please read this instruction manual carefully before use so that you are familiar with, and are able to use, all of the functions of your Ex-Handy 05. For your own safety and information please read through the instructions on the following pages.

7.1 Your phone package - Accessories

When you open the box, check that all items listed below are present:

1. Mobile phone Ex-Handy 05
2. Battery Ex-AMH 05
3. Charger LGH 05
4. Screwdriver
5. User guide
6. Software-CD

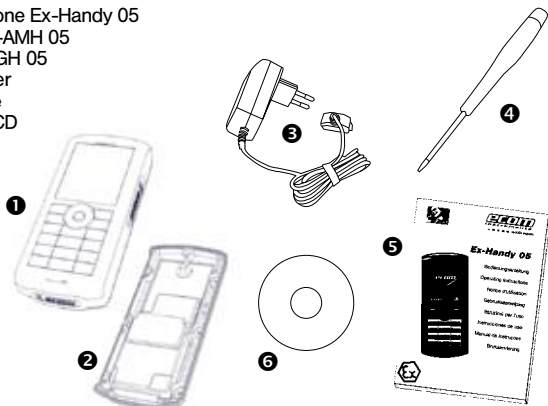

Accessories


Only use accessories that are approved by ecom instruments GmbH in order to guarantee optimal operating conditions and the safety of your phone and accessories. You can also find (as an option) or order the following accessories:

- Spare battery Ex-AMH 05
- Spare charger LGH 05
- Car charger ALH 05
- Hands free device, Car-Kit CKH 05
- PCH 05 USB cable (with associated drivers) to connect your phone to a PC
- Leather case in yellow
- Bluetooth hands free kit CK1

7.2 Description

General view

1. Belt clip
2. Charging socket
3. SIM-card
4. IrDA
5. Voice recording

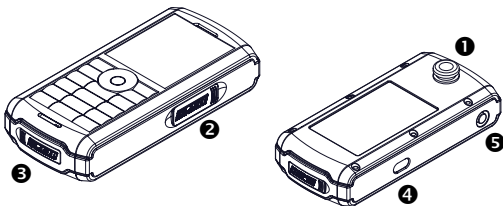



Hold down: Switch on/off.

In a call context: Reject a call - hang up

In menus: Return to initial screen



Long press: Activate/Deactivate hands-free mode (Warning:

In this mode do not bring the phone up to your ear.) (This could

cause damage to your hearing). In a call context: Call - receiving a call



Right programmable key:

In initial screen: two short presses: access to Inbox;

long press: access to network settings

In menus: access to the selection shown on screen in the tab(*)



Left programmable key:

In initial screen: two short presses: access to Phonebook, access to Bluetooth,

long press: activate/deactivate the alarm

In menus: Access to the selection shown on screen in the tab(*)



The four-directional navigation stick allows you to:

- Move the cursor on the screen by pushing the stick toward the corresponding direction
- Confirm your selection by pressing the stick
- In initial screen: Pressing and holding the button to the left (depending on model):
access to tasks in the form of speech; pressing and holding the button to the right: access to calendar.

(*) In this manual, when a function is chosen by pressing on this key, square brackets are used (e.g.: **[Save]**).

Note: When the and icons appear on the screen, access to the corresponding option is initiated via the navigation stick



Press briefly and [OK]: activate or deactivate keypad locking

When composing a message: **Short press:** switches from one input mode to another (T9, ABC, 123); **Long press:** upper case/lower case



Hold down: In initial screen: Silent mode

In call reception mode: Short press stops ring tone In ring tone setting mode:


Activate/deactivate ring tone Zoom mode (see **Multimedia** and **WAP** menus)


2 to 9

A long press on the keys 2 to 9 directly displays the phonebook.

7.3 Navigation principles

These basic principles bring a great intuitiveness to your phone.

Validate by pressing the  key or the navigation stick.


Pressing  will take you to the previous level.


The thumbnails at the bottom of the screen refer to the  and  keys.


In the menus, a title bar reminds you of the previous level.


From the initial screen, pressing the navigation stick displays the icons of the main menus

When pressing the navigation stick followed by a figure, you can display a menu directly. For instance, pressing the navigation stick and then 5 displays the Phonebook.

The  key is used to go from a menu to a sub-menu.

The  key is used to go a sub-menu to a menu.



















The  key (press briefly) is used to go back to the initial screen (current function is abandoned).

In some menus there is a Help menu (), which informs you on the various functions of the sub-menus.

7.4 Initial screen

The initial screen may contain the following information:


1 - The title bar icons:

	Batterie
	Calls forwarded
	Call (establishing the call)
	Call (hands free)
	Message (reception of a message, message memory full)
	FAX communication
	DATA communication
	Silent mode
	Message in answering machine
	WAP (@) communication
	GPRS
	Home zone
	Roaming
	Only emergency call is possible
	Keypad locking
	Protected WAP logon
	Protected WAP logon icon with certificate
	Signal strength level (5 bars)

2 - Date and time, in digital or analog mode

3 - Network provider

4 - Thumbnail centred on bottom line:

The main menu thumbnail shows that the menu can be accessed by pressing the navigation stick. The following information may also be displayed: „1 message received“ or „1 call“. It can be deleted by pressing the  key briefly.

7.5 Activating your phone



Information on the SIM card

To use your phone, you need a card called SIM card. It contains personal information that you can modify:


- Secret codes (PINs, Personal Identification Numbers):
these codes allow you to protect access to your SIM card and phone
- Phonebook
- Messages
- How special services work.
- Your phone is compatible with the SIM 3V-cards.

WARNING

This card must be handled and stored with care in order not to be damaged. If you should lose your SIM-card, contact your network provider or your SMC (Services Marketing Company) immediately. Please keep your SIM-card out of reach of young children.


First use: Installing the SIM-card

1. Open the lower cover carefully on the Ex-Handy 05 to insert the SIM card.
2. Slide the SIM-card into the card holder until it locks in place. When doing this make sure that the tapered side of the card is facing the same way as illustrated in the diagram (or the type plate on the rear).
3. Replace the lower cover again carefully.

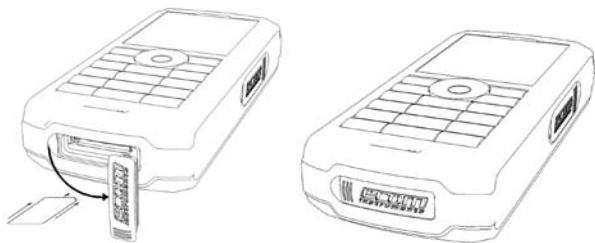

7.6 Getting started

You are now ready to use your phone for the first time.

Switch on the phone by pressing the  key. A short display appears.

When you switch on your phone for the first time, you must configure it with various settings that will remain by default until you choose to modify them.

After entering your PIN code and the date and time, make your choice for the following settings: time zone, daylight savings, skin, wallpaper, screensaver, ring tone, volume, vibrate and voicemail number.

If there are contacts saved in your SIM-card, you are invited, if you wish, to copy them in the phone contacts memory.


PIN number

This is your SIM's secret code.

If access to the SIM card is protected, the device prompts you to enter the PIN number.

Enter the code between 4 and 8 digits given to you when the SIM card was issued. These digits do not appear on the screen for security reasons.

Press **[OK]** or the navigation stick to validate.

If your phone indicates that the SIM is missing, press the  key, to switch off your phone and check that the SIM-card is correctly installed.

WARNING

If a wrong PIN number is entered three times in succession, your SIM-card is blocked. You must then:

- Enter „**05*“.
- Enter the PUK (Personal Unblocking Key) code provided by your operator and validate.
- Enter your PIN number and validate.
- Enter your PIN number again and validate.


After 5 or 10 failed attempts (depending on the type of SIM-card), the SIM-card is definitely locked. You must then contact your operator or your SMC to obtain a new card.

7.6.1 Setting time and date

When you use your phone for the first time, you need to set the date and time. In due course, when the battery is completely discharged, or if it has been removed, you will be prompted systematically to confirm date and time.

Setting the date:

Set the date by entering it directly in numerical form or by using the navigation stick to increase or decrease the default values.

Use the navigation stick to access the next (or last) data input field. Once the date is correct, press the  key to validate.



(Setting the time: Same procedure as for setting the date.)

Network

From now on the phone hunts for a network on which it can make calls. If it finds one, it displays the name of the network on the screen. You are then ready to send or receive a call.

- If the network icon appears, calls are possible on your operator's network.
- If the letter **R** and a network name are displayed, calls are possible on the network of a different operator. If the letter **E** is displayed without any network name, only the emergency services are accessible (ambulance, police, fire brigade).
- If the network icon flashes, the phone is in permanent search mode. There is no network available. The signal strength indicator received allows you to display the quality of reception. If it indicates less than three bars, search for better reception in order to call in good conditions.





7.6.2 First call

Dial the number of your correspondent. Press the  key. During the call, the call in progress icon flashes on screen and tones may indicate the establishment of the call. Once communication has been established, the call icon stops flashing. You can adjust the sound level (volume) using the navigation stick. At the end of the conversation press the  key to hang up.


Calling voicemail

In the initial screen, press and hold down the 1 key.


Receiving a call

When you receive a call, the number of your correspondent is displayed when it is presented by the network. Press the  key or the  key to answer and speak. To refuse the call, press the  key or the  key.

Emergency services

Depending on the operators you can obtain the emergency service with or without SIM-card or when the keypad is locked. It is enough to be in an area served by the corresponding network. To obtain the international emergency service, dial 112 and then press the  key.

Switching off

Press the  key (long press). The end message is displayed. The phone switches off.

Hands-free mode

During a call, press and hold the  key to switch into hands-free mode.

WARNING

In this mode do not bring the phone up to your ear. This could cause damage to your hearing.

7.7 Using your phone

Freeing the antenna



The antenna is integrated in your phone. It is located under the back cover at the top. Avoid putting your fingers on this area when the phone is switched on.

If your fingers obstruct the antenna, the phone may have to operate with a higher power level than usual; decreasing its efficiency quickly. It could also affect the quality of your communications.



7.8 Phonebook

Using the phonebook

Enter the Phonebook menu. The contacts list is displayed if you set up contacts. When a contact is selected, an icon is displayed in the title bar:



contact stored in the SIM card



contact stored in the phone



contact stored in the Fixed Dialling. See PIN2-Code and Fixed dialling in Security Menu for more details about this activation.

You can search for a contact quickly by typing the first letters (up to three). You can display it by pressing **[OK]**.

Storing a new contact:

- Display the Phonebook, press **[Options]**, then select **Add SIM contact** or **Add phone contact**.

- Enter the last name and press the navigator.

- Enter the number and press the navigator **[OK]**.

Note: you can fill other fields if you store the contact in the phone memory (email, address, ring tone, photo, etc.).

- Press **[Save]** to store it.

Calling a contact

Several ways:

- Select a contact. Press  to start the call.

- Select a contact, press **[OK]**. The number is displayed.

Press **[Call]** to start the call.

- Direct call from the idle screen (only for the contacts stored in the SIM card memory): type the number with which the contact was saved and then enter * (example: 21 *), or enter the number and confirm pressing **[#]**. Then confirm the displayed number.

Contact options

To display the various options, select a contact and press **[Options]**.

Modifying a contact

Modify what you want and validate; then select Save once the modifications are completed.

Copy to SIM/Copy to mobile

This allows you to copy your phonebook contacts from one memory to the other. Only the name and the first phone number will be copied.

My numbers

You can create the entries corresponding to your own numbers in order to consult them when necessary.

Select My numbers and validate. Enter the different details and validate.

Mailing lists

A mailing list allows you to send a same message to several recipients at the same time.

- Select Mailing Lists and press the navigation stick. The phone asks you to confirm the creation of a new list.
- Select the list type (SMS or MMS) and press the navigation stick.
- Enter a name and press the navigation stick.
- Then, on a list press **[Options]**. Select Add contact each time you want to add a contact in the list.

Memory

Select SIM or Telephone and validate. Telephone: the screen displays the amount of memory used. The memory capacity is shared between the phonebook and various other features. If you lack memory, check if you can free some space.

SIM: available memory for contacts only.

Delete/Delete all

This allows you to delete the contact selected or all the contacts.

Set as my card/Business card

The details of a contact stored in the phone memory can be saved in a business card.

- Select a contact, press **[Options]**.
- Select Set as my card and **[OK]**. The details are saved as Business card. Then you can read it, modify it or send it by SMS, MMS or IrDA.

List choice

This menu allows you to select the default phonebook (phone, SIM and Phone or SIM) displayed when the phone switches on.

Contacts synchronisation with a computer

Install Wellphone, the software provided on CD, and click on DIRECTSYNC: you can synchronise your contacts stored in the phone memory with those of your Lotus Notes™ or Microsoft Outlook™ bases.

7.9 Messages

From this menu, you are able to send SMS and MMS. MMS is a Multimedia Message Service, which allows you to enclose audio files, images and other rich contents to your messages: these messages can even be composed of several slides.

MMS are differently invoiced than SMS are. Please contact your network provider to get more information on their cost.

Compose SMS

On the **Messages** menu select the **Compose** menu and validate. Choose the **SMS** option. The language used is the one selected on the display of the phone. If the language selected is not compatible with the Easy Message T9™, the English language will be automatically selected.

When typing a text, a counter showing the number of characters deducted is displayed at the top of the screen. This counter is not displayed if an icon or sound is inserted into the SMS. When the text has been entered **[Options]** is used to access the functions offered.

Using T9 Mode



Press once the key corresponding to the letter chosen and compose the word by continuing to press the keys corresponding to the various letters without paying attention to the display: the word is highlighted.

If you agree on the word proposed on the screen, press the 0 key to validate it. The 0 key inserts a space. Then you can go on writing the next word.

However, the same sequence of keys pressed can correspond to several words, existing on the dictionary. If the word that appears is not the word you expected, press the navigation stick to scroll through the words corresponding to this key sequence.

If the word you are expected is not proposed, please add characters until you get the message Add a word? Press Yes and validate if the word displayed suits you or modify this word before adding it to the dictionary.

Input modes

In the input screen, the  key is used to access other input modes. The mode in which you type the text is displayed at the right top of the screen. A short press of the  key switches from one mode to another.

The „**ABC**“ mode is used to write words that do not exist in the dictionary. To get a particular character, please press the corresponding key several times: the characters will scroll down on your screen.


„**123**“ mode“ is used to add numbers.

Insert mode is used to add symbols, animations, call group icons and tunes.






Upper case

A long press of the  key will display the next letter in upper case (↑).

Punctuation characters

Punctuation characters are obtained thanks to key 1 (except in the „**123**“ mode) or with the help of the Insert mode (fast access by briefly pressing the  key).

When composing a message:

-  key Deletes last letter
-  key Message options
- #  key (long press): Zoom mode (changes size of characters)
- #  key (short press): Access to symbol table
- *  key (long press): Upper case

Compose MMS

On the **Messages** menu select the **Compose** menu and validate. Choose the **MMS** option.

When the text has been entered in the **Message** field,  **[Options]** is used to access the functions offered.

Saving the message

Select **Save**. It is saved in the **Drafts** menu. Select **Save as Template**. It is saved in the **Templates** menu.

Sending the message


- Once the text entered, press the navigation stick or press **[Options]** and select Send.
- Enter the receiver's number (or take it from your phonebook pressing **Contacts**) and press the navigation stick.

Note: It is possible that the voice message format (.amr) is not supported by some PCs. Contact your PC provider to get additional information.

Warning:

Some message sendings may fail if the message content is too big.

Receiving messages

When you receive a message, the phone plays the ring tone that you selected, and the message icon  will be displayed on the screen of your phone.

If you do not read the messages, this icon remains displayed on the screen.

When the icon flashes, the memory is full.

Receiving icons, backgrounds or tunes can take several seconds. An icon is blinking when the download of your message is in progress.

Note that you have two different possibilities for receiving MMS: automatically or manually. If „manual mode“ is activated, then you will receive only a notification in your Inbox, meaning that a MMS is available on the MMS Server; select **Retrieve**, when you want to retrieve the MMS from the server.

Inbox

On the **Messages** menu, choose the **Inbox** menu and **[Select]**.

Each message shows the presence of any attachments, the time and date the message was received and its size.

Messages are listed in chronological order, the latest one being displayed first. The quantity of Not Read and Not Retrieved messages is shown. Not Retrieved and Not Read messages are shown in bold.

Outbox

This menu displays the messages that have not been sent. You can send them again from this menu.

Sentbox

If you activated the **Store sent messages** option in the **Options** menu, the **Sentbox** menu is used to store all your sent messages.

Too many messages saved will quickly fill up the available memory. This means, no further messages will be received.

For each message, its characteristics (shown with an icon) and the time (or date) of sending are displayed on the screen.

Drafts

When you store a composed message, it is stored among the drafts.

On the **Messages** menu, choose the **Drafts** menu and **[Select]**.

Select a message and press the  key. If you do not delete this message, it will be stored in the draft folder and it can be accessed again after sending.

Options

Several sending options are available.

On the **Messages** menu, choose the **Options** menu and **[Select]**.

Choose one of the options given: SMS or MMS.

The SMS sending options are: store sent message acknowledgment, period of validity (during that period, the network provider will try to send the message), message format, message centre number.

The following options are available:

- **Store sent message**: (it is highly recommended that you keep this function deactivated, in order to avoid a full memory).
- **Retrieval mode**: if you are in a poor coverage area, it may be more convenient to choose the manual retrieval mode which gives you the Retrieve later option.
- **Priority**: selection of a priority to send a message.
- **Request delivery report**: request of a delivery report when sending a message.
- **Period after validity**: during that period, the network provider will try to send the message.

Advanced settings:

- **Send delivery report**: sending a delivery report when receiving a message.
- **MMS ignore**: if you want to deactivate the reception of any MMS in your phone.

- **MMS server:** to select another MMS provider, or set the parameters of a new MMS provider.
- **Sender visibility:** you choose to display or not your phone number on the receiver's phone screen, with that message.

Calling Voice Mail

This function allows you to call your voicemail.

On the **Messages** menu, choose the **Call Voice Mail** menu and **[Select]**.

This number depends on the operator.

7.10 Multimedia

My Pictures

This menu gives you access to the pictures you have downloaded.

On the **Multimedia** menu, select the **My Pictures** sub menu and **[Select]**.

PlanetSagem: to have access to the web site to download pictures. Selecting **[Options]** allows you to delete all the pictures.

On a picture selected, you can press **[Options]** to have access to the following options:

- **Send By:** makes it possible to transmit a picture (NB: you may not send any copyrighted picture).
- **Use as:** allows you to use the picture as a wallpaper or screen saver.
- **Rename:** allows you to rename a picture.
- **Properties:** properties of the picture selected.
- **Delete:** allows you to delete a picture.
- **Delete all:** allows you to delete all pictures.

You can import or export pictures to or from a computer using My Pictures And Sounds (MPAS). Visit www.planetsagem.com for downloading this tool.

My Sounds

This menu gives you access to the sounds you have downloaded or recorded.

On the **Multimedia** menu, select the **My Sounds** submenu and **[Select]**.

PlanetSagem: to have access to the web site to download sounds. Selecting **[Options]** allows you to delete all the sounds or to record a new sound.

To display the different options, press **[Options]**:

- **New Sound:** allows you to record a new sound.
- **Send By:** allows you to send a sound by MMS, IrDA or Bluetooth (depending on model).
- **Use as:** allows you to add a sound to the ring tones list.
- **Rename:** allows you to rename a sound.
- **Properties:** properties of the sound selected.
- **Delete:** allows you to delete a sound.
- **Delete all:** to delete all sounds.

You can import or export sounds to or from a computer using My Pictures And Sounds (MPAS). Visit www.planetsagem.com for downloading this tool.

7.11 WAP

The WAP Menu


The WAP navigator is under licence:




RSA Data Security



The WAP navigator and the software included are the exclusive property of Openwave. For this reason, it is forbidden to modify, translate, disassemble or even decompile all or part of the software.

You can activate the magnifying glass to increase the size of the characters by holding down the  key.

The Services menu, a dropdown menu, can be accessed at all times when navigating through WAP pages pressing the  key.

It contains the following sub menus:

Previous: this menu allows you to go back to the previous screen.

Welcome: logs onto the initial screen (showing the name of your operator).

Bookmarks: is used to save in a phonebook the names and addresses of Internet sites in order to make the access easy.

Go to URL: this menu allows you to input an Internet address directly.

Inbox: this menu allows you to check the messages sent by the Internet site.

Save objects: is used to save a WAP site item.

Snapshots: takes a snapshot of the currently displayed page.

Save Page: saves the currently displayed page.

History: backward and forward navigation of the pages displayed are kept in memory.

Reload: refreshes the current page.

Reset cache: clears the stored information on previous connections.

Advanced...: choose one of the following advanced settings:

- Settings
- Show URL
- Disconnect
- Security (is used to access information on making WAP connections secure).
- Delete Cookies
- View Title Region

About...: information on the browser

Exit: returns to the phone's initial screen.

Configuring WAP parameters

Select the **Advanced...** menu and the **Settings** menu.

Profiles is used to select or modify your access provider's logon parameters or configure the parameters of other access providers. (The active profile is preceded with an asterisk).

Configuration of GSM and GPRS parameters:

All information to be entered in the parameters are provided by your operator or service provider.

On a profile in the list, press **[Options]** and select **Modify**. The different parameters are: Provider title, Home page, Preferred connections, GSM parameters and GPRS parameters.

Preferred connections:

- GSM if not GPRS (by default): the logon to WAP services uses the GPRS as a priority. However, in the event of unavailability of the GPRS network, the GSM network is used to establish the link.
- GPRS: the logon to WAP services uses the GPRS network exclusively.
- GSM: the logon to WAP services uses the GSM network exclusively.

GSM parameters

- User
- Password
- IP address of WAP gateway
- Port type (secure or insecure)
- Dial-up number
- Mode (digital, analog or automatic)

GPRS parameter


- User
- Password
- IP address of WAP gateway
- Port type (secure or insecure)
- APN: if no APN has been defined, press **[Options]**, then the APN menu. Select or add an APN.

Once all the settings have been entered, you can activate the chosen service provider. Select him from the list and validate your choice.


Linger timer: is used to choose the time after which the call is automatically disconnected if you have forgotten to log off from a service.

WAP Logging on

The connection to a WAP service on the GPRS network is not cut if an incoming call is received. You can answer the call normally.

Using the **Welcome** menu, you can log onto your service provider's WAP site by pressing the  key. If you are logging onto the GSM or GPRS network, the @ symbol flashes. The metering of the cost of the call starts as soon as it stops flashing.

WAP Logging off

To log off, press the  key. The logoff happens automatically after a few seconds of inactivity if you forget to log off. This period is defined by the *Linger time setting*.

GPRS

A flashing icon indicates that the phone is logging onto a GPRS network. A non-flashing icon indicates that the GPRS network is available. If the icon is greyed out, it indicates that the phone is logged onto the GPRS network. This icon is not displayed if the GPRS network is not available or if the SIM-card inserted in your phone does not support the GPRS service.

7.12 Applications

Services

This item may not be present on your phone's menu, as it depends on the inserted SIM-card.

Alarm

On the Applications menu, select the Alarm menu and **[OK]**. Select **Activate** or **Deactivate** and validate. Set the wake-up time by entering the numbers directly or using the navigation stick and validate.



The alarm icon appears on the initial screen.

The alarm works even when the phone is switched off.

Timer

This menu is used to set and activate the timer.

On the **Applications** menu, select the **Timer menu** and **[OK]**.

Select **Activate** or **Deactivate** and validate. Set the duration (hours/minutes) by entering the numbers directly and validate.



The alarm icon appears on the initial screen.

ToDo

On the **Applications** menu, select **ToDo** and press **[Options]**.

Select one of the actions in the list with the navigation stick and validate.

- **Add Written ToDo/Add Vocal ToDo**: allows you to add ToDo of the text or voice type.
- **Categories**: allows you to see the different ToDo categories, assign a specific ring tone to each individual ToDo, know the number of ToDo's in each category

and see them.

- **Delete all:** Enables you to delete all tasks in the ToDo list in a single step.
- **Memory:** allows you to view the memory used by the different functions of your ToDo.
- **Synchronize:** allows you to synchronise a ToDo with a computer.

Data exchange with a PC

Working from a PC, you can save/edit contacts, events and tasks stored in your phone. To do this, you will need to connect your phone to the PC by means of a suitable data cable. Next, you will have to install the Wellphone software supplied with your phone.

Note: If a call comes in during an exchange of data with your PC, the link will be interrupted and will have to be manually re- started.








Calculator

On the **Applications** menu, select the **Calculator** menu and **[OK]**.

Use the navigation stick to make calculations:

- **Upwards:** Add
- **Downwards:** Subtract
- **Rightwards:** Multiply
- **Leftwards:** Divide

The following keys are used for:

-  **Left programmable key:** Equals or convert
-  **Right programmable key:** Delete
- *      **key or #:** Decimal point

If no calculations are being run, pressing **[Convert]** allows you to use the value in the converter directly.

Converter

On the **Applications** menu, select the **Converter** menu and **[OK]**.

Enter a value and move the navigation stick upwards to convert from one currency to another, or downwards to convert back.

7.13 Organizer

This menu gives you access to your agenda and to a day, week, month or specific date. It lets you add events and access the global actions for all the events. Also, you can manage events by event category.

Calendar menu

From the **Organizer** menu, select the **Calendar menu**.

- **Categories:** allows you to see the different event categories, assign a specific ring tone to each individual category, check the number of events in each category and display them.
- **Add Written Event/Add Vocal Event:** allows you to add events of the text or voice type. Fill in the different items and save the event.

- **Delete**: allows you to schedule the deletion of events that took place more than one day, week or month ago.
- **Memory**: allows you to view the memory capacity used by the different functions of your agenda.
- **Delete all**: allows you to delete all events.
- **Synchronize**: allows you to synchronise an event with a computer.

The other menus are:

- **See month**: allows you to access events on a month-by-month basis.
- **See week**: allows you to access events on a week-by-week basis.
- **See today**: allows you to access the events for the current day and the actions possible on any event (see, modify, delete and send).
- **See date**: allows you to access events at a specific date.

7.14 Settings



7.14.1 Sounds

Volume and ring tone

On the **Sounds** menu, select the **Ring tones** menu and **[Select]**.

Select the function on which you want to choose a ring tone.

Select the ring tone from the proposed list and validate.

You can deactivate the sound by pressing the **#**   key.



Vibrate


On the **Sounds** menu, select the **Vibrate** menu and **[Select]**.

Select the vibrate mode from the proposed choices and validate.

Silent mode

On the **Sounds** menu, select the **Silent mode** and **[Select]**.

Select **Activate** or **Deactivate** and validate. Silent mode can also be accessed via the initial screen by holding down the **#**   key.

 *When the phone is in silent mode, the relevant icon appears on the initial screen. In this mode, the ring tone will not function, except for the alarm clock.*

Note: If you have activated the silent mode, it does not remain after switching off your phone.

Beeps

On the **Sounds** menu, select the **Beeps** menu and **[OK]**.

Select the type of beep you want to allocate from the proposed choices and validate. Activate or deactivate the beep and validate.

If you select keypad beeps, different options are available.

Recorder

On the **Sounds** menu, select the **Recorder** menu and **[Select]**.

Press **[Start]** to record your melody or your voice by means of the microphone

then save it. Give it a name and validate. The new tone is saved in the list of ring tones and in **Multimedia/My Sounds**.

7.14.2 Display

Skins

On the **Display** menu, select **Skins**.
Select the desired skin and validate.

Wallpaper

On the Display menu, select the **Wallpaper** menu and **[OK]**.
Select the wallpaper and **[View]**. The picture appears in the background of the screen. Press **[OK]** to validate this choice, or **[Back]** to go back to your choice.
Note: the **Random** option allows you to display a wallpaper scrolling different pictures in a random way.

Screensaver

On the **Display** menu, choose the **Screensaver** menu and **[Select]**.
Select one of the screensavers given and **View**.

Operator logo

On the **Display** menu, choose the **Operator logo** menu and **[Select]**.
Select **Activate or Deactivate** and press **OK**.

Contrast


On the **Display** menu, choose the **Contrast** menu and **[Select]**.
Adjust the contrast using the navigation stick.

Energy saving

On the **Display** menu, choose the **Energy saving** menu and **[Select]**.

Screen only: only the screen is lit up.

Full backlight: both the screen and the keypad are lit up.

After a longer period of inactivity, the screen will enter an economy mode where the time is displayed. To quit this sleep mode and resume backlight, press the key 

7.14.3 Languages

On the **Settings** menu, choose the **Languages** menu and **[Select]**.
Select the desired language and validate. If you select **Automatic**, the language used will be the one relative to your SIM-card.

7.14.4 Contacts

On the **Settings** menu, choose the **Contacts** menu and **[Select]**.

- **Filter**: this menu allows you to select the way to sort contacts in the phonebook (by name or first name).
- **Contacts list**: This menu allows you to select the filter applied on the contacts list display (SIM contacts, phone memory or both).

7.14.5 Calls

The Calls menu allows you to manage all the calls functions (call forward, displaying numbers, call waiting, voicemail number, etc.).

Call forward

Depending on your subscription, this service allows you to forward incoming calls to a different number or to the voice mailbox.

On the **Calls** menu, select the **Call forward** menu and **[Select]**.

Choose the type of forwarding you want from the options available.

View last calls


This menu allows you to access the list of last numbers used.


On the **Calls** menu, select the **View last calls** menu and **[Select]**.

The following information is displayed on the screen for every phone call: characteristics (shown with an icon), time (or date), duration.

Select a call from the list and validate.

Choose one of the options given: Call, Store in your phonebook, Send a message, Delete, Delete all.

You can also make the call by pressing the  key.

Fast access to the list of calls from the initial screen: Press the  key.

Counters

This menu allows you to consult the duration of the last calls. It can also be used to check the volume of data exchanged via GPRS.

On the **Calls** menu, select the **Counters** menu and **[Select]**.

Display number

On the **Calls** menu, select the **Display number** menu and **[Select]**.

Choose one of the options given: Anonymous mode, My number, Callers' number.

Call waiting (Operator-dependent service)

During a call, you may be informed that a caller is trying to reach you: you hear a special tone. The caller's name or number is displayed on the screen.

On the **Calls** menu, select the **Call waiting** menu and **[Select]**.

You can choose one of the following options: **Activate**, **Deactivate**. If you select **Consult status** you can see the status of the call waiting service in order to check if it is active or not.

Automatic redial

On the **Calls** menu, select **Automatic redial** and **[Select]**.

You can set the redial function to inactive, on request or systematic.

If you choose **On request**, your phone will offer to redial your caller automatically if the number is busy.

Blacklist

The blacklist is used to limit failures on automatic calls (calls generated by the automatic redial function or by applications: data, fax for example).

On the **Calls** menu, select the **Blacklist** menu and **[Select]**.

When several **automatic** calls failed with a number (number busy or unknown), this number is put in the blacklist. Automatic calls for this number will not be resumed until you delete it from the blacklist.

Note: this function does not apply to the calls performed manually.

Voicemail

This function is used to record your answer phone number. This number will be used during a call to the voice mailbox using the programmable keys.

On the **Calls** menu, select the **Vociemail** menu and **[Select]**.

Enter your answer phone number and validate.


ALS

The ALS (Alternate Line Service) function allows you, depending on your subscription, to have two phone lines. The number of the line selected (1 or 2) for the calls appears on the initial screen.

7.14.6 Security

Keypad locking

On the **Security** menu, choose the **Keypad** locking menu and **[Select]**.

Select **Activate** or **Deactivate** and validate. Now select a time for the automatic keypad lock to be activated. After expiration of the defined period the symbol for the keypad lock will be displayed on the initial screen. You can also manually access this function from the initial screen by pressing the keys * and the navigation stick.

PIN number

On the **Security** menu, choose the **Pin number** menu and **[Select]**.

To modify the PIN, select **Modiy PIN** and **[Select]**.

Enter the old PIN number and validate. Enter the new PIN number twice and validate.

To activate or deactivate the PIN, select the Control PIN menu and **[Select]**. Enter your PIN number and validate. Select **Activate** or **Deactivate** and validate.

PIN2 number

You have a second PIN number to allow you to access certain functions*. Proceed as above in order to activate, deactivate or modify PIN 2 number of your phone.

* These functions may or may not be available depending on your SIM-card.

Phone code

The **phone code** is requested and checked whenever the phone is switched on, even if a different SIM card is used.

To activate or deactivate the phone code, select the Phone code menu and validate. Enter 0000 (the factory code, by default) and validate. Select **Activate** or **Deactivate** and validate. To **modify** the phone code, select Modify and validate. Enter the old phone code and validate. Enter the new phone code and validate. Enter the phone code again to confirm it and validate.

Confidentiality

The Confidentiality function is used to delete last call numbers, messages or organiser events when a new SIM card is inserted into the phone.

On the **Security** menu, choose the **Confidentiality** menu and [**Select**].

Select Activate or Deactivate and validate.

Operator (Operator-dependent service)

This menu allows you to modify the call barring.

On the **Security** menu, choose the **Operator** menu and [**Select**].

Call barring can be applied to ALL calls (incoming and outgoing), to all incoming calls when you are away from your home country (if roaming available).

Call barring (Operator-dependent service)

This menu allows you to block the sending or reception of certain calls. Before you can use this service, a password will be provided by your operator when you take out your subscription.

On the **Security** menu, choose the **Call barring** menu and [**Select**].

Select Activate or Deactivate and validate.

Fixed dialling (Operator-dependent service)

This menu allows you to restrict the outgoing calls.

On the **Security** menu, choose the **Fixed dialling** menu and [**Select**].

Enter PIN2 number and validate.

Select **Activate** or **Deactivate** and validate. Proceed as for any other phonebook. When activating this function, only the numbers stored in the phonebook can be called.

This phonebook is linked to the SIM card, and its size depends on the card's capacity.

Cost (Operator-dependent service)

This menu allows you to control the cost of your calls.

On the **Security** menu select the **Cost** menu and validate. The **Cost** menu (*) lets you check the cost of the last call you made and of all the calls you made since you last deleted them. The **Delete costs** menu (*) lets you delete the cost of your last call and reset the cost counter. Enter your PIN2 code first.

Note: Depending on how the networks and associated subscription cards are configured, some functions may be unavailable (these are marked out with *).

7.14.7 Networks

On the **Settings** menu, choose the **Networks** menu and **[Select]**.

Choose **Selection** to activate (automatically or manually) one of the networks accessible in the area where you are located.

Choose **Preferred** to view all the pre-registered networks.

Choose **Network type** to select your network.

Choose **GPRS** to select the way you want to be attached on the GPRS network always, or only when needed (when launching a data connection).

7.14.8 Shortcuts

This menu allows you to allocate functions to the programmable keys:  .

On the **Settings** menu, choose the **Shortcuts** menu and **[Select]**.

Select the key that you wish to modify and validate.

Choose the function that you want to allocate to this key and validate.

7.14.9 Date / Time

Set Date/Time

On the **Date / Time** menu, **select** Set Date/Time and **[Select]**.

Date: set the date by entering it directly in digital form or by using the navigation stick. Once the date is correct, validate it.

Time: same procedure as for setting the date.

Automatic update (Operator-dependent service)

This menu allows you to choose manual or automatic updating of date and time (after switch off of your phone or when going abroad for instance) (service depending on the operator). On the **Date / Time** menu, select **Automatic upd.** and **[Select]**. Select Automatic, Manual or On demand and press **[Select]**.

Display

On the **Date / Time** menu, select **Display** and **[Select]**.

In the list that appears, select the desired display type from the following:

- Analog,
- Digital,
- None.

Use the navigation stick for selecting the desired option and validate.

Time zone

On the **Date / Time** menu, select **Time zone** and **[Select]**.

Choose the time of the country desired by calculating the time from the GMT time.

Daylight savings

On the **Date / Time** menu, select **Daylight savings** and **[Select]**. Select 1h, 2h Summer time or Winter time depending on the season, and validate.

7.15 Connectivity

You can exchange with other devices (PC, mobile phones, personal assistants, printers, etc.) various data: pictures, sounds, photos, To Do tasks, organiser events, contacts, etc.

Data exchange can be done via:

- USB data cable,
- infrared connection,
- Bluetooth connection.

If you want to exchange objects between the phone memory and a PC, you must install the Wellphone software provided on CD: select **Multimedia** from the PC to open the phone files explorer.

Note: If a call comes in during an exchange of data with your PC, the link will be interrupted and will have to be manually re- started.

Bluetooth

This menu allows you to set your phone Bluetooth connection in order to communicate with other devices equipped with Bluetooth: for example, an audio connection with a car kit or a data connection with a PC.

My Bluetooth name: allows you to assign a name to your phone for the Bluetooth connection. This name is displayed on the devices connected.

Paired devices: allows you to search for devices which may connect with Bluetooth link with your phone (for instance: headset).

Mode: allows you to activate the phone Bluetooth connection.

- Off: Establishing a Bluetooth connection is not possible.
- On and hidden: your phone is not detected by the other devices but the phone detects the other devices.
- On and visible: your phone can be detected by another device.

8. Battery


8.1 Changing the battery

The battery module Ex-AMH 05 of the Ex-Handy 05 may only be changed outside the Ex-area. Only those battery modules which are approved by the manufacturer may be used. Other battery modules may not be taken into the Ex-area.

Removing the battery unit

Proceed as follows to remove the rear cover (when replacing the battery):

- Remove the 6 screws using the screwdriver provided. Then raise the battery module from the phone.
- When changing the battery module the battery compartment and the circulating seal are to be examined for any contamination and cleaned, if necessary, with a brush or by using blasts of compressed air.
- Insert the new battery module into the phone.
- Secure the battery module in place with the 6 screws, using the prescribed torque. (0,15 Nm)
- Dispose of the battery module in accordance with local regulations.

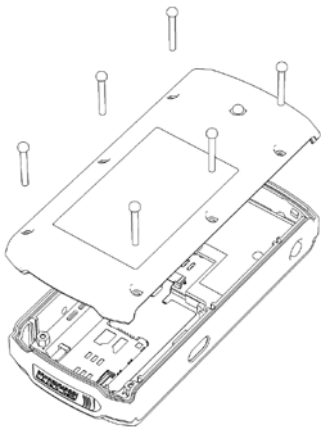

8.2 Charging the battery

Your phone is supplied with power via a rechargeable battery. Before a new battery can be used for the first time it must have been charged for at least 4 hours. The full battery performance is only obtained after a few operating cycles.


If the battery charge level decreases below the operating value, the phone will indicate this (the empty battery symbol flashes). When this appears charge the battery for at least 15 minutes before making any other calls, in order to prevent your discussion from being interrupted.

Proceed as follows to charge the battery:

Connect the charger to a wall outlet.

Carefully open the side cover.

Insert the charger plug into the socket located on the side of the phone.

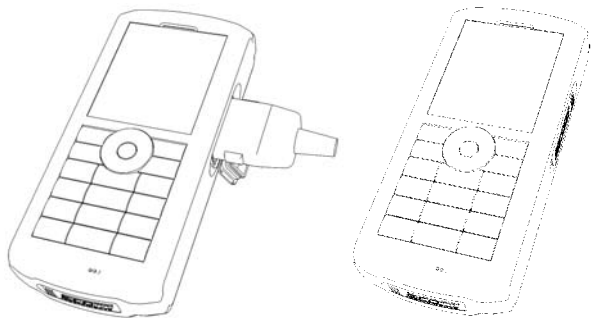

The phone's battery will now be charged. The scrolling battery symbol indicates that the battery is being charged. When the battery is fully charged the charging process stops automatically. Remove the charger plug from the charging socket. Close the cover. Batteries can become warm during the charging process. This is a normal occurrence.

WARNING

- Do not short-circuit the battery.
- The casing of the battery should not be opened under any circumstances.
- Only use chargers and batteries from ecom instruments GmbH.
The use of other chargers or batteries is not permitted.
- If you do not intend using the phone for a prolonged period, you should remove the battery.
- Do not connect your charger to the phone if the battery is not inserted.

8.3 Safety information

Damaged batteries and chargers should be removed from use and sent to ecom instruments GmbH for inspection.

Attention:

- Extreme temperatures can have an adverse effect on charging the battery module Ex-AMH 05.
- Do not dispose of the battery module in a fire!
- Do not short-circuit the battery module!

9. Repair

The national regulations and guidelines for repairs vary from country to country. We therefore recommend that repairs are conducted by ecom instruments GmbH to ensure a safety inspection is implemented.

10. Cleaning, maintenance and storage

- Only use a suitable cloth or sponge to clean the phone.
Do not use any solvents or abrasive cleaning agents when cleaning.
- It is recommended that you have the functionality and accuracy of the phone inspected by the manufacturer every two years.
- The battery should be removed from the phone during prolonged periods of storage.
- Do not exceed the permissible storage temperature range of -20 ... +50°C!

11. Disposal

Old electrical devices as well as „historical“ old electrical devices from ecom instruments GmbH are supplied for disposal at our expense and disposed of free of charge in accordance with European Directive 2002/96/EC and the German electrical law of 16/03/2005. The costs associated with returning devices to ecom instruments GmbH are to be borne by the sender.

12. Warranty and liability

In accordance with our general terms and conditions ecom instruments GmbH provides a warranty for this product for a period of two years regarding its function and material under the specified and permitted operating and maintenance conditions. This excludes all parts that are subject to wear and tear (e.g. batteries). We provide a 6-month manufacturer's warranty especially for the supplied Ex-battery.

This warranty does not extend to products that are used improperly, have been modified, neglected, damaged in accidents or exposed to abnormal operating conditions and inappropriate handling.

Any claims under the warranty can be invoked by returning the defective equipment to the manufacturer. We reserve the right to repair, adjust or exchange the device.

The aforementioned warranty conditions are the sole and only right of the purchaser to compensation, are exclusively valid and replace all other contract or legal warranty obligations. ecom instruments GmbH assumes no liability for special, direct, indirect, accompanying or consequential damage as well as losses including the loss of data, independent of whether it was caused by violation of the warranty obligation, lawful or unlawful action, action in good faith or any other action.

If the limitation of a legal warranty as well as the exclusion or limitation of accompanying or consequential damage is not permissible in certain countries, it may be that the aforementioned limitations and exclusions are not valid for every purchaser. Should any such clause of these warranty conditions be declared ineffective or unenforceable by a competent court, then the effectiveness or enforceability of any of the other conditions of these warranty conditions shall remain unaffected by such a judgment.

13. EC Declaration of Conformity

Further details regarding the declaration of conformity can be found at the following address:
<http://www.ecom-ex.com> in the download area.

14. EC-Type Examination Certificate

Prüf- und Zertifizierungsstelle (Test and Certification Body) ZELM Ex

(1) EC-Type Examination Certificate

- (2) Devices and shielding systems intended for regulated use in explosive areas -
Directive 94/9/EC
- (3) EC-Type Examination Certificate number
ZELM 07 ATEX 0337
- (4) Device: **Explosion-proof mobile phone Model Ex-Handy 05**
- (5) Manufacturer: **ecom instruments GmbH**
- (6) Address: **D-979S9 Assamstadt**
- (7) The construction of this device and the various permissible details are specified in the appendix to this Type Examination Certificate.
- (8) As notified body No. 0820, according to article 9 of the Council Directive of the European Communities dated 23 March 1994 (94/9/EC), Prüf- und Zertifizierungsstelle (Test and Certification Body) ZELM Ex certifies the fulfilment of the fundamental health and safety requirements for the conception and construction of devices and protective systems for intended use within explosive areas in accordance with appendix II of the directive.
The results of the examination are specified in the confidential inspection report No. ZELM Ex 1320612553.
- (9) The fundamental health and safety requirements are fulfilled through compliance with
EN 60079-0:2006 EN 60079-11 :2007
- (10) If the character "X" appends the certificate number, it refers to special conditions in the appendix to this certificate for the safe application of the device.
- (11) This EC-Type Examination Certificate only refers to the construction, examination and testing of the specified device or protective system in agreement with directive 94/9/EC. Further requirements of this directive may apply for the manufacturing process and the supply of this device or protective system. These are not covered by the present certificate.
- (12) The designation of the device must contain the following details:

 **II 2 G Ex Ib IIC T4**

Certification body **ZELM Ex**

Braunschweig, 10.08.2007

Dipl.-Ing. Harald Zelm

Page 2/2

EC-type examination certificates without a signature and stamp are not valid.
This EC-type examination certificate may only be circulated without alteration.
Extracts or alterations are subject to approval by the Prüf- und Zertifizierungsstelle (Test and Certification Body) ZELM Ex

Prüf- und Zertifizierungsstelle (Test and Certification Body) ZELM Ex • Siekgraben 56 • D-38124 Braunschweig

Prüf- und Zertifizierungsstelle (Test and Certification Body) ZELM Ex

Appendix

(13)

(14) EC-Type Examination Certificate ZELM 07 ATEX 0337

(15) Description of the device

The explosion-proof mobile phone type Ex-Handy 05 serves as a wireless connection point in the explosive area.

Only those accessories that are approved by the manufacturer may be used under the specified conditions.

The device must be charged outside the Ex-area using the corresponding battery charger.

Electrical data

Supply current circuit	from an integrated rechargeable battery Model Ex-AMH 05 The internal electrical circuits are intrinsically safe.
Transmitting power	up to 2 W
Interface electric circuit	in ignition protection class 'intrinsic safety EEx ib NC' Only for connection to approved accessories
permissible ambient temperature range	-10°C to +50°C

Notes:

The instruction manual is to be observed, particularly with regard to the approved corresponding accessories. Only these accessories may be used.

The device may only be charged outside the explosive area using the corresponding charger or the appropriate charging accessories.

Only the Ex-battery module Ex-AMH 05 may be used!

All connection sockets must be kept sealed in the Ex-area.

(16) Inspection report No. ZELM Ex 1320612553

(17) Special conditions not applicable

(18) Fundamental health and safety requirements
fulfilled by standards

Certification body ZELM Ex

Braunschweig, 10.08.2007

Dipl.-Ing. Harald Zelm

Page 2/2

EC-type examination certificates without a signature and stamp are not valid.
This EC-type examination certificate may only be circulated without alteration.
Extracts or alterations are subject to approval by the Prüf- und Zertifizierungsstelle (Test and Certification Body) ZELM Ex

Prüf- und Zertifizierungsstelle (Test and Certification Body) ZELM Ex • Siekgraben 56 • D-38124 Braunschweig

Copyright© 2007 ecom instruments GmbH.

Der Inhalt dieses Dokuments darf ohne vorherige schriftliche Genehmigung durch die ecom instruments GmbH in keiner Form, weder ganz noch teilweise vervielfältigt, weitergegeben, verbreitet oder gespeichert werden.

Der Inhalt dieses Dokuments wird so präsentiert, wie er aktuell vorliegt. Die ecom instruments GmbH übernimmt weder ausdrücklich noch stillschweigend irgendeine Gewährleistung für die Richtigkeit oder Vollständigkeit des Inhalts dieses Dokuments, einschließlich, aber nicht beschränkt auf die stillschweigende Garantie der Marktauglichkeit und der Eignung für einen bestimmten Zweck, es sei denn, anwendbare Gesetze oder Rechtsprechungen schreiben zwingend eine Haftung vor. Die ecom instruments GmbH behält sich das Recht vor, jederzeit ohne vorherige Ankündigung Änderungen an diesem Dokument vorzunehmen oder das Dokument zurückzuziehen.

Copyright© 2007 ecom instruments GmbH.

The contents of this document, either in part or in their entirety, may not be reproduced, forwarded, distributed or saved in any way without ecom instruments GmbH prior written consent.

The contents of this document are presented as they currently exist. ecom instruments GmbH does not provide any express or tacit guarantee for the correctness or completeness of the contents of this document, including, but not restricted to, the tacit guarantee of market suitability or fitness for a specific purpose unless applicable laws or court decisions make liability mandatory. ecom instruments GmbH reserves the right to make changes to this document or to withdraw it any time without prior notice.

PA000277 / 10.000 / 10 / 07

WEEE-Reg.-Nr. DE 934 99306

0170AL02A00 10/07 Änderungen vorbehalten! Subject to change without notice!

ecom instruments GmbH · Industriestr. 2 · 97959 Assamstadt · Germany

Tel.: + 49 (0) 62 94 / 42 24 0 · Fax: + 49 (0) 62 94 / 42 24 100

E-Mail: sales@ecom-ex.com · www.ecom-ex.com

Download from www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>