



SERVICE MANUAL FOR THE

moisture+™

MODELS: MP-GS/GD-10-S



Users are cautioned that maintenance and repairs must be performed by a Garland authorized service agent using genuine Garland replacement parts. Garland will have no obligation with respect to any product that has been improperly installed, adjusted, operated or not maintained in accordance with national and local codes or installation instructions provided with the product, or any product that has its serial number defaced, obliterated or removed, or which has been modified or repaired using unauthorized parts or by unauthorized service agents.

For a list of authorized service agents, please refer to the Garland web site at <http://www.garland-group.com>.

The information contained herein, (including design and parts specifications), may be superseded and is subject to change without notice.

GARLAND COMMERCIAL INDUSTRIES
185 East South Street
Freeland, Pennsylvania 18224
Phone: (570) 636-1000
Fax: (570) 636-3903

GARLAND COMMERCIAL RANGES, LTD.
1177 Kamato Road, Mississauga, Ontario L4W 1X4
CANADA
Phone: 905-624-0260
Fax: 905-624-5669

Enodis UK LTD.
Swallowfield Way, Hayes, Middlesex UB3 1DQ ENGLAND
Telephone: 081-561-0433
Fax: 081-848-0041

Part # MPSM07 (03/24/08)

© 2007 Garland Commercial Industries, Inc.

TABLE OF CONTENTS

Section One – Operation & Installation Manual	5	Section Two – Service	39
Dimensions And Specifications.	7	Component Identification	40
Preparing The Oven For Installation	8	Moisture Control	40
Installation	11	Cavity Temperature Controls.	41
Gas Connections	11	Diagnostic Procedures	43
Electrical Connections	12	Diagnostics Mode	43
Water Connections	13	Keypad Test	43
Ventilation And Air Supply	14	Door Switch Test	43
Installation Of A Direct Vent.	14	Fan Speed Test	44
Gas Model Testing & Lighting Instructions	15	Heat Test.	44
Explanation Of Controls (Standard Models)	16	Moisture Test.	44
Operating Instructions, (Standard Models)	17	Temperature Calibration.	44
Explanation Of Controls, (Deluxe Models).	18	Control Safety Features.	44
Operating Instructions, (Deluxe Models)	20	Testing & Troubleshooting	46
Cooking With Moisture	29	Direct Spark Ignition Detail	54
Moisture + Cooking Guide	30	Wiring Diagrams	55
Performance Recommendations	32	Service Procedures (Removal/replacement)	57
Temperature Calibration	33	Section Three – Parts List	61
Problems / Solutions.	34	Deluxe Control Panel Moisture Plus (Gas)	62
Cleaning	35	Standard Control Panel Moisture Plus (Gas)	64
Maintenance	36	Burners & Gas Components	66
Motor Care	36	Interior Components Moisture Plus (Gas)	68
Water System	36	Door Components - Gas Moisture +	70
Replacement Parts	37	Door Components - Gas Moisture +	72
		Exterior Components - Gas Moisture Plus.	74
		Wire Diagrams & Harnesses.	76



Section One – Operation & Installation Manual



moisture+TM



Congratulations! You have just purchased the latest in cooking technology, the new moisture+™ from Garland.


Garland is an established leader in innovative oven technology, and has manufactured this multifunction oven with the operator in mind. The moisture+™ provides function not previously available in a convection oven. Your moisture+™ will operate as three pieces of equipment: a convection oven, a humidified baking oven, and a humidified cook & hold oven. Additionally, the optional wet-clean water spray attachment allows you to easily spray down the oven interior during cleaning. Garland, long known for offering the “best baking” convection ovens available, adds the moisture+ to its model line to provide you, the user with, a workhorse oven that will provide years of useful service.

Like any other fine, precision built appliance, your moisture+™ oven should be given regular care and maintenance. Periodic inspection by your dealer or a qualified service agency is recommended. When corresponding with the factory or your local authorized factory service center regarding service problems or replacement parts, be sure to refer to the particular oven by the correct model number, (including the prefix/suffix letters and numbers), and the warranty serial number. The rating plate affixed to the oven contains this information.



moisture+™

DIMENSIONS AND SPECIFICATIONS

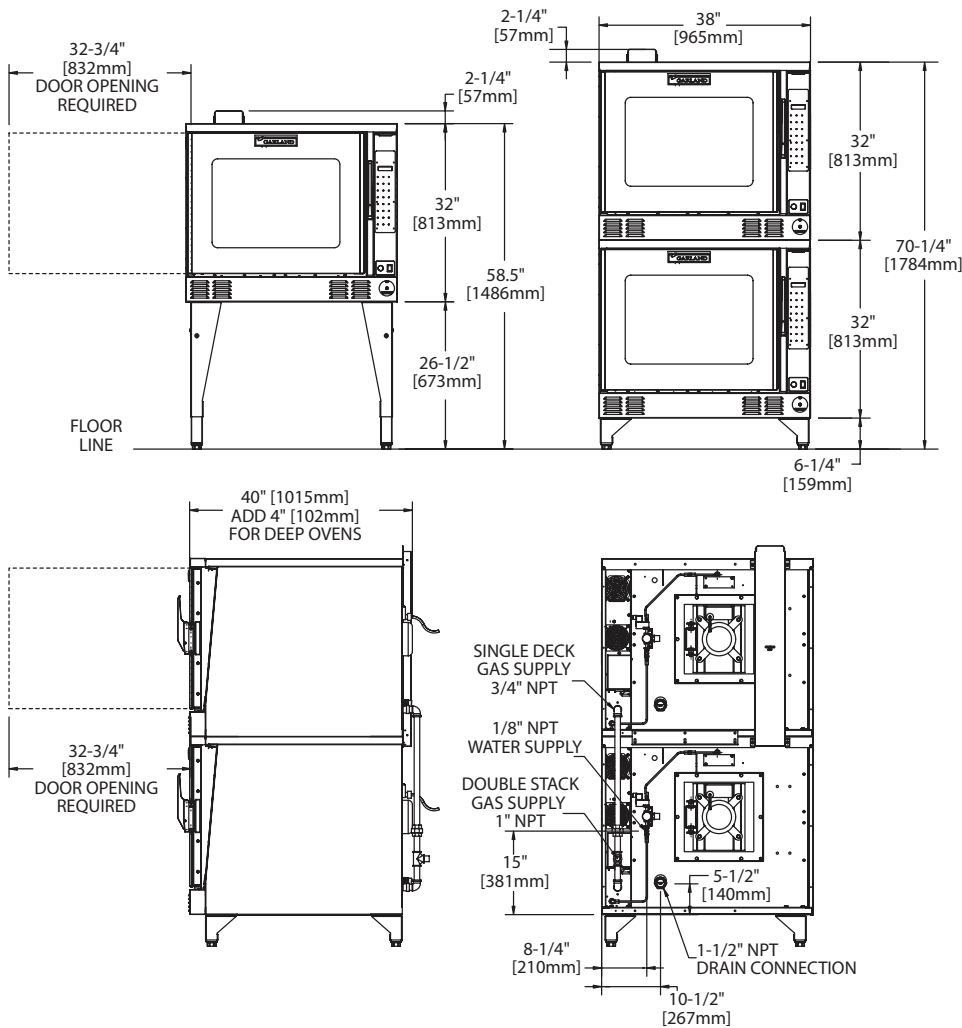

Notes:

1. Standard electrical specifications include motor requirements
2. All ovens have a 3/4 HP, two speed motor; 1140 and 1725 RPM, 60 Hz
3. Garland recommends that a separate 15 Amp circuit be provided for each 120V oven
4. A 6 foot line cord is provided for each 120V oven with a NEMA 5-15P plug.
5. Double stack installations require an individual power supply connection to each oven.

Gas input ratings are for installations up to 2000 feet (610 m) above sea level. Specify altitudes above 2000 feet.

Commercial cooking equipment requires an adequate ventilation system. For additional information refer to the National Fire Protection Associations standard NFPA96, "Vapors Removal from Cooking Equipment" (Note: For North America only)

Gas Models	Input Ratings		
	Gas Inlet	BTU Hour	kW
Natural	3/4" NPT	80,000	23.5
Propane	3/4" NPT	60,000	17.6

Electric Models	Input Ratings				Nominal Amperes						
	kW	Total KW/Line			120V 1Ph	208V 1 Ph	240 V 1 Ph	460V 1 ph	208V 3 Ph	240V 3 Ph	460V 3 Ph
		208/240/460									
		X-Y	Y-Z	X-Z	X/Y/Z	X/Y/Z	X/Y/Z				
11	3.33	3.33	4.33	N/A	53	46	24	31.8/27.7/31.8	27.6/24.0/27.6	10.5/9.5/10.5	

Model	Description	Interior Dimensions: in [mm]			Exterior Dimensions: in [mm]			Weight (lbs/kg)	Size (Cu ft)
		W	H	D	W	H	D		
MP-ES/GS-10-S	Std Depth, Sgl Deck	29 [736]	24 [610]	24 [610]	38 [965]	60-3/4 [1543]	40 [1016]	510/232	42
MP-ES/GS-20-S	Std Depth, Dbl Deck					72-1/2 [1842]			
MP-ED/GD-10-S	Deep Depth, Sgl Deck			28 [711]		60-3/4 [1543]	44 [1118]	510/232	42
MP-ED/GD-20-S	Deep Depth, Dbl Deck					72-1/2 [1842]			

PREPARING THE OVEN FOR INSTALLATION

Legs and Casters

NOTE: If you will be installing an open base kit, please skip to the next page and proceed with the steps listed under "Open Base Assembly."

1. (See Figure 1.). At the bottom end of each leg, install the bullet foot insert or caster insert. The fit of the insert to the leg is intended to be snug, tap them lightly into place with a mallet or rubber hammer.

Install two #5 x 1/4" self-drilling, thread forming screws into each caster insert.

2. Screw a caster into the insert on each of the four legs. The caster must be inserted at least three full threads to properly support the oven. A 1" (25mm) open-end wrench may be needed to properly install the casters.

OR

Using your fingers, screw the ends of the bullet feet into the leg clockwise until they are at their shortest length.

3. Carefully tip and lower the oven onto its left side so you can easily reach the bolt mounting locations in the base.

4. The four holes in the top of each leg or in the top plate of double stack casters will match the bolt locations at each corner of the oven base.

You will need four 3/8-16 x 1" hex head bolts and four 3/8" flat washers to mount each leg. Align the leg to one of the matching bolt holes on the base and insert a bolt with washer.

Install the remaining three bolts and finger-tighten all four before using an 11/16" wrench to fully tighten them all. Be sure to tighten all four bolts for each leg or caster. When installing casters, make sure the two casters with brakes are installed at the front of the oven.

5. Carefully return the oven to an upright position. Ensure the two legs/casters that touch the floor first when you raise the oven are blocked and chocked so they do not slip away.
6. **It is very important to use the adjustable bullet foot inserts in leveling the unit.**
7. If you have installed casters, be sure to install the restraint bracket on the lower left corner of the rear of the oven using two #10 x 3/4" sheet metal screws.

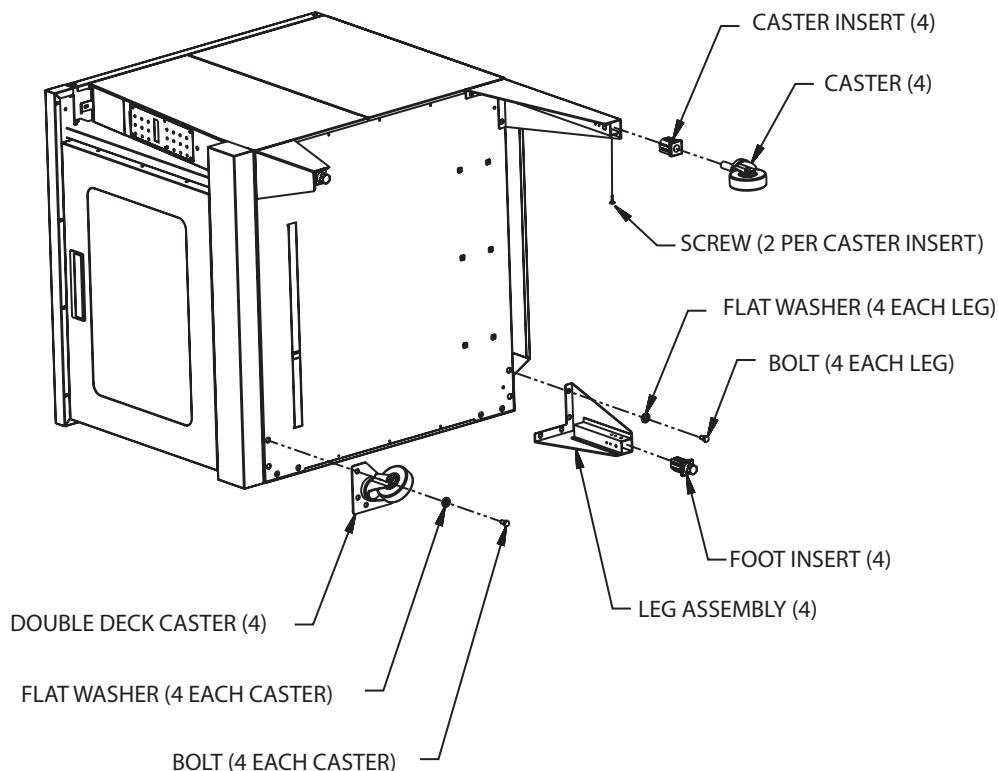


Figure 1.

PREPARING THE OVEN FOR INSTALLATION

Open Base Assembly

Use the following sequence of steps to assemble and install the open base accessory.

1. (See Figure 2.) Align the rack guide upper support to the corresponding holes in the oven base. Fasten using three #10 x 3/4" machine screws on each side of the oven.
2. At the lower end of each leg install an "L" shaped support clip using a #10 x 3/4" sheet metal screw. Do this before fastening the leg to the base.
3. Install legs to the bolt holes at the front and rear of the base on the oven's left side, (side lying on the floor). If installing casters, be sure to install a locking caster on the front leg. Refer to the section, "Legs and Casters," on the previous page for installation details.
4. Fasten the open base panel in place on the brackets of the two legs already installed, using one #10 x 3/4" sheet metal screw in each corner.
5. While supporting the open base panel, install the right-side legs as in step 2. Ensure the caster with a brake is at the front of the oven. Fasten the remaining two corners of the open base panel to the other two legs just installed.
6. Carefully return the oven to an upright position. Ensure the two legs/casters that touch the floor first when you raise the oven are blocked and chocked so they do not slip away.
7. Install the rack guides in one of the two available positions. The inner position sets the guides at a width to accommodate oven pans. The outer position sets the guides at a width to accommodate wire oven racks. To attach, insert the longer straight end at the top of the rack guide all the way into the mounting hole, then align the bottom holes and lower the rack guide into position.
8. **It is very important to use the adjustable bullet foot inserts in leveling the unit.**
9. If you have installed casters, be sure to install the restraint bracket on the lower left corner of the rear of the oven using two #10 x 3/4" sheet metal screws.

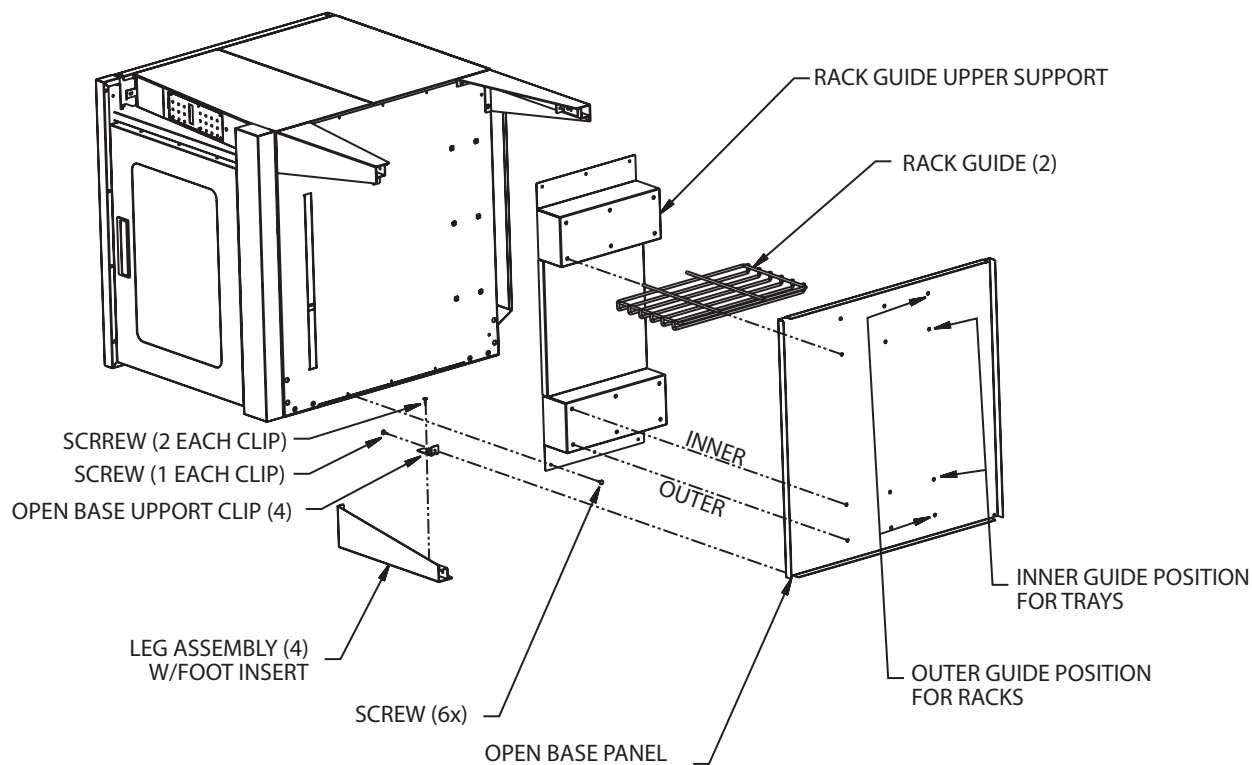



Figure 2.

PREPARING THE OVEN FOR INSTALLATION

Stacking Two Ovens

1. Follow the instructions in the section entitled, "Legs and Casters," on page 5. Then resume at step 2 on this page to complete the stacking process.
2. Move the lower oven as close to the final installation point as possible, leaving enough space around the oven to allow access for the remaining installation steps. If casters have been installed, apply the brakes on the two front wheels.
3. Carefully raise the upper oven and place it on top of the lower oven, aligning the four lower corners of the upper oven to the four upper corners of the lower oven.
4. At the rear of the stacked ovens, install the stacking bracket using six 1/4-20 x 1" hex head bolts with lock washers and nuts. Firmly tighten all six nuts/bolts to secure the ovens together.
5. Remove the outer flue vent from the right top corner of the rear of each oven, saving the screws.
6. If they are not already fastened together, assemble the two parts of the interconnecting flue channel included in the stacking kit, using six #10 x 3/4" sheet metal screws.
7. Fit the channel assembly over the flue vent area of each oven and fasten using the screws removed in step 5.
8. If you have installed casters, be sure to install the restraint bracket on the lower left corner of the rear of the upper oven using two #10 x 3/4" sheet metal screws.
9. If your installation requires one common gas inlet for both ovens, use the piping included with your stacking kit to assemble the interconnecting gas pipe. Refer to Figure 3.

NOTE: It is recommended, when stacking a Moisture + Oven with a Master Convention Oven, that the Moisture + be located on the bottom.

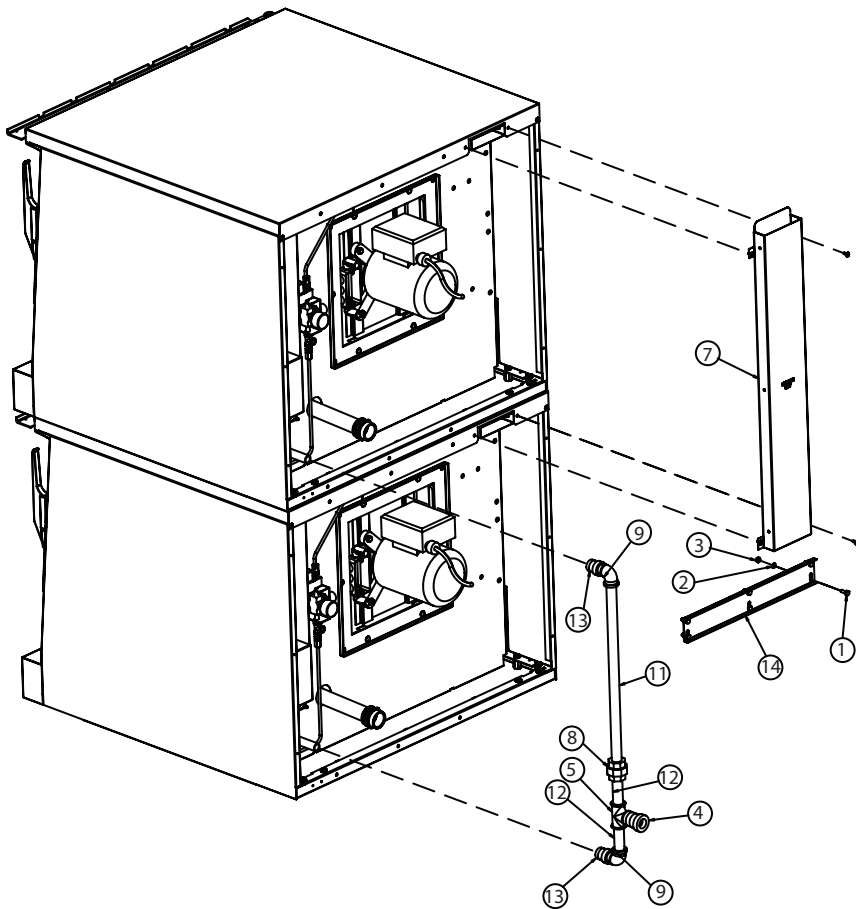

Item Reference Key For Figure 3	
Item No.	Item Description
1	MSCR-HH STL 1/4-20x3/4
2	LKSHR-SPL 1/4x1/2x1/6
3	Nut - Hex 1/4-20 STL ZP
4	Bell Reducer 1" x 3/4"
5	3/4 Tee NPT
7	Flue Assembly - Double Stack
8	Pipe Union 3/4 NPT
10	Close Nipple 3/4 x 1
11	Pipe 3/4 x 20-1/2"
12	3/4 x 3-1/2 Nipple
13	Bell Reducer
14	Stacking Bracket Rear

Figure 3.

INSTALLATION

It is the responsibility of the purchaser to ensure the oven is installed in a manner to meet all local codes. In the absence of local codes, applicable national codes are referenced in this booklet. In the case of discrepancy between the information in this booklet and local codes, it is recommended you consult your local inspector(s). This appliance meets or exceeds all applicable regulations and standards in effect on its date of manufacture.

Location

The importance of the proper installation of Commercial Gas Cooking Equipment cannot be overstressed. Proper performance of the equipment is dependent, in great part, on the compliance of the installation with the manufacturer's specifications. Installation must conform to local codes or, in the absence of local codes, with the National Fuel Code, ANSI Z223.1, Natural Gas Installation Code, CAN/CGA-B149.1, or the Propane Installation Code, CAN/CGA-B149.2, as applicable.

GAS CONNECTIONS

The type of gas for which the oven is equipped is stamped on the data rating plate. It is located inside the lower front trim cover. Connect an oven stamped "NAT" to natural gas only. Connect an oven stamped "PRO" to propane gas only.

If the oven is being installed into a new location, have gas authorities check the meter size and piping to assure the supply line has a sufficient amount of gas pressure to operate the oven.

If the oven is a replacement or additional appliance to an existing installation have gas authorities check the pressure to ensure the existing meter and pressure will supply the oven with no more than a 1/2" water column pressure drop.

Note: When checking the gas pressure make sure all other appliances on the same gas line are turned on.

A pressure regulator is supplied with Garland convection ovens. The regulator pressure is preset to deliver the gas at the pressure shown on the rating plate. Do not install an additional regulator where the unit connects to the gas supply unless the gas pressure exceeds the maximum recommended pressure.

The oven and its individual shut-off valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 PSI (3.45 kPa).

The oven must be isolated from the gas supply piping system by closing its individual manual shut-off valve during any pressure testing of the supply system at test pressures equal to or less than 1/2 PSI (3.45 kPa).

Wall Clearance

This oven, single or stacked, must be installed with adequate clearance to combustible and non-combustible walls.

Sides: 1 inch [25 mm]
Back: 3 inches [76 mm] for gas ovens, and
6 inches [152 mm] for electric ovens.

Garland recommends that a one inch clearance be maintained between this oven and any other cooking appliance.

Garland recommends that this oven not be installed with a broiler or open burner appliance immediately adjacent to the right side.

Each appliance shall be located with respect to building construction and other equipment so as to permit access to the appliance. Such access and clearance may be necessary for servicing and cleaning.

Prior to connecting to the building gas supply the lines should be purged of all metal filings, pipe thread compound or other debris.

The gas connection piping (3/4" for single ovens, 1" for stacked ovens), must be considered when planning the supply line. Undersized gas supply lines may restrict the gas flow and affect performance. If other gas appliances are supplied by the same supply line, it must be sized to carry the combined volume required for all the appliances without causing a more than 1/2" pressure drop at the manifold of each appliance on line at full rate.

Recommended supply pressures are 7" \pm 5% WC for natural gas (NAT) and 11" \pm 5% WC for propane (PRO). The inlet pressure for the supply line must not exceed 13.8" WC natural and 15" WC for propane.

Two ovens stacked may be supplied by a single gas line. The minimum recommended size of a single supply line for two stacked ovens is 1 inch.

Assemble the gas pipes and fittings provided in the stacking kit as shown in the Figure 3 on page 7. Use a pipe thread compound that is intended for use on propane gas piping.

Be sure to check for leaks before finalizing the installation. Use appropriate solutions or detection devices.

Installations in which a flexible gas connection hose is used, require the supplied strain relief to be installed at the lower left rear corner of the base. Install the strain relief in accordance with applicable codes. The strain relief must limit the movement of the oven to prevent unnecessary stress on the flexible connector.

ELECTRICAL CONNECTIONS

A separate electrical connection must be supplied for each oven. Connection to the electrical service must be grounded in accordance with local codes, or in the absence of local codes with the National Electrical Code, ANSI/NFPA 70, or the Canadian Electrical Code, CSA C22.2, as applicable.

A strain relief for the power supply cord is required. The installer must supply a cord bushing that meets local and national codes.

For 120VAC usage a cord and NEMA 5-15P plug is provided. Garland recommends a separate 15 Amp service for each oven. Ovens for 120V service are supplied with a three pronged plug for your protection against shock hazard and should be plugged directly into a properly grounded three-prong receptacle.


DO NOT CUT OR REMOVE THE GROUNDING PRONG FROM THE PLUG.

A wiring diagram is affixed to the rear of the oven and included in this booklet.

**CAUTION:
DISCONNECT ALL OVENS FROM ELECTRICAL SUPPLY BEFORE SERVICING.**

**POWER FAILURE:
IN THE EVENT OF A POWER FAILURE, NO ATTEMPT SHOULD BE MADE TO OPERATE THIS OVEN.**

Figure 4.

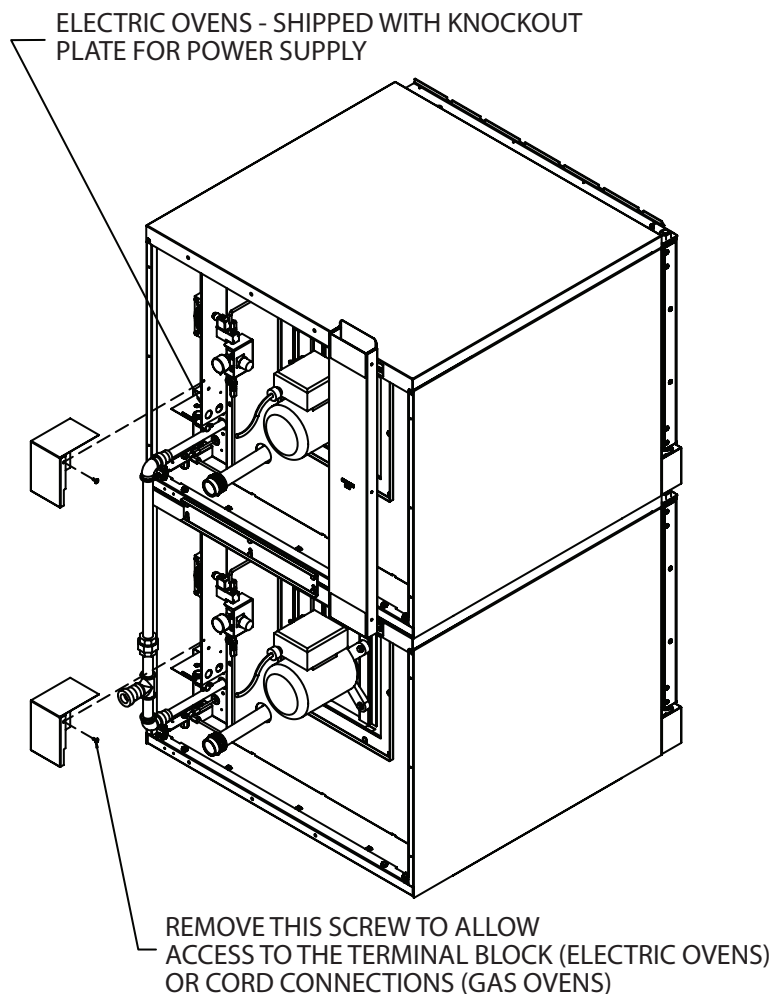

WATER CONNECTIONS

It is the responsibility of the purchaser to install and maintain the water supply to the moisture+ oven. Failure to provide satisfactory water quality to operate the oven properly can cause damage to integral components and void your warranty.

This oven must be installed to comply with the applicable federal, state, or local plumbing codes.

Water supply connection to the moisture+ is made via a 1/8" NPT fitting at the rear of the oven. The ability to move the oven for service and cleaning may be a consideration when choosing the type of connection and supply line to be attached at this fitting.

The moisture+ water delivery system includes a water pressure regulator that has been pre-set to operate at 20 psi. The water supply must maintain at least 20 psi and a flow rate of three gallons per minute for proper operation of the oven's moisture injection system.

Water Quality Requirements

Garland recommends that the supply water be filtered before it enters the oven's water delivery system. This will extend the life of the oven and its water delivery system components by minimizing particles in typical tap water sources that cause scaling and build-up of mineral deposits.

The recommended minimum water quality standards, whether treated or pre-treated, and based on 10 hours of use per day, and daily cleaning./descaleing are as follows:

Total dissolved solids – less than 60 parts per million, total alkalinity – less than 20 parts per million, silica – less than 13 parts per million, chlorine – less than 30 parts per million and a pH Factor greater than 7.5.

Consult a local water treatment specialist for an on-site water analysis for recommendations concerning feed water treatment (if required), in order to remove or reduce harmful concentrations of minerals. The use of highly mineralized water will cause more frequent cleaning and reduce operating efficiency. The fact that a water supply is potable is not proof that it will be suitable for moisture mode operation. Component failure/service related to poor water quality will not be covered under warranty.

Spray/Flex Hose W/Quick Disconnect

Your moisture+ oven may be equipped with the optional spray/flex hose assembly. The spray/flex hose assembly is intended to assist in cleaning the oven. The water pressure and velocity may vary, depending on the pressure and velocity of the water supply connected to the oven.

Drain

Your moisture+ oven has a gravity drain in the right rear corner of the oven cavity. The drain pipe that exits the rear of the oven must be directed downward toward the floor, and should run directly to an open floor drain. Garland provides an 1-1/2" male pipe adapter for connecting your drain lines. Avoid using flexible hose that could sag or kink, allowing water to accumulate. The drain must be vented. This connection must be at least 1-1/2" (38.1 mm) in diameter and configured in accordance with local codes.

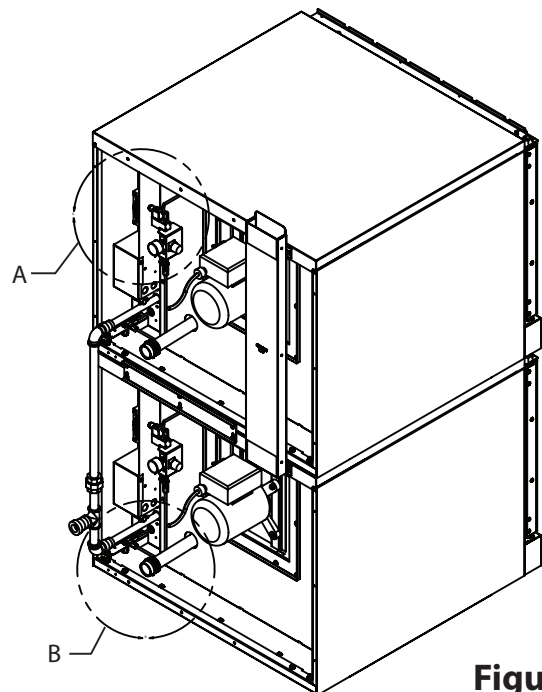
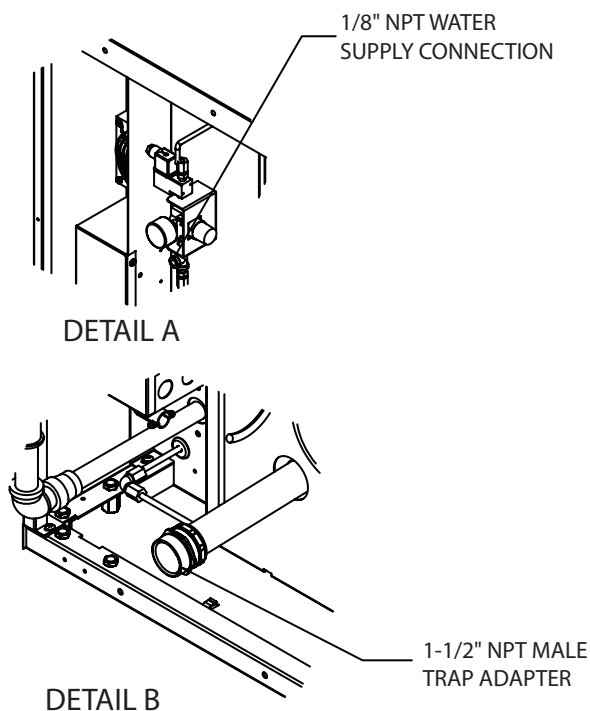


Figure 5.

VENTILATION AND AIR SUPPLY

Proper ventilation is highly important for effective operation. There are only two choices for properly venting an oven: 1) canopy hood, or, 2) direct venting. The ideal method of venting a gas oven is through the use of a properly designed canopy hood. The hood should extend beyond all sides of the oven 6 inches, (150 mm), and be installed at least 78 inches, (1950mm), from the floor.

A strong exhaust fan will create a vacuum in the room. For exhaust system vents to work properly, exhaust and make-up air must be balanced. For proper air balance, contact your local H.V.A.C. contractor.

All gas burners and pilots need sufficient air to operate and large objects should not be placed in the rear or at the bottom of this oven which would obstruct the airflow through the front covers. Do not place objects over the oven vent exit.

Some localities require an electric oven to be installed under an exhaust hood. Be sure to consult your local code inspector prior to operating any gas or electric oven.

IMPORTANT

ALL GAS BURNERS AND PILOTS NEED SUFFICIENT AIR TO OPERATE AND LARGE OBJECTS SHOULD NOT BE PLACED IN FRONT OF THIS OVEN, WHICH COULD OBSTRUCT THE AIRFLOW THROUGH THE FRONT. OBJECTS SHOULD NOT BE PLACED ON MAIN TOP REAR OF THE OVEN WHILE IN USE. THIS COULD OBSTRUCT THE VENTING SYSTEM OF THE OVEN'S FLUE PRODUCTS.

INSTALLATION OF A DIRECT VENT

When the installation of a canopy hood is impossible, the oven may be direct vented. Before direct venting check you local codes on ventilation, in the absence of local codes refer to the National Fuel Code NFPA 54, ANSI Z223.1 (latest revision).

If the oven is to be connected to a direct flue vent, it is necessary that a draft diverter be installed to ensure proper ventilation.

The draft diverter should be positioned on the main top of the oven and fastened with sheet metal screws provided. All parts described above are available from the manufacturer.

Note: Each oven has been factory tested and adjusted prior to shipment. It may be necessary to further adjust the oven as part of a proper installation. Such adjustments are the responsibility of the installer. Adjustments cannot be considered defects in material or workmanship and they are not covered under the original equipment warranty.

DO NOT UNDERSIZE THE VENT PIPE! This can cause resistance to flow and impede good venting. We suggest that if a horizontal run must be used it should rise no less than 1/4" (6.25mm) for each linear foot of run, and after a total of 180° of bends you should increase the size of stove pipe by 2". The flue should rise 2' (60 cm) to 3' (90 cm) above the roofline or 2' (60cm) to 3' (90cm) above any portion of a building within a horizontal distance of 10' (3 m).

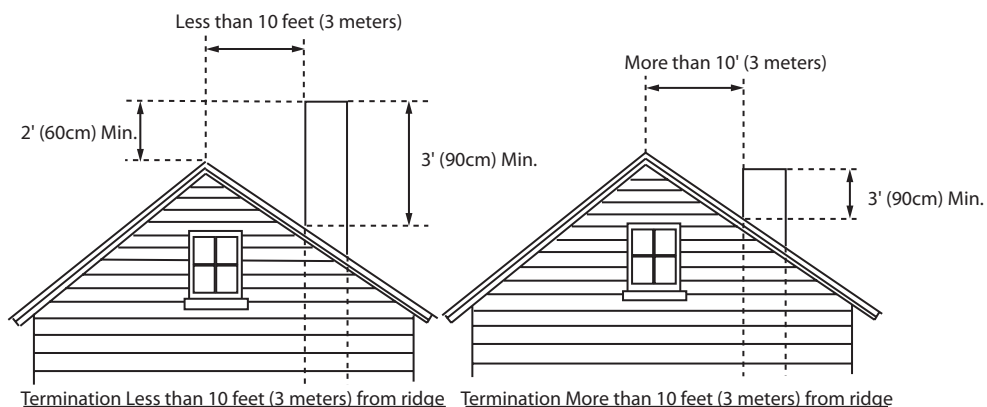


Figure 6.

GAS MODEL TESTING & LIGHTING INSTRUCTIONS

Turn on the main gas valve.

Remove the lower front trim cover. Drop the control panel and leak test all fittings and connections upstream from the service valve located on the redundant combination gas valve. Should any gas leaks be detected turn OFF the main gas valve, correct the problem and begin the test again.

Remove the blanking plug from the manifold test spigot and connect a pressure test gauge.

Open the manual gas valve located behind the redundant combination gas valve.

Activate the control panel and set the oven to the desired temperature. The burner will now ignite.

During installation there will be air in the gas line. This air will have to bleed off before ignition can occur. Wait five minutes after each attempt to bleed the air from the lines.

Turn on all appliances supplied by the same gas line and verify that the manifold pressure is 4.5"WC for natural gas or 10"WC for propane gas.

After the correct pressure has been verified, turn off the oven and remove the pressure gauge from the manifold pressure test spigot. Re-install the blanking plug.

Check all fittings again. Correct any leaks and begin the test again.

Replace all control panels, service panels and covers before operation.

All electronic ignition systems are supplied with a redundant gas valve. Therefore, the oven is not supplied with an external pressure regulator.

To Conserve Energy:

Do not waste energy by leaving the controls at high temperature settings during idle periods. Lower settings will keep the oven warm and ready for the next use period.

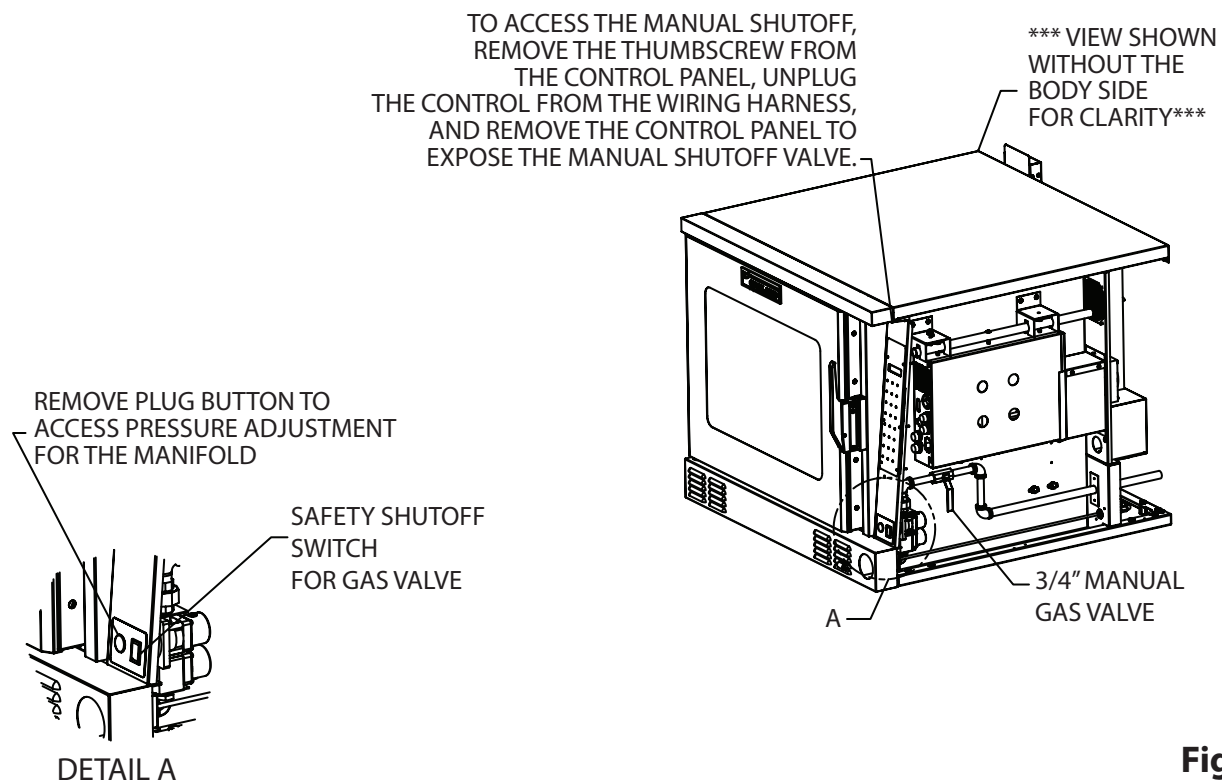


Figure 7.

EXPLANATION OF CONTROLS (Standard Models)

Mechanical Control, (Standard Models)

Moisture Control

This controls the duration of the moisture injection into the oven cavity. This is a rotary dial.

Moisture Switch

This rocker switch has three positions. The center position is OFF. This shuts off electrical power to the moisture system. The AUTO position energizes the system until the switch is turned off. This activates the injecting timer at the intervals manually set with the moisture control. The MANUAL position is momentary. Pressing will cause the moisture injector to inject moisture.

Fan Speed Switch

The left rocker switch, the fan speed switch, has two positions. The motor and fan can be run at either high speed, (1725 RPM), by pressing the switch upward to HI, or low speed, (1140 RPM), by pressing the switch downward to LO.

Power Switch

The right rocker switch. This main control switch has three positions. The center position is OFF. This shuts off electrical power to all functional components. The COOK position energizes the timer, thermostat and moisture functions. The COOL DOWN position energizes the motor and fan only.

Light Switch

This switch activates the oven interior light. This is a momentary switch. The light will stay lit as long as this button is held in the on position. The light will operate in any mode, whenever there is electrical power connected to the oven.

Temperature

The temperature range is from 150°F, (66°C), to 500°F, (260°C). Temperature is controlled by aligning the indicator to the desired temperature.

Timer

The timer is set by rotating the dial clockwise aligning the indicator to the desired time cycle. At the end of the timing cycle, a buzzer will sound. The buzzer is turned off by rotating the dial counterclockwise to the OFF position. The buzzer will sound continuously until manually turned off.



OPERATING INSTRUCTIONS, (Standard Models)

In Off Mode

When the oven is off, there are no lights or indicators. The oven interior light will operate.

Start Up

Press the Cook/Off/Cool Down rocker switch to the COOK position. The green lamp will light indicating the oven is powered in cook mode.

The oven will begin to heat to the temperature set on the thermostat dial. The amber lamp will light indicating the heat is active. As the heat cycles on and off to maintain the set temperature this light will go on and off accordingly.

Garland "safe door" feature will be operational. The door must be closed tightly for the oven to operate in cook mode.

Fan Speed

The fan speed can be either high, (1725 RPM), or low, (1140 RPM). The fan speed is controlled by the left rocker switch positions marked HI and LO.

Interior Light

The oven interior light is activated by pressing the light switch. This is a momentary switch. The light will stay lit as long as this button is held in the on position. The light will operate in any mode, whenever there is electrical power connected to the oven.

Cool Down

Pressing the Cook/Off/CoolDown rocker switch to the COOLDOWN position activates the fan and motor to cool the oven cavity. The door must be open slightly for the fan and motor to start. Heat is not active in this mode.

Optimal cool down will be achieved with the door open slightly. If the door is opened too wide the motor and fan will shut off. This is a safety feature. When the door is partially closed again the motor and fan will operate.

Cool down will continue to operate until the control is changed. Pressing the rocker switch to the OFF position cancels Cool Down and turns the oven off.

Temperature

The temperature range is from 150°F, (66°C), to 500°F, (250°C). Temperature is controlled by aligning the indicator to the desired temperature.

Timer

The timer is set by rotating the dial clockwise, aligning the indicator to the desired time cycle. The timer will count down from 3 minutes to 1 hour. At the end of the timing cycle, a buzzer will sound. The buzzer is turned off by rotating the dial counterclockwise to the OFF position.

Moisture Control

When the Moisture Switch is set to AUTO, moisture will be injected at the rate set by the moisture control. Rotate the dial counterclockwise to decrease moisture. Rotate the dial clockwise to increase moisture.

Moisture Switch

This is a three-position switch to control how the moisture is injected into the oven; manually, not at all (off), or automatically. The OFF and AUTO settings are fixed. The MAN, (manual), position is momentary. This momentary actuator injects water when pressed. It is strongly recommended that moisture only be injected manually by holding the button for one second at a time.

NOTE: Water can only be injected after the oven has preheated to at least 225°F (107°C)

EXPLANATION OF CONTROLS, (Deluxe Models)

Programmable Control, (Deluxe Models)

Display

Five distinct areas of the LED display screen are common to most programming modes and cooking modes:

1. Upper left corner: displays the programmed temperature followed by the word SET.
2. Lower left corner: displays actual temperature currently monitored by the control, (cavity or probe), followed by the letters ACT.
3. Upper right corner: displays time in hours, minutes and seconds; (00:00:00).
4. Lower right corner: displays the word HEAT to indicate when the burners or the elements are on and heating.
5. Lower center section: displays the operating mode. While the oven is idling, this area is blank. During a cooking cycle it will display COOK. During a hold cycle it will display HOLD.

Refer to the section entitled DISPLAY MESSAGES on page 23 for additional information regarding display messages and related button sequenced.

On/Off

Pressing this key once switches power modes, (ON or OFF).

Light

Pressing the light key will activate the oven interior light for a period of 30 seconds.

The light can be programmed to turn on for 30 seconds when the door is opened when the oven is in Cool Down or to come on when the control is counting down.

Moisture

This key is used to manually activate the moisture function. It is strongly recommended that moisture only be injected manually by holding the button for one second at a time.

During a cook cycle that is programmed for moisture, the LED will light while moisture is injected into the oven cavity.

Moisture can not be manually injected if the fan is running in Pulse mode.

NOTE: Water can only be injected after the oven has preheated to at least 225°F (107°C).



High Fan

Pressing this key once will change the fan mode to high speed. The LED will light as a visual indicator that the fan is operating at high speed.

Low Fan

Pressing this key once will change the fan mode to low speed. The LED will light as a visual indicator that the fan is operating at low speed.

Pulse Fan

Pressing this key once will change the fan mode to pulse. The LED will light as a visual indicator that the fan is operating in pulse mode.

In Pulse mode, the fan operates at low speed and is turned on and off at 30 second intervals after the programmed temperature is reached.

Note: during pulse mode, the fan will be on continuously during initial start-up. After the oven has reached the programmed temperature, the fan will begin to pulse on and off. While the fan is pulsing, the heat will only be active while the fan is on. If the temperature probe calls for heat while the fan is off, the control will not activate the heat output until the fan turns on. Moisture can not be injected manually during operation in Pulse Mode.

Cool Down

At any time the oven temperature is above 150°F, the oven can be cooled by pressing this button. The heat will turn off, the fan will switch to high speed and the display will change to indicate that the oven is in Cool Down mode.

When the oven is shut off for the day by pressing the On/Off key, if the cavity temperature is above 200°F, Cool Down will automatically start. The fan will run at the high speed setting. The display will indicate "Auto Cool Down." This cools the oven to 150°F to help extend the motor life.

Cook/Hold

Pressing this key activates the Hold feature. At the end of the cooking cycle, the oven will continue to idle at the programmed HOLD temperature, holding the oven's contents at the desired temperature until serving.

Start/Cancel

Pressing this key begins or ends a cook cycle. When in the idle mode, pressing the key once will activate the timer to the last programmed time period. The display timer will count down the time remaining.

At the end of the cook cycle, an audible alarm will sound. Pressing this key once will cancel the alarm.

To cancel a cooking cycle in progress, press and hold the key for three seconds. The timer will stop and the oven will return to idle mode.

Program

Pressing this key enters the Program Mode. In Program Mode, various key/display combinations allow the user to program oven control functions and to input/assign time, temperature and moisture parameters to recipe keys.

1. Press and hold the Program key for 3 seconds. The display will indicate ENTER CODE. Here, a pass code must be entered. This security feature prevents unauthorized persons from changing recipe parameters.
2. Use the number key to enter 4 – 2 – 7 – 5. Then press the Y/Enter key.
3. Press the N/Scroll key to select a recipe or system programming.

Numeric Keys

Use these keys to enter numeric values when programming the oven functions and/or recipe keys.

"N"/Scroll

During programming, the user will be required to answer yes or no to a question asked. This key is used to input a "no" answer. On other occasions, this key will be used to scroll through a list of choices.

"Y"/Enter

During programming, the user will be required to answer yes or no to a question asked. This key is used to input a "yes" answer. On other occasions, this key will be used to enter a selection from a list of choices.

OPERATING INSTRUCTIONS, (Deluxe Models)

Programmable Control (Deluxe Models)

The design of the moisture+ and its controls allow the use of various operational feature sets alone or in combination: traditional (manual), or cook & hold, with or without a core probe, with or without moisture.

Refer to the section entitled DISPLAY MESSAGES on page 23 for additional information regarding display messages and related button sequences.

Start-Up

When beginning daily operation, the oven will typically be in the Off Mode. The display will be blank.

Press the On/Off key once to turn the oven on. The oven will automatically begin to operate. When started, the oven will begin heating to the most recently programmed temperature, (factory default is 300°F). The ready range is +10°F/-5°F.

The fan will operate at the most recently programmed speed (factory default is Low speed).

The display will indicate LOW TEMP until the actual oven temperature is within the ready range. When the oven has reached the programmed temperature, the display will indicate READY.

At the end of the day, press the On/Off key once to turn the oven off. The word OFF is displayed for 30 seconds. After 30 seconds the display will go blank. The oven is in the Off Mode.

If the oven is turned off while the internal temperature is above 200°F, the Auto Cool Down function will begin, (refer to the following section for details). After the cavity temperature has cooled to 150°F, the fan will stop and the display will indicate OFF as described in the previous paragraph. This function protects the motor from being left in a heated state, which could shorten its useful life.

Auto Cool Down And Cool Down

When the On/Off key is placed in the OFF position while the oven's internal temperature is at or above 200°F, the control will automatically enter Cool Down Mode. With the doors closed, or partially open, the heat will shut off and the fan will run at high speed until the internal temperature drops to 150°F. The display will indicate AUTO COOL DOWN. When the temperature is decreased to 150°F, the control enters Off Mode.

Cool Down Mode may be manually activated at any time by pressing the Cool Down key once. This deactivates heating. The fan will run at high speed and the display will indicate COOLDOWN.

Cool Down Mode will engage when the door is closed, but it is recommended that Cool Down Mode is operated with the door slightly open as indicated on the display. If the door is not open enough, the display will indicate OPEN THE DOOR SLIGHTLY. If the door is open too far the display will indicate CLOSE THE DOOR SLIGHTLY.

Start/Cancel

Press this key to begin or end a cook cycle. When in Idle Mode, press the key once to activate the timer to the most recently programmed time period, (factory default is 30 minutes). The timer will display a countdown of the time remaining.

A cook cycle will not be allowed to start if the oven has not reached the ready band, (+10°F/-5°F), of the programmed temperature.

Note: Ensure that ready band option is on, refer to system programming options.

To cancel a cooking cycle already in progress, press and hold the Start/Cancel key for three seconds. The timer will stop and the oven will return to Idle Mode.

Changing the Temperature Scale, (°F or °C)

The control is capable of displaying temperatures in either Fahrenheit or Celsius, (factory default is Fahrenheit).

A "phantom" key which functions as a toggle for the two temperature scales is located to the right of the Cook/Hold key as shown.



To change the scale, press and hold the phantom key for 3 seconds. The current scale, ('F' or 'C'), will be displayed, then changed. This can be done at any time while power to the oven is turned on.

Basic Cook Cycle

NOTE: Before proceeding ensure that the manual bake option is on, refer to system program options.

1. Press the On/Off key once.
2. Press the Program key once. The display will indicate PROGRAM COOK TEMP. Use the numeric keys to enter the desired cook temperature.

Enter a number between 150 and 500, (factory default is 300). If a number outside this range is entered, the control will sound an error tone and reset to the closest allowable number within the range.

3. Press the Program key a second time. This stores and implements the temperature setting. The display will indicate PROGRAM COOK TIME. Use the numeric keys to enter the desired cooking time in hours, minutes and seconds.

Each time a key is pressed, the numbers displayed move one position left. It may be necessary to enter zeros first to attain the desired result, for instance, to enter a time of 30 minutes, press, 0 - 0, (hours), 3 - 0, (minutes), 0 - 0, (seconds), resulting in a timer display of "00:30:00."

4. Press the Program key a third time. This stores and implements the time setting. The display will indicate PROGRAM MOISTURE.

Press the N/Scroll key repeatedly to step through the available moisture setting choices until the desired setting is displayed. Moisture setting presets for Meat, Bread, Poultry, Fish and None are included, along with a User setting to allow for custom moisture settings. See "User Moisture Settings," on page 26 for more information.

5. Press the Program key a fourth time. This stores and implements the moisture setting. This also exits programming mode.
6. Allow the oven to heat to the set temperature. When the programmed temperature has been reached, the display will indicate READY.
7. Load the oven, close the door, and press the Start/Cancel key once to begin the cooking cycle/timer countdown.

Note: When the door is opened for loading, the internal temperature is likely to drop below the ready range. This is expected. The control allows 3 minutes for a user to load the product, close the door and press the Start/Cancel key to engage the timer. During this time, the control will ignore the drop in temperature. If the door is left open longer than 3 minutes, the cook cycle and timer countdown will not begin until the oven returns to the set temperature ready range and the display again indicates READY. If this happens, unload the oven, close the door, wait for the oven to return to READY, then repeat steps 6 and 7.

8. When time has expired, the display will indicate DONE and an audible alarm will sound continuously for 10 seconds. Press the Start/Cancel key to cancel the alarm and unload finished product from the oven immediately. The fan and heat will continue in idle mode.

If the alarm is not canceled after sounding continuously for 10 seconds, it will sound a short tone once every 15 seconds until the Start/Cancel key is pressed.

Using Cook & Hold

1. Press the Cook/Hold key once to activate the cook & hold function. The Cook/Hold key LED will light. Pressing the key a second time will toggle the function off.
2. Press the Program key once. The display will indicate PROGRAM COOK TEMP. Use the numeric keys to enter the desired cook temperature.

Enter a number between 150 and 500, (factory default is 300). If a number outside this range is entered, the control will sound an error tone and reset to the closest allowable number within the range.

3. Press the Program key a second time. This stores and implements the temperature setting. The display will indicate PROGRAM COOK TIME. Use the numeric keys to enter the desired cooking time in hours, minutes and seconds.

Each time a key is pressed, the numbers displayed move one position left. It may be necessary to enter zeros first to attain the desired result, for instance, to enter a time of 30 minutes, press, 0 - 0, (hours), 3 - 0, (minutes), 0 - 0, (seconds), resulting in a timer display of "00:30:00."

4. Press the Program key a third time. This stores and implements the Time setting. The display will indicate PROGRAM MOISTURE.

Press the N/Scroll key repeatedly to step through the available moisture setting choices until the desired setting is displayed. Moisture setting presets for Meat, Bread, Poultry, Fish and None are included, along with a User setting to allow for custom moisture settings. See "User Moisture Settings," on page 26 for more information.

5. Press the Program key a fourth time. This stores and implements the moisture setting. The display will indicate PROGRAM HOLD TEMP. Use the numeric keys to enter the desired Hold temperature.

Enter a number between 140 and 210, (factory default is 160). If a number outside this range is entered, the control will sound an error tone and reset to the closest allowable number within the range. If a new Hold temperature is not entered, the control will use the most recently programmed Hold temperature.

6. Press the Program key a fifth time. This stores and implements the Hold temperature. This also exits programming mode.
7. Allow the oven to heat to the programmed temperature. When the programmed temperature has been reached, the display will indicate READY.
8. Load the oven, close the door, and press the Start/Cancel key once to begin the cooking cycle/timer countdown.

Note: When the door is opened for loading, the internal temperature is likely to drop below the ready range. This is expected. The control allows 3 minutes for a user to load the product, close the door and press the Start/Cancel key to engage the timer. During this time, the control will ignore the drop in temperature. If the door is left open longer than 3 minutes, the cook cycle and timer countdown will not begin until the oven returns to the set temperature ready range and the display again indicates READY. If this happens, unload the oven, close the door, wait for the oven to return to READY, then repeat steps 7 and 8.

9. When time has expired the display will indicate DONE and an audible alarm will sound continuously for 3 seconds.

The fan will engage at low speed and the timer display will begin counting up from 00:00:00, indicating the amount of time the product has been held. The Cook/Hold key LED will flash.

The oven will continue to idle at the programmed HOLD temperature until the function is canceled. If there was a moisture setting active during the Cook cycle, moisture will remain active during the Hold cycle. Press the Start/Cancel key once to cancel the Hold and clear the timer.

Unload the finished-then-held product from the oven immediately. The fan and heat will continue in Idle Mode, (at the programmed COOK temperature).

Cooking With a Core Probe

1. Press the Cook/Hold key once to activate the cook & hold function. The Cook/Hold key LED will light.
2. Press the Program key once. The display will indicate PROGRAM COOK TEMP. Use the numeric keys to enter the desired cook temperature.

Enter a number between 150 and 500, (factory default is 300). If a number outside this range is entered, the control will sound an error tone and reset to the closest allowable number within the range.

3. Press the Program key a second time. This stores and implements the temperature setting. The display will indicate PROGRAM COOK TIME. When cooking with a core probe, the COOK TIME setting is ignored. The controller will override the time setting and monitor the probe temperature.
4. Press the Program key a third time. The display will indicate PROGRAM MOISTURE.

Press the N/Scroll key repeatedly to step through the available moisture setting choices until the desired setting is displayed. Moisture setting presets for Meat, Bread, Poultry, Fish and None are included, along with a User setting to allow for custom settings.

5. Press the Program key a fourth time. This stores and implements the moisture setting. The display will indicate PROGRAM HOLD TEMP. Use the numeric keys to enter the desired Hold temperature.

Enter a number between 140 and 300, (factory default is 160). If a number outside this range is entered, the control will sound an error tone and reset to the closest allowable number within the range. If a new Hold temperature is not entered, the control will use the most recently programmed Hold temperature.

6. Press the Program key a fifth time. This stores and implements the Hold temperature. This also exits programming mode.
7. Allow the oven to heat to the set temperature. When the programmed temperature has been reached, the display will indicate READY.
8. Insert the core probe into the food product to be monitored. Load the oven, close the door, keeping the plug-end of the probe cable outside the oven.

Note: When the door is opened for loading, the internal temperature is likely to drop below the ready range. This is expected. The control allows 3 minutes for a user to load the product, close the door and press the Start/Cancel key to engage the timer. During this time, the control will ignore the drop in temperature. If the door is left open longer than 3 minutes, the cook cycle and timer countdown will not begin until the oven returns to the set temperature ready range and the display again indicates READY. If this happens, unload the oven, close the door, wait for the oven to return to READY, then repeat steps 7 and 8.

9. Plug the probe cable into the connector on the underside of the top cover above the control panel. The display will indicate PROGRAM PROB TEMP. Use the numeric keys to enter the desired internal product temperature at which the probe will signal that the product is done.

Enter a number between 120 and 300, (factory default is 150). If a number outside this range is entered, the control will sound an error tone and reset to the closest allowable number within the range.

10. Press the Program key. This stores and implements the probe temperature setting. This also exits programming mode and begins the cooking cycle. During the cooking cycle, the display will flash at two second intervals, alternately showing the programmed cook temperature and the programmed probe temperature.
11. When the probe senses that the programmed internal product temperature has been reached, the display will indicate DONE and an audible alarm will sound continuously for 3 seconds.

The fan will engage at low speed and the timer display will begin counting up from 00:00:00, indicating the amount of time the product has been held. The Cook/Hold key LED will flash.

The oven will continue to idle at the programmed HOLD temperature until the function is canceled. Press the Start/Cancel key once to cancel the Hold and clear the timer. Unload the finished-then-held product from the oven immediately. The fan and heat will continue in Idle Mode, (at the programmed COOK temperature).

Programming Recipe Keys

For "one touch" cooking, each of the numeric keys, (1 through 9), on the keypad can be programmed to contain a product recipe consisting of 1 to 6 "profiles." Each profile consists of a set of cooking parameters which control that profile's fan speed, cook temperature, cook time and moisture settings.

To program a recipe key:

1. Press and hold the Program key for 3 seconds. The display will indicate ENTER CODE. Here, a pass code must be entered. This security feature prevents unauthorized persons from changing recipe parameters.

2. Use the numeric keys to enter 4 - 2 - 7 - 5. Then press the Y/Enter key.

3. Press the N/Scroll key to select recipe or system programming.

4. The display will indicate PRESS KEY TO PROGRAM. Choose the desired numeric key to which the new recipe will be assigned, and press that key.

Press the Y/Enter key. The display will indicate PROGRAM SHELF. Press the N/Scroll key.

5. The display will indicate PROGRAM FAN PROF1 SPEED.

Press the N/Scroll key repeatedly to step through the available fan speed choices, (HIGH, LOW, PULSE), until the desired speed for Profile 1 is displayed.

6. Press the Y/Enter key. The fan setting will be stored and the display will indicate PROGRAM PROF1 COOK TEMP. Use the numeric keys to enter the desired cook temperature.

Enter a number between 150 and 500, (factory default is 350). If a number outside this range is entered, the control will sound an error tone and reset to the closest allowable number within the range.

7. Press the Y/Enter key. This stores and implements the Profile 1 temperature setting. The display will indicate PROGRAM PROF1 COOK TIME. Use the numeric keys to enter the desired cooking time in hours, minutes and seconds.

Each time a key is pressed, the numbers displayed move one position left. It may be necessary to enter zeros first to attain the desired result, for instance, to enter a time of 30 minutes, press, 0 - 0, (hours), 3 - 0, (minutes), 0 - 0, (seconds), resulting in a timer display of "00:30:00."

8. Press the Y/Enter key. This stores and implements the Profile 1 Cook time setting. The display will indicate PROGRAM PROF1 MOISTURE.

Press the N/Scroll key repeatedly to step through the available moisture setting choices until the desired setting is displayed. Moisture setting presets for Meat, Bread, Poultry, Fish and None are included, along with a User setting to allow for custom moisture settings. See "User Moisture Settings," on page 26 for more information.

9. Press the Y/Enter key. This stores and implements the Profile 1 moisture setting. The display will indicate CONTINUE Y/N.

10. To continue on to Profile 2 of the recipe, press the Y/Enter key and enter cooking parameters for Profile 2 as done for profile 1 in steps 4 through 9. Up to 6 full profiles may be entered in this way for a single recipe.

To end cook cycle programming of a recipe after any of profiles 1 through 6 has been entered, choose NO at the CONTINUE prompt by pressing the N/Scroll key.

11. The display will indicate PROGRAM HOLD Y/N. Press the Y/Enter key if a Hold cycle is desired for the recipe, or N/Scroll if a Hold cycle is not desired.

12. If NO was chosen in step 10, skip directly to step 12.

If YES was chosen in step 11, the display will indicate PROGRAM HOLD TEMP. Use the numeric keys to enter the desired Hold temperature.

Enter a number between 140 and 210, (factory default is 160). If a number outside this range is entered, the control will sound an error tone and reset to the closest allowable number within the range. If a new Hold temperature is not entered, the control will use the most recently programmed Hold temperature.

Press the Y/Enter key. This stores and implements the Hold temperature setting.

13. The display will indicate CONTINUE Y/N. To end recipe key programming, press the N/Scroll key.

To program another recipe key, press the Y/Enter key and repeat the procedure, beginning with step 3.

System Program Options

To change the system setting, follow steps 1 & 2 above, use the N/Scroll key to select system programming and press Y/Enter to begin.

Program options are:

Manual Bake	ON/OFF
Light Mode	ON/OFF
Ready Band	ON/OFF
Flexible or Straight Time	Select

Cooking With a Recipe Key

1. If the oven is in Off Mode, press the On/Off key once.
2. Press the numeric key that has been assigned to the desired recipe. This will begin the heating cycle.
3. Allow the oven to heat to the set temperature programmed in Profile 1 of the recipe. When the programmed temperature has been reached, the display will indicate READY.
4. Load the oven and close the door. Press the numeric key that has been assigned to the desired recipe. That key's LED will light. Press the Start/Cancel key to begin the cook cycle.

Note: When the door is opened for loading, the internal temperature is likely to drop below the ready range. This is expected. The control allows 3 minutes for a user to load the product, close the door and press the recipe key to engage the timer. During this time, the control will ignore the drop in temperature. If the door is left open longer than 3 minutes, the cook cycle and timer countdown will not begin until the oven returns to the set temperature ready range and the display again indicates READY. If this happens, unload the oven, close the door, wait for the oven to return to READY, then repeat steps 3 and 4.

The display will indicate PROF1 and the timer will display a countdown of the total time left in the recipe.

When the time programmed for Profile 1 of the recipe has expired, the display will indicate PROF2, (if a second profile was programmed for the active recipe), and the timer will continue to display a countdown of the time left in of the recipe. (The fan speed, cook temperature and moisture settings programmed for Profile 2 will also take effect.) The control will continue executing the profiles programmed for the active recipe in succession unless the recipe is cancelled by the user. To cancel a recipe during cooking, press and hold the Start/Cancel key for three (3) seconds.

5. If a Hold cycle was programmed, when the time programmed for the final profile of the active recipe has expired, the display will indicate DONE and an audible alarm will sound continuously for 3 seconds.

The fan will engage at low speed and the timer display will begin counting up from 00:00:00, indicating the amount of time the product has been held. The Cook/Hold key LED will flash.

The oven will continue to idle at the programmed HOLD temperature until the function is canceled. Press the Start/Cancel key once to cancel the Hold and clear the timer. Unload the finished-then-held product from the oven immediately. The fan and heat will continue in Idle Mode.

If a Hold cycle was not programmed, when the time programmed for the final profile of the active recipe has expired, the display will indicate DONE and an audible alarm will sound continuously for 10 seconds. Press the Start/Cancel key to cancel the alarm and unload finished

product from the oven immediately. The fan and heat will continue in Idle Mode.

If the alarm is not canceled after sounding continuously for 10 seconds, it will sound a short tone once every 15 seconds until the active recipe key is pressed.

Using the Shelf Timer Feature

It may be beneficial to cook different items in the oven at the same time on different oven racks, (shelves) and load at different intervals. Though the product must have the same temperature and fan speed, each shelf can be timed separately.

To program shelf timers:

1. Press and hold the Program key for 3 seconds. The display will indicate ENTER CODE. Here, a pass code must be entered. This security feature prevents unauthorized persons from changing recipe parameters.
2. Use the numeric keys to enter 4 - 2 - 7 - 5. Then press the Y/Enter key.
3. Press the N/Scroll key to select recipe or system programming.
4. The display will indicate PRESS KEY TO PROGRAM. Choose the desired numeric key to which the shelf timer will be assigned, and press that key.

Press the Y/Enter key. The display will indicate PROGRAM SHELF Y/N. Press the Y/Enter key.

5. The display will indicate PROGRAM PROF1 FAN SPEED.
Press the N/Scroll key repeatedly to step through the available fan speed choices, (HIGH, LOW, PULSE), until the desired fan speed setting of all the products to be loaded is displayed.
6. Press the Y/Enter key. This stores and implements the fan speed setting. The display will indicate PROGRAM PROF1 COOK TEMP. Use the numeric keys to enter the desired cook temperature for all the products to be loaded.
Enter a number between 150 and 500, (factory default is 350). If a number outside this range is entered, the control will sound an error tone and reset to the closest allowable number within the range.
7. Press the Y/Enter key. This stores and implements the temperature setting. The display will indicate PROGRAM PROF1 COOK TIME. Use the numeric keys to enter the desired cooking time in hours, minutes and seconds for the shelf to be timed.

Each time a key is pressed, the numbers displayed move one position left. It may be necessary to enter zeros first to attain the desired result, for instance, to enter a time of 30 minutes, press, 0 - 0, (hours), 3 - 0, (minutes), 0 - 0, (seconds), resulting in a timer display of "00:30:00."

8. Press the Y/Enter key. This stores and implements the time setting. The display will indicate PRESS KEY TO PROGRAM. Choose the desired numeric key to which the next shelf timer will be assigned, and press that key.

Repeat steps 4 through 7 for each individual shelf position/shelf timer key that will be used.

- After programming all the shelf timers that will be used, press the Program key. This will return the oven to idle mode.

Cooking with shelf timers:

- Press the numeric key corresponding to the desired profile, (fan setting, temperature and time; see 'To program shelf timers:' on the previous page). Allow the oven to heat to the programmed temperature. When the programmed temperature has been reached, the display will indicate READY.

- Load product on the desired shelf, close the door, and press the same key that was pressed in Step 1. The display will indicate ENTER SHELF.

Press the numeric key, (1 - 6), corresponding to the shelf loaded. Press the Start/Cancel key to engage the timer countdown for the selected shelf.

- Repeat Step 2 up to five times while loading the remaining shelves.

Note: The display will show only one timer countdown at a time. The shortest, (time remaining), of all the active shelf timers will be displayed.






- When the shortest of the active shelf timers has expired, the display will indicate DONE SHELF X, where X equals the number of the shelf timer that has expired, and an audible alarm will sound continuously for 10 seconds. The LED on the expired timer's key will flash. Press that timer key to cancel the alarm, unload the finished product from the corresponding shelf immediately and close the door.

The timer display will change to show the countdown of the shortest of the remaining active shelf timers. Repeat this step until all of the active timers have expired and their respective shelves are unloaded.

If the alarm is not canceled after sounding continuously for 10 seconds, it will sound a short tone once every 15 seconds until the corresponding shelf timer key is pressed. The display will continue to indicate SHELF X and the timer key's LED will continue to flash.







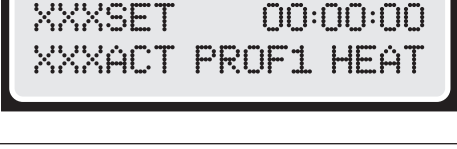



If an alarm isn't cancelled before the next timer expires, the alarm will sound continuously and both keys' LED's will flash. The display will continue to show the first expired shelf timer number indicating the first shelf to be unloaded. Cancel the displayed timer by pressing the corresponding shelf timer key once, then unload the shelf. The display will indicate Shelf X, where X is the number of the next shelf to be unloaded. Expired, uncanceled shelf timers will continue to be displayed in the order of their expiration as each previous timer is cancelled.

Display Messages

	The display will be blank if the oven has been Off longer than 30 seconds.
	This is the message that is displayed when the On/Off key is pushed and the unit is powering down. This message is displayed for 30 seconds before going blank. It is also displayed when the Auto Cool Down function shuts off.
	This is a warning message shown when the oven cavity temperature exceeds the programmed temperature by more than 25°F. The actual temperature and programmed temperature are also displayed.
	This is the warning message shown when the oven cavity temperature exceeds 575°F. All oven function is shut down and the user must remove power from the oven to reset the control after correcting the error. The audible alarm will sound continuously.
	If the control senses that the cavity probe shorts out or goes to an open circuit this message will be displayed and the audible alarm will sound continuously.

<p>CLOSE THE DOOR</p>	<p>When the oven is in start-up, idling mode, during a cook cycle or holding product and door switch one is sensed the heat and motor are shut off and the display changes to tell the operator to close the door so operation can continue.</p>
<p>XXXSET LOW TEMP XXXACT HEAT</p>	<p>When the oven is heating to a programmed temperature, particularly at start-up, this message is displayed. The programmed temperature being heated to and the actual temperature are shown (100° minimum). The word "HEAT" in the lower right hand corner will cycle on and off with the burners/elements.</p>
<p>XXXSET PROGRAM COOK TEMP</p>	<p>When programming the control for cooking cycles, this display will be shown prompting the user to program the temperature for the oven cavity.</p>
<p>00:00:00 PROGRAM COOK TIME</p>	<p>When programming the control for cooking cycles, this display will be shown prompting the user to program the time for the cook cycle in hours, minutes and seconds.</p>
<p>NONE PROGRAM MOISTURE</p>	<p>When programming for cooking, the user selects one of six moisture options: None; Meat; Bread; Poultry; Fish, User. The user scrolls through the options one at a time and selects the desired moisture option for that cook cycle.</p>
<p>XXXSET PROGRAM HOLD TEMP</p>	<p>When programming the control for cooking cycles using Cook-N-Hold, this display will be shown prompting the user to program the temperature for the oven cavity while in the HOLD mode.</p>
<p>XXXSET READY XXXACT HEAT</p>	<p>When the oven has achieved the programmed temperature and is idling this message is displayed. The word "HEAT" in the lower right hand corner will cycle on and off with the burners/elements.</p>
<p>XXXSET 00:00:00 XXXACT COOK HEAT</p>	<p>During a cooking cycle this display will appear. The programmed cook temperature and actual oven temperature will be displayed on the left side of the display. The clock in the upper right hand corner will count <u>down</u> in hours, minutes and seconds the cook time. The word "COOK" in the center of the lower row indicates the mode the oven is in. The word "HEAT" in the lower right hand corner will cycle on and off with the burners/elements.</p>
<p>XXXSET 00:00:00 XXXACT HOLD HEAT</p>	<p>When product is being held this display will appear. The programmed hold temperature and actual oven temperature will be displayed on the left side of the display. The clock in the upper right hand corner will count <u>up</u> in hours, minutes and seconds the time the product has been held. The word "HOLD" in the center of the lower row indicates the mode the oven is in. The word "HEAT" in the lower right hand corner will cycle on and off with the burners/elements.</p>
<p>DONE</p>	<p>When a cooking cycle ends the display clears, the blinking message DONE is displayed and the audible alarm sounds.</p>
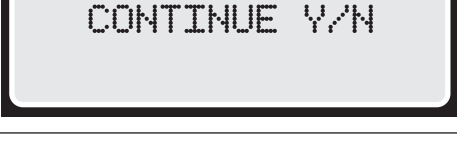
<p>COOL DOWN XXXACT</p>	<p>When the oven is in Cool Down or Auto Cool Down modes the display will show this message. It indicates the oven is cooling and shows the actual temperature of the cavity.</p>
<p>COOL CLOSE THE DOOR SLIGHTLY</p>	<p>While in Cool Down, if the door is open too far, as sensed by door switch two, this message is displayed to prompt the user to close the door to the desired open range so the fan and motor will turn back on to finish the cool down.</p>
<p>COOL OPEN THE DOOR SLIGHTLY</p>	<p>While in Cool Down, if the door is not open, as sensed by door switch one, this message is displayed to prompt the user to open the door.</p>
<p>XXXSET PROGRAM PROBE TEMP</p>	<p>When programming the control for cooking cycles using the core probe, this display will be shown prompting the user to program the internal temperature to be sensed by the core probe.</p>
<p>XXXSET PROBE XXXACT HEAT</p>	<p>When cooking with the Core Probe this message will appear alternately with the oven temperature display. The programmed probe temperature and actual probe temperature will be displayed on the left side. The word "PROBE" in the upper right hand corner replaces the clock to indicate the cook cycle is being controlled by the probe. The word "HEAT" in the lower right hand corner will cycle on and off with the burners/elements. This display will alternate at two second intervals.</p>
<p>XXXSET CAVITY XXXACT HEAT</p>	<p>When cooking with the Core Probe this message will appear alternately with the probe temperature display. The oven cavity programmed temperature and actual oven temperature will be displayed on the left side. The word "CAVITY" in the upper right hand corner replaces the clock to indicate the cook cycle is being controlled by the probe. The word "HEAT" in the lower right hand corner will cycle on and off with the burners/elements. This display will alternate at two second intervals.</p>
<p>ENTER CODE * * * *</p>	<p>Press and hold the Program Key for three seconds to enter the programming mode for Product and Shelf Timer keys. This display will prompt for the four digit password code so programming can continue.</p>
<p>PRESS KEY TO PROGRAM</p>	<p>After entering Program Mode, the key to be programmed must be identified.</p>
<p>PROGRAM SHELF Y/N</p>	<p>Once the key has been selected, you first must indicate whether it will be programmed as a product key or as a shelf timer.</p>

	<p>When programming a recipe key, the display will prompt for the fan speed for the profile being programmed. The user scrolls through the list of choices and presses the Enter key to store the selection. The profile number is shown in the lower left corner of the display.</p>
	<p>When programming a recipe key, the display will prompt for the cook temperature for the profile being programmed. The profile number is shown in the lower left corner of the display.</p>
	<p>When programming a recipe key, the display will prompt for the cook time for the profile being programmed. The time is entered in hours, minutes and seconds. The profile number is shown in the lower left corner of the display.</p>
	<p>Each profile may have Moisture, but it will only operate during profiles when it is actually programmed. Press the "SCROLL" key to step through the list of choices. Press the Enter key to store your selection.</p>
	<p>Product Keys have six profiles that can be programmed differently. Once all the steps in a profile are completed the program will prompt to continue to the next profile or to exit. Press the "Y" key to go to the next profile. Press the "N" key to finish programming this key.</p>
	<p>When you have programmed all the profiles needed for the recipe, the last step is to indicate if you want to go into hold mode at the end of the cooking cycle. If you choose yes you will then be asked to program a hold temperature. If you choose no you will have the opportunity to program another key or to exit.</p>
	<p>When cooking with a product key, the display will show the programmed temperature for the oven, the actual temperature for the oven, the amount of time left during the recipe in progress. The word "PRF1" in the center of the lower row indicates the mode the oven is in. The word "HEAT" in the lower right hand corner will cycle on and off with the burners/elements.</p>
	<p>When cooking with a shelf timer, you will be prompted to enter the number of the oven shelf (1-6) that you are putting the product on.</p>
	<p>When cooking with a shelf timer, the display will show the programmed temperature, the actual temperature, the amount of time left in the currently running timer. The word "SHFx" in the center of the lower row indicates the active shelf timer. The word "HEAT" in the lower right hand corner will cycle on and off with the burners/elements.</p>
	<p>When a cooking cycle ends the display clears, the blinking message DONE is displayed and the audible alarm sounds.</p>

COOKING WITH MOISTURE

A key feature of the moisture+ is the ability to inject moisture into the oven cavity during operation. Typically, this results in shorter cook times, greater yield and improved texture, flavor and appearance of food products.

The moisture+ system offers several methods for controlling moisture injection. While these functions provide a great degree of flexibility, it is possible to program settings for a product or cook cycle that will produce excessive moisture. This may result in accumulation of water in pans or in the bottom of the oven. Appropriate levels of moisture injection should not produce puddles of water. Because there is potential for food products and cooking methods to vary greatly among different operations, the moisture setting presets and any moisture injection guidelines set forth in these instructions are intended as suggested starting points only. Some experimentation may be necessary to produce desirable results on a consistent basis.

Mechanical Control, (Standard Models)

Mechanical control-equipped models offer two methods of moisture injection control.

Manual Injection: Moisture can be injected manually at any time during a cooking cycle while the timer is operating using the Moisture Switch on the control panel. The manual, (MAN), position of this switch is spring loaded. Moisture will be injected into the oven cavity when the switch is pressed. Use the switch in this way to occasionally add moisture during a cooking cycle. Depending on the product, it may be beneficial to manually inject moisture at specific times during a cooking cycle. For example, several short injections just after loading a batch of bread will help set a crust, whereas moisture injection throughout the entire baking cycle would not be desirable.

Automatic Injection: Moisture can be injected continuously throughout a cooking cycle by placing the moisture switch in the automatic, (AUTO), position. Turn the moisture setting dial clockwise to increase the amount of moisture, (injection frequency). Turn the moisture setting dial counterclockwise to decrease the moisture injection frequency.

Programmable Control, (Deluxe Models)

Manual Injection: With the deluxe model, moisture can be injected manually at any time during a cooking cycle by pressing the moisture key in the upper right corner of the keypad. (Moisture cannot be injected manually when the fan is running in Pulse mode.)

Automatic Injection: The programmable control features four pre-programmed moisture settings: Bread, Meat, Poultry and Fish. When programming the oven settings, the user is prompted to choose a moisture setting. Press the N/Scroll key to step through the list of choices. (Choose 'None' if automatic moisture injection is not desired during the cooking cycle.)

Preset	Recommended Temperature Range	Recommended Fan Speed
Bread	300°-325°F	High
Meat	250°-325°F	Low
Poultry	325°-400°F	High
Fish	300°-400°F	High

Figure 6.

Recommended temperature and fan speed settings for use with pre-programmed moisture settings.

If automatic moisture injection has been programmed during a Cook & Hold cycle, (as described on page 18), or a Core Probe cycle, (as described on page 19), moisture injection will continue during the Hold portion of these operations.

When programming a recipe key, (as described on page 20), each profile within the recipe can be programmed with a different moisture setting. If a Hold cycle is included in the recipe programming, moisture will continue to be injected into the oven during the Hold cycle.

User Moisture Settings

This function is recommended only for advanced users that have experience cooking with moisture.

1. When programming moisture settings, (as described on page 18, step 4), select USER.
2. These user settings are available: High, Med/High, Medium, Med/Low, Low, and None. These settings are intended to provide the user with additional flexibility when programming the moisture injection frequency and duration.

Press the N/Scroll key repeatedly to step through the available moisture setting choices until the desired setting is displayed. Press the Y/Enter key. (Choose None to exit USER mode and return to moisture presets.)

Note: There are no predetermined recommendations for using these settings. Some experimentation may be necessary to produce desirable results on a consistent basis. The importance of avoiding excessive moisture cannot be overstressed. Even a small amount of water puddling is not desirable. If puddling does occur, be sure to adjust the moisture settings accordingly.

Tips For Cooking With Moisture

As a general rule, convection ovens allow for lower temperatures and shorter cook times than typically used with conventional ovens. The introduction of moisture accelerates cooking even more.

Use caution to avoid overloading the oven with moisture. Experimentation with various products and settings may be necessary to find combinations that produce the best results.

MOISTURE + COOKING GUIDE

The following suggested times, temperatures and moisture settings are provided as a starting point only. Elevation, atmospheric conditions, gas supply, recipe, cooking pans, oven loads, and personal preference may affect you actual results.

Product	Temp	Fan Speed	Time	Deluxe Control Moisture Setting	Standard Control Moisture Setting
Chicken Breasts – Fresh 6 Oz. – 9 Per Tray	325 F	High	14 Min	Poultry	58
Chicken Parts – Fresh Approx. 17 Pieces/Tray	350 F	High	15 Min	Poultry	58
Whole Chickens 3 Lbs Each	350 F	High	30 Min	Poultry	58
Chicken Fingers 21 – 22 Pieces/Tray	350 F	High	10 Min	Poultry	58
Oven Fries – Cavendis Coated	350 F	High	15 Min	User – Low	Low
Salmon Fillets 8 Oz. – 10 Per Tray	300 F	High	15 Min	Fish	60
Fish Sticks	350 F	High	15 Min	Fish	60
Hamburger Patties – Frozen 6 Oz. – 12 Per Tray	350 F	High	16 Min	Meat	55
Hamburger Patties – Pre Cooked	350 F	High	10 Min	User – Medium	51
Pizza – 12” Par Baked Shells Topped w/ Sauce, Mushrooms And Pepperoni	350 F	High	8 Min	None	OFF
Pizza – 12” Frozen “Rising Crust”	350 F	High	10-11 Min	Meat	55
Blueberry Pies – Frozen 46 oz. – 2 Per Tray	350 F	High	50 Min	Bread	Max, Moisture for First Few Min. Of Bake, Then No Moisture
Muffins – Blueberry “Scooped”	325 F	Low With Manual Control	20 Min	Profile Baking #1 – Pulse Fan, No Moisture 7 Min. #2 – Low Fan Bread Setting 13 Min.	N/A
Bagels – Par Baked	325 F	High	4 Min	Bread	Max, Moisture for First Few Min. Of Bake, Then No Moisture
Roast Beef	300 F	High	90 Min	Meat	55
Baker Potatoes #1 Russetts	350F	High	60 Min	Non	OFF
Potato Scones	325 F	Low	8 Min	Bread	Max, Moisture for First Few Min. Of Bake, Then No Moisture

Product	Temp	Fan Speed	Time	Deluxe Control Moisture Setting	Standard Control Moisture Setting
Kaiser Rolls	325 F	Low	8 Min	Bread	Max, Moisture for First Few Min. Of Bake, Then No Moisture
Rolls – Crusty Dinner 35 gr.	350 F	Low	10 Min	Bread	Max, Moisture for First Few Min. Of Bake, Then No Moisture
Bread – Parisian	325 F	High	17 Min	Bread	Max, Moisture for First Few Min. Of Bake, Then No Moisture
Bread – Crusty Parisian 510 gr. Par – Baked	350 F	High	11 Min	Bread	Max, Moisture for First Few Min. Of Bake, Then No Moisture
Bread – Italian Calabrese 342 gr.	375 F	High	14 Min	Bread	Max, Moisture for First Few Min. Of Bake, Then No Moisture
Croissants	325 F	High	9 Min	Bread	Max, Moisture for First Few Min. Of Bake, Then No Moisture
Cookies – Chocolate Chip	300 F	Low	12 Min	Bread	Max, Moisture for First Few Min. Of Bake, Then No Moisture
Turnovers – Apple	325 F	High	20 Min	Bread	Max, Moisture for First Few Min. Of Bake, Then No Moisture
Lasagna – Frozen Refrigerated for 48 Hours	300 F	High	65 Min	User – Medium	51
Pork Chops – 6 oz.	325 F	High	9 Min	Meat	55
Pork Loin – Whole 2–3 lbs.	325F	High	25 Min	Meat	55

PERFORMANCE RECOMMENDATIONS

Preheat the oven thoroughly (approx. 20 minutes) before use.

As a general rule, the temperature should be reduced 25° to 50°F from that used in a standard/conventional oven. Cooking time may also be shorter. Close monitoring of the first batch of each product prepared is recommended.

Cooking times and temperatures will vary depending upon such factors load size, mixture of products, moisture level, density and initial temperature of products.

Keep a record of the times, temperature and load sizes you establish for various products. This information will be useful for succeeding loads.

When practical, start cooking the lowest temperature product first and gradually work up to the higher temperatures.

If you find that your previous temperature setting is more than 10° higher than needed for succeeding loads, press the "COOL DOWN" switch and open the doors slightly to reach the desired cooking temperature.

When loading the oven, work as quickly as possible to prevent loss of heat.

The oven will continue to heat after the timer has expired. Product should be removed from the oven as soon as possible to avoid overcooking.

Center pans on racks and load each shelf evenly to allow for proper air/moisture circulation within the oven cavity.

When baking, weigh or measure the product in each pan to promote even cooking.

When cooking with six pans, use rack positions 2, 4, 6, 8, 10 and 12, starting from the top.

Do not overload the oven. Six pans are suggested for most items, i.e.: cakes, cookies, rolls, etc. However, the maximum (13 pans) may be use for fish sticks, chicken nuggets, and hamburgers. Cooking times may have to be adjusted.

Muffin pans should be placed in the oven back to front or with the short side of the pans facing the front to promote even baking.

Use pan extenders or two-inch deep 18" x 26" pans for batter type products which weigh more than eight pounds.

Never place anything directly on the bottom of the oven cavity. This will obstruct airflow and drainage, causing uneven results.

"Flex Time," a patented feature of the programmable control, monitors the cooking progress of the oven's contents and may adjust the cook time longer or shorter to produce the best result.

About Moisture Presets

The **Bread** setting injects moisture only during the first 6 cycles of the baking period. Other settings inject moisture throughout the cook time.

Your actual recipe or desired results may require more or less moisture than the recommended presets apply.

Other than **Bread**, the **Meat** setting provides the least amount of moisture overall. The **Poultry** preset injects more than **Meat**, with the **Fish** setting applying the highest total amount of moisture.

For best results, you may want to experiment with the settings. The presets also provide a useful starting point when experimenting to find desired moisture settings for other products.

TEMPERATURE CALIBRATION

1. Press and hold "PROGRAM" Button for three (3) seconds. When prompted, enter the Diagnostics Code 3-4-2-4, Press "Y". The Moisture Plus part number will display briefly followed by the Diagnostic Tests – Keypad Test.




2. Press the "N" Button to scroll to Diagnostic Tests – Temp Cal. Press "Y".



3. After selecting Temperature Calibration and Pressing "ENTER". The display will show the Actual Temperature inside the oven. Verify the cavity temperature using a pyrometer.



4. Press and hold the "PHANTOM" button for three, (3), seconds. The display will show the Actual Temperature on the first line and Set Temperature on the second line. If the Actual Temperature does not correspond to the pyrometer, enter the value on the pyrometer using buttons 1 – 0. The value will be input as Set Temp.

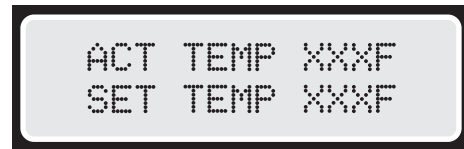

5. Press "Y" to accept the changes. The actual Temperature will change to equal the value input for Set Temperature. Press Cancel to exit Temperature Calibration.

NOTE: After the desired Tests are complete, press "PROGRAM" to exit Diagnostics Mode.

PROBLEMS / SOLUTIONS

Problem

If cakes are dark on the sides and not done in the center

If cakes edges are too brown

If cakes have light outer color

If cakes settles slightly in the center

If cake ripples

If cakes are too coarse

If pies have uneven color

If cupcakes crack on top

If meats are browned and not done in center ...

If meats are well done and browned

If meats develop hard crust

If rolls have uneven color

If muffins tip toward one side

If tops of delicate products are blown off

Solution

Lower oven temperature

Reduce number of pans or lower oven temperature.

Rise temperature.

Bake longer or rise oven temperature slightly.
Avoid opening the door often or for long periods.

Overloading pans or batter is too thin.

Lower oven temperature.

Reduce number of pie per rack or eliminate use of bake pans.

Lower oven temperature.

Lower temperature and roast longer.

Reduce time. Limit amount of moisture.

Reduce temperature or increase moisture.

Reduce number or size of pans

Lower fan speed,

Use Pulse fan setting.

CLEANING

NOTE: Disconnect the oven from the power supply before cleaning or servicing.

Break-In Period

When the oven is new, operate it for one hour at 450°F before beginning normal cooking operation. After cooling, wipe the interior, including the racks, with a clean damp cloth.

Exterior Cleaning

Establish a regular cleaning schedule. Spills should be wiped off immediately. The oven should always be allowed to cool sufficiently before any cleaning is attempted.

When cool, wipe exposed, clean-able surfaces with a mild detergent and hot water. Stubborn residue spots may be removed with a light-weight, non-metallic scouring pad. Dry thoroughly with a clean cloth. Stubborn stains may be removed by using a non-metallic abrasive pad, rubbing in the direction of the metal's grain. If necessary, for particularly heavy deposits, you may mix a thin paste of water and scouring powder and apply it with a sponge. Be careful to apply light pressure and remember to rub only in the direction of the metal's grain.

The control panel surface is easily cleaned with hot water, soap and a soft cloth. Do not use hard abrasives, solvent type materials or metallic scouring pads since these will scratch or cloud the surface.

Never spray steam, water, or spray cleaners directly at the control panel. This will allow moisture into the control compartment which could damage electrical components.

Interior Cleaning

Establish a regular cleaning schedule or wipe off spills on the same day they occur.

Cool down the oven to 160°F.

Remove the oven racks.

Lift the rack guides on either side of the oven off their holders. Racks and guides may be run through the dishwasher while the oven cavity is being cleaned.

Exercise caution when removing the fan cover to avoid the possibility of injury.

Spray the oven interior with commercial oven cleaner. Set the temperature to 225°F (107°C) and the moisture setting to FISH. Run the oven for 20 minutes. Wash down the interior of the oven with the with hot soapy water and rinse with spray hose if present.

To reinstall oven racks, reverse procedure.

It may be desirable to use a commercially available soil shield product, (such as 'KOTE,' manufactured by Kay Chemical Company), to pre-treat the oven interior, which will make cleaning easier. Follow the manufacturer's instructions carefully. Be sure not to get chemicals on food-contact surfaces.

Fan Area Cleaning

If aluminum foil is routinely used to wrap food or cooking vessels during oven operation, the following preventive maintenance must be performed:

Turn the power switch to the "OFF" position.

Remove the oven racks and rack guides.

Remove the air baffle and clean any stains or deposits. Check the blower wheel and air baffle for particles of aluminum foil or food deposits. Clean the vanes of the blower wheel as necessary. (Caution: edges of blower wheel vanes may be sharp.)

Reinstall the air baffle, rack guides and oven racks.

MAINTENANCE

Users are cautioned that maintenance and repairs must be performed by a Garland authorized service agent using genuine Garland replacement parts. Garland will have no obligation with respect to any product that has been improperly installed, adjusted, operated or not maintained in accordance with national and local codes or installation instructions provided with the product.

With minor periodic maintenance your Garland oven should provide satisfactory performance for many years. Any time you require service or replacement parts to be installed we recommend that you have all of your oven components inspected and their performance checked. At least once each year your oven should be inspected by a qualified service technician to ensure your oven continues to operate at its peak performance.

MOTOR CARE

The motor on your oven is maintenance free since it is constructed with a self-lubricating sealed ball bearing. It is designed to provide durable service when treated with ordinary care. We have a few suggestions to follow on the care of your motor. When the motor is operating, it cools itself internally by air entering at the rear of the motor case, provided the proper clearances are maintained.

Since the blower wheel is in the oven cavity it is at the same temperature as the oven. If the motor is stopped while the oven is hot, the heat from the blower wheel is conducted down the shaft of the motor and into the armature. This action could shorten the life of the motor.

We recommend at the end of the bake or roasting period, when the oven will be idle for any period of time, or before shutting down completely, that the doors be left open slightly, and press the COOL DOWN switch on the control panel.

Electronic Controls have an Auto Cool Down function that will cool the oven cavity down to 150°F when the oven is shut down at the end of operation

WATER SYSTEM

Minerals, particles and chemicals in your water supply can lead to build up of deposits and lime in your water system. Garland recommends that you closely follow the manufacturer's recommendations on changing and cleaning your water filtration system.

Failure to provide and maintain an adequate water quality system may cause damage to internal components and may void your warranty.

REPLACEMENT PARTS

Refer to the specific parts catalogue for the model oven that you own for a complete breakdown of all replacement component parts. The following is a partial list of the most commonly replaced functional parts. This list is provided for your reference only. Because specifications are subject to

change without notice, be sure to check with your authorized service agent or the Garland Parts/Service Department to verify you are ordering the correct replacement part number. Be sure to have your model number and warranty serial number when contacting the Parts/Service Department.

1933099	Motor/Blower Assembly, 120V 50/60Hz	1935702	Combination Gas Valve, 60K BTU Propane
1933098	Motor/Blower Assembly, 208/240V 50/60Hz	1935601	Ignition Module, Gas
1955501	Circuit Board, MC Control Thermostat	1935801	Pilot, IPI Gas Oven
1933701	Circuit Board, PC Control	1933201	Flat Element Assembly, 208V 50/60Hz
1933801	Circuit Board, Motor Relay Assembly	1933202	Flat Element Assembly, 240V 50/60Hz
1956001	115VV, 1 Hour Timer	1933203	Flat Element Assembly, 460V 50/60Hz
1956002	208/240 V, 1 Hour Timer	1637002	Contactator, Electric Ovens
1932889	Keypad Panel Sub-Assembly, PC Control	1918201	Cooling Fan, 120V 50/60Hz
1935701	Combination Gas Valve, 80K BTU Natural	1918202	Cooling Fan, 208/240V 50/60Hz



Section Two – Service



moisture+TM

COMPONENT IDENTIFICATION

Moisture Control

Mechanical Moisture Control

- The Moisture system applies water through the solenoid in 1 second cycles.
- The scale settings are in seconds.
- Set to the low position, the water will cycle once every 60 seconds.
- Set to the 60 second position, the water will cycle 6 times in 1 minute.



The control increases the cycle time frequencies by rotating in a clockwise

Water pressure check:




Minimum water feed pressure: Fully open the pressure regulator control knob to determine what the line pressure is. The gauge should read at least 30 psi.


Regulator pressure: The regulator should be set at 20 psi when the spritzer valve is energized.

One way to determine if water is being injected is to monitor the pressure gauge. The static pressure reading will drop 6 - 10 psi when the solenoid valve is opening, or cycling.

When the water system is energized, and the cavity is at a temperature of 225°F (107°C) or higher, condensation mist should appear from the water nozzle located above the fan, and behind the air baffle plate (not shown).

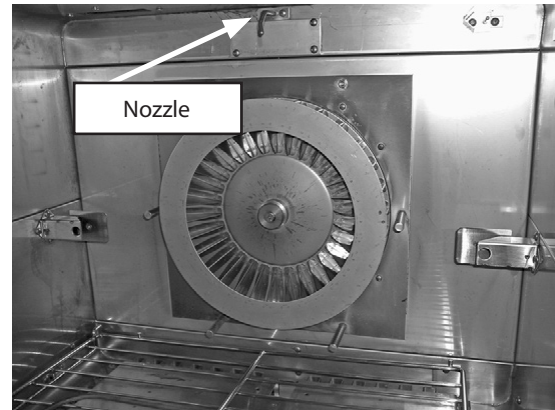


The Timer is a solid state timer on the control compartment sidewall.

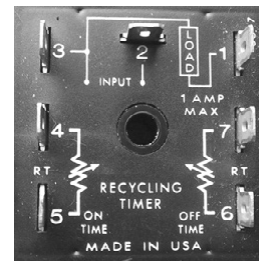

Deluxe (Fast Panel Moisture Control)

Moisture is controlled by pre-programmed choices selected during the product cook cycle sequence. (See product cook programming in the Operation Manual section). Additional moisture can be manually selected using the moisture key pad.

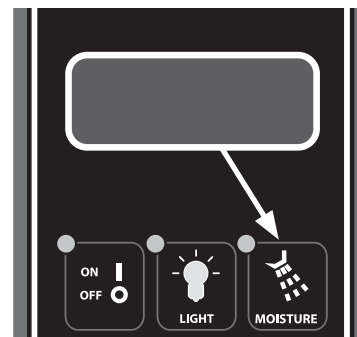

COMPONENT IDENTIFICATION

Cavity Temperature Controls


Service Overview

- **Spritzer (Water Inlet) –**


Purpose: This temperature switch assures water injection will not be available below a cavity temperature that would allow excessive puddle buildup on the cavity floor. The switch will close at a temperature of 225°F on rise. This low, but slightly above superheat value of water temperature will enable a preference of low temperature cooking.

- **Control Compartment Ambient Temperature –**

Purpose: This control will automatically run the cooling fan in the control compartment if the temperature reaches, or exceeds 150°F. This function will assure maximum air extraction of hot ambient control compartment air during continuous operation, and intake of cooler outside ambient air.

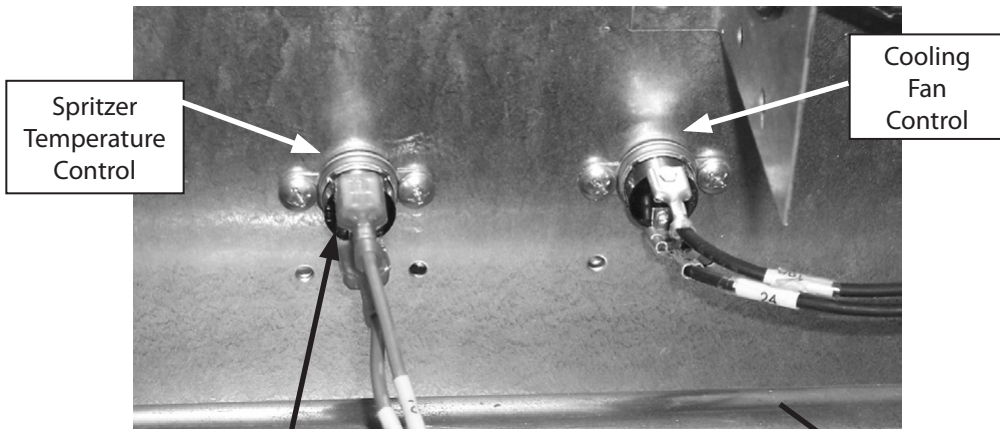


NOTE: Water can only be injected after the oven has preheated to at least 225°F (107°C).

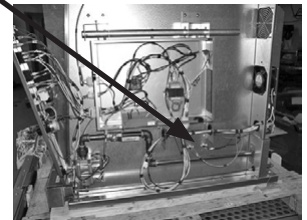


COMPONENT IDENTIFICATION

Component moveable service drawer.

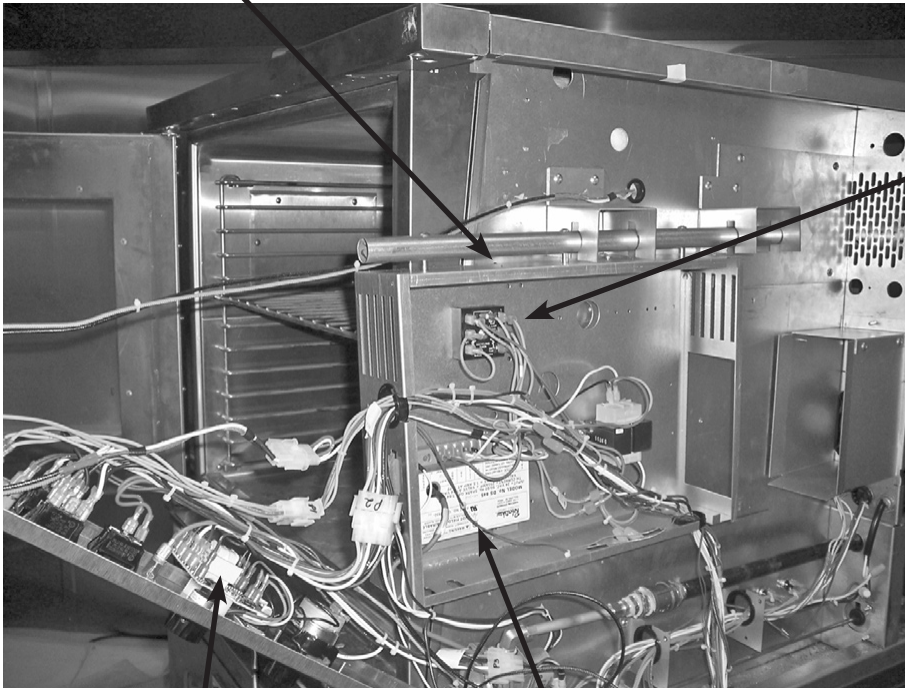


Moisture Control
Solid State Timer

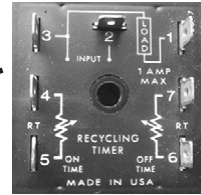

Temperature Control
Solid State control

Direct Spark Ignition Module

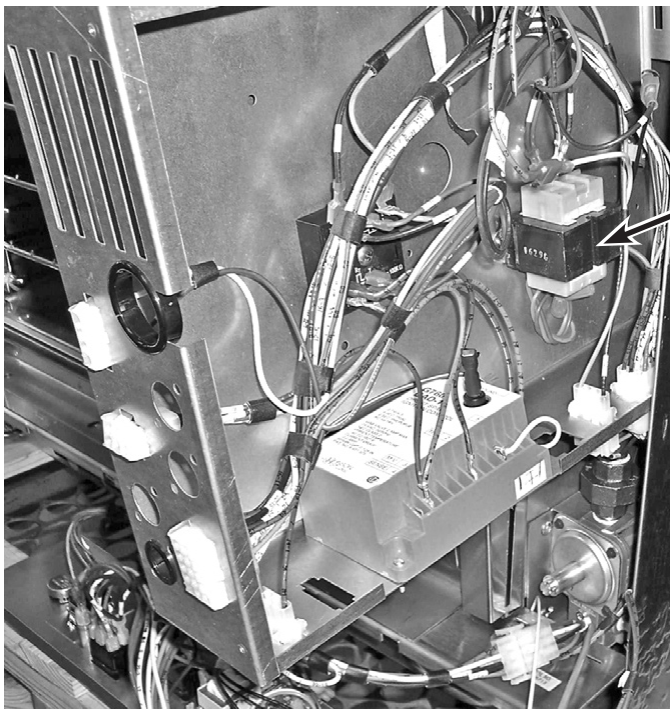

Heat Control
Transformer

DIAGNOSTIC PROCEDURES

Diagnostics Mode


To enter Diagnostics Mode, press and hold the Program ("Phantom" key lower right blank) button for three, (3), seconds. This key is located to the right of the Cook/Hold key as shown.



When prompted, enter the code: 3-4-2-4 using the buttons 1 – 0. Press "ENTER" (Yes key).

- After entering the code, and pressing "ENTER," the Moisture Plus Part Number will be displayed briefly, and then the display will change to Diagnostics.

Keypad Test

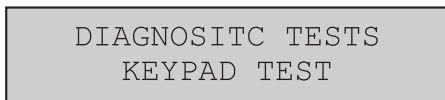

Use the "YES" (lower right) and "NO" (Lower left) buttons to scroll through the available diagnostic tests. Press "ENTER" to begin the desired test.

1. The display will show "Press the On/Off Key". Upon pressing the On/Off key, the LED for the ON/OFF key will light briefly and then go out to show that the key works.
2. The display will then prompt the user to press the "TEMP" key (upper right blank). After the user presses the "TEMP" (upper right blank) key, the corresponding LED will light to show the key works.

The control will then continue to prompt the user to press the remaining control buttons. If the LED of the key pressed does not light, a keypad problem exists.

3. After completing the Keypad Test, you will return to Diagnostics Mode. (Press "CANCEL" at any time during the test to return to diagnostics Mode.)

Door Switch Test

1. After selecting Door Switch Test and pressing the "ENTER" (lower right blank) KEY, the display will show the position of each of the two switches. Open and close the door slowly to verify the operation of the door switches.

Proper Door Switch Activation:

1. Starting with the door closed, the switches should read:

DOOR SW1	OPEN
DOOR SW2	OPEN


2. Slowly begin to open the door. Door switch 1 should be the first to change states:

DOOR SW1	CLOSED
DOOR SW2	OPEN

3. Next, door switch 2 should change state to:

DOOR SW1	CLOSED
DOOR SW2	CLOSED

4. If the switches do not operate as stated above, there is a problem with the door switches.
5. Press "CANCEL" to exit the Door Switch Test and return to Diagnostic Mode..

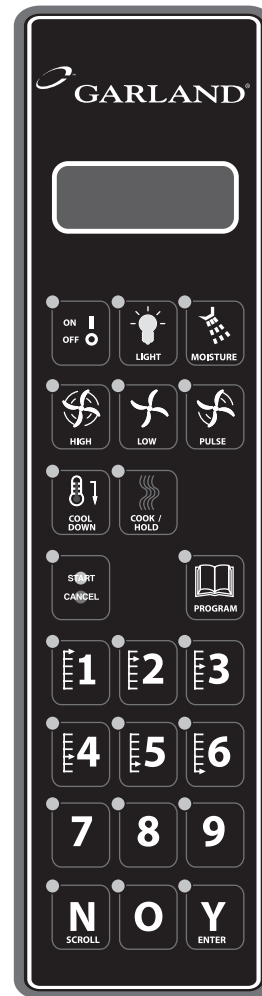

DIAGNOSTIC PROCEDURES

Fan Speed Test

1. After selecting Fan Speed Test and pressing "ENTER" (lower right blank), the control will turn the oven fan on LOW speed for ten seconds. Verify that the fan is indeed running on low speed. The control will show

FAN SPEED
LOW

2. After a short while, the control will turn the fan on HIGH speed for ten seconds. Verify that the fan is indeed on high.

FAN SPEED
HIGH

3. After a few seconds, the test will complete. Press "CANCEL" to return to Diagnostics Mode..

Heat Test

DIAGNOSTIC TESTS
HEAT TEST

1. After selecting Heat Test and pressing "ENTER" (lower right blank), the control will show the actual temperature of the oven, and will turn the heaters on. Verify that the actual temperature increases during the test.

HEAT TEST
ACT TEMP XXXF

2. After a short while, the test will complete. Press "CANCEL" to return to Diagnostics Mode.

Moisture Test

DIAGNOSTIC TESTS
MOISTURE TEST

1. After selecting Moisture Test and pressing "ENTER", the control will show the moisture status as OFF for ten seconds.

MOISTURE IS
OFF

2. The control will then turn moisture on for ten seconds, verify that the moisture has actually turned on within the oven by looking through the glass door.

MOISTURE IS
ON

3. After a few seconds, the Moisture Test will complete. Press "CANCEL" to return to Diagnostics Mode.

Temperature Calibration

DIAGNOSTIC TESTS
TEMP CAL

1. After selecting Temperature Calibration and pressing "ENTER", the display will show the Actual Temperature inside the oven. Verify the cavity temperature using a pyrometer.

TEMP CAL
ACT TEMP XXXF

NOTE: If the oven temperature is below 200°F, Temperature Calibration will not be active and the display will show Low Temp.

TEMP CAL
LOW TEMP

2. Press and hold the "TEMP" (upper right blank) key for three, (3), seconds. The display will show the Actual Temperature on the first line and Set Temperature on the second line.

ACT TEMP XXXF
SET TEMP XXXF

If the Actual Temperature does not correspond to the pyrometer, enter the value on the pyrometer using buttons 1 – 0. The value will be input as Set Temp.

3. Press "ENTER" (lower right blank) to accept the changes. The Actual Temperature will change to equal the value input for Set Temperature. Press Cancel to exit Temperature Calibration.
- After the desired Tests are complete, press "CANCEL" to exit Diagnostics Mode.

Control Safety Features

HI TEMP

The control has several built in safety features to protect both the user and the oven itself.

DIAGNOSTIC PROCEDURES

- If the actual temperature inside the oven exceeds the set temperature by 50°F, the display will show "HI TEMP" and the alarm will sound. The fan will continue to run, however, power to the heaters will be cut.



- If the actual temperature sensed inside the oven exceeds 575°F, the control will change to "HELP" and the alarm will sound continuously. All control operations will shut down except the alarm.

- NOTE: The control will need a complete power down and restart (unplug/plug in oven) before any control functions will become operational. If the problem persists, contact a service technician.



- In the event of a temperature probe failure, the control will become inoperative and the display will show "PROBE ERROR". Once the problem is corrected, the control must be cycled On/Off (using the ON/OFF key) in order to become operative again

TESTING & TROUBLESHOOTING

MP-GS-10/20 Troubleshooting Guide

Use this chart with the appropriate wiring diagram, also found in this manual

Mechanical Control		
PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Fan will not Run	No Power to Oven	Turn power on
	No Power to Oven	Check Light circuit – IF OK, Select “Cook” and Check Timer circuit. IF OK, Check Door Micro Switches
	Micro switch not OPENING	Check connections & switch functions. (Caution: the switch components on this control system pass 115 v. a.c. through switch contacts.)
Fast Control		
PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Key Pad Buttons Not Responding	Defective key pad	Use key pad diagnostics / pin outs test points
	Loose ribbon connection at key pad	Check connection
PROBE ERROR in display	Faulty Probe	Replace probe
	Loose probe connection	Check connections
HI TEMP In display	Oven at too high a temp for product	Allow oven to cool
HELP In display	Faulty Probe	Replace probe
	Motor centrifugal switch stuck	Check centrifugal switch
	Gas valve (s), or Ignition System	Check heat generation system – (Refer to Service procedures (Heat generation system) -.page
Unit will not shut off	Unit above 150°F	Put unit into cool down, open door slightly
No HIGH speed But LOW speed works	Bad key pad	Use diagnostic KEY PAD TEST
	Bad K2 relay on board	Check for voltage out of K2 relay
	Bad motor	Check motor
No LOW speed But HIGH speed works	Bad key pad	Use diagnostic KEY PAD TEST
	Bad K2 relay on board	Check for voltage out of K3
	Bad motor	Check motor
Display is BLANK NO POWER	Bad transformer	Check for 24VAC out of TR1 transformer
	Bad harness connection	Check connections
Unit will not heat	No power out of K4 relay	Check for power out of K4 relay
	No power out of Ignition Module MV	Complete a flame current check to osolate
	Gas valve shutoff switch open, PV, MV, or both valves stuck closed	Check for MV power at gas shutoff switch, and that PV and MV opens on call for heat
	Motor centrifugal not closing	Check motor centrifugal switch
Motor stops, then after a period of time comes back on	Thermal Trip on motor	Inspect rear clearance
		Motor air intake is clear of lint/debris
		Replace motor

Moisture + Gas Heat Generation & Temperature Regulation System Troubleshooting guide



Check:

- Inlet Gas Shut-off Valve is open.
- Electrical power is connected and on.
- Check for Display Status, if unit has a deluxe panel.
- Security of MPO door.
- All water connections are tight, inlet pressure is > 30 psi.
- Incoming gas pressure is within specs.

Preliminary Checks

Restart Oven:
(Control panel on)

- Observe automatic call for heat if oven cavity was cool.
- Verify Convection Blower motor is up to speed.
- Insure temp. quickly increases to set temp.

Does the unit heat up?

- Select the lower scale of microamps on your multi-meter.
- Connect the red lead to the sense terminal on the module, and the black lead to the sense wire that is routed to the direct ignition flame sensor.
- Recall for heat at the oven panel, while you watch the flame current reading.
- Flame current should be no less than 0.3 microamps - steady
- This module will try for a stable burner flame 4 times, and if not successful, will then lock out. A recall for heat will them be required.
- The following results should be determined:
 - Did the ignitor produce a spark?
 - During ignition, did the burners light?
 - Did the burners remain on?

Does the product cook correctly?

- Check probe for cleanliness, security, and circuit for proper resistance value changes per probe chart. (If unit uses a deluxe panel, complete the calibration check using the panel diagnostics sequence.)

Baking Cavity Checks.

Is it an Ignition box problem?

- Restart for heat while checking MV output Voltage.
- Module Check:**
- Check for 24 VAC input!
 - Check for 24 VAC output from MV terminal on module during call for heat!

OK?

- Display Check:**
- "Heat" should be displayed on the digital readout.
 - Temperature values should display while actual heat is increasing.
 - Oven should reach set temperature and cycle burner off.


You found cause!

Call Garland Technical Service
1-800-424-2411

Tell technical service representative the checks you made, and your observations.

TESTING & TROUBLESHOOTING

Key Pad / Ribbon Connector Test Points

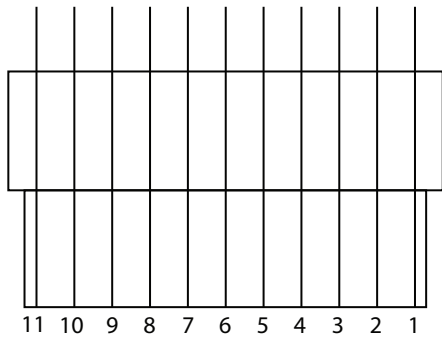


Key	Ribbon Test Points
Moisture	1 & 4
Light	2 & 4
On/Off	3 & 4
High Fan	3 & 5
Low Fan	2 & 5
Pulse Fan	1 & 5
Cool Down	3 & 6
Cook & Hold	2 & 6
Hidden	1 & 6
Start - Cancel	3 & 7
Blank	2 & 7
Program	1 & 7
1	3 & 8
2	2 & 8
3	1 & 8
4	3 & 9
5	2 & 9
6	1 & 9
7	3 & 10
8	2 & 10
9	1 & 10
N	3 & 11
0	2 & 11
Y	1 & 11



TESTING & TROUBLESHOOTING


Relay Board Component Identification

Relay	Relay Output
K1	Light
K2	Fan High
K3	Fan Low
K4	Heat demand
K5	Spritzer
K6	Cooling Fan
K7	Not used
K8	Not used
K9	Not used

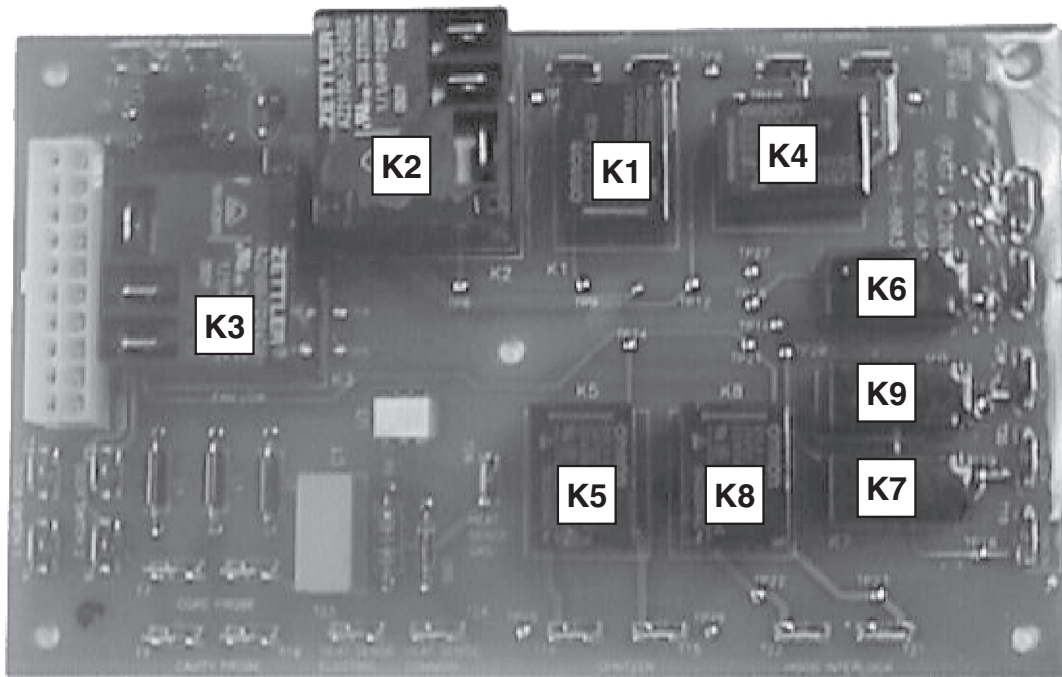

Relay Board

All functions of the deluxe control are provided by electrical connections to the relay board. An electronic signal is transmitted from the control board to the relay board. All primary power, and feedback circuits, are controlled here

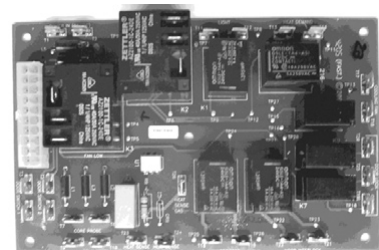


TESTING & TROUBLESHOOTING

Inputs

There are two input tabs to accept 24VAC from the relay board transformer (TR1).

There are two sense lines. This circuit is internal, and signals the control to turn on the "HEAT" message in the lower right corner of the display. One circuit is for gas ovens, the second is for electric ovens. Both will use the same common terminal.

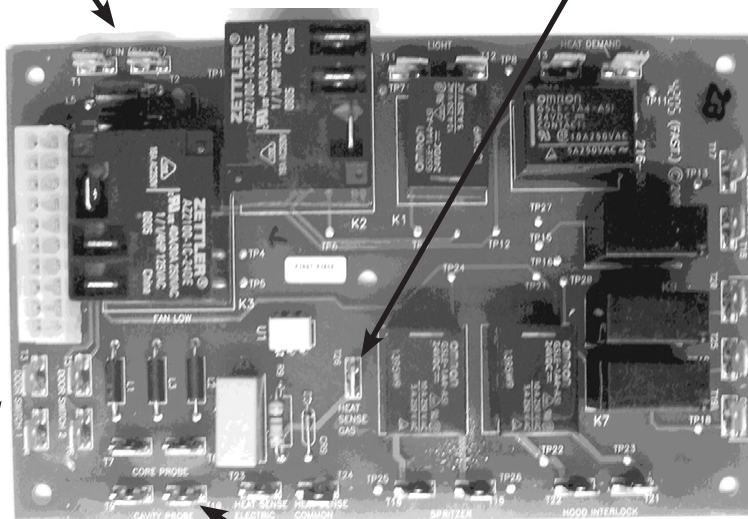

There are two 2 wire connections, one for each door switch connection


There are two tabs each for the sense of the 1000 ohm RTD probes. **One cavity probe that must always be present**, and one for an optional core probe for use with cooking.

TESTING & TROUBLESHOOTING

Test Points


To aid in the troubleshooting of the control system there will be test points available for all relay board circuits. Used in conjunction with step by step instructions in the service manual, a technician will be able to quickly and easily trace a circuit to find a failure. Each circuit on the relay board will provide a solder filled plated through hole accessible to a DVOM probe tip. This will allow the technician to probe a circuit without disassembly.


Function	Test Point	Function	Test Point
High Fan Out	TP1	Fan	TP14
High Fan In	TP2	Fan	TP15
Low Fan In	TP3	Door Lock	TP16
Low Fan	TP4	Door Lock	TP17
Low Fan	TP5	Door Lock	TP18
High Fan	TP6	Door Lock	TP19
Light	TP7	Door Lock	TP20
Light	TP8	Hood Interlock	TP21
Light	TP9	Hood Interlock	TP22
Heat	TP10	Hood Interlock	TP23
Heat	TP11	Moisture	TP24
Heat	TP12	Moisture	TP25
Fan	TP13	Moisture	TP26

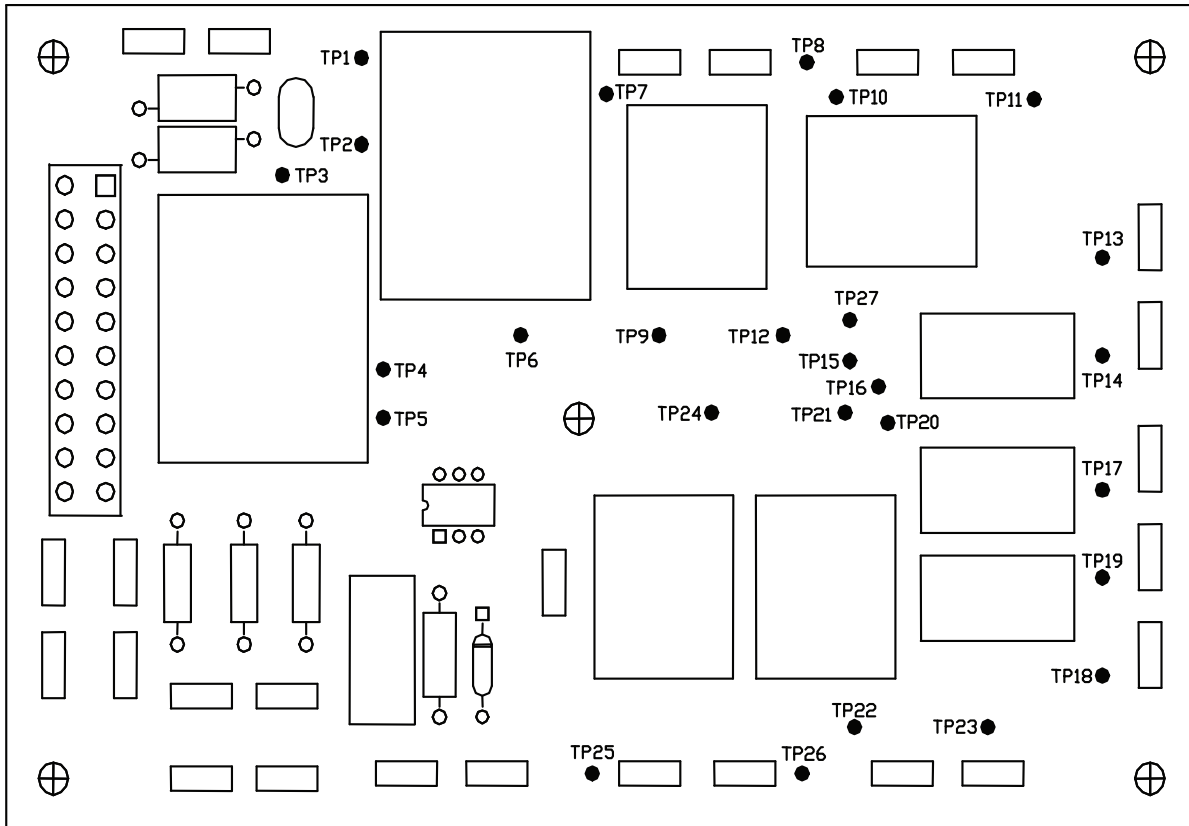


TESTING & TROUBLESHOOTING

Component Readings

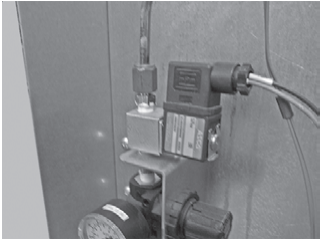	Spritzer Solenoid Valve Coil Resistance
	22 Ω

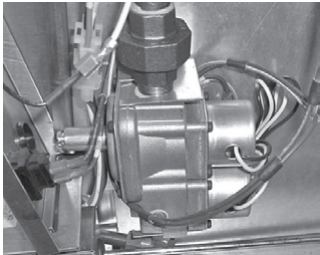
	Dual Stage Gas Valve Solenoid Resistance
	Pilot Valve = 28.5 Ω Main Valve = 28 Ω


Fan Motor And Blower Wheel

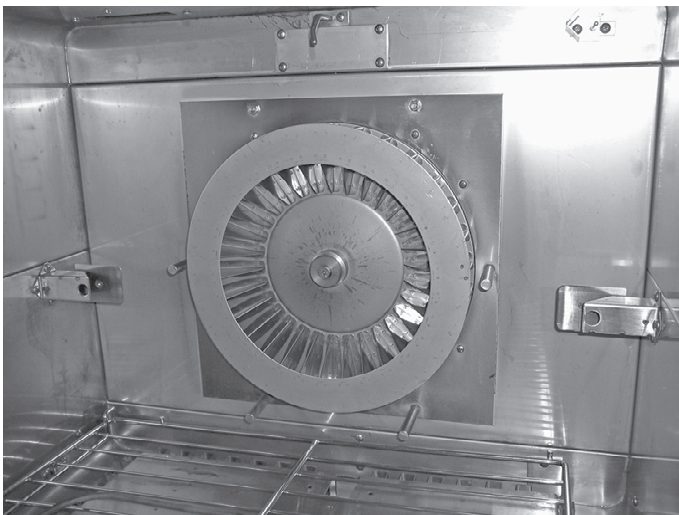

The blower wheel and fan motor are considered to be one complete assembly. Therefore, if the motor is determined to require replacement, the blower wheel must be replaced as well.

Garland sets the wheel at the factory with a specific gap setting.

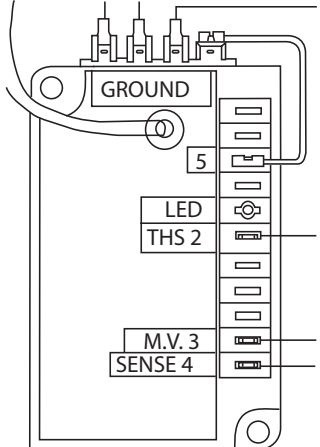	Direct Spark Ignition Module
	3 Trials 4 Seconds Per Trial No Retry Minimum Acceptable µa Reading ≥ 0.3

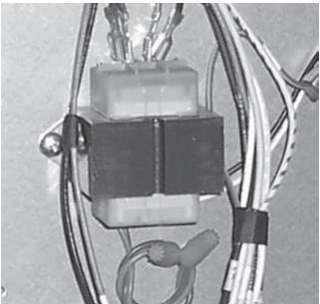
	Heat & Control Board Transformer
	Primary = 21.5 Ω Secondary = 1.5Ω

TESTING & TROUBLESHOOTING

Direct Spark Ignition Detail

MPO Direct Spark Ignition Specifications and Module Box Connections


Manufacturer	JOHNSON CONTROLS INC.
Vendor Part #	G760BAD-1
Ignition Type	Direct Spark
High Voltage Cable Wire	Stranded
Ignition Source	High Voltage Spark
Maximum Cable Length	48" (1,220mm)
Flame Detection Means	Flame Rectification
Flame Detection Types	Remote Sensing
Minimum Flame Current	0.3 Microampere
Flame Failure Response Time	0.8 Seconds Maximum
Spark Gap	0.1" (2.5mm)
Ignition Retrials	3
Safety Times	4 Seconds
Waiting Times	0 Seconds
Interpurge	30 Seconds
Loss Of Flame Signal Retrials	4 (Five Total Ignition Attempts)
Operation Current	24 VAC, 50/60 HZ, Nominal, 0.2A Nominal + Main Valve
Contact Rating (MV)	2A Continuous, 5A Inrush
Ambient Operating And Storage Fluttered	-40 to 158 °F (-40 to 70°C)
Humidity	95% RH non-condensing
Wire Connections Spark Options	RAJAH Connector

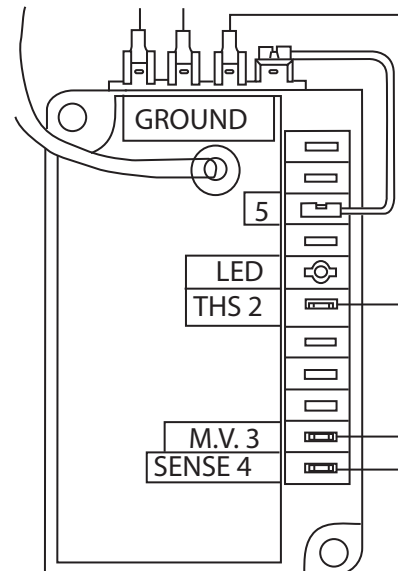


SERVICE PROCEDURES (REMOVAL/REPLACEMENT)

Oven Door Service – Removal / Installation

1. Disconnect power to unit.
2. . Locate and remove the 2 machine screws located on the lower upper LEFT side of the cavity frame. (These screws are just RIGHT of the lower door post on the cavity door frame.)
3. Start to remove this screw. ENSURE THAT THE DOOR IS SUPPORTED.

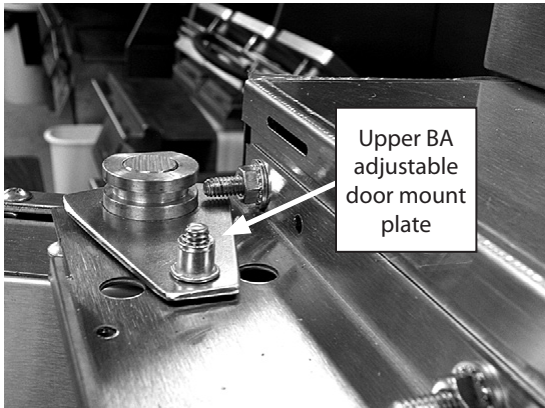

4. Once the screw has been removed, the upper section of the door can be tilted to the LEFT. Continue to support the door.
5. Remove the BA plate screw from the lower oven cavity bracket.

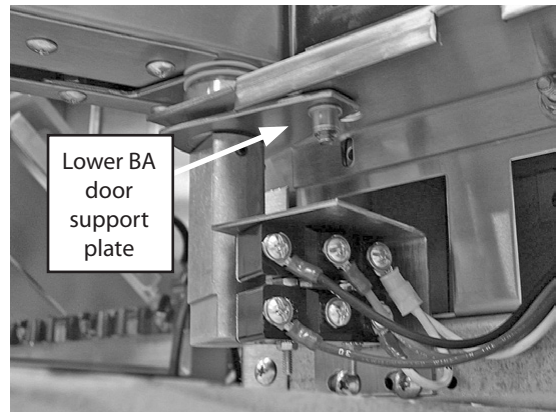

6. The upper, and lower door bearing retainers, and door rod can be easily separated from the cavity with a slight level pull upward, and to the left.
7. Reference this sequence in reverse to install, and secure the door.

Oven Door Light Service / Removal

1. Disconnect power to unit.
2. Remove the screws holding the door micro switch cover. This is located on the front LH side of the oven top panel.
3. Unscrew the upper and lower finger bolts located on the RIGHT side of the external glass frame to gain access to the cover housing the oven lights.
4. Remove upper and lower screws holding the light housing cover in place.
5. Remove the required light by pulling up for upper light and pulling down for the lower light.

SERVICE PROCEDURES (REMOVAL/REPLACEMENT)




6. Use a clean dry cloth to hold the new light, DO NOT TOUCH NEW LIGHT WITH YOUR FINGERS.
7. Install the replacement light.
8. To reassemble, reverse above instructions. Ensure that the cavity light wires on the RIGHT side of the oven are re-connected

Door Micro Switch Service / Removal / Replacement And Adjustment


Note: Disconnect electrical power from the oven.

1. Open the oven door.
2. Locate and remove the 2 machine screws located in the upper LEFT side of the cavity frame. (These screws are just RIGHT of the upper door post on the cavity door frame.)

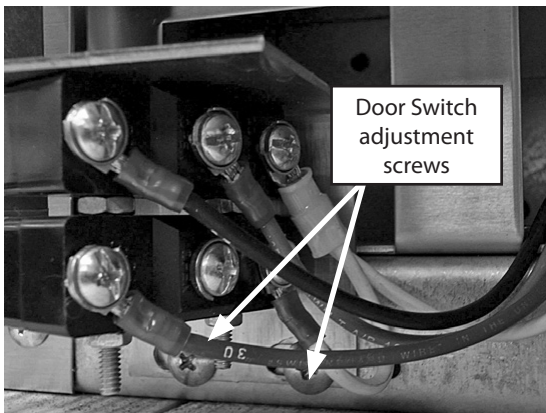

3. Remove both screws. DO NOT TOUCH THE COUNTERSINK SCREW.
4. Remove the 2 screws holding the door micro switch cover. This is located on the front LH side of the oven top panel.
5. Upper switch on bracket is SW2, lower switch is SW1.
6. Replace required micro switch.
7. Reinstall door switches and bracket and screws.

8. Test door switch activation / operation as indicated in the diagnostic checks.
9. If the door switch assembly requires adjustment, position the door to the full close position. Loosen the assembly mount screws just enough to set the switch striker arm rollers at a position where there is no pressure on the rollers at either cam surface.
10. At that point, tighten the switch assembly bracket screws.
11. Run the door position diagnostic check again.

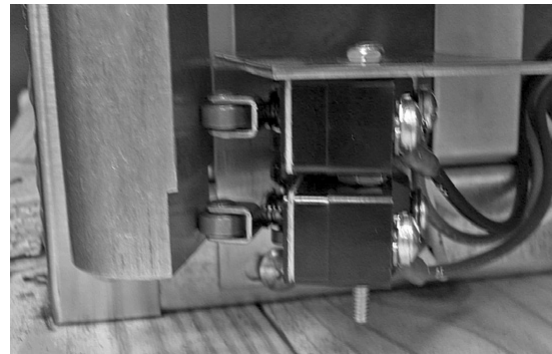

Oven Temperature Probe Service/Removal

The probe is located on the interior RIGHT rear side of the oven cavity.

1. To first gain access to the temperature probe, remove the oven racks, rack support guides and baffle plate. Remove the 2 screws holding the probe in place. DO NOT REMOVE THE PROBE at this point.
2. Remove the 2 screws holding the probe in place.
3. DO NOT REMOVE THE PROBE at this point.

Note: The wires for the probe are located behind the RIGHT side panel.



SERVICE PROCEDURES (REMOVAL/REPLACEMENT)

4. To gain access, remove the screws holding the panel in place.
5. Pull the panel towards the back of the oven to remove.
6. Cavity probe is located ABOVE and to the RIGHT of the cavity motor.
7. Disconnect the 2 BROWN probe wires at the temperature probe.
8. The probe can now be removed from inside the oven.
9. Reinstall the replacement probe in reverse manner.



Door To Cavity Seal Adjustments


1. Close the door, and determine the area (s) of air leakage. (Use of a dollar bill between the door, and cavity seal, is a sufficient reference.)
2. Open the door and move upper, and lower, BA plate hold down counter sunk screws.
3. Position the door rod upper, and lower, BA plates to increase, or decrease, pressure on the cavity seal, where needed. (Refer to figures 1, and 2,)

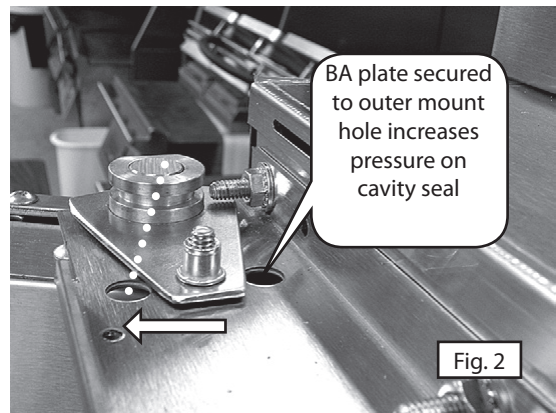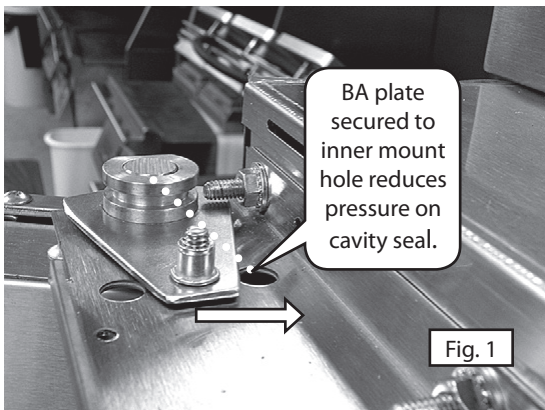

RH Door Frame To Cavity Seal Adjustment

The RH door frame to cavity seal pressure can be increased or decreased, by adjustment of the handle latch engagement hook tension before the door handle locks closed.

Loosen the small set screw, position the handle hook target in or out, and test for effect. Once the proper secure the target set screw.

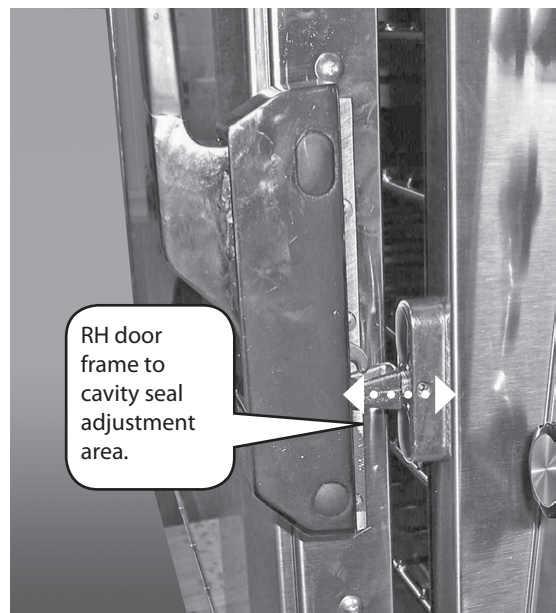




Section Three – Parts List



moisture+TM

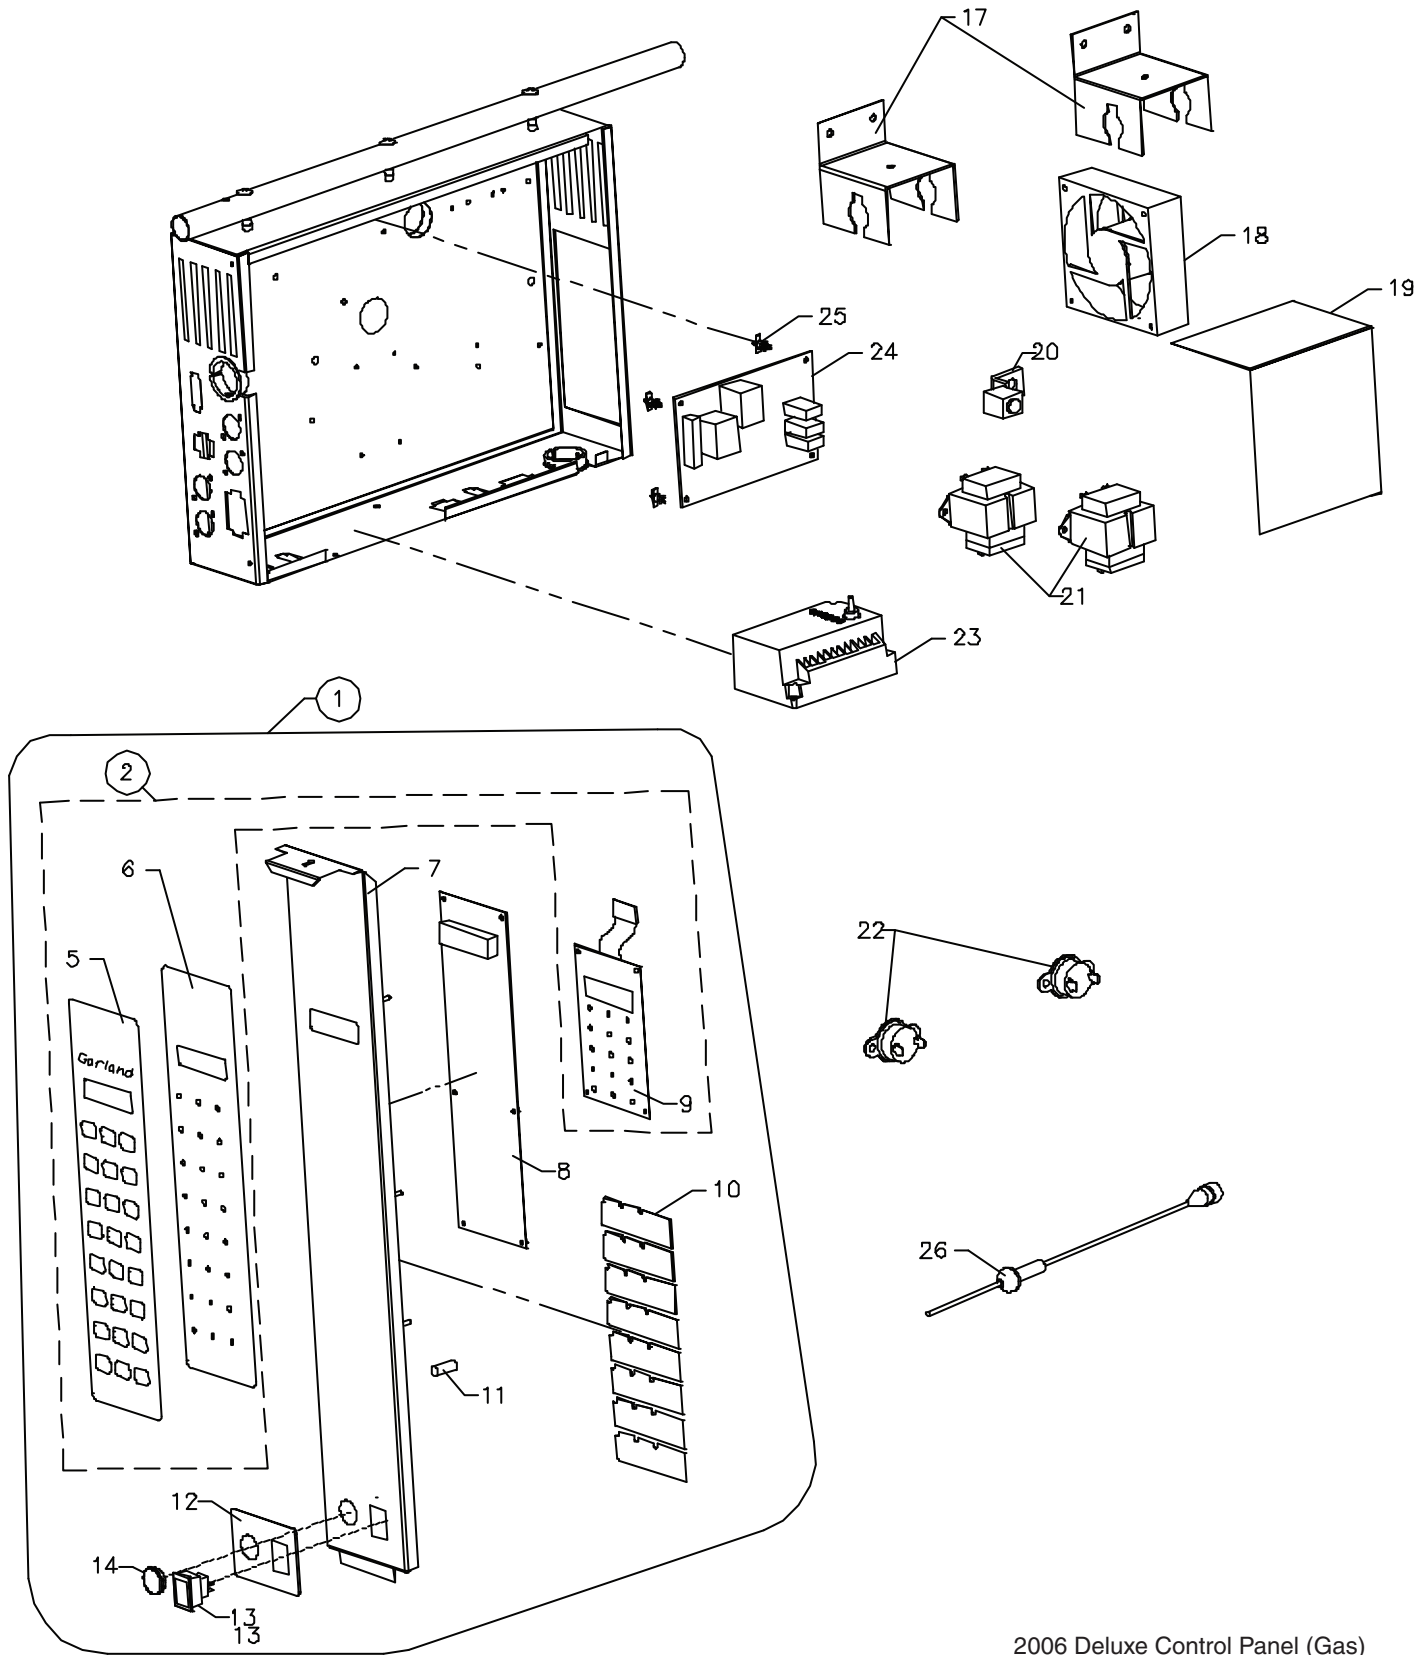

2006 Deluxe Control Panel (Gas)


GARLAND PARTS IDENTIFICATION
Electronic Deluxe Control Panel (Gas)

ITEM	PART #	DESCRIPTION	QUANTITY
1	4521282	Kit Panel, Elec 475+ Ctrl Gas (Complete Assembly) Included Items; 2, 7,8,10,11,12,13,14	1
2	4522757	Kit - Panel & Overlay - 475+ Control Included Items; 5,6,9	1
5	4521366	Overlay - M+ General Market	1
6	4521283	B/A Panel - Control Mounting	1
7	4521281	W/A Panel - Electronic Control M+	1
8	4521634	PCB, 475+ Programmable Control	1
9	—	Membrane - Not Sold Separately	
10	4521365	Underlay Card-M+ General Market	1
11	1955703	Standoff - Nylon 1/4 Dia 9/16 Long	6
12	4521586	Overlay Gas Regulator	1
13	4521566	Switch, 4A 125V Recessed Rocker	1
14	4521675	Snap Bushing, Solid .875 MTG Hole	1
17	4521671	Bracket, Control Box Slide	2
18	1918201	Fan - 110mm, 115V	1
19	4521672	Cover, Rear Electrical	1
20	1028402	Ground Lug	1
21	4521630	Transformer, 120/240V - 24V 40VA	2
22	1955101	Switch-Thermal Disc, Cooling	2
23	4521585	Ignition Module, DSI G760BAD-1	1
24	1933801	Pcb-relay Board Assembly	1
25	1767901	Nylon PCB Spacer	4
26	1935001	Core Probe	1
30*	1935002	Wire Harness For Core Probe	1

* NOT ILLUSTRATED

RECOMMENDED STOCK PARTS

(MECHANICAL CONTROL)

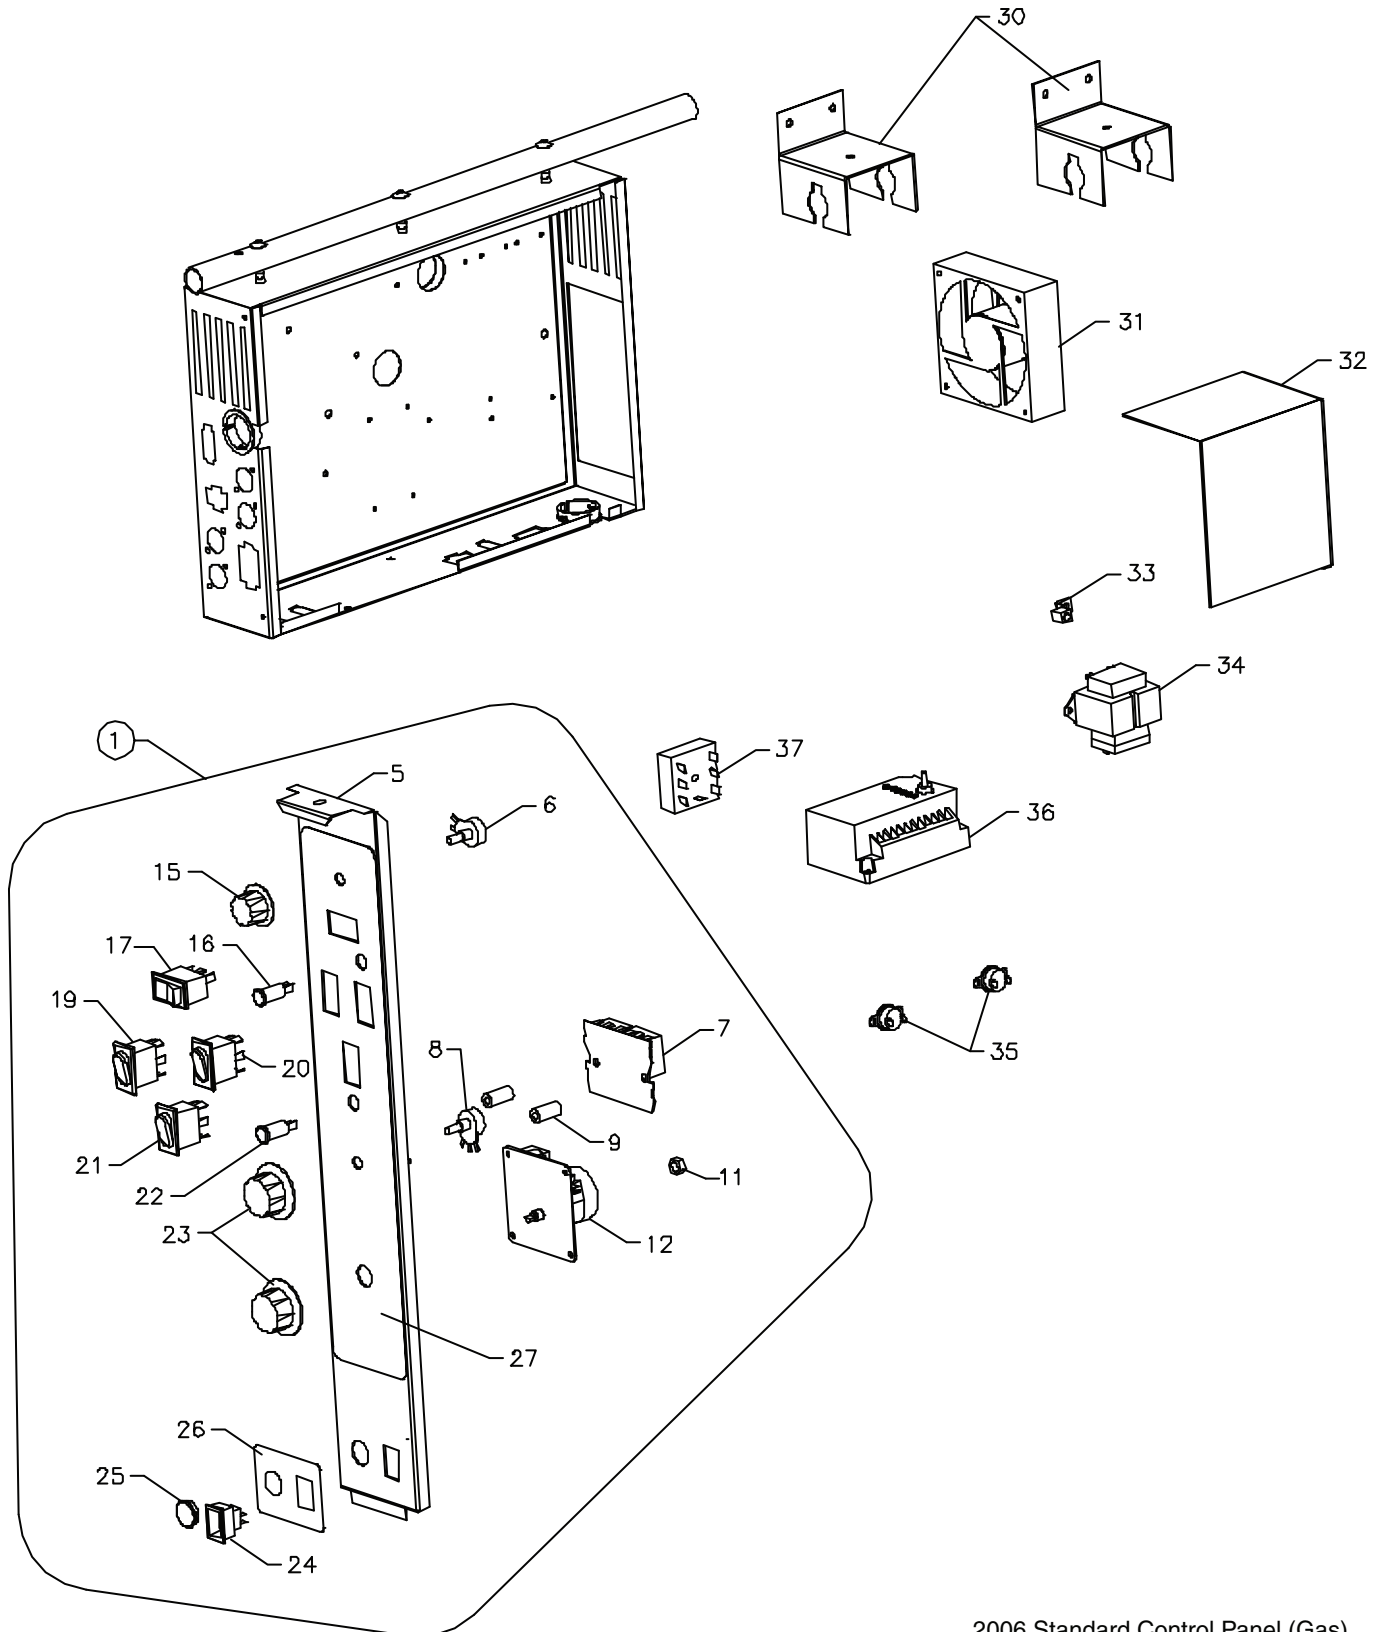


2006 Standard Control Panel (Gas)

GARLAND PARTS IDENTIFICATION
Standard Control Panel (Mechanical Control)

ITEM	PART #	DESCRIPTION	QUANTITY	UP TO	FROM
1A	4522831	Kit Mech Ctrl Panel 3 Hr Timer Gas Included Items: 5,6,7,8,9,10,11,12a,15,16,17,19,20,21,22, 23,24,25,26,27a	1	March-07	
1B	4521284	B/A Panel Assy - Mech 200 Ctrl (1) Hr Timer Gas Included Items: 5,6,7,8,9,10,11,12b,15,16,17,19,20,21,22 ,23,24,25,26,27b			March 07
5	4521286	Panel Stud Assy, Mech Control 200	1		
6	1792901	Potentiometer, 2.5 Meg	1		
7	1955501	Pcb - Im2000, 150-500 Deg F	1		
8	1955601	Potentiometer-im200 150-500deg	1		
9	1955701	Standoff-nylon, 1/4 X 1/2 X 1	2		
10*	1955801	Washer - Teflon	2		
11	8001502	Nut - W/lock Washer 6-32 Rep2p	2		
12A	1956011	Timer-3 Hr, 115v W/Alarm	1	March-07	
12B	1956001	Timer 1hr, 115v W/Alarm	1		March-07
15	1765803	Knob-fluted, 1 Screw 1.5 Dia	1		
16	1936101	Indicator Lamp-green, 120v	1		
17	1935301	Switch-rocker, ON-OFF-ON	1		
19	1955402	Switch-rocker, DPDT ON-ON	1		
20	1955401	Switch-rocker, DPDT ON-OFF-ON	1		
21	1955403	Switch-rocker, SPSt Momentary	1		
22	1936103	Indicator Lamp-Amber 28v	1		
23	1765802	Fluted Knob W(2) Set Screws	2		
24	4521566	Switch, 4A 125V Recessed Rocker	1		
25	4521675	Snap Bushing, Solid .875 Mtg Hole	1		
26	4521586	Overlay - Gas Regulator	1		
27A	1933503	Overlay - Mech Control M+ W/3 Hr Timer Option	1	March-07	
27B	4521121	Overlay - Mech Control M+ W/1 Hr Timer Option	1		March-07
30	4521671	Bracket, Control Box Slide	2		
31	1918201	Fan - 110mm, 115V	1		
32	4521672	Cover, Rear Electrical	1		
33	1028402	Ground Lug	1		
34	4521630	Transformer, 120/240V - 24V 40VA	1		
35	1955101	Switch-thermal Disc, Cooling	2		
36	4521585	Ignition Module, Dsi G760BAD-1	1		
37	1936201	Recycling Timer, ON/OFF	1		

* NOT ILLUSTRATED

RECOMMENDED STOCK PARTS

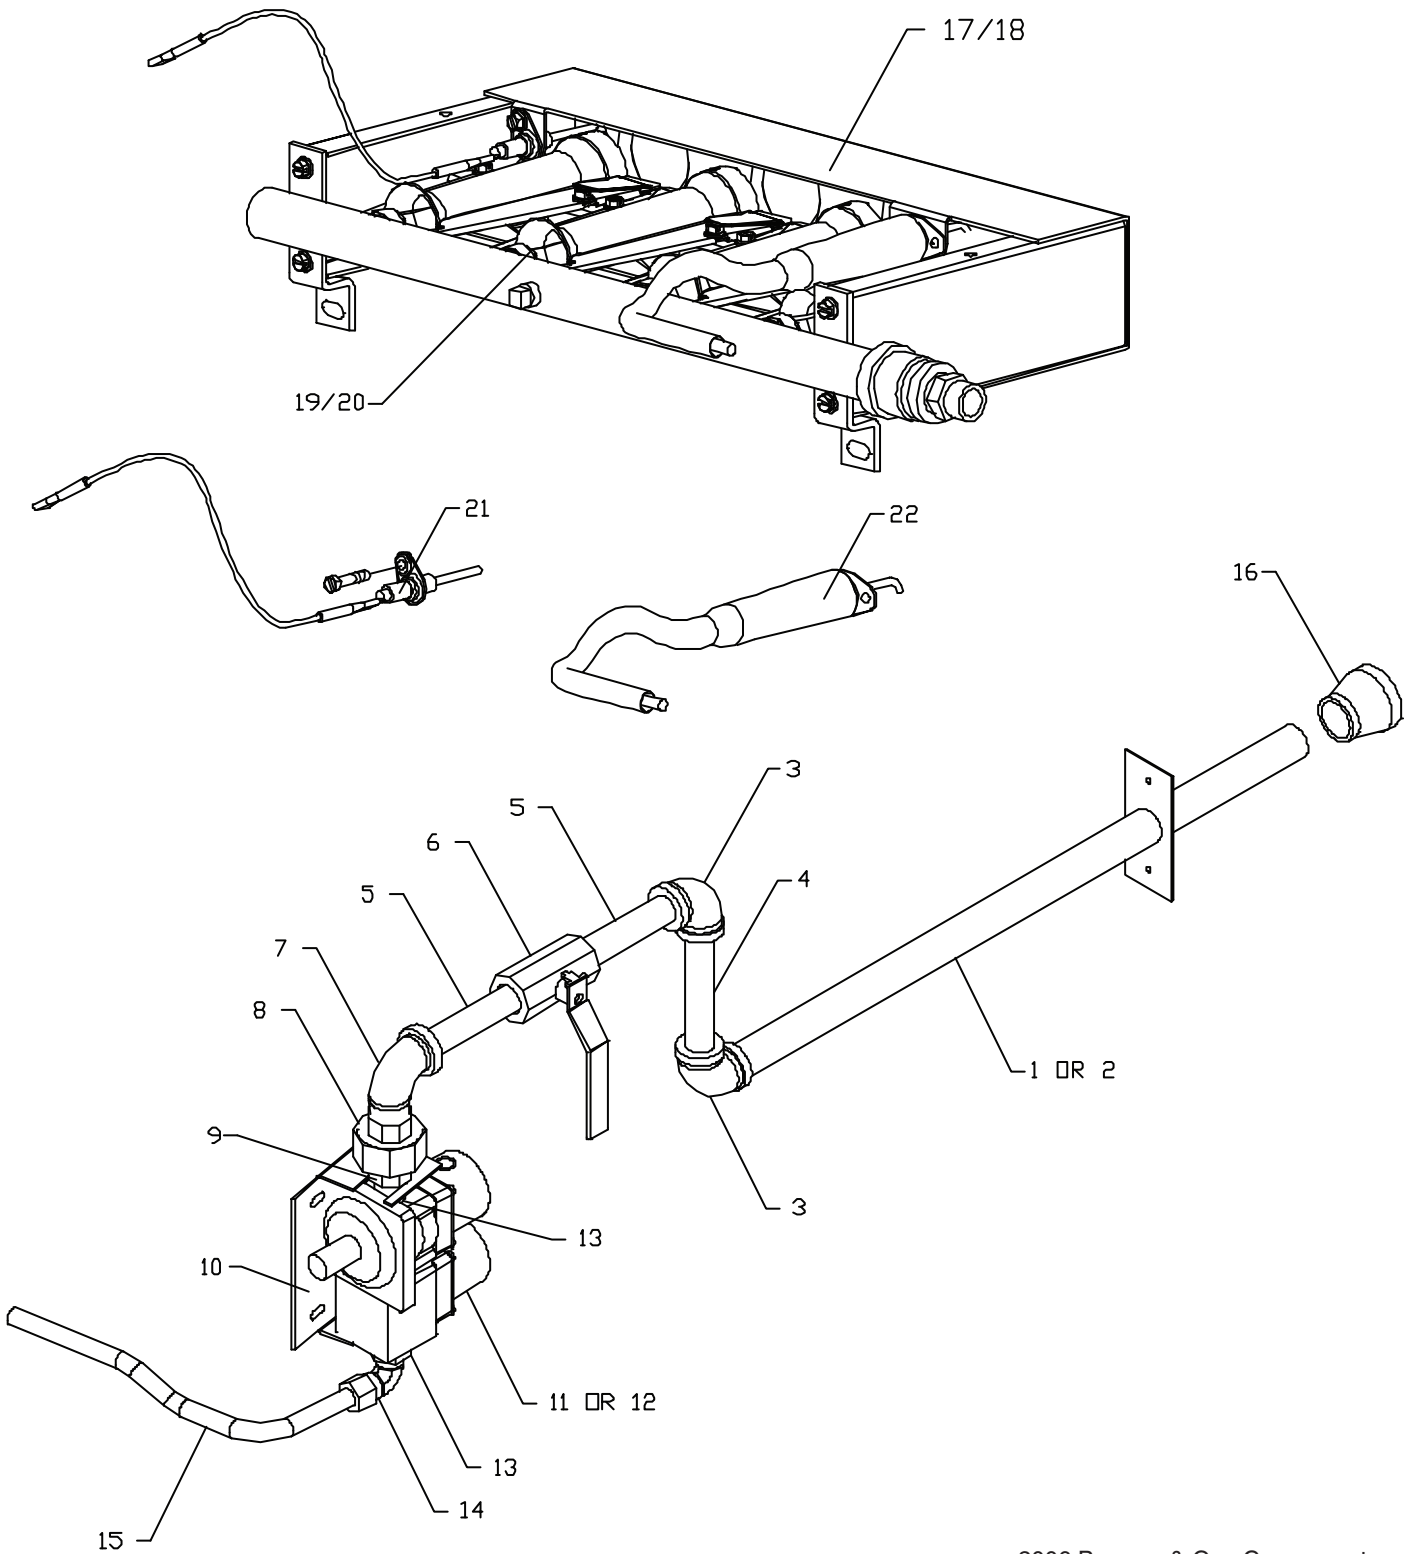

2006 Burners & Gas Components


GARLAND PARTS IDENTIFICATION

Burner & Gas Components

ITEM	PART #	DESCRIPTION	QUANTITY
1	1916199	W/A Tail Pipe - Standard	1
2	1916198	W/A Tail Pipe - Deep	1
3	1026703	1/2 X 90 Degree Elbow	2
4	1004646	Short Nipple 1/2 NPT X 4	1
5	1004645	Short Nipple 1/2 NPT X 3-1/2	2
6	4521708	Valve, Ball Shutoff 1/2" NPT	1
7	1026733	1/2 NPT Street Elbow 90 Deg	1
8	1026903	Union 1/2 NPT - Raw	1
9	1004640	Close Nipple 1/2 NPT X 1	1
10	4520691	Bracket, Gas Valve Mtg	1
11	1754901	Valve - Basotrol Dual (G96) Nat Gas	1
12	1754902	Valve - Basotrol Dual (G96) LP Gas	1
13	1038401	Hex Seal Bushing 1/2 X 3/8	1
14	1027499	Male Connector Assy 3/8 X 7/16	1
15	4521715	Tubing, Gas Valve To Manifold	1
16	1004849	Bell Reducer - 3/4 NPT To 1/2 NPT	1
17	4521463	Burner Pack, DSI MP 80k Nat	1
18	4521465	Burner Pack, DSI MP 60k LP Converted	1
19	4521466-03	Orifice, DSI MP 80k Natural #46	4
20	4521466-02	Orifice, DSI MP 60k LP #55	4
21	4523415	Pilot - DSI Burner Pack	1
22	4523414	Igniter, DSI Burner Pack	1

* NOT ILLUSTRATED

RECOMMENDED STOCK PARTS

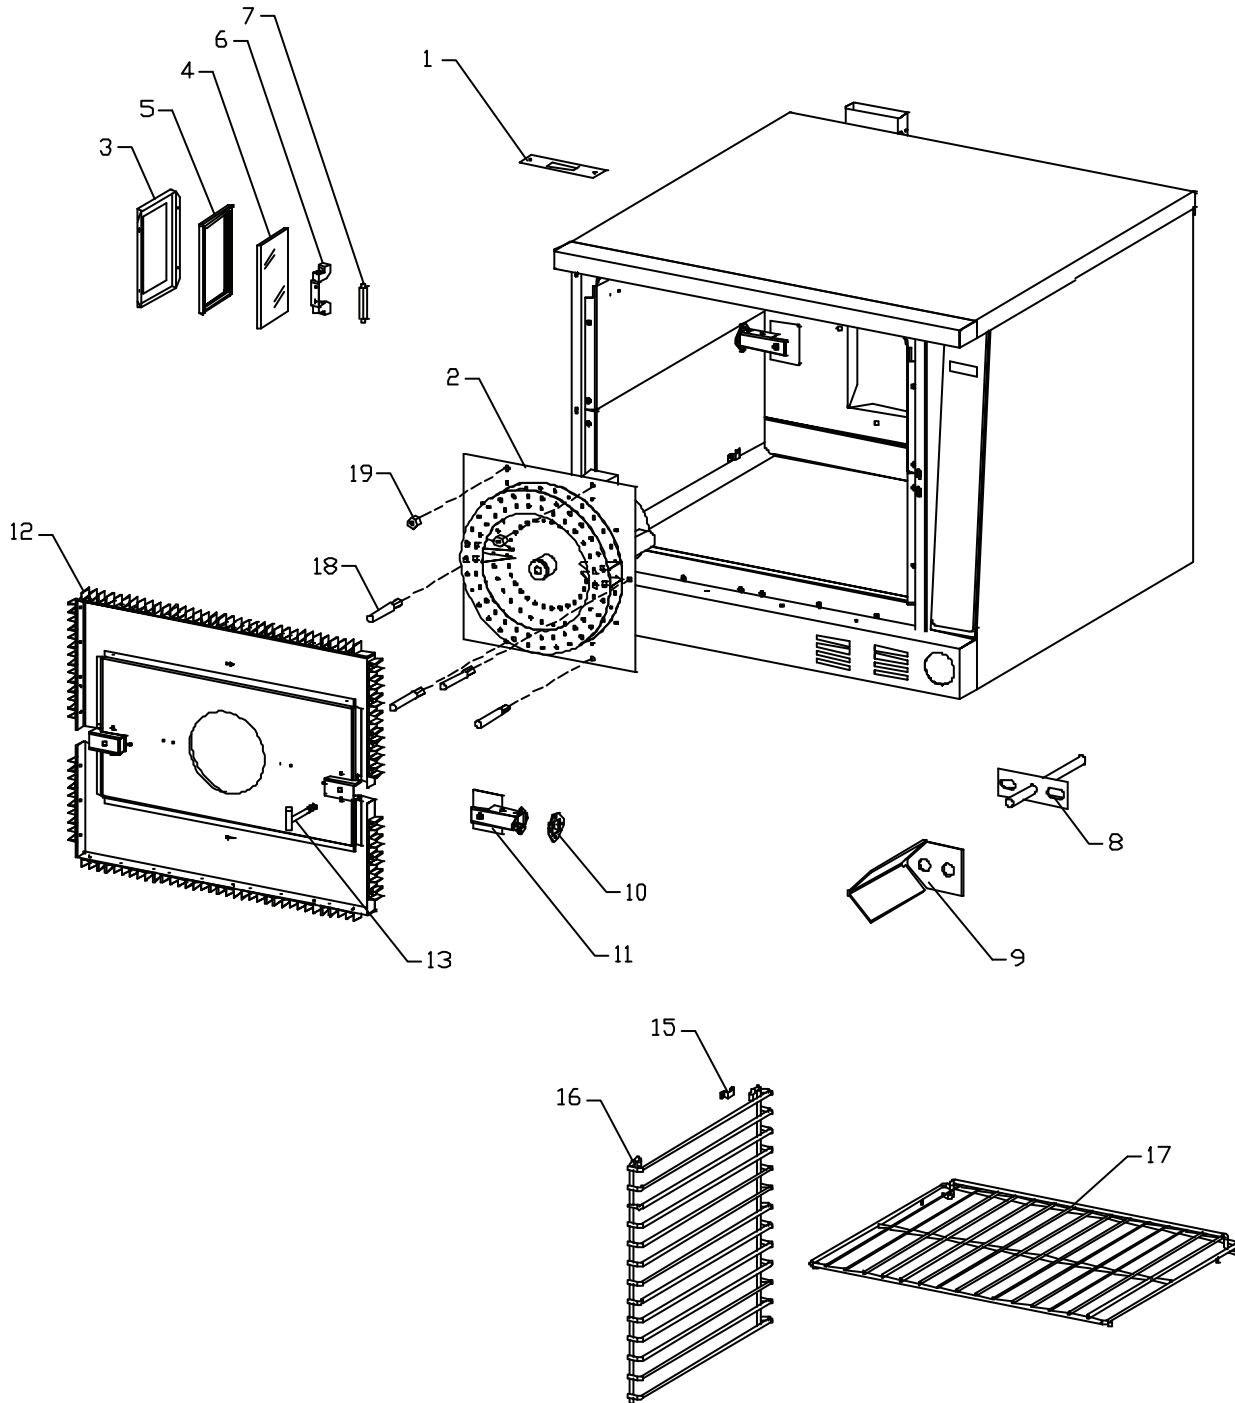

Revised_Interior Componets Gas



GARLAND PARTS IDENTIFICATION

Interior Components - Gas

ITEM	PART #	DESCRIPTION	QUANTITY
1	1784302	Oven Vent Cap – 60K BTU Propane Gas	1
2	4518320	Motor Assembly – 208/240 Volt	1
	4518319	Motor Assembly – 120 Volt	1
	Motor or Motor Wheel Not Available Separately		
3	4521019	Frame, Light Box Cover	1
4	1676901	Glass – Duplate	1
5	4521022	Gasket – Light Glass	1
6	1025801	Socket Lamp, R7S	1
7	1623901	Lamp – 100 Watt, 120 Volt	1
	1623902	Lamp – 100 Watt, 208/240 Volt	1
8	1906002	Probe – Flange Mount	1
8A*	1906003	Probe Extension Cable	1
9	1933407	Bracket – Probe Shield	1
10	1930203	Restrictor Plate – 60K BTU Propane Gas	2
11	1930298	Duct Assembly	2
12	1930199	Fan Cover Assembly	1
13	4521648	Fastener, Baffle T-Bolt	2
14*	1014500	Blower Inlet Cover	1
15	1765212	Rack Guide Clip	8
16	1922101	Rack Guide – 13 Position, Standard	2
	1922102	Rack Guide – 13 Position, Deep	2
17	1922211	Oven Rack – Standard	6
	1922212	Oven Rack – Deep	6
18	4520295	Baffle Spacer S/S (2-3/4")	4
19	1935906	Nut-Hex S/S 1/4"-20	2

* NOT ILLUSTRATED

RECOMMENDED STOCK PARTS

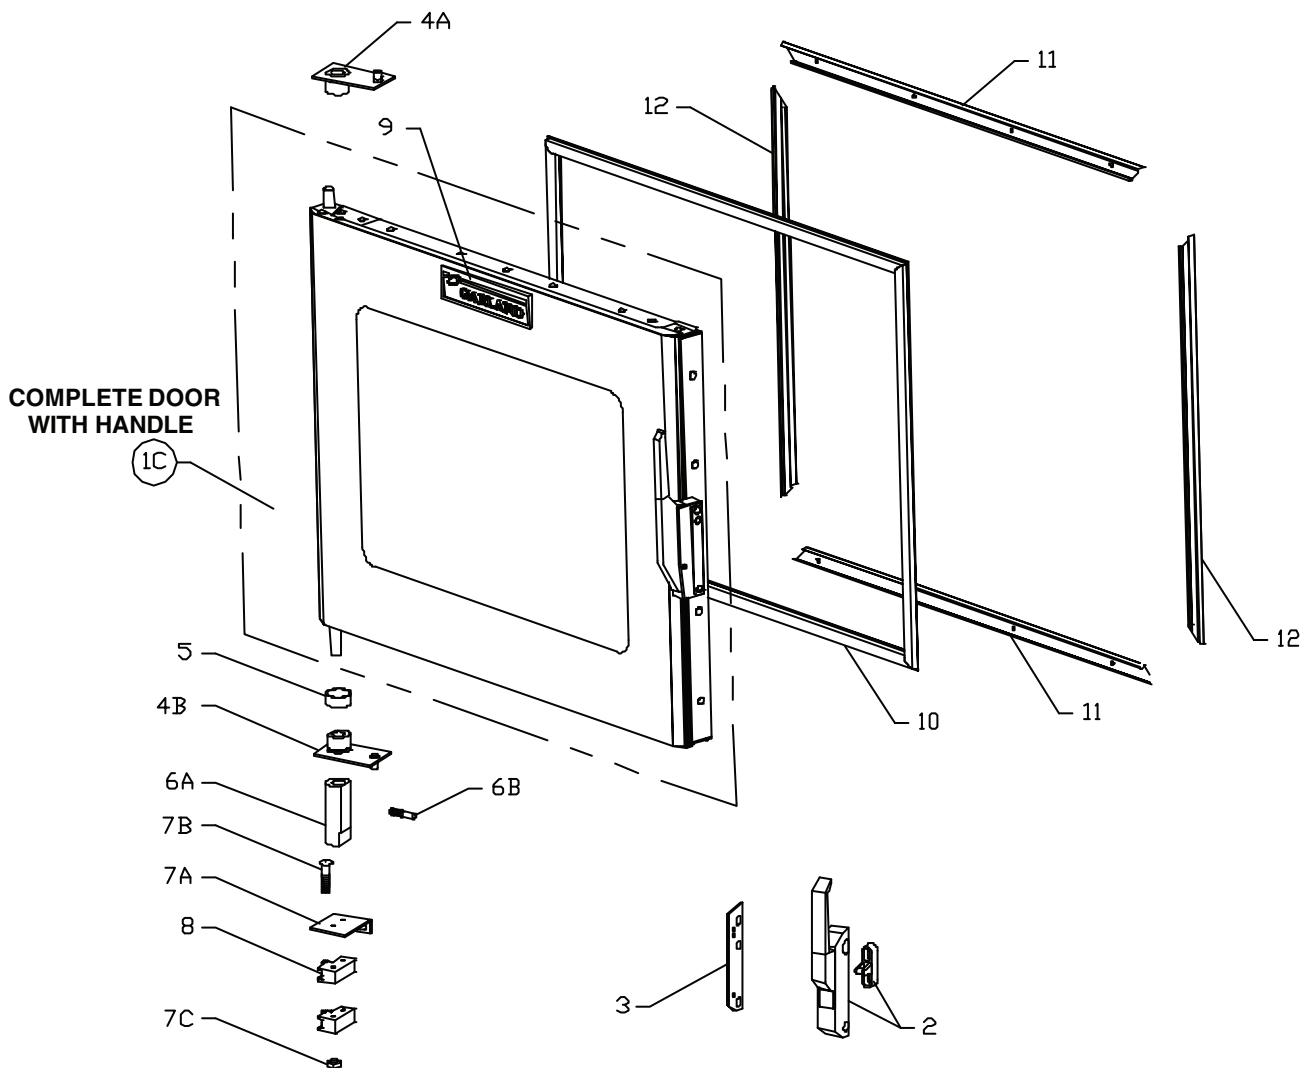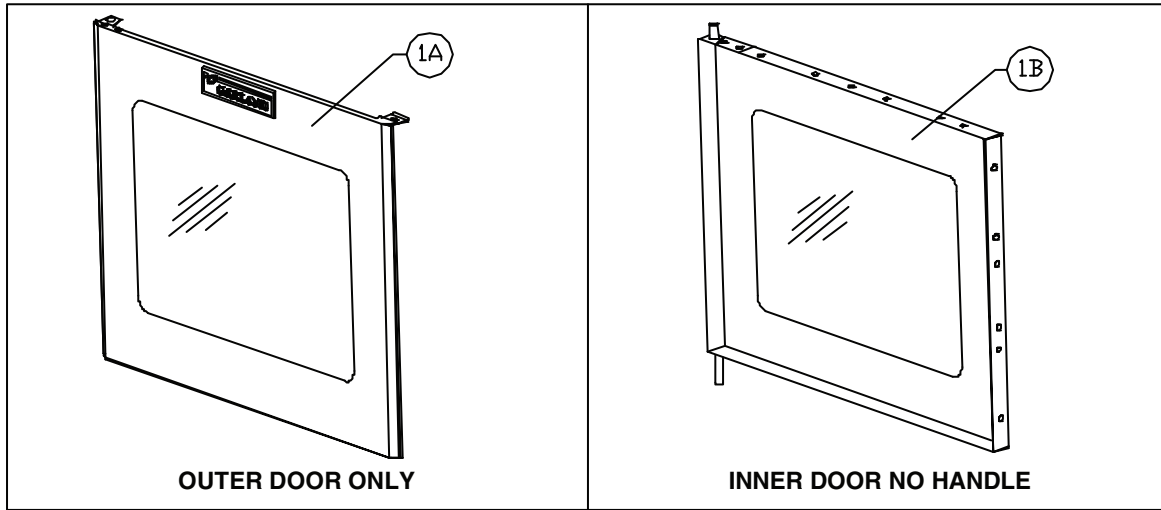


2006 Door Components (Gas)

GARLAND PARTS IDENTIFICATION

Door Components

ITEM	PART #	DESCRIPTION	QTY	UP TO	FROM
1A	4522138	Outer Door Assembly	1		
1B	4522755	Kit Mp Inner Door Without Handle	1		
1C	4522331	Door Assembly W/window - Mechanical Handle	1		July-06
2	1936301	Handle Door Edgemount M+ Complete W/Catch	1		
2A	4522371	Kit - Magnetic To Mechanical Door Handle	1		
	Note: Magnetic Handle P/N 4521255 NLA. M+ Units Manufactured With The Magnetic Handle Will Require Kit P/N 4522371				
3	4522136	Spacer, MP Mechanical Handle	1		
4A	4520808	B/a Plate, Door Bushing MP Top	1		
4B	4520809	B/a Plate, Door Bushing MP Bottom	1		
5	1923201	Decorative Ring	1		
6A	1925101	Cam – Door Switch	1		
6B	8003802	Set Screw 10-24 X 3/8	2		
7A	4516133	Bracket – Door Switches M+	1		
7B	8003212	MSCR -PH-PHIL 6-32 X 1-1/2" STL 2P	4		
7C	8001502	Nut W/washer 6-32-KEP	4		
8A	1855603	Door Switch – 1 Amp Deluxe Gas Oven - Control Series (Electronic Controls)	2		
8B	4519715	Door Switch – 15 Amp Standard Gas Oven - Control Series (Mech Controls)	2		
9	3077100	Nameplate - Garland 7-3/8"	1		
10	4521561	Gasket, MP Door Seal	1		
11	4521381	Door Gasket Frame - Top & Bottom	2		
12	4521382	Door Gasket Frame - Sides LT/RT	2		
* NOT ILLUSTRATED					
RECOMMENDED STOCK PARTS					

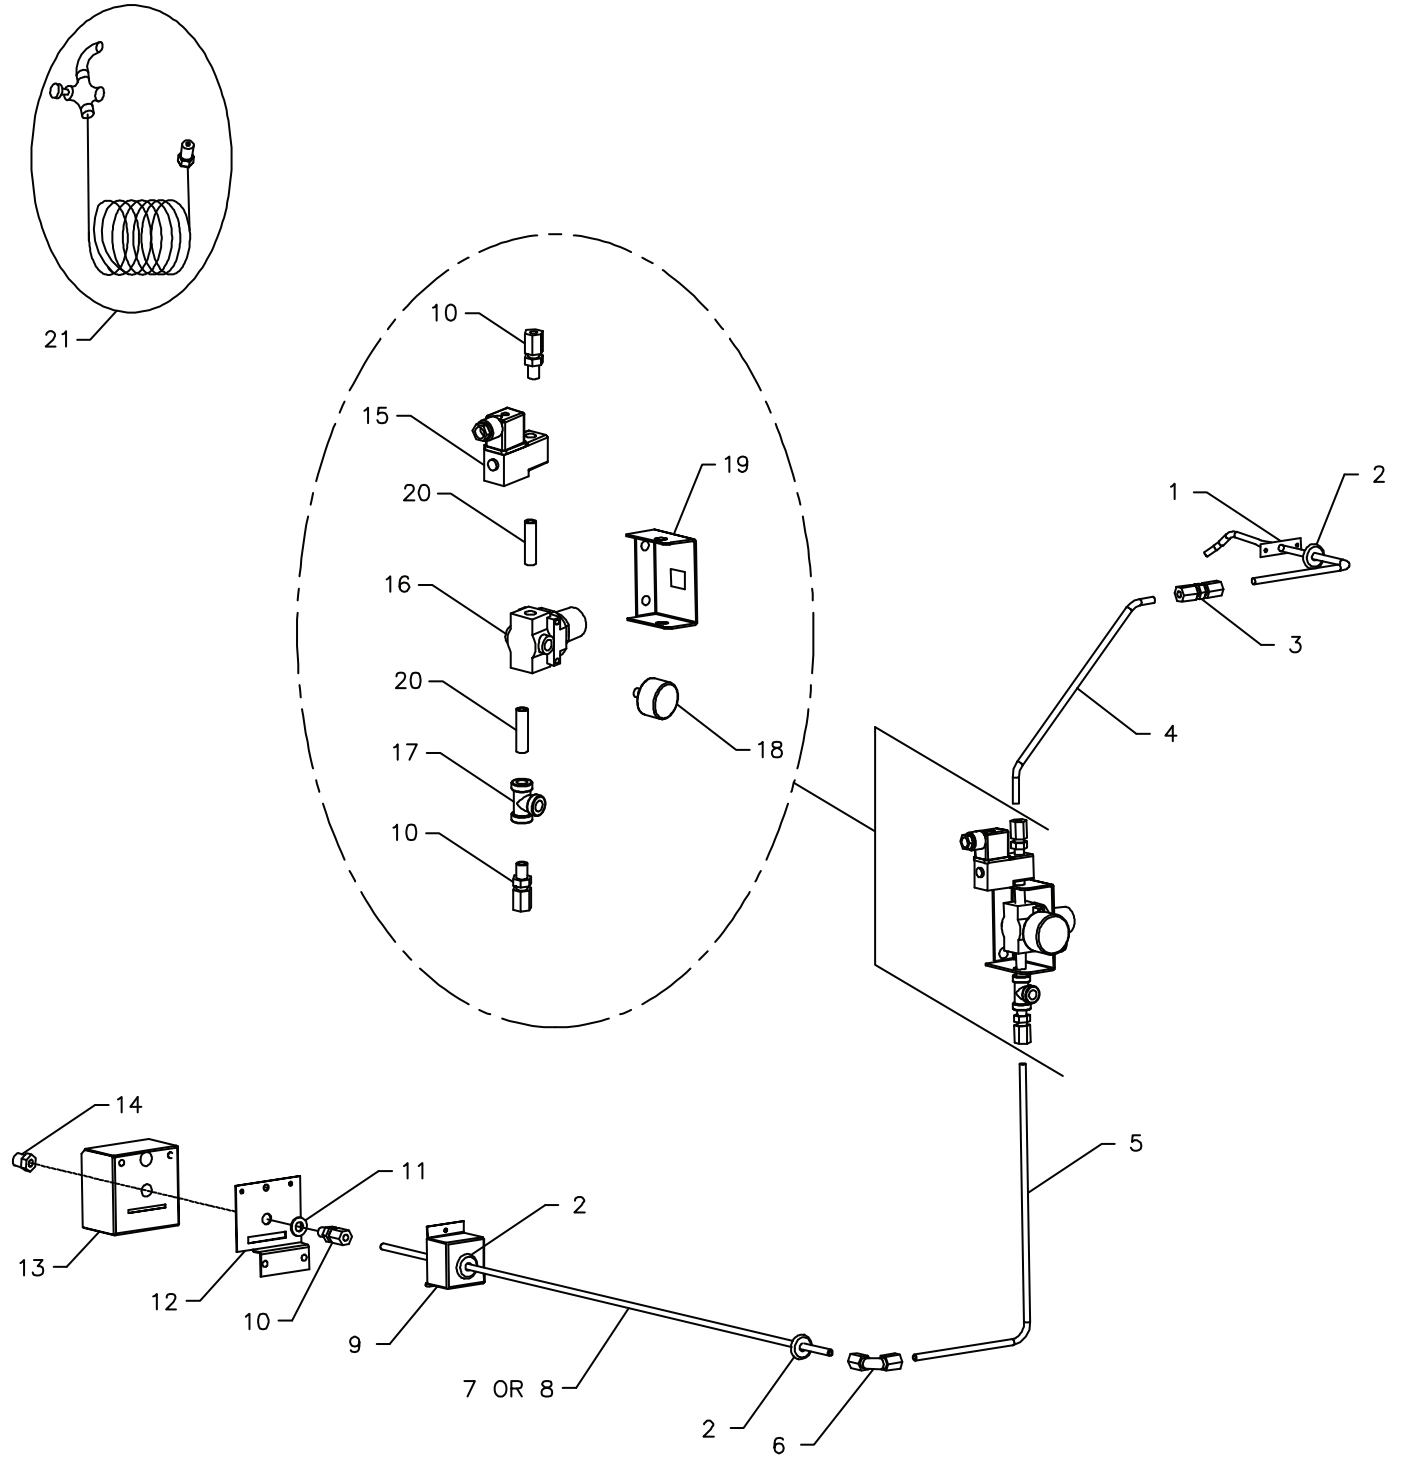

Revised_Plumbing Components (Gas)


GARLAND PARTS IDENTIFICATION

Plumbing Components (Gas)

ITEM	PART #	DESCRIPTION	QUANTITY
1	4521609	W/A Tubing Cavity Spritz	1
2	4517477	Grommet, H2O Line .313 IDX1 OD	3
3	1934903	Fitting-CC To CC, 1/4 SS	1
4	1934302	Tubing-moisture, Valve-cavity	1
5	4521608	Tubing, Rinse Water Rear	1
6	1934801	Fitting-Elbow, 1/8 NPT SS	1
7	1934311	Tubing, Water Rinse Front Std (Standard Only)	1
8	1934312	Tubing, Water Rinse Front Deep (Deep Only)	1
9	1933411	Cover, Water Connection	1
10	1934901	Fitting-1/8 NPT-CC SS	3
11	8000310	Washer-flat 3/8 X 1 STL ZP	1
12	1933411	Cover, Water Connection	1
13	1933413	Enclosure, Quick Disconnect	1
14	4517930	Bushing, .25INM x .125INF 300 SS	1
15	1934401	Solenoid	1
16	1934501	Valve-regulator	1
17	1935203	Fitting-1/8 NPT Tee, SS	1
18	1934502	Pressure Guage	1
19	1933412	Bracket, Water Solenoid	1
20	1935201	Fitting-1/8NPT 1-1/2 Nipple SS	2
21	4517543	Spray Valve Assy W/10ft	1

* NOT ILLUSTRATED

RECOMMENDED STOCK PARTS

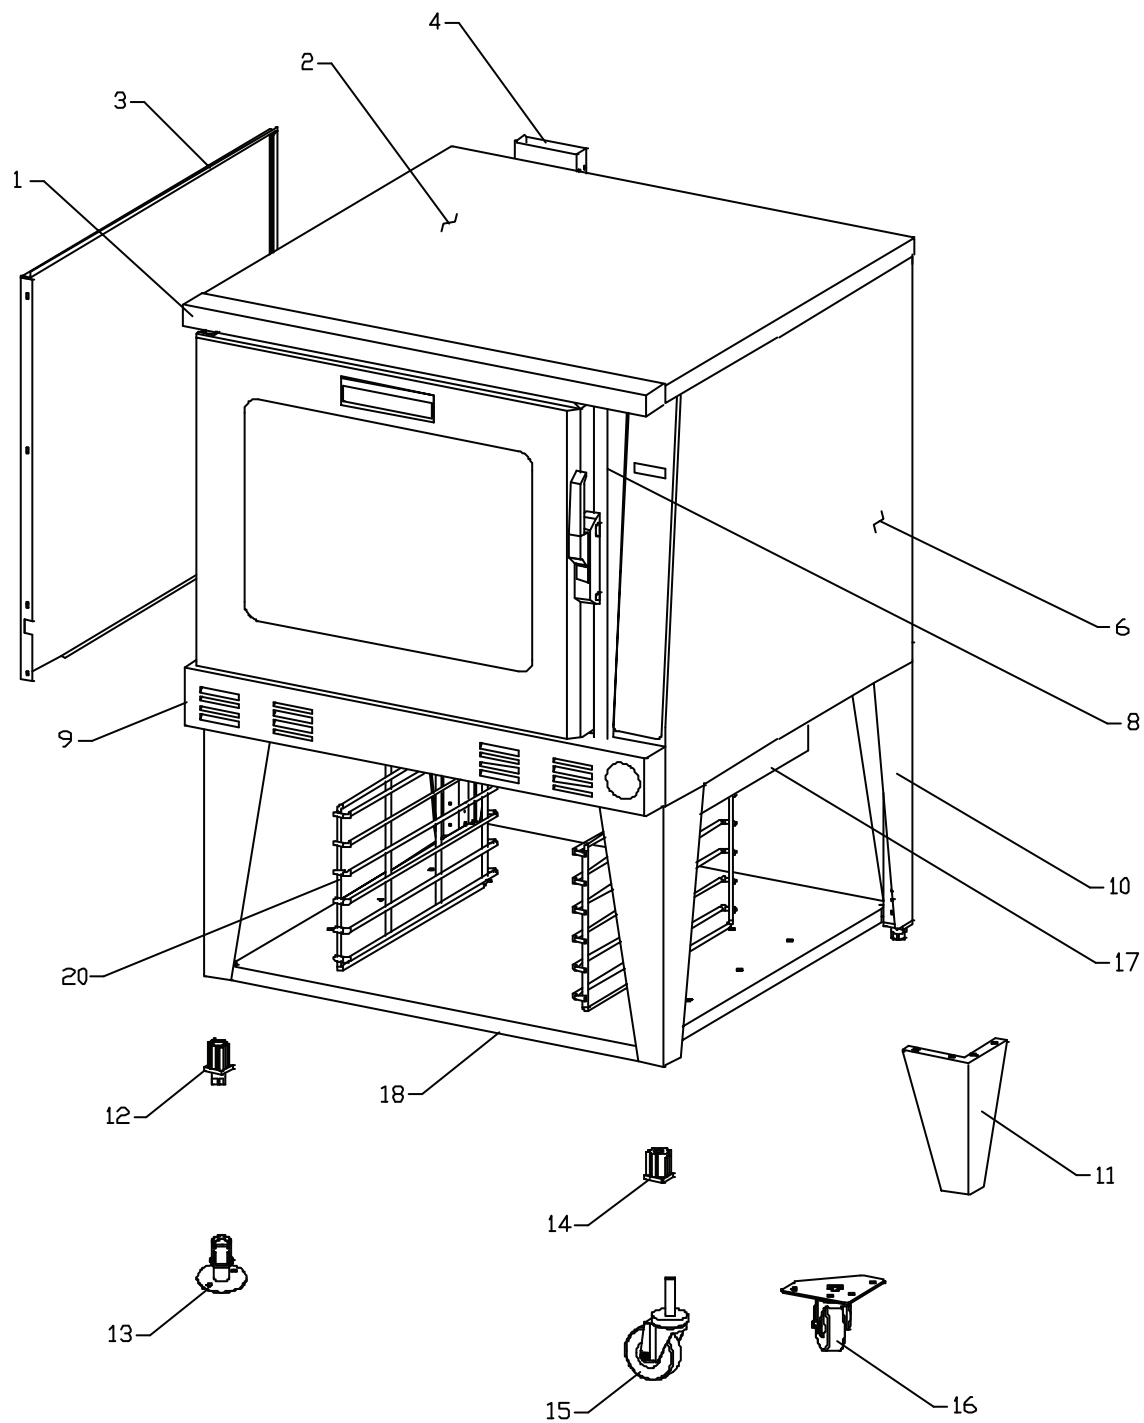

Revised_Exterior Components (Gas)

GARLAND PARTS IDENTIFICATION

Main Exterior

ITEM	PART #	DESCRIPTION	QUANTITY
1	1925301	Cover – Upper Trim	1
2	1920002	Cover – Main Top	1
3	1920201	Cover – Body Side, Left	1
4	1936999	Outer Vent Assembly	1
6	4521061	Cover – Body Side, Right	1
8	1931801	Cover – Control Panel Left	1
9	4520867	Cover – Lower Trim (Hose Option)	1
	4520866	Cover – Lower Trim (No Hose Option)	1
10	1927199	Leg – Caster	4
	1927197	Leg – Foot Insert	4
11	1927195	Leg – Double Deck	4
12	1236100	Foot Insert	4
13	1949701	Foot Insert – Flanged	4
14	1775102	Caster Insert	4
15	1926501	Caster – 4" (Screw In)	2
	1926502	Caster – 4" With Brake (Screw In)	2
16	1926521	Lo Profile Caster 3" (Bolts To Base)	2
	1926522	Lo Profile Caster With Brake 3" (Bolts To Base)	2
	1926531	Heavy Duty Caster 5" (Bolts To Base)	2
	1926532	Heavy Duty Caster With Brake 5" (Bolts To Base)	2
17	1926802	Bracket – Upper Support	1
18	1927002	Panel – Lower Support	1
19*	1927101	Bracket – Lower Support (Not Shown)	4
20	1926902	Rack Guide	2

Stacking Kit listed below for two Moisture + Ovens or Moisture + w/MCO Ovens			
21*	1937523	Kit-Stack Gas SS Legs & Feet	
	1937526	Kit-Stack Gas Casters	
	1937528	Kit-Stack Gas Lo Profile	

* NOT ILLUSTRATED

RECOMMENDED STOCK PARTS

GARLAND PARTS IDENTIFICATION

Wire Diagrams & Harnesses

PART #	DESCRIPTION	Model
Wire Diagrams		
4521570	W/D 115V 60HZ Gas Mech Control	Standard
4521571	W/D 115V 60HZ Gas Fast Control	Deluxe

Wire Harness		
1935002	W/H - Core Probe	Deluxe
1936074	W/H - Door Switches, Mech	Standard
1936076	W/H - Relay Board To Control	Deluxe
4521642	W/H Lights	Standard/Deluxe
4521645	W/H Door Switches Electronic	Deluxe
4521574	W/H Main Wiring 115V Gas	Standard/deluxe
4521575	W/H Relay Card	Standard
4521576	W/H Solenoid	Standard/Deluxe
4521640	W/H Water Control 200 Control	Standard
4521854	W/H Control Panel Mech	Standard

* NOT ILLUSTRATED

RECOMMENDED STOCK PARTS



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>