









# How to use your **FlushIQ™**


## Sensor Display Alerts

-  **Blue**  
Normal operation-toilet is performing a flush/fill cycle.
-  **Yellow**  
Leak detected.
-  **Flashing Yellow**  
Leak detected. (Tank fill failure.)
-  **Flashing Red & Blue**  
Overflow level detected. Toilet will not flush.
-  **Flashing Red**  
Low battery indication.
-  **Flashing Blue**  
Toilet is in sleep mode. Toilet will not flush.

## How to Change the Batteries


### AA Batteries

Remove lid by twisting latch ① and pulling. Install 4 "AA" batteries in orientation shown.

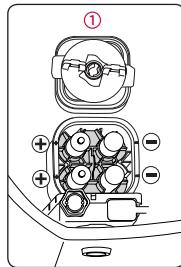

### C Batteries


Remove box lid ① and adapter ② to install "C" batteries for longer battery life. Reinstall lid.

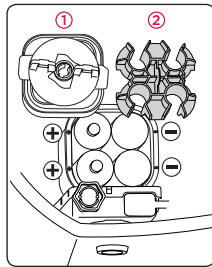

Note: Positive terminals are to the left and negative terminals are to the right.

## How to Flush Manually

Lift off tank lid and push down on the red, manual flush rod ①. The tank will not automatically refill after manual flush.

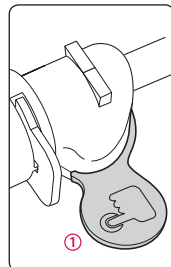

## Sleep Mode

### To enter Sleep Mode:

Touch sensor for 7 seconds. (Toilet will not flush while in sleep mode. Use for cleaning, etc.)

### To exit Sleep Mode:

Touch sensor for 7 seconds or wait for the 10 minute time out.

## Learn More about FlushIQ™

For more help visit [www.deltafaucet.com/toilet](http://www.deltafaucet.com/toilet). To find product information visit [www.deltatoilet.com/FlushIQ](http://www.deltatoilet.com/FlushIQ) or scan the QR code to automatically take you to our product videos.



76688 Rev. A

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>