PE03P-X-X-A0S

INCLUDING: OPERATION, INSTALLATION & MAINTENANCE

RELEASED: REVISED: (REV. 04)

6-7-06 5-14-10

3/8" DIAPHRAGM PUMP

1:1 RATIO, NON-METALLIC



READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS EQUIPMENT.

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

SERVICE KITS


Refer to Model Description Chart to match the pump material options. 637428 for air section repair (see page 6). 637429-XX for fluid section repair (see page 4).

PUMP DATA


Models see Model Description Chart for "-XXX".
Pump Type Air Operated Double Diaphragm.
Material see Model Description Chart.
Weight PE03P-XDS-XXX-A0S 3.74 lbs (1.70 kgs)
PE03P-XES-XXX-A0S 3.84 lbs (1.74 kgs)
PE03P-XKS-XXX-A0S 4.08 lbs (1.85 kgs)
PE03P-XLS-XXX-A0S 4.20 lbs (1.91 kgs)
PE03P-X <u>P</u> S-XXX-A0S 3.02 lbs (1.37 kgs)
PE03P-XRS-XXX-A0S 3.08 lbs (1.40 kgs)
_
Maximum Material Inlet Pressure 10 p.s.i.g. (0.69 bar)
Maximum Outlet Pressure 100 p.s.i.g. (6.9 bar)
Air Consumption @ 40 p.s.i 1 c.f.m. / gallon (approx.)
Maximum Flow Rate (flooded inlet) 10.6 g.p.m. (40.1 l.p.m.)
Displacement / Cycle @ 100 p.s.i 0.022 gallons (0.083 lit.)
Maximum Particle Size 1/16" dia. (1.6 mm)
Maximum Temperature Limits (diaphragm / ball / seat material)
Acetal
Hytrel®20° to 150° F (-29° to 66° C)
Polypropylene
Kynar® PVDF 10° to 200° F (-12 to 93° C)
Santoprene®40° to 225° F (-40° to 107° C)
PTFE 40° to 225° F (4° to 107° C)
Viton®40° to 350° F (-40° to 177° C)
Groundable Models PE03P-XDS-XXX-A0S
PE03P-XES-XXX-A0S
Dimensional Data see page 8
Noise Level @ 70 p.s.i., 60 c.p.m 72.7 db(A) ①

① The pump sound pressure levels published here have been updated to an Equivalent Continuous Sound Level (L_{Aeq}) to meet the intent of ANSI S1.13-1971, CAGI-PNEU-ROP S5.1 using four microphone locations.

NOTICE: All possible options are shown in the chart however certain combinations may not be recommended, consult a representative or the factory if you have questions concerning availability.

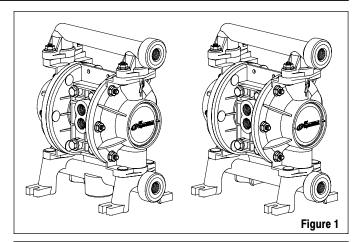

MODEL DESCRIPTION CHART

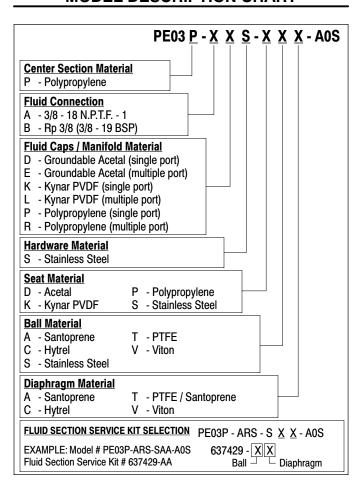

INGERSOLL RAND COMPANY LTD

209 NORTH MAIN STREET - BRYAN, OHIO 43506

©2010

CCN 15262421





OPERATING AND SAFETY PRECAUTIONS

READ. UNDERSTAND AND FOLLOW THIS INFORMATION TO AVOID INJURY AND PROPERTY DAMAGE.





WARNING EXCESSIVE AIR PRESSURE. Can cause personal injury, pump damage or property damage.

- Do not exceed the maximum inlet air pressure as stated on the pump model plate.
- Be sure material hoses and other components are able to withstand fluid pressures developed by this pump. Check all hoses for damage or wear. Be certain dispensing device is clean and in proper working condition.
- **WARNING** STATIC SPARK. Can cause explosion resulting in severe injury or death. Ground pump and pumping system.
- PE03P-XDS-XXX-A0S and PE03P-XES-XXX-A0S Groundable Acetal pumps: Use the pump ground lug provided. Connect to a 12 ga. (minimum) wire (kit is included) to a good earth ground source.
- Sparks can ignite flammable material and vapors.
- The pumping system and object being sprayed must be grounded when it is pumping, flushing, recirculating or spraying flammable materials such as paints, solvents, lacquers, etc. or used in a location where surrounding atmosphere is conducive to spontaneous combustion. Ground the dispensing valve or device, containers, hoses and any object to which material is being pumped.
- Secure pump, connections and all contact points to avoid vibration and generation of contact or static spark.
- Consult local building codes and electrical codes for specific grounding requirements.
- After grounding, periodically verify continuity of electrical path to ground. Test with an ohmmeter from each component (e.g., hoses, pump, clamps, container, spray gun, etc.) to ground to insure continuity. Ohmmeter should show 0.1 ohms or less.
- Submerse the outlet hose end, dispensing valve or device in the material being dispensed if possible. (Avoid free streaming of material being dispensed.)
- Use hoses incorporating a static wire.
- Use proper ventilation.
- Keep inflammables away from heat, open flames and sparks.
- Keep containers closed when not in use.
- **WARNING** Pump exhaust may contain contaminants. Can cause severe injury. Pipe exhaust away from work area and personnel.
- In the event of a diaphragm rupture material can be forced out of the air exhaust muffler.
- Pipe the exhaust to a safe remote location when pumping hazardous or inflammable materials.
- Use a grounded 3/8" minimum i.d. hose between the pump and the muffler.
- **WARNING** HAZARDOUS PRESSURE. Can result in serious injury or property damage. Do not service or clean pump, hoses or dispensing valve while the system is pressurized.
- Disconnect air supply line and relieve pressure from the system by opening dispensing valve or device and / or carefully and slowly loosening and removing outlet hose or piping from pump.
- **WARNING** HAZARDOUS MATERIALS. Can cause serious injury or property damage. Do not attempt to return a pump to the

- factory or service center that contains hazardous material. Safe handling practices must comply with local and national laws and safety code requirements.
- Obtain Material Safety Data Sheets on all materials from the supplier for proper handling instructions.
- **WARNING** EXPLOSION HAZARD. Models containing aluminum wetted parts cannot be used with 1,1,1-trichloroethane, methylene chloride or other halogenated hydrocarbon solvents which may react and explode.
- Check pump motor section, fluid caps, manifolds and all wetted parts to assure compatibility before using with solvents of this type.
- **⚠ CAUTION** Verify the chemical compatibility of the pump wetted parts and the substance being pumped, flushed or recirculated. Chemical compatibility may change with temperature and concentration of the chemical(s) within the substances being pumped, flushed or circulated. For specific fluid compatibility, consult the chemical manufacturer.
- **CAUTION** Maximum temperatures are based on mechanical stress only. Certain chemicals will significantly reduce maximum safe operating temperature. Consult the chemical manufacturer for chemical compatibility and temperature limits. Refer to Pump Data on page 1 of this manual.
- △ CAUTION Be certain all operators of this equipment have been trained for safe working practices, understand it's limitations, and wear safety goggles / equipment when required.
- △ CAUTION Do not use the pump for the structural support of the piping system. Be certain the system components are properly supported to prevent stress on the pump parts.
- Suction and discharge connections should be flexible connections (such as hose), not rigid piped, and should be compatible with the substance being pumped.
- **△ CAUTION** Prevent unnecessary damage to the pump. Do not allow pump to operate when out of material for long periods
- Disconnect air line from pump when system sits idle for long periods of time.
- **△ CAUTION** Use only genuine ARO replacement parts to assure compatible pressure rating and longest service life.
- Install the pump in the vertical position. The pump may not prime properly if the balls do not check by gravity upon start-up.
- NOTICE Re-torque all fasteners before operation. Creep of housing and gasket materials may cause fasteners to loosen. Re-torque all fasteners to insure against fluid or air leakage.
- Replacement warning labels are available upon request: "Static Spark" pn \ 93616-1, "Diaphragm Rupture" pn \ 93122.
- **WARNING** = Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.

CAUTION = Hazards or unsafe practices which could result in minor personal injury, product or property damage.

NOTICE

= Important installation, operation or maintenance information.

GENERAL DESCRIPTION

The ARO diaphragm pump offers high volume delivery even at low air pressure and a broad range of material compatibility options available. Refer to the model and option chart. ARO pumps feature stall resistant design, modular air motor / fluid sections.

Air operated double diaphragm pumps utilize a pressure differential in the air chambers to alternately create suction and positive fluid pressure in the fluid chambers, ball checks insure a positive flow of fluid.

Pump cycling will begin as air pressure is applied and it will continue to pump and keep up with the demand. It will build and maintain line pressure and will stop cycling once maximum line pressure is reached (dispensing device closed) and will resume pumping as needed.

AIR AND LUBE REQUIREMENTS

△WARNING EXCESSIVE AIR PRESSURE. Can cause pump damage, personal injury or property damage.

- A filter capable of filtering out particles larger than 50 microns should be used on the air supply. There is no lubrication required other than the "O" ring lubricant which is applied during assembly or repair.
- If lubricated air is present, make sure that it is compatible with the "O" rings and seals in the air motor section of the pump.


OPERATING INSTRUCTIONS

- Always flush the pump with a solvent compatible with the material being pumped if the material being pumped is subject to "setting up" when not in use for a period of time.
- Disconnect the air supply from the pump if it is to be inactive for a few hours.
- The outlet material volume is governed not only by the air supply but also by the material supply available at the inlet. The material supply tubing should not be too small or restrictive. Be sure not to use hose which might collapse.
- When the diaphragm pump is used in a forced-feed (flooded inlet) situation, it is recommended that a "Check Valve" be installed at the air inlet.
- Secure the diaphragm pump legs to a suitable surface to insure against damage by vibration.

MAINTENANCE

- Certain ARO "Smart Parts" are indicated which should be available for fast repair and reduction of down time.
- Provide a clean work surface to protect sensitive internal moving parts from contamination from dirt and foreign matter during service disassembly and reassembly.
- Keep good records of service activity and include pump in preventive maintenance program.
- Service Kits are available to service two separate Diaphragm Pump functions: 1. AIR SECTION, 2. FLUID SECTION. The Fluid Section is divided further to match typical active MATERIAL OPTIONS.

TYPICAL CROSS SECTION

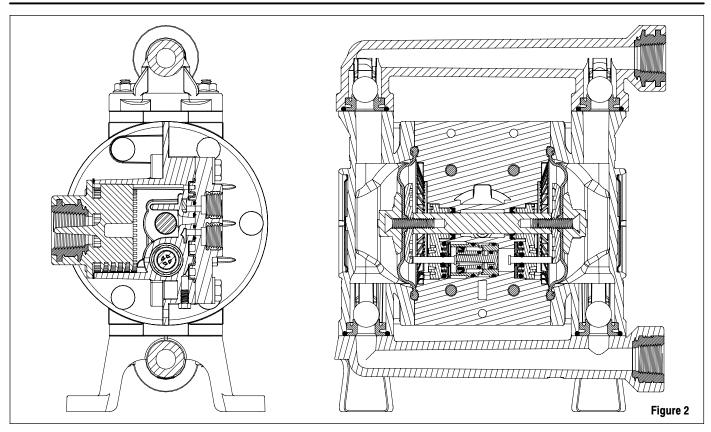

• Hytrel® and Viton® are registered trademarks of the DuPont Company • Kynar® is a registered trademark of Arkema Inc. •
Santoprene® is a registered trademark of Monsanto Company, licensed to Advanced Elastomer Systems, L.P. • Lubriplate® is a registered trademark of Lubriplate Division (Fiske Brothers Refining Company) •

PARTS LIST / PE03P-X-X-A0S FLUID SECTION

★ 637429-XX FLUID SECTION SERVICE KITS include: Balls (see BALL OPTION, refer to -XX in chart below), Diaphragms (See DIAPHRAGM OPTION, refer to -XX in chart below) and item 19 (listed below), plus items 144, 174 and 94276 Lubriplate® grease (page 6).

	SEAT OPT 03P-XXS-) "21"			BALL OPTIONS PE03P-XXS-X <u>X</u> X-A0S ★ "22" (5/8" o.d.)								
- <u>x</u> xx	Seat	Qty	[Mtl]	-X <u>X</u> X								
-DXX	96580-2	(4)	[D]	-XAX	96481-A	(4)	[Sp]		-ХТХ	96481-4	(4)	[T]
-кхх	96580-3	(4)	[K]	-XCX	96481-C	(4)	[H]		-XVX	96481-3	(4)	[V]
-РХХ	96580-1	(4)	[P]	-XSX	96513	(4)	[SS]					
-SXX	96537	(4)	[SS]									

0701	(.)									1	
DIAPHRAGM OPTIONS PE03P-XXS-XXX-A0S											
★ SERVICE KIT ★ "7" ★ "8" ★ "19"											
-XX <u>X</u>	-XX = (Ball) -XX = (Diaphragm)	Diaphragm	Qty	[Mtl]	Diaphragm	Qty	[Mti]	"O" Ring (3/32" x 1-1/8" o.d.)	Qty	[MtI]	
-XXA	637429-XA	96533-A	(2)	[Sp]				93761	(4)	[E]	
-XXC	637429-XC	96533-C	(2)	[H]				Y325-119	(4)	[B]	
-XXT	637429-XT	96538	(2)	[T]	96533-A	(2)	[Sp]	96514	(4)	[T]	
-XXV	637429-XV	96558	(2)	[V]				Y327-119	(4)	[V]	

MAT	ERIAL CODE
[A] =	Aluminum
[B] =	Nitrile
[D] =	Acetal
[E] =	E.P.R.
[GA] =	Groundable Acetal
[GFN] :	Glass Filled Nylon
[H] =	Hytrel
[K] =	Kynar PVDF
[P] =	Polypropylene
[PPG] :	Glass Filled
	Polypropylene
[Sp] =	Santoprene
[SS] =	Stainless Steel
[T] =	PTFE
[V] =	Viton


	MANIFOLD / FLUID CAP OPTIONS PE03P-XXS-XXX-A0S													
		Polypropylene				Kynar PVDF				Groundable Acetal				
			PE03P-X	(<u>P</u> S-	PE03P-X	RS-	PE03P-X	<u>K</u> S-	PE03P-X	PE03P-XLS-		PE03P-XDS-		(ES-
Item	Description (size)	Qty	Part No.	[Mtl]	Part No.	[MtI]	Part No.	[Mtl]	Part No.	[Mtl]	Part No.	[Mtl]	Part No.	[Mtl]
□ 6	Diaphragm Nut (1/4" - 20)	(2)	93810-7	[P]	93810-7	[P]	93810-3	[K]	93810-3	[K]	93810-2	[D]	93810-2	[D]
15	Fluid Cap	(2)	96460-1	[P]	96460-1	[P]	96460-3	[K]	96460-3	[K]	96460-2	[GA]	96460-2	[GA]
43	Ground Strap	(1)									92956-1	[SS]	92956-1	[SS]
57	Ground Kit Assembly (not shown)	(1)									66885-1		66885-1	
60	Inlet Manifold (N.P.T.F.)	(1)	96468-1	[P]	96468-7	[P]	96468-3	[K]	96468-9	[K]	96468-2	[GA]	96468-8	[GA]
	(BSP)	(1)	96468-4	[P]	96468-10	[P]	96468-6	[K]	96468-12	[K]	96468-5	[GA]	96468-11	[GA]
61	Outlet Manifold (N.P.T.F.)	(1)	96469-1	[P]	96469-1	[P]	96469-3	[K]	96469-3	[K]	96469-2	[GA]	96469-2	[GA]
	(BSP)	(1)	96469-4	[P]	96469-4	[P]	96469-6	[K]	96469-6	[K]	96469-5	[GA]	96469-5	[GA]
63	Pipe Plug (N.P.T.F.)	(1)			94478-1	[PPG]			94478-3	[K]			94478-2	[D]
	(BSP)	(1)			96559-1	[PPG]			96559-3	[K]			96559-2	[D]

	COMMON PARTS									
Item Description (size) Qty Part No. [Mtl] Item Description (size) Qty Part No.							[Mtl]			
□1	Connecting Rod	(1)	96532	[SS]		27	Bolt (1/4" - 20 x 1-1/8")	(12)	96471	[SS]
5	Diaphragm Washer	(2)	96556	[GFN]		29	Nut (1/4" - 20)	(20)	93828	[SS]
26	Bolt (1/4" - 20 x 1-1/8")	(8)	96471	[SS]		77	Logo Plate	(2)	93264	[A]

	DUAL INLET / DUAL OUTLET KITS 637442-X													
				pylene	Kynar PVDF				Groundable Acetal					
		_	637442-1 (N.P.T.) 637442-4 (BSP)			637442-3 (N.P.T.) 637442-6 (BSP)			637442-2 (N.P.T.)	637442-5 (BSP)			
Item	Description (size)	Qty	Part No.	[Mtl]	Part No.	[MtI]	Part No.	[MtI]	Part No.	[Mtl]	Part No.	[Mtl]	Part No.	[MtI]
17	Dual Outlet Manifold	(2)	96520-1	[P]	96520-4	[P]	96520-3	[K]	96520-6	[K]	96520-2	[GA]	96520-5	[GA]
18	Dual Inlet Manifold	(2)	96519-1	[P]	96519-4	[P]	96519-3	[K]	96519-6	[K]	96519-2	[GA]	96519-5	[GA]
19	"O" Ring (3/32" x 1-1/8" o.d.)	(4)	96514	[T]	96514	[T]	96514	[T]	96514	[T]	96514	[T]	96514	[T]

^{□ &}quot;Smart Parts" keep these items on hand in addition to the Service Kits for fast repair and reduction of down time.

PARTS LIST / PE03P-X-X-A0S FLUID SECTION

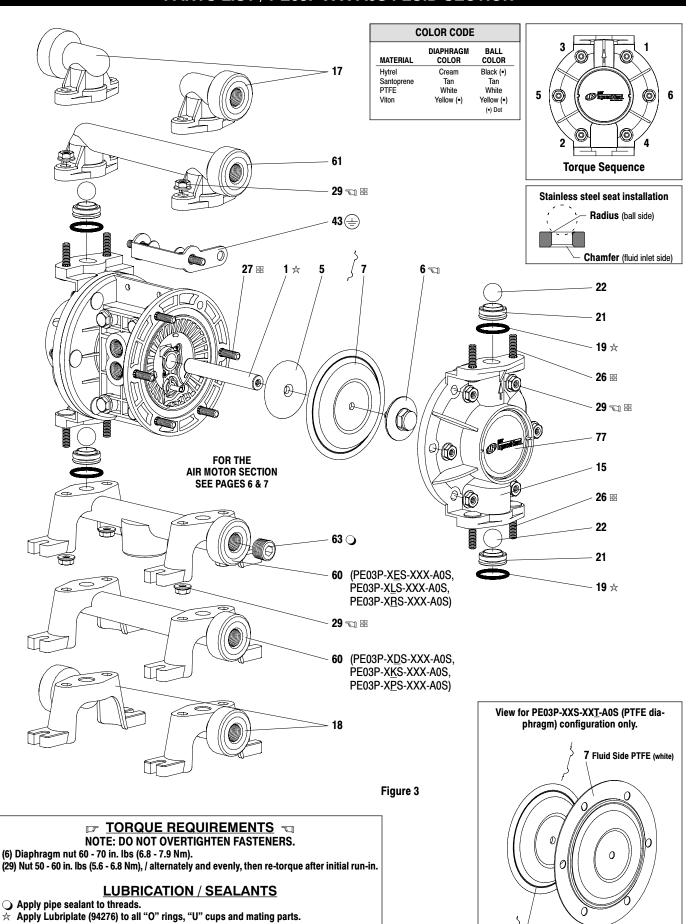

8 Air Side Santoprene (tan)

Apply anti-seize compound to threads and bolt and nut flange heads which contact pump

case when using stainless steel fasteners.

PARTS LIST / PE03P-X-X-A0S AIR MOTOR SECTION

(>) Indicates parts included in 637428 Air Section Repair Kit.

Item	Description (size)	Qty	Part No.	[Mtl]
101	Center Body	(1)	96570	[PPG]
103R	Cover (right side)	(1)	96488	[D]
103L	Cover (left side)	(1)	96489	[D]
118	Actuator Pin	(2)	94874-1	[SS]
121	Washer	(2)	96092	[D]
123	Screw (#4 - 20 x 1/2")	(12)	96093	[SS]
128	Plug (#10 - 32 x 5/32")	(2)	59632-1	[Ny]
129	Muffler Baffle	(1)	96542	[P]
130	Gasket	(1)	96531	[SY]
∠ 132	Air Manifold Gasket	(1)	96214-1	[B]
133	Washer (9/32" i.d. x 5/8" o.d.)	(4)	93096	[SS]
134	Flange Bolt (1/4" - 20 x 1-1/2")	(4)	Y6-47-T	[SS]
135	Porting Plate	(1)	96382	[PPG]
∠ 144	"U" Cup Packing (1/8" x 3/4" o.d.)	(2)	Y187-47	[B]

ltem	Description (size)	Qty	Part No.	[Mtl]
№ 167	Pilot Piston (includes 168 and 169)	(1)	67382	[D]
168	"O" Ring (1/16" x 7/16" o.d.)	(2)	96459	[U]
169	"U" Cup Packing (1/8" x 5/8" o.d.)	(1)	96384	[U]
170	Spool Bushing	(1)	96090	[D]
171 ✓	"O" Ring (1/16" x 13/16" o.d.)	(2)	Y325-17	[B]
⊮ 173	"O" Ring (3/32" x 7/8" o.d.)	(2)	Y325-115	[B]
174 ✓	"O" Ring (3/32" x 11/32" o.d.)	(2)	Y325-105	[B]
⊬ 200	Porting Gasket	(1)	96364	[B]
⊮ 232	"O" Ring (1/16" x 3/8" o.d.)	(4)	Y325-10	[B]
236	Nut (1/4" - 20)	(4)	Y12-4-S	[SS]
~	Lubriplate FML-2 Grease	(1)	94276	
	Lubriplate Grease, 10 Pack		637308	

MATERIAL CODE

[B] = Nitrile
[D] = Acetal
[Ny] = Nylon
[P] = Polypropylene

[PPG] = Glass Filled Polypropylene [SS] = Stainless Steel

= Acetai [SS] = Stainless Stell = Nylon [SY] = Syn-Seal = Polypropylene [U] = Polyurethane

DIAPHRAGM PUMP SERVICE

GENERAL SERVICE NOTES:

- Inspect and replace old parts with new parts as necessary. Look for deep scratches on metallic surfaces, and nicks or cuts in "O" rings.
- Tools needed to complete disassembly and repair:
 - 5/8" socket or wrench, 7/16" socket or wrench, 3/8" socket or wrench, 5/16" Allen wrench, T-10 Torx screwdriver, torque wrench (measuring inch pounds), "O" ring pick.

FLUID SECTION DISASSEMBLY

- 1. Remove (61) top manifold.
- 2. Remove (19) "O" rings, (21) seats and (22) balls.
- 3. Remove (60) bottom manifold.
- 4. Remove (19) "O" rings, (21) seats and (22) balls.
- 5. Remove (15) fluid caps.
- 6. Remove (6) diaphragm nut, (7) or (7/8) diaphragms and (5) washer.
- 7. Remove (1) connecting rod from air motor.
- Carefully remove remaining (6) diaphragm nut, (7) or (7 / 8) diaphragms and (5) washer from (1) connecting rod. Do not mar surface of connecting rod.

FLUID SECTION REASSEMBLY

- Reassemble in reverse order.
- Lubricate (1) connecting rod with Lubriplate or equivalent "O" ring lubricant.
- Install (5) washers with i.d. chamfer toward diaphragm.
- When replacing PTFE diaphragms, install the 96533-A Santoprene diaphragm behind the PTFE diaphragm.

AIR MOTOR SECTION SERVICE

Air Motor Section Service is continued from Fluid Section repair.


PILOT VALVE DISASSEMBLY

- 1. Remove (123) screws, releasing (103) covers, (121) washers, (118) actuator pins and (167) pilot piston.
- Remove (170) spool bushing and inspect inner bore of bushing for damage.
- 3. Unthread (123) screws, releasing (129) muffler baffle.
- 4. Unthread (134) bolts and pull (135) porting plate and (132 and 200) gaskets from (101) center body.


PILOT VALVE REASSEMBLY

- 1. Clean and lubricate parts not being replaced from service kit.
- 2. Assemble (171) "O" rings to (170) bushing and assemble bushing into (101) center body.
- 3. Lubricate and assemble (167) pilot piston assembly into (170) bushing.
- 4. Assemble (173 and 174) "O" rings and (121) washers to (103) covers, then insert (118) actuator pins through assembly.
- Assemble (144) "U" cups (note the lip direction) and (103) covers to (101) center body, securing with (123) screws. NOTE: Tighten (123) screws to 4 - 6 in. lbs (0.45 - 0.68 Nm).
- 6. Assemble (132 and 200) gaskets and (135) porting plate to center body, securing with (134) bolts. NOTE: Tighten (134) bolts to 15 20 in. lbs (1.7 2.3 Nm).
- 7. Assemble (130) gasket and (129) muffler baffle to (101) center body, securing with (123) screws. NOTE: Tighten (123) screws to 4 6 in. lbs (0.45 0.68 Nm).


PARTS LIST / PE03P-X-X-A0S AIR MOTOR SECTION

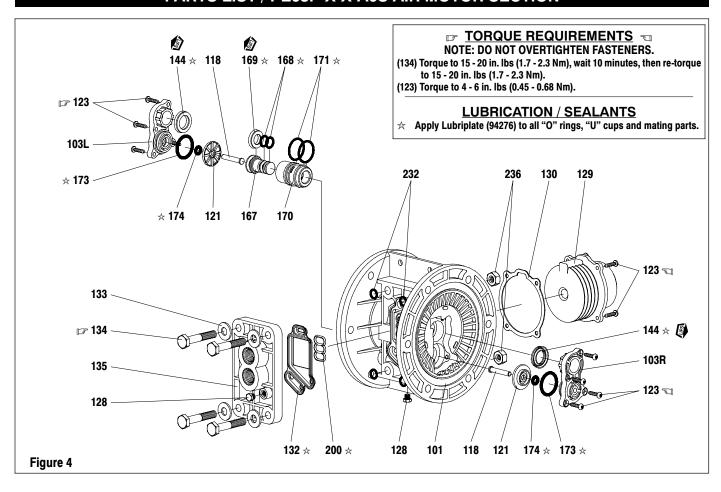


ACCESSORIES

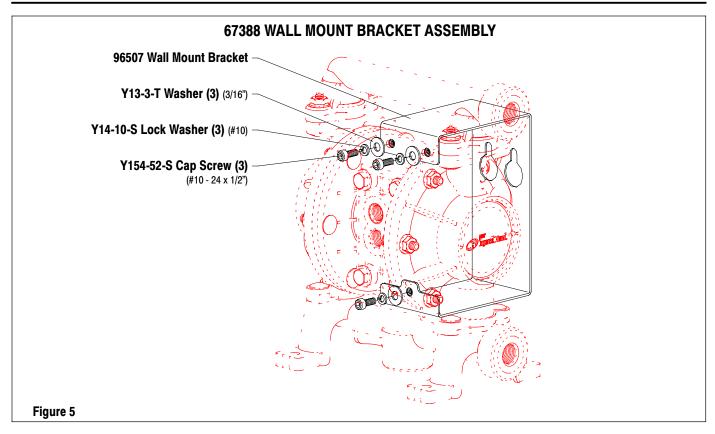

REMOTE HOOK-UP CONNECTIONS

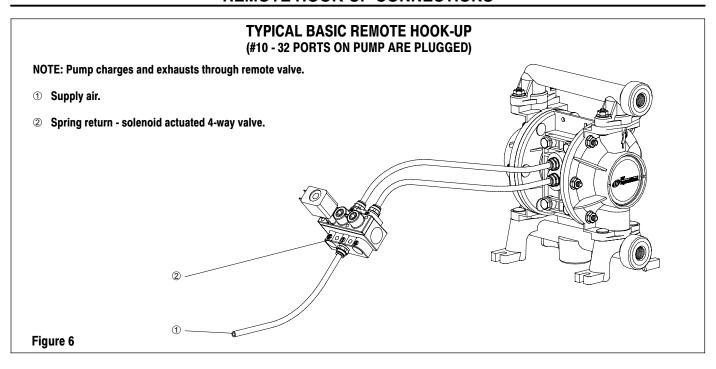

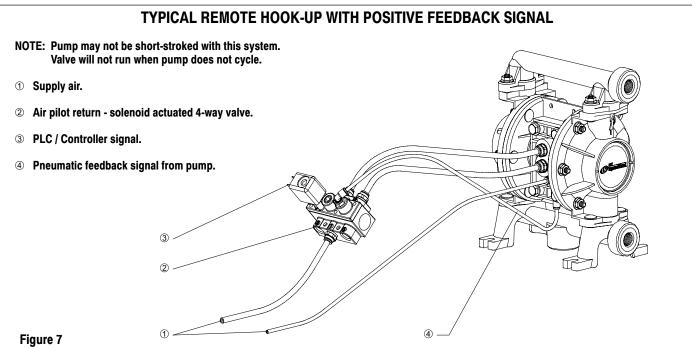

REMOTE HOOK-UP CONNECTIONS

TYPICAL REMOTE HOOK-UP WITH ENHANCED POSITIVE FEEDBACK SIGNAL CAPABILITY Supply air. Air pilot return - solenoid actuated 4-way valve. PLC / Controller signal. Pneumatic feedback signal from pump. Pneumatic echo can be used to interrupt the PLC signal and set alarm. NOTE: Pump may not be short-stroked with this system. Pneumatic-to-electric signal can send alarm to operating system.

TROUBLE SHOOTING

Product discharged from air exhaust.

- Check for diaphragm rupture.
- Check tightness of (6) diaphragm nut.

Air Bubbles in product discharge.

- Check connections of suction plumbing.
- Check "O" rings between intake manifold and fluid caps.
- · Check tightness of (6) diaphragm nut.


Pump blows air out main exhaust when stalled on either stroke.

- Check "U" cups on (111) spool in major valve.
- Check (141) valve plate and (140) insert for wear.
- Check (169) "U" cup on (167) pilot piston.

Low output volume.

- Check air supply.
- Check for plugged outlet hose.
- For the pump to prime itself, it must be mounted in the vertical position so that the balls will check by gravity.
- Check for pump cavitation suction pipe should be sized at least as large as the inlet thread diameter of the pump for proper flow if high viscosity fluids are being pumped. Suction hose must be non-collapsible type, capable of pulling a high vacuum.
- Check all joints on intake manifolds and suction connections. These
 must be airtight.
- Inspect the pump for solid objects lodged in the diaphragm chamber or the seat area.

DIMENSIONAL DATA

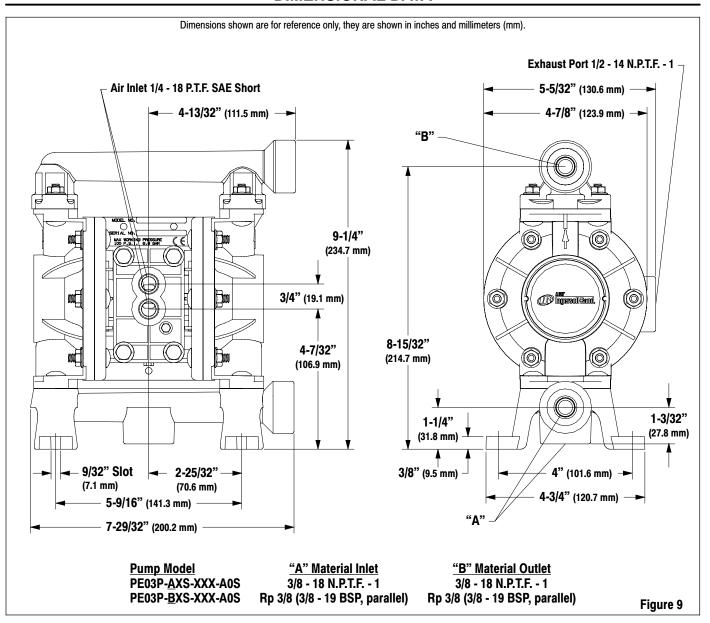



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com