


Serious Steel

813102 VKR/CHIN/DIP

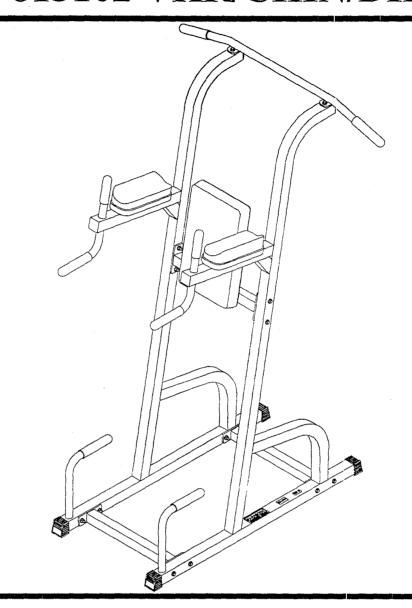

ASSEMBLY INSTRUCTIONS

1

Part#6812201

Revision: 01/17/00

IMPORTANT NOTES WELCOME TO THE WORLD OF **Serious Steel!**

Please note:

- * Thank you for purchasing the Parabody 813102 VKR/CHIN/DIP. Please read these instructions thoroughly and keep them for future reference. This product must be assembled on a flat, level surface to assure its proper function.
- * We recommend cleaning your product (pads and frame) on a regular basis, using warm soapy water. Touch-up paint can be purchased from your Parabody customer service representative at (800) 328-9714.

There is a risk assumed by individuals who use this type of equipment. To minimize risk, please follow these rules:


- 1. Inspect equipment daily. Tighten all loose connections and replace worn parts immediately. Failure to do so may result in serious injury.
- 2. Do not allow minors or children to play on or around this equipment.
- 3. Exercise with care to avoid injury.
- 4. If unsure of proper use of equipment, call your local Parabody distributor or call the Parabody customer service department at (800) 328-9714.

Tools Required for Assembly

- * 9/16" wrench
- * Ratchet with 9/16" socket
- * Adjustable wrench
- * Hammer
- * Tape measure

Bolt Length Ruler


NOTE: BOLT LENGTH IS MEASURED FROM THE UNDERSIDE OF THE HEAD OF THE BOLT.

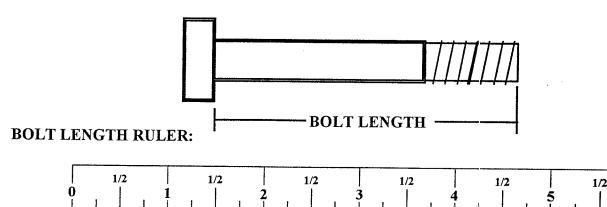

PARTS LIST

		and the contract of the contra			
KEY PART#		DESCRIPTION	QTY		
1	6102303	BASE CONNECTOR	2		
2	6480003	CHINBAR	1		
3	6480503	VKR SIDE	2		
4	6480903	UPPER BACK SUPPORT	1		
5	6665902	BACK PAD	1		
6	6752702	ARM PAD	2		
7	3102501	3/8" FLAT WASHER	34		
8	3102601	3/8" LOCK WASHER	6		


KEY PART# DESCRIPTION QIY 9 3102802 3/8"LOCK NUT 14 10 3102904 3/8 X 3" BOLT 20 11 3103101 1-1/4 X 5" GRIP 2 12 3103103 1-1/4 X 7" GRIP 6 13 6236701 1-3/4" SQ. END CAP 1 14 6405201 2" SQ. END CAP 4 15 6467001 2" SQ. COVER CAP 4			er en	
9 3102802 3/8"LOCK NUT 14 10 3102904 3/8 X 3"BOLT 20 11 3103101 1-1/4 X 5" GRIP 2 12 3103103 1-1/4 X 7" GRIP 6 13 6236701 1-3/4" SQ. END CAP 1 14 6405201 2" SQ. END CAP 4	KEY	PART#	DESCRIPTION	QTY
11 3103101 1-1/4 X 5" GRIP 2 12 3103103 1-1/4 X 7" GRIP 6 13 6236701 1-3/4" SQ. END CAP 1 14 6405201 2" SQ. END CAP 4	9	3102802	3/8" LOCK NUT	
12 3103103 1-1/4 X 7" GRIP 6 13 6236701 1-3/4" SQ. END CAP 1 14 6405201 2" SQ. END CAP 4	10	3102904	3/8 X 3" BOLT	20
13 6236701 1-3/4" SQ. END CAP 1 14 6405201 2" SQ. END CAP 4	11	3103101	1-1/4 X 5" GRIP	2
14 6405201 2" SQ. END CAP 4	12	3103103	1-1/4 X 7" GRIP	6
7 - 2 - 2 - 2 - 2 - 2 - 2 - 2 - 2 - 2 -	13	6236701	1-3/4" SQ. END CAP	1
15 6467001 2"SQ. COVER CAP 4	14	6405201	2" SQ. END CAP	4
	15	6467001	2" SQ. COVER CAP	4

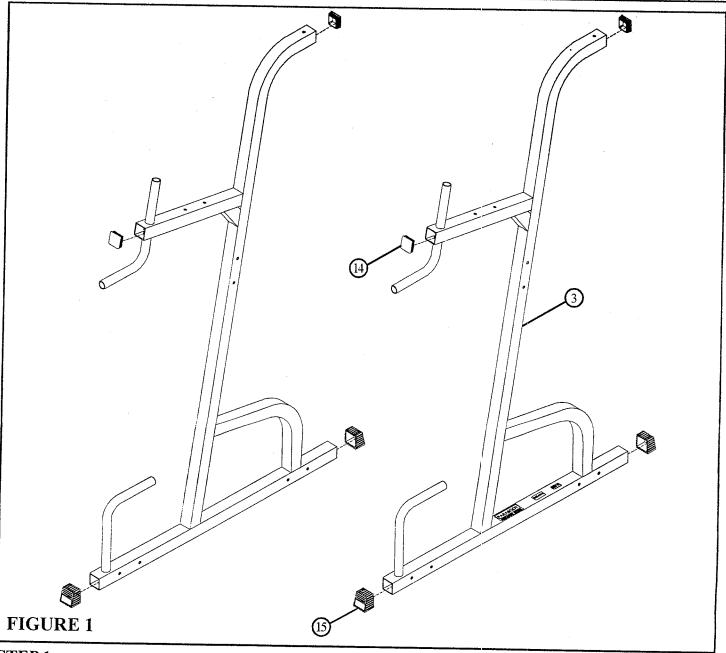

STEP 1:

- Insert four 2" SQ. COVER CAPS (15) into the ends of the VKR SIDES (3) as shown in FIGURE 1.
- Insert four 2" SQ. END CAPS (14) into the the ends of the VKR SIDES (3) as shown in FIGURE 1.


- LOOSELY assemble the UPPER BACK SUPPORT (4) to the VKR SIDES (3) using two 3/8 X 3" BOLTS (10), four 3/8" FLAT WASHERS (7), and two 3/8" LOCK NUTS (9) as shown in FIGURE 2.
- LOOSELY assemble the two BASE CONNECTORS (1) to the VKR SIDES (3) using eight 3/8 X 3" BOLTS (10), sixteen 3/8" FLAT WASHERS (7), and eight 3/8" LOCK NUTS (9) as shown in FIGURE 2.
- Insert one 2" SQ. END CAP (14) into the the end of the UPPER BACK SUPPORT (4) as shown in FIGURE 2.




- LOOSELY assemble the CHIN BAR (2) to the VKR SIDES (3) using two 3/8 X 3" BOLTS (10), four 3/8" FLAT WASHERS (7), and two 3/8" LOCK NUTS.
- SECURELY tigten all connections made up to this point.

STEP 4:

• SECURELY attach two ARM PADS (6) to the VKR SIDES (3) using four 3/8 X 3" BOLTS (10), four 3/8" LOCK WASHERS (8), and four 3/8" FLAT WASHERS (7) as shown in FIGURE 4. (NOTE: Place the high side of ARM PAD toward the outside.)



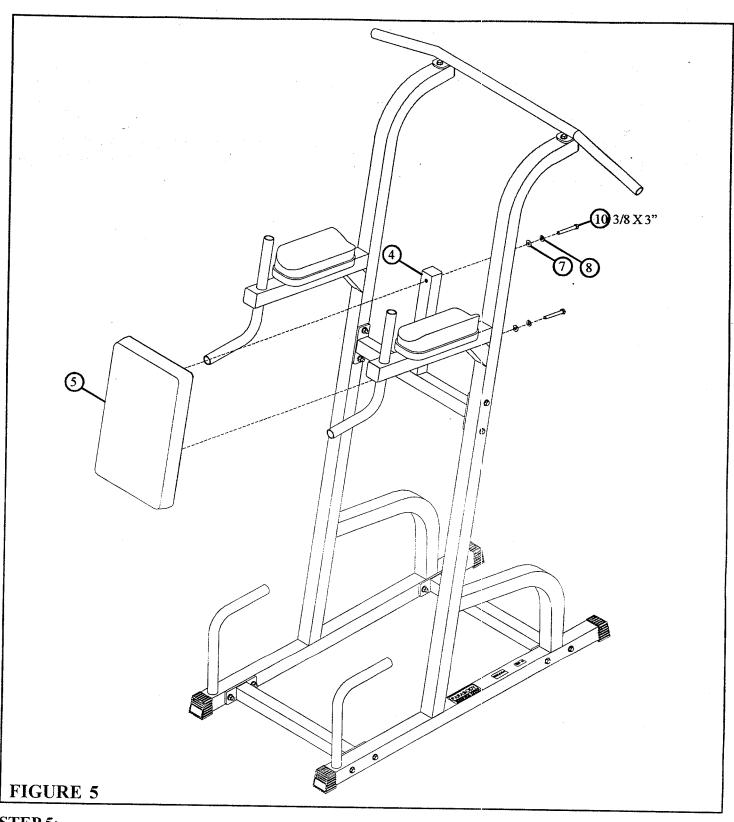

STEP 5:

• SECURELY assemble the BACK PAD (5) to the UPPER BACK SUPPORT (4) using two 3/8 X 3" BOLTS (10), two 3/8" LOCK WASHERS (8), two 3/8" FLAT WASHERS (7) as shown in FIGURE 5.

7

STEP 6:

- Slide six 1-1/4 X 7" HANDLES (12) over the HANDLES of the VKR SIDES (4) and the CHIN BAR (2) as shown in FIGURE 6.
- Slide two 1-1/4 X 5" HANDLES (11) over the ARM PAD HANDLES of the VKR SIDES (4) as shown in FIGURE 6. (NOTE: Rubbing alcohol can be used on the inside of the grips to make them slide on easier.)

Thank you for purchasing the Parabody 884101 SAFTEY RAIL ATTACHMENT. If unsure of proper use of equipment, call your local Parabody distributor or call the Parabody customer service department at (800) 328-9714.

			(000)			
	1/2	1/2	1/2	1/2	1/2	1/2
() <u> </u>		2 (3	4 5	5 6
				8		

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com